




All new Yutaki have the same unit controller.

One of HITACHI exclusivity on this new range is WIZARD:



**Configure an installation in less than 2min is from now possible!**

## 1<sup>st</sup> steps

After starting-up the system for the first time, the controller remain on "Connecting" state few minutes. After this, Wizard is launched.

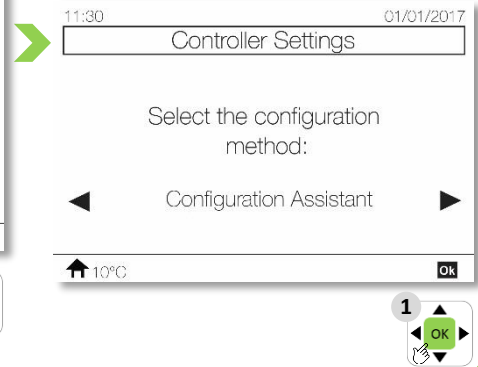
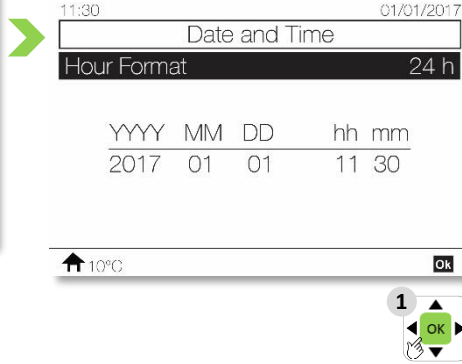
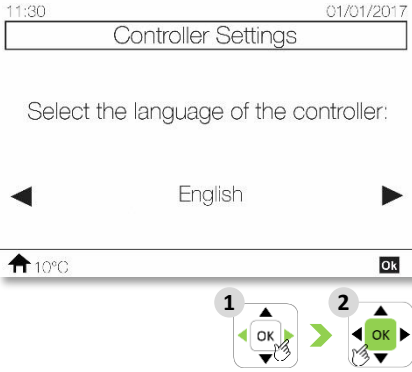


## Controller definition

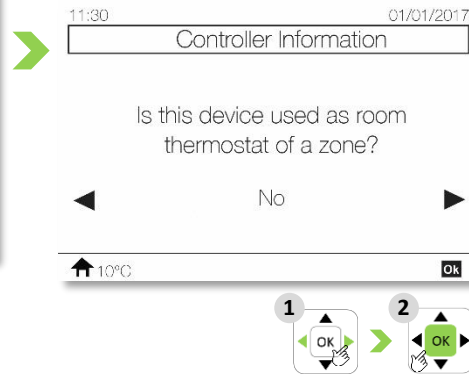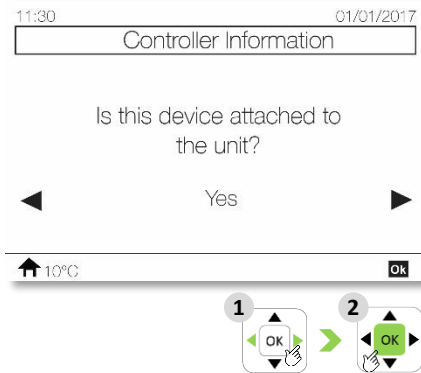


"Device" refers to PC-ARFHE (unit controller) that can be removed from unit panel and used as room thermostat

## Installation definition: Circuits

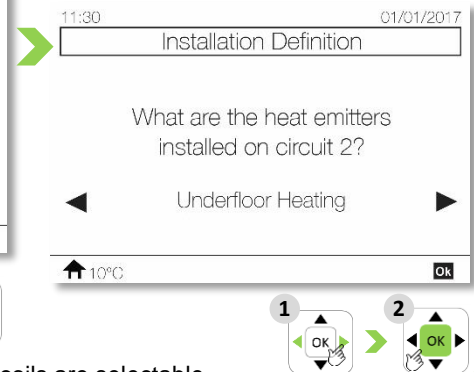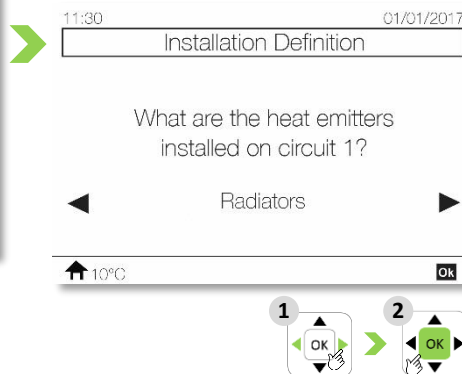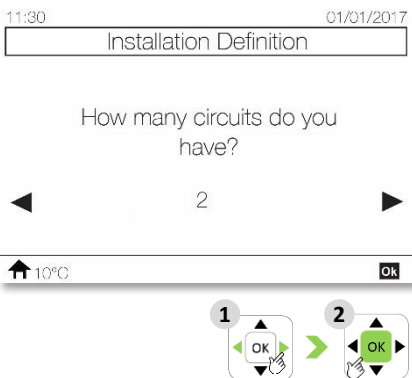

Radiators, Underfloor Heating and Fan coils are selectable

## Installation definition: Complementary systems

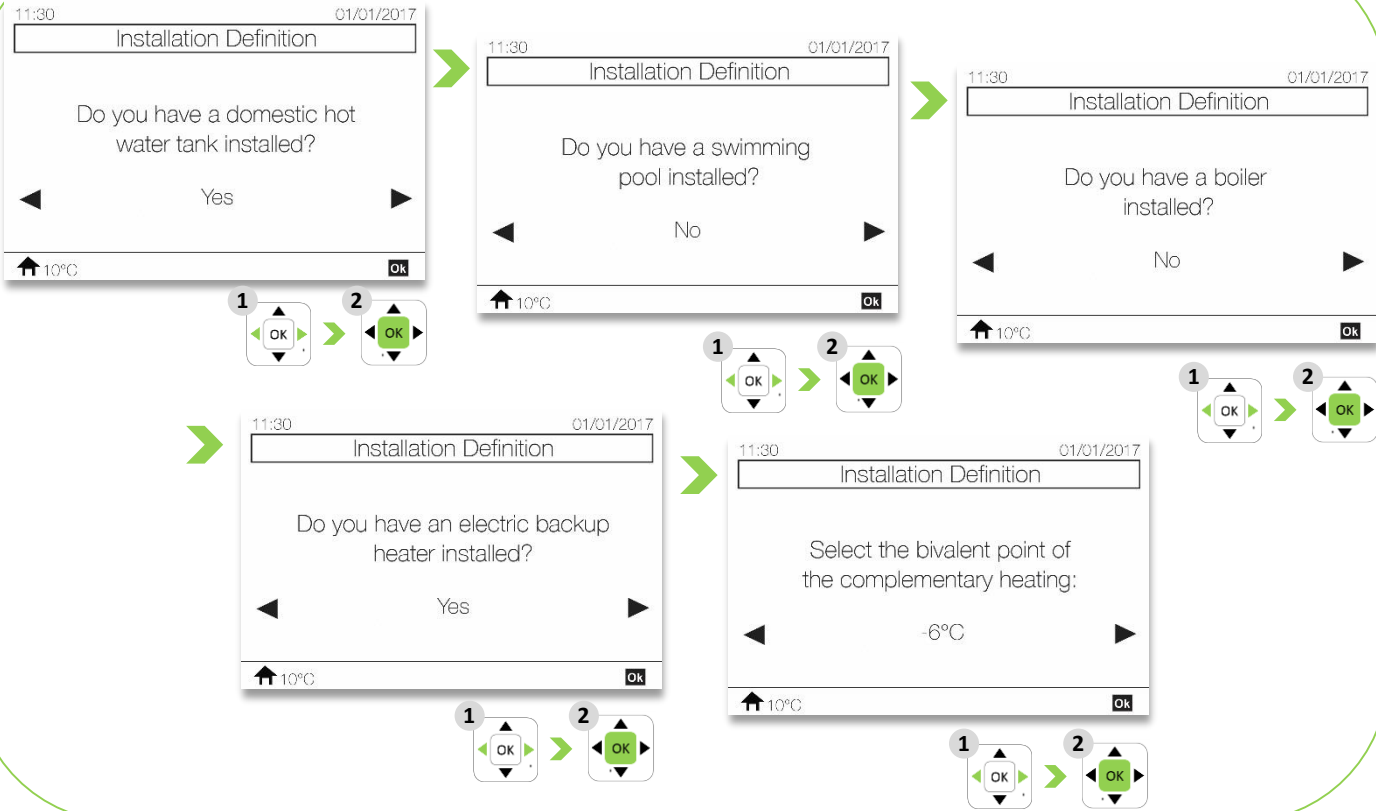

## Room thermostats

Possibility to combine in an installation Wired & Wireless room thermostats

