


# Floor Console/Under Ceiling Dual Type INSTALLATION INSTRUCTION SHEET

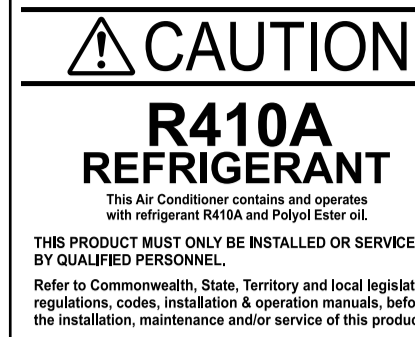

(PART NO. 9374318018)

For authorized service personnel only.

<b>DANGER</b>	This mark indicates procedures which, if improperly performed, are most likely to result in the death of or serious injury to the user or service personnel.
<b>WARNING</b>	This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.
<b>CAUTION</b>	This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

## This air conditioner uses new refrigerant HFC (R410A).

The basic installation work procedures are the same as conventional refrigerant models. However, pay careful attention to the following points:

- Since the working pressure is 1.6 times higher than that of conventional refrigerant models, some of the piping and installation and service tools are special. (See the table below.) Especially, when replacing a conventional refrigerant model with a new refrigerant R410A model, always replace the conventional piping and flare nuts with the R410A piping and flare nuts.
- Models that use refrigerant R410A have a different charging port thread diameter to prevent erroneous charging with conventional refrigerant and for safety. Therefore, check beforehand. [The charging port thread diameter for R410A is 1/2 UNF 20 threads per inch.]
- Be more careful that foreign matter (oil, water, etc.) does not enter the piping than with refrigerant models. Also, when storing the piping, securely seal the openings by pinching, taping, etc.
- When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.

### Special tools for R410A

Tool name	Contents of change
Gauge manifold	Pressure is high and cannot be measured with a conventional gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port has been changed. It is recommended the gauge with seals -0.1 to 5.3 MPa (-76 cmHg to 53 kgf/cm <sup>2</sup> ) for high pressure, -0.1 to 3.8 MPa (-76 cmHg to 38 kgf/cm <sup>2</sup> ) for low pressure.
Charge hose	To increase pressure resistance, the hose material and base size were changed.
Vacuum pump	A conventional vacuum pump can be used by installing a vacuum pump adapter.
Gas leakage detector	Special gas leakage detector for HFC refrigerant R410A.

### Copper pipes

It is necessary to use seamless copper pipes and it is desirable that the amount of residual oil is less than 40 mg/10 m. Do not use copper pipes having a collapsed, deformed or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants.

As an air conditioner using R410A incurs pressure higher than when using R22, it is necessary to choose adequate materials. Thicknesses of copper pipes used with R410A are as shown in Table 1. Never use copper pipes thinner than 0.8 mm (Nominal diameter is 3/8 in.), 1.0 mm (Nominal diameter is 5/8 in.) even when it is available on the market.

Table 1 Thicknesses of Annealed Copper Pipes

Nominal diameter (inch)	Outer diameter (mm)	Thickness (mm)	
		R410A	
3/8	9.52	0.80	
5/8	15.88	1.00	

For authorized service personnel only.

- WARNING**
- For the room air conditioner to operate satisfactorily, install it as outlined in this installation instruction sheet.
  - Connect the indoor unit and outdoor unit with the room air conditioner piping and cords available standards parts. This installation instruction sheet describes the correct connections using the installation set available from our standard parts.
  - Installation work must be performed in accordance with national wiring standards by authorized personnel only.
  - If refrigerant leaks while work is being carried out, ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.
  - Do not use an extension cord.
  - Do not turn on the power until all installation work is complete.
- Be careful not to scratch the room air conditioner when handling it.
  - After installation, explain correct operation to the customer, using the operating manual.
  - Let the customer keep this installation instruction sheet because it is used when the air conditioner is serviced or moved.

## SELECTING THE MOUNTING POSITION

**WARNING**  
Install at a place that can withstand the weight of the indoor and outdoor units and install positively so that the units will not topple or fall.

**CAUTION**


- Do not install where there is the danger of combustible gas leakage.
- Do not install near heat sources.
- If children under 10 years old may approach the unit, take preventive measures so that they cannot reach the unit.

Decide the mounting position with the customer as follows:


### 1. INDOOR UNIT

- Install the indoor unit level on a strong wall, floor, ceiling which is not subject to vibration.
- The inlet and outlet ports should not be obstructed: the air should be able to blow all over the room.
- Install the unit near an electric outlet or special branch circuit.
- Do not install the unit where it will be exposed to direct sunlight.
- Install the unit where connection to the outdoor unit is easy.
- Install the unit where the drain pipe can be easily installed.
- Take servicing, etc., into consideration and leave the spaces shown in Fig. 1. Also install the unit where the filter can be removed.

Fig. 1 Floor console

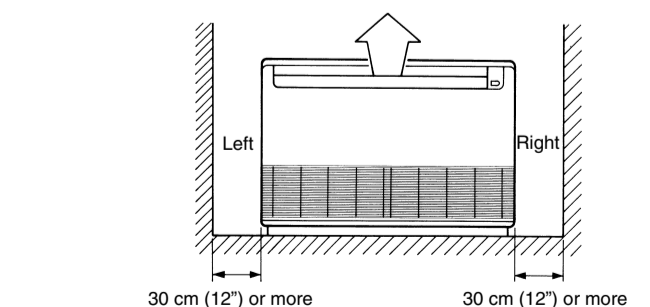


### • Under ceiling

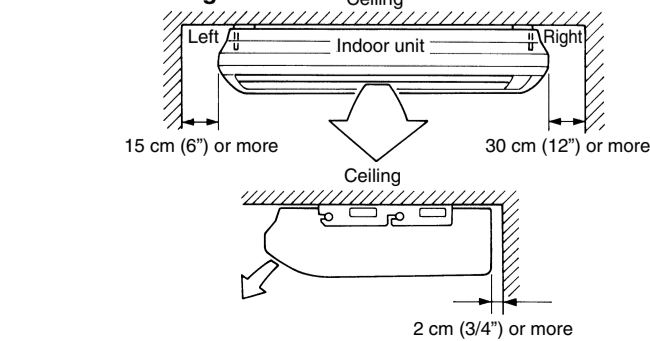

### 2. OUTDOOR UNIT

- If possible, do not install the unit where it will be exposed to direct sunlight. (If necessary, install a blind that does not interfere with the air flow.)
- Install the outdoor unit in a place where it will be free from being dirty or getting wet by rain as much as possible.
- Install the unit when connection to the indoor unit is easy.
- During heating operation, drain water flows from the outdoor unit. Therefore, install the outdoor unit in a place where the drain water flow will not be obstructed. (Reverse cycle model only)
- Do not place animals and plants in the path of the warm air.
- Take the air conditioner weight into account and select a place where noise and vibration are small.
- Select a place so that the warm air and noise from the air conditioner do not disturb neighbors.
- Provide the space shown in Fig. 2 so that the air flow is not blocked. Also for efficient operation, leave open three of the four directions front, rear, and both sides.

Fig. 2

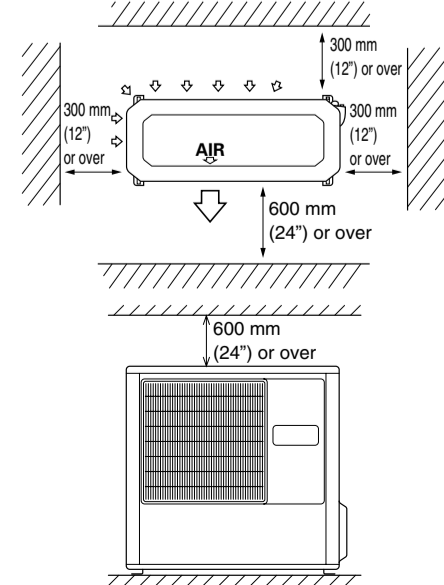

## STANDARD PARTS

The following installation parts are furnished. Use them as required.

Name and Shape	Q'ty	Application
Drain hose	1	
Insulation (drain hose)	1	Adhesive type 70 x 230
VT wire	1	For fixing the drain hose L 280 mm
Remote control unit	1	Use for air conditioner operation
Battery (penlight)	2	For remote control unit
Remote control unit holder	1	Use as remote control unit holder
Tapping screw (ø4 x 10)	2	
Installation template	1	For positioning the indoor unit For under ceiling type
Bracket (left)	1	For suspending the indoor unit from ceiling
Bracket (right)	1	
Anchor bolt (M12)	4	
Spring washer	4	
Special nut	4	
Wall bracket	2	For suspending the indoor unit on the wall.
Tapping screw (ø4 x 20)	6	For fixing the wall bracket.
Coupler heat insulator (large)	1	For indoor side pipe joint (Large pipe)
Coupler heat insulator (small)	1	For indoor side pipe joint (Small pipe)
Nylon fastener	1	For fixing the drain hose


Name and Shape	Q'ty	Application
Drain hose	1	
Insulation (drain hose)	1	Adhesive type 70 x 230
VT wire	1	For fixing the drain hose L 280 mm
Remote control unit	1	Use for air conditioner operation
Battery (penlight)	2	For remote control unit
Remote control unit holder	1	Use as remote control unit holder
Tapping screw (ø3 x 12)	2	For remote control unit holder installation

## OUTDOOR UNIT ACCESSORIES

Name and Shape	Q'ty	Application
Hexagon wrench	1	For opening the refrigerant valve on the outdoor unit
Cable clip	2	For power supply cord binding
Tapping screw (painted)	1	For fixing the valve cover
Drain pipe	1	For outdoor unit drain piping work (Heat & Cool model (Reverse cycle) only)
Drain cap	2	
Putty	1	For sealing

## OPTIONAL PARTS FOR INDOOR UNIT

Name and Shape	Part No.	Application
Joint pipe-A	9302812021	For indoor side pipe joint

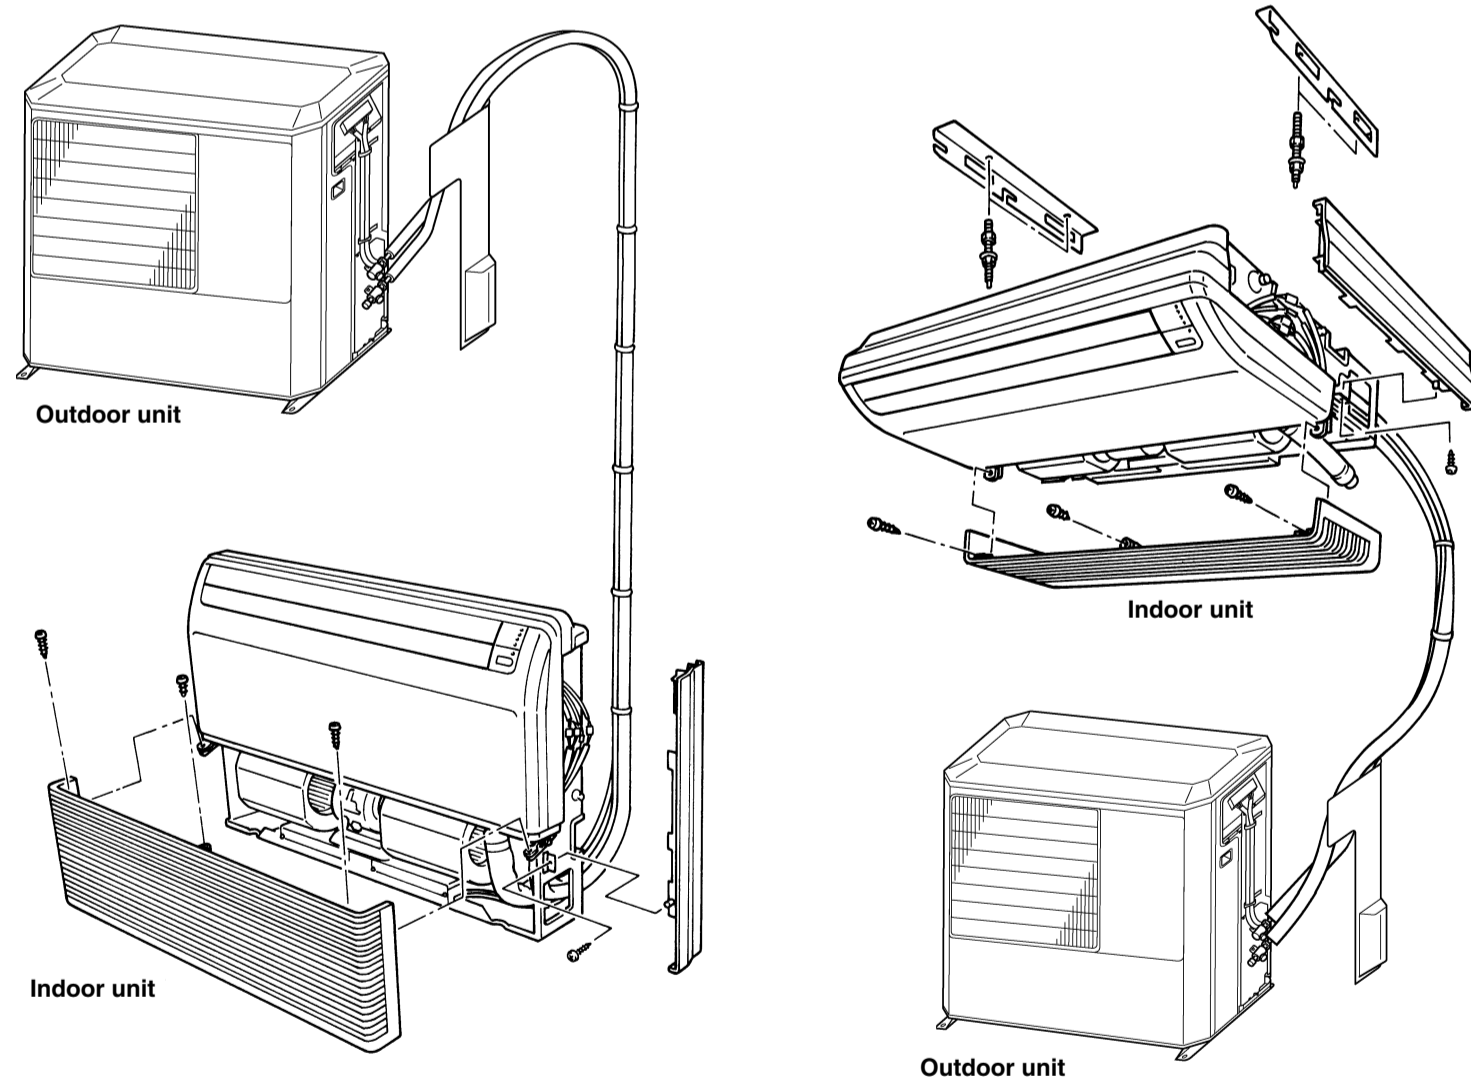

## CONNECTION PIPE REQUIREMENT

**CAUTION**  
Install heat insulation around both the gas and liquid pipes. Failure to do so may cause water leaks. Use heat insulation with heat resistance above 120 °C. (Reverse cycle model only)  
In addition, if the humidity level at the installation location of the refrigerant piping is expected to exceed 70%, install heat insulation around the refrigerant piping. If the expected humidity level is 70-80%, use heat insulation that is 15 mm or thicker and if the expected humidity exceeds 80%, use heat insulation that is 20 mm or thicker. If heat insulation is used that is not as thick as specified, condensation may form on the surface of the insulation. In addition, use heat insulation with heat conductivity of 0.045 W/(m·K) or less (at 20 °C).

Connect the connection pipes according to 'CONNECTING THE PIPING' in this installation instruction sheet.

Diameter		Pipe length		Maximum Height (between indoor and outdoor)
Small	Large	Min.	Max.	
9.52 mm (3/8 in.)	15.88 mm (5/8 in.)	5 m (16 ft)	25 m (82 ft)	15 m (49 ft)

- Use pipe with water-resistant heat insulation.
- Use pipe that can withstand a pressure of 4,150 kPa.


## INSTALLATION PROCEDURE

Install the room air conditioner as follows:

### 1 PREPARING INDOOR UNIT INSTALLATION

#### 1. REMOVE THE INTAKE GRILLE

Open the intake grille and remove the three screws (Fig. 3).

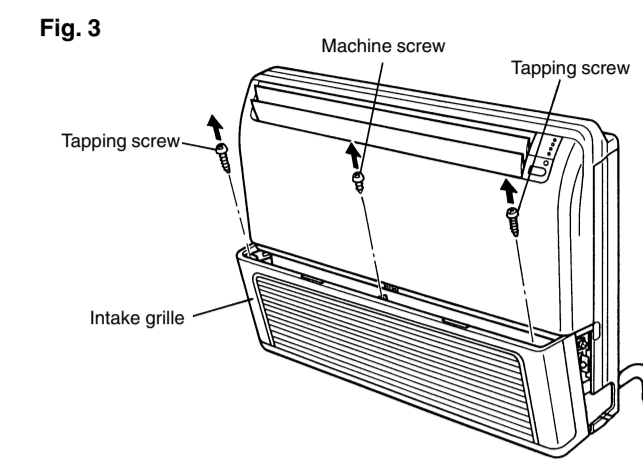


**Remark:** The main unit can be wired before the indoor unit is installed. Select the most appropriate installation order.

### 2 INDOOR UNIT INSTALLATION


#### A. FLOOR CONSOLE TYPE

##### 1. DRILLING FOR PIPING


Select piping and drain directions (Fig. 4). The piping and drain can be made in three directions as shown below.

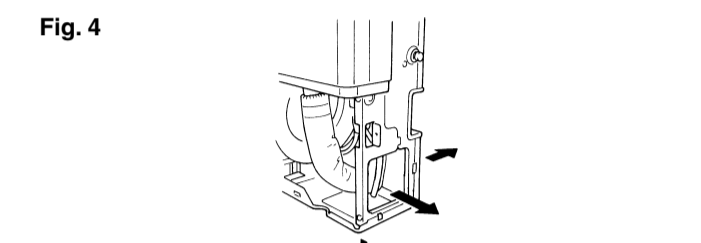

The drain hose can be connected to either the left or right side (Fig. 5).

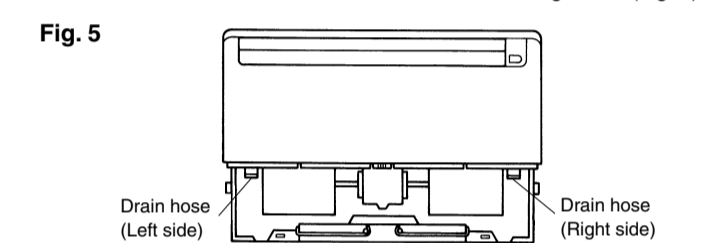

When the directions are selected, drill a 10 mm (4") dia. hole on the wall so that the hole is tilted downward toward the outdoor for smooth water flow. When the pipe is led out from the rear, make a hole in Fig. 6, at the position shown.


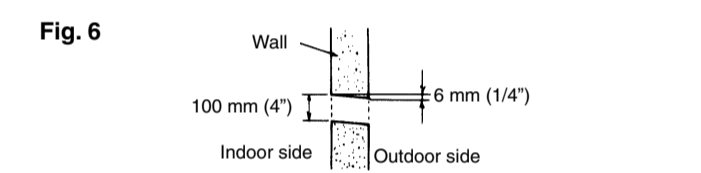


### 3 OUTDOOR UNIT INSTALLATION


- WARNING**
- Install the unit where it will not be tilted by more than 5°.
  - When installing the outdoor unit where it may be exposed to strong wind, fasten it securely.

- Set the unit on a strong stand, such as one made of concrete blocks to minimize shock and vibration.
- Do not set the unit directly on the ground because it will cause trouble.
- Since the drain water flows out of the outdoor unit during heating operation, install the drain pipe side separately and connect it to a commercial 16 mm hose. (Heat & Cool model (Reverse cycle) only)
- When installing the drain pipe, plug all the holes (\*holes at two places) other than the drain pipe mounting hole in the bottom of the outdoor unit with putty so there is no water leakage. (Fig. 22) (Heat & Cool model (Reverse cycle) only)

**CAUTION**  
Installation in cold regions. Do not use the accessory drain pipe. (If the drain pipe is used, the drain water in the pipe may freeze in extremely cold weather.)

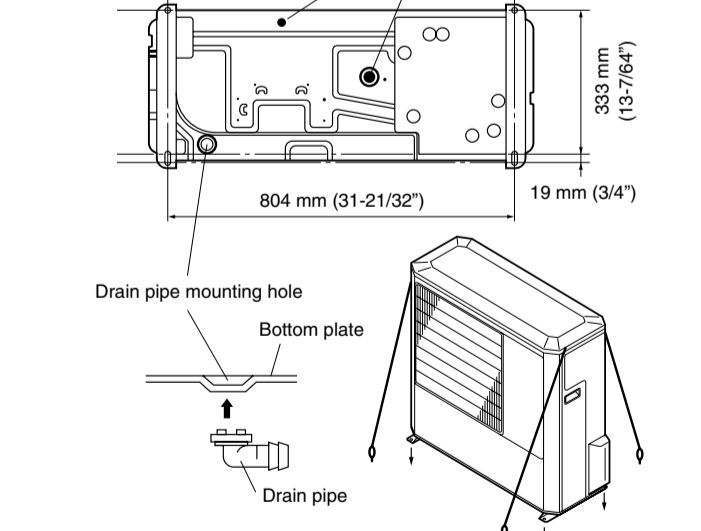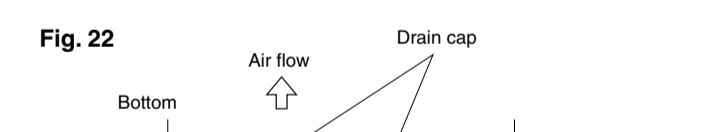


Outdoor unit connection cord and pipe connection preparations: Remove outdoor unit valve cover.

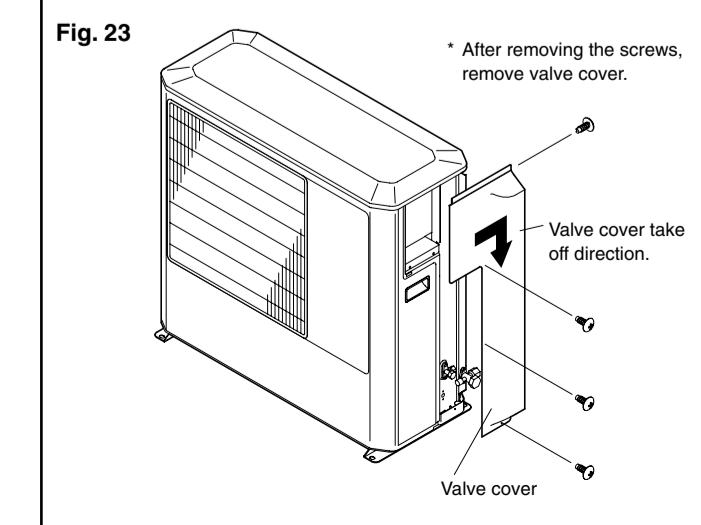


### 2. INSTALLING THE DRAIN HOSE

Select whether the drain hose will be connected to the left or right side (Fig. 5).

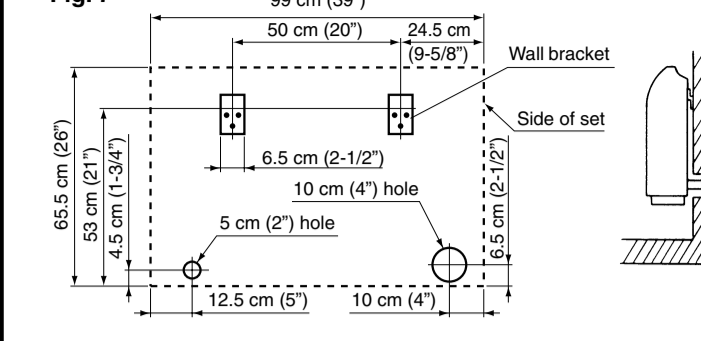


Insert the drain hose into the drain pan, then secure the drain hose with a nylon fastener (Fig. 9).

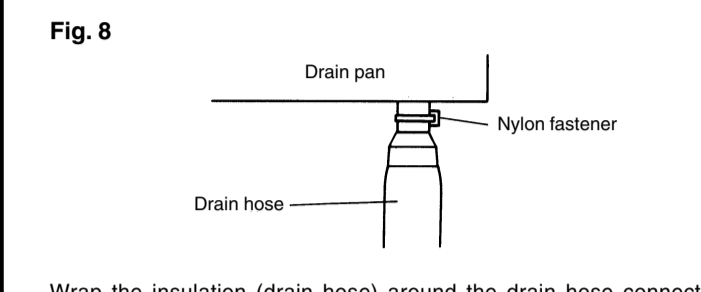


Wrap the insulation (drain hose) around the drain hose connection (Fig. 9).

Be sure to arrange the drain hose so that it is leveled lower than the drain hose connecting port of the indoor unit.

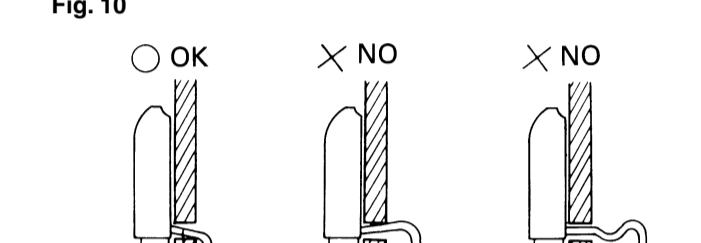

**CAUTION**  
Do not install the unit so that the drain hose side is too high. Height A should be less than 5 mm (Fig. 11).

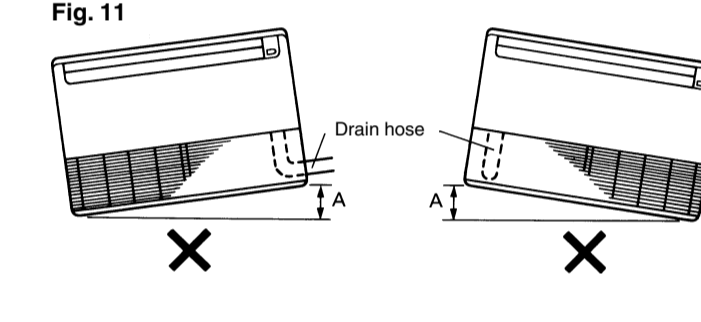

### 4 CONNECTING THE PIPING

**WARNING**  
Do not use the existing piping and flare nuts.

- If the existing materials are used, the pressure inside the refrigerant cycle will rise and cause breakage, injury, etc. (Use the special R410A materials.)


**CAUTION**

- Do not use mineral oil on flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- While welding the pipes, be sure to blow dry nitrogen gas through them.


**CAUTION**  
The maximum lengths of this product are shown in table 3. If the units are further apart than this, correct operation can not be guaranteed.

#### 1. LIMITATION OF REFRIGERANT PIPING LENGTH

Table 3	
Max length (L)	25 m (82 ft)
Max height difference (H)	20 m (66 ft)

 


**CAUTION**  
Be sure to apply the pipe against the port on the indoor unit correctly. If the centering is improper, the flare nut cannot be tightened smoothly. If the flare nut is forced to turn, the threads will be damaged.

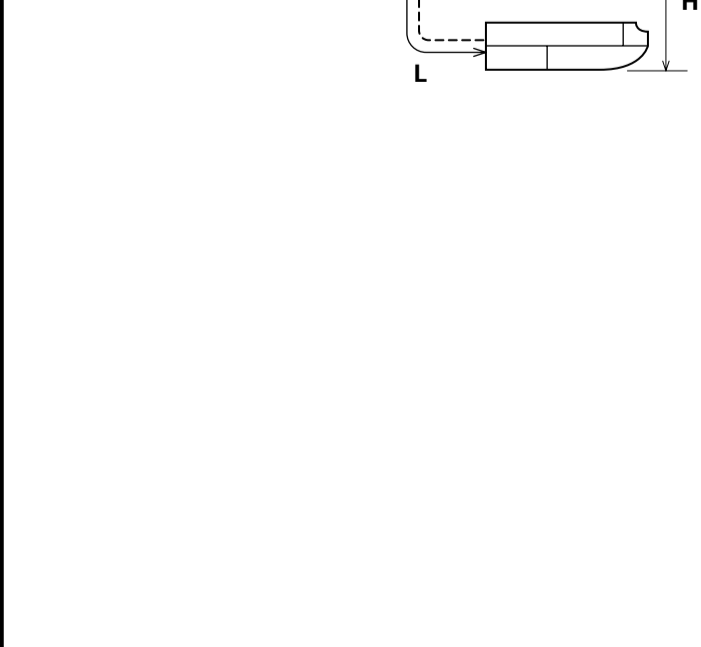


### B. UNDER CEILING TYPE

Using the installation template, drill holes for piping and anchor bolts (for holes) (Fig. 12).

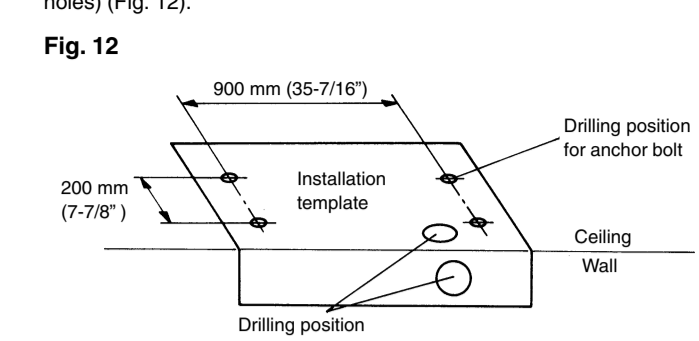


Select piping and drain directions (Fig. 13).


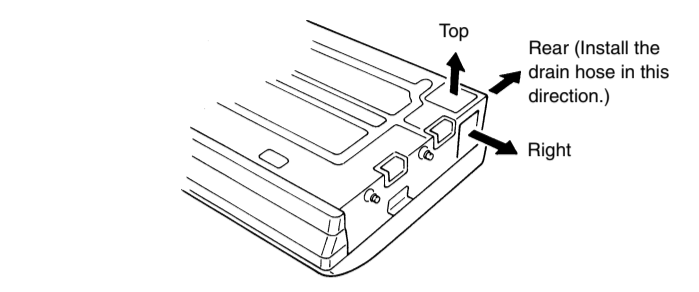


**CAUTION**  
Install the drain hose at the rear; it should not be installed on the top or right side.

When the directions are selected, drill 80 mm (3-1/8") and 50 mm (2") or 150 mm (6") dia. hole on the wall so that the hole is tilted downward toward the outdoor for smooth water flow.

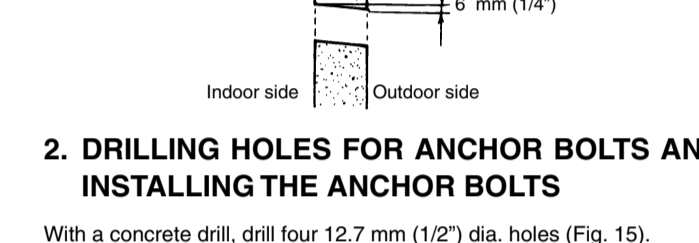

With a concrete drill, drill four 12.7 mm (1/2") dia. holes (Fig. 15).

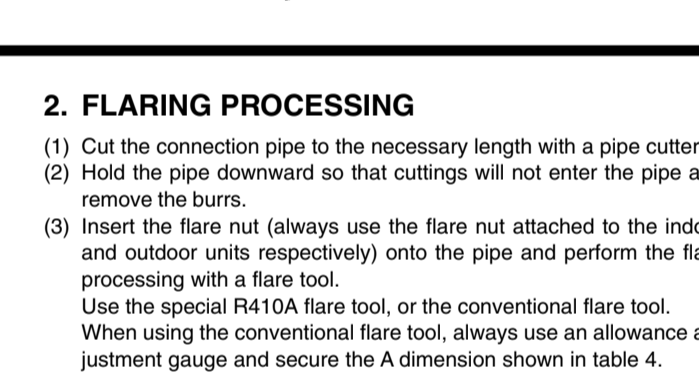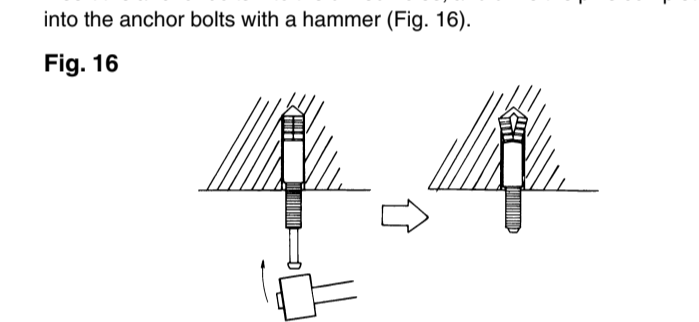


**CAUTION**  
Check if [L] is flared uniformly and is not cracked or scratched.

Table 4 Pipe outside diameter	
Pipe outside diameter	A (mm)
9.52 mm (3/8 in.)	Flare tool for R410A, clutch type
15.88 mm (5/8 in.)	0 to 0.5
	0 to 0.5

#### 2. FLARING PROCESSING


- Hold the connection pipe to the necessary length with a pipe cutter.
- Hold the pipe downward so that cuttings will not enter the pipe and remove the burrs.
- Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a flare tool.

Use the special R410A flare tool, or the conventional flare tool. When using the conventional flare tool, always use an allowance adjustment gauge and secure the A dimension shown in table 4.

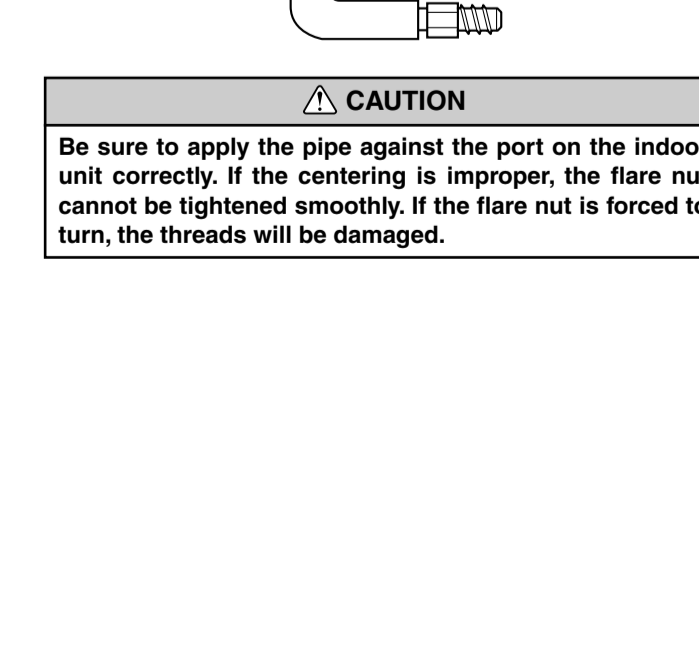


### 3. INSTALLING BRACKETS

Install the brackets with nuts, washers and spring washers (Fig. 17).

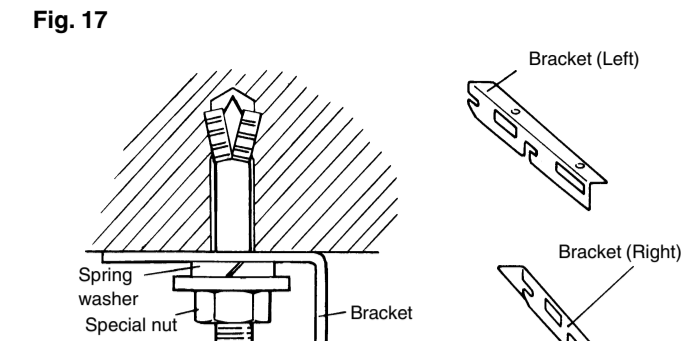


Reset the hex bolts as shown in Fig. 18.

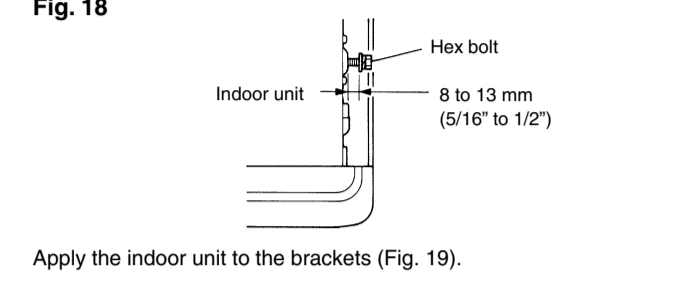


Apply the indoor unit to the brackets (Fig. 19).

### 5. INSTALLING THE DRAIN HOSE


Select whether the drain hose will be connected to the left or right side (Fig. 5). Insert the drain hose into the drain pan, then secure the drain hose with a nylon fastener (Fig. 8). Wrap the insulation (drain hose) around the drain hose connection (Fig. 9).

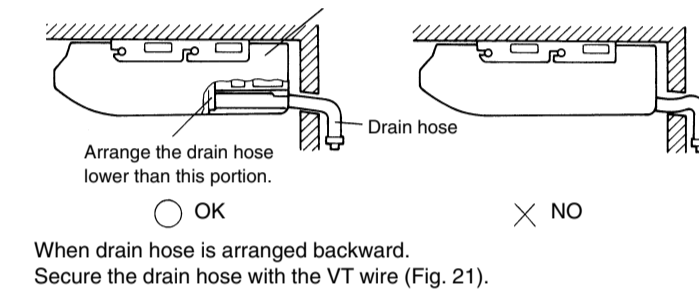

Be sure to arrange the drain hose so that it is leveled lower than the drain hose connecting port of the indoor unit (Fig. 20).


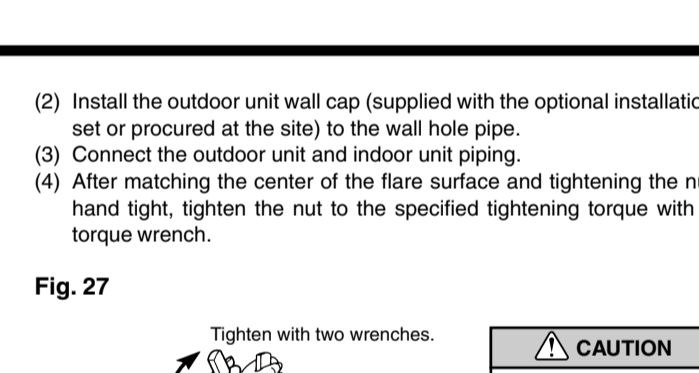


When drain hose is arranged backward. Secure the drain hose with the VT wire (Fig. 21).

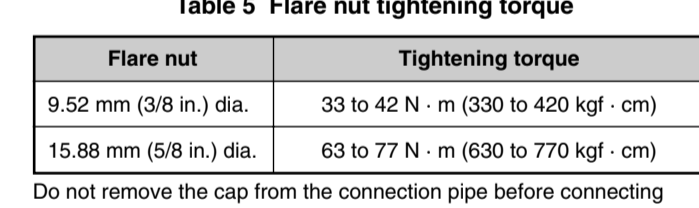

### 4. INSTALLING INDOOR UNIT

Remove the hole cover. Arrange the drain hose lower than this portion.

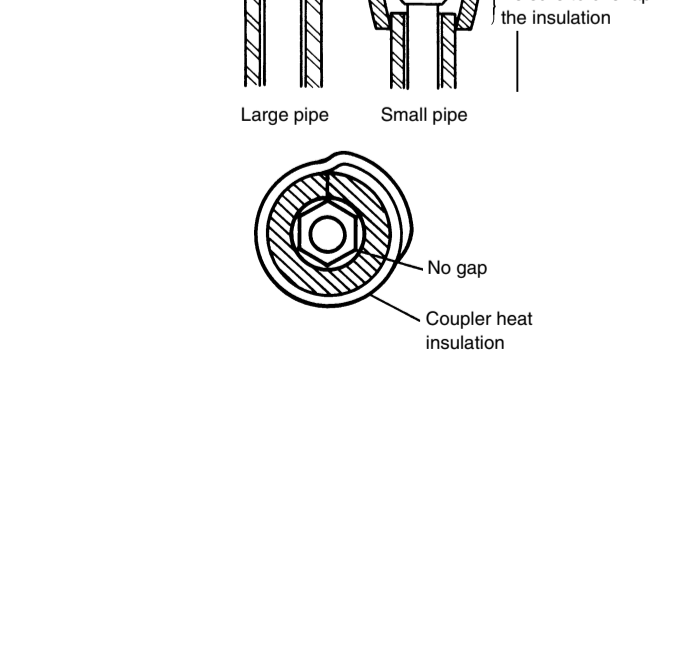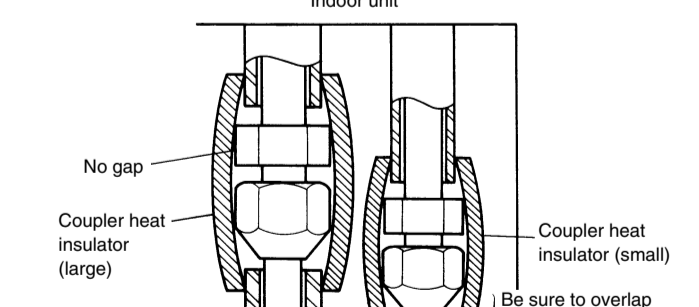


# 5 VACUUM PROCESS

- CAUTION**
- Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation! There is no extra refrigerant in the outdoor unit for air purging!
  - Use a vacuum pump for R410A exclusively. Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.

## 1. VACUUM

- Remove the cap, and connect the gauge manifold and the vacuum pump to the charging valve by the service hoses.
- Vacuum the indoor unit and the connecting pipes until the pressure gauge indicates -0.1 MPa (-76 cmHg).
- When -0.1 MPa (-76 cmHg) is reached, operate the vacuum pump for at least 15 minutes.
- Disconnect the service hoses and fit the cap to the charging valve to the specified torque.
- Remove the blank caps, and fully open the spindles of the 2-way and 3-way valves with a hexagon wrench (Torque : 6 to 7 N · m (60 to 70 kgf · cm)).
- Tighten the blank caps of the 2-way valve and 3-way valve to the specified torque.

Blank cap (2-way valve)	20 to 25 N · m (200 to 250 kgf · cm)
Blank cap (3-way valve)	30 to 35 N · m (300 to 350 kgf · cm)
Charging port cap	10 to 12 N · m (100 to 120 kgf · cm)

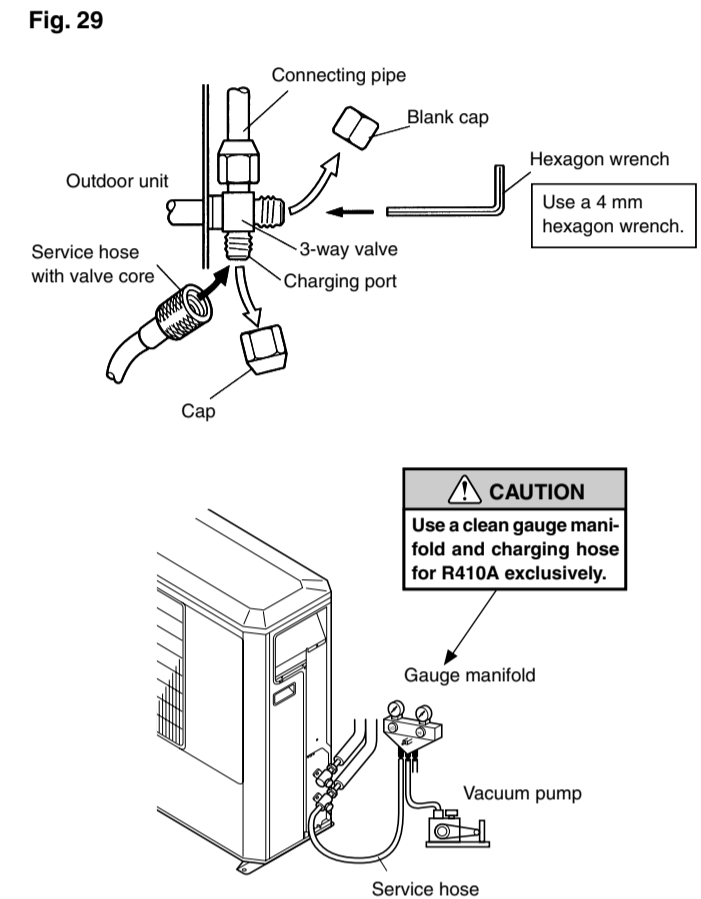

# 2. ADDITIONAL CHARGE

Refrigerant suitable for a piping length of 10 m is charged in the outdoor unit at the factory. When the piping is longer than 10 m, additional charging is necessary. For the additional amount, see the table below.

Pipe length	10 m (33 ft)	15 m (49 ft)	20 m (66 ft)	25 m (82 ft)
Additional refrigerant	None	250 g (8.8 oz)	500 g (17.6 oz)	750 g (26.5 oz)
			50 g / 1 m (1.76 oz / 3.3 ft)	

Between 10 m and 25 m, when using a connection pipe other than that in the table, charge additional refrigerant with 50 g (1.76 oz) / 1 m (3.3 ft) as the criteria.

- CAUTION**
- When moving and installing the air conditioner, do not mix gas other than the specified refrigerant (R410A) inside the refrigerant cycle.
  - When charging the refrigerant R410A, always use an electronic balance for refrigerant charging (to measure the refrigerant by weight).
  - When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.
  - Add refrigerant from the charging valve after the completion of the work.
  - If the units are further apart than the maximum pipe length, correct operation can not be guaranteed.

## 3. GAS LEAKAGE INSPECTION

- CAUTION**
- After connecting the piping, check the joints for gas leakage with gas leak detector.


# 6 HOW TO CONNECT WIRING TO THE TERMINALS

## A. For solid core wiring (or F-cable)

- Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to about 25 mm (1 5/16") of expose the solid wire.
- Using a screwdriver, remove the terminal screw(s) on the terminal board.
- Using pliers, bend the solid wire to form a loop suitable for the terminal screw.
- Shape the loop wire properly, place it on the terminal board and tighten securely with the terminal screw using a screwdriver.


## B. For strand wiring

- Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to about 10 mm (3/8") of expose the strand wiring.
- Using a screwdriver, remove the terminal screw(s) on the terminal board.
- Using a round terminal fastener or pliers, securely clamp a round terminal to each stripped wire end.
- Position the round terminal wire, and replace and tighten the terminal screw using a screwdriver.

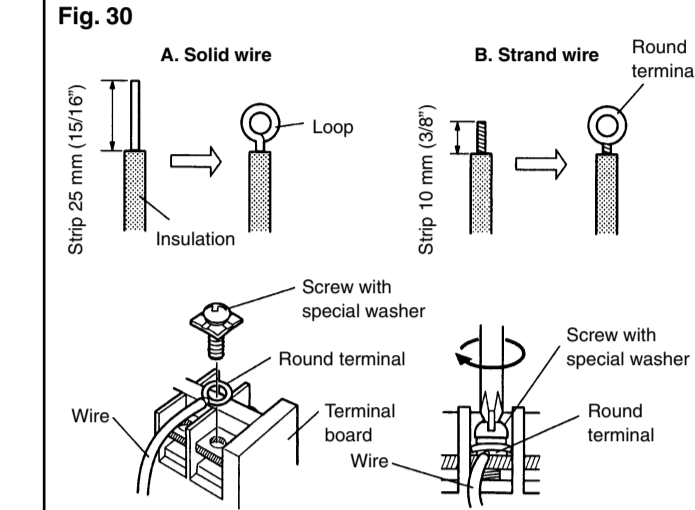

## HOW TO FIXED CONNECTION CORD AND POWER CABLE AT THE CORD CLAMP

After passing the connection cord and power cable through the insulation tube, fasten it with the cord clamp.

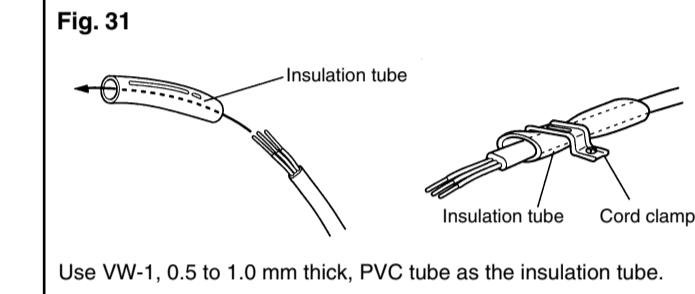

# 7 ELECTRICAL REQUIREMENT

Electric wire size and fuse capacity:

Power supply cord (mm <sup>2</sup> )	MAX.	4.0
MIN.	3.5	
Connection cord (mm <sup>2</sup> )	MAX.	2.5
MIN.	1.5	
Fuse capacity (A)	30	



- Install the disconnect device with a contact gap of at least 3 mm nearby the units. (Both indoor unit and outdoor unit)
- Always make the air conditioner power supply a special branch circuit and provide a special breaker.
- Always use H07FN-F or equivalent as the power supply cord and the connection cord.

# 8 ELECTRICAL WIRING


- CAUTION**
- Match the terminal block numbers and connection cord colors with those of the outdoor unit. Erroneous wiring may cause burning of the electric parts.
  - Connect the connection cords firmly to the terminal block. Imperfect installation may cause a fire.
  - Always fasten the outside covering of the connection cord with the cord clamp. (If the insulator is chafed, electric leakage may occur.)
  - Always connect the ground wire.

## 1. INDOOR UNIT SIDE


- Remove the electric component box.

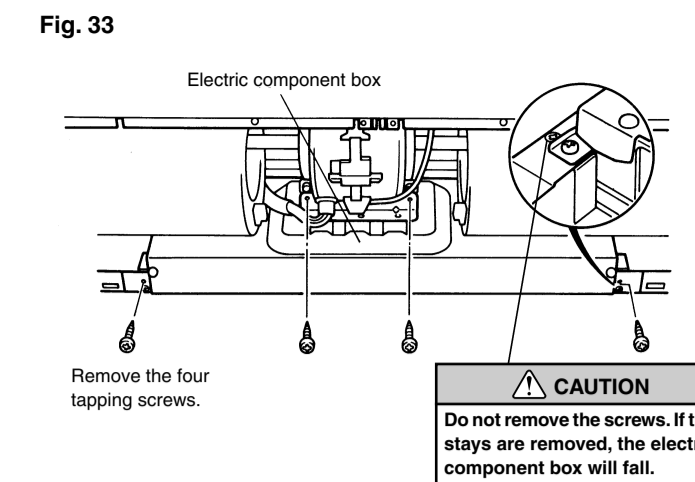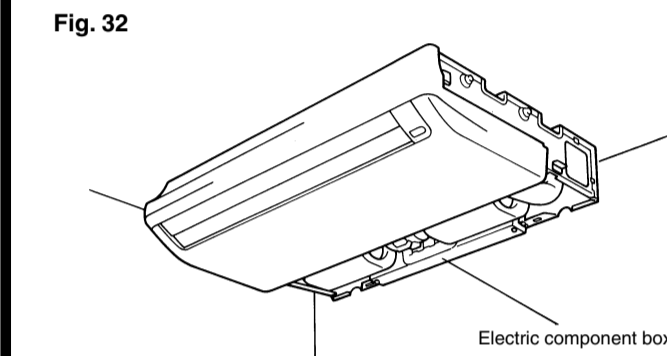

- Pull out the electric component box.

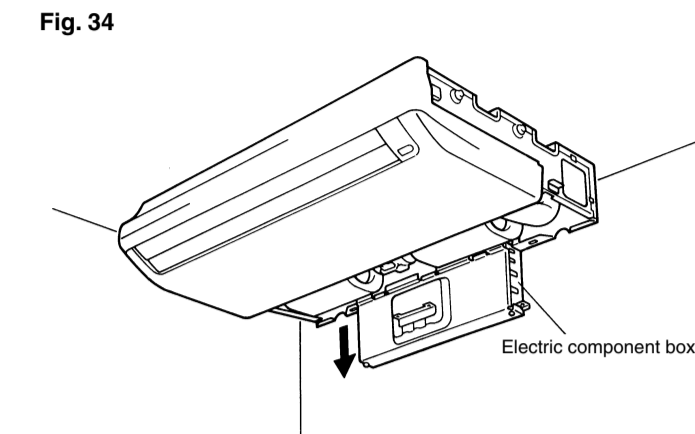


- Remove the electric component box cover.

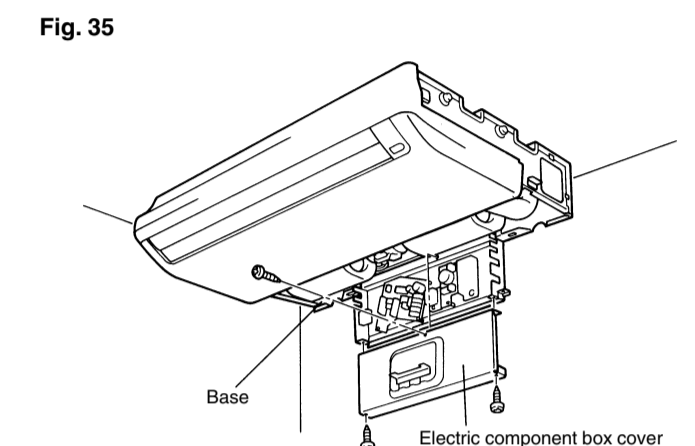


- Remove the three tapping screws.
- CAUTION**
- Be careful not to pinch the lead wires between the electric component box and base.

- Remove the cord clamp.
- Process the end of the connection cords to the dimensions shown in Fig. 36.
- Connect the end of the connection cord fully into the terminal block.


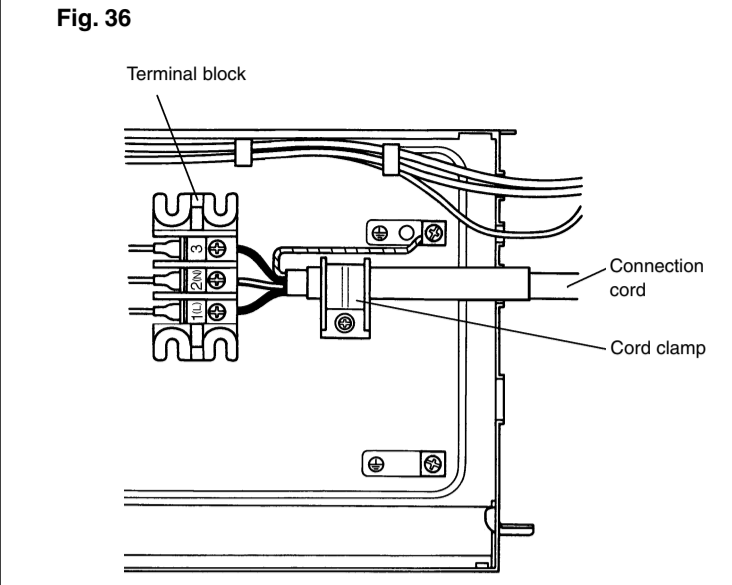


- Fasten the connection cord with a cord clamp.
- Fasten the end of the connection cord with the screw.

- Floor console/Under ceiling select switch
- The electrical circuits for this were set for use as a ceiling type at the factory.
- The following changes must be made to the settings if the unit is to be used as a floor type.
- Changing the settings for the electrical circuits.
- Switch 1 (SW1) on the printed circuit board inside the electric component box must be set as follows.

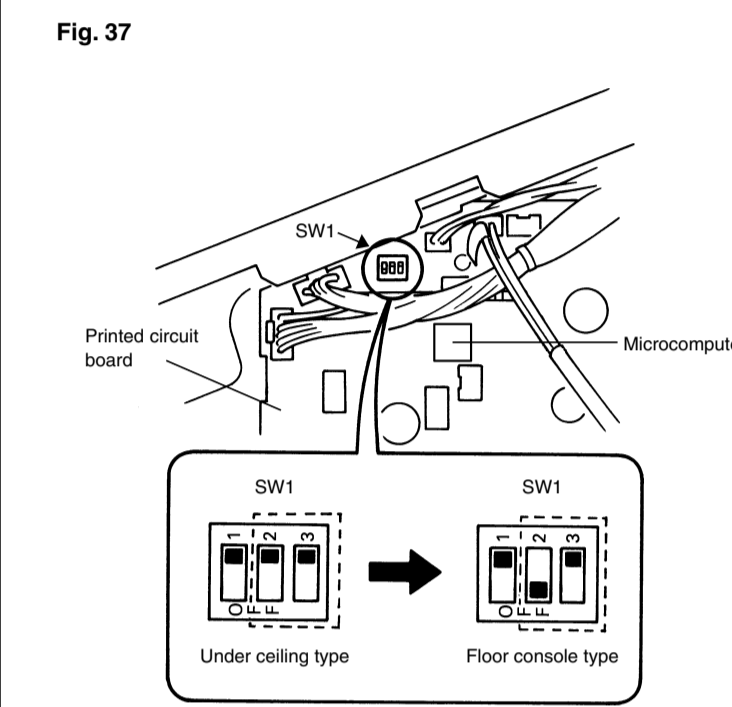

# 2. OUTDOOR UNIT SIDE

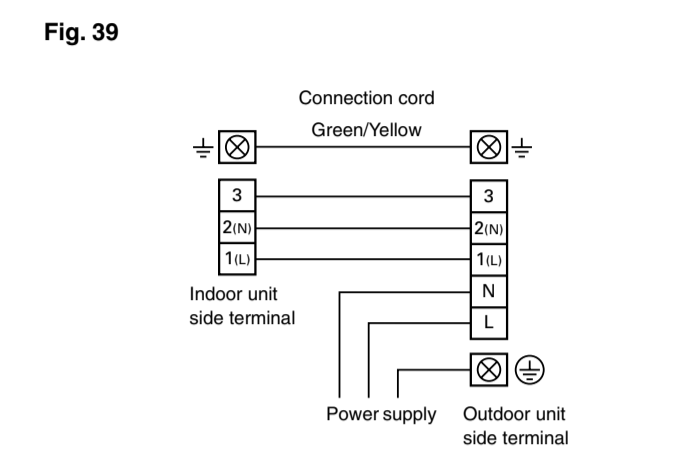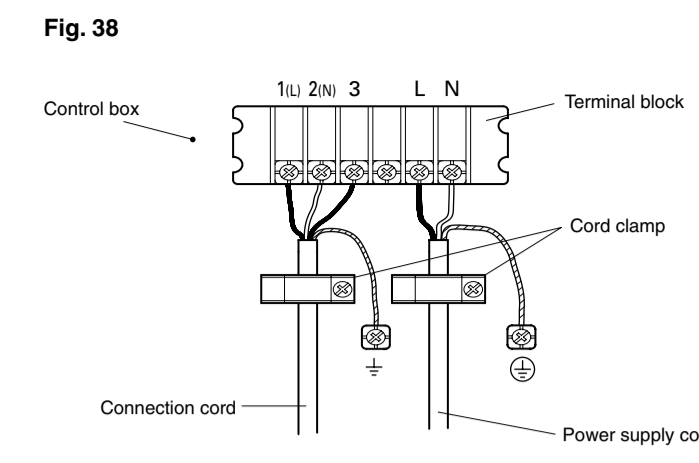

- Fasten the connection cord with a cord clamp.
- Fasten the end of the connection cord with the screw.

## Installing the valve cover:



# 9 POWER



- WARNING**
- The rated voltage of this product is 220-240V A.C. 50Hz.
  - Before turning on the verify that the voltage is within the 198V to 264V range.
  - Always use a special branch circuit and install a special receptacle to supply power to the room air conditioner.
  - Use a circuit breaker and receptacle matched to the capacity of the room air conditioner.
  - The circuit breaker is installed in the permanent wiring. Always use a circuit that can trip all the poles of the wiring and has an isolation distance of at least 3 mm between the contacts of each pole.
  - Perform wiring work in accordance with standards so that the room air conditioner can be operated safely and positively.
  - Install a leakage circuit breaker in accordance with the related laws and regulations and electric company standards.

- CAUTION**
- The power source capacity must be the sum of the room air conditioner current and the current of other electrical appliances. When the current contracted capacity is insufficient, change the contracted capacity.
  - When the voltage is low and the air conditioner is difficult to start, contact the power company the voltage raised.

# 10 TEST RUNNING

- CAUTION**
- Always turn on the power 4 hours prior to the start of the operation in order to ensure compressor protection.


- Perform test operation and check items 1 and 2 below.
- For the operation method, refer to the operating manual.
- The outdoor unit may not run, depending on the room temperature. In this case, the 'TEST RUN' signal is received during air conditioner operation (use a metallic object to short the two metal contacts under the battery compartment lid and send the 'TEST RUN' signal from the remote control unit).

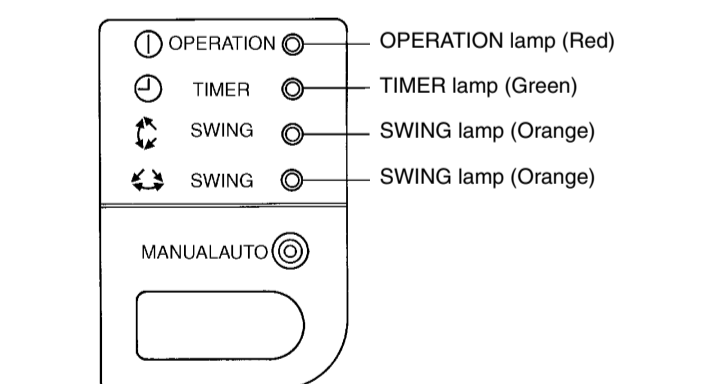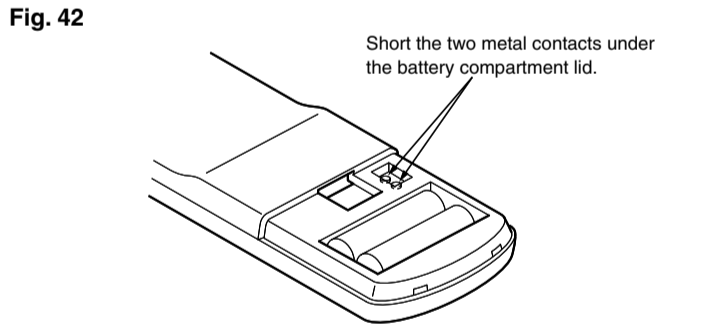

- Operation can be checked by lighting and flashing of the display section OPERATION and TIMER lamps.
- Perform judgment in accordance with the following.
- Test running
  - When the air conditioner is run by pressing the remote control unit TEST RUN button, the OPERATION and TIMER lamps flash slowly at the same time.
  - If the breaker is tripped during the test operation due to insufficient current capacity, change the DIP switches on the circuit board to the settings shown in Table 9 below.

DIP-SW			CURRENT (MAX.)
1	2	3	
OFF	OFF	OFF	16.5 A
ON	OFF	OFF	14.0 A
OFF	ON	OFF	12.0 A
ON	ON	OFF	9.5 A

- CAUTION**
- Never set the 24,000 BTU model to the maximum current of 16.5 A. The protection devices will be activated and the unit will not operate properly.
  - If the maximum current is reduced, cooling or heating performance will be reduced.

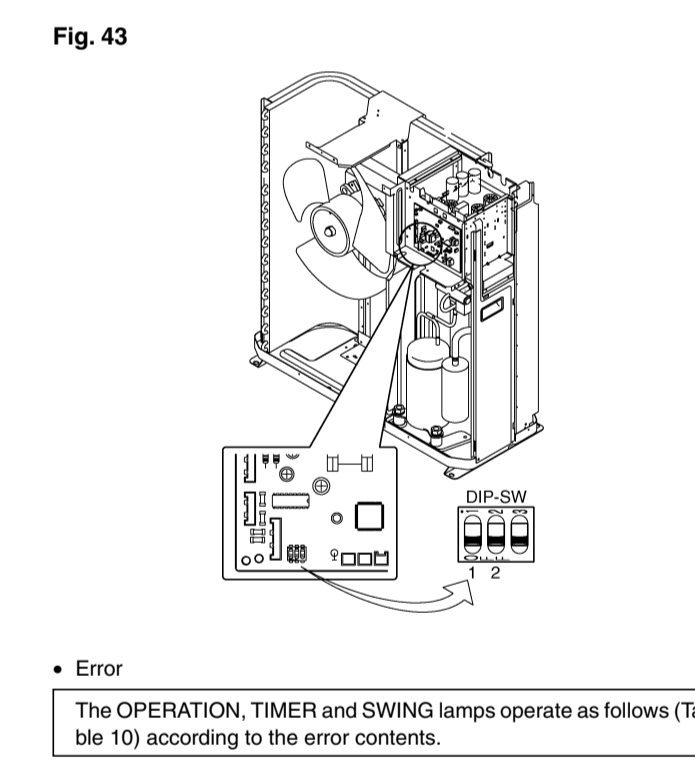


Error contents	Error display		
	OPERATION (RED)	TIMER (GREEN)	SWING (ORANGE)
Indoor unit circuit board error	○	○	○
Indoor unit room temperature sensor wire opened	2 times ●	○	○
Indoor unit room temperature sensor wire short circuited	2 times ●	○	○
Indoor unit piping sensor wire opened	3 times ●	○	○
Indoor unit piping sensor short circuited	3 times ●	○	○
Indoor unit fan error	6 times ●	○	○
Outdoor unit circuit board error or miswiring between outdoor unit and indoor unit	5 times ●	○	○
Outdoor unit discharge temperature sensor error	○	5 times ●	○
Outdoor unit piping sensor	○	3 times ●	○
Outdoor unit outdoor temperature sensor error	○	4 times ●	○

○ : Fast flashing ● : Slow flashing ○ : Off


- ## CHECK ITEMS
- ### (1) INDOOR UNIT
- Is operation of each button on the remote control unit normal?
  - Does each lamp light normally?
  - Do not air flow direction louvers operate normally?
  - Is the drain normal?
  - Is there any abnormal noise and vibration during operation?
- ### (2) OUTDOOR UNIT
- Is there any abnormal noise and vibration during operation?
  - Will noise, wind, or drain water from the unit disturb the neighbors?
  - Is there any gas leakage?
- Do not operate the air conditioner in the test running state for a long time.
  - For the operation method, refer to the operating manual and perform operation check.

# 11 MOUNT THE COVER PLATE AND THE INTAKE GRILLE


- ## 1. MOUNT THE COVER PLATE (RIGHT)
- Cut a pipe exit hole in the right plate. This is only when the pipe exits from the right side. (This operation is not required when the protrusion is on the top or rear.)

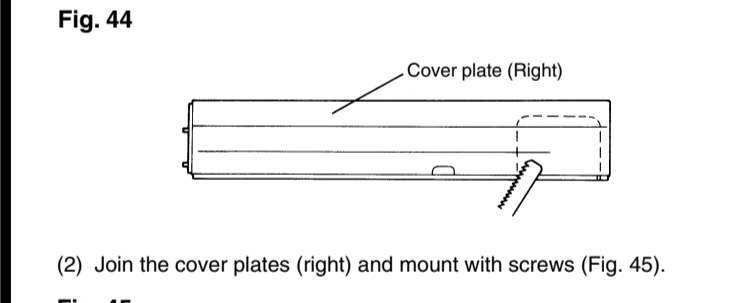

- Join the cover plates (right) and mount with screws (Fig. 45).

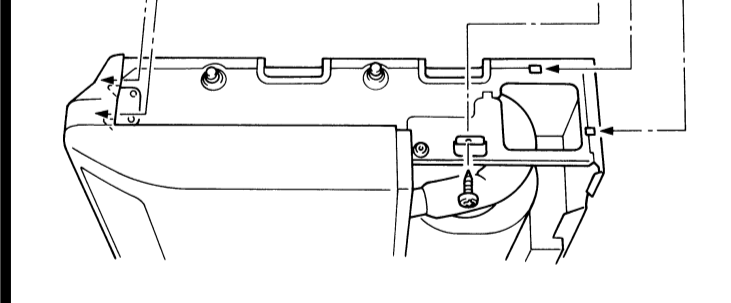


- ## 2. MOUNT THE COVER PLATE (LEFT)
- Join the cover plates (left) and mount with screws.

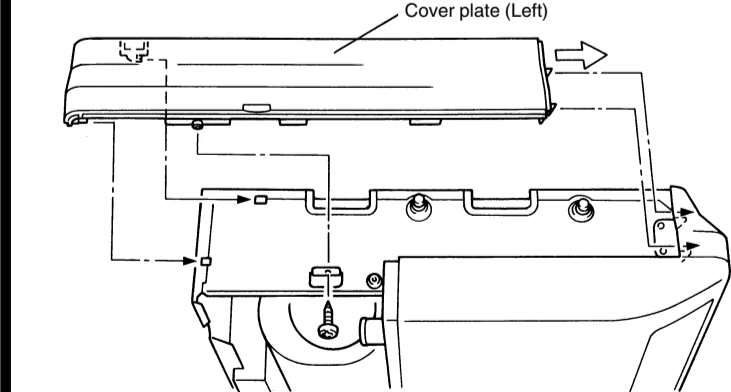


# 3. MOUNT THE INTAKE GRILLE

- Cut the right side of the intake grille. This is only when the pipe exits from the right side (Fig. 47).

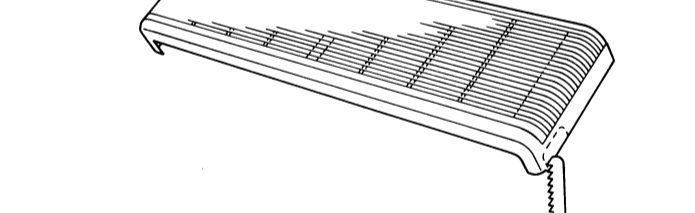

- Insert the hinges on the bottom of the intake grille into the holes in the base assembly. Then mount the arms to the three areas on the top of the intake grille (Fig. 48).

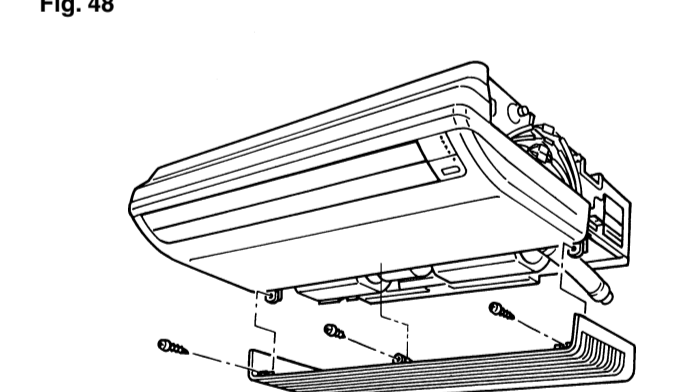


# 12 REMOTE CONTROL UNIT INSTALLATION


- CAUTION**
- Check that the indoor unit correctly receives the signal from the remote control unit, then install the remote control unit holder.
  - Select the remote control unit holder selection site by paying careful attention to the following: Avoid places in direct sunlight. Select a place that will not be affected by the heat from a stove, etc.

## 1. REMOTE CONTROL UNIT HOLDER INSTALLATION


- Install the remote control unit with a distance of 7 m between the remote control unit and the photocell as the criteria. However, when installing the remote control unit, check that it operates positively.
- Install the remote control unit holder to a wall, pillar, etc. with the tapping screw (Fig. 49).

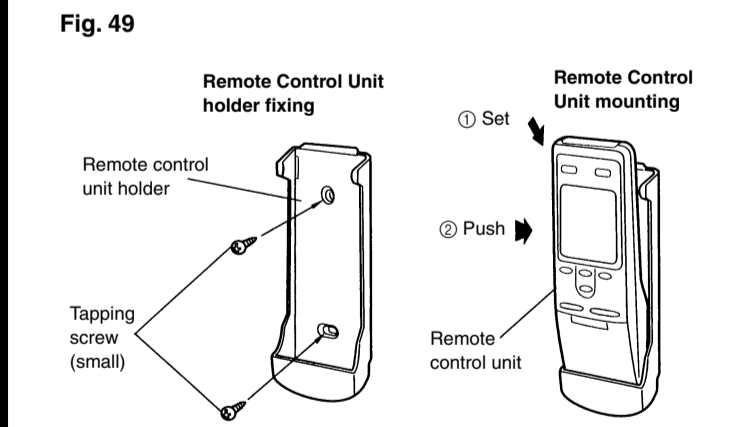


## 2. SWITCHING REMOTE CONTROL UNIT SIGNAL CODES

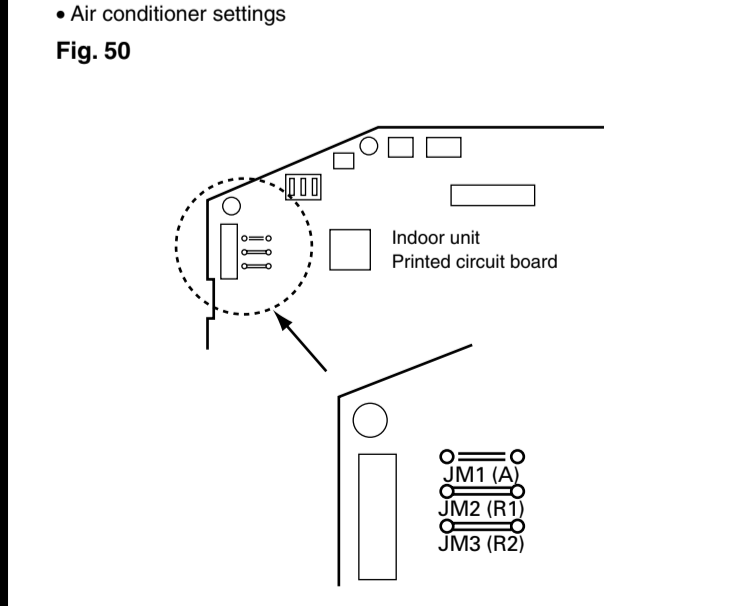


- Remote control unit settings
- Press the START/STOP button and display only the clock.

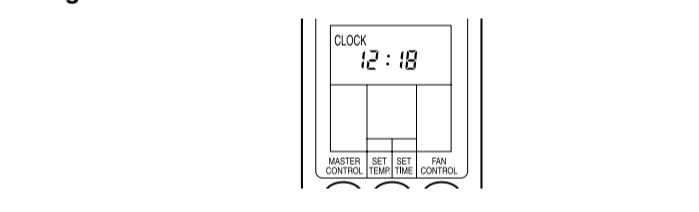

- Press the MASTER CONTROL button continuously for more than five seconds to display the current signal code.

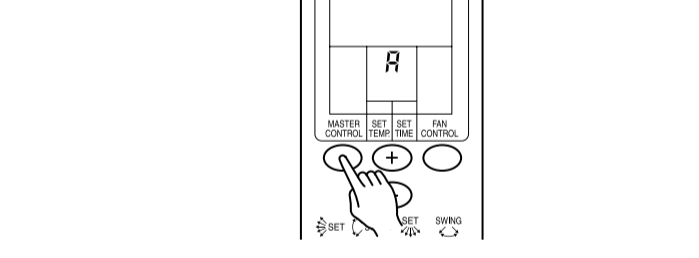

- Change the signal code with the < > button (A-b-c-d).

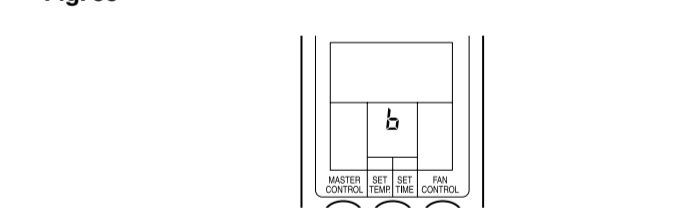

- Press the MASTER CONTROL button again to return to the clock display and change the signal code.
- Confirm the setting of the remote control unit signal code and the printed circuit board setting. If these are not confirmed, the remote control unit cannot be used to operate for the air conditioner.

Jumper wire	Remote control unit signal code	
JM2	JM3	
Connect	Connect	A (Primary setting)
Connect	Disconnect	B
Disconnect	Connect	C
Disconnect	Disconnect	D

# 13 CUSTOMER GUIDANCE

- Explain the following to the customer in accordance with the operating manual:
- Starting and stopping method, operation switching, temperature adjustment, timer, air flow switching, and other remote control unit operations.
  - Air filter removal and cleaning, and how to use the air louvers.
  - Give the operating and installation manuals to the customer.
  - If the signal code is changed, explain to the customer how it changed the system returns to signal code A when the batteries in the remote control unit are replaced.