

SPLIT TYPE
ROOM AIR CONDITIONER
WALL MOUNTED TYPE

SERVICE MANUAL



Indoor unit	Outdoor unit
ASYG14LMCB	AOYG14LMCBN

CONTENTS

SPECIFICATIONS.....	1
DIMENSIONS.....	2
REFRIGERANT SYSTEM DIAGRAM.....	3
CIRCUIT DIAGRAM.....	4
INDOOR PCB CIRCUIT DIAGRAM.....	5
OUTDOOR PCB CIRCUIT DIAGRAM.....	9
ERROR DETECTION.....	11
PARTS (INDOOR UNIT).....	13
PARTS (OUTDOOR UNIT).....	17
ACCESSORIES.....	19

SPECIFICATIONS

ELECTRICAL DATA

TYPE		Cool & heat inverter
INDOOR UNIT		ASYG14LMCB
OUTDOOR UNIT		AOYG14LMCBN
COOLING CAPACITY		4.20 kW
HEATING CAPACITY		5.40 kW
POWER SOURCE		230 V
FREQUENCY		50 Hz
RUNNING CURRENT	Cooling	5.6 A
	Heating	7.1 A
INPUT WATTS	Cooling	1.205 kW
	Heating	1.560 kW
EER	Cooling	3.49 kW/kW
COP	Heating	3.46 kW/kW
MOISTURE REMOVAL		2.1 L/h
AIR CIRCULATION HIGH		770 m ³ /h
MAXIMUM CURRENT	Cooling	9.0 A
	Heating	11.5 A

FAN MOTOR

POWER SOURCE		230 V
INDOOR UNIT Discrimination		MFD-12CYN
INDOOR UNIT Cooling	High	1,280 r.p.m.
	Medium	1,090 r.p.m.
	Low	1,000 r.p.m.
	Quiet	750 r.p.m.
INDOOR UNIT Heating	High	1,280 r.p.m.
	Medium	1,120 r.p.m.
	Low	1,050 r.p.m.
	Quiet	770 r.p.m.
OUTDOOR UNIT Discrimination		MFE-71TVAL
OUTDOOR UNIT Cooling		870 r.p.m.
OUTDOOR UNIT Heating		780 r.p.m.

NOISE LEVEL

INDOOR UNIT Cooling	High	44 dB
	Medium	40 dB
	Low	33 dB
	Quiet	25 dB
OUTDOOR UNIT Heating	High	44 dB
	Medium	40 dB
	Low	35 dB
	Quiet	27 dB
OUTDOOR UNIT Cooling		49 dB
OUTDOOR UNIT Heating		49 dB

COMPRESSOR AND REFRIGERANT

COMPRESSOR TYPE		Hermetic type, 4 pole, 3 phase, DC inverter motor, Rotary
DISCRIMINATION		808-884-80
WEIGHT (with oil)		9.3 kg
PRECHARGED REFRIGERANT		1,200 g
REFRIGERANT TYPE		R410A
FULL CHARGE	Pipe length 15 m	1,200 g
	20 m	1,300 g
ADDITIONAL CHARGE		20 g/m
MAXIMUM PIPING HEIGHT		15m

DIMENSIONS


INDOOR UNIT	H x W x D	268 x 840 x 203 mm
OUTDOOR UNIT	H x W x D	620 x 790 x 290 mm

WEIGHT



INDOOR UNIT	Shipping / Net	10.5 kg / 8.5 kg
OUTDOOR UNIT	Shipping / Net	44 kg / 40 kg

DIMENSIONS

INDOOR UNIT

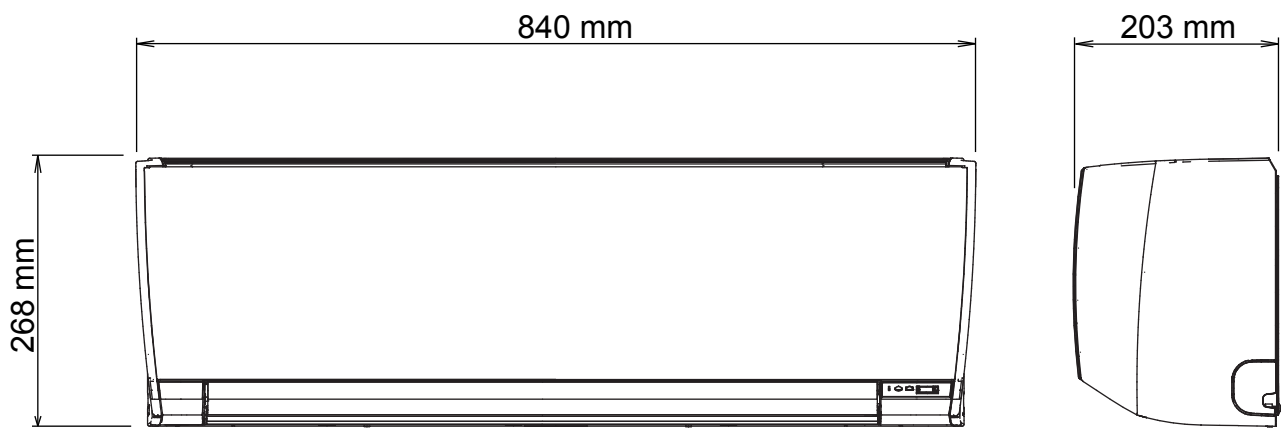


Drain hose

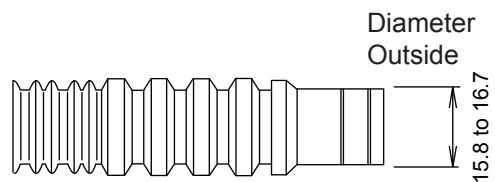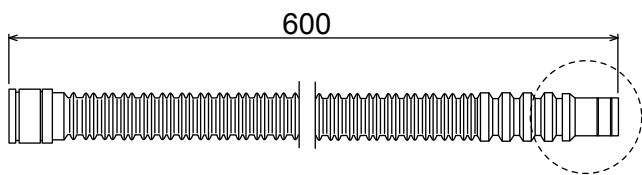


Inside : 13.8 mm

OUTDOOR UNIT

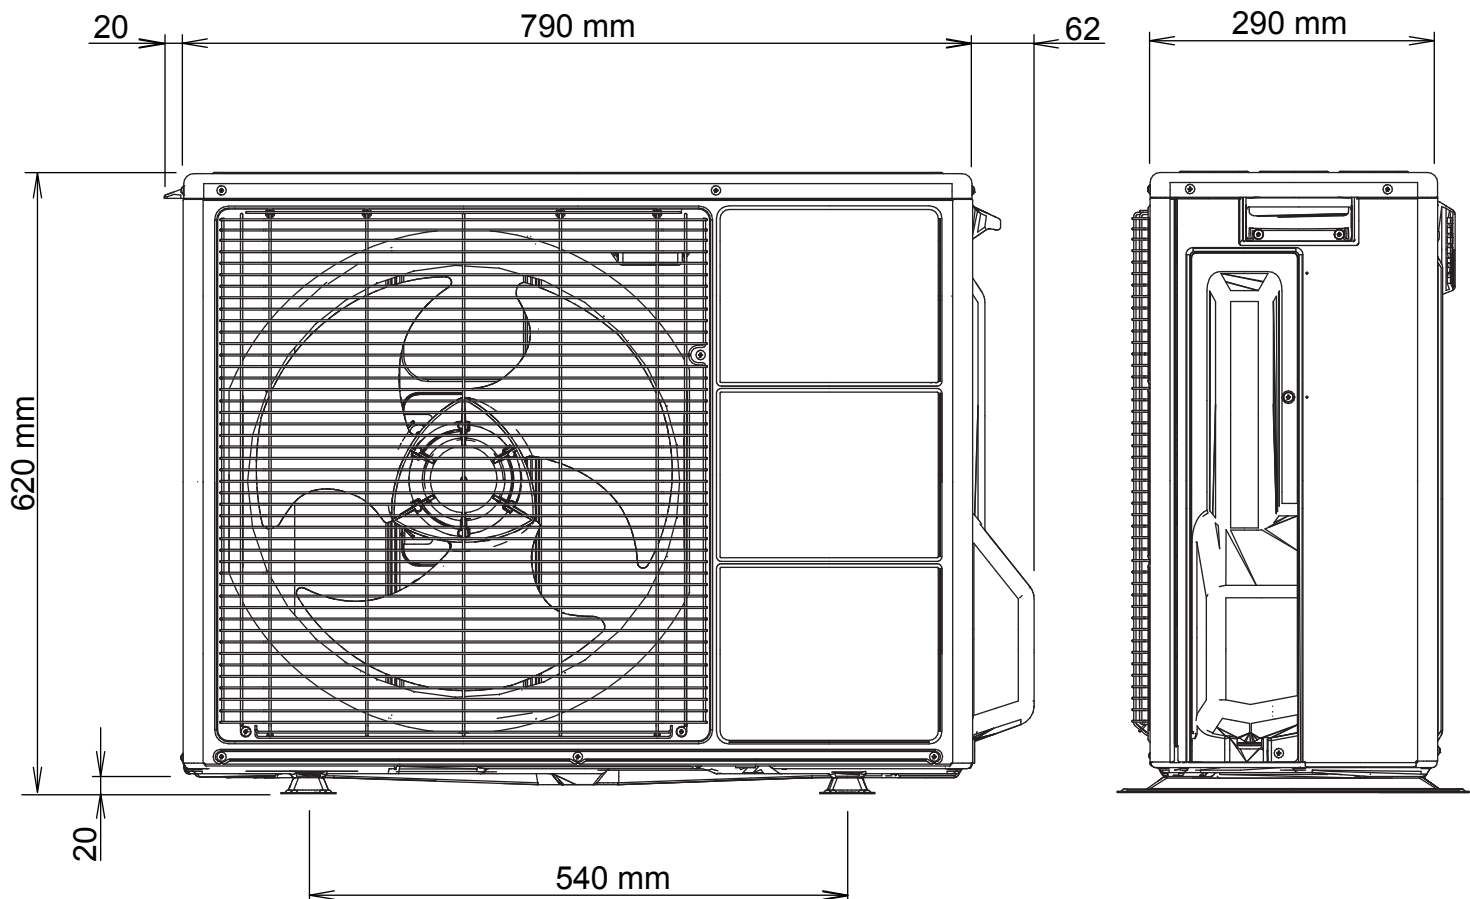


REFRIGERANT SYSTEM DIAGRAM

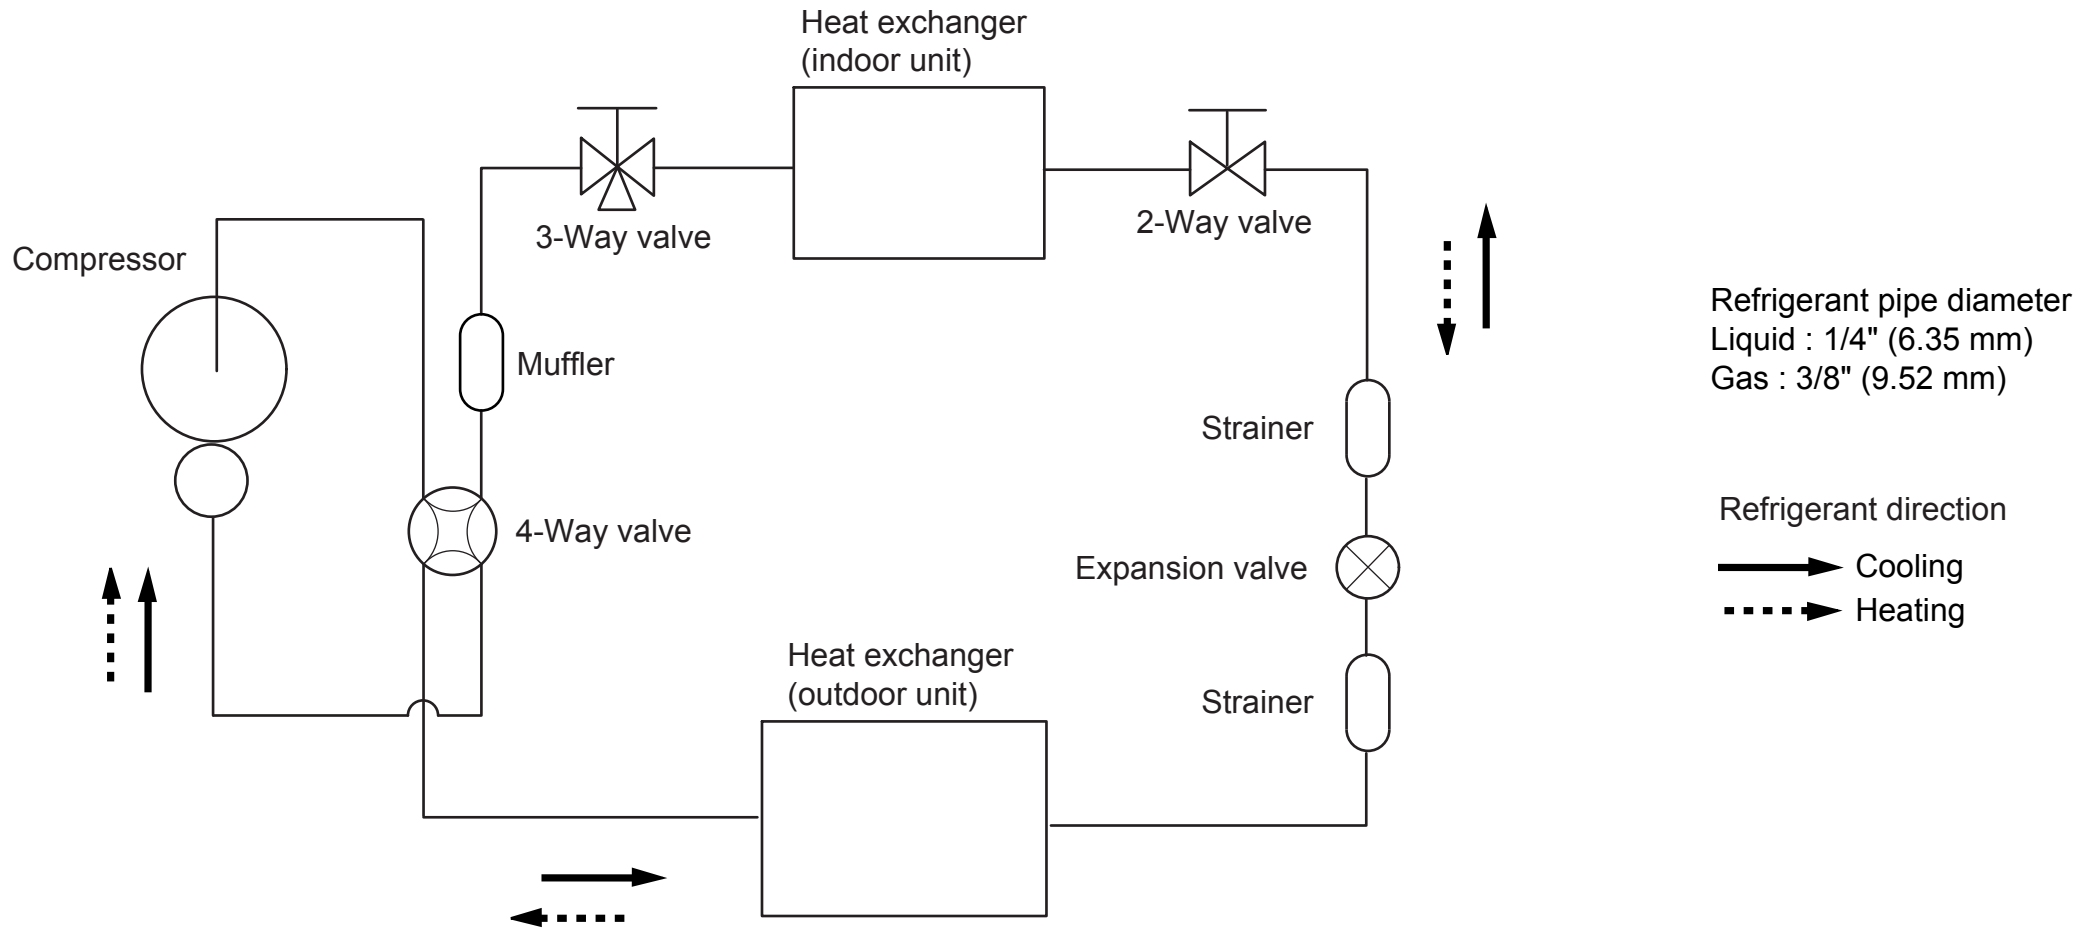

UTY-TWBXF Communication PCB

Wired remote control
(Option)

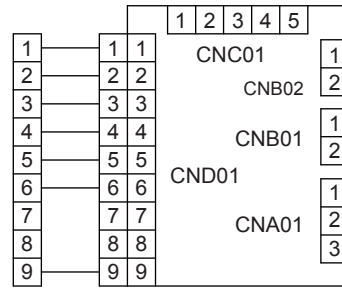

Ex. out (Option) Error status

Ex. out (Option)
Operation status


Ex. in (Option)

To main PCB


INDOOR UNIT

OUTDOOR UNIT


CIRCUIT DIAGRAM

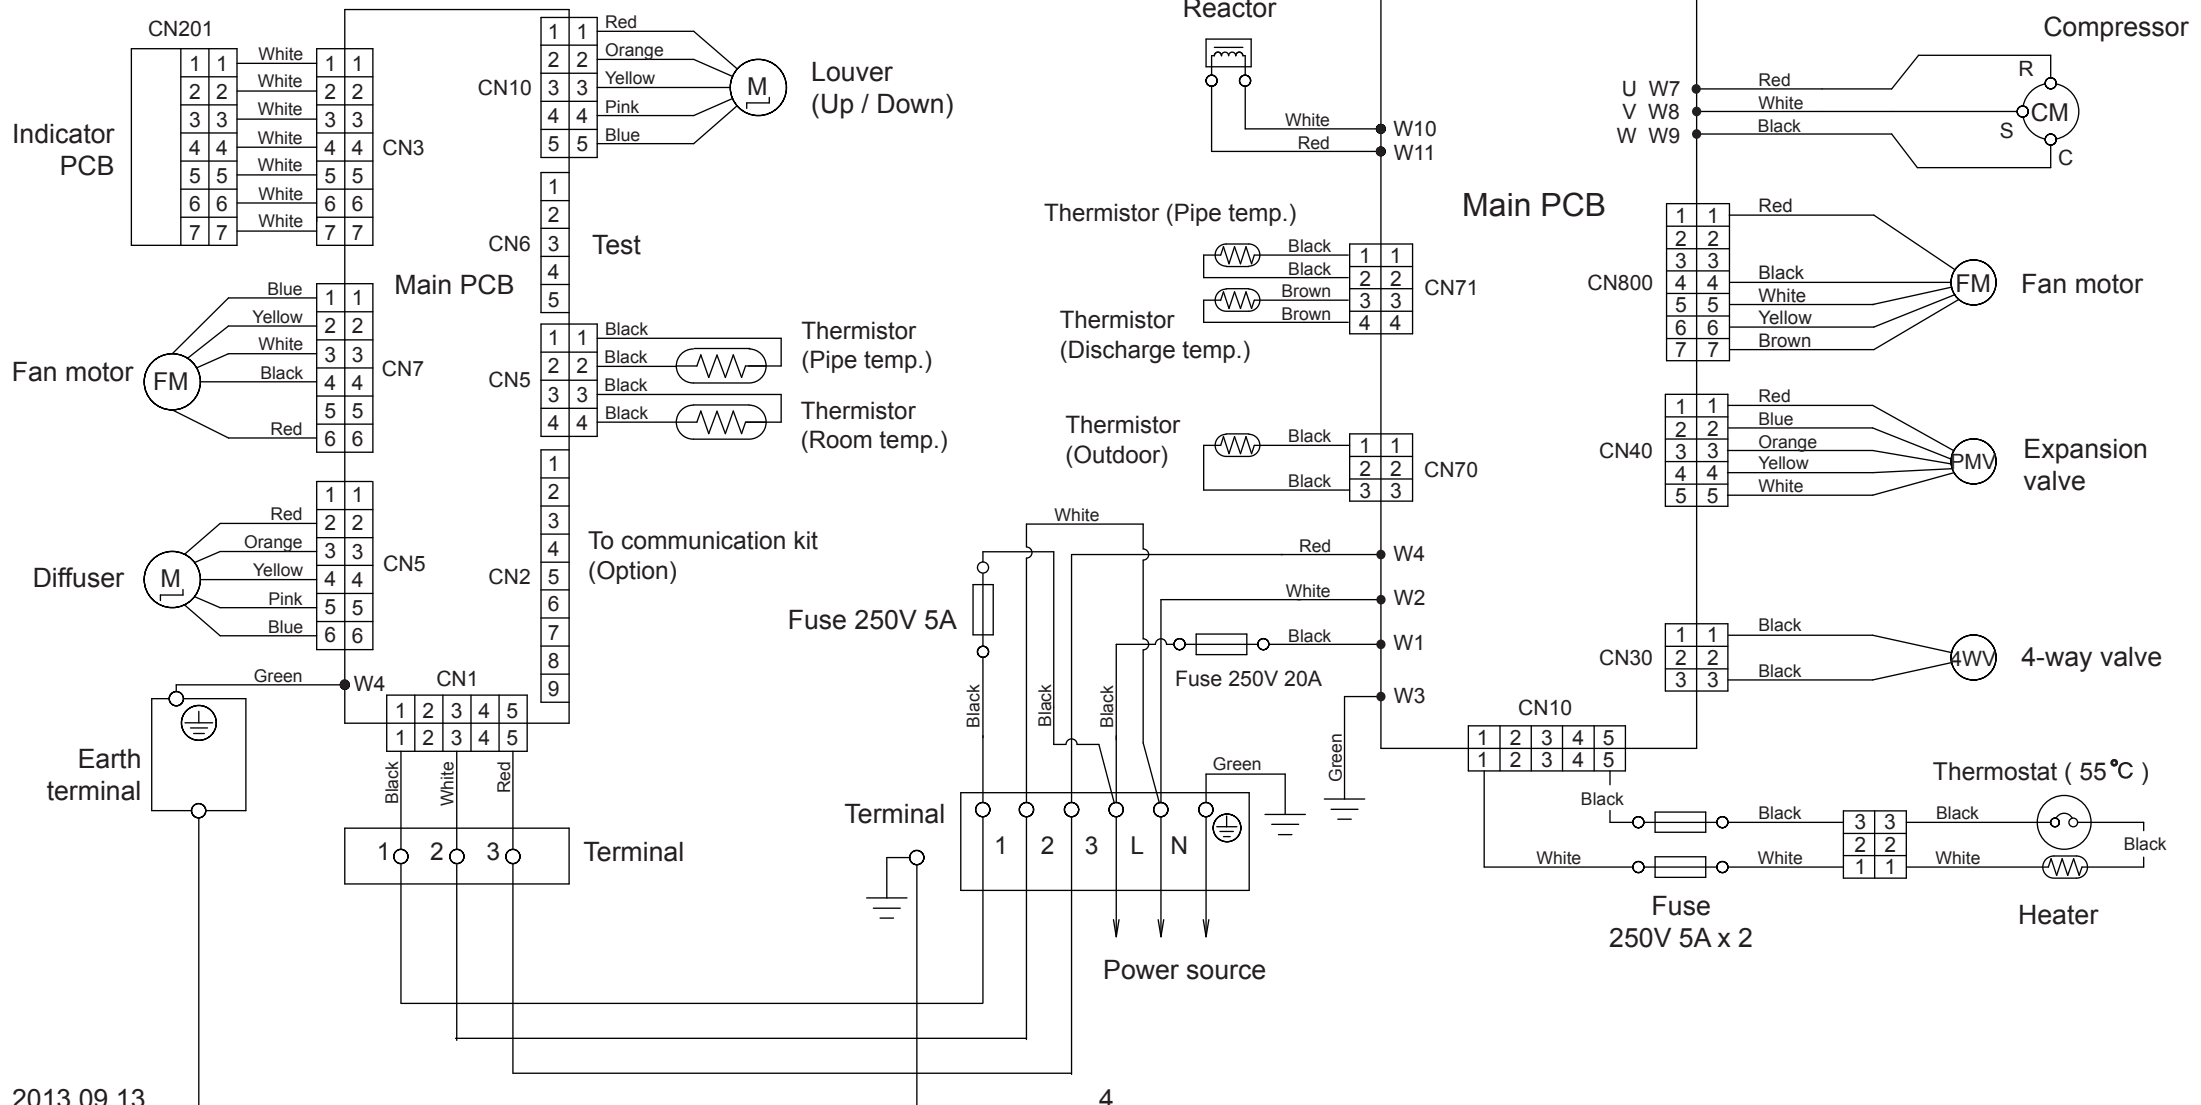


INDOOR PCB CIRCUIT DIAGRAM

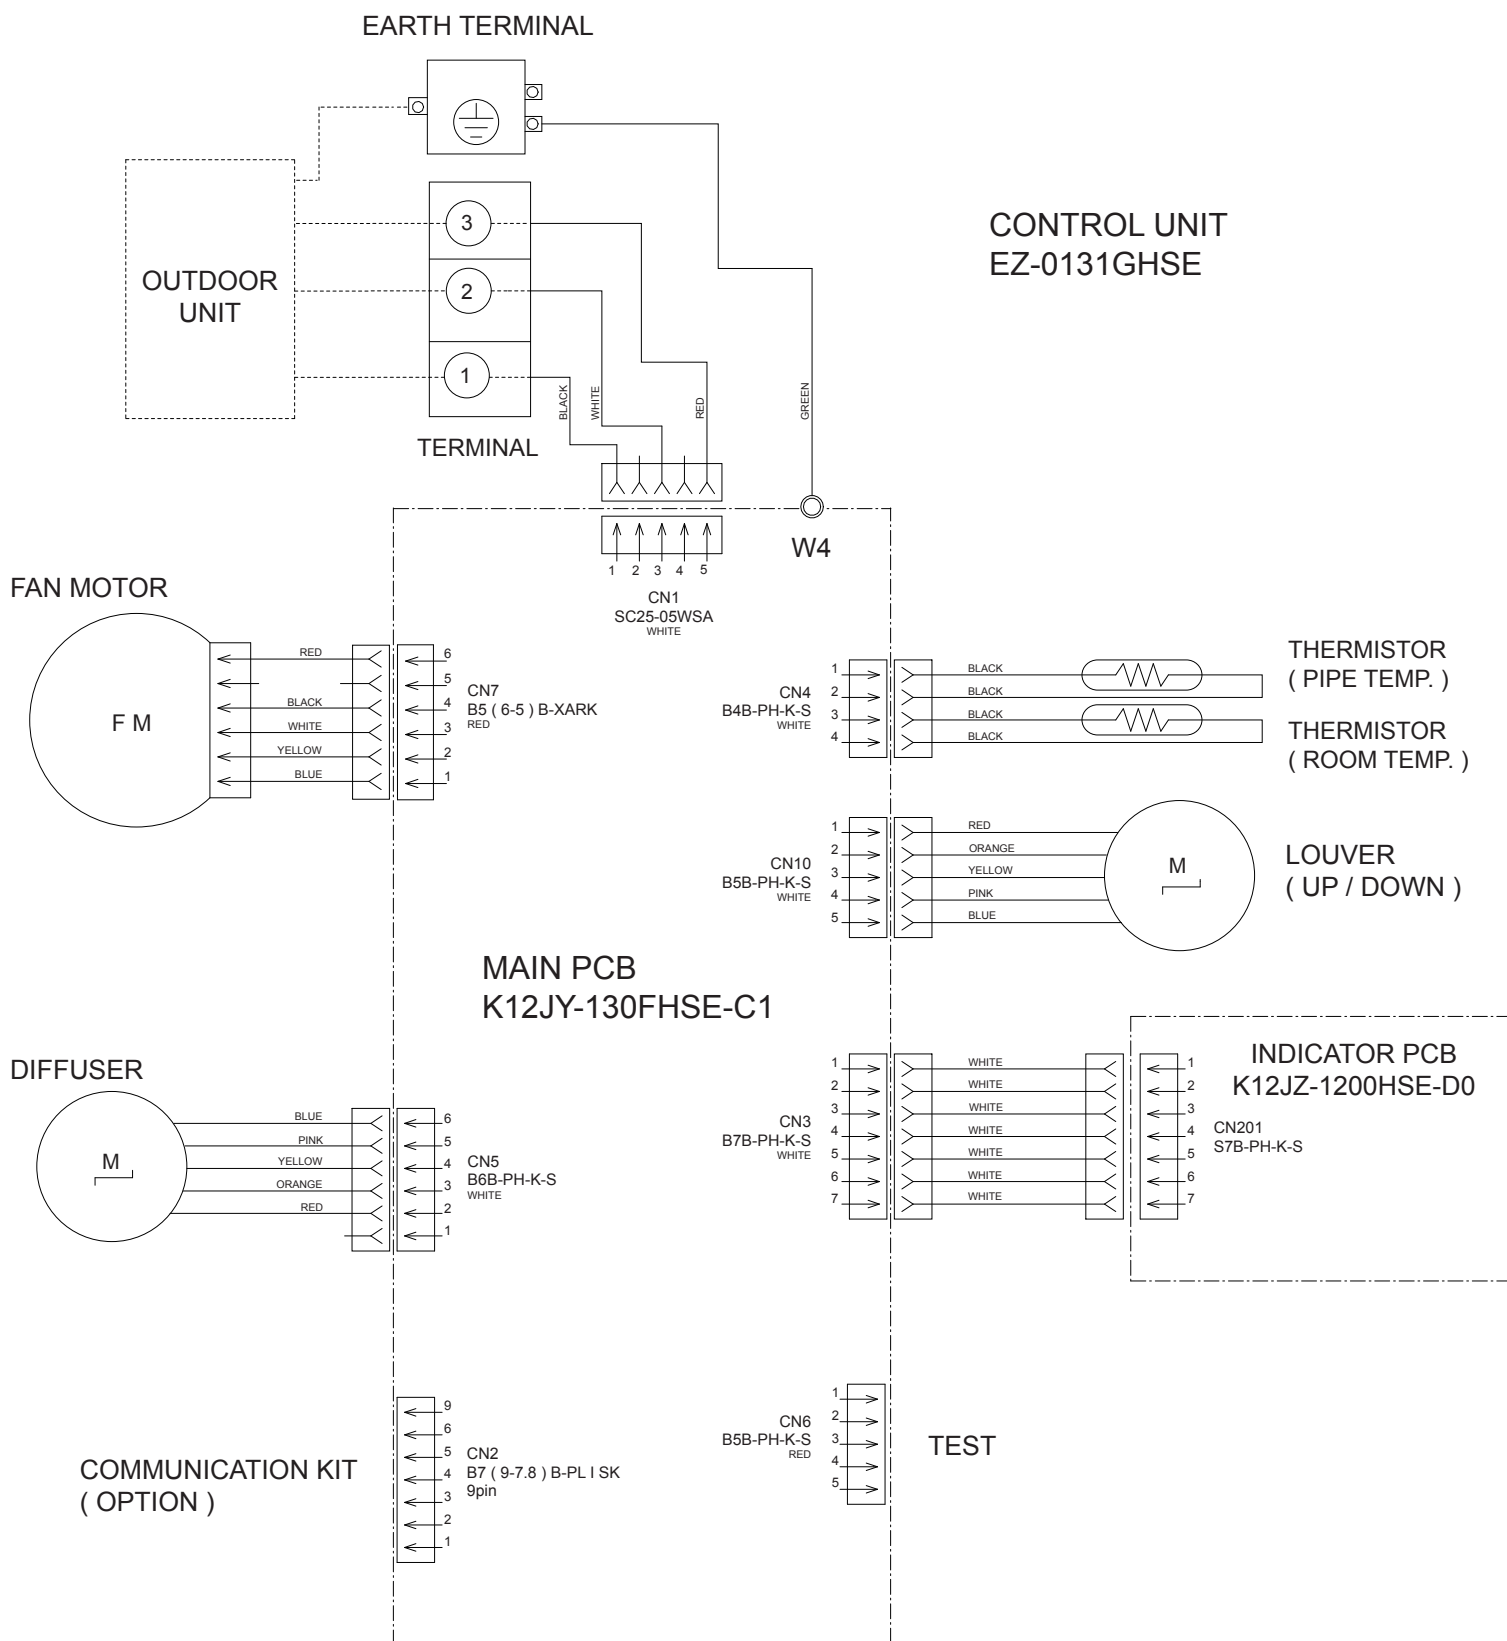


INDOOR UNIT
MAIN PCB
K12JY-130FHSE-C1

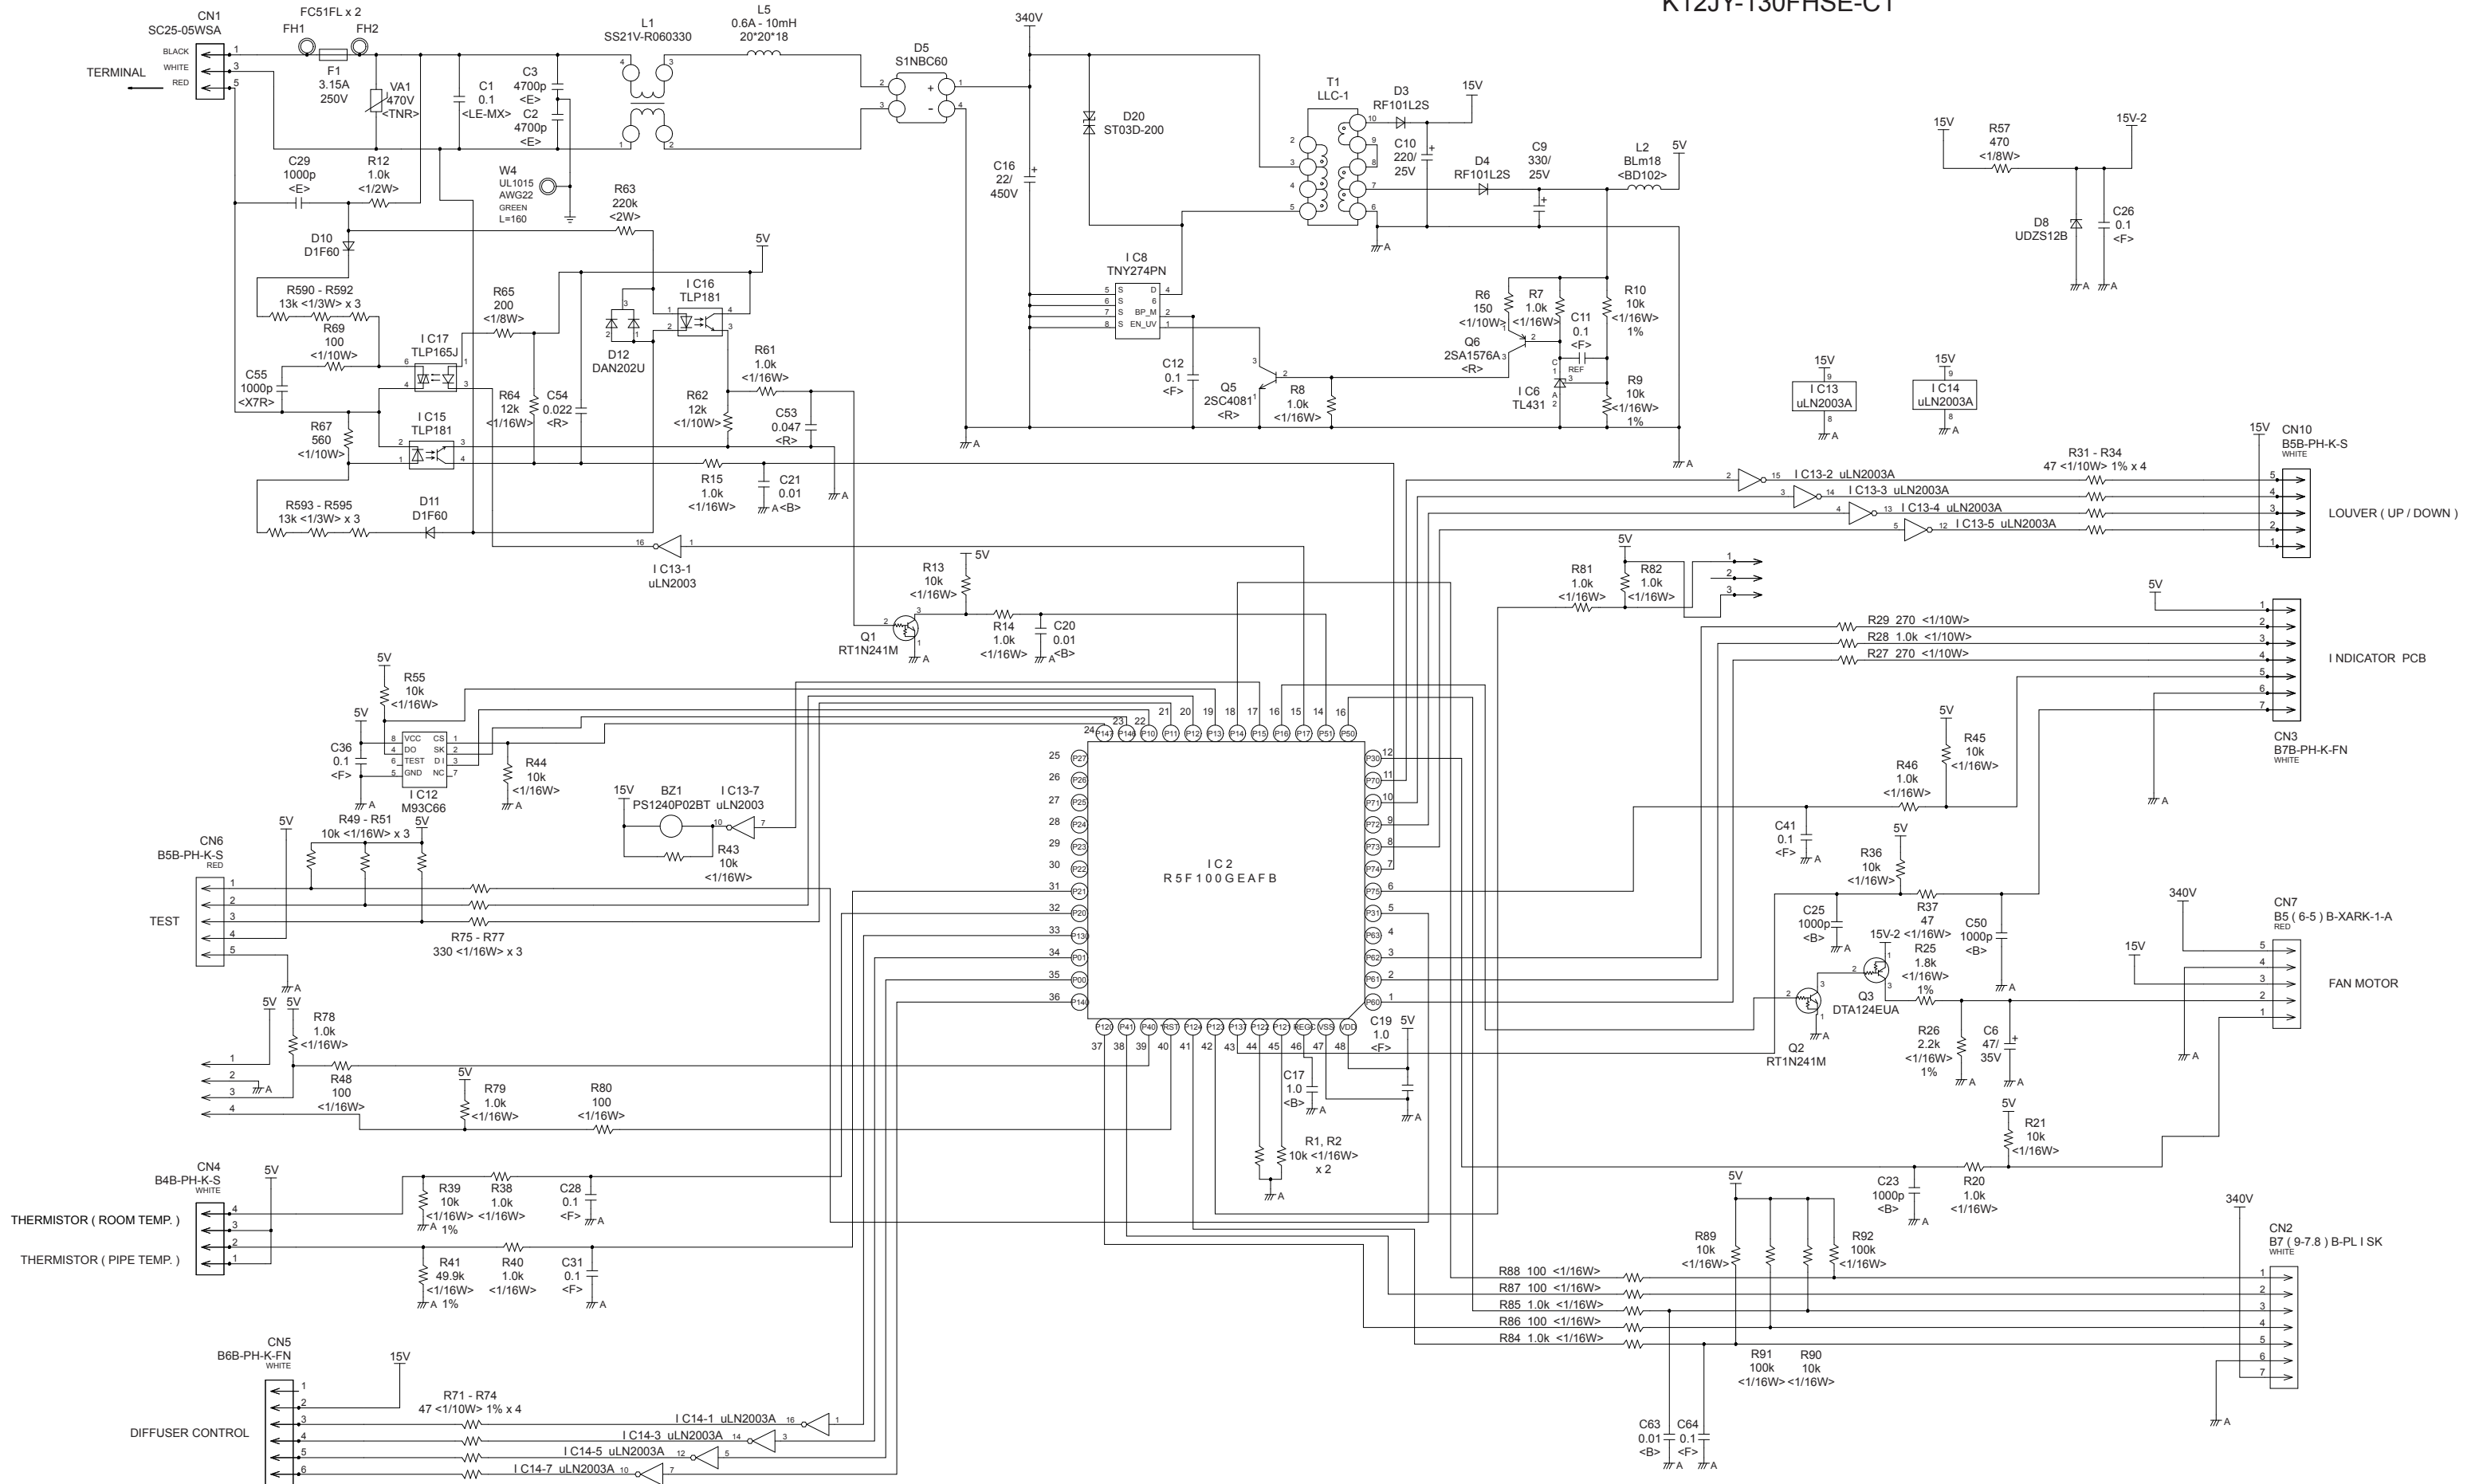


INDOOR UNIT
INDICATOR PCB
K12JZ-1200HSE-D0

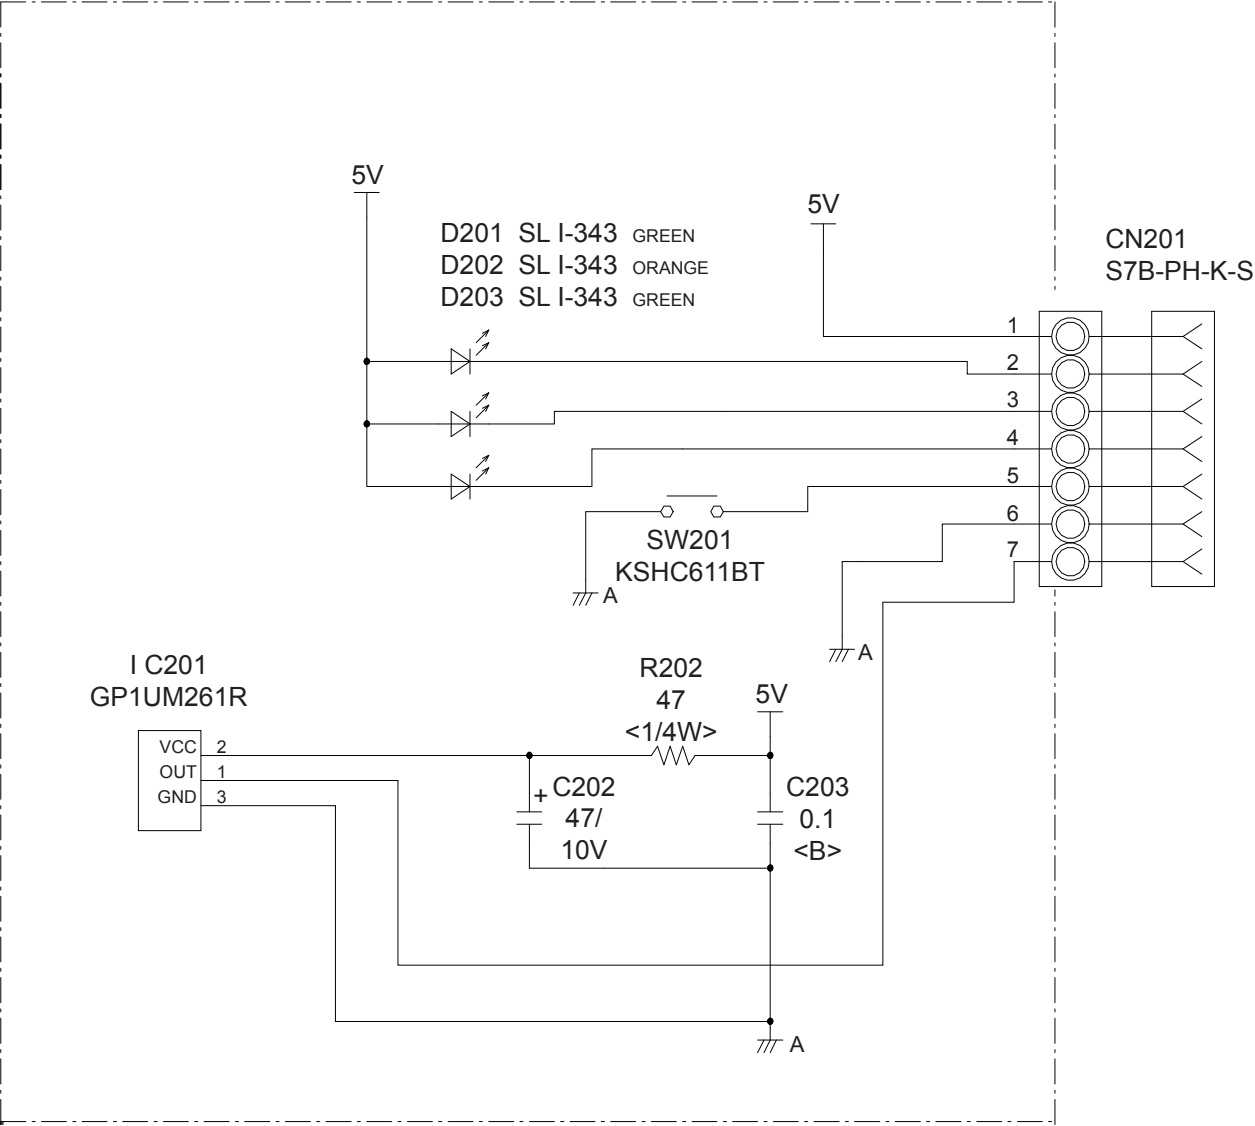

TO MAIN PCB

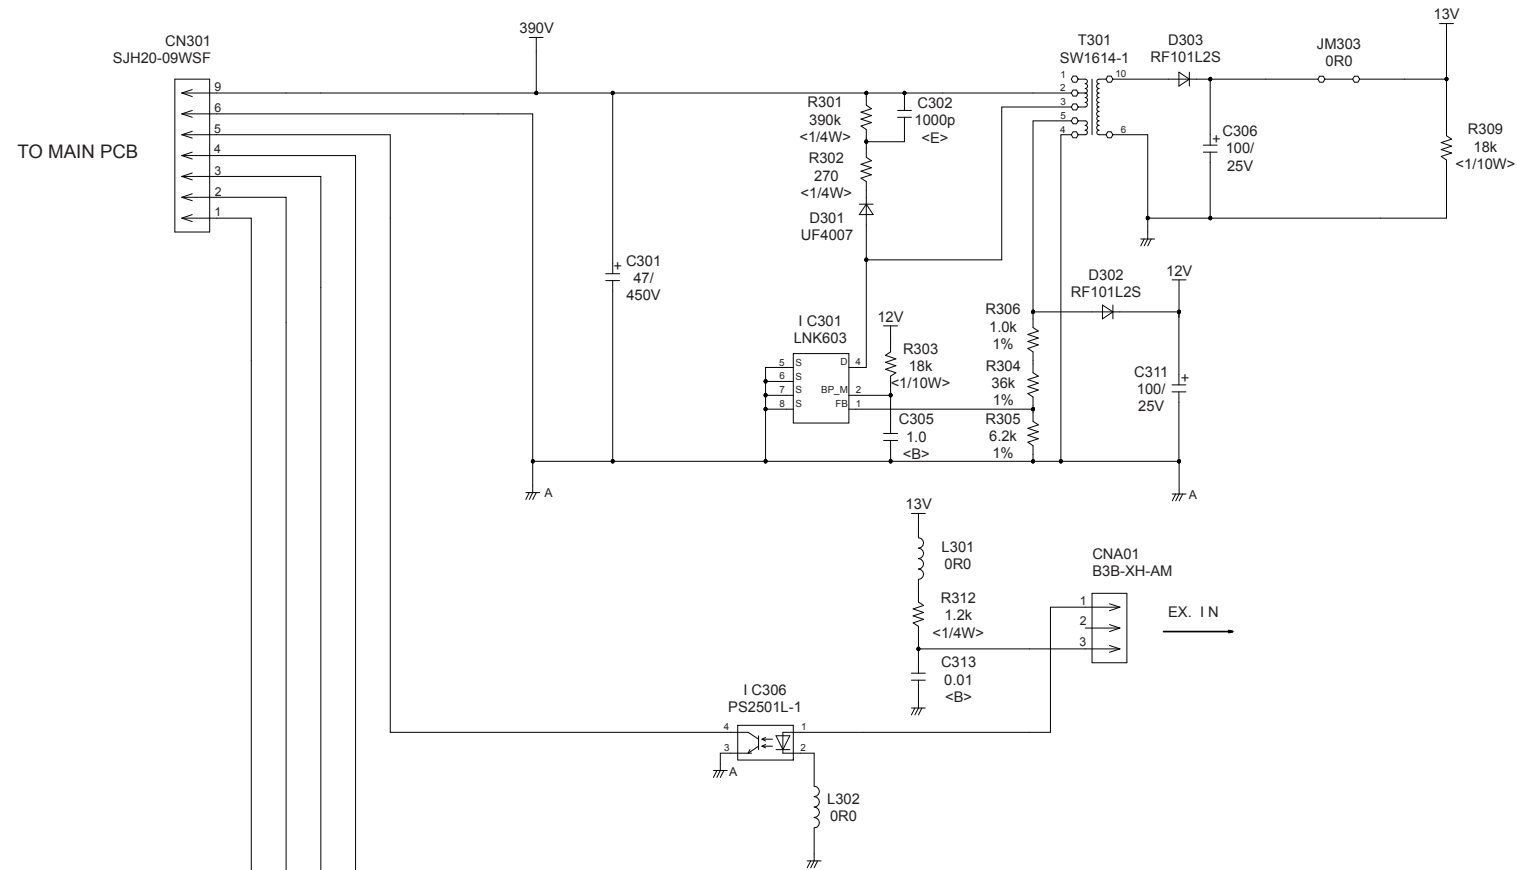


UTY-TWBXF COMMUNICATION PCB K10DC-1000HSE-CA0

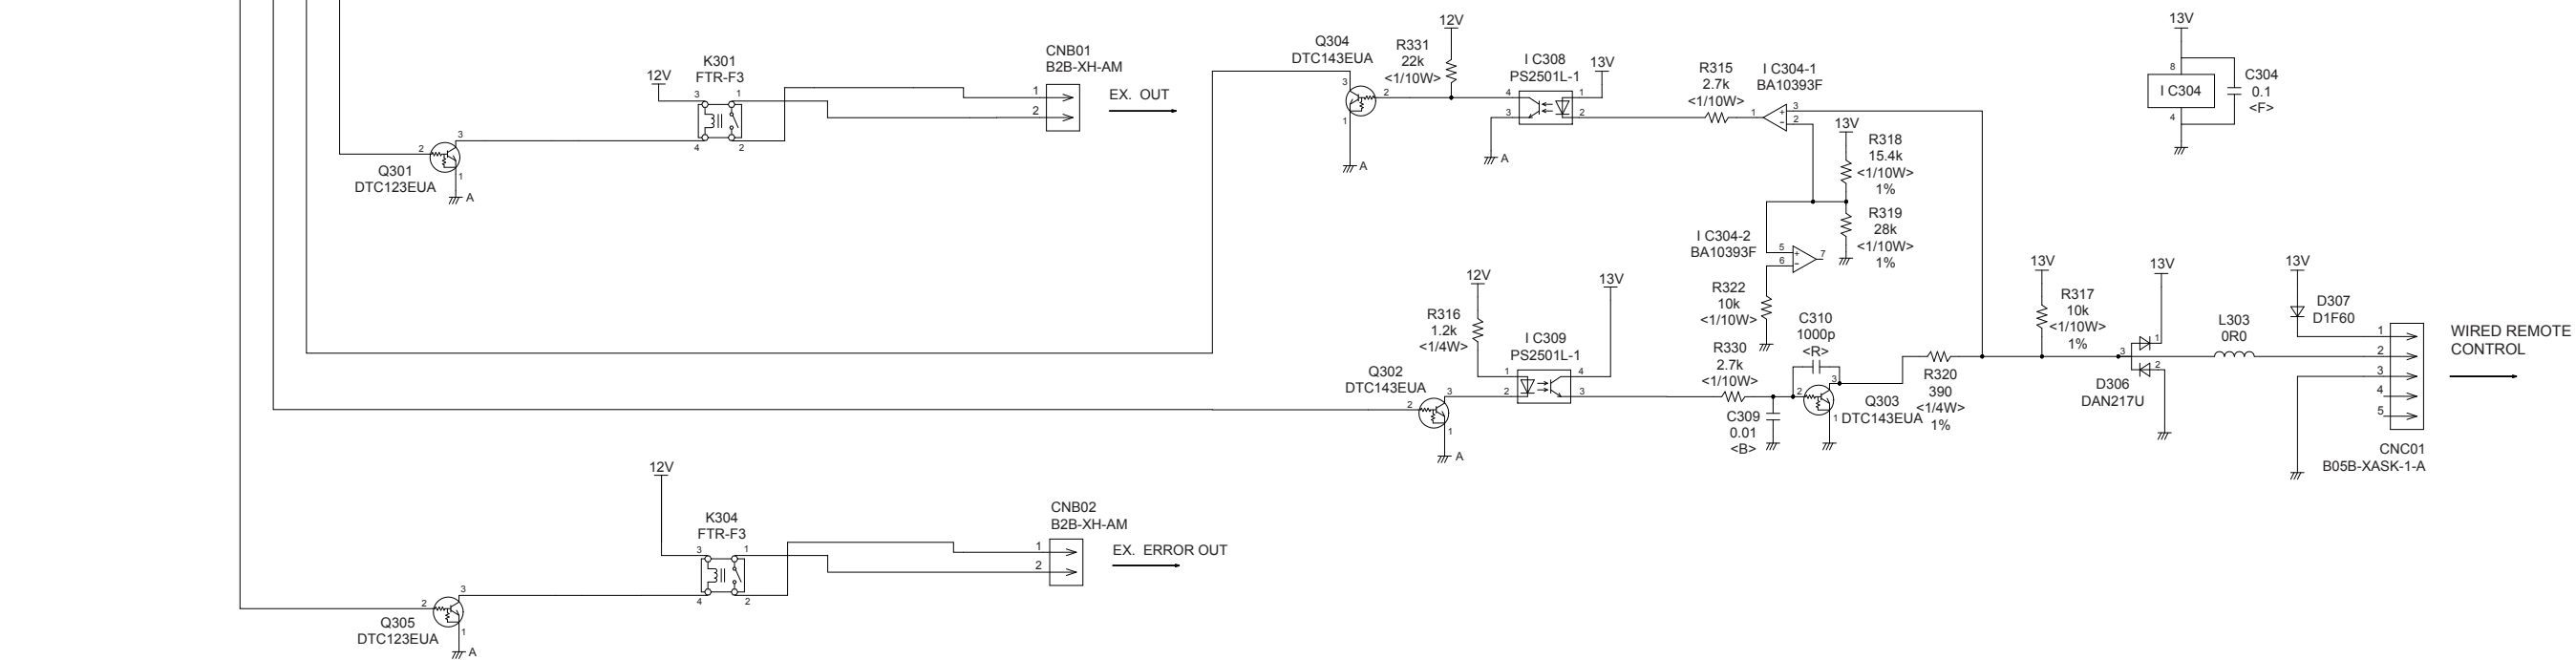


OUTDOOR PCB CIRCUIT DIAGRAM

INVERTER ASSEMBLY
EZ-01317HUE

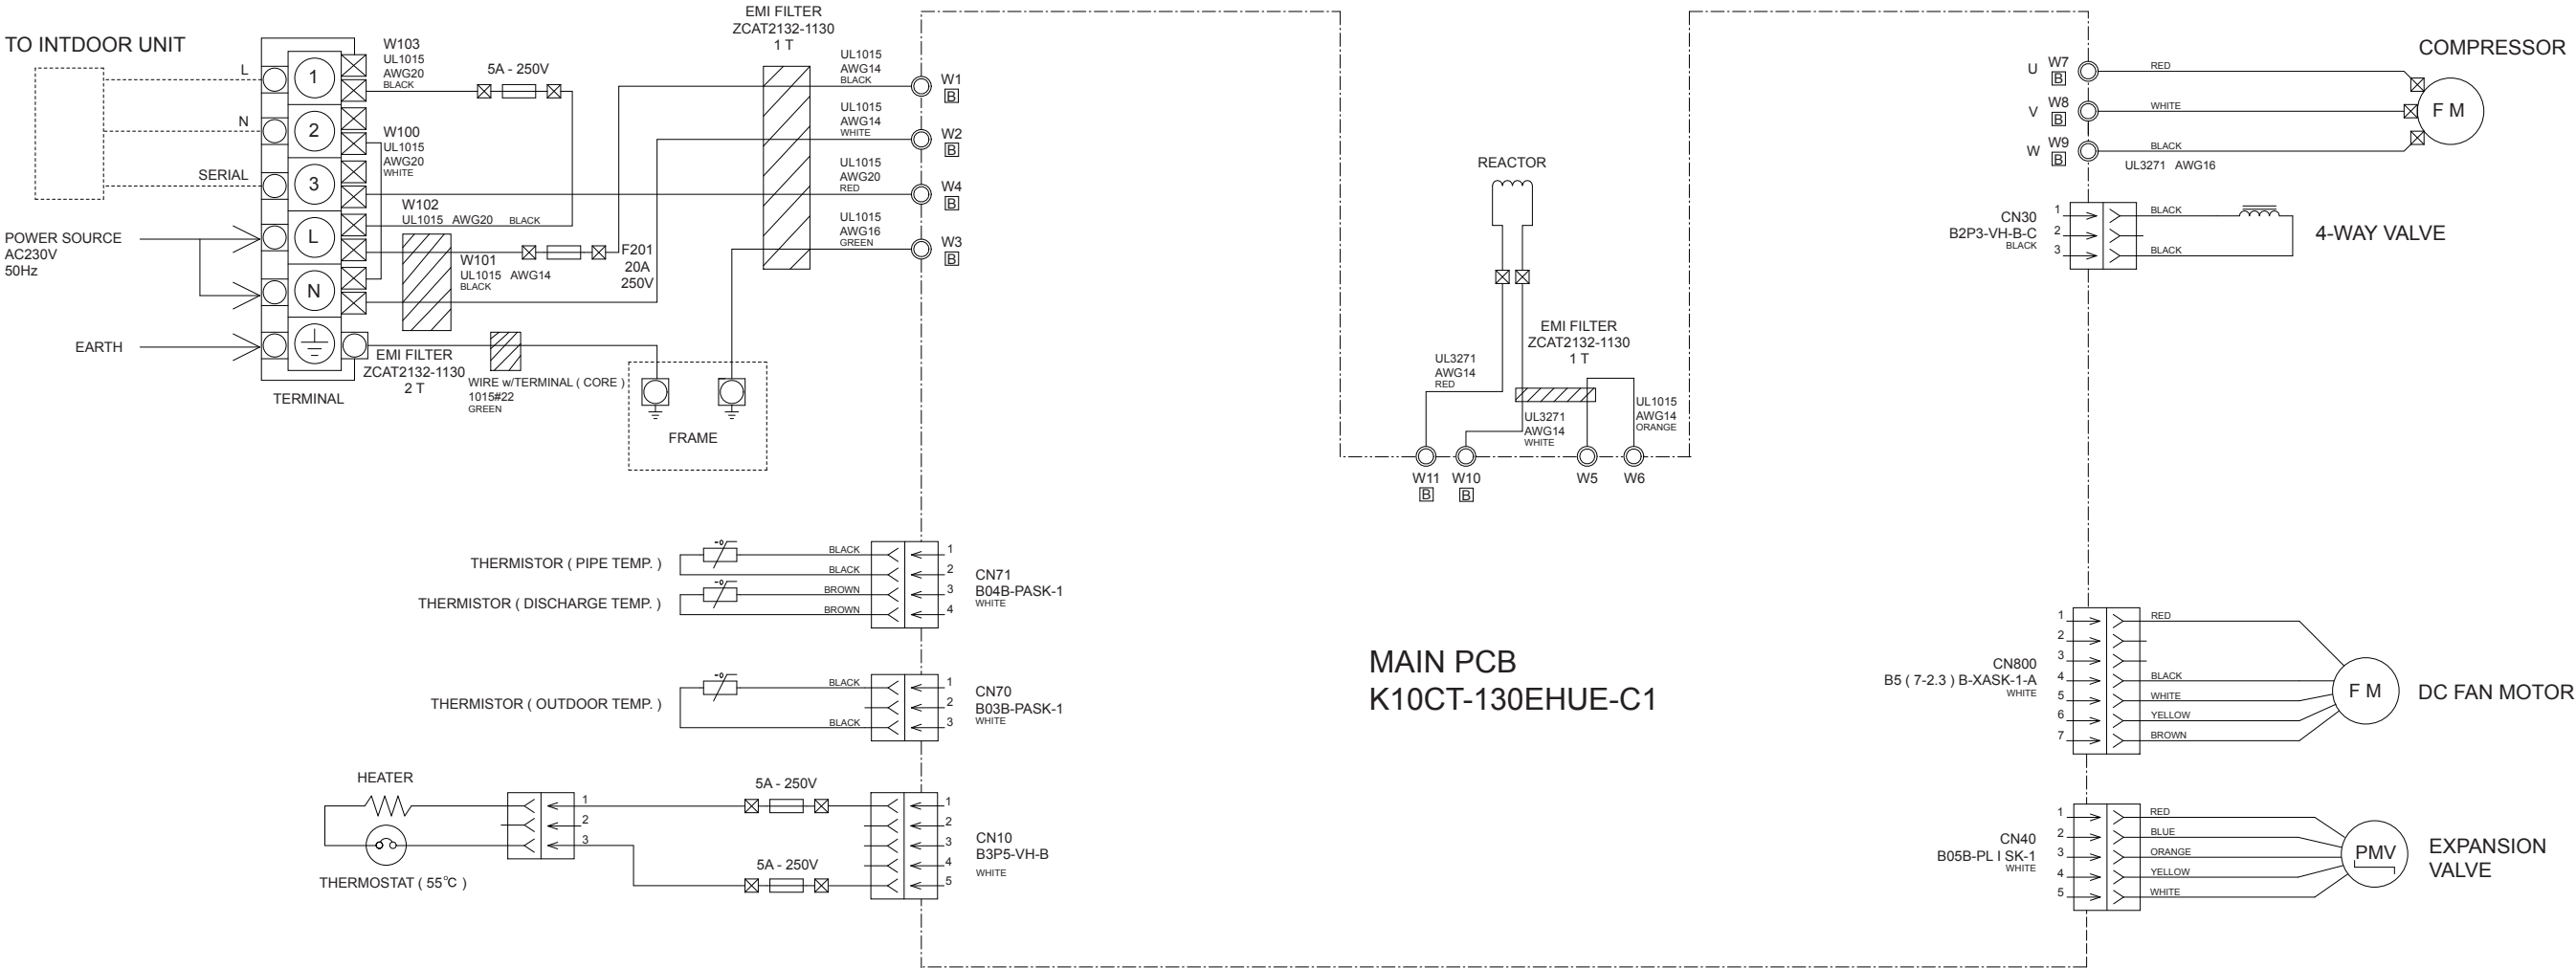

OUTDOOR UNIT
MAIN PCB
K10CT-130EHUE-C1

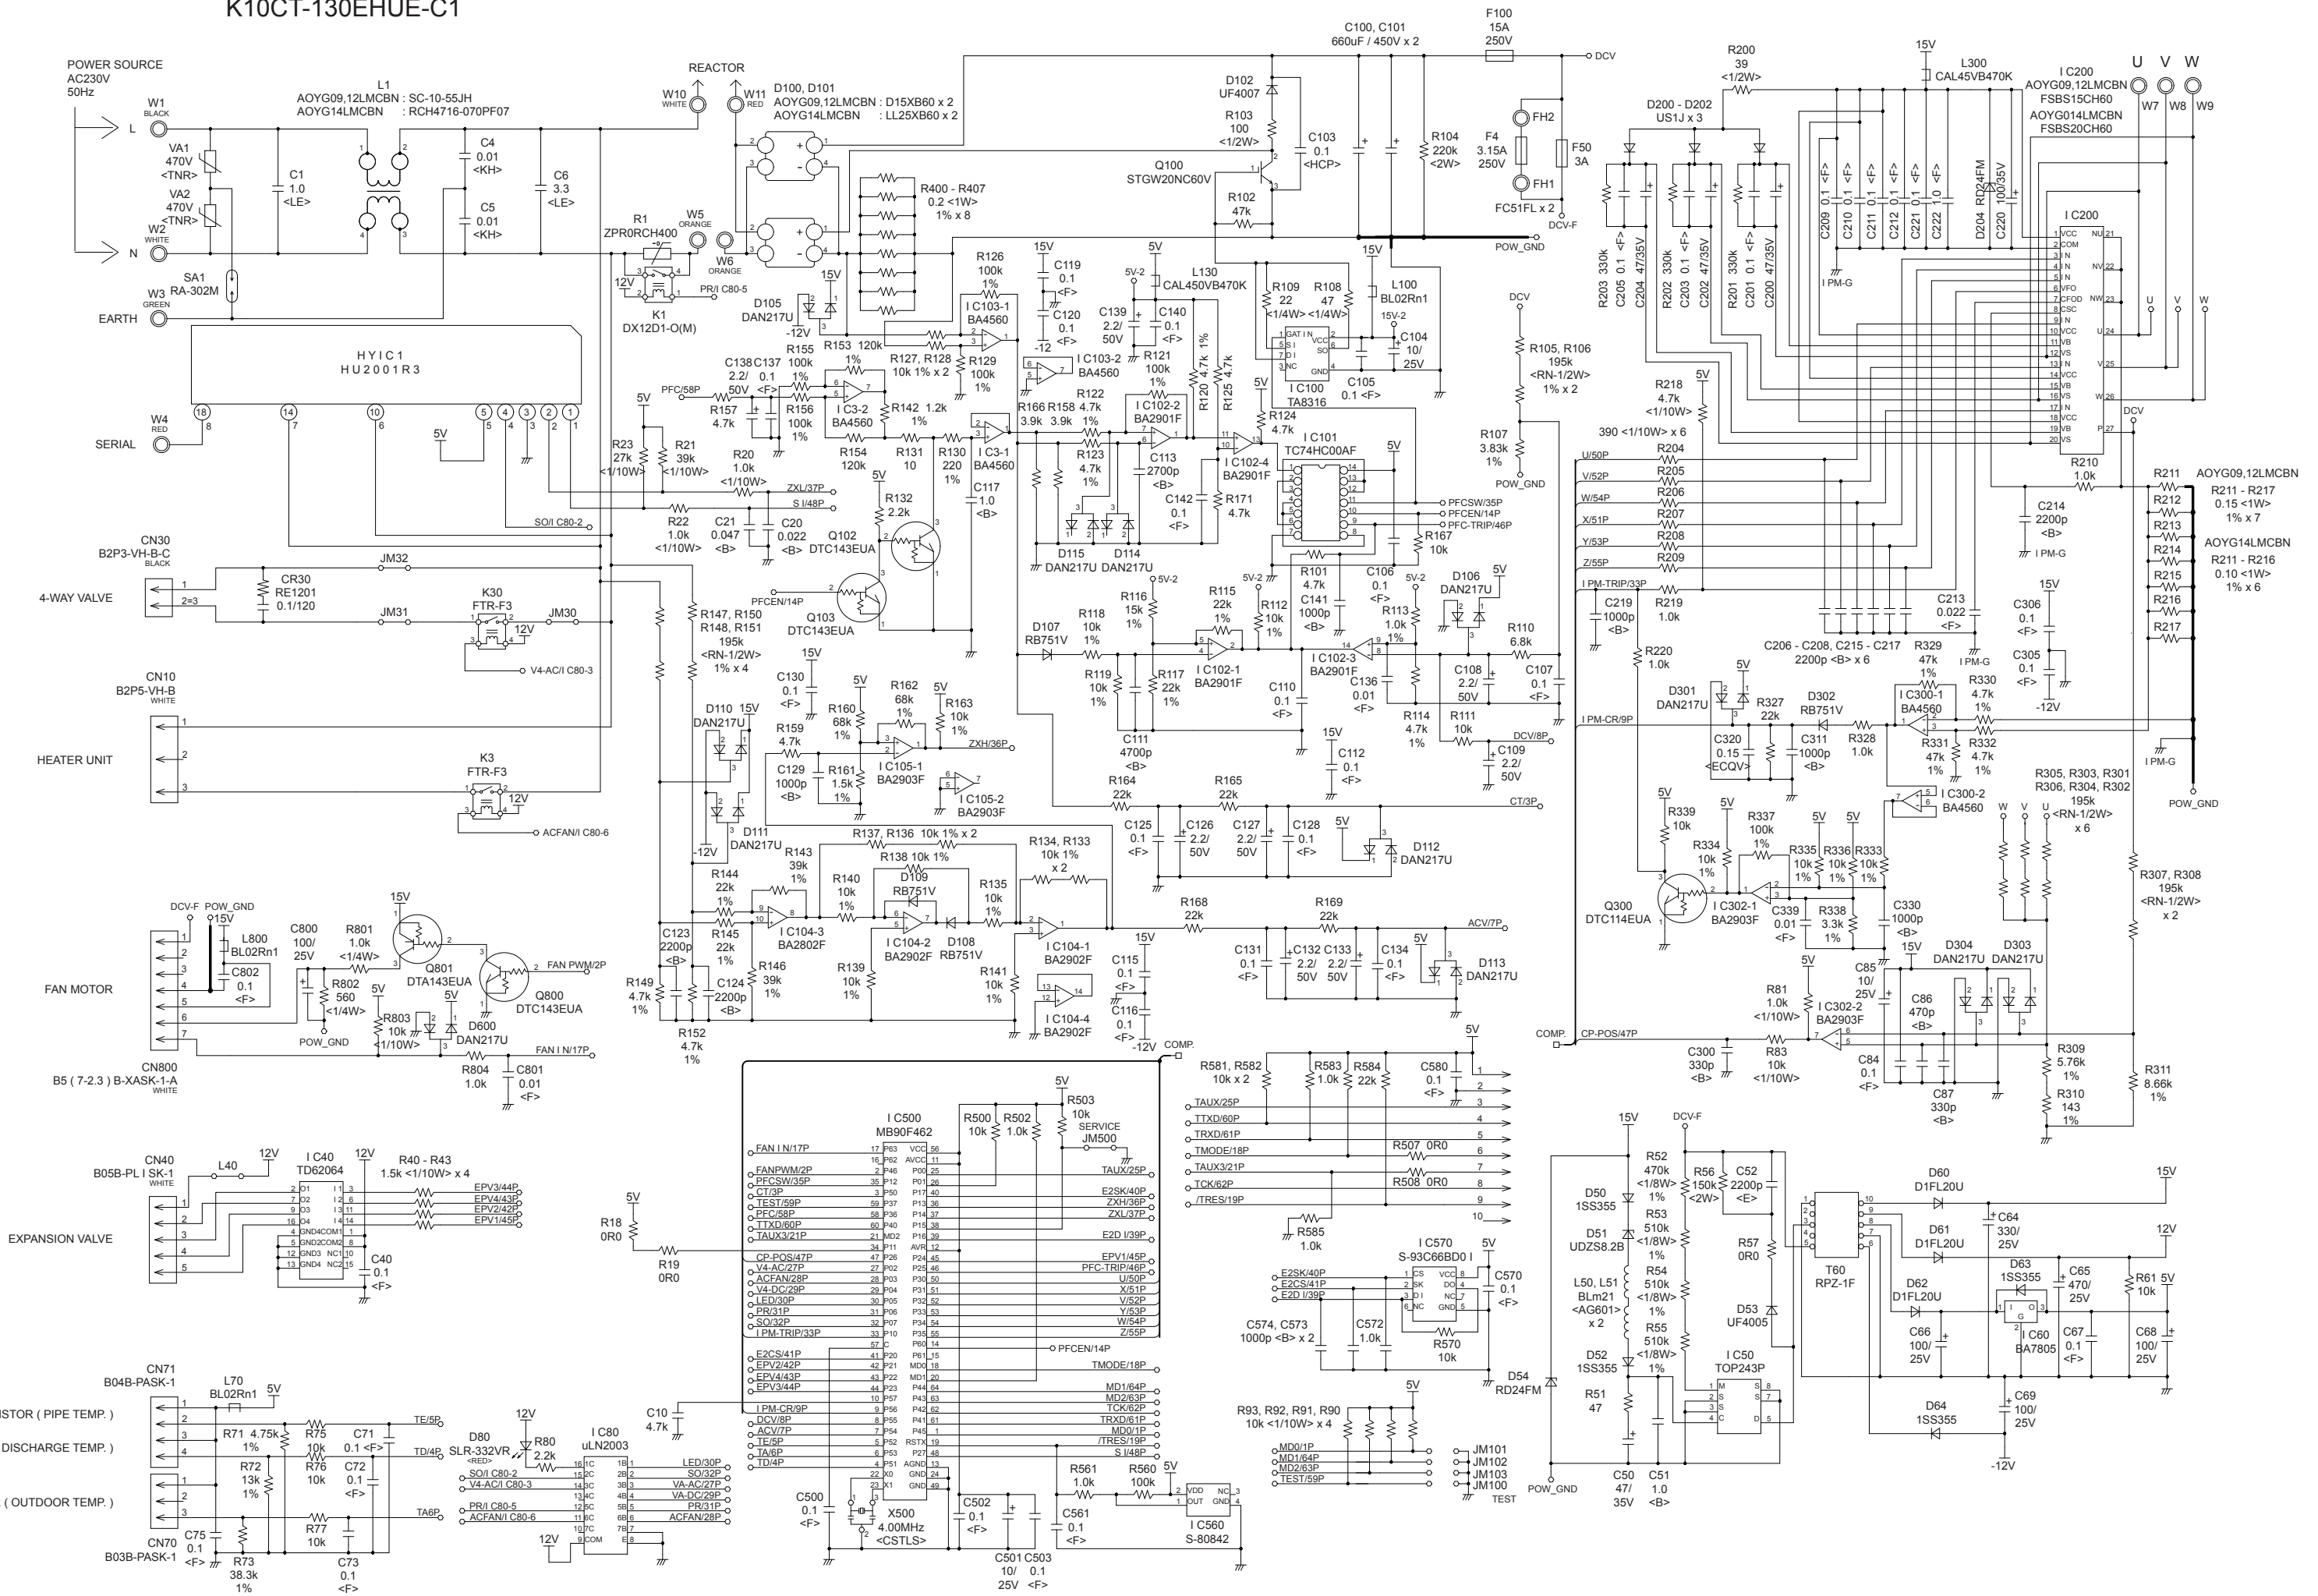

ERROR DETECTION


INDOOR UNIT REMOTE CONTROL

If you use a wireless remote control, the lamp on the photo detector unit will output error codes by way of blinking patterns.

If you use a wired remote control, error codes will appear on the remote control display.

See the lamp blinking patterns and error codes in the table.

An error display is displayed only during operation.

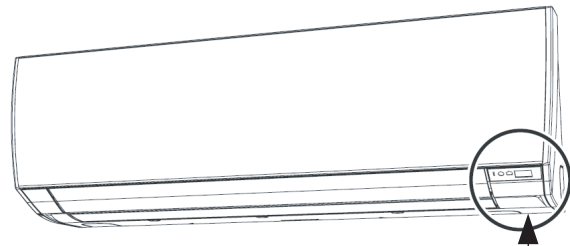


OPERATION indicator lamp (green)

TIMER indicator lamp (orange)

ECONOMY indicator lamp (green)

Wired remote control display (Option)

If an error occurs, the following display will be shown.
("Er" will appear in the set room temperature display.)

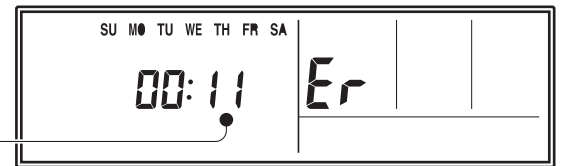

Error code

● : 0.5s ON / 0.5s OFF

◇ : 0.1s ON / 0.1s OFF

() : Number of flashing

Indoor unit lamps			Wired remote control	Description
OPERATION (green)	TIMER (orange)	ECONOMY (green)		
● (1)	● (1)	◇	11	Serial communication error
● (1)	● (2)	◇	12	Wired remote control communication error
● (1)	● (5)	◇	15	Check run unfinished
● (2)	● (1)	◇	21	Unit number or Refrigerant circuit address setting error [Simultaneous Multi]
● (2)	● (2)	◇	22	Indoor unit capacity error
● (2)	● (3)	◇	23	Combination error
● (2)	● (4)	◇	24	•Connection unit number error (indoor unit) [Simultaneous Multi] •Connection unit number error (indoor unit or branch unit) [Flexible Multi]
● (2)	● (7)	◇	27	Master unit, slave unit set-up error [Simultaneous Multi]
● (3)	● (2)	◇	32	Indoor unit PCB model information error
● (3)	● (5)	◇	35	Manual auto switch error
● (4)	● (1)	◇	41	Room temp. sensor error
● (4)	● (2)	◇	42	Indoor unit Heat Ex. Middle temp. sensor error
● (5)	● (1)	◇	51	Indoor unit fan motor error
● (5)	● (3)	◇	53	Drain pump error
● (5)	● (7)	◇	57	Damper error
● (5)	● (8)	◇	58	Intake grill error
● (5)	● (15)	◇	50	Indoor unit error
● (6)	● (2)	◇	62	Outdoor unit main PCB model information error or communication error
● (6)	● (3)	◇	63	Inverter error
● (6)	● (4)	◇	64	Active filter error, PFC circuit error
● (6)	● (5)	◇	65	Trip terminal L error


Indoor unit lamps			Wired remote control	Description
OPERATION (green)	TIMER (orange)	ECONOMY (green)		
● (6)	● (10)	◇	6A	Display PCB microcomputers communication error
● (7)	● (1)	◇	71	Discharge temp. sensor error
● (7)	● (2)	◇	72	Compressor temp. sensor error
● (7)	● (3)	◇	73	Outdoor unit Heat Ex. liquid temp. sensor error
● (7)	● (4)	◇	74	Outdoor temp. sensor error
● (7)	● (5)	◇	75	Suction Gas temp. sensor error
● (7)	● (6)	◇	76	• 2-way valve temp. sensor error • 3-way valve temp. sensor error
● (7)	● (7)	◇	77	Heat sink temp. sensor error
● (8)	● (2)	◇	82	• Sub-cool Heat Ex. gas inlet temp. sensor error • Sub-cool Heat Ex. gas outlet temp. sensor error
● (8)	● (3)	◇	83	Liquid pipe temp. sensor error
● (8)	● (4)	◇	84	Current sensor error
● (8)	● (6)	◇	86	• Discharge pressure sensor error • Suction pressure sensor error • High pressure switch error
● (9)	● (4)	◇	94	Trip detection
● (9)	● (5)	◇	95	Compressor rotor position detection error (permanent stop)
● (9)	● (7)	◇	97	Outdoor unit fan motor error
● (9)	● (9)	◇	99	4-way valve error
● (10)	● (1)	◇	A1	Discharge temp. error
● (10)	● (3)	◇	A3	Compressor temp. error
● (10)	● (4)	◇	A4	High pressure error
● (10)	● (5)	◇	A5	Low pressure error
● (13)	● (2)	◇	J2	Branch boxes error

OUTDOOR UNIT


Indicator lamp	Error
on	Discharge temperature error
0.5 second on / 0.5 second off	IPM overcurrent protection
0.1 second on / 0.1 second off	Thermistor error
2.0 second on / 2.0 second off	CT error
0.1 second on / 2.0 second off	Compressor location error
5.0 second on / 5.0 second off	Fan error


PARTS

INDOOR UNIT

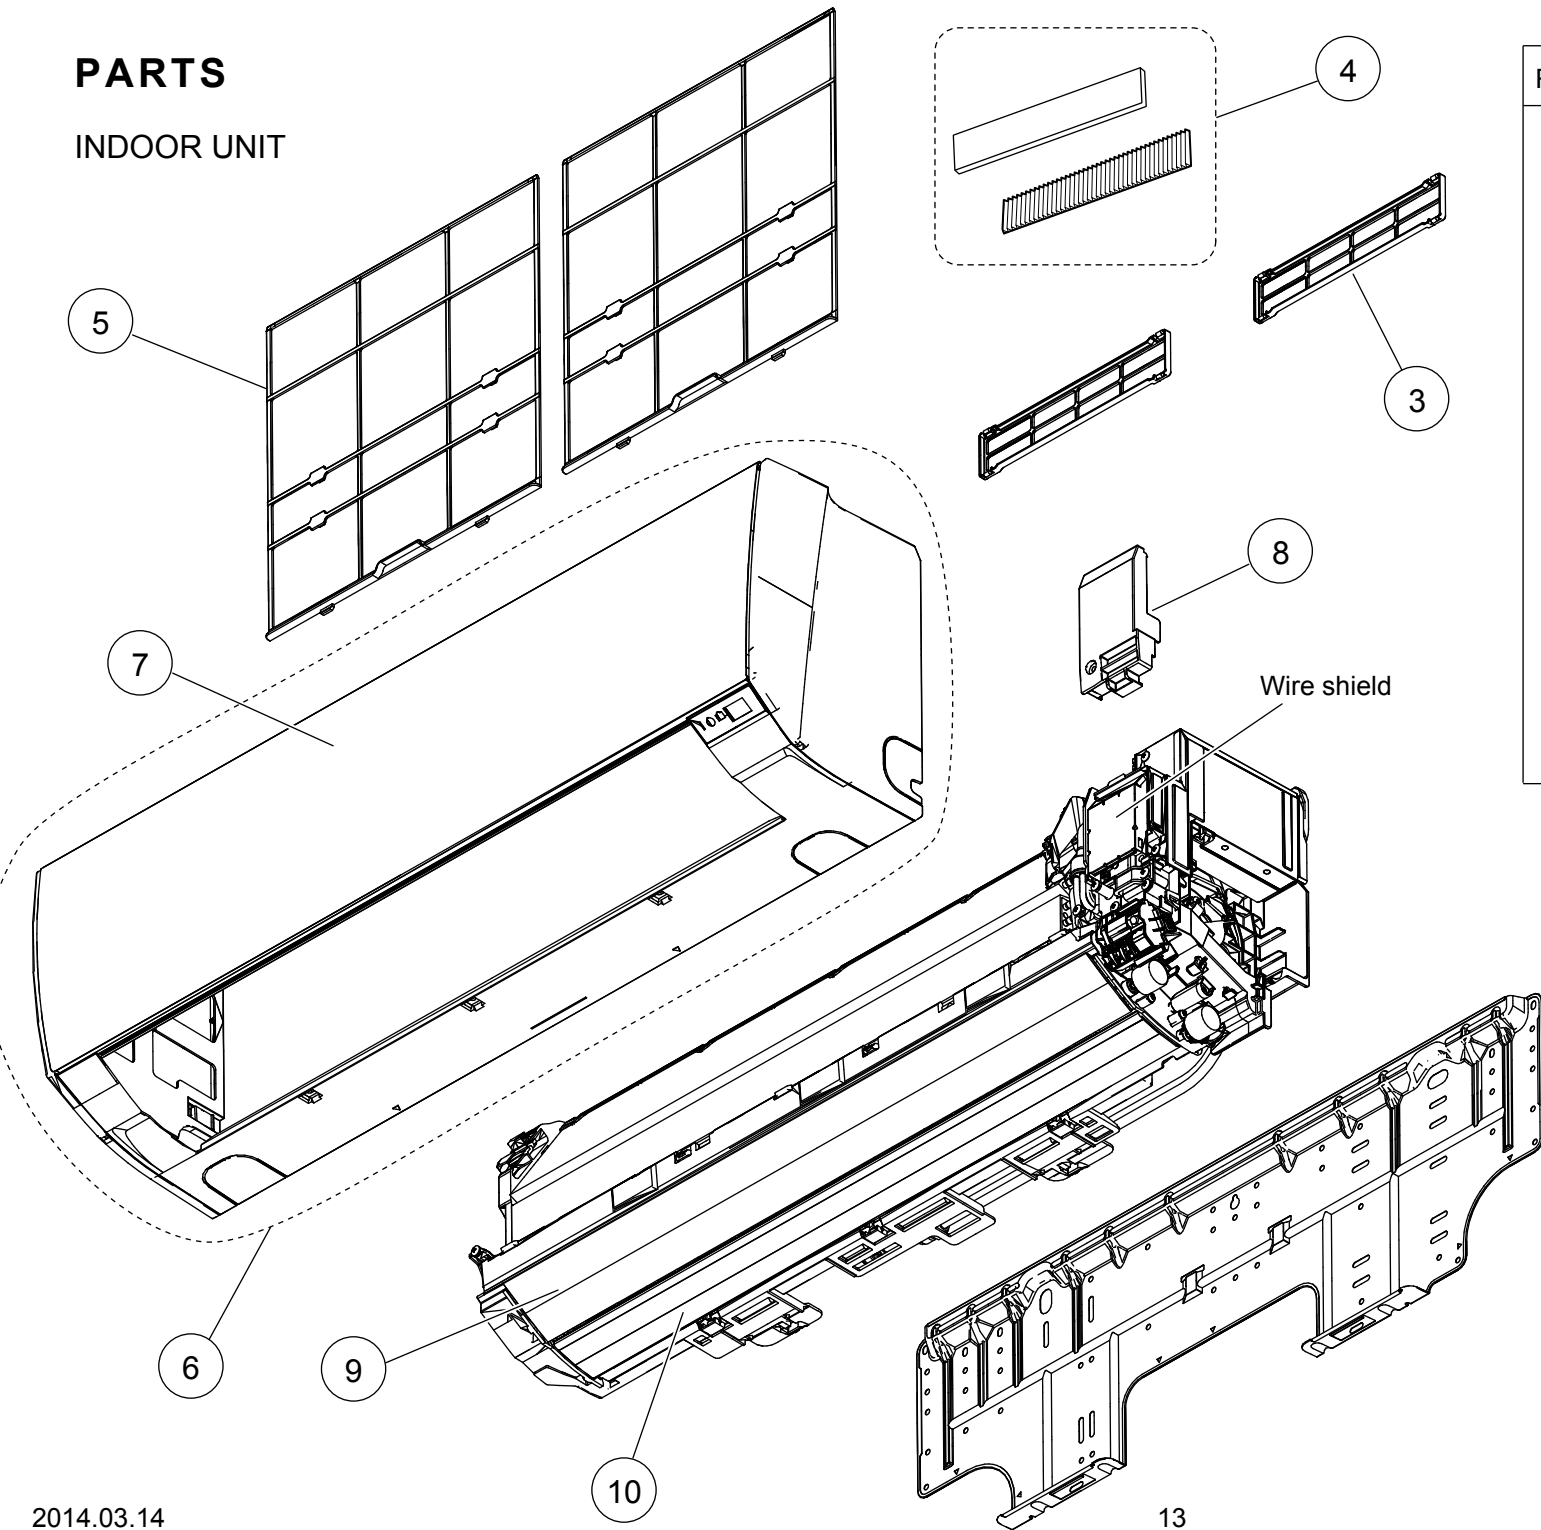


Ref.	Description	Part number	
1	Remote Control	9319208008	
2	Remote Control Holder	9318912005	
3	Electric Filter Holder	9332911008	
4	Air Clean Filter Assy	9317250009	
5	Air Filter	9332875010	
6	Front Panel Sub Assy (FUJITSU)	9332994001	
7	Intake Grille (FUJITSU)	9333052007	
8	Wire Cover	9332894004	
9	Louver with Shaft cover	9333353005	
10	Diffuser Assy	9332998009	

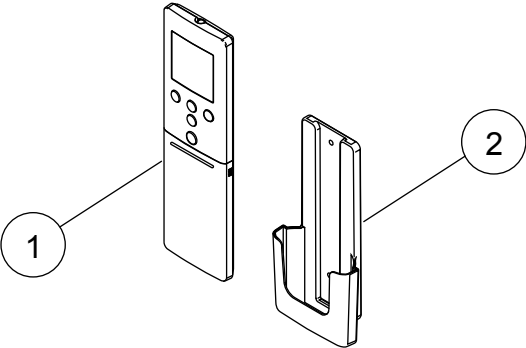


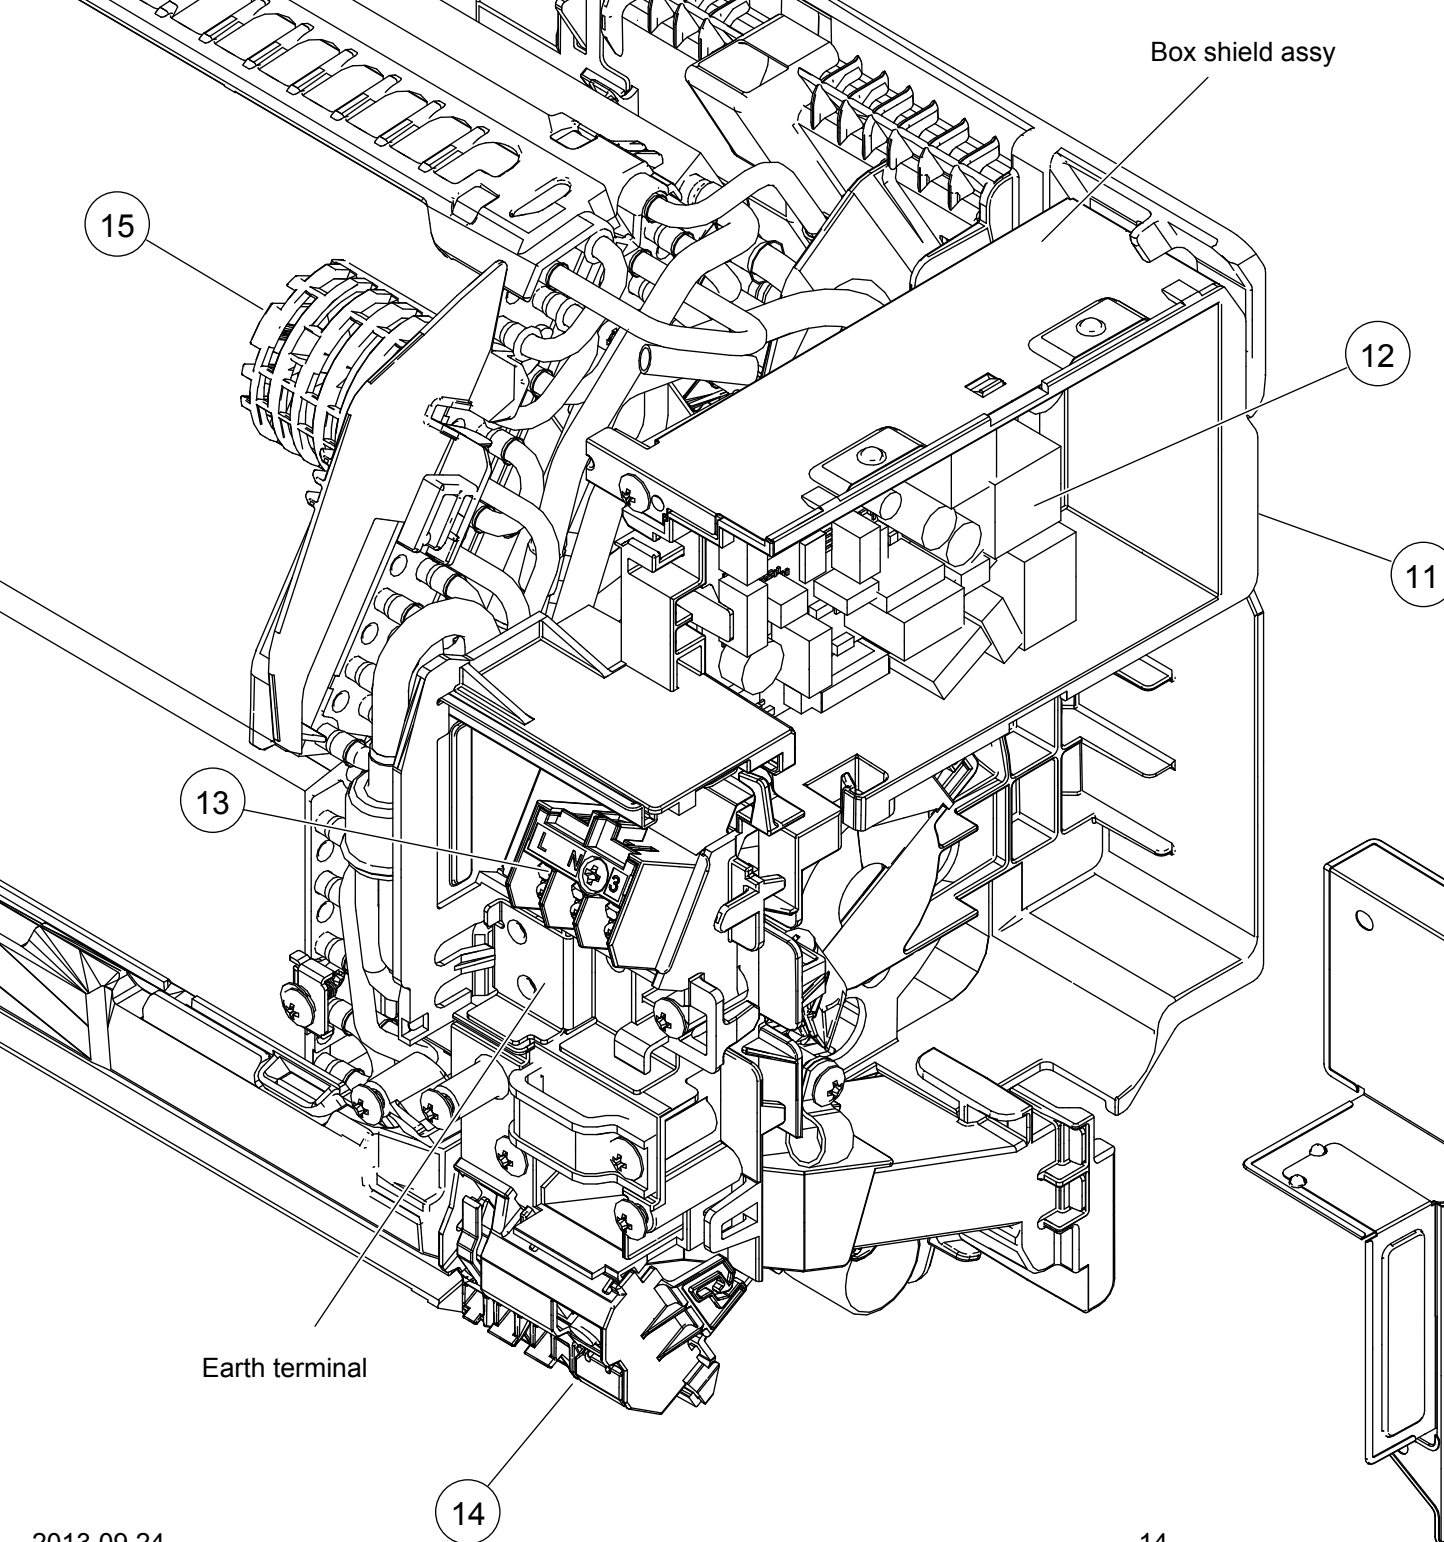

Ref.	Description	Part number	
11	Control Box	9332892000	
12	Main PCB	9709427200	
13	Terminal	9900720001	
14	Display Assy	9709430019	
15	Room Thermistor Holder	9332868005	
--	Thermistor Assy	9900714024	

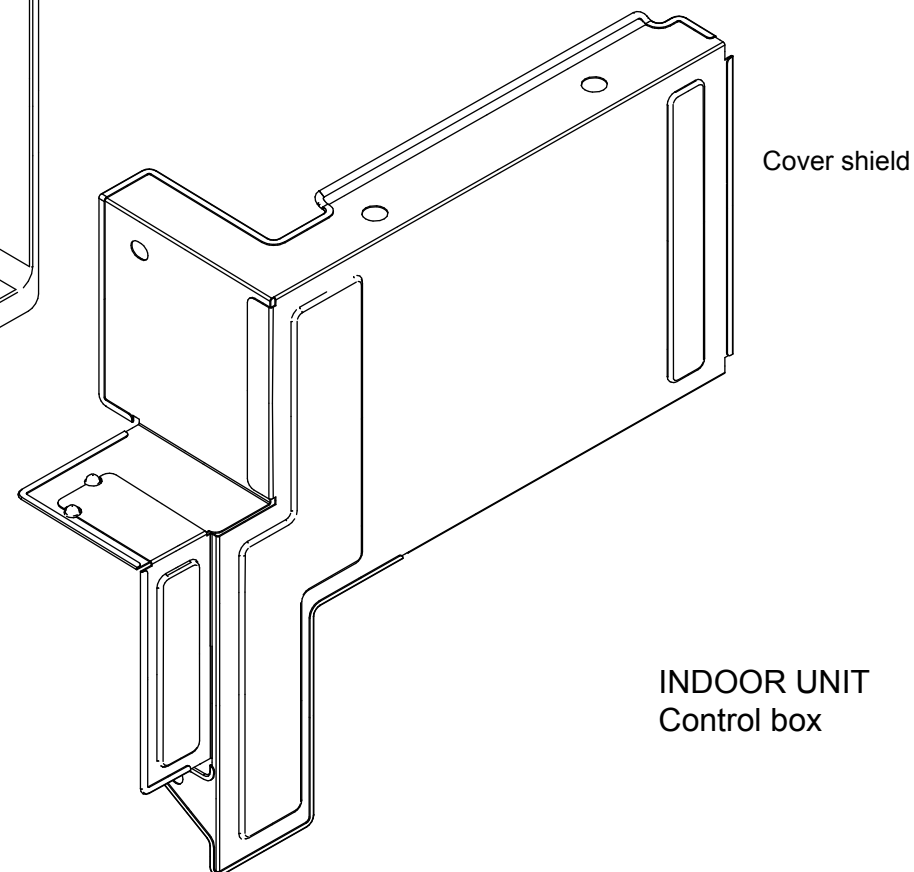


INDOOR UNIT
Evaporator
Fan

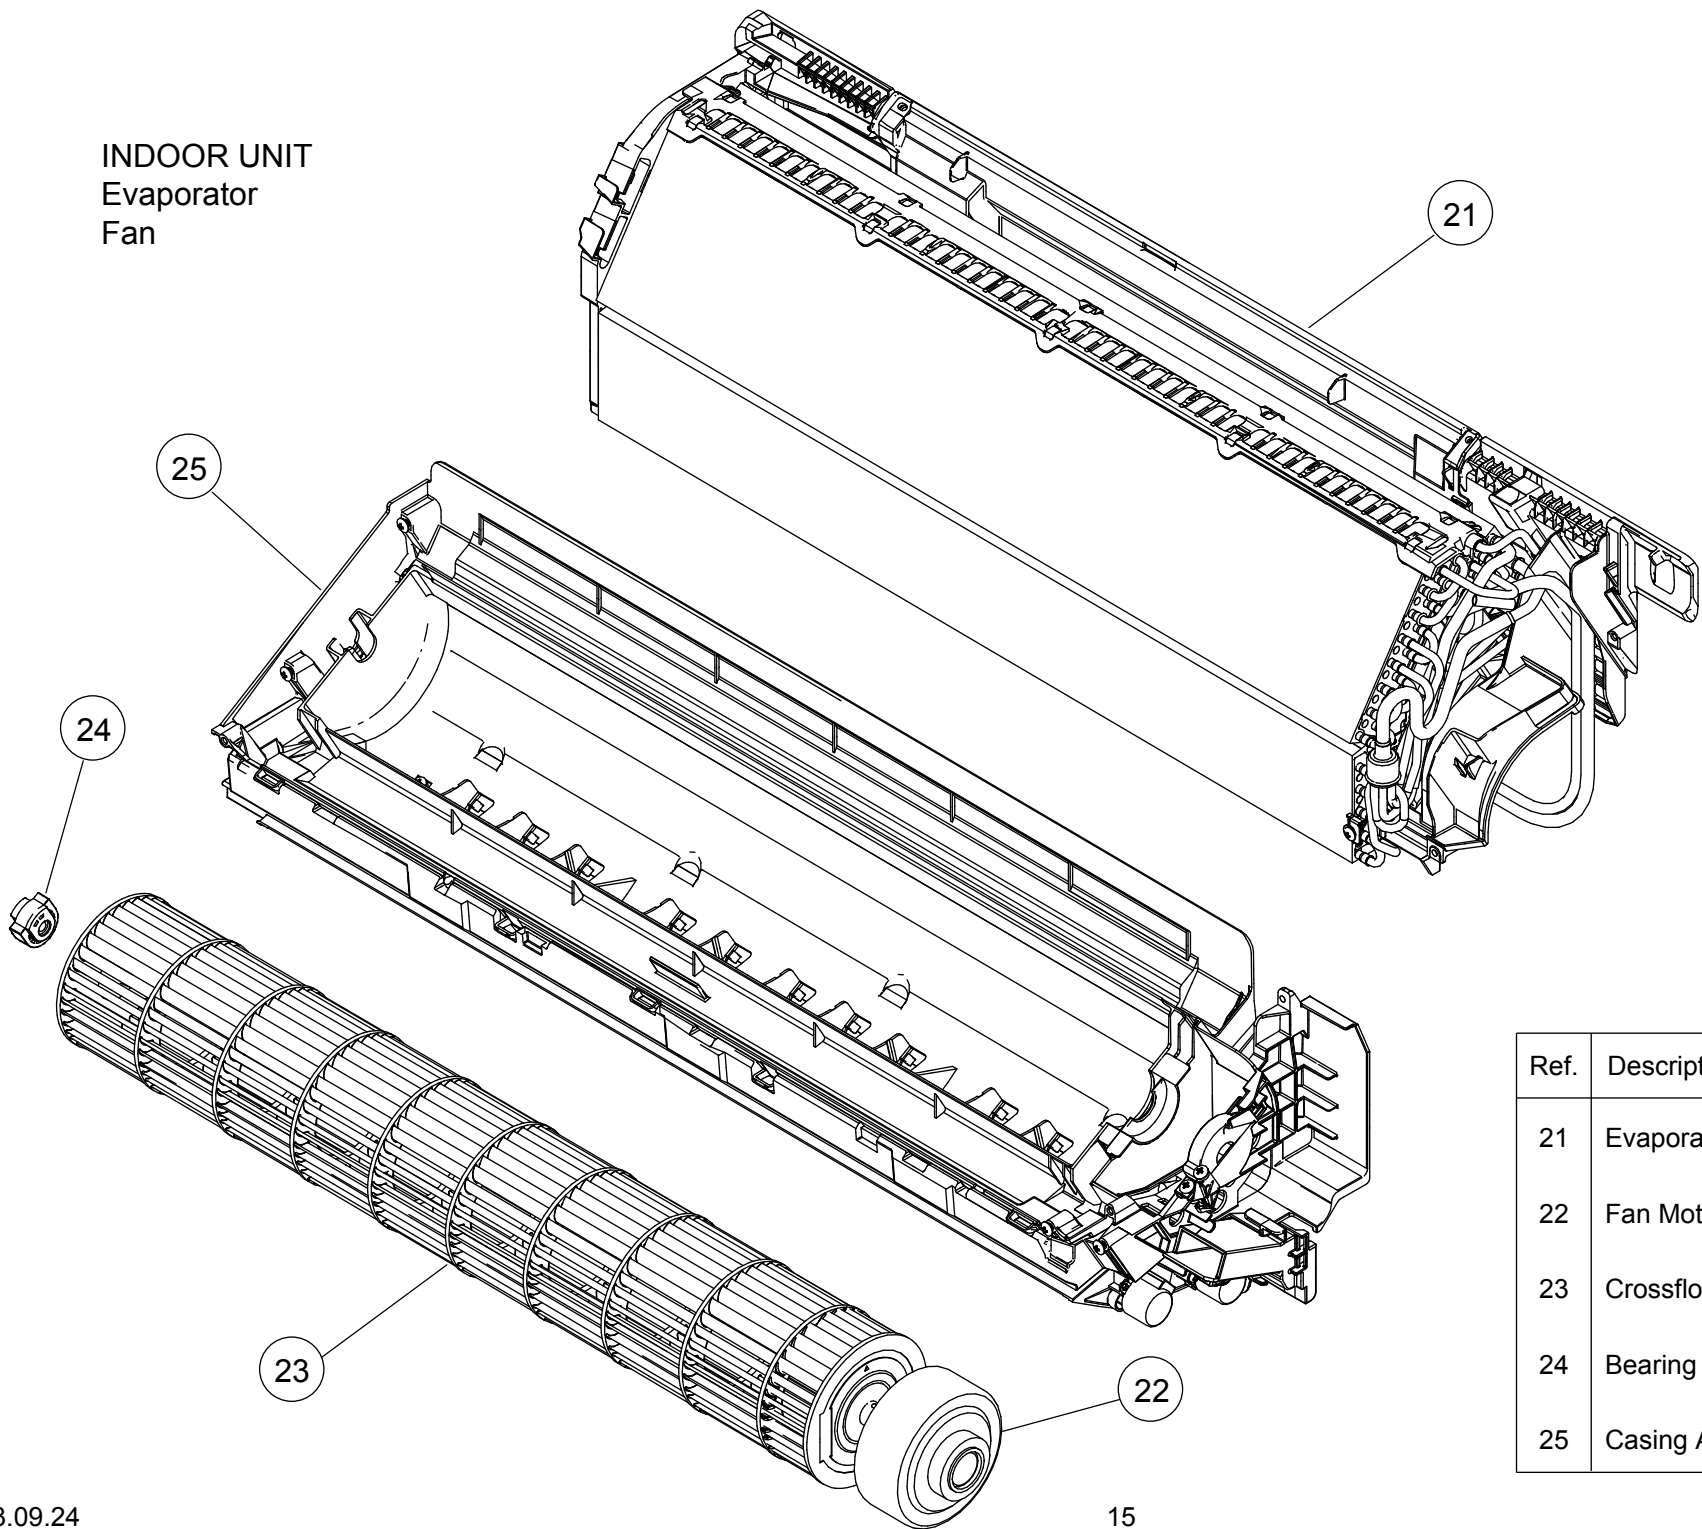


Ref.	Description	Part number	
21	Evaporator Total Assy	9332989014	
22	Fan Motor	9603269005	
23	Crossflow Fan Assy	9316830004	
24	Bearing C Assy	9306628017	
25	Casing Assy	9333009001	

INDOOR UNIT
Casing assy

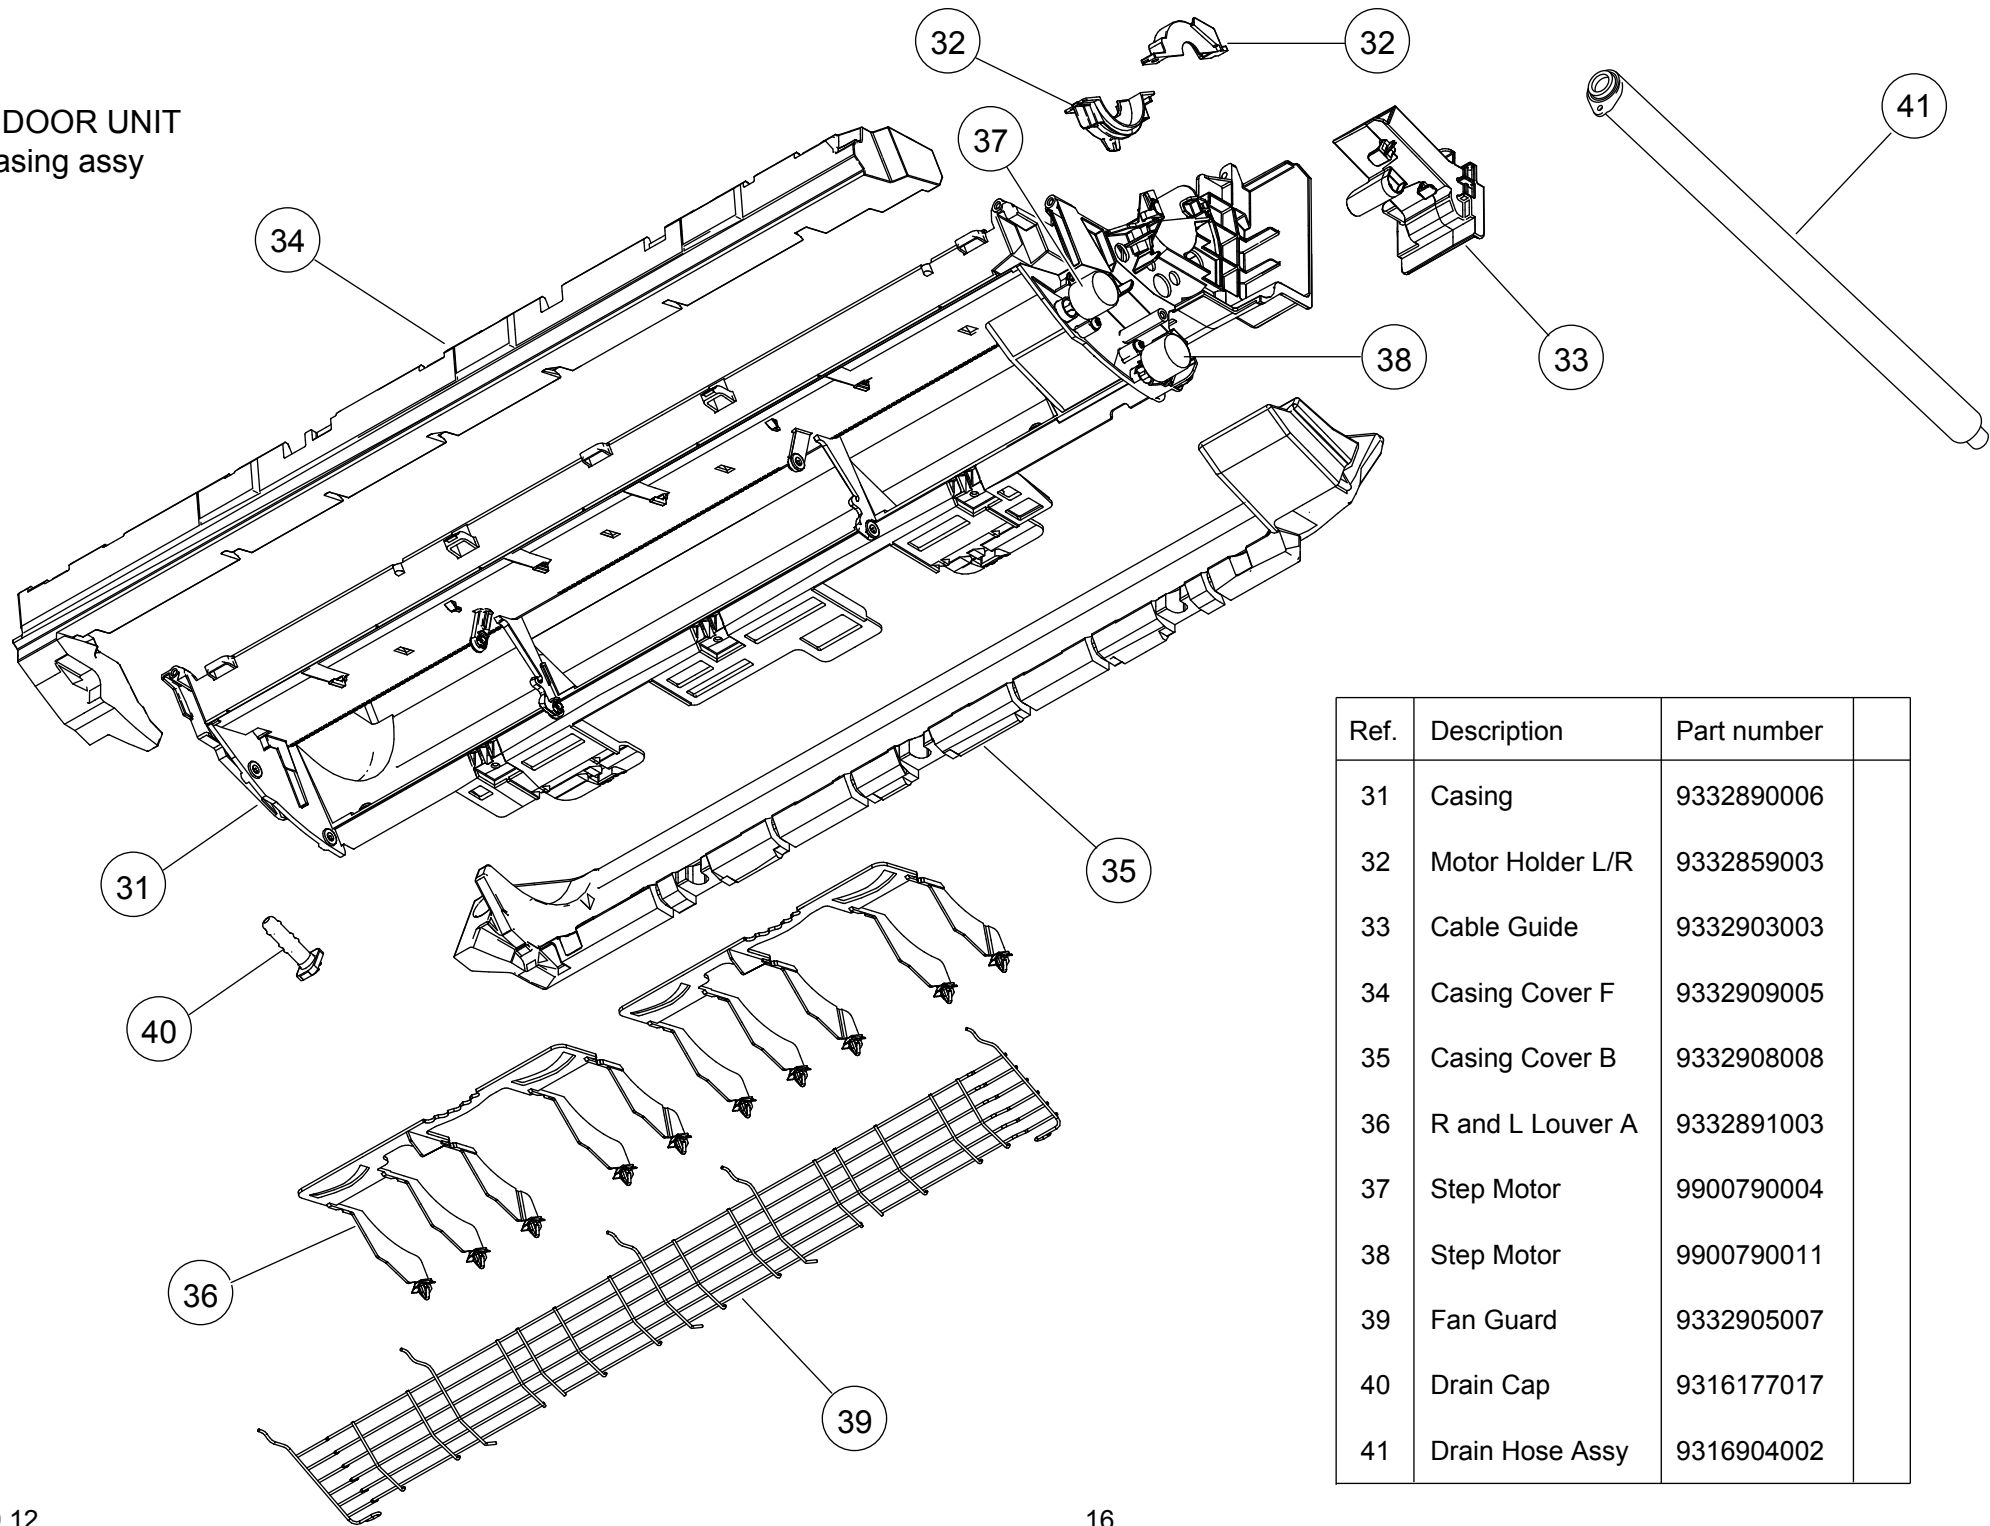


Ref.	Description	Part number	
31	Casing	9332890006	
32	Motor Holder L/R	9332859003	
33	Cable Guide	9332903003	
34	Casing Cover F	9332909005	
35	Casing Cover B	9332908008	
36	R and L Louver A	9332891003	
37	Step Motor	9900790004	
38	Step Motor	9900790011	
39	Fan Guard	9332905007	
40	Drain Cap	9316177017	
41	Drain Hose Assy	9316904002	

PARTS
OUTDOOR UNIT

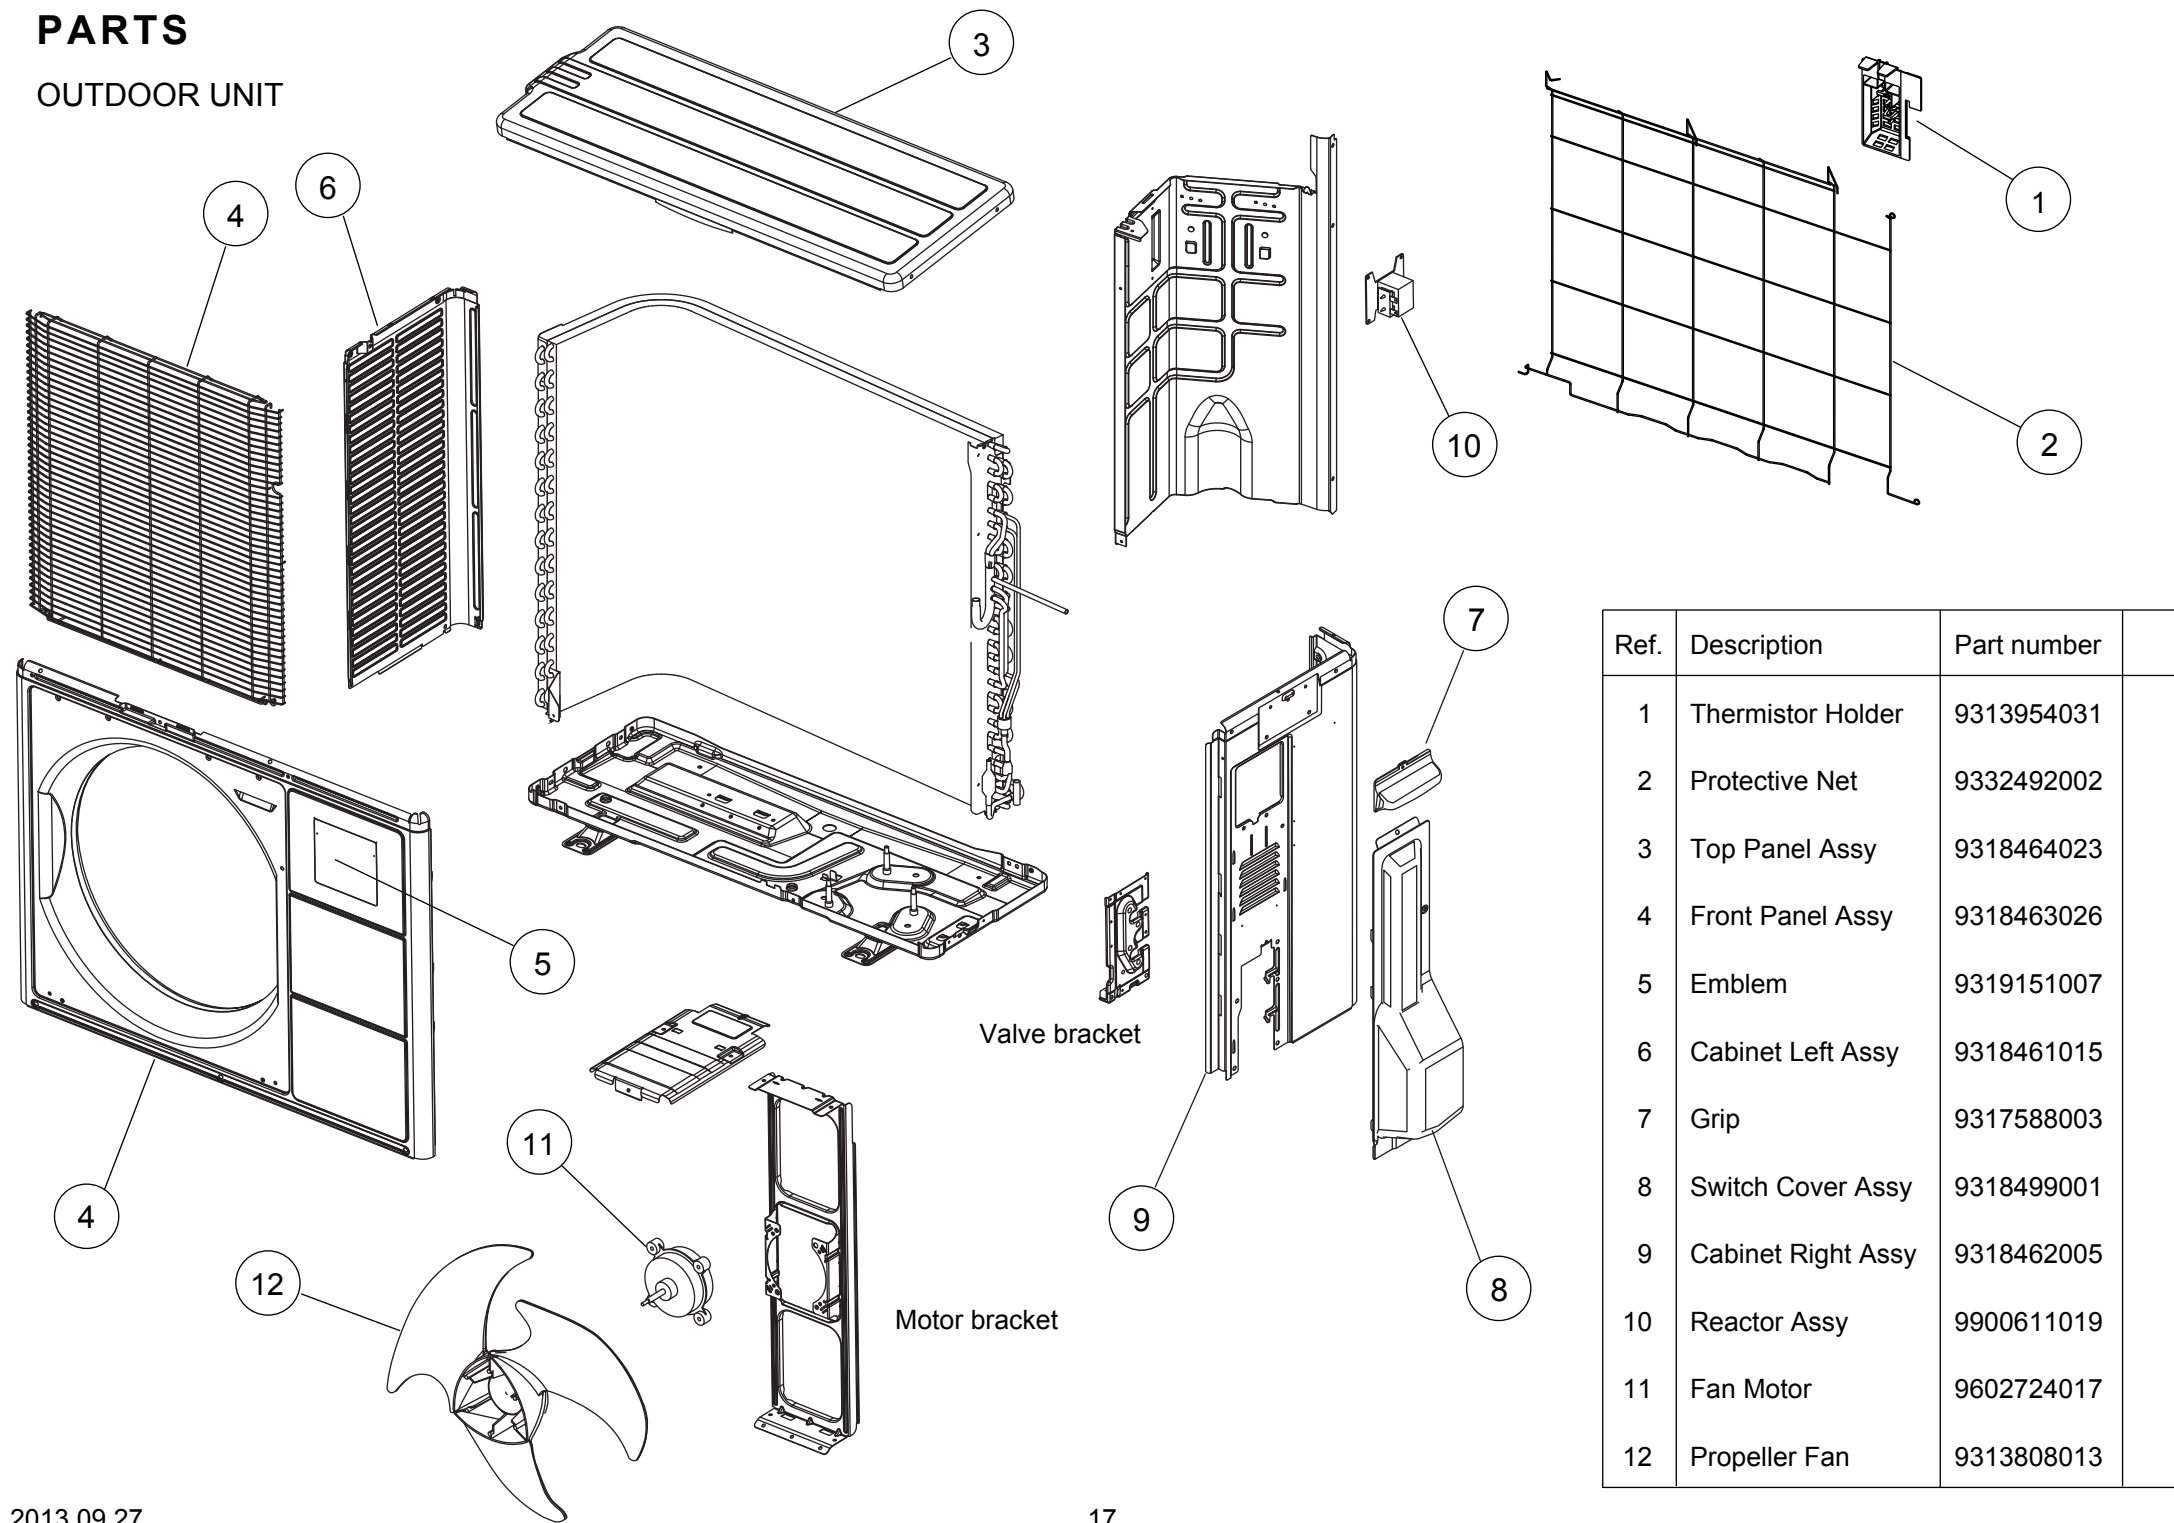

Ref.	Description	Part number
1	Thermistor Holder	9313954031
2	Protective Net	9332492002
3	Top Panel Assy	9318464023
4	Front Panel Assy	9318463026
5	Emblem	9319151007
6	Cabinet Left Assy	9318461015
7	Grip	9317588003
8	Switch Cover Assy	9318499001
9	Cabinet Right Assy	9318462005
10	Reactor Assy	9900611019
11	Fan Motor	9602724017
12	Propeller Fan	9313808013





OUTDOOR UNIT



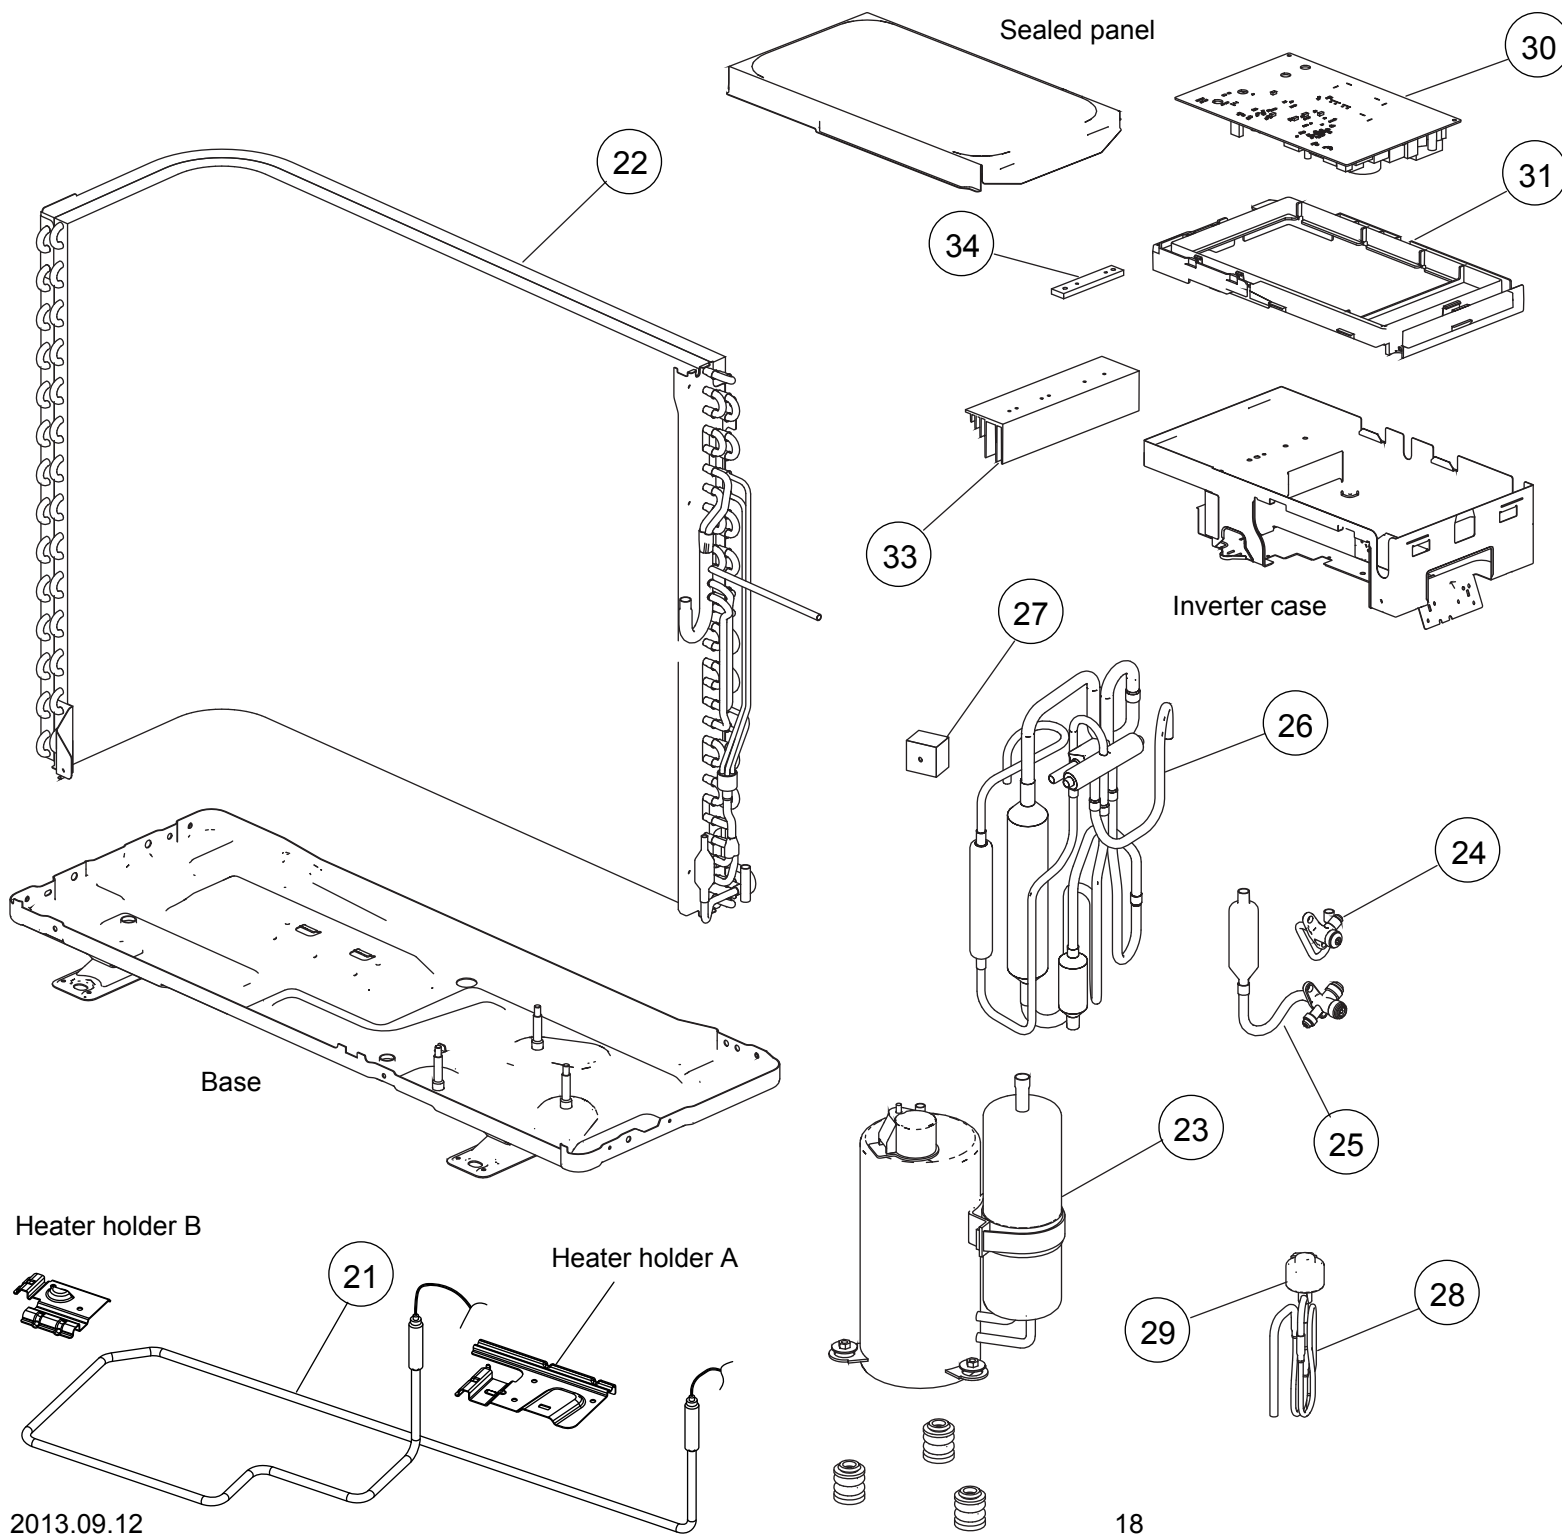


Ref.	Description	Part number	
21	Heater Unit Assy	9900616014	
22	Condenser Total Assy	9317089098	
23	Compressor Assy	9317117005	
24	2-way Valve Assy	9332371000	
25	3-way Valve Sub Assy	9317109055	
26	4-way Valve Assy	9315311092	
27	Solenoid	9970110047	
28	Pulse Motor Valve Assy	9332368048	
29	Expansion Valve Coil	9970095030	
30	Main PCB	9708753515	
31	PCB Holder	9313074029	
32	Terminal	9900435028	
33	Heat Sink A	9314410017	
34	Heat Sink B	9314090011	
--	Outdoor Thermistor	9900544010	
--	Thermistor Assy	9900614027	






ACCESSORIES

   INDOOR UNIT

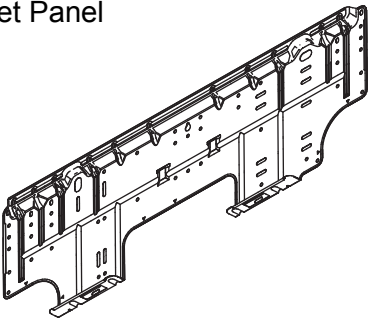Name and Shape	Part number
Bracket Panel 	9332882018
Remote Control 	9319208008
Remote Control Holder 	9318912005
Battery (penlight) 	0600185541
Cloth tape 	9310519004

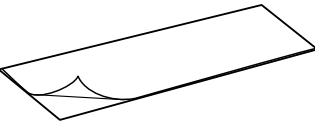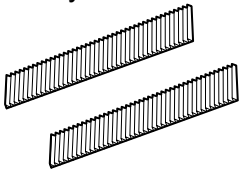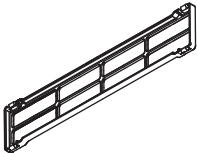Name and Shape	Part number
Seal A 	9304536000
Tapping screw (M4 x 25 mm) 	0700076046
Tapping screw (M3 x 12 mm) 	0700019036
Air cleaning filter assy 	9317250009
Filter holder 	9332911008

  OPTIONAL PARTS

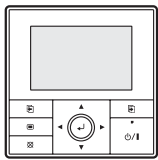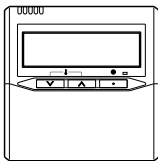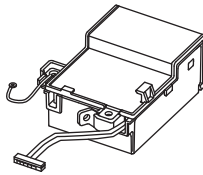Name and Shape	
Wired remote control UTY-RVNYM 	
Wired remote control UTY-RNNYM 	
Simple remote Control UTY-RSNYM 	
External connect kit UTY-XWZXZ5 	
Communication kit UTY-XCBXZ2 	

1309G4251