


Installer reference guide

## Daikin Altherma 3 M

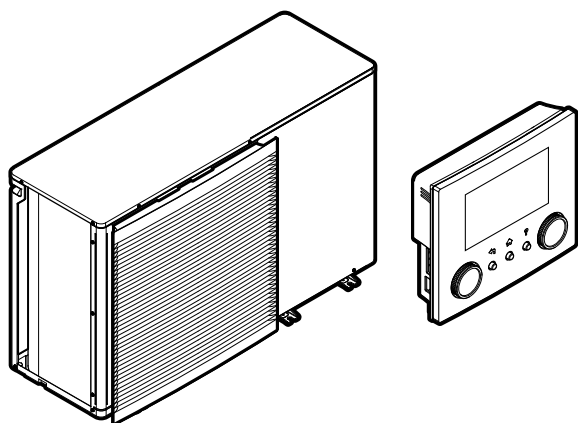

<https://daikintechanicaldatahub.eu>



EBLA09~16DAV3  
EBLA09~16DAW1  
EBLA09~16DA3V3  
EBLA09~16DA3W1

EDLA09~16DAV3  
EDLA09~16DAW1  
EDLA09~16DA3V3  
EDLA09~16DA3W1

# Table of contents

<b>1</b>	<b>About the documentation</b>	<b>5</b>
1.1	About this document .....	5
1.2	Meaning of warnings and symbols .....	6
1.3	Installer reference guide at a glance .....	7
<b>2</b>	<b>General safety precautions</b>	<b>9</b>
2.1	For the installer .....	9
2.1.1	General .....	9
2.1.2	Installation site .....	10
2.1.3	Refrigerant — in case of R410A or R32 .....	10
2.1.4	Water .....	12
2.1.5	Electrical .....	12
<b>3</b>	<b>Specific installer safety instructions</b>	<b>15</b>
<b>4</b>	<b>About the box</b>	<b>20</b>
4.1	Overview: About the box .....	20
4.2	Outdoor unit .....	20
4.2.1	To handle the outdoor unit .....	20
4.2.2	To unpack the outdoor unit .....	21
4.2.3	To remove the accessories from the outdoor unit .....	23
<b>5</b>	<b>About the units and options</b>	<b>25</b>
5.1	Identification .....	25
5.1.1	Identification label: Outdoor unit .....	25
5.2	Combining units and options .....	26
5.2.1	Possible options for the outdoor unit .....	26
5.2.2	Possible combinations of outdoor unit and domestic hot water tank .....	29
<b>6</b>	<b>Application guidelines</b>	<b>31</b>
6.1	Overview: Application guidelines .....	31
6.2	Setting up the space heating/cooling system .....	32
6.2.1	Single room .....	33
6.2.2	Multiple rooms — One LWT zone .....	37
6.2.3	Multiple rooms — Two LWT zones .....	42
6.3	Setting up an auxiliary heat source for space heating .....	45
6.4	Setting up the domestic hot water tank .....	48
6.4.1	System layout — Standalone DHW tank .....	48
6.4.2	Selecting the volume and desired temperature for the DHW tank .....	48
6.4.3	Setup and configuration — DHW tank .....	50
6.4.4	DHW pump for instant hot water .....	50
6.4.5	DHW pump for disinfection .....	51
6.4.6	DHW pump for tank preheating .....	52
6.5	Setting up the energy metering .....	52
6.5.1	Produced heat .....	53
6.5.2	Consumed energy .....	53
6.5.3	Power supply layouts with power meters .....	54
6.6	Setting up the power consumption control .....	59
6.6.1	Permanent power limitation .....	59
6.6.2	Power limitation activated by digital inputs .....	60
6.6.3	Power limitation process .....	61
6.6.4	BBR16 power limitation .....	62
6.7	Setting up an external temperature sensor .....	63
<b>7</b>	<b>Unit installation</b>	<b>64</b>
7.1	Preparing the installation site .....	64
7.1.1	Installation site requirements of the outdoor unit .....	64
7.1.2	Additional installation site requirements of the outdoor unit in cold climates .....	67
7.2	Mounting the outdoor unit .....	67
7.2.1	About mounting the outdoor unit .....	67
7.2.2	Precautions when mounting the outdoor unit .....	68
7.2.3	To provide the installation structure .....	68
7.2.4	To install the outdoor unit .....	68
7.2.5	To provide drainage .....	69
7.2.6	To install the discharge grille .....	71
7.3	Opening and closing the unit .....	71

7.3.1	About opening the units.....	71
7.3.2	To open the outdoor unit.....	72
7.3.3	To close the outdoor unit.....	72
<b>8</b>	<b>Piping installation</b>	<b>73</b>
8.1	Preparing water piping .....	73
8.1.1	Water circuit requirements.....	73
8.1.2	Formula to calculate the expansion vessel pre-pressure .....	76
8.1.3	To check the water volume and flow rate .....	76
8.1.4	Changing the pre-pressure of the expansion vessel.....	79
8.1.5	To check the water volume: Examples .....	79
8.2	Connecting water piping.....	80
8.2.1	About connecting the water piping .....	80
8.2.2	Precautions when connecting the water piping.....	80
8.2.3	To connect the water piping .....	80
8.2.4	To protect the water circuit against freezing .....	82
8.2.5	To fill the water circuit .....	85
8.2.6	To fill the domestic hot water tank.....	85
8.2.7	To insulate the water piping .....	86
<b>9</b>	<b>Electrical installation</b>	<b>87</b>
9.1	About connecting the electrical wiring .....	87
9.1.1	Precautions when connecting the electrical wiring.....	87
9.1.2	Guidelines when connecting the electrical wiring.....	88
9.1.3	About electrical compliance.....	89
9.1.4	About preferential kWh rate power supply.....	89
9.1.5	Overview of electrical connections except external actuators .....	90
9.2	Connections to the outdoor unit.....	91
9.2.1	To connect the electrical wiring to the outdoor unit .....	96
9.2.2	To connect the main power supply.....	97
9.2.3	To connect the backup heater power supply .....	100
9.2.4	External backup heater kit .....	101
9.2.5	To connect the user interface .....	108
9.2.6	To connect the shut-off valve .....	111
9.2.7	To connect the electricity meters .....	112
9.2.8	To connect the domestic hot water pump .....	113
9.2.9	To connect the alarm output .....	113
9.2.10	To connect the space cooling/heating ON/OFF output.....	114
9.2.11	To connect the changeover to external heat source.....	115
9.2.12	To connect the power consumption digital inputs.....	116
9.2.13	To connect the safety thermostat (normally closed contact) .....	117
9.2.14	To connect a Smart Grid.....	118
<b>10</b>	<b>Finishing the outdoor unit installation</b>	<b>122</b>
10.1	To check the insulation resistance of the compressor .....	122
<b>11</b>	<b>Configuration</b>	<b>123</b>
11.1	Overview: Configuration .....	123
11.1.1	To access the most used commands .....	124
11.1.2	To connect the PC cable to the switch box.....	126
11.2	Configuration wizard.....	127
11.3	Possible screens .....	128
11.3.1	Possible screens: Overview .....	128
11.3.2	Home screen.....	129
11.3.3	Main menu screen.....	131
11.3.4	Menu screen.....	132
11.3.5	Setpoint screen.....	132
11.3.6	Detailed screen with values .....	133
11.4	Preset values and schedules.....	134
11.4.1	Using preset values.....	134
11.4.2	Using and programming schedules.....	134
11.4.3	Schedule screen: Example.....	138
11.4.4	Setting the energy prices.....	142
11.5	Weather-dependent curve .....	144
11.5.1	What is a weather-dependent curve? .....	144
11.5.2	2-points curve.....	144
11.5.3	Slope-offset curve.....	145
11.5.4	Using weather-dependent curves.....	147
11.6	Settings menu .....	149
11.6.1	Malfunctioning .....	149
11.6.2	Room.....	149

# Table of contents

11.6.3	Main zone .....	154
11.6.4	Additional zone .....	163
11.6.5	Space heating/cooling .....	168
11.6.6	Tank.....	176
11.6.7	User settings.....	184
11.6.8	Information.....	188
11.6.9	Installer settings .....	189
11.6.10	Commissioning .....	214
11.6.11	Operation.....	214
11.6.12	WLAN .....	214
11.7	Menu structure: Overview user settings.....	217
11.8	Menu structure: Overview installer settings.....	219
<b>12</b>	<b>Commissioning</b> .....	<b>220</b>
12.1	Overview: Commissioning .....	220
12.2	Precautions when commissioning.....	221
12.3	Checklist before commissioning.....	221
12.4	Checklist during commissioning .....	222
12.4.1	Minimum flow rate.....	222
12.4.2	Air purge function.....	223
12.4.3	Operation test run .....	225
12.4.4	Actuator test run .....	226
12.4.5	Underfloor heating screed dryout .....	227
<b>13</b>	<b>Hand-over to the user</b> .....	<b>230</b>
<b>14</b>	<b>Maintenance and service</b> .....	<b>231</b>
14.1	Maintenance safety precautions .....	231
14.2	Yearly maintenance .....	231
14.2.1	Yearly maintenance outdoor unit: overview .....	231
14.2.2	Yearly maintenance outdoor unit: instructions .....	232
<b>15</b>	<b>Troubleshooting</b> .....	<b>234</b>
15.1	Overview: Troubleshooting .....	234
15.2	Precautions when troubleshooting .....	234
15.3	Solving problems based on symptoms.....	235
15.3.1	Symptom: The unit is NOT heating or cooling as expected.....	235
15.3.2	Symptom: Hot water does NOT reach the desired temperature.....	235
15.3.3	Symptom: The compressor does NOT start (space heating or domestic water heating) .....	236
15.3.4	Symptom: The system is making gurgling noises after commissioning .....	236
15.3.5	Symptom: The pump is blocked .....	237
15.3.6	Symptom: The pump is making noise (cavitation).....	237
15.3.7	Symptom: The pressure relief valve opens.....	238
15.3.8	Symptom: The water pressure relief valve leaks .....	238
15.3.9	Symptom: The space is NOT sufficiently heated at low outdoor temperatures.....	239
15.3.10	Symptom: The pressure at the tapping point is temporarily unusually high.....	240
15.3.11	Symptom: Tank disinfection function is NOT completed correctly (AH-error) .....	240
15.4	Solving problems based on error codes .....	240
15.4.1	To display the help text in case of a malfunction .....	241
15.4.2	Error codes of the unit .....	241
<b>16</b>	<b>Disposal</b> .....	<b>246</b>
16.1	To recover refrigerant.....	246
16.1.1	To open the stop valves .....	247
16.1.2	To manually open the electronic expansion valves.....	247
16.1.3	Recovery mode — In case of 3N~ models (7-segments display) .....	248
16.1.4	Recovery mode — In case of 1N~ models (7-LEDs display) .....	251
<b>17</b>	<b>Technical data</b> .....	<b>253</b>
17.1	Service space: Outdoor unit .....	254
17.2	Piping diagram: Outdoor unit .....	256
17.3	Wiring diagram: Outdoor unit .....	258
<b>18</b>	<b>Glossary</b> .....	<b>266</b>
<b>19</b>	<b>Field settings table</b> .....	<b>267</b>



# 1 About the documentation

## In this chapter

1.1	About this document.....	5
1.2	Meaning of warnings and symbols.....	6
1.3	Installer reference guide at a glance.....	7

## 1.1 About this document

### Target audience

Authorised installers

### Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**

- Safety instructions that you must read before installing
- Format: Paper (in the box of the outdoor unit)

- **Operation manual:**

- Quick guide for basic usage
- Format: Paper (in the box of the outdoor unit)

- **User reference guide:**

- Detailed step-by-step instructions and background information for basic and advanced usage
- Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

- **Installation manual:**

- Installation instructions
- Format: Paper (in the box of the outdoor unit)

- **Installer reference guide:**

- Preparation of the installation, good practices, reference data, ...
- Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

- **Addendum book for optional equipment:**

- Additional info about how to install optional equipment
- Format: Paper (in the box of the outdoor unit) + Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.

### Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).

- The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

### Online tools

In addition to the documentation set, some online tools are available for installers:

- **Daikin Technical Data Hub**
  - Central hub for technical specifications of the unit, useful tools, digital resources, and more.
  - Publicly accessible via <https://daikintechdatahub.eu>.
- **Heating Solutions Navigator**
  - Digital toolbox that offers a variety of tools to facilitate the installation and configuration of heating systems.
  - To access Heating Solutions Navigator, registration to the Stand By Me platform is required. For more information, see <https://professional.standbyme.daikin.eu>.
- **Daikin e-Care**
  - Mobile app for installers and service technicians that allows you to register, configure and troubleshoot heating systems.
  - The mobile app can be downloaded for iOS and Android devices using the QR codes below. Registration to the Stand By Me platform is required to access the app.

App Store



Google Play



## 1.2 Meaning of warnings and symbols



### DANGER

Indicates a situation that results in death or serious injury.



### DANGER: RISK OF ELECTROCUTION

Indicates a situation that could result in electrocution.



### DANGER: RISK OF BURNING/SCALDING

Indicates a situation that could result in burning/scalding because of extreme hot or cold temperatures.



### DANGER: RISK OF EXPLOSION

Indicates a situation that could result in explosion.



### WARNING

Indicates a situation that could result in death or serious injury.

**WARNING: FLAMMABLE MATERIAL****CAUTION**

Indicates a situation that could result in minor or moderate injury.





**NOTICE**

Indicates a situation that could result in equipment or property damage.



**INFORMATION**

Indicates useful tips or additional information.

Symbols used on the unit:

Symbol	Explanation
	Before installation, read the installation and operation manual, and the wiring instruction sheet.
	Before performing maintenance and service tasks, read the service manual.
	For more information, see the installer and user reference guide.
	The unit contains rotating parts. Be careful when servicing or inspecting the unit.

Symbols used in the documentation:

Symbol	Explanation
	Indicates a figure title or a reference to it. <b>Example:</b> "▲ 1-3 Figure title" means "Figure 3 in chapter 1".
	Indicates a table title or a reference to it. <b>Example:</b> "■ 1-3 Table title" means "Table 3 in chapter 1".

## 1.3 Installer reference guide at a glance

Chapter	Description
About the documentation	What documentation exists for the installer
General safety precautions	
Specific installer safety instructions	Safety instructions that you must read before installing
About the box	
About the units and options	<ul style="list-style-type: none"> <li>How to identify the units</li> <li>Possible combinations of units and options</li> </ul>
Application guidelines	Various installation setups of the system

Chapter	Description
Unit installation	What to do and know to install the system, including information on how to prepare for an installation
Piping installation	What to do and know to install the piping of the system, including information on how to prepare for an installation
Electrical installation	What to do and know to install the electrical components of the system, including information on how to prepare for an installation
Finishing the outdoor unit installation	What to do after unit installation, piping installation and electrical installation
Configuration	What to do and know to configure the system after it is installed
Commissioning	What to do and know to commission the system after it is configured
Hand-over to the user	What to give and explain to the user
Maintenance and service	How to maintain and service the units
Troubleshooting	What to do in case of problems
Disposal	How to dispose of the system
Technical data	Specifications of the system
Glossary	Definition of terms
Field settings table	Table to be filled in by the installer, and kept for future reference  <b>Note:</b> There is also an installer settings table in the user reference guide. This table has to be filled in by the installer and handed over to the user.

## 2 General safety precautions

### In this chapter

2.1	For the installer.....	9
2.1.1	General.....	9
2.1.2	Installation site.....	10
2.1.3	Refrigerant — in case of R410A or R32.....	10
2.1.4	Water.....	12
2.1.5	Electrical.....	12

### 2.1 For the installer

#### 2.1.1 General

If you are NOT sure how to install or operate the unit, contact your dealer.



#### **DANGER: RISK OF BURNING/SCALDING**

- Do NOT touch the refrigerant piping, water piping or internal parts during and immediately after operation. It could be too hot or too cold. Give it time to return to normal temperature. If you must touch it, wear protective gloves.
- Do NOT touch any accidental leaking refrigerant.



#### **WARNING**

Improper installation or attachment of equipment or accessories could result in electrical shock, short-circuit, leaks, fire or other damage to the equipment. Only use accessories, optional equipment and spare parts made or approved by Daikin.



#### **WARNING**

Make sure installation, testing and applied materials comply with applicable legislation (on top of the instructions described in the Daikin documentation).



#### **CAUTION**

Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.



#### **WARNING**

Tear apart and throw away plastic packaging bags so that nobody, especially children, can play with them. Possible risk: suffocation.



#### **WARNING**

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.



#### **CAUTION**

Do NOT touch the air inlet or aluminium fins of the unit.



### CAUTION

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.



### NOTICE

Works executed on the outdoor unit are best done under dry weather conditions to avoid water ingress.

In accordance with the applicable legislation, it might be necessary to provide a logbook with the product containing at least: information on maintenance, repair work, results of tests, stand-by periods,...

Also, at least, following information **MUST** be provided at an accessible place at the product:

- Instructions for shutting down the system in case of an emergency
- Name and address of fire department, police and hospital
- Name, address and day and night telephone numbers for obtaining service

In Europe, EN378 provides the necessary guidance for this logbook.

### 2.1.2 Installation site

- Provide sufficient space around the unit for servicing and air circulation.
- Make sure the installation site withstands the weight and vibration of the unit.
- Make sure the area is well ventilated. Do NOT block any ventilation openings.
- Make sure the unit is level.

Do NOT install the unit in the following places:

- In potentially explosive atmospheres.
- In places where there is machinery that emits electromagnetic waves. Electromagnetic waves may disturb the control system, and cause malfunction of the equipment.
- In places where there is a risk of fire due to the leakage of flammable gases (example: thinner or gasoline), carbon fibre, ignitable dust.
- In places where corrosive gas (example: sulphurous acid gas) is produced. Corrosion of copper pipes or soldered parts may cause the refrigerant to leak.

### 2.1.3 Refrigerant — in case of R410A or R32

If applicable. See the installation manual or installer reference guide of your application for more information.



### NOTICE

Make sure refrigerant piping installation complies with applicable legislation. In Europe, EN378 is the applicable standard.



### NOTICE

Make sure the field piping and connections are NOT subjected to stress.

**WARNING**

During tests, NEVER pressurize the product with a pressure higher than the maximum allowable pressure (as indicated on the nameplate of the unit).

**WARNING**

Take sufficient precautions in case of refrigerant leakage. If refrigerant gas leaks, ventilate the area immediately. Possible risks:

- Excessive refrigerant concentrations in a closed room can lead to oxygen deficiency.
- Toxic gas might be produced if refrigerant gas comes into contact with fire.

**DANGER: RISK OF EXPLOSION**

**Pump down – Refrigerant leakage.** If you want to pump down the system, and there is a leak in the refrigerant circuit:

- Do NOT use the unit's automatic pump down function, with which you can collect all refrigerant from the system into the outdoor unit. **Possible consequence:** Self-combustion and explosion of the compressor because of air going into the operating compressor.
- Use a separate recovery system so that the unit's compressor does NOT have to operate.

**WARNING**

ALWAYS recover the refrigerant. Do NOT release them directly into the environment. Use a vacuum pump to evacuate the installation.

**NOTICE**

After all the piping has been connected, make sure there is no gas leak. Use nitrogen to perform a gas leak detection.

**NOTICE**



- To avoid compressor breakdown, do NOT charge more than the specified amount of refrigerant.
- When the refrigerant system is to be opened, refrigerant MUST be treated according to the applicable legislation.

**WARNING**

Make sure there is no oxygen in the system. Refrigerant may only be charged after performing the leak test and the vacuum drying.

**Possible consequence:** Self-combustion and explosion of the compressor because of oxygen going into the operating compressor.

- In case recharge is required, see the nameplate of the unit. It states the type of refrigerant and necessary amount.
- The unit is factory charged with refrigerant and depending on pipe sizes and pipe lengths some systems require additional charging of refrigerant.
- Only use tools exclusively for the refrigerant type used in the system, this to ensure pressure resistance and prevent foreign materials from entering into the system.
- Charge the liquid refrigerant as follows:

If	Then
A siphon tube is present (i.e., the cylinder is marked with "Liquid filling siphon attached")	Charge with the cylinder upright. 
A siphon tube is NOT present	Charge with the cylinder upside down. 

- Open refrigerant cylinders slowly.
- Charge the refrigerant in liquid form. Adding it in gas form may prevent normal operation.



### CAUTION

When the refrigerant charging procedure is done or when pausing, close the valve of the refrigerant tank immediately. If the valve is NOT closed immediately, remaining pressure might charge additional refrigerant. **Possible consequence:** Incorrect refrigerant amount.

### 2.1.4 Water

If applicable. See the installation manual or installer reference guide of your application for more information.



### NOTICE

Make sure water quality complies with EU directive 98/83 EC.

### 2.1.5 Electrical



### DANGER: RISK OF ELECTROCUTION

- Turn OFF all power supply before removing the switch box cover, connecting electrical wiring or touching electrical parts.
- Disconnect the power supply for more than 10 minutes, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage MUST be less than 50 V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.
- Do NOT touch electrical components with wet hands.
- Do NOT leave the unit unattended when the service cover is removed.



### WARNING

If NOT factory installed, a main switch or other means for disconnection, having a contact separation in all poles providing full disconnection under overvoltage category III condition, MUST be installed in the fixed wiring.



**WARNING**

- ONLY use copper wires.
- Make sure the field wiring complies with the applicable legislation.
- All field wiring MUST be performed in accordance with the wiring diagram supplied with the product.
- NEVER squeeze bundled cables and make sure they do NOT come in contact with the piping and sharp edges. Make sure no external pressure is applied to the terminal connections.
- Make sure to install earth wiring. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earth may cause electrical shock.
- Make sure to use a dedicated power circuit. NEVER use a power supply shared by another appliance.
- Make sure to install the required fuses or circuit breakers.
- Make sure to install an earth leakage protector. Failure to do so may cause electrical shock or fire.
- When installing the earth leakage protector, make sure it is compatible with the inverter (resistant to high frequency electric noise) to avoid unnecessary opening of the earth leakage protector.

**CAUTION**

- When connecting the power supply: connect the earth cable first, before making the current-carrying connections.
- When disconnecting the power supply: disconnect the current-carrying cables first, before separating the earth connection.
- The length of the conductors between the power supply stress relief and the terminal block itself must be as such that the current-carrying wires are tautened before the earth wire is in case the power supply is pulled loose from the stress relief.

**NOTICE**

Precautions when laying power wiring:



- Do NOT connect wiring of different thicknesses to the power terminal block (slack in the power wiring may cause abnormal heat).
- When connecting wiring which is the same thickness, do as shown in the figure above.
- For wiring, use the designated power wire and connect firmly, then secure to prevent outside pressure being exerted on the terminal board.
- Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will damage the head and make proper tightening impossible.
- Over-tightening the terminal screws may break them.

Install power cables at least 1 m away from televisions or radios to prevent interference. Depending on the radio waves, a distance of 1 m may not be sufficient.



### WARNING

- After finishing the electrical work, confirm that each electrical component and terminal inside the electrical components box is connected securely.
- Make sure all covers are closed before starting up the unit.



### NOTICE

Only applicable if the power supply is three-phase, and the compressor has an ON/OFF starting method.

If there exists the possibility of reversed phase after a momentary black out and the power goes on and off while the product is operating, attach a reversed phase protection circuit locally. Running the product in reversed phase can break the compressor and other parts.

## 3 Specific installer safety instructions

Always observe the following safety instructions and regulations.

**Handling the unit** (see ["To handle the outdoor unit" \[ 20\]](#))



### CAUTION

To avoid injury, do NOT touch the air inlet or aluminium fins of the unit.

**Application guidelines** (see ["6 Application guidelines" \[ 31\]](#))



### CAUTION

If there is more than one leaving water zone, ALWAYS install a mixing valve station in the main zone to decrease (in heating)/increase (in cooling) the leaving water temperature when the additional zone has demand.

**Installation site** (see ["7.1 Preparing the installation site" \[ 64\]](#))



### WARNING

Follow the service space dimensions in this manual for correct installation of the unit. See ["17.1 Service space: Outdoor unit" \[ 254\]](#).

**Special requirements for R32** (see ["Installation site requirements of the outdoor unit" \[ 64\]](#))



### WARNING

- Do NOT pierce or burn.
- Do NOT use means to accelerate the defrosting process or to clean the equipment, other than those recommended by the manufacturer.
- Be aware that R32 refrigerant does NOT contain an odour.



### WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).



### WARNING

Make sure installation, servicing, maintenance and repair comply with instructions from Daikin and with applicable legislation (for example national gas regulation) and are executed only by authorised persons.

**Mounting the outdoor unit** (see ["7.2 Mounting the outdoor unit" \[ 67\]](#))



### WARNING

Fixing method of the outdoor unit MUST be in accordance with the instructions from this manual. See ["7.2 Mounting the outdoor unit" \[ 67\]](#).

**Opening and closing the unit** (see ["7.3 Opening and closing the unit" \[ 71\]](#))



### DANGER: RISK OF ELECTROCUTION

Do NOT leave the unit unattended when the service cover is removed.



#### **DANGER: RISK OF ELECTROCUTION**



#### **DANGER: RISK OF BURNING/SCALDING**

#### **Piping installation (see "8 Piping installation" [▶ 73])**



#### **WARNING**

Field piping method **MUST** be in accordance with the instructions from this manual. See "8 Piping installation" [▶ 73].

In case of freeze protection by glycol:



#### **WARNING**

Ethylene glycol is toxic.



#### **WARNING**

Due to the presence of glycol, corrosion of the system is possible. Uninhibited glycol will turn acidic under the influence of oxygen. This process is accelerated by the presence of copper and high temperatures. The acidic uninhibited glycol attacks metal surfaces and forms galvanic corrosion cells that cause severe damage to the system. Therefore it is important that:

- the water treatment is correctly executed by a qualified water specialist,
- a glycol with corrosion inhibitors is selected to counteract acids formed by the oxidation of glycols,
- no automotive glycol is used because their corrosion inhibitors have a limited lifetime and contain silicates which can foul or plug the system,
- galvanized pipes are **NOT** used in glycol systems since the presence may lead to the precipitation of certain components in the glycol's corrosion inhibitor.

#### **Electrical installation (see "9 Electrical installation" [▶ 87])**



#### **WARNING**

Electrical wiring connection method **MUST** be in accordance with the instructions from:

- This manual. See "9 Electrical installation" [▶ 87].
- The wiring diagram, which is delivered with the unit, located at the inside of the service cover. For a translation of its legend, see "17.3 Wiring diagram: Outdoor unit" [▶ 258].



#### **DANGER: RISK OF ELECTROCUTION**



#### **WARNING**

**ALWAYS** use multicore cable for power supply cables.

**WARNING**

- All wiring **MUST** be performed by an authorised electrician and **MUST** comply with the applicable legislation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction **MUST** comply with the applicable legislation.

**WARNING**

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do **NOT** earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shock.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do **NOT** come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do **NOT** use taped wires, stranded conductor wires, extension cords, or connections from a star system. They can cause overheating, electrical shock or fire.
- Do **NOT** install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.

**WARNING**

**Rotating fan.** Before powering ON the outdoor unit, make sure that the discharge grille covers the fan as protection against a rotating fan. See "[To install the discharge grille](#)" [▶ 71].

**CAUTION**

Do **NOT** push or place redundant cable length in the unit.

**WARNING**

The backup heater **MUST** have a dedicated power supply and **MUST** be protected by the safety devices required by the applicable legislation.

**CAUTION**

To guarantee the unit is completely earthed, always connect the backup heater power supply and the earth cable.

**WARNING**

**Stripped wire.** Make sure that stripped wire cannot make contact with possible water on the bottom plate.

### Configuration (see "[11 Configuration](#)" [▶ 123])

**CAUTION**

The disinfection function settings **MUST** be configured by the installer according to the applicable legislation.



#### WARNING

Be aware that the domestic hot water temperature at the hot water tap will be equal to the value selected in field setting [2-03] after a disinfection operation.

When the high domestic hot water temperature can be a potential risk for human injuries, a mixing valve (field supply) shall be installed at the hot water outlet connection of the domestic hot water tank. This mixing valve shall secure that the hot water temperature at the hot water tap never rise above a set maximum value. This maximum allowable hot water temperature shall be selected according to the applicable legislation.



#### CAUTION

Be sure that the disinfection function start time [5.7.3] with defined duration [5.7.5] is NOT interrupted by possible domestic hot water demand.



#### CAUTION

BSH allowance schedule [9.4.2] is used to restrict or allow booster heater operation based on a weekly program. Advice: In order to avoid unsuccessful disinfection function, at least allow the booster heater (by the weekly program) for minimum 4 hours starting from the scheduled start-up of disinfection. If the booster heater is restricted during disinfection, this function will NOT be successful and the applicable warning AH will be generated.

#### Commissioning (see "12 Commissioning" [▶ 220])



#### WARNING

Commissioning method MUST be in accordance with the instructions from this manual. See "12 Commissioning" [▶ 220].

#### Maintenance and service (see "14 Maintenance and service" [▶ 231])



#### CAUTION

Water coming out of the valve may be very hot.



#### WARNING

If the internal wiring is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons.

#### Troubleshooting (see "15 Troubleshooting" [▶ 234])



#### WARNING

- When carrying out an inspection on the switch box of the unit, ALWAYS make sure that the unit is disconnected from the mains. Turn off the respective circuit breaker.
- When a safety device was activated, stop the unit and find out why the safety device was activated before resetting it. NEVER shunt safety devices or change their values to a value other than the factory default setting. If you are unable to find the cause of the problem, call your dealer.





#### DANGER: RISK OF ELECTROCUTION

**WARNING**

Prevent hazards due to inadvertent resetting of the thermal cut-out: power to this appliance **MUST NOT** be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly turned ON and OFF by the utility.

**DANGER: RISK OF BURNING/SCALDING****WARNING**

**Air purging heat emitters or collectors.** Before you purge air from heat emitters or collectors, check if  or  is displayed on the home screen of the user interface.

- If not, you can purge air immediately.
- If yes, make sure that the room where you want to purge air is sufficiently ventilated. **Reason:** Refrigerant might leak into the water circuit, and subsequently into the room when you purge air from the heat emitters or collectors.

## 4 About the box

### In this chapter

4.1	Overview: About the box.....	20
4.2	Outdoor unit .....	20
4.2.1	To handle the outdoor unit.....	20
4.2.2	To unpack the outdoor unit .....	21
4.2.3	To remove the accessories from the outdoor unit .....	23

### 4.1 Overview: About the box

This chapter describes what you have to do after the box with the outdoor unit is delivered on-site.

Keep the following in mind:

- At delivery, the unit **MUST** be checked for damage. Any damage **MUST** be reported immediately to the claims agent of the carrier.
- Bring the packed unit as close as possible to its final installation position to prevent damage during transport.
- Prepare the path along which you want to bring the unit inside in advance.

### 4.2 Outdoor unit

#### 4.2.1 To handle the outdoor unit




#### CAUTION

To avoid injury, do NOT touch the air inlet or aluminium fins of the unit.

#### Forklift or pallet truck

While the unit is still on its pallet, handle the unit using a forklift or pallet truck.

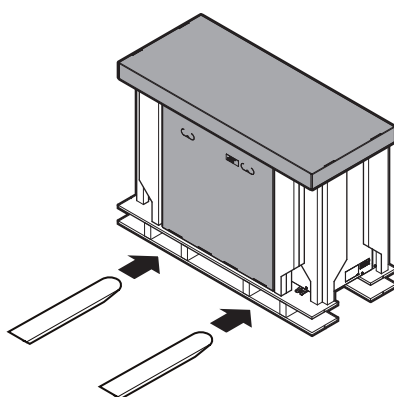



#### Manually

After unpacking, carry the unit using the slings delivered as accessory.

See also:

- "To unpack the outdoor unit" [▶ 21]
- "To remove the accessories from the outdoor unit" [▶ 23]
- "To install the outdoor unit" [▶ 68]



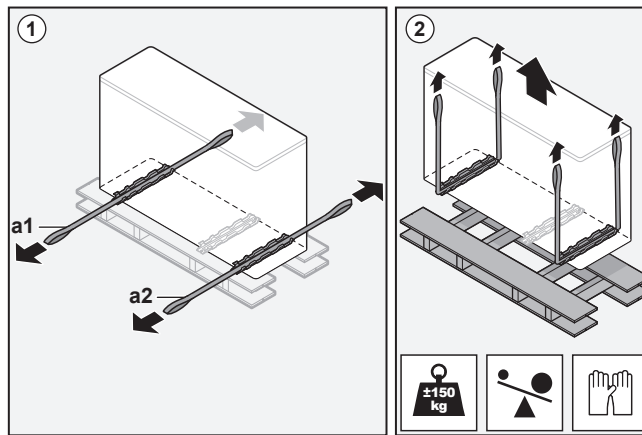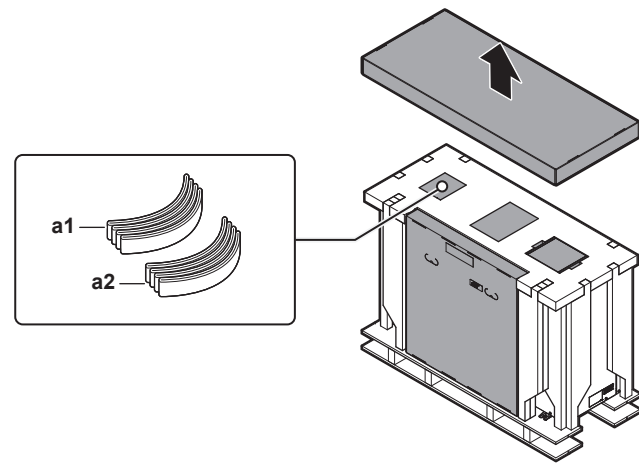


a1, a2 Slings

#### 4.2.2 To unpack the outdoor unit




##### NOTICE


**Unpacking – Top packaging.** When you remove the top packaging, hold the box containing the discharge grille to prevent it from falling.

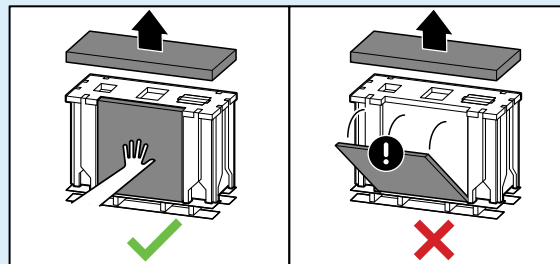


- 1 Remove the plastic foil and the top packaging.

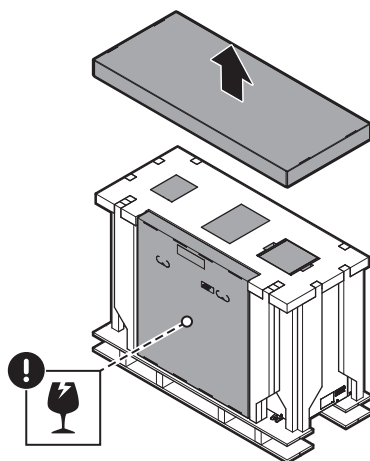


- 2 Remove the outside accessories. See ["To remove the accessories from the outdoor unit"](#) [▶ 23]. (There is also one accessory inside the unit that must be removed after opening the unit.)

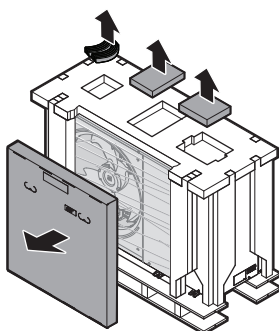


- 3 Remove the top and corners cardboard packaging.

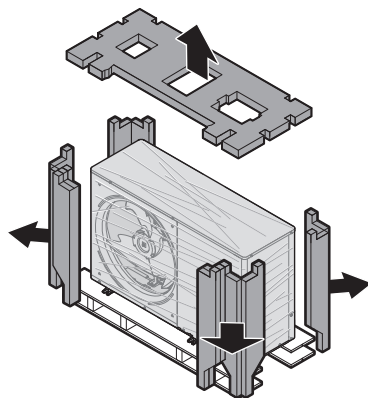

- 4 Remove the plastic foil.

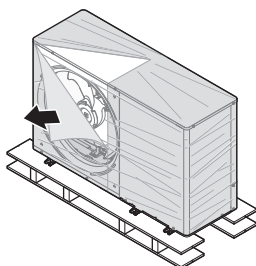


- 5 Remove the transportation screws and washers.

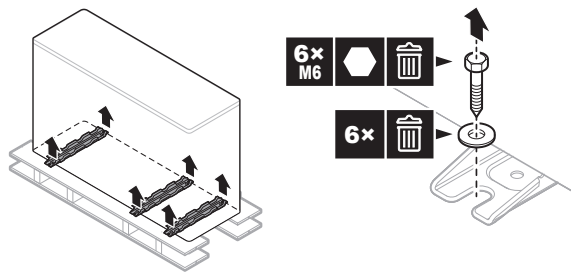


#### 4.2.3 To remove the accessories from the outdoor unit

- 1 Remove the accessories on top and in front of the unit.

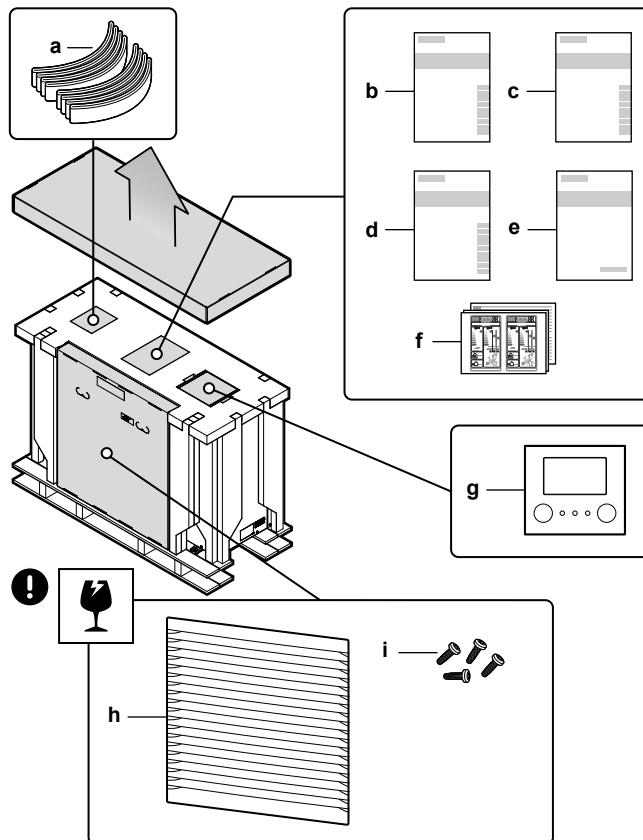

- a Slings to carry the unit
- b General safety precautions
- c Operation manual
- d Installation manual
- e Addendum book for optional equipment
- f Energy label
- g User interface (front plate, rear plate, screws, and wall plugs)
- h Discharge grille
- i Screws for discharge grille

- 2 After opening the unit (see ["To open the outdoor unit" \[▶ 72\]](#)), remove the accessory inside the unit.

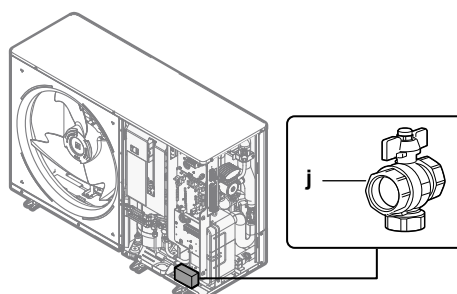

j Shut-off valve (with integrated filter)

## 5 About the units and options

In this chapter

5.1	Identification.....	25
5.1.1	Identification label: Outdoor unit.....	25
5.2	Combining units and options.....	26
5.2.1	Possible options for the outdoor unit.....	26
5.2.2	Possible combinations of outdoor unit and domestic hot water tank.....	29

### 5.1 Identification




#### NOTICE

When installing or servicing several units at the same time, make sure NOT to switch the service panels between different models.

#### 5.1.1 Identification label: Outdoor unit

##### Location

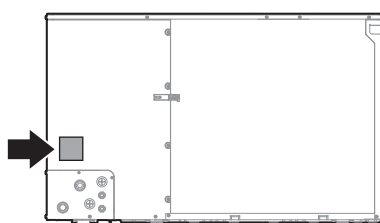

##### Model identification

**Example:** E B L A 16 DA 3 V3

Code	Explanation
E	Monobloc outdoor heat pump
B	B=Reversible (heating+cooling) D=Heating only
L	Low water temperature – ambient zone 2 (see operation range)
A	Refrigerant R32
16	Capacity class
DA	Model series
3	3=Model with integrated backup heater [—]=Model without integrated backup heater
V3	Power supply: V3=1N~, 230 V AC, 50 Hz W1=3N~, 400 V AC, 50 Hz

## 5.2 Combining units and options



### INFORMATION

Certain options might not be available in your country.

### 5.2.1 Possible options for the outdoor unit

#### Multi-zoning wired controls

You can connect the following multi-zoning wired controls:

- Multi-zoning base unit 230 V (EKWUFHTA1V3)
- Digital thermostat 230 V (EKWCTRDI1V3)
- Analogue thermostat 230 V (EKWCTRAN1V3)
- Actuator 230 V (EKWCVATR1V3)

For installation instructions, see the installation manual of the control, and the addendum book for optional equipment.

#### Room thermostat (EKRTWA, EKRT1)

You can connect an optional room thermostat to the outdoor unit. This thermostat can either be wired (EKRTWA) or wireless (EKRT1).

For installation instructions, see the installation manual of the room thermostat and addendum book for optional equipment.

#### Remote sensor for wireless thermostat (EKRTETS)

You can use the remote indoor temperature sensor (EKRTETS) only in combination with the wireless thermostat (EKRT1).

For installation instructions, see the installation manual of the room thermostat and the addendum book for optional equipment.

#### Digital I/O PCB (EKRP1HBAA)

The digital I/O PCB is required to provide following signals:

- Alarm output
- Space heating/cooling On/OFF output
- Changeover to external heat source

For installation instructions, see the installation manual of the digital I/O PCB and addendum book for optional equipment.

#### Demand PCB (EKRP1AHTA)

To enable the power saving consumption control by digital inputs you must install the demand PCB.

For installation instructions, see the installation manual of the demand PCB and addendum book for optional equipment.

#### Remote indoor sensor (KRCS01-1)

By default the internal sensor of the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat) will be used as room temperature sensor.

As an option the remote indoor sensor can be installed to measure the room temperature on another location.

For installation instructions, see the installation manual of the remote indoor sensor and addendum book for optional equipment.



#### INFORMATION

- The remote indoor sensor can only be used in case the user interface is configured with room thermostat functionality.
- You can only connect either the remote indoor sensor or the remote outdoor sensor.

### Remote outdoor sensor (EKRSCA1)

By default the sensor inside the outdoor unit will be used to measure the outdoor temperature.

As an option the remote outdoor sensor can be installed to measure the outdoor temperature on another location (e.g. to avoid direct sunlight) to have an improved system behaviour.

For installation instructions, see the installation manual of the remote outdoor sensor and the addendum book for optional equipment.



#### INFORMATION

You can only connect either the remote indoor sensor or the remote outdoor sensor.

### PC cable (EKPCAB4)

The PC cable makes a connection between the hydro PCB (A1P) of the outdoor unit and a PC. It gives the possibility to update the hydro software and EEPROM.

For installation instructions, see:

- Installation manual of the PC cable
- ["To connect the PC cable to the switch box"](#) [▶ 126]

### Heat pump convector (FWXV, FWXT, FWXM)

For providing space heating/cooling, it is possible to use the following heat pump convectors:

- FWXV: floor-standing model
- FWXT: wall-mounted model
- FWXM: concealed model

For installation instructions, see:

- The installation manual of the heat pump convectors
- The installation manual of the heat pump convector options
- The addendum book for optional equipment

### External backup heater kit (EKLBUHCB6W1) + bypass valve kit (EKMBHBP1)

For models without integrated backup heater, you can install the external backup heater kit (EKLBUHCB6W1).

For installation instructions, see:

- Installation manual of the external backup heater kit
- ["To connect the backup heater kit"](#) [▶ 102] (this topic partially supersedes the installation manual of the backup heater)

If you install the external backup heater kit, then under certain conditions you also need to install a bypass valve kit (EKMBHBP1). See:

- "Bypass valve kit necessity" [▶ 106]
- "To connect the bypass valve kit" [▶ 107] (this topic supersedes the instruction sheet delivered with the bypass valve kit)

### WLAN cartridge (BRP069A78)

You can install the wireless LAN cartridge to control the system via a smartphone app.

For installation instructions, see the installation manual of the WLAN cartridge.

### Universal centralised controller (EKCC8-W)

Controller for cascade control.

### Bizone kit (BZKA7V3)

You can install an optional bizone kit.

For installation instructions, see the installation manual of the bizone kit.

### Connection kit for third-party tank (EKHY3PART)

Required when connecting a third-party tank to the system.

Contains a thermistor and a 3-way valve.

For installation instructions, see the installation manual of the connection kit.

### Connection kit for third-party tank with built-in thermostat (EKHY3PART2)

Kit for the connection of a third-party tank with built-in thermostat to the system. The kit converts a thermostat demand from the tank to a domestic hot water request for the outdoor unit.

### Domestic hot water tank

For providing domestic hot water, a domestic hot water tank can be connected to the outdoor unit.

The following domestic hot water tanks are available:

Tank	Remark
Stainless steel tank (standard): <ul style="list-style-type: none"> <li>▪ EKHWS150D3V3</li> <li>▪ EKHWS180D3V3</li> <li>▪ EKHWS200D3V3</li> <li>▪ EKHWS250D3V3</li> <li>▪ EKHWS300D3V3</li> </ul>	Inclusive booster heater
Stainless steel tank (+ components): <ul style="list-style-type: none"> <li>▪ EKHWSU150D3V3</li> <li>▪ EKHWSU180D3V3</li> <li>▪ EKHWSU200D3V3</li> <li>▪ EKHWSU250D3V3</li> <li>▪ EKHWSU300D3V3</li> </ul>	Inclusive: <ul style="list-style-type: none"> <li>▪ Booster heater</li> <li>▪ Components to comply with the UK Building Regulation G3.</li> </ul>
Polypropylene tank: <ul style="list-style-type: none"> <li>▪ EKHWP300B</li> <li>▪ EKHWP500B</li> </ul>	Tank with drainback solar system. For these tanks, the booster heater option (EKBH3S) must be installed.



Tank	Remark
Polypropylene tank: <ul style="list-style-type: none"> <li>EKHWP300PB</li> <li>EKHWP500PB</li> </ul>	Tank with pressurised solar system. For these tanks, the booster heater option (EKBH3S) must be installed.

For installation instructions, see the installation manual of the domestic hot water tank and the addendum book for optional equipment.

#### Human Comfort Interface (BRC1HHDA) used as room thermostat

- The Human Comfort Interface (HCI) used as room thermostat can only be used in combination with the user interface connected to the outdoor unit.
- The Human Comfort Interface (HCI) used as room thermostat needs to be installed in the room that you want to control.

For installation instructions, see the installation and operation manual of the Human Comfort Interface (HCI) as room thermostat, and the addendum book for optional equipment.

#### Flow switch (EKFLSW1)

If you add glycol to the water, you also need to install a flow switch (and set [E-OD]=1).

For installation instructions, see the installation manual of the flow switch.

#### Smart grid relay kit (EKRELSG)

The installation of the optional Smart grid relay kit is required in case of high voltage Smart grid contacts (EKRELSG).

For installation instructions, see "To connect a Smart Grid" [▶ 118].

### 5.2.2 Possible combinations of outdoor unit and domestic hot water tank

#### Combination table

Outdoor unit	Domestic hot water tank			
	EKHWS*D*	EKHWSU*D*	EKHWP*	Third-party tank
EBLA09~16	O	O	O	O <sup>(a)</sup>
EDLA09~16	O	O	O	O <sup>(a)</sup>

<sup>(a)</sup> When using a third-party tank, make sure it complies with the minimum requirements (see "Third-party tank requirements" [▶ 29]).

#### Third-party tank requirements



In case of a third-party tank, the tank shall adhere to the following requirements:

- The heat exchanger coil of the tank is  $\geq 1.05 \text{ m}^2$  and  $\leq 3.7 \text{ m}^2$ .
- The tank thermistor must be located above the heat exchanger coil.
- The booster heater must be located above the heat exchanger coil.



#### NOTICE

**Performance.** Performance data for third-party tanks CANNOT be provided, and performance CANNOT be guaranteed.

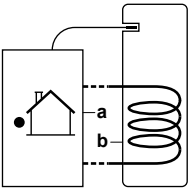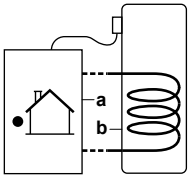If you have a tank in which you...	
Can insert a thermistor.	CANNOT insert a thermistor.
	
Use EKHY3PART.	Use EKHY3PART2.

- a Outdoor unit
- b Tank

For more detailed installation instructions, see the installation manual of the connection kit and the addendum book for optional equipment.

# 6 Application guidelines



## INFORMATION

Cooling is only applicable in case of reversible models.

## In this chapter

6.1	Overview: Application guidelines.....	31
6.2	Setting up the space heating/cooling system .....	32
6.2.1	Single room.....	33
6.2.2	Multiple rooms – One LWT zone .....	37
6.2.3	Multiple rooms – Two LWT zones .....	42
6.3	Setting up an auxiliary heat source for space heating .....	45
6.4	Setting up the domestic hot water tank .....	48
6.4.1	System layout – Standalone DHW tank .....	48
6.4.2	Selecting the volume and desired temperature for the DHW tank.....	48
6.4.3	Setup and configuration – DHW tank .....	50
6.4.4	DHW pump for instant hot water .....	50
6.4.5	DHW pump for disinfection .....	51
6.4.6	DHW pump for tank preheating .....	52
6.5	Setting up the energy metering .....	52
6.5.1	Produced heat .....	53
6.5.2	Consumed energy .....	53
6.5.3	Power supply layouts with power meters .....	54
6.6	Setting up the power consumption control.....	59
6.6.1	Permanent power limitation.....	59
6.6.2	Power limitation activated by digital inputs .....	60
6.6.3	Power limitation process .....	61
6.6.4	BBR16 power limitation .....	62
6.7	Setting up an external temperature sensor .....	63

## 6.1 Overview: Application guidelines

The purpose of the application guidelines is to give a glance of the possibilities of the heat pump system.



## NOTICE

- The illustrations in the application guidelines are meant for reference only, and are NOT to be used as detailed hydraulic diagrams. The detailed hydraulic dimensioning and balancing are NOT shown, and are the responsibility of the installer.
- For more information about the configuration settings to optimize heat pump operation, see "[11 Configuration](#)" [▶ 123].

This chapter contains application guidelines for:

- Setting up the space heating/cooling system
- Setting up an auxiliary heat source for space heating
- Setting up the domestic hot water tank
- Setting up the energy metering
- Setting up the power consumption control
- Setting up an external temperature sensor

**NOTICE**

Certain types of fan coil units –in this document referred to as "heat pump convectors"–, are able to receive input of the outdoor unit operation mode (cooling or heating X2M/3 and X2M/4) and/or to send output of the heat pump convector thermostatic condition (main zone: X2M/30 and X2M/35; additional zone: X2M/30 and X2M/35a).

The application guidelines illustrate the possibility of receiving or sending digital input/output. This functionality can only be used in case the heat pump convector has such features and the signals meet following requirements:

- Output of outdoor unit (input to heat pump convector): cooling/heating signal=230 V (cooling=230 V, heating=0 V).
- Input to outdoor unit (output of heat pump convector): thermostat ON/OFF signal=voltage-free contact (closed contact=thermo ON, open contact=thermo OFF).

## 6.2 Setting up the space heating/cooling system

The heat pump system supplies leaving water to heat emitters in one or more rooms.

Because the system offers a wide flexibility to control the temperature in each room, you need to answer the following questions first:

- How many rooms are heated or cooled by the heat pump system?
- Which heat emitter types are used in each room and what is their design leaving water temperature?

Once the space heating/cooling requirements are clear, we recommend to follow the setup guidelines below.

**NOTICE**

If an external room thermostat is used, the external room thermostat will control the room frost protection. However, the room frost protection is only possible if [C.2] **Space heating/cooling=On**.

**INFORMATION**


In case an external room thermostat is used and room frost protection needs to be guaranteed in all conditions, then you have to set **Emergency** [9.5.1] to one of the following:

- Automatic
- auto SH reduced/DHW on
- auto SH reduced/DHW off
- auto SH normal/DHW off

**NOTICE**

An overpressure bypass valve can be integrated in the system. Keep in mind that this valve might not be shown on the illustrations.

## 6.2.1 Single room

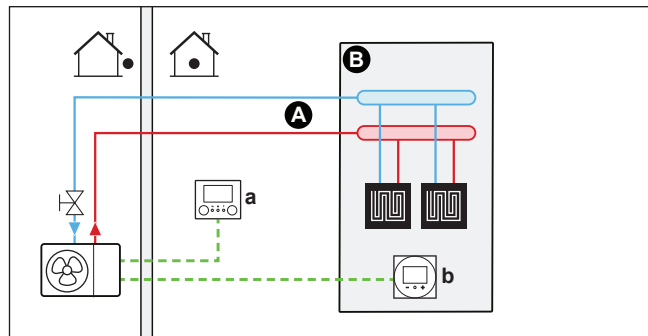**Underfloor heating or radiators – Wired room thermostat****Setup**

- A** Main leaving water temperature zone
- B** One single room
- a** User interface (delivered as accessory)
- b** Dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)

- For more information about connecting the electrical wiring to the unit, see ["9.2 Connections to the outdoor unit"](#) [► 91].
- The underfloor heating or radiators are directly connected to the outdoor unit – or to the external backup heater kit, if there is one.
- The room temperature is controlled by the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat).

**Configuration**


Setting	Value
Unit temperature control: ▪ #: [2.9] ▪ Code: [C-07]	2 ( <b>Room thermostat</b> ): Unit operation is decided based on the ambient temperature of the dedicated Human Comfort Interface.
Number of water temperature zones: ▪ #: [4.4] ▪ Code: [7-02]	0 ( <b>Single zone</b> ): Main

**Benefits**

- **Highest comfort and efficiency.** The smart room thermostat functionality can decrease or increase the desired leaving water temperature based on the actual room temperature (modulation). This results in:
  - Stable room temperature matching the desired temperature (higher comfort)
  - Less ON/OFF cycles (more quiet, higher comfort and higher efficiency)
  - Lowest possible leaving water temperature (higher efficiency)
- **Easy.** You can easily set the desired room temperature via the user interface:
  - For your daily needs, you can use preset values and schedules.
  - To deviate from your daily needs, you can temporarily overrule the preset values and schedules, or use the holiday mode.

### Underfloor heating or radiators – Wireless room thermostat

## Setup

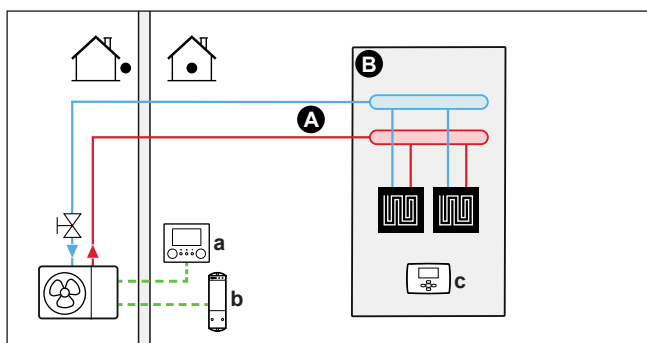

- A** Main leaving water temperature zone
- B** One single room
- a** User interface (delivered as accessory)
- b** Receiver for wireless external room thermostat
- c** Wireless external room thermostat

- For more information about connecting the electrical wiring to the unit, see ["9.2 Connections to the outdoor unit"](#) [► 91].
- The underfloor heating or radiators are directly connected to the outdoor unit – or to the external backup heater kit, if there is one.
- The room temperature is controlled by the wireless external room thermostat (optional equipment EKTR1).

## Configuration


Setting	Value
Unit temperature control: <ul style="list-style-type: none"> <li>#: [2.9]</li> <li>Code: [C-07]</li> </ul>	1 ( <b>External room thermostat</b> ): Unit operation is decided by the external thermostat.
Number of water temperature zones: <ul style="list-style-type: none"> <li>#: [4.4]</li> <li>Code: [7-02]</li> </ul>	0 ( <b>Single zone</b> ): Main
External room thermostat for the <b>main</b> zone: <ul style="list-style-type: none"> <li>#: [2.A]</li> <li>Code: [C-05]</li> </ul>	1 ( <b>1 contact</b> ): When the used external room thermostat or heat pump convector can only send a thermo ON/OFF condition. No separation between heating or cooling demand.

## Benefits

- **Wireless.** The Daikin external room thermostat is available in a wireless version.
- **Efficiency.** Although the external room thermostat only sends ON/OFF signals, it is specifically designed for the heat pump system.
- **Comfort.** In case of underfloor heating, the wireless external room thermostat prevents condensation on the floor during cooling operation by measuring the room humidity.

## Heat pump convectors

### Setup

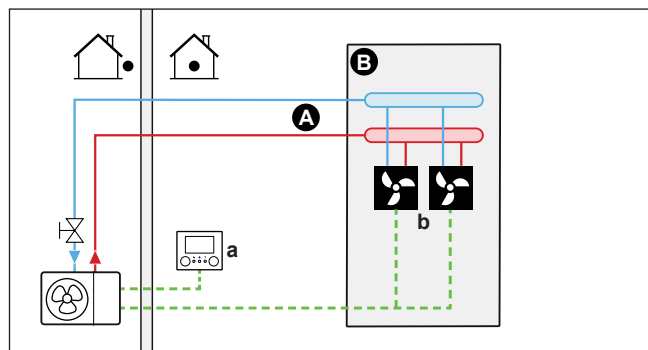

- A** Main leaving water temperature zone
- B** One single room
- a** User interface (delivered as accessory)
- b** Heat pump convectors (+ controllers)

- For more information about connecting the electrical wiring to the unit, see ["9.2 Connections to the outdoor unit"](#) [► 91].
- The heat pump convectors are directly connected to the outdoor unit – or to the external backup heater kit, if there is one.
- The desired room temperature is set via the controller of the heat pump convectors. There are different controllers and setups possible for the heat pump convectors. For more information, see:
  - The installation manual of the heat pump convectors
  - The installation manual of the heat pump convector options
  - The addendum book for optional equipment
- The space heating/cooling demand signal is sent to one digital input on the outdoor unit (X2M/35 and X2M/30).
- The space operation mode is sent to the heat pump convectors by one digital output on the outdoor unit (X2M/4 and X2M/3).

### Configuration

Setting	Value
Unit temperature control: ▪ #: [2.9] ▪ Code: [C-07]	1 ( <b>External room thermostat</b> ): Unit operation is decided by the external thermostat.
Number of water temperature zones: ▪ #: [4.4] ▪ Code: [7-02]	0 ( <b>Single zone</b> ): Main
External room thermostat for the <b>main</b> zone: ▪ #: [2.A] ▪ Code: [C-05]	1 ( <b>1 contact</b> ): When the used external room thermostat or heat pump convector can only send a thermo ON/OFF condition. No separation between heating or cooling demand.


### Benefits

- **Cooling.** The heat pump convector offers, besides heating capacity, also excellent cooling capacity.
- **Efficiency.** Optimal energy efficiency because of the interlink function.

- **Stylish.**

**Combination: Underfloor heating + Heat pump convectors**

- Space heating is provided by:
  - The underfloor heating
  - The heat pump convectors
- Space cooling is provided by the heat pump convectors only. The underfloor heating is shut off by the shut-off valve.

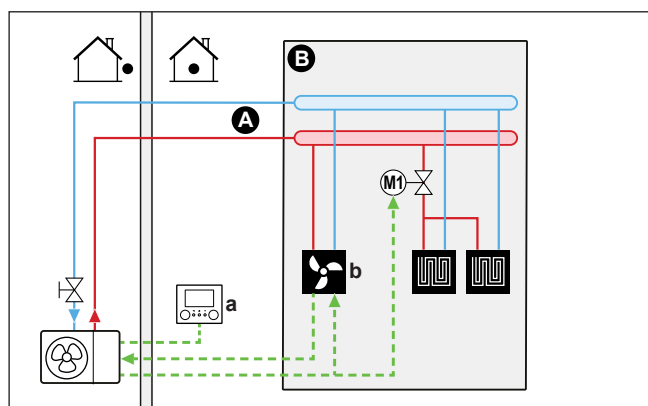**Setup**


- A** Main leaving water temperature zone
- B** One single room
- a** User interface (delivered as accessory)
- b** Heat pump convectors (+ controllers)

- For more information about connecting the electrical wiring to the unit, see "9.2 Connections to the outdoor unit" [► 91].
- The heat pump convectors are directly connected to the outdoor unit – or to the external backup heater kit, if there is one.
- A shut-off valve (field supply) is installed before the underfloor heating to prevent condensation on the floor during cooling operation.
- The desired room temperature is set via the controller of the heat pump convectors. There are different controllers and setups possible for the heat pump convectors. For more information, see:
  - The installation manual of the heat pump convectors
  - The installation manual of the heat pump convector options
  - The addendum book for optional equipment
- The space heating/cooling demand signal is sent to one digital input on the outdoor unit (X2M/35 and X2M/30).
- The space operation mode is sent by one digital output (X2M/4 and X2M/3) on the outdoor unit to:
  - The heat pump convectors
  - The shut-off valve

**Configuration**

Setting	Value
Unit temperature control:	1 (External room thermostat):
▪ #: [2.9]	Unit operation is decided by the external thermostat.
▪ Code: [C-07]	



Setting	Value
Number of water temperature zones: ▪ #: [4.4] ▪ Code: [7-02]	0 ( <b>Single zone</b> ): Main
External room thermostat for the <b>main</b> zone: ▪ #: [2.A] ▪ Code: [C-05]	1 ( <b>1 contact</b> ): When the used external room thermostat or heat pump convector can only send a thermo ON/OFF condition. No separation between heating or cooling demand.

### Benefits

- **Cooling.** Heat pump convectors provide, besides heating capacity, also excellent cooling capacity.
- **Efficiency.** Underfloor heating has the best performance with the heat pump system.
- **Comfort.** The combination of the two heat emitter types provides:
  - The excellent heating comfort of the underfloor heating
  - The excellent cooling comfort of the heat pump convectors

## 6.2.2 Multiple rooms – One LWT zone


If only one leaving water temperature zone is needed because the design leaving water temperature of all heat emitters is the same, you do NOT need a mixing valve station (cost effective).

**Example:** If the heat pump system is used to heat up one floor where all the rooms have the same heat emitters.

### Underfloor heating or radiators – Thermostatic valves

If you are heating up rooms with underfloor heating or radiators, a very common way is to control the temperature of the main room by using a thermostat (this can either be the dedicated Human Comfort Interface (BRC1HHDA) or an external room thermostat), while the other rooms are controlled by so-called thermostatic valves, which open or close depending on the room temperature.

### Setup

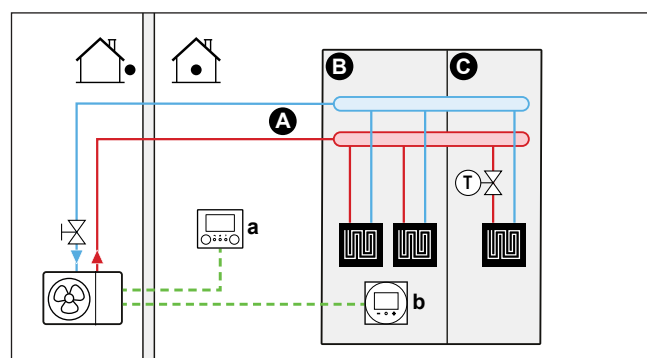

- A Main leaving water temperature zone
- B Room 1
- C Room 2
- a User interface (delivered as accessory)
- b Dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)

- For more information about connecting the electrical wiring to the unit, see "9.2 Connections to the outdoor unit" [► 91].

- The underfloor heating of the main room is directly connected to the outdoor unit – or to the external backup heater kit, if there is one.
- The room temperature of the main room is controlled by the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat).
- A thermostatic valve is installed before the underfloor heating in each of the other rooms.



#### INFORMATION

Mind situations where the main room can be heated by another heating source.  
Example: Fireplaces.

### Configuration


Setting	Value
Unit temperature control: ▪ #: [2.9] ▪ Code: [C-07]	2 ( <b>Room thermostat</b> ): Unit operation is decided based on the ambient temperature of the dedicated Human Comfort Interface.
Number of water temperature zones: ▪ #: [4.4] ▪ Code: [7-02]	0 ( <b>Single zone</b> ): Main

### Benefits

- **Easy.** Same installation as for one room, but with thermostatic valves.

## Underfloor heating – Multiple external room thermostats

### Setup

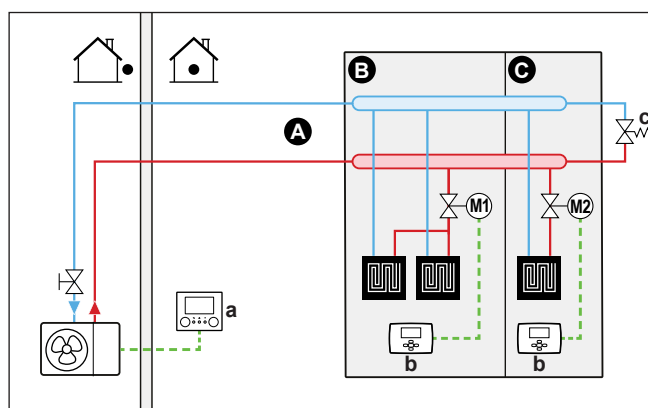

- A Main leaving water temperature zone
- B Room 1
- C Room 2
- a User interface (delivered as accessory)
- b External room thermostat
- c Bypass valve

- For more information about connecting the electrical wiring to the unit, see "9.2 Connections to the outdoor unit" [► 91].
- For each room, a shut-off valve (field supplied) is installed to avoid leaving water supply when there is no heating or cooling demand.
- A bypass valve must be installed to make water recirculation possible when all shut-off valves are closed. To guarantee reliable operation, provide a minimum water flow as described in table "To check the water volume and flow rate" in "8.1 Preparing water piping" [► 73].

- The user interface connected to the outdoor unit decides the space operation mode. Mind that the operation mode on each room thermostat must be set to match the outdoor unit.
- The room thermostats are connected to the shut-off valves, and do NOT have to be connected to the outdoor unit. The outdoor unit will supply leaving water all the time, with the possibility to program a leaving water schedule.

### Configuration

Setting	Value
Unit temperature control: ▪ #: [2.9] ▪ Code: [C-07]	0 ( <b>Leaving water</b> ): Unit operation is decided based on the leaving water temperature.
Number of water temperature zones: ▪ #: [4.4] ▪ Code: [7-02]	0 ( <b>Single zone</b> ): Main


### Benefits

Compared with underfloor heating for one room:

- **Comfort.** You can set the desired room temperature, including schedules, for each room via the room thermostats.

## Radiators – Multiple external room thermostats

### Setup

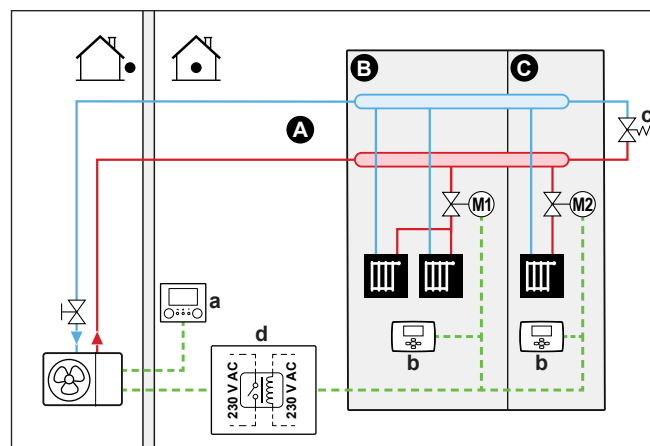

- A Main leaving water temperature zone
- B Room 1
- C Room 2
- a User interface (delivered as accessory)
- b External room thermostat
- c Bypass valve
- d Relay

- For more information about connecting the electrical wiring to the unit, see ["9.2 Connections to the outdoor unit"](#) [► 91].
- For each room, a shut-off valve (field supplied) is installed to avoid leaving water supply when there is no heating or cooling demand.
- A bypass valve must be installed to make water recirculation possible when all shut-off valves are closed. To guarantee reliable operation, provide a minimum water flow as described in table "To check the water volume and flow rate" in ["8.1 Preparing water piping"](#) [► 73].

- The user interface connected to the outdoor unit decides the space operation mode. Mind that the operation mode on each room thermostat must be set to match the outdoor unit.
- The room thermostats are connected to the shut-off valves. They are also connected to the outdoor unit (X2M/35 and X2M/30) -via a relay (field supplied)- to give feedback when operation is needed. The outdoor unit will supply leaving water as soon as there is a request from one of the rooms.

### Configuration

Setting	Value
Unit temperature control: ▪ #: [2.9] ▪ Code: [C-07]	1 ( <b>External room thermostat</b> ): Unit operation is decided by the external thermostat.
Number of water temperature zones: ▪ #: [4.4] ▪ Code: [7-02]	0 ( <b>Single zone</b> ): Main
External room thermostat for the <b>main</b> zone: ▪ #: [2.A] ▪ Code: [C-05]	1 ( <b>1 contact</b> ): When the used external room thermostat or heat pump convector can only send a thermo ON/OFF condition. No separation between heating or cooling demand.


### Benefits

Compared with radiators for one room:

- **Comfort.** You can set the desired room temperature, including schedules, for each room via the room thermostats.

## Heat pump convectors – Multiple rooms

### Setup

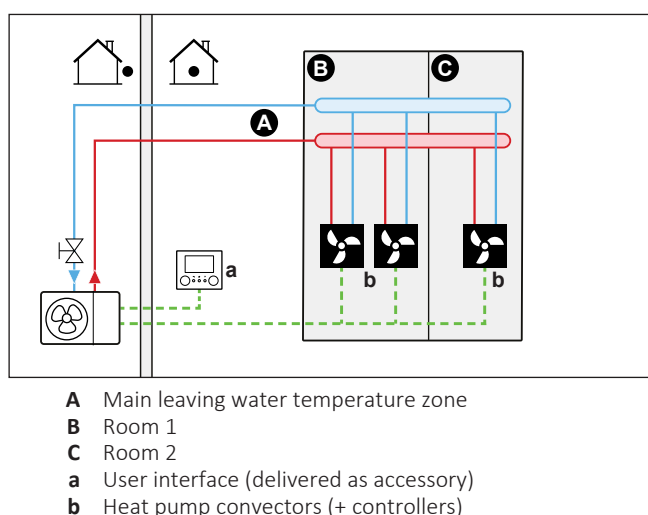

- For more information about connecting the electrical wiring to the unit, see "[9.2 Connections to the outdoor unit](#)" [▶ 91].

- The desired room temperature is set via the controller of the heat pump convectors. There are different controllers and setups possible for the heat pump convectors. For more information, see:
  - The installation manual of the heat pump convectors
  - The installation manual of the heat pump convector options
  - The addendum book for optional equipment
- The user interface connected to the outdoor unit decides the space operation mode.
- The heating or cooling demand signals of each heat pump convector are connected in parallel to the digital input on the outdoor unit (X2M/35 and X2M/30). The outdoor unit will only supply leaving water temperature when there is an actual demand.



#### INFORMATION

To increase comfort and performance, we recommend to install the valve kit option EKVKHPC on each heat pump convector.

### Configuration

Setting	Value
Unit temperature control: <ul style="list-style-type: none"> <li>▪ #: [2.9]</li> <li>▪ Code: [C-07]</li> </ul>	1 ( <b>External room thermostat</b> ): Unit operation is decided by the external thermostat.
Number of water temperature zones: <ul style="list-style-type: none"> <li>▪ #: [4.4]</li> <li>▪ Code: [7-02]</li> </ul>	0 ( <b>Single zone</b> ): Main


### Benefits

Compared with heat pump convectors for one room:

- **Comfort.** You can set the desired room temperature, including schedules, for each room via the remote controller of the heat pump convectors.

### Combination: Underfloor heating + Heat pump convectors – Multiple rooms

#### Setup

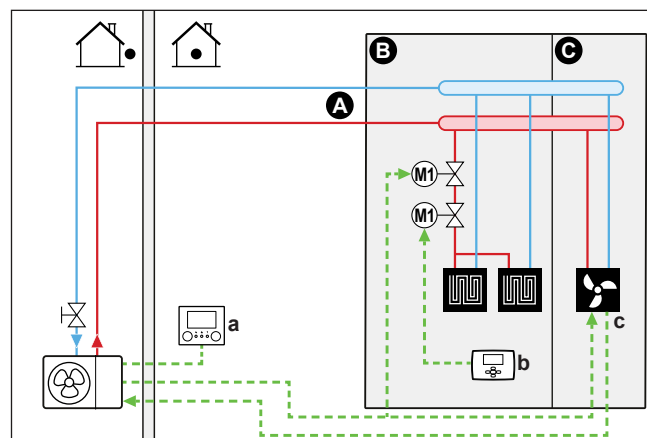

- A Main leaving water temperature zone
- B Room 1
- C Room 2
- a User interface (delivered as accessory)
- b External room thermostat

## c Heat pump convectors (+ controllers)

- For more information about connecting the electrical wiring to the unit, see "9.2 Connections to the outdoor unit" [▶ 91].
- For each room with heat pump convectors: The heat pump convectors are directly connected to the outdoor unit – or to the external backup heater kit, if there is one.
- For each room with underfloor heating: Two shut-off valves (field supply) are installed before the underfloor heating:
  - A shut-off valve to prevent hot water supply when the room has no heating demand
  - A shut-off valve to prevent condensation on the floor during cooling operation of the rooms with heat pump convectors.
- For each room with heat pump convectors: The desired room temperature is set via the controller of the heat pump convectors. There are different controllers and setups possible for the heat pump convectors. For more information, see:
  - The installation manual of the heat pump convectors
  - The installation manual of the heat pump convector options
  - The addendum book for optional equipment
- For each room with underfloor heating: The desired room temperature is set via the external room thermostat (wired or wireless).
- The user interface connected to the outdoor unit decides the space operation mode. Mind that the operation mode on each external room thermostat and controller of the heat pump convectors must be set to match the outdoor unit.

**INFORMATION**

To increase comfort and performance, we recommend to install the valve kit option EKVKHPC on each heat pump convector.

**Configuration**

Setting	Value
Unit temperature control: ▪ #: [2.9] ▪ Code: [C-07]	0 ( <b>Leaving water</b> ): Unit operation is decided based on the leaving water temperature.
Number of water temperature zones: ▪ #: [4.4] ▪ Code: [7-02]	0 ( <b>Single zone</b> ): Main

**6.2.3 Multiple rooms – Two LWT zones**

If the heat emitters selected for each room are designed for different leaving water temperatures, you can use different leaving water temperature zones (maximum 2).

In this document:

- Main zone = Zone with the lowest design temperature in heating, and the highest design temperature in cooling
- Additional zone = Zone with the highest design temperature in heating, and the lowest design temperature in cooling


**CAUTION**

If there is more than one leaving water zone, ALWAYS install a mixing valve station in the main zone to decrease (in heating)/increase (in cooling) the leaving water temperature when the additional zone has demand.

Typical example:

Room (zone)	Heat emitters: Design temperature
Living room (main zone)	Underfloor heating: <ul style="list-style-type: none"> <li>▪ In heating: 35°C</li> <li>▪ In cooling<sup>(a)</sup>: 20°C (only refreshment, no real cooling allowed)</li> </ul>
Bed rooms (additional zone)	Heat pump convectors: <ul style="list-style-type: none"> <li>▪ In heating: 45°C</li> <li>▪ In cooling: 12°C</li> </ul>

<sup>(a)</sup> In cooling mode, you can allow the underfloor heating (main zone) to provide refreshment (no real cooling), or NOT allow it. See setup below.

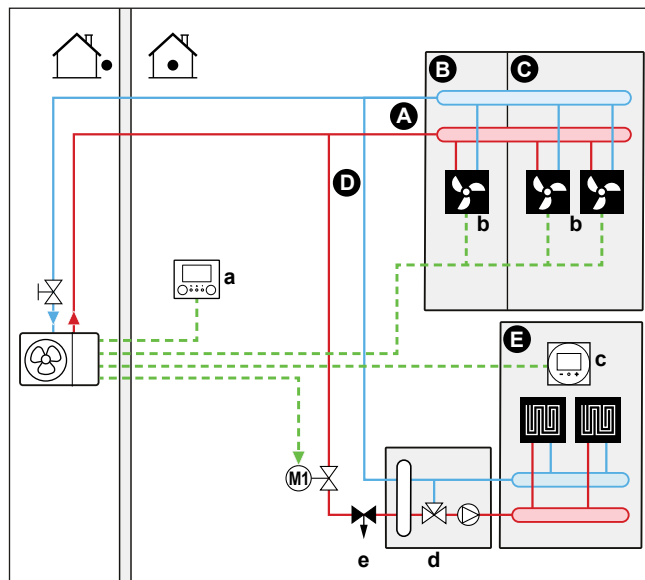**Setup**

- A Additional leaving water temperature zone
- B Room 1
- C Room 2
- D Main leaving water temperature zone
- E Room 3
- a User interface (delivered as accessory)
- b Heat pump convectors (+ controllers)
- c Dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)
- d Mixing valve station
- e Pressure regulating valve

**INFORMATION**

A pressure regulating valve should be implemented before the mixing valve station. This is to guarantee the correct water flow balance between the main leaving water temperature zone and the additional leaving water temperature zone in relation to the required capacity of both water temperature zones.

- For more information about connecting the electrical wiring to the unit, see ["9.2 Connections to the outdoor unit"](#) [▶ 91].

- For the main zone:
  - A mixing valve station is installed before the underfloor heating.
  - The pump of the mixing valve station needs to be controlled by an independent controller (field supply) based on the heating request of the room.
  - The room temperature is controlled by the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat).
  - In cooling mode, you can allow the underfloor heating (main zone) to provide refreshment (no real cooling), or NOT allow it.

**If allowed:**

Do NOT install a shut-off valve.

Set [F-0C]=0 to activate the setpoint screen of [2] **Main zone** and [1] **Room**.

Set the leaving water temperature of the main zone NOT too low (typically: 20°C)

**If NOT allowed**, install a shut-off valve (field supply) and connect it to X2M/3+4.

- For the additional zone:
  - The heat pump convectors are directly connected to the outdoor unit – or to the backup heater, if there is one
  - The desired room temperature is set via the controller of the heat pump convectors. There are different controllers and setups possible for the heat pump convectors. For more information, see:
    - The installation manual of the heat pump convectors
    - The installation manual of the heat pump convector options
    - The addendum book for optional equipment
  - The heating or cooling demand signals of each heat pump convector are connected in parallel to the digital input on the outdoor unit (X2M/35a and X2M/30). The outdoor unit will only supply the desired additional leaving water temperature when there is an actual demand.
- The user interface connected to the outdoor unit decides the space operation mode. Mind that the operation mode on each controller of the heat pump convectors must be set to match the outdoor unit.

**Configuration**

Setting	Value
Unit temperature control: <ul style="list-style-type: none"> <li>▪ #: [2.9]</li> <li>▪ Code: [C-07]</li> </ul>	<b>2 (Room thermostat):</b> Unit operation is decided based on the ambient temperature of the dedicated Human Comfort Interface.  <b>Note:</b> <ul style="list-style-type: none"> <li>▪ Main room = dedicated Human Comfort Interface used as room thermostat functionality</li> <li>▪ Other rooms = external room thermostat functionality</li> </ul>
Number of water temperature zones: <ul style="list-style-type: none"> <li>▪ #: [4.4]</li> <li>▪ Code: [7-02]</li> </ul>	<b>1 (Dual zone):</b> Main + additional



Setting	Value
In case of heat pump convectors: External room thermostat for the <b>additional</b> zone: <ul style="list-style-type: none"> <li>▪ #: [3.A]</li> <li>▪ Code: [C-06]</li> </ul>	1 ( <b>1 contact</b> ): When the used external room thermostat or heat pump convector can only send a thermo ON/OFF condition. No separation between heating or cooling demand.
Shut-off valve output	Set to follow the thermo demand of the main zone.
Shut-off valve	If the main zone must be shut off during cooling mode to prevent condensation on the floor, set it accordingly.
At the mixing valve station	Set the desired main leaving water temperature for heating and/or cooling.

### Benefits

#### ▪ Comfort.

- The smart room thermostat functionality can decrease or increase the desired leaving water temperature based on the actual room temperature (modulation).
- The combination of the two heat emitter systems provides the excellent heating comfort of the underfloor heating, and the excellent cooling comfort of the heat pump convectors.

#### ▪ Efficiency.

- Depending on the demand, the outdoor unit supplies different leaving water temperature matching the design temperature of the different heat emitters.
- Underfloor heating has the best performance with the heat pump system.

## 6.3 Setting up an auxiliary heat source for space heating

- Space heating can be done by:
  - The outdoor unit
  - An auxiliary boiler (field supply) connected to the system
- When the room thermostat requests heating, the outdoor unit or the auxiliary boiler starts operating depending on the outdoor temperature (status of the changeover to external heat source). When the permission is given to the auxiliary boiler, the space heating by the outdoor unit is turned OFF.
- Bivalent operation is only possible for space heating, NOT for domestic hot water production. Domestic hot water is always produced by the DHW tank connected to the outdoor unit.




### INFORMATION

- During heating operation of the heat pump, the heat pump operates to achieve the desired temperature set via the user interface. When weather-dependent operation is active, the water temperature is determined automatically depending on the outdoor temperature.
- During heating operation of the auxiliary boiler, the auxiliary boiler operates to achieve the desired water temperature set via the auxiliary boiler controller.

### Setup

- Integrate the auxiliary boiler as follows:

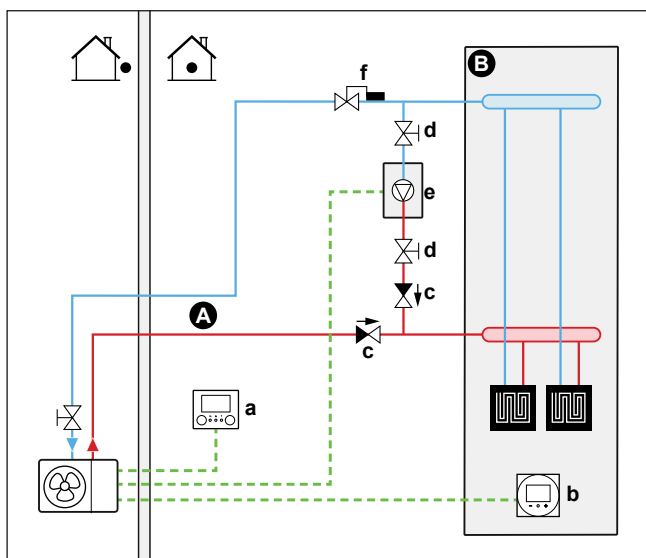

- A** Main leaving water temperature zone
- B** One single room
- a** User interface (delivered as accessory)
- b** Dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)
- c** Non-return valve (field supply)
- d** Shut-off valve (field supply)
- e** Auxiliary boiler (field supply)
- f** Aquastat valve (field supply)



#### NOTICE

- Make sure the auxiliary boiler and its integration in the system complies with applicable legislation.
- Daikin is NOT responsible for incorrect or unsafe situations in the auxiliary boiler system.

- Make sure the return water to the heat pump does NOT exceed 60°C. To do so:
  - Set the desired water temperature via the auxiliary boiler controller to maximum 60°C.
  - Install an aquastat valve in the return water flow of the heat pump. Set the aquastat valve to close above 60°C and to open below 60°C.
- Install non-return valves.
- An expansion vessel is already pre-mounted in the outdoor unit. But for bivalent operation, also make sure that there is an expansion vessel in the auxiliary boiler loop. Otherwise when bivalent operation is running and if the Aquastat valve would close, there would be no expansion vessel in the water circuit anymore.
- Install the digital I/O PCB (option EKR1HBAA).
- Connect X1 and X2 (changeover to external heat source) on the digital I/O PCB to the auxiliary boiler. See ["To connect the changeover to external heat source"](#) [► 115].
- To setup the heat emitters, see ["6.2 Setting up the space heating/cooling system"](#) [► 32].

### Configuration

Via the user interface (configuration wizard):

- Set the use of a bivalent system as external heat source.

- Set the bivalent temperature and hysteresis.




#### NOTICE

- Make sure the bivalent hysteresis has enough differential to prevent frequent changeover between outdoor unit and auxiliary boiler.
- Because the outdoor temperature is measured by the outdoor unit air thermistor, install the outdoor unit in the shadow so that it is NOT influenced or turned ON/OFF by direct sunlight.
- Frequent changeover may cause corrosion of the auxiliary boiler. Contact the manufacturer of the auxiliary boiler for more information.


### Changeover to external heat source decided by an auxiliary contact

- Only possible in external room thermostat control AND one leaving water temperature zone (see "6.2 Setting up the space heating/cooling system" [▶ 32]).
- The auxiliary contact can be:
  - An outdoor temperature thermostat
  - An electricity tariff contact
  - A manually operated contact
  - ...
- Setup: Connect the following field wiring:

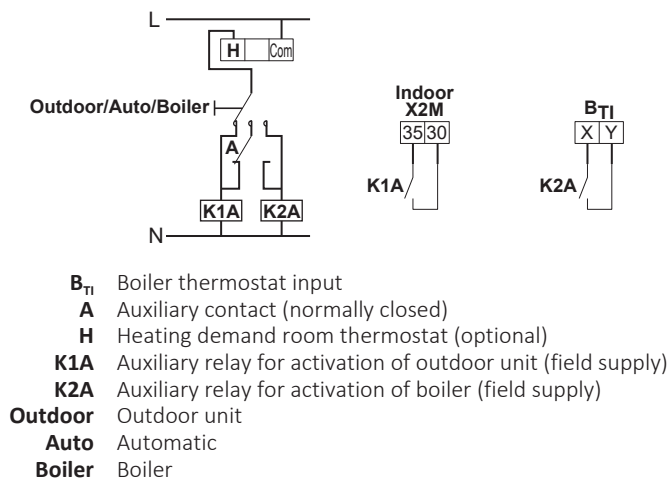

### Setpoint of the auxiliary gas boiler


To prevent freeze-up of the water piping, the auxiliary gas boiler must have a fixed setpoint  $\geq 55^\circ\text{C}$ , or a weather-dependent setpoint  $\geq T_{\min}$ .

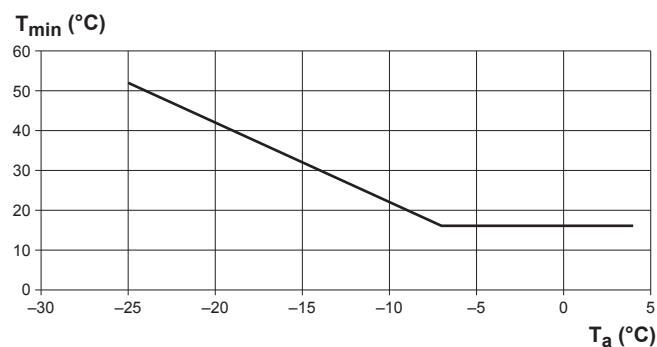

$T_a$  Outdoor temperature  
 $T_{\min}$  Minimum weather-dependent setpoint for auxiliary gas boiler

## 6.4 Setting up the domestic hot water tank

### 6.4.1 System layout – Standalone DHW tank

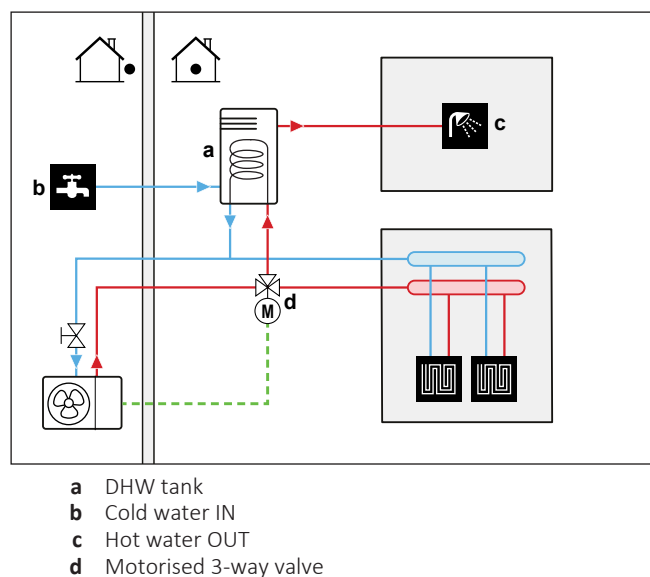

### 6.4.2 Selecting the volume and desired temperature for the DHW tank

People experience water as hot when its temperature is 40°C. Therefore, the DHW consumption is always expressed as equivalent hot water volume at 40°C. However, you can set the DHW tank temperature at a higher temperature (example: 53°C), which is then mixed with cold water (example: 15°C).

Selecting the volume and desired temperature for the DHW tank consists of:

- 1 Determining the DHW consumption (equivalent hot water volume at 40°C).
- 2 Determining the volume and desired temperature for the DHW tank.

#### Determining the DHW consumption

Answer the following questions and calculate the DHW consumption (equivalent hot water volume at 40°C) using typical water volumes:

Question	Typical water volume
How many showers are needed per day?	1 shower = 10 min×10 l/min = 100 l
How many baths are needed per day?	1 bath = 150 l
How much water is needed at the kitchen sink per day?	1 sink = 2 min×5 l/min = 10 l
Are there any other domestic hot water needs?	—

**Example:** If the DHW consumption of a family (4 persons) per day is as follows:

- 3 showers
- 1 bath
- 3 sink volumes

Then the DHW consumption = (3×100 l)+(1×150 l)+(3×10 l)=480 l

**Determining the volume and desired temperature for the DHW tank**

Formula	Example
$V_1 = V_2 + V_2 \times (T_2 - 40) / (40 - T_1)$	If: <ul style="list-style-type: none"> <li>▪ <math>V_2 = 180 \text{ l}</math></li> <li>▪ <math>T_2 = 54^\circ\text{C}</math></li> <li>▪ <math>T_1 = 15^\circ\text{C}</math></li> </ul> Then $V_1 = 280 \text{ l}$
$V_2 = V_1 \times (40 - T_1) / (T_2 - T_1)$	If: <ul style="list-style-type: none"> <li>▪ <math>V_1 = 480 \text{ l}</math></li> <li>▪ <math>T_2 = 54^\circ\text{C}</math></li> <li>▪ <math>T_1 = 15^\circ\text{C}</math></li> </ul> Then $V_2 = 307 \text{ l}$

$V_1$  DHW consumption (equivalent hot water volume at  $40^\circ\text{C}$ )

$V_2$  Required DHW tank volume if only heated once

$T_2$  DHW tank temperature

$T_1$  Cold water temperature

**Possible DHW tank volumes**

Type	Possible volumes
Standalone DHW tank	<ul style="list-style-type: none"> <li>▪ 150 l</li> <li>▪ 180 l</li> <li>▪ 200 l</li> <li>▪ 250 l</li> <li>▪ 300 l (polypropylene tank is compatible with solar kit)</li> <li>▪ 500 l (compatible with solar kit)</li> </ul>

**Energy saving tips**

- If the DHW consumption differs from day to day, you can program a weekly schedule with different desired DHW tank temperatures for each day.
- The lower the desired DHW tank temperature, the more cost effective. By selecting a larger DHW tank, you can lower the desired DHW tank temperature.
- The heat pump itself can produce domestic hot water of maximum  $55^\circ\text{C}$  (lower if the outdoor temperature is low). The electrical resistance integrated in the heat pump can increase this temperature. However, this consumes more energy. We recommend to set the desired DHW tank temperature below  $55^\circ\text{C}$  to avoid using the electrical resistance.
- The higher the outdoor temperature, the better the performance of the heat pump.
  - If energy prices are the same during the day and the night, we recommend to heat up the DHW tank during the day.
  - If energy prices are lower during the night, we recommend to heat up the DHW tank during the night.

- When the heat pump produces domestic hot water, it cannot heat up a space. In case you need domestic hot water and space heating at the same, we recommend to produce the domestic hot water during the night when there is lower space heating demand.

### 6.4.3 Setup and configuration – DHW tank

- For large DHW consumptions, you can heat up the DHW tank several times during the day.
- To heat up the DHW tank to the desired DHW tank temperature, you can use the following energy sources:
  - Thermodynamic cycle of the heat pump
  - Electrical booster heater
- For more information about:
  - Optimising the energy consumption for producing domestic hot water, see "11 Configuration" [▶ 123].
  - Connecting the electrical wiring of the standalone DHW tank to the outdoor unit, see the installation manual of the DHW tank, and the addendum book for optional equipment.
  - Connecting the water piping of the standalone DHW tank to the outdoor unit, see the installation manual of the DHW tank.
  - Optimising the minimum water volume requirement by using the tank preheating function:

See "To check the water volume and flow rate" [▶ 76] for water circuit requirements.

For stainless steel tanks (EKHS\*D\*), the additional components described in "DHW pump for tank preheating" [52] must be installed.

For polypropylene tanks (EKHWP\*), the booster heater option (EKBH3S) must be installed.


#### 6.4.4 DHW pump for instant hot water



## INFORMATION

This topic shows an application example in case of stainless steel tanks (EKHWS\*D\*).

## Setup

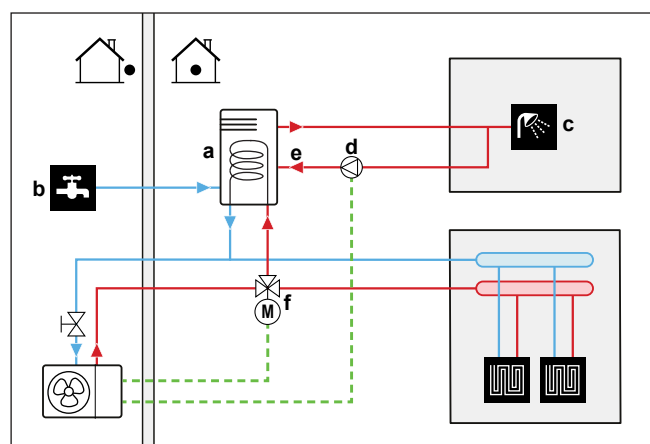

**a** DHW tank

- b** Cold water IN
- c** Hot water OUT (shower (field supply))
- d** DHW pump (field supply)
- e** Recirculation connection
- f** Motorised 3-way valve (field supply)

- By connecting a DHW pump, instant hot water can be available at the tap.
- The DHW pump and the installation are field supply and the responsibility of the installer. For the electrical wiring, see ["To connect the domestic hot water pump" \[▶ 113\]](#).
- For more information about connecting the recirculation connection, see the installation manual of the domestic hot water tank.

### Configuration

- For more information, see ["11 Configuration" \[▶ 123\]](#).
- You can program a schedule to control the DHW pump via the user interface. For more information, see the user reference guide.


#### 6.4.5 DHW pump for disinfection



#### INFORMATION

**Restriction:** Only applicable in case of stainless steel tanks (EKHWS\*D\*).

#### Setup

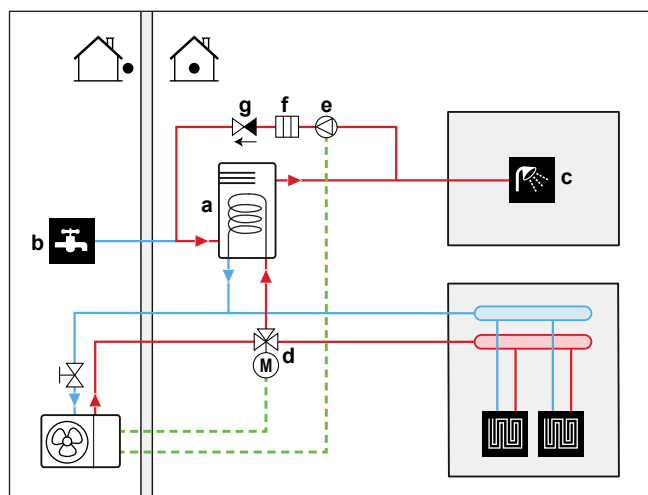

- a** DHW tank
- b** Cold water IN
- c** Hot water OUT (shower (field supply))
- d** Motorised 3-way valve (field supply)
- e** DHW pump (field supply)
- f** Heater element (field supply)
- g** Non-return valve (field supply)

- The DHW pump is field-supplied and its installation is the responsibility of the installer. For the electrical wiring, see ["To connect the domestic hot water pump" \[▶ 113\]](#).
- If the applicable legislation requires a higher temperature than the maximum tank setpoint during disinfection (see [2-03] in the field settings table), you can connect a DHW pump and heater element as shown above.
- If applicable legislation requires disinfection of the water piping until the tapping point, you can connect a DHW pump and heater element (if needed) as shown above.


**Configuration**

The outdoor unit can control DHW pump operation. For more information, see ["11 Configuration"](#) [► 123].

## 6.4.6 DHW pump for tank preheating

**INFORMATION**

**Restriction:** Only applicable in case of stainless steel tanks (EKHWS\*D\*).

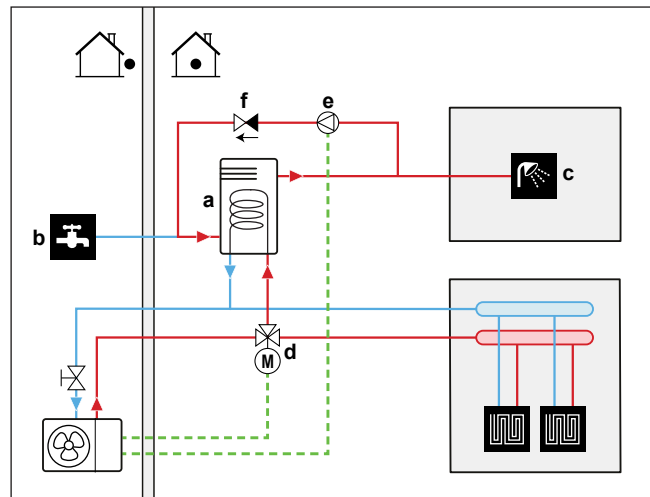**Setup**

- a DHW tank
- b Cold water IN
- c Hot water OUT (shower (field supply))
- d Motorised 3-way valve (field supply)
- e DHW pump (field supply)
- f Non-return valve (field supply)

- The DHW pump is field-supplied and its installation is the responsibility of the installer. For the electrical wiring, see ["To connect the domestic hot water pump"](#) [► 113].

**Configuration**

The outdoor unit can control DHW pump operation. For more information, see ["11 Configuration"](#) [► 123].

## 6.5 Setting up the energy metering

- Via the user interface, you can read out the following energy data:
  - Produced heat
  - Consumed energy
- You can read out the energy data:
  - For space heating
  - For space cooling
  - For domestic hot water production



- You can read out the energy data:
  - Per month
  - Per year

**INFORMATION**

The calculated produced heat and consumed energy are an estimation, the accuracy cannot be guaranteed.

### 6.5.1 Produced heat

**INFORMATION**

The sensors used to calculate the produced heat are calibrated automatically.

**INFORMATION**

If glycol is present in the system ([E-0D]=1)), then the produced heat will NOT be calculated, nor will it be displayed on the user interface.

- The produced heat is calculated internally based on:
  - The leaving and entering water temperature
  - The flow rate
  - The power consumption of the booster heater (if applicable) in the domestic hot water tank
- Setup and configuration:
  - No additional equipment needed.
  - Only in case a booster heater is present in the system, measure its capacity (resistance measurement) and set the capacity via the user interface. **Example:** If you measure a booster heater resistance of 17.1Ω, the capacity of the heater at 230 V is 3100 W.

### 6.5.2 Consumed energy

You can use the following methods to determine the consumed energy:

- Calculating
- Measuring

**INFORMATION**

You cannot combine calculating the consumed energy (example: for backup heater (if applicable)) and measuring the consumed energy (example: for outdoor unit). If you do so, the energy data will be invalid.

#### Calculating the consumed energy

- The consumed energy is calculated internally based on:
  - The actual power input of the outdoor unit
  - The set capacity of the backup heater (if applicable) and booster heater (if applicable)
  - The voltage

- Setup and configuration: To get accurate energy data, measure the capacity (resistance measurement) and set the capacity via the user interface for:
  - The backup heater (step 1 and step 2) (if applicable)
  - The booster heater (if applicable)

#### Measuring the consumed energy

- Preferred method because of higher accuracy.
- Requires external power meters.
- Setup and configuration: When using electrical power meters, set the number of pulses/kWh for each power meter via the user interface.



#### INFORMATION

When measuring the electrical power consumption, make sure ALL power input of the system is covered by the electrical power meters.

### 6.5.3 Power supply layouts with power meters

**1 power meter.** You only need 1 power meter that measures the entire system (compressor module, hydro module, backup heater and booster heater) in the following cases:

- Normal kWh rate power supply
- Preferential kWh rate power supply WITHOUT separate normal kWh rate power supply

Power meter	Description
1	<p><b>Measures:</b> Entire system</p> <p><b>Connection:</b> X5M/5+6</p> <p><b>Power meter type:</b></p> <ul style="list-style-type: none"> <li>▪ Three-phase power meter in case one of the following conditions is met:               <ul style="list-style-type: none"> <li>- Power supply of the outdoor unit is 3N~</li> <li>- Power supply of the external backup heater kit (if any) is 3N~</li> </ul> </li> <li>▪ Single-phase power meter in other cases.</li> </ul>

**2 power meters.** You need 2 power meters in case of preferential kWh rate power supply WITH separate normal kWh rate power supply.

Power meter	Description
1	<p><b>Measures<sup>(a)</sup>:</b> Hydro module, backup heater (if any), and booster heater (if any)</p> <p><b>Connection:</b> X5M/5+6</p> <p><b>Power meter type:</b></p> <ul style="list-style-type: none"> <li>▪ Three-phase power meter in case the external backup heater kit is installed and configured to use 3N~ power supply.</li> <li>▪ Single-phase power meter in other cases.</li> </ul>

Power meter	Description
2	<b>Measures<sup>(a)</sup>:</b> Compressor module <b>Connection:</b> X5M/3+4 <b>Power meter type:</b> Single- or three-phase power meter according to the power supply of the outdoor unit.

<sup>(a)</sup> In the software the power consumption data of both meters is added so you do NOT have to set which meter covers which power consumption.

**Exceptional cases.** You can also use a second power meter if:

- The power range of one meter is insufficient.
- The power meter cannot easily be installed in the electrical cabinet.
- 230 V and 400 V three-phase grids are combined (very uncommon), because of technical limitations of power meters.

### Examples in case of normal kWh rate power supply


1 power meter is sufficient.

<p>Outdoor unit (1N~) with integrated backup heater (1N~)</p> <p>=&gt; <b>b</b>: Single-phase power meter</p>	<p>Outdoor unit (3N~) with integrated backup heater (1N~)</p> <p>=&gt; <b>b*</b>: Three-phase power meter</p>
<p>Outdoor unit (1N~) + external backup heater kit (1N~ or 3N~)</p> <p>=&gt; <b>b/b*</b>: Single- or three-phase power meter (depending on external backup heater kit)</p>	<p>Outdoor unit (3N~) + external backup heater kit (1N~ or 3N~)</p> <p>=&gt; <b>b*</b>: Three-phase power meter</p>

- \* 3N~
- A Outdoor unit
- B DHW tank
- C External backup heater kit
- a Electrical cabinet: **Normal kWh rate power supply**
- b Power meter
- c Overcurrent fuse
- d Compressor module
- e Hydro module
- f Backup heater
- g Booster heater

### Examples in case of preferential kWh rate power supply WITHOUT separate normal kWh rate power supply

1 power meter is sufficient.

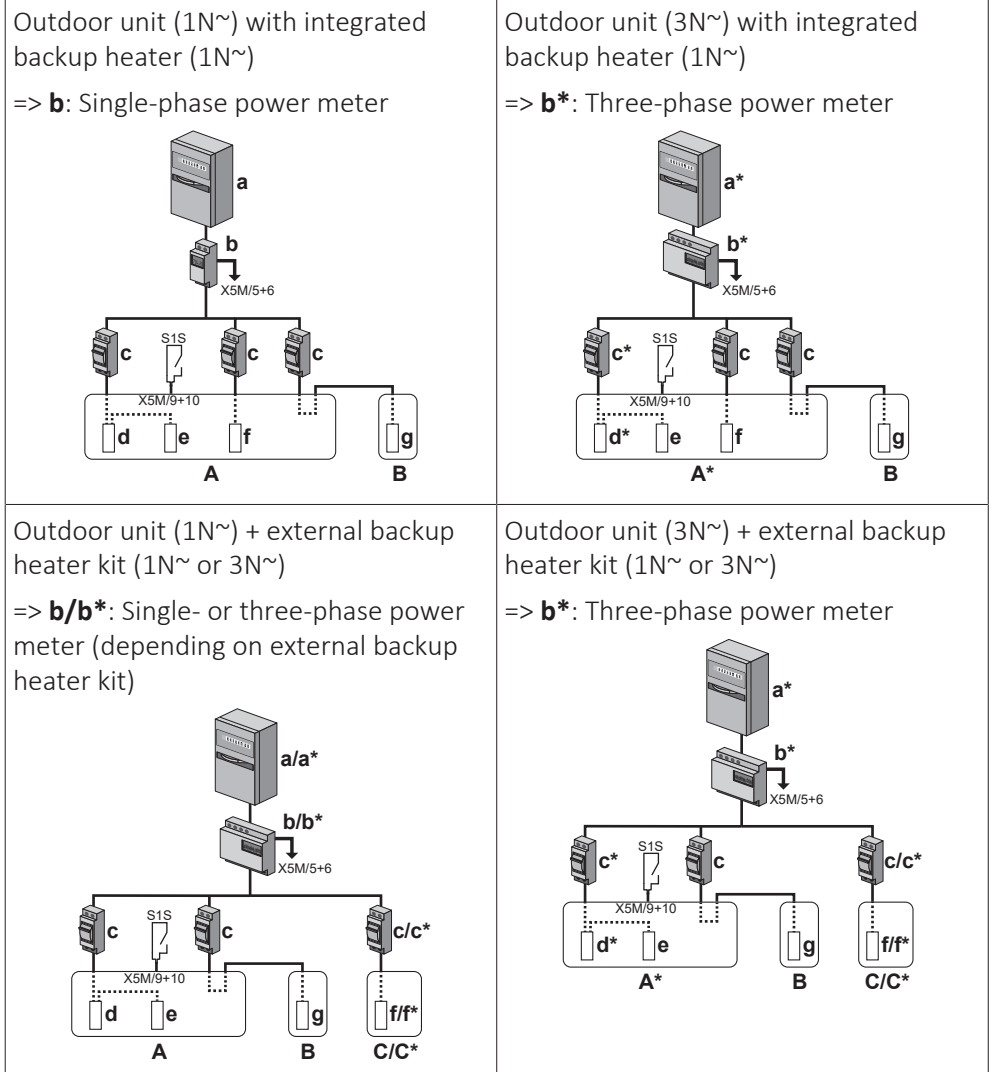

\* 3N~

**A** Outdoor unit

**B** DHW tank

**C** External backup heater kit

**a** Electrical cabinet: **Preferential kWh rate power supply**

**b** Power meter

**c** Overcurrent fuse

**d** Compressor module

**e** Hydro module

**f** Backup heater

**g** Booster heater

**S1S** Preferential kWh rate power supply contact


### Examples in case of preferential kWh rate power supply WITH separate normal kWh rate power supply

2 power meters needed.

Outdoor unit (1N~) with integrated backup heater (1N~)

=> **b1**: Single-phase power meter


=> **b2**: Single-phase power meter

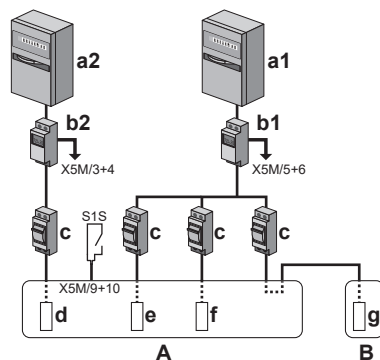

Outdoor unit (3N~) with integrated backup heater (1N~)

=> **b1**: Single-phase power meter


=> **b2\***: Three-phase power meter

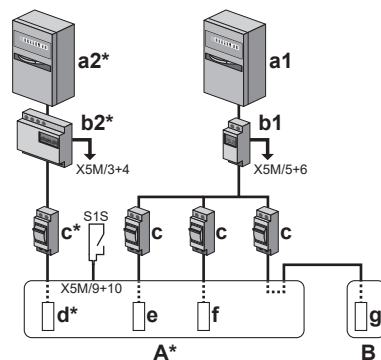

Outdoor unit (1N~) + external backup heater kit (1N~ or 3N~)

=> **b1/b1\***: Single- or three-phase power meter (depending on external backup heater kit)


=> **b2**: Single-phase power meter

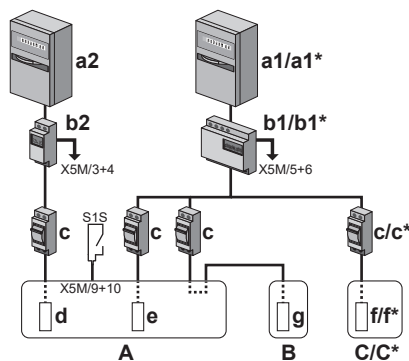

Outdoor unit (3N~) + external backup heater kit (1N~ or 3N~)

=> **b1/b1\***: Single- or three-phase power meter (depending on external backup heater kit)

=> **b2\***: Three-phase power meter

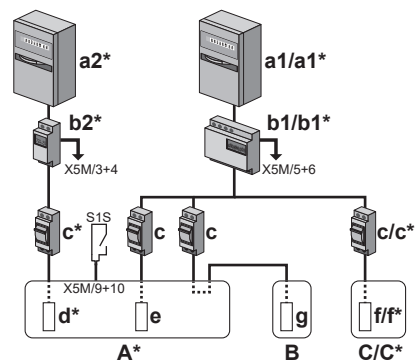

- \* 3N~
- A Outdoor unit
- B DHW tank
- C External backup heater kit
- a1 Electrical cabinet: **Normal kWh rate power supply**
- a2 Electrical cabinet: **Preferential kWh rate power supply**
- b1 Power meter 1
- b2 Power meter 2
- c Overcurrent fuse
- d Compressor module
- e Hydro module
- f Backup heater
- g Booster heater
- S1S Preferential kWh rate power supply contact

## 6.6 Setting up the power consumption control

You can use the following power consumption controls. For more information about the corresponding settings, see ["Power consumption control"](#) [▶ 204].

#	Power consumption control
1	<p><a href="#">"Permanent power limitation"</a> [▶ 59]</p> <ul style="list-style-type: none"> <li>Allows you to limit the power consumption of the entire heat pump system (sum of outdoor unit and backup heater (if applicable)) with one permanent setting.</li> <li>Limitation of power in kW or current in A.</li> </ul>
2	<p><a href="#">"Power limitation activated by digital inputs"</a> [▶ 60]</p> <ul style="list-style-type: none"> <li>Allows you to limit the power consumption of the entire heat pump system (sum of outdoor unit and backup heater (if applicable)) via 4 digital inputs.</li> <li>Limitation of power in kW or current in A.</li> </ul>
3	<p><a href="#">"BBR16 power limitation"</a> [▶ 62]</p> <ul style="list-style-type: none"> <li><b>Restriction:</b> Only available in Swedish language.</li> <li>Allows you to comply with BBR16 regulations (Swedish energy regulations).</li> <li>Limitation of power in kW.</li> <li>Can be combined with the other kW power consumption controls. If you do so, the unit uses the most restrictive control.</li> </ul>



### NOTICE

It is possible to install a field fuse with lower than recommended rating over the heat pump. For this you must modify field setting [2-0E] according to the maximum allowed current over the heat pump.

Note that field setting [2-0E] overrules all power consumption control settings. Power limiting the heat pump will reduce performance.




### NOTICE

Set a minimum power consumption of  $\pm 3.6$  kW to guarantee:

- Defrost operation. Otherwise, if defrosting is interrupted several times, the heat exchanger will freeze up.
- Space heating and DHW production by allowing at least one electrical heater (backup heater step 1 or booster heater).

### 6.6.1 Permanent power limitation

Permanent power limitation is useful to assure a maximum power or current input of the system. In some countries, legislation limits the maximum power consumption for space heating and DHW production.

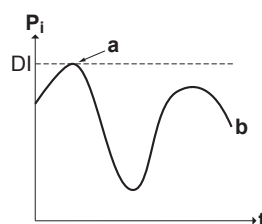

- $P_i$  Power input  
 $t$  Time  
**DI** Digital input (power limitation level)  
**a** Power limitation active  
**b** Actual power input

### Setup and configuration

- No additional equipment needed.
- Set the power consumption control settings in [9.9] via the user interface (see "Power consumption control" [▶ 204]):
  - Select continuous limitation mode
  - Select the type of limitation (power in kW or current in A)
  - Set the desired power limitation level


#### 6.6.2 Power limitation activated by digital inputs

Power limitation is also useful in combination with an energy management system.


The power or current of the entire Daikin system is limited dynamically by digital inputs (maximum four steps). Each power limitation level is set via the user interface by limiting one of the following:

- Current (in A)
- Power input (in kW)

The energy management system (field supply) decides the activation of a certain power limitation level. **Example:** To limit the maximum power of the entire house (lighting, domestic appliances, space heating...).

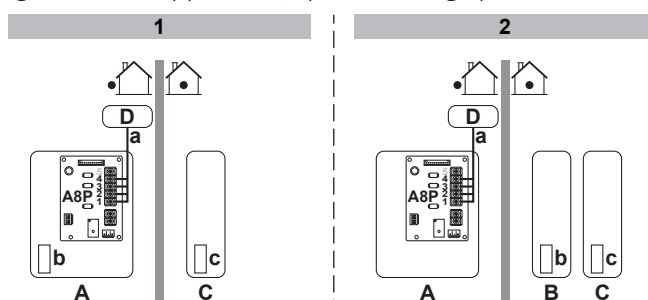

- 1** Models with integrated backup heater  
**2** With external backup heater kit  
**A** Outdoor unit  
**B** External backup heater kit  
**C** DHW tank  
**D** Energy management system  
**a** Power limitation activation (4 digital inputs)  
**b** Backup heater  
**c** Booster heater

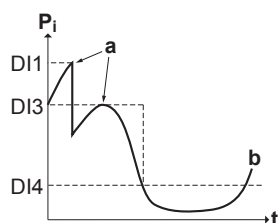

- $P_i$  Power input  
 $t$  Time  
**DI** Digital inputs (power limitation levels)  
**a** Power limitation active  
**b** Actual power input



### Setup

- Demand PCB (option EKR1AHTA) needed.
- Maximum four digital inputs are used to activate the corresponding power limitation level:
  - DI1 = strongest limitation (lowest energy consumption)
  - DI4 = weakest limitation (highest energy consumption)
- Specification of the digital inputs:
  - DI1: S9S (limit 1)
  - DI2: S8S (limit 2)
  - DI3: S7S (limit 3)
  - DI4: S6S (limit 4)
- Refer to the wiring diagram for more information.

### Configuration

- Set the power consumption control settings in [9.9] via the user interface (for the description of all settings, see ["Power consumption control" \[► 204\]](#)):
  - Select limitation by digital inputs.
  - Select the type of limitation (power in kW or current in A).
  - Set the desired power limitation level corresponding to each digital input.



#### INFORMATION

In case more than 1 digital input is closed (at the same time), the digital input priority is fixed: DI4 priority > ... > DI1.

### 6.6.3 Power limitation process

The outdoor unit has better efficiency than the electrical heaters. Therefore, the electrical heaters are limited and turned OFF first. The system limits power consumption in the following order:

- 1 Limits certain electrical heaters.

If... has priority	Then set the priority heater via the user interface to...
Domestic hot water production	<b>Booster heater</b> (if applicable) <b>Result:</b> The backup heater will be turned OFF first.
Space heating	<b>Backup heater</b> <b>Result:</b> The booster heater (if applicable) will be turned OFF first.


- 2 Turns OFF all electrical heaters.
- 3 Limits the outdoor unit.
- 4 Turns OFF the outdoor unit.

### Example

If the configuration is as follows:

- Power limitation level does NOT allow operation of both booster heater and backup heater (step 1 and step 2).
- Priority heater = **Booster heater** (if applicable).

Then power consumption is limited as follows:

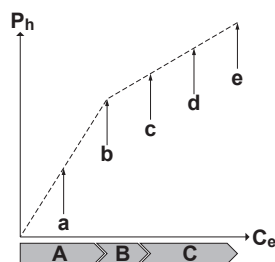

- $P_h$  Produced heat
- $C_e$  Consumed energy
- A** Outdoor unit
- B** Booster heater
- C** Backup heater
- a** Limited outdoor unit operation
- b** Full outdoor unit operation
- c** Booster heater turned ON
- d** Backup heater step 1 turned ON
- e** Backup heater step 2 turned ON

#### 6.6.4 BBR16 power limitation



##### INFORMATION

**Restriction:** BBR16 settings are only visible when the language of the user interface is set to Swedish.




##### NOTICE

**2 weeks to change.** After you activated BBR16, you only have 2 weeks to change its settings (**BBR16 activation** and **BBR16 power limit**). After 2 weeks, the unit freezes these settings.

**Note:** This is different from the permanent power limitation, which is always changeable.

Use the BBR16 power limitation when you must comply with BBR16 regulations (Swedish energy regulations).

You can combine the BBR16 power limitation with the other kW power consumption controls. If you do so, the unit uses the most restrictive control.

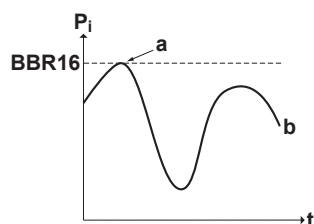

- $P_i$  Power input
- $t$  Time
- BBR16** BBR16 limit level
- a** Power limitation active
- b** Actual power input

#### Setup and configuration

- No additional equipment needed.
- Set the power consumption control settings in [9.9] via the user interface (see ["Power consumption control"](#) [▶ 204]):
  - Activate BBR16
  - Set the desired power limitation level

## 6.7 Setting up an external temperature sensor

You can connect one external temperature sensor. It measures the indoor or outdoor ambient temperature. We recommend to use an external temperature sensor in the following cases:

### Indoor ambient temperature

- In room thermostat control, the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat) measures the indoor ambient temperature. Therefore, the Human Comfort Interface must be installed on a location:
  - Where the average temperature in the room can be detected
  - That is NOT exposed to direct sunlight
  - That is NOT near a heat source
  - That is NOT affected by outside air or air draught because of, for example, door opening/closing
- If this is NOT possible, we recommend to connect a remote indoor sensor (option KRCS01-1).
- Setup: For installation instructions, see the installation manual of the remote indoor sensor, and the addendum book for optional equipment.
- Configuration: Select room sensor [9.B].

### Outdoor ambient temperature

- In the outdoor unit, the outdoor ambient temperature is measured. Therefore, the outdoor unit must be installed on a location:
  - At the north side of the house or at the side of the house where the most heat emitters are located
  - That is NOT exposed to direct sunlight
- If this is NOT possible, we recommend to connect a remote outdoor sensor (option EKRSCA1).
- Setup: For installation instructions, see the installation manual of the remote outdoor sensor, and the addendum book for optional equipment.
- Configuration: Select outdoor sensor [9.B].
- When the power saving functionality of the outdoor unit is active (see "[Power saving function](#)" [► 212]), the outdoor unit is turned down to reduce standby energy losses. As a result, the outdoor ambient temperature is NOT read out.
- If the desired leaving water temperature is weather dependent, the full time outdoor temperature measurement is important. This is another reason to install the optional outdoor ambient temperature sensor.



#### INFORMATION

The external outdoor ambient sensor data (either averaged or instantaneous) is used in the weather-dependent control curves and in the automatic heating/cooling changeover logic. To protect the outdoor unit, the internal sensor of the outdoor unit is always used.

# 7 Unit installation

## In this chapter

7.1	Preparing the installation site .....	64
7.1.1	Installation site requirements of the outdoor unit .....	64
7.1.2	Additional installation site requirements of the outdoor unit in cold climates .....	67
7.2	Mounting the outdoor unit .....	67
7.2.1	About mounting the outdoor unit .....	67
7.2.2	Precautions when mounting the outdoor unit.....	68
7.2.3	To provide the installation structure .....	68
7.2.4	To install the outdoor unit .....	68
7.2.5	To provide drainage .....	69
7.2.6	To install the discharge grille .....	71
7.3	Opening and closing the unit .....	71
7.3.1	About opening the units .....	71
7.3.2	To open the outdoor unit .....	72
7.3.3	To close the outdoor unit.....	72

## 7.1 Preparing the installation site

Do NOT install the unit in places often used as work place. In case of construction works (e.g. grinding works) where a lot of dust is created, the unit MUST be covered.

Choose an installation location with sufficient space for carrying the unit in and out of the site.



### WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).

### 7.1.1 Installation site requirements of the outdoor unit



### INFORMATION

Also read the precautions and requirements in the "2 General safety precautions" [▶ 9].

Mind the spacing guidelines. See "17.1 Service space: Outdoor unit" [▶ 254].



### NOTICE


- Do NOT stack the units on each other.
- Do NOT hang the unit on a ceiling.

Strong winds ( $\geq 18$  km/h) blowing against the outdoor unit's air outlet causes short circuit (suction of discharge air). This may result in:

- deterioration of the operational capacity;
- frequent frost acceleration in heating operation;
- disruption of operation due to decrease of low pressure or increase of high pressure;
- a broken fan (if a strong wind blows continuously on the fan, it may start rotating very fast, until it breaks).

It is recommended to install a baffle plate when the air outlet is exposed to wind.

It is recommended to install the outdoor unit with the air inlet facing the wall and NOT directly exposed to the wind.

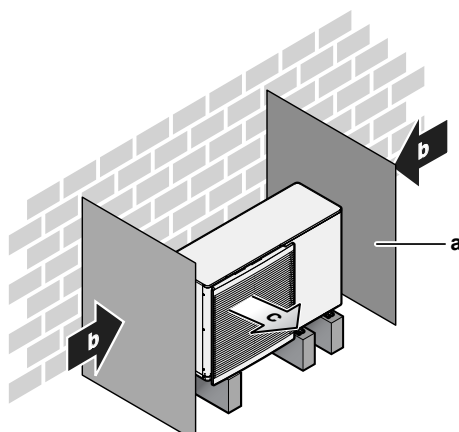

- a Baffle plate
- b Prevailing wind direction
- c Air outlet

Do NOT install the unit in the following places:

- Sound sensitive areas (e.g. near a bedroom), so that the operation noise will cause no trouble.

Note: If the sound is measured under actual installation conditions, the measured value might be higher than the sound pressure level mentioned in Sound spectrum in the data book due to environmental noise and sound reflections.

- In places where a mineral oil mist, spray or vapour may be present in the atmosphere. Plastic parts may deteriorate and fall off or cause water leakage.


It is NOT recommended to install the unit in the following places because it may shorten the life of the unit:

- Where the voltage fluctuates a lot
- In vehicles or vessels
- Where acidic or alkaline vapour is present

**Seaside installation.** Make sure the outdoor unit is NOT directly exposed to sea winds. This is to prevent corrosion caused by high levels of salt in the air, which might shorten the life of the unit.


Install the outdoor unit away from direct sea winds.

**Example:** Behind the building.

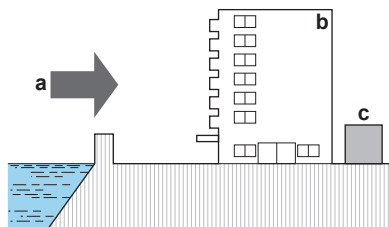

If the outdoor unit is exposed to direct sea winds, install a windbreaker.

- Height of windbreaker  $\geq 1.5 \times$  height of outdoor unit
- Mind the service space requirements when installing the windbreaker.

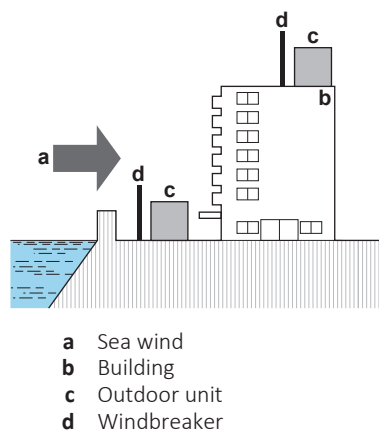

The outdoor unit is designed for outdoor installation only, and for the following ambient temperatures:

Cooling mode	10~43°C
Heating mode	<ul style="list-style-type: none"> <li>For models with integrated backup heater or if the external backup heater kit is installed: –25~35°C</li> <li>Otherwise: –25~25°C</li> </ul>
DHW production	–25~35°C

Mind the measurement guidelines:

Maximum height difference between domestic hot water tank and outdoor unit	5 m
Maximum distance between outdoor unit and...	
domestic hot water tank	10 m
3-way valve	10 m
external backup heater kit	10 m

### Special requirements for R32

The outdoor unit contains an internal refrigerant circuit (R32), but you do NOT have to do any refrigerant field piping, or refrigerant charging.

Mind the following requirements and precautions:



#### WARNING

- Do NOT pierce or burn.
- Do NOT use means to accelerate the defrosting process or to clean the equipment, other than those recommended by the manufacturer.
- Be aware that R32 refrigerant does NOT contain an odour.



#### WARNING


The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).

**WARNING**

Make sure installation, servicing, maintenance and repair comply with instructions from Daikin and with applicable legislation (for example national gas regulation) and are executed only by authorised persons.

### 7.1.2 Additional installation site requirements of the outdoor unit in cold climates

Protect the outdoor unit against direct snowfall and take care that the outdoor unit is NEVER snowed up.

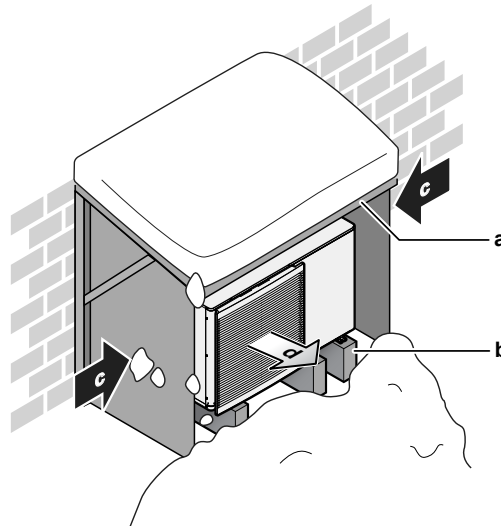

- a** Snow cover or shed
- b** Pedestal
- c** Prevailing wind direction
- d** Air outlet

In any case, provide at least 150 mm of free space below the unit. Additionally, make sure the unit is positioned at least 100 mm above the maximum expected level of snow. See ["7.2 Mounting the outdoor unit"](#) [▶ 67] for more details.

In heavy snowfall areas it is very important to select an installation site where the snow will NOT affect the unit. If lateral snowfall is possible, make sure that the heat exchanger coil is NOT affected by the snow. If necessary, install a snow cover or shed and a pedestal.

## 7.2 Mounting the outdoor unit

### 7.2.1 About mounting the outdoor unit

#### When

You have to mount the outdoor unit before you can connect the water piping.

#### Typical workflow

Mounting the outdoor unit typically consists of the following stages:

- 1 Providing the installation structure.
- 2 Installing the outdoor unit.
- 3 Providing drainage.
- 4 Installing the discharge grille.
- 5 Protecting the unit against snow and wind by installing a snow cover and baffle plates. See ["7.1 Preparing the installation site"](#) [▶ 64].

### 7.2.2 Precautions when mounting the outdoor unit



#### INFORMATION

Also read the precautions and requirements in the following chapters:


- "2 General safety precautions" [▶ 9]
- "7.1 Preparing the installation site" [▶ 64]

### 7.2.3 To provide the installation structure

Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise.

Fix the unit securely by means of foundation bolts in accordance with the foundation drawing.

Use 6 sets of M12 anchor bolts, nuts and washers. Provide at least 150 mm of free space below the unit. Additionally, make sure the unit is positioned at least 100 mm above the maximum expected level of snow.

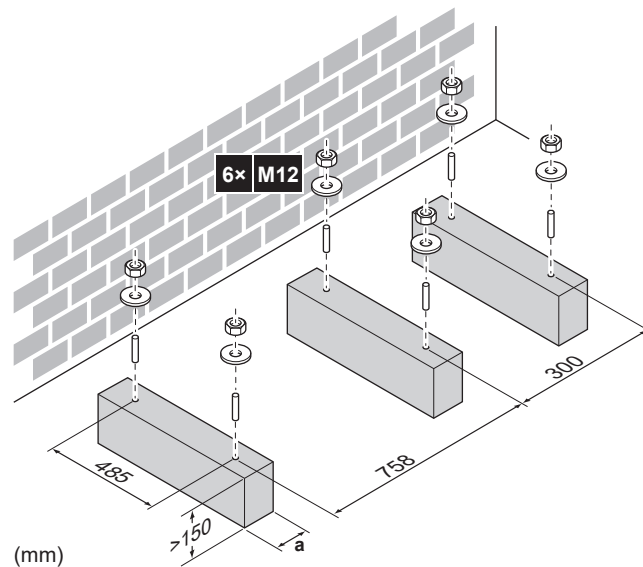


- a** Make sure not to cover the drain holes. See "Drain holes (dimensions in mm)" [▶ 70].



#### INFORMATION

 The recommended height of the upper protruding part of the bolts is 20 mm.



#### NOTICE

Fix the outdoor unit to the foundation bolts using nuts with resin washers (a). If the coating on the fastening area is stripped off, the metal can rust easily.




### 7.2.4 To install the outdoor unit


- 1** Put the slings (delivered as accessories) through the unit's feet (left and right).



- 2 Carry the unit by the slings, and put it onto the installation structure.

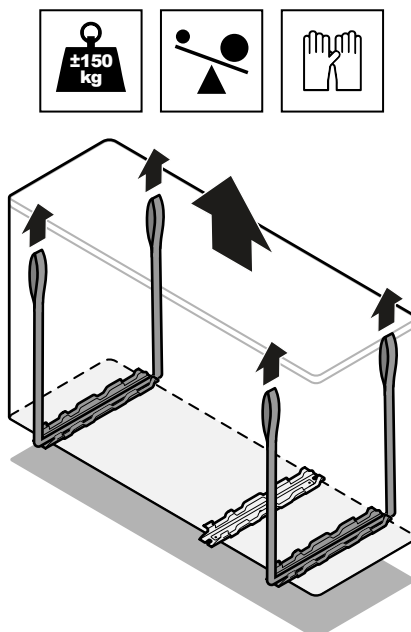

- 3 Remove the slings, and dispose of them.  
4 Fix the unit to the installation structure.

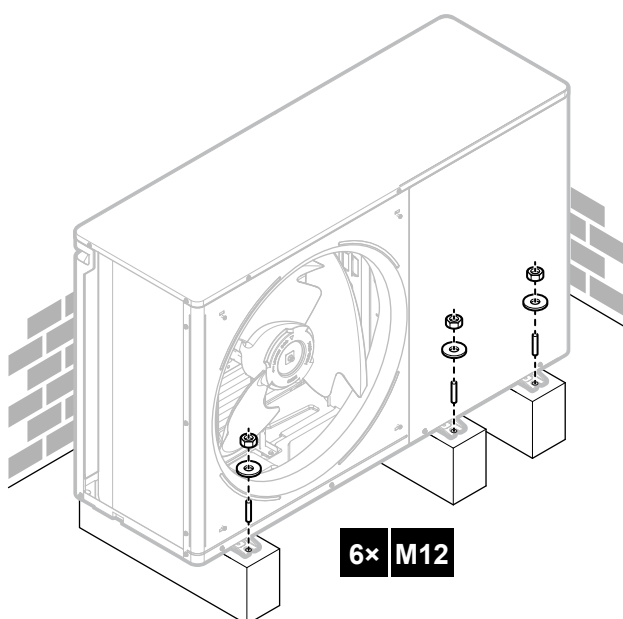

### 7.2.5 To provide drainage

- Make sure that condensation water can be evacuated properly.
- Install the unit on a base to make sure that there is proper drainage in order to avoid ice accumulation.
- Prepare a water drainage channel around the foundation to drain waste water away from the unit.
- Avoid drain water flowing over the footpath, so that it does NOT become slippery in case of ambient freezing temperatures.
- If you install the unit on a frame, install a waterproof plate within 150 mm of the bottom side of the unit in order to prevent water from getting into the unit and to avoid drain water dripping (see the following figure).



### INFORMATION

If necessary, you can use a drain pan (field supply) to prevent drain water from dripping.




### NOTICE

If the unit CANNOT be installed fully level, always make sure that the inclination is towards the backside of the unit. This is required to guarantee proper drainage.




### NOTICE

If drain holes of the outdoor unit are covered by a mounting base or by floor surface, raise the unit to provide a free space of more than 150 mm under the outdoor unit.

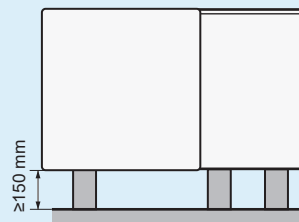

### Drain holes (dimensions in mm)

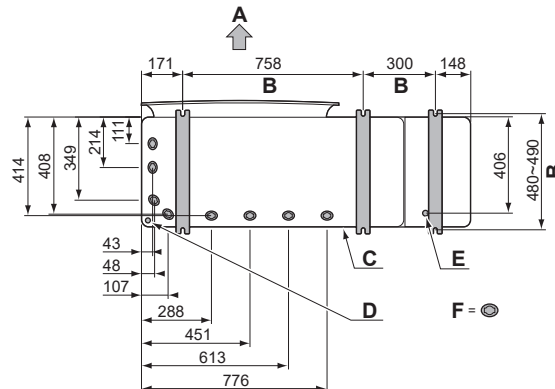


- A Discharge side
- B Distance between anchor points
- C Bottom frame
- D Knockout hole for snow
- E Drain hole for safety valve
- F Drain holes

### Snow

In regions with snowfall, snow might build up and freeze between the heat exchanger and the casing of the unit. This might decrease the operating efficiency. To prevent this:

- 1 Remove the knockout hole (a) by tapping on the attachment points with a flat head screwdriver and a hammer.

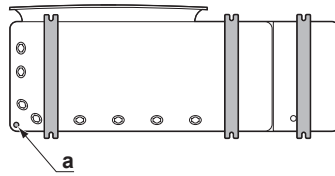


- 2 Remove the burrs, and paint the edges and areas around the edges using repair paint to prevent rusting.

**NOTICE**

When making knockout holes, do NOT damage the casing and underlying piping.

### 7.2.6 To install the discharge grille

- 1 Insert the hooks. To prevent breaking the hooks:
  - First insert the bottom hooks (2×).
  - Then insert the top hooks (2×).
- 2 Insert and fix the screws (4×)(delivered as accessory).

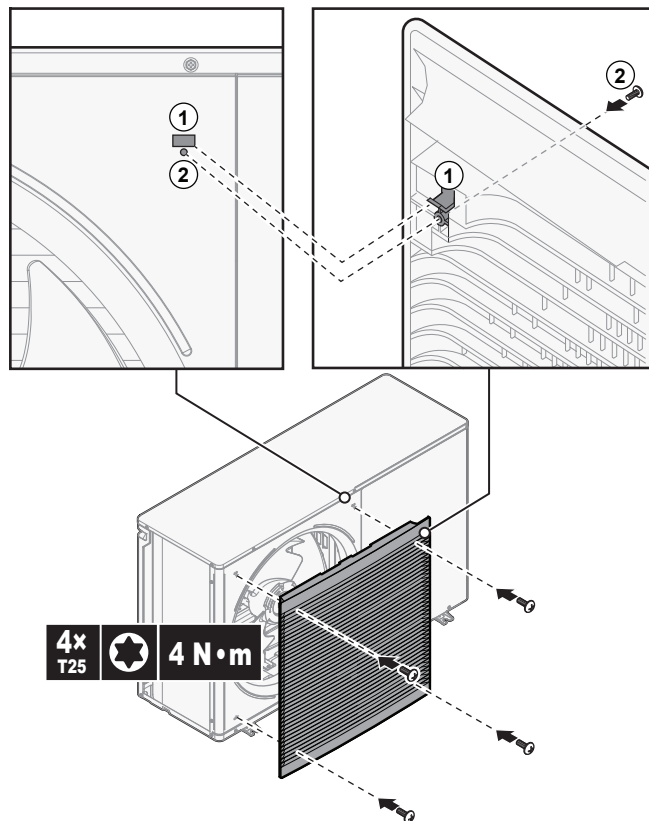

## 7.3 Opening and closing the unit

### 7.3.1 About opening the units

At certain times, you have to open the unit. **Example:**

- When connecting the electrical wiring
- When maintaining or servicing the unit



### **DANGER: RISK OF ELECTROCUTION**

Do NOT leave the unit unattended when the service cover is removed.


#### 7.3.2 To open the outdoor unit



### **DANGER: RISK OF ELECTROCUTION**



### **DANGER: RISK OF BURNING/SCALDING**

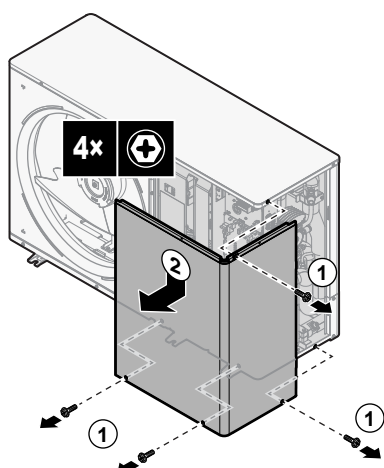


#### 7.3.3 To close the outdoor unit



### **NOTICE**

**Speed nut.** Make sure the speed nut for the top screw is correctly attached to the service cover.

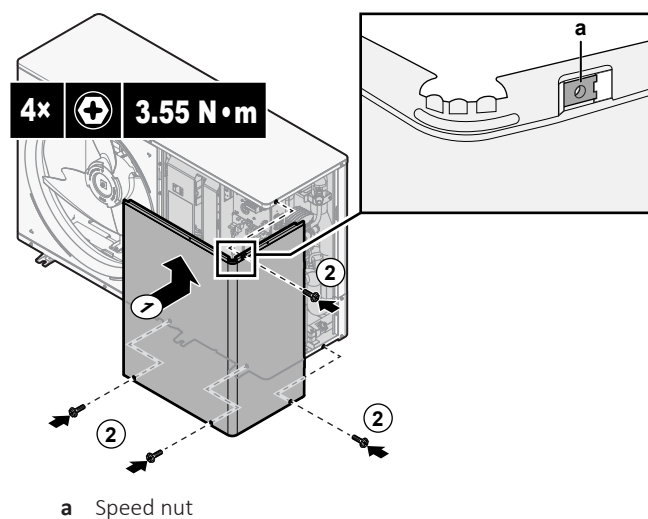

# 8 Piping installation

## In this chapter

8.1	Preparing water piping .....	73
8.1.1	Water circuit requirements .....	73
8.1.2	Formula to calculate the expansion vessel pre-pressure .....	76
8.1.3	To check the water volume and flow rate .....	76
8.1.4	Changing the pre-pressure of the expansion vessel .....	79
8.1.5	To check the water volume: Examples .....	79
8.2	Connecting water piping .....	80
8.2.1	About connecting the water piping .....	80
8.2.2	Precautions when connecting the water piping .....	80
8.2.3	To connect the water piping .....	80
8.2.4	To protect the water circuit against freezing .....	82
8.2.5	To fill the water circuit .....	85
8.2.6	To fill the domestic hot water tank .....	85
8.2.7	To insulate the water piping .....	86

## 8.1 Preparing water piping

### 8.1.1 Water circuit requirements



#### INFORMATION

Also read the precautions and requirements in the "[2 General safety precautions](#)" [▶ 9].



#### NOTICE

In case of plastic pipes, make sure they are fully oxygen diffusion tight according to DIN 4726. The diffusion of oxygen into the piping can lead to excessive corrosion.

- **Connecting piping – Legislation.** Make all piping connections in accordance with the applicable legislation and the instructions in the "Installation" chapter, respecting the water inlet and outlet.
- **Connecting piping – Force.** Do NOT use excessive force when connecting the piping. Deformation of the piping can cause malfunctioning of the unit.
- **Connecting piping – Tools.** Only use appropriate tooling to handle brass, which is a soft material. If NOT, pipes will get damaged.
- **Connecting piping – Air, moisture, dust.** If air, moisture or dust gets into the circuit, problems may occur. To prevent this:
  - Only use clean pipes
  - Hold the pipe end downwards when removing burrs.
  - Cover the pipe end when inserting it through a wall, to prevent dust and/or particles from entering the pipe.
  - Use a decent thread sealant to seal connections.
- **Freeze.** Protect against freezing.
- **Closed circuit.** Use the outdoor unit ONLY in a closed water system. Using the system in an open water system will lead to excessive corrosion.
- **Piping length.** It is recommended to avoid long runs of piping between the domestic hot water tank and the hot water end point (shower, bath,...) and to avoid dead ends.

- **Piping diameter.** Select the water piping diameter in relation to the required water flow and the available external static pressure of the pump.

For the external static pressure curves of the outdoor unit, see the technical data. A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

- **Water flow.** You can find the minimum required water flow for unit operation in the following table. In all cases, this flow needs to be guaranteed. When the flow is lower, the unit will stop operation and display error 7H.


If operation is...	Then the minimum required flow rate is...
Cooling	20 l/min
Heating/defrost when outdoor temperature is above $-5^{\circ}\text{C}$	
Heating/defrost when outdoor temperature is below $-5^{\circ}\text{C}$	22 l/min
Domestic hot water production	28 l/min

- **Field supply components – Water and glycol.** Only use materials that are compatible with the water (and, if applicable, glycol) used in the system, and with the materials used in the outdoor unit.
- **Field supply components – Water pressure and temperature.** Check that all components in the field piping can withstand the water pressure and water temperature.
- **Water pressure.** The maximum water pressure is 4 bar. Provide adequate safeguards in the water circuit to ensure that the maximum pressure is NOT exceeded.
- **Water temperature.** All installed piping and piping accessories (valve, connections,...) MUST withstand the following temperatures:




#### INFORMATION

The following illustration is an example and might NOT match your system layout.

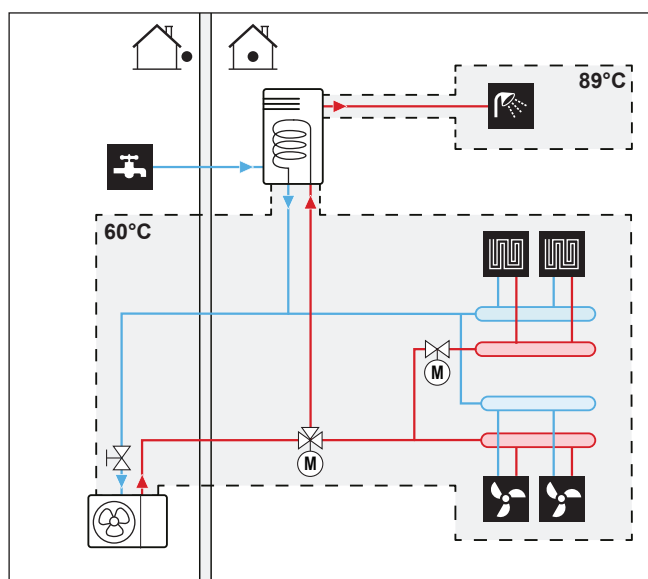

- **Drainage – Low points.** Provide drain taps at all low points of the system in order to allow complete drainage of the water circuit.
- **Air vents.** Provide air vents at all high points of the system, which must also be easily accessible for servicing.  
For models with integrated backup heater, the outdoor unit has an automatic air purge valve.  
For other models, the outdoor unit has a manual air purge valve.  
The external backup heater kit (option) has an automatic air purge valve.  
Check that the automatic air purge valves are NOT tightened too much, so that the automatic release of air from the water circuit is possible.
- **Zn-coated parts.** Never use zinc coated parts in the water circuit. Because the internal water circuit of the unit uses copper piping, excessive corrosion may occur.
- **Non-brass metallic piping.** When using non-brass metallic piping, insulate the brass and non-brass properly so that they do NOT make contact with each other. This to prevent galvanic corrosion.
- **Valve – Separating circuits.** When using a 3-way valve in the water circuit make sure that the domestic hot water circuit and the floor heating circuit is fully separated.
- **Valve – Change-over time.** When using a 2-way valve or a 3-way valve in the water circuit, the maximum change-over time of the valve must be 60 seconds.
- **Filter.** It is strongly recommended to install an additional filter on the heating water circuit. Especially to remove metallic particles from foul heating piping, it is recommended to use a magnetic or cyclone filter, which can remove small particles. Small particles may damage the unit and will NOT be removed by the standard filter of the heat pump system.
- **Domestic hot water tank – Capacity.** To avoid stagnation of water, it is important that the storage capacity of the domestic hot water tank meets the daily consumption of domestic hot water.
- **Domestic hot water tank – After installation.** Immediately after installation, the domestic hot water tank must be flushed with fresh water. This procedure must be repeated at least once a day the first 5 consecutive days after installation.
- **Domestic hot water tank – Standstills.** In cases where during longer periods of time there is no consumption of hot water, the equipment MUST be flushed with fresh water before usage.
- **Domestic hot water tank – Disinfection.** For the disinfection function of the domestic hot water tank, see "[Tank](#)" [▶ 176] and "[DHW pump for disinfection](#)" [▶ 51].
- **Thermostatic mixing valves.** In accordance with the applicable legislation, it may be necessary to install thermostatic mixing valves.
- **Hygienic measures.** The installation must be in compliance with the applicable legislation and may require additional hygienic installation measures.
- **Recirculation pump.** In accordance with the applicable legislation, it may be required to connect a recirculation pump in between the hot water end point and the recirculation connection of the domestic hot water tank.

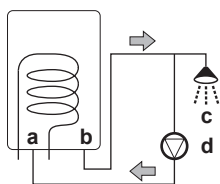

- a** Recirculation connection
- b** Hot water connection
- c** Shower
- d** Recirculation pump

### 8.1.2 Formula to calculate the expansion vessel pre-pressure

The pre-pressure ( $P_g$ ) of the vessel depends on the installation height difference ( $H$ ):

$$P_g = 0.3 + (H/10) \text{ (bar)}$$

### 8.1.3 To check the water volume and flow rate

The outdoor unit has an expansion vessel of 8 litre with a factory-set pre-pressure of 1 bar.

To make sure that the unit operates properly:

- You must check the minimum and maximum water volume.
- You might need to adjust the pre-pressure of the expansion vessel.

#### Minimum water volume

Check that the total water volume in the installation is higher than the minimum water volume, the internal water volume of the outdoor unit NOT included:

If...	Then the minimum water volume is...
Cooling operation	20 l
Heating/defrost operation and...	
Preheating on the tank is possible. This is possible in the following cases: <ul style="list-style-type: none"> <li>▪ EKHWP* tank + booster heater</li> <li>▪ EKHWS*D* tank + booster heater + DHW pump</li> </ul>	0 l
Preheating on the tank is not possible, but a backup heater (internal or external) is present.	20 l
Preheating on the tank is not possible, and there is no backup heater.	50 l




#### INFORMATION

In critical processes, or in rooms with a high heat load, extra water might be required.



**NOTICE**

When circulation in each space heating/cooling loop is controlled by remotely controlled valves, it is important that the minimum water volume is guaranteed, even if all of the valves are closed.

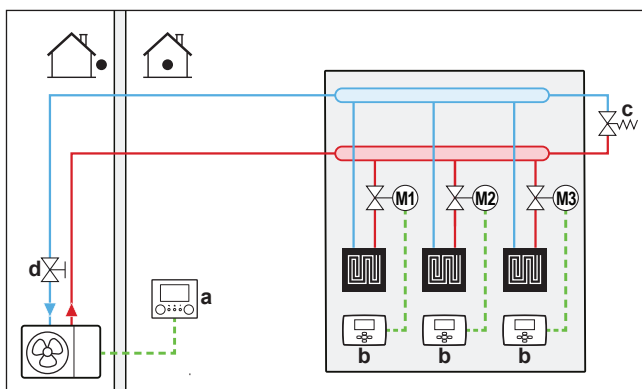


- a** User interface (delivered as accessory)
- b** Individual room thermostat (option)
- c** Overpressure bypass valve (field supply)
- d** Shut-off valve (delivered as accessory)
- M1...3** Individual motorised valve to control each loop (field supply)

**Maximum water volume****NOTICE**

The maximum water volume depends on whether glycol is added to the water circuit. For more information on the addition of glycol, refer to ["To protect the water circuit against freezing"](#) [▶ 82].

Use the following graph to determine the maximum water volume for the calculated pre-pressure.

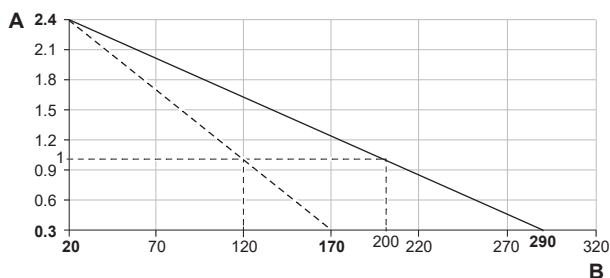

- A** Pre-pressure (bar)
- B** Maximum water volume (l)
- Water
- - - - Water + glycol

**Example: Maximum water volume and expansion vessel pre-pressure**

Installation height difference <sup>(a)</sup>	Water volume	
	≤200/120 l <sup>(b)</sup>	>200/120 l <sup>(b)</sup>
≤7 m	No pre-pressure adjustment is required.	Do the following: <ul style="list-style-type: none"> <li>Decrease the pre-pressure according to the required installation height difference. The pre-pressure should decrease by 0.1 bar for each metre below 7 m.</li> <li>Check if the water volume does NOT exceed the maximum allowed water volume.</li> </ul>
>7 m	Do the following: <ul style="list-style-type: none"> <li>Increase the pre-pressure according to the required installation height difference. The pre-pressure should increase by 0.1 bar for each metre above 7 m.</li> <li>Check if the water volume does NOT exceed the maximum allowed water volume.</li> </ul>	The expansion vessel of the outdoor unit is too small for the installation. In this case, it is recommended to install an extra vessel outside the unit.

<sup>(a)</sup> This is the height difference (m) between the highest point of the water circuit and the outdoor unit. If the outdoor unit is at the highest point of the installation, the installation height is 0 m.

<sup>(b)</sup> The maximum water volume is 200 l in case the circuit is only filled with water, and 120 l in case the circuit is filled with water and glycol.

### Minimum flow rate

Check that the minimum flow rate (required during defrost/backup heater operation (if applicable)) in the installation is guaranteed in all conditions.

If operation is...	Then the minimum required flow rate is...
Cooling	20 l/min
Heating/defrost when outdoor temperature is above –5°C	
Heating/defrost when outdoor temperature is below –5°C	22 l/min
Domestic hot water production	28 l/min



#### NOTICE

If glycol was added to the water circuit, and the temperature of the water circuit is low, the flow rate will NOT be displayed on the user interface. In this case, the minimum flow rate can be checked by way of the pump test.

**NOTICE**

When circulation in each or certain space heating loops is controlled by remotely controlled valves, it is important that the minimum flow rate is guaranteed, even if all valves are closed. In case the minimum flow rate cannot be reached, a flow error 7H will be generated (no heating or operation).

See the recommended procedure as described in "[12.4 Checklist during commissioning](#)" [▶ 222].

#### 8.1.4 Changing the pre-pressure of the expansion vessel


**NOTICE**

Only a licensed installer may adjust the pre-pressure of the expansion vessel.

The default pre-pressure of the expansion vessel is 1 bar. When it is required to change the pre-pressure, take following guidelines into account:

- Only use dry nitrogen to set the expansion vessel pre-pressure.
- Inappropriate setting of the expansion vessel pre-pressure will lead to malfunction of the system.

Changing the pre-pressure of the expansion vessel should be done by releasing or increasing nitrogen pressure through the Schrader valve of the expansion vessel.

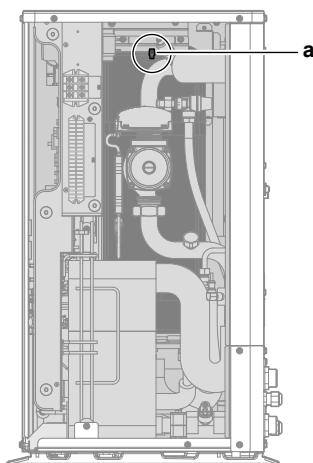

**a** Schrader valve

#### 8.1.5 To check the water volume: Examples

**Example 1**

The outdoor unit is installed 5 m below the highest point in the water circuit. The total water volume in the water circuit is 100 l.

No actions or adjustments are required.

**Example 2**

The outdoor unit is installed at the highest point in the water circuit. The total water volume in the water circuit is 250 l.

Actions:

- Because the total water volume (250 l) is more than the default water volume (200 l), the pre-pressure must be decreased.
- The required pre-pressure is:

$$P_g = (0.3 + (H/10)) \text{ bar} = (0.3 + (0/10)) \text{ bar} = 0.3 \text{ bar}$$

- The corresponding maximum water volume at 0.3 bar is 290 l. (See the graph in ["Maximum water volume"](#) [▶ 77]).
- Because 250 l is lower than 290 l, the expansion vessel is appropriate for the installation.

## 8.2 Connecting water piping

### 8.2.1 About connecting the water piping

#### Before connecting the water piping

Make sure the outdoor unit is mounted.

#### Typical workflow

Connecting the water piping typically consists of the following stages:

- 1 Connecting the water piping of the outdoor unit.
- 2 Connecting the water piping of the external backup heater kit and/or the domestic hot water tank (if applicable).
- 3 Protecting the water circuit against freezing (addition of glycol or installation of freeze protection valves).
- 4 Filling the water circuit.
- 5 Filling the domestic hot water tank (if applicable).
- 6 Insulating the water piping.



#### INFORMATION

For instructions regarding the domestic hot water tank, see the installation manual of the tank.

For instructions regarding the external backup heater kit, see:

- The installation manual of the backup heater kit.
- ["To connect the backup heater kit"](#) [▶ 102] (this topic partially supersedes the installation manual of the backup heater)

### 8.2.2 Precautions when connecting the water piping



#### INFORMATION

Also read the precautions and requirements in the following chapters:

- ["2 General safety precautions"](#) [▶ 9]
- ["8.1 Preparing water piping"](#) [▶ 73]

### 8.2.3 To connect the water piping




#### NOTICE


Do NOT use excessive force when connecting the field piping and make sure the piping is aligned properly. Deformation of the piping can cause malfunctioning of the unit.

**NOTICE**

When connecting the field piping, hold the nut on the inside of the unit in place using a spanner to provide extra leverage.

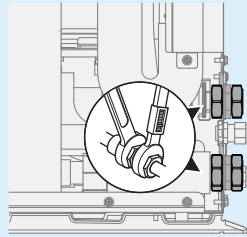

- 1 Connect the shut-off valve (with integrated filter) to the outdoor unit water inlet, using thread sealant.

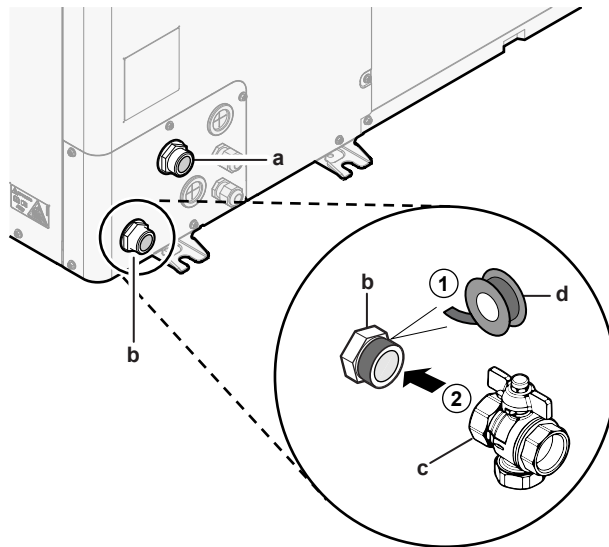

- a Water OUT (screw connection, male, 1")
- b Water IN (screw connection, male, 1")
- c Shut-off valve with integrated filter (delivered as accessory)(2× screw connection, female, 1")
- d Thread sealant

- 2 Connect the field piping to the shut-off valve.
- 3 Connect the field piping to the outdoor unit water outlet.

**NOTICE**

About the shut-off valve with integrated filter (delivered as accessory):

- The installation of the valve at the water inlet is mandatory.
- Mind the flow direction of the valve.

**NOTICE**

For service purposes, it is recommended to also install a shut-off valve and drain point to the water OUT connection. This shut-off valve and drain point are field supplied.

**NOTICE**

Install air purge valves at all local high points.



#### NOTICE

In case an optional domestic hot water tank is installed: A pressure relief valve (field supply) with an opening pressure of maximum 10 bar (= 1 MPa) must be installed on the domestic cold water inlet connection in accordance with the applicable legislation.

### 8.2.4 To protect the water circuit against freezing

#### About freeze protection

Frost can damage the system. To prevent the hydraulic components from freezing, the software is equipped with special frost protection functions, that include the activation of pump in case of low temperatures:

- Water pipe freeze prevention (see "[Water pipe freeze prevention](#)" [▶ 200]),
- Drain prevention. Only applicable when **Bivalent** is enabled ([C-02]=1). This function prevents the opening of freeze protection valves in the water piping to the outdoor unit when the auxiliary boiler is running at negative outdoor temperatures.

However, in case of a power failure, these functions cannot guarantee protection.

Do one of the following to protect the water circuit against freezing:

- Add glycol to the water. Glycol lowers the freezing point of the water.
- Install freeze protection valves. Freeze protection valves drain the water from the system before it can freeze.



#### NOTICE

If you add glycol to the water, do NOT install freeze protection valves. **Possible consequence:** Glycol leaking out of the freeze protection valves.



#### NOTICE

If you add glycol to the water, you also need to install a flow switch (EKFLSW1).

#### Freeze protection by glycol

##### About freeze protection by glycol

Adding glycol to the water lowers the freezing point of water.



#### WARNING

Ethylene glycol is toxic.

**WARNING**

Due to the presence of glycol, corrosion of the system is possible. Uninhibited glycol will turn acidic under the influence of oxygen. This process is accelerated by the presence of copper and high temperatures. The acidic uninhibited glycol attacks metal surfaces and forms galvanic corrosion cells that cause severe damage to the system. Therefore it is important that:

- the water treatment is correctly executed by a qualified water specialist,
- a glycol with corrosion inhibitors is selected to counteract acids formed by the oxidation of glycols,
- no automotive glycol is used because their corrosion inhibitors have a limited lifetime and contain silicates which can foul or plug the system,
- galvanized pipes are NOT used in glycol systems since the presence may lead to the precipitation of certain components in the glycol's corrosion inhibitor.

**NOTICE**

Glycol absorbs water from its environment. Therefore do NOT add glycol that has been exposed to air. Leaving the cap off the glycol container causes the concentration of water to increase. The glycol concentration is then lower than assumed. As a result, the hydraulic components might freeze up after all. Take preventive actions to ensure a minimal exposure of the glycol to air.

**Types of glycol**

The types of glycol that can be used depend on whether the system contains a domestic hot water tank:

If...	Then...
The system contains a domestic hot water tank	Only use propylene glycol <sup>(a)</sup>
The system does NOT contain a domestic hot water tank	You can use either propylene glycol <sup>(a)</sup> or ethylene glycol

<sup>(a)</sup> Propylene glycol, including the necessary inhibitors, classified as Category III according to EN1717.

**Required concentration of glycol**

The required concentration of glycol depends on the lowest expected outdoor temperature, and on whether you want to protect the system from bursting or from freezing. To prevent the system from freezing, more glycol is required.

Add glycol according to the table below.

Lowest expected outdoor temperature	Prevent from bursting	Prevent from freezing
−5°C	10%	15%
−10°C	15%	25%
−15°C	20%	35%
−20°C	25%	—
−25°C	30%	—
−30°C	35%	—



### INFORMATION

- Protection against bursting: the glycol will prevent the piping from bursting, but NOT the liquid inside the piping from freezing.
- Protection against freezing: the glycol will prevent the liquid inside the piping from freezing.



### NOTICE

- The required concentration might differ depending on the type of glycol. ALWAYS compare the requirements from the table above with the specifications provided by the glycol manufacturer. If necessary, meet the requirements set by the glycol manufacturer.
- The added concentration of glycol should NEVER exceed 35%.
- If the liquid in the system is frozen, the pump will NOT be able to start. Mind that if you only prevent the system from bursting, the liquid inside might still freeze.
- When water is at standstill inside the system, the system is very likely to freeze and get damaged.

### Glycol and the maximum allowed water volume

Adding glycol to the water circuit reduces the maximum allowed water volume of the system. For more information, see "[Maximum water volume](#)" [► 77].

### Glycol setting



### NOTICE

If glycol is present in the system, setting [E-0D] must be set to 1. If the glycol setting is NOT set correctly, the liquid inside the piping can freeze.


## Freeze protection by freeze protection valves

### About freeze protection valves

It is the responsibility of the installer to protect the field piping against freezing. When no glycol is added to the water, you can use freeze protection valves at all lowest points of the field piping to drain the water from the system before it can freeze.


 

### To install freeze protection valves

To protect the field piping against freezing, install the following parts:

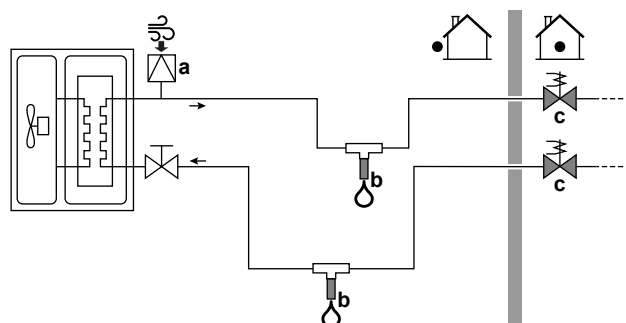

- a Automatic air intake
- b Freeze protection valve (optional – field supply)
- c Normally closed valves (recommended – field supply)



Part	Description
	An automatic air intake (for air supply) should be installed at the highest point. For example, an automatic air purge.
	Protection for the field piping. The freeze protection valves must be installed: <ul style="list-style-type: none"> <li>vertically to allow water to flow out properly and free from obstructions.</li> <li>at all lowest points of the field piping.</li> <li>in the coldest part and away from heat sources.</li> </ul> <b>Note:</b> Leave at least 15 cm clearance from the ground to prevent ice from blocking the water exit.
	Isolation of water inside the house when there is a power interruption. Normally closed valves (located indoors near the piping entry/exit points) can prevent that all water from indoor piping is drained when the freeze protection valves open. <ul style="list-style-type: none"> <li><b>When there is a power interruption:</b> The normally closed valves close and isolate the water inside the house. If the freeze protection valves open, only the water outside the house is drained.</li> <li><b>In other circumstances</b> (example: when there is a pump failure): The normally closed valves remain open. If the freeze protection valves open, the water from inside the house is also drained.</li> </ul>

**NOTICE**

When freeze protection valves are installed, set the minimum cooling setpoint (default=7°C) at least 2°C higher than the maximum opening temperature of the freeze protection valve. If lower, freeze protection valves can open during cooling operation.

## 8.2.5 To fill the water circuit

To fill the water circuit, use a field supply filling kit. Make sure you comply with the applicable legislation.

**NOTICE**

**For models with integrated backup heater:** The unit contains an automatic air purge valve on the backup heater. Make sure it is open. All automatic air purge valves in the system (in the unit, and in the field piping –if any) must remain open after commissioning.



**For other models:** The unit contains a manual air purge valve. Make sure it is closed. Only open it when performing an air purge.



## 8.2.6 To fill the domestic hot water tank

See the installation manual of the domestic hot water tank.

### 8.2.7 To insulate the water piping

The piping in the complete water circuit **MUST** be insulated to prevent condensation during cooling operation and reduction of the heating and cooling capacity.

#### Outdoor water piping insulation



#### NOTICE

**Outside piping.** Make sure the outside piping is insulated as instructed to protect against hazards.

For piping in free air, it is recommended to use the insulation thickness as shown in below table as a minimum (with  $\lambda=0.039$  W/mK).

Piping length (m)	Minimum insulation thickness (mm)
<20	19
20~30	32
30~40	40
40~50	50

For other cases the minimum insulation thickness can be determined using the Hydronic Piping Calculation tool.

The Hydronic Piping Calculation tool is part of the Heating Solutions Navigator which can be reached via <https://professional.standbyme.daikin.eu>.

Please contact your dealer if you have no access to Heating Solutions Navigator.

This recommendation ensures good operation of the unit, however, local regulations may differ and shall be followed.

# 9 Electrical installation

## In this chapter

9.1	About connecting the electrical wiring .....	87
9.1.1	Precautions when connecting the electrical wiring .....	87
9.1.2	Guidelines when connecting the electrical wiring .....	88
9.1.3	About electrical compliance .....	89
9.1.4	About preferential kWh rate power supply .....	89
9.1.5	Overview of electrical connections except external actuators .....	90
9.2	Connections to the outdoor unit .....	91
9.2.1	To connect the electrical wiring to the outdoor unit .....	96
9.2.2	To connect the main power supply .....	97
9.2.3	To connect the backup heater power supply .....	100
9.2.4	External backup heater kit .....	101
9.2.5	To connect the user interface .....	108
9.2.6	To connect the shut-off valve .....	111
9.2.7	To connect the electricity meters .....	112
9.2.8	To connect the domestic hot water pump .....	113
9.2.9	To connect the alarm output .....	113
9.2.10	To connect the space cooling/heating ON/OFF output .....	114
9.2.11	To connect the changeover to external heat source .....	115
9.2.12	To connect the power consumption digital inputs .....	116
9.2.13	To connect the safety thermostat (normally closed contact) .....	117
9.2.14	To connect a Smart Grid .....	118

## 9.1 About connecting the electrical wiring

### Before connecting the electrical wiring

Make sure the water piping is connected.

### Typical workflow

Connecting the electrical wiring typically consists of the following stages:

- "9.2 Connections to the outdoor unit" [► 91]

### 9.1.1 Precautions when connecting the electrical wiring



#### DANGER: RISK OF ELECTROCUTION



#### WARNING

ALWAYS use multicore cable for power supply cables.



#### INFORMATION

Also read the precautions and requirements in the "2 General safety precautions" [► 9].



#### WARNING

- All wiring MUST be performed by an authorised electrician and MUST comply with the applicable legislation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction MUST comply with the applicable legislation.

**WARNING**

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shock.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do NOT come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do NOT use taped wires, stranded conductor wires, extension cords, or connections from a star system. They can cause overheating, electrical shock or fire.
- Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.

**WARNING**

**Rotating fan.** Before powering ON the outdoor unit, make sure that the discharge grille covers the fan as protection against a rotating fan. See ["To install the discharge grille" \[p. 71\]](#).

**CAUTION**

Do NOT push or place redundant cable length in the unit.


**NOTICE**

The distance between the high voltage and low voltage cables should be at least 50 mm.

### 9.1.2 Guidelines when connecting the electrical wiring

Keep the following in mind:

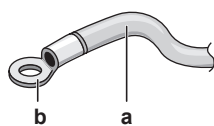


- If stranded conductor wires are used, install a round crimp-style terminal on the end of the wire. Place the round crimp-style terminal on the wire up to the covered part and fasten the terminal with the appropriate tool.



- a** Stranded conductor wire  
**b** Round crimp-style terminal

- Use the following methods for installing wires:

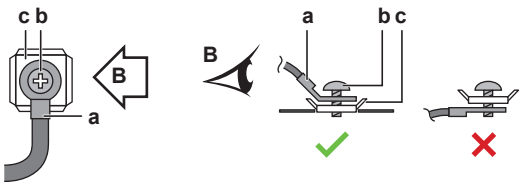Wire type	Installation method
Single-core wire	<p><b>a</b> Curled single-core wire <b>b</b> Screw <b>c</b> Flat washer</p>

Wire type	Installation method
Stranded conductor wire with round crimp-style terminal	 <p> <b>a</b> Terminal  <b>b</b> Screw  <b>c</b> Flat washer   Allowed   NOT allowed </p>

### Tightening torques

Item	Tightening torque (N•m)
X1M	2.45 ±10%
X2M	0.88 ±10%
X3M	0.88 ±10%
X4M	2.45 ±10%
X5M	0.88 ±10%
X9M	2.45 ±10%
X10M	0.88 ±10%

### 9.1.3 About electrical compliance

#### Only for EBLA09~16DAV3, EBLA09~16DA3V3, EDLA09~16DAV3 and EDLA09~16DA3V3

Equipment complying with EN/IEC 61000-3-12 (European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current >16 A and ≤75 A per phase.).

### 9.1.4 About preferential kWh rate power supply

Electricity companies throughout the world work hard to provide reliable electric service at competitive prices and are often authorized to bill clients at benefit rates. E.g. time-of-use rates, seasonal rates, Wärmepumpentarif in Germany and Austria, ...

This equipment allows for connection to such preferential kWh rate power supply delivery systems.

Consult with the electricity company acting as provider at the site where this equipment is to be installed to know whether it is appropriate to connect the equipment in one of the preferential kWh rate power supply delivery systems available, if any.

When the equipment is connected to such preferential kWh rate power supply, the electricity company is allowed to:

- interrupt power supply to the equipment for certain periods of time;

- demand that the equipment only consumes a limited amount of electricity during certain periods of time.

The hydro module of the outdoor unit is designed to receive an input signal by which the unit switches into forced off mode. At that moment, the outdoor unit compressor will not operate.


The wiring to the unit is different depending on whether the power supply is interrupted or not.

### 9.1.5 Overview of electrical connections except external actuators

This topic describes the following power supply layouts:

- Normal kWh rate power supply
- Preferential kWh rate power supply WITHOUT separate normal kWh rate power supply
- Preferential kWh rate power supply WITH separate normal kWh rate power supply

#### Normal kWh rate power supply

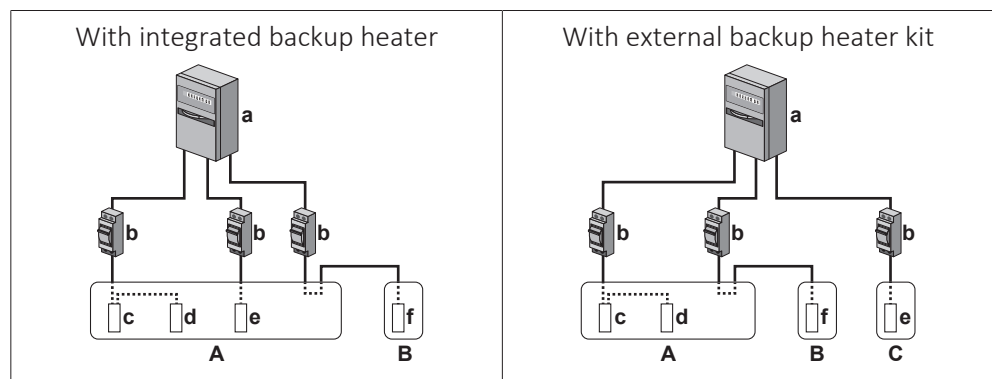


- A Outdoor unit
- B DHW tank
- C External backup heater kit
- a Electrical cabinet: **Normal kWh rate power supply**
- b Overcurrent fuse
- c Compressor module
- d Hydro module
- e Backup heater
- f Booster heater

#### Preferential kWh rate power supply WITHOUT separate normal kWh rate power supply

During preferential kWh rate power supply activation, power supply is NOT interrupted. The compressor module of the outdoor unit is turned off by the control.


**Remark:** The electricity company must always allow the power consumption of the hydro module of the outdoor unit.

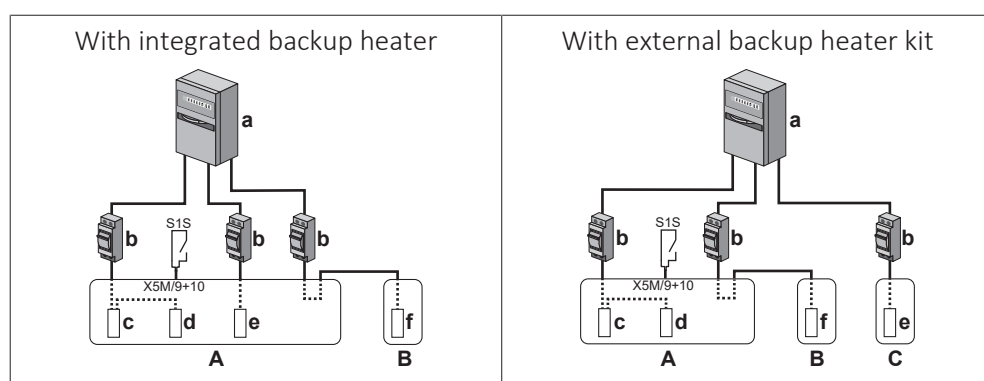

- A** Outdoor unit
- B** DHW tank
- C** External backup heater kit
- a** Electrical cabinet: **Preferential kWh rate power supply**
- b** Overcurrent fuse
- c** Compressor module
- d** Hydro module
- e** Backup heater
- f** Booster heater
- S1S** Preferential kWh rate power supply contact

### Preferential kWh rate power supply WITH separate normal kWh rate power supply

During preferential kWh rate power supply activation, power supply is interrupted immediately or after some time by the electricity company. In this case, the hydro module of the outdoor unit must be powered by a separate normal kWh rate power supply.

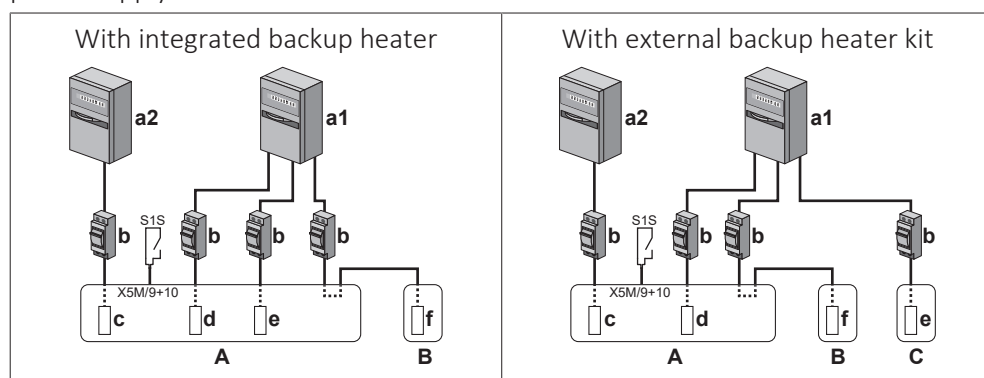




- A** Outdoor unit
- B** DHW tank
- C** External backup heater kit
- a1** Electrical cabinet: **Normal kWh rate power supply**
- a2** Electrical cabinet: **Preferential kWh rate power supply**
- b** Overcurrent fuse
- c** Compressor module
- d** Hydro module
- e** Backup heater
- f** Booster heater
- S1S** Preferential kWh rate power supply contact










## 9.2 Connections to the outdoor unit
















Item	Description
Power supply (main)	See "To connect the main power supply" [► 97].







Item	Description
Power supply (backup heater) (in case of outdoor unit with integrated backup heater)	See <a href="#">"To connect the backup heater power supply"</a> [▶ 100].
Backup heater kit + Bypass valve kit (in case of external backup heater kit)	See <a href="#">"External backup heater kit"</a> [▶ 101].
User interface	See <a href="#">"To connect the user interface"</a> [▶ 108].
Shut-off valve	See <a href="#">"To connect the shut-off valve"</a> [▶ 111].
Electricity meters	See <a href="#">"To connect the electricity meters"</a> [▶ 112].
Domestic hot water pump	See <a href="#">"To connect the domestic hot water pump"</a> [▶ 113].
Alarm output	See <a href="#">"To connect the alarm output"</a> [▶ 113].
Space cooling/heating operation control	See <a href="#">"To connect the space cooling/heating ON/OFF output"</a> [▶ 114].
Changeover to external heat source control	See <a href="#">"To connect the changeover to external heat source"</a> [▶ 115].
Power consumption digital inputs	See <a href="#">"To connect the power consumption digital inputs"</a> [▶ 116].
Safety thermostat	See <a href="#">"To connect the safety thermostat (normally closed contact)"</a> [▶ 117].
Smart Grid	See <a href="#">"To connect a Smart Grid"</a> [▶ 118].



Item	Description
Room thermostat (wired or wireless)	<div data-bbox="876 199 924 244"></div> <p><b>In case of wireless room thermostat</b>, see:</p> <ul style="list-style-type: none"> <li>Installation manual of the wireless room thermostat</li> <li>Addendum book for optional equipment</li> </ul> <p><b>In case of wired room thermostat without multi-zoning base unit</b>, see:</p> <ul style="list-style-type: none"> <li>Installation manual of the wired room thermostat</li> <li>Addendum book for optional equipment</li> </ul> <p><b>In case of wired room thermostat with multi-zoning base unit</b>, see:</p> <ul style="list-style-type: none"> <li>Installation manual of the wired room thermostat (digital or analogue) + multi-zoning base unit</li> <li>Addendum book for optional equipment</li> <li>In this case: <ul style="list-style-type: none"> <li>- You need to connect the wired room thermostat (digital or analogue) to the multi-zoning base unit</li> <li>- You need to connect the multi-zoning base unit to the outdoor unit</li> <li>- For cooling/heating operation, you also need to implement a relay (field supply, see addendum book for optional equipment)</li> </ul> </li> </ul>
	<div data-bbox="876 1214 924 1258"></div> <p>Wires: 0.75 mm<sup>2</sup> Maximum running current: 100 mA</p>
	<div data-bbox="876 1308 924 1352"></div> <p>For the main zone:</p> <ul style="list-style-type: none"> <li>[2.9] <b>Control</b></li> <li>[2.A] <b>Thermostat type</b></li> </ul> <p>For the additional zone:</p> <ul style="list-style-type: none"> <li>[3.A] <b>Thermostat type</b></li> <li>[3.9] (read-only) <b>Control</b></li> </ul>


Item	Description	
Heat pump convector		<p>There are different controllers and setups possible for the heat pump convectors.</p> <p>Depending on the setup, you also need to implement a relay (field supply, see addendum book for optional equipment).</p> <p>For more information, see:</p> <ul style="list-style-type: none"> <li>▪ Installation manual of the heat pump convectors</li> <li>▪ Installation manual of the heat pump convector options</li> <li>▪ Addendum book for optional equipment</li> </ul>
		<p>Wires: 0.75 mm<sup>2</sup></p> <p>Maximum running current: 100 mA</p>
		<p>For the main zone:</p> <ul style="list-style-type: none"> <li>▪ [2.9] <b>Control</b></li> <li>▪ [2.A] <b>Thermostat type</b></li> </ul> <p>For the additional zone:</p> <ul style="list-style-type: none"> <li>▪ [3.A] <b>Thermostat type</b></li> <li>▪ [3.9] (read-only) <b>Control</b></li> </ul>
Remote outdoor sensor		<p>See:</p> <ul style="list-style-type: none"> <li>▪ Installation manual of the remote outdoor sensor</li> <li>▪ Addendum book for optional equipment</li> </ul>
		<p>Wires: 2×0.75 mm<sup>2</sup></p>
		<p>[9.B.1]=1 (<b>External sensor = Outdoor</b>)</p> <p>[9.B.2] <b>Ext. amb. sensor offset</b></p> <p>[9.B.3] <b>Averaging time</b></p>
Remote indoor sensor		<p>See:</p> <ul style="list-style-type: none"> <li>▪ Installation manual of the remote indoor sensor</li> <li>▪ Addendum book for optional equipment</li> </ul>
		<p>Wires: 2×0.75 mm<sup>2</sup></p>
		<p>[9.B.1]=2 (<b>External sensor = Room</b>)</p> <p>[1.7] <b>Room sensor offset</b></p>

Item	Description	
Human Comfort Interface		See: <ul style="list-style-type: none"> <li>Installation and operation manual of the Human Comfort Interface</li> <li>Addendum book for optional equipment</li> </ul>
		Wires: 2×(0.75~1.25 mm <sup>2</sup> ) Maximum length: 500 m
		[2.9] <b>Control</b> [1.6] <b>Room sensor offset</b>
(in case of DHW tank) 3-way valve		See: <ul style="list-style-type: none"> <li>Installation manual of the 3-way valve</li> <li>Addendum book for optional equipment</li> </ul>
		Wires: 3×0.75 mm <sup>2</sup> Maximum running current: 100 mA
		[9.2] <b>Domestic hot water</b>
(in case of DHW tank) Domestic hot water tank thermistor		See: <ul style="list-style-type: none"> <li>Installation manual of the domestic hot water tank</li> <li>Addendum book for optional equipment</li> </ul>
		Wires: 2 The thermistor and connection wire (12 m) are delivered with the domestic hot water tank.
		[9.2] <b>Domestic hot water</b>
(in case of DHW tank) Power supply for booster heater (from outdoor unit to thermal protector of booster heater)		See: <ul style="list-style-type: none"> <li>Installation manual of the domestic hot water tank</li> <li>Addendum book for optional equipment</li> </ul>
		Wires: (2+GND)×2.5 mm <sup>2</sup>
		[9.4] <b>Booster heater</b>
(in case of DHW tank) Power supply for booster heater (from mains to outdoor unit)		See: <ul style="list-style-type: none"> <li>Installation manual of the domestic hot water tank</li> <li>Addendum book for optional equipment</li> </ul>
		Wires: 2+GND Maximum running current: 13 A
		[9.4] <b>Booster heater</b>

Item	Description	
WLAN cartridge		See: <ul style="list-style-type: none"> <li>Installation manual of the WLAN cartridge</li> <li>Installer reference guide</li> </ul>
		—
		[D] Wireless gateway
Flow switch		See installation manual of the flow switch
		Wires: 2×0.5 mm <sup>2</sup>
		—

### Location extra components


The following illustration shows the location of the extra components that you need to install on the outdoor unit when using certain option kits.

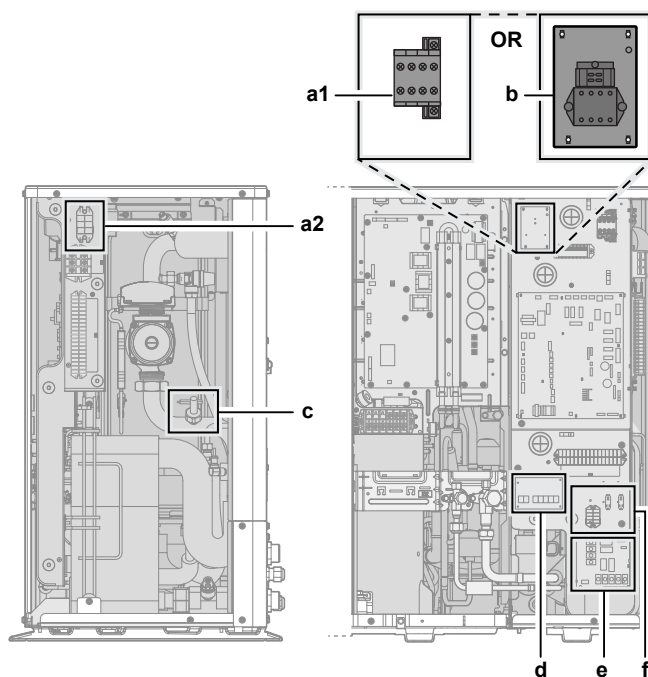


- a** Accessories in standalone domestic hot water tank (EKHWS\*D\* and EKHWSU\*D\*)
  - a1: Contactor
  - a2: Terminal block
- b** Connection kit for third-party tank with built-in thermostat (EKHY3PART2)
- c** Flow switch (EKFLSW1)
- d** Demand PCB (A8P: EKR1AHTA)
- e** Digital I/O PCB (A4P: EKR1HBAA)
- f** Smart grid relay kit (EKRELSG)

#### 9.2.1 To connect the electrical wiring to the outdoor unit

- 1 Open the service cover. See ["To open the outdoor unit"](#) [ 72].
- 2 Strip insulation (20 mm) from the wires.

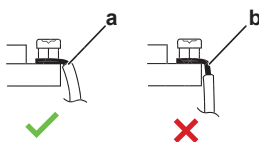

- a Strip wire end to this point
  - b An excessive strip length may cause electrical shock or leakage
- 3 Insert the cables at the back of the unit, and route them through the unit to the appropriate terminal blocks.

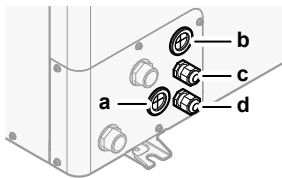

- a High voltage options
  - b Low voltage options
  - c Power supply for backup heater (in case of unit with integrated backup heater)  
Wiring for backup heater kit (in case of external backup heater kit)
  - d Unit power supply
- 4 Connect the wires to the appropriate terminals, and fix the cables with cable ties.

9.2.2 To connect the main power supply


This topic describes 2 possible ways to connect the main power supply:


- In case of normal kWh rate power supply
- In case of preferential kWh rate power supply

In case of normal kWh rate power supply

	Normal kWh rate power supply	Wires: 1N+GND, OR 3N+GND Maximum running current: Refer to name plate on unit.
	—	

- 1 Open the service cover. See "To open the outdoor unit" [ 72].
- 2 Connect as follows (1N~or 3N~ depending on model, see name plate):

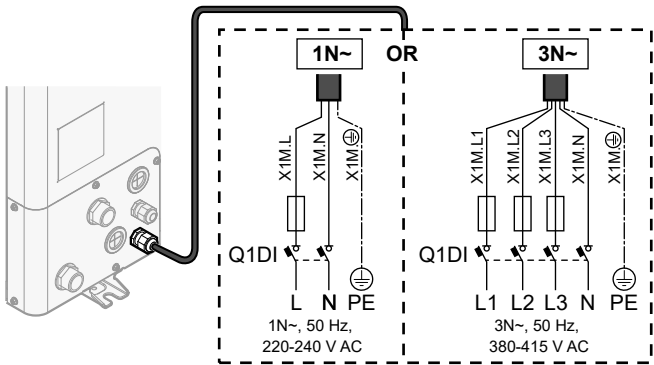

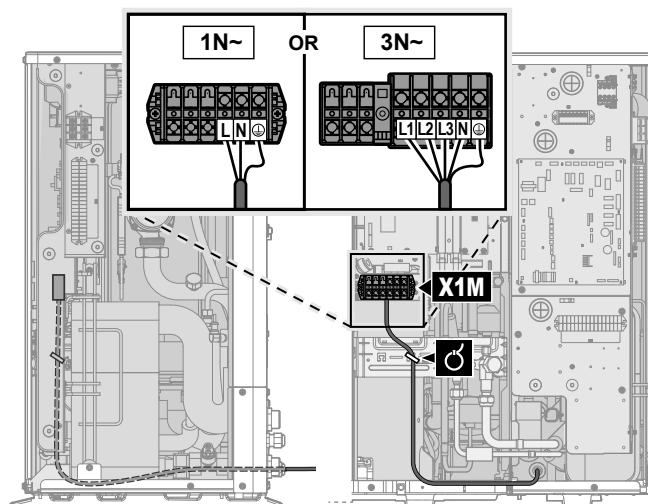



- 3 Fix the cables with cable ties to the cable tie mountings.

#### In case of preferential kWh rate power supply

	Preferential kWh rate power supply	Wires: 1N+GND, OR 3N+GND Maximum running current: Refer to name plate on unit.
	Separate normal kWh rate power supply	Wires: 1N Maximum running current: 6.3 A
	Preferential kWh rate power supply contact	Wires: 2x(0.75~1.25 mm <sup>2</sup> ) Maximum length: 50 m. Preferential kWh rate power supply contact: 16 V DC detection (voltage supplied by PCB). The voltage-free contact shall ensure the minimum applicable load of 15 V DC, 10 mA.
	[9.8] Benefit kWh power supply	

- 1 Open the service cover. See "To open the outdoor unit" [▶ 72].
- 2 Connect the preferential kWh rate power supply (1N~ or 3N~ depending on model, see name plate).

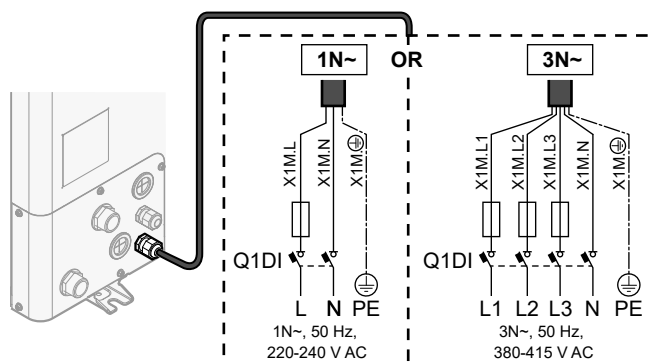

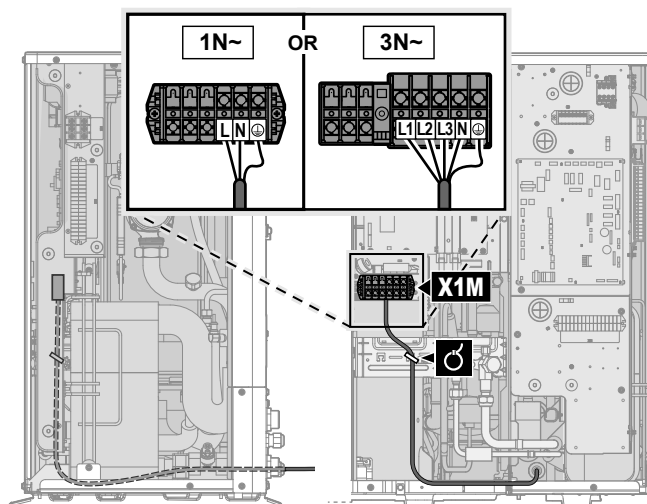



3 If necessary, connect the separate normal kWh rate power supply.




#### INFORMATION


Some types of preferential kWh rate power supply require a separate normal kWh rate power supply to the outdoor unit. This is required in the following cases:

- if the preferential kWh rate power supply is interrupted when active, OR
- if no power consumption of the hydro module of the outdoor unit is allowed at the preferential kWh rate power supply when active.

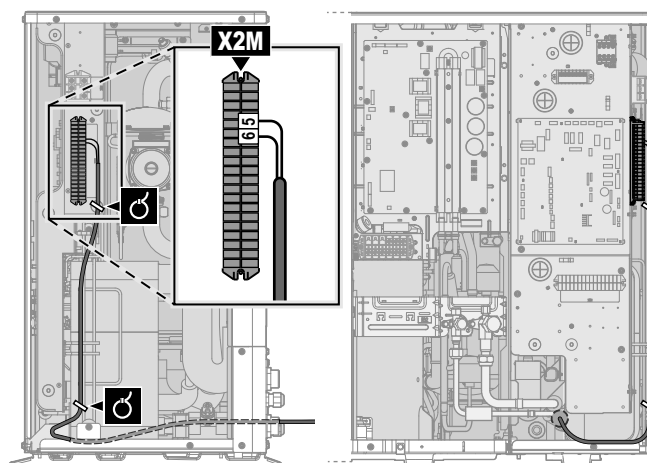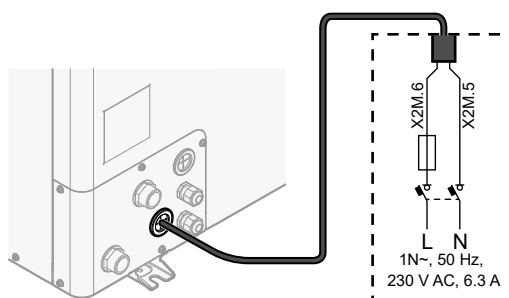


4 Connect the preferential power supply contact.

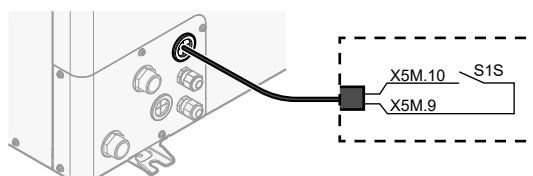

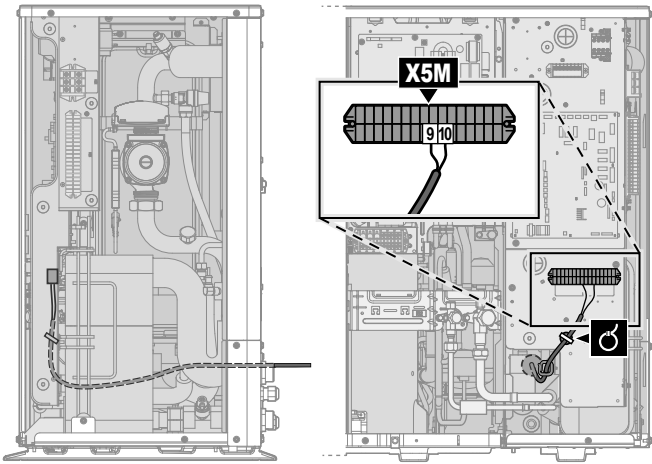

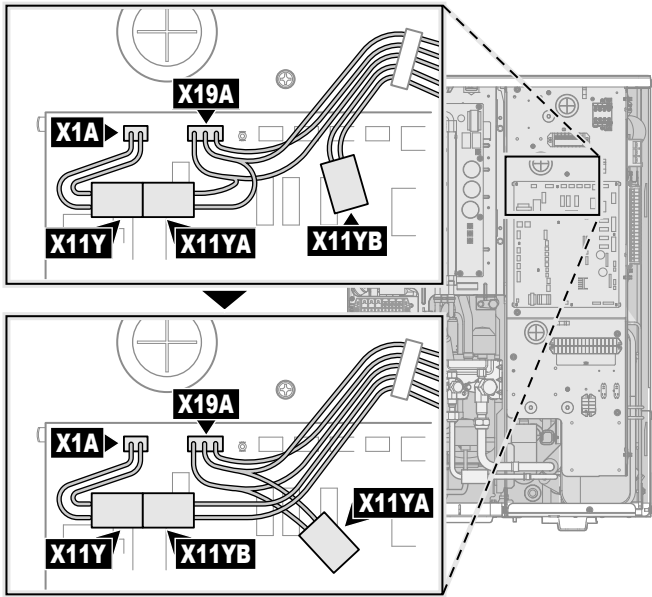

- 5 In case of a separate normal kWh rate power supply, disconnect X11Y from X11YA, and connect X11Y to X11YB.



- 6 Fix the cables with cable ties to the cable tie mountings.

9.2.3 To connect the backup heater power supply

This topic is only applicable in case of models with integrated backup heater. For instructions in case of an external backup heater kit, see ["External backup heater kit"](#) [▶ 101].

	Backup heater type	Power supply	Wires
	*3V	1N~ 230 V	2+GND
	[9.3] Backup heater		



WARNING

The backup heater **MUST** have a dedicated power supply and **MUST** be protected by the safety devices required by the applicable legislation.




**CAUTION**

To guarantee the unit is completely earthed, always connect the backup heater power supply and the earth cable.

Connect the power supply of the backup heater as follows:


- 1 Open the service cover. See ["To open the outdoor unit"](#) [▶ 72].
- 2 Connect the power supply cable (including earth) to the appropriate terminals as shown in the illustration below.

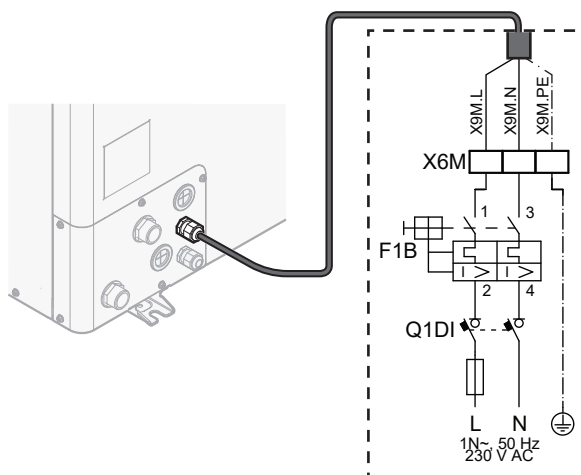

**F1B** Overcurrent fuse (field supply). Recommended fuse: 2-pole; 16 A; curve 400 V; tripping class C.

**Q1DI** Earth leakage circuit breaker (field supply)

**X6M** Terminal (field supply)

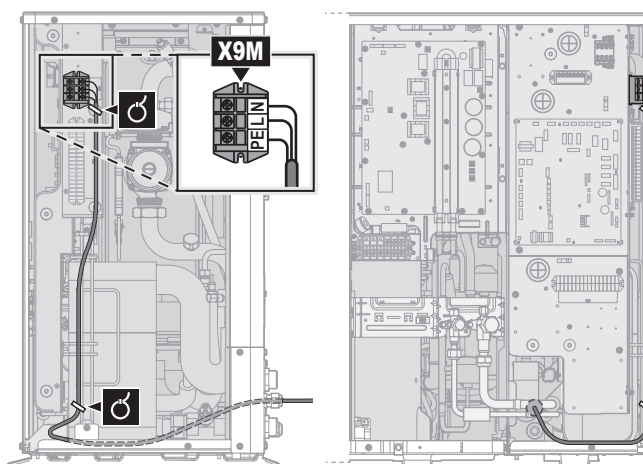

- 3 Fix the cable with cable ties to the cable tie mountings.

### 9.2.4 External backup heater kit

For models without integrated backup heater, you can install the external backup heater kit (EKLBUHCB6W1).

If you do so, then under certain conditions you also need to install a bypass valve kit (EKMBHBP1).



See:

- ["To connect the backup heater kit"](#) [▶ 102]
- ["Bypass valve kit necessity"](#) [▶ 106]
- ["To connect the bypass valve kit"](#) [▶ 107]

**To connect the backup heater kit**

The installation of the external backup heater kit is described in the installation manual of the kit. However, certain parts of it are superseded by the information described here. It concerns the following:

- To connect the backup heater kit power supply
- To connect the backup heater kit to the outdoor unit

	Wires: See installation manual of the backup heater kit
	[9.3] Backup heater

**To connect the backup heater kit power supply****CAUTION**

To guarantee the unit is completely earthed, always connect the backup heater power supply and the earth cable.

**WARNING**

The backup heater **MUST** have a dedicated power supply and **MUST** be protected by the safety devices required by the applicable legislation.





Depending on the configuration (wiring on X14M, and settings in [9.3] **Backup heater**), the backup heater capacity can vary. Make sure that the power supply is in accordance with the backup heater capacity, as listed in the table below.

Backup heater type	Backup heater capacity	Power supply	Maximum running current	$Z_{\max}(\Omega)$
*6W	3 kW	1N~ 230 V	13 A	—
	6 kW	1N~ 230 V	26 A <sup>(a)(b)</sup>	—
	6 kW	3N~ 400 V	8.6 A	—
	9 kW	3N~ 400 V	13 A	—

<sup>(a)</sup> This equipment complies with EN/IEC 61000-3-11 (European/International Technical Standard setting the limits for voltage changes, voltage fluctuations and flicker in public low-voltage supply systems for equipment with rated current  $\leq 75$  A) provided that the system impedance  $Z_{\text{sys}}$  is less than or equal to  $Z_{\max}$  at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure, by consultation with the distribution network operator if necessary, that the equipment is connected only to a supply with a system impedance  $Z_{\text{sys}}$  less than or equal to  $Z_{\max}$ .

<sup>(b)</sup> Electrical equipment complying with EN/IEC 61000-3-12 (European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current  $>16$  A and  $\leq 75$  A per phase).

- 1 Connect the backup heater power supply. A 4-pole fuse is used for F1B.
- 2 If required, modify the connection on terminal X14M.

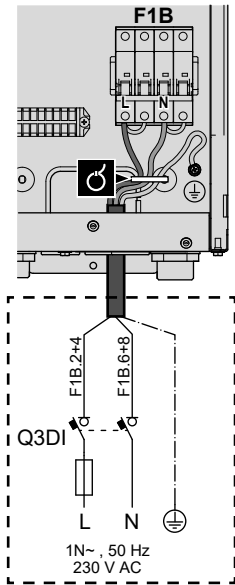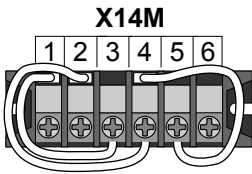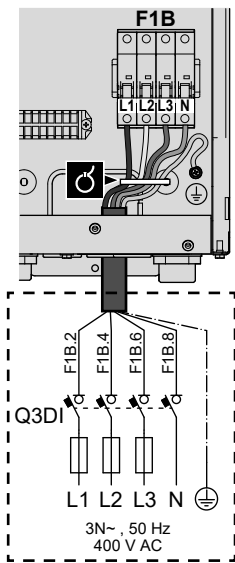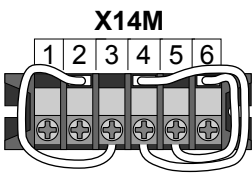Capacity – Power supply	F1B	X14M
3 kW 1N~ 230 V 6 kW 1N~ 230 V		
6 kW 3N~ 400 V 9 kW 3N~ 400 V		


### 3 Fix the cable with cable ties to the cable tie mountings.

During connection of the backup heater, miswiring is possible. To detect possible miswiring, it is highly recommended to measure the resistance value of the heater elements. Depending on the capacity and power supply, following resistance values (see table below) should be measured. ALWAYS measure the resistance on the contactor clamps K1M, K2M, and K5M.

		3 kW 1N~ 230 V	6 kW 1N~ 230 V	6 kW 3N~ 400 V	9 kW 3N~ 400 V
K1M/1	K5M/13	52.9Ω	52.9Ω	∞	∞
	K1M/3	∞	105.8Ω	105.8Ω	105.8Ω
	K1M/5	∞	158.7Ω	105.8Ω	105.8Ω
K1M/3	K1M/5	26.5Ω	52.9Ω	105.8Ω	105.8Ω


		3 kW 1N~ 230 V	6 kW 1N~ 230 V	6 kW 3N~ 400 V	9 kW 3N~ 400 V
K2M/1	K5M/13	$\infty$	26.5 $\Omega$	$\infty$	$\infty$
	K2M/3	$\infty$	$\infty$	52.9 $\Omega$	52.9 $\Omega$
	K2M/5	$\infty$	$\infty$	52.9 $\Omega$	52.9 $\Omega$
K2M/3	K2M/5	52.9 $\Omega$	52.9 $\Omega$	52.9 $\Omega$	52.9 $\Omega$
K1M/5	K2M/1	$\infty$	132.3 $\Omega$	$\infty$	$\infty$

Example measure resistance between K1M/1 and K5M/13:

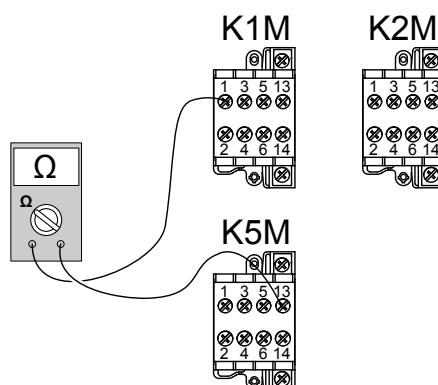

### To connect the backup heater kit to the outdoor unit

The wiring between the backup heater kit and the outdoor unit is as follows:

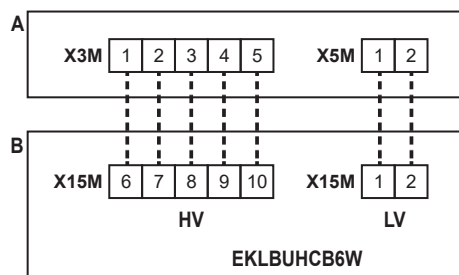


- A** Outdoor unit
- B** Backup heater kit
- HV** High voltage connections (backup heater thermal protector + backup heater connection)
- LV** Low voltage connection (backup heater thermistor)





#### NOTICE

The distance between the high voltage and low voltage cables should be at least 50 mm.


- 1** On the backup heater kit, connect the LV and HV cables to the appropriate terminals as shown in the illustration below.

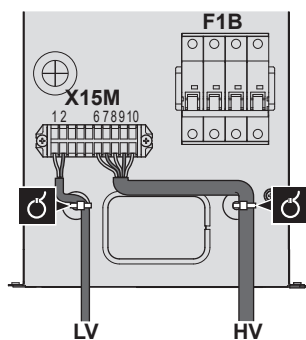


- 2** On the outdoor unit, connect the HV cable to the appropriate terminals as shown in the illustration below.

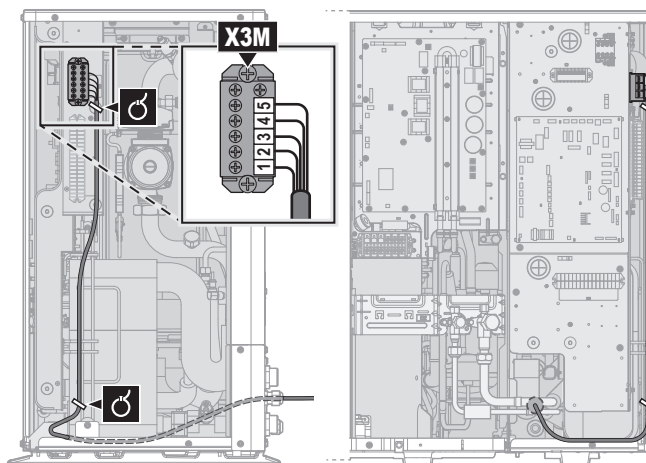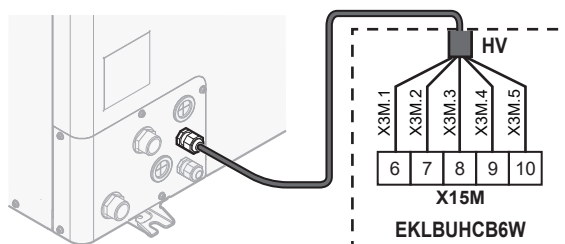

- 3** On the outdoor unit, connect the LV cable to the appropriate terminals as shown in the illustration below.

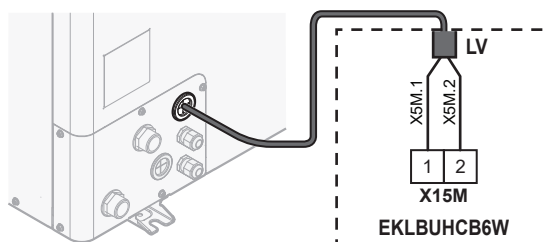


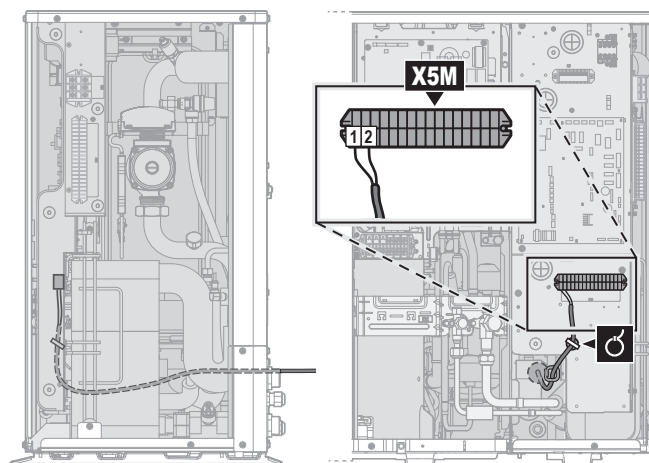

- 4 Fix the cables with cable ties to the cable tie mountings.

### Bypass valve kit necessity

For reversible systems (heating+cooling) in which an external backup heater kit is installed, the installation of valve kit EKMBHBP1 is required if condensation is expected inside the backup heater.

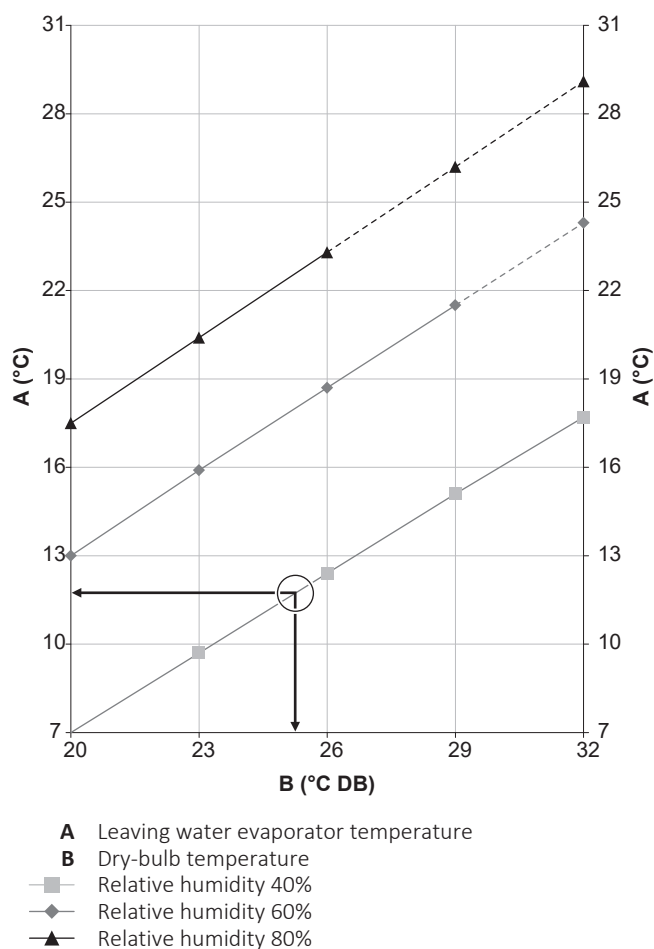

**Example:** Given are an ambient temperature of 25°C and a relative humidity of 40%. If the leaving water evaporator temperature is <12°C, condensation will occur.


**Note:** See the psychrometric chart for more information.

To connect the bypass valve kit



The information in this topic supersedes that of the instruction sheet delivered with the bypass valve kit.

	Wires: 3×0.75 mm <sup>2</sup>
	—


The components of the bypass valve kit are as follows. You only need **B** and **D**.

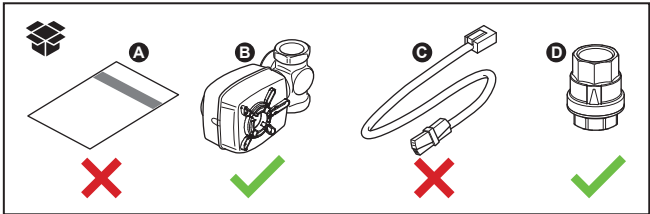


- 1 Integrate components **B** and **D** as follows in the system:

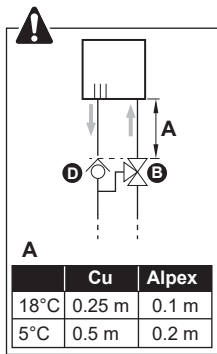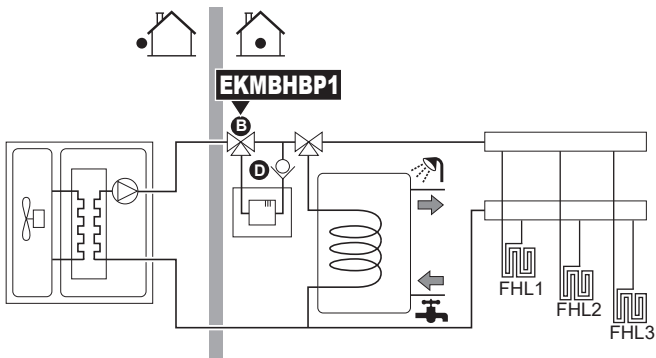

- 2 On the outdoor unit, connect **B** to the appropriate terminals as shown in the illustration below.

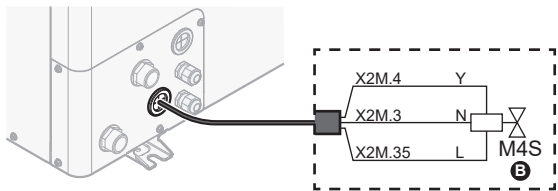

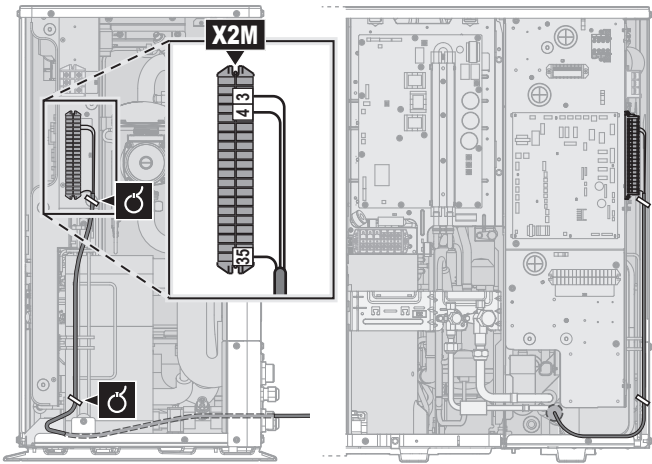

3 Fix the cable with cable ties to the cable tie mountings.

9.2.5 To connect the user interface


This topic describes the following:

- Connecting the user interface cable to the outdoor unit.
- Installing the user interface, and connecting the user interface cable to it.
- (if necessary) Opening the user interface after it is installed.

Connecting the user interface cable to the outdoor unit


	Wires: 4x(0.75~1.25 mm <sup>2</sup> ) Maximum length: 200 m
	[2.9] Control [1.6] Room sensor offset

- 1 Open the service cover. See "To open the outdoor unit" [ 72].
- 2 Connect the user interface cable to the outdoor unit. Fix the cable with cable ties to the cable tie mountings.

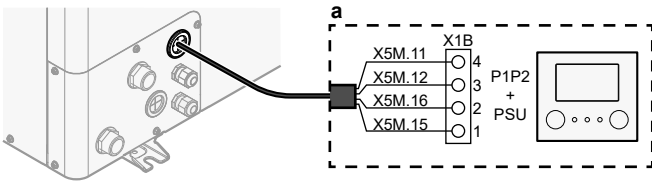


a User interface: Required for operation. Delivered with the unit as accessory.



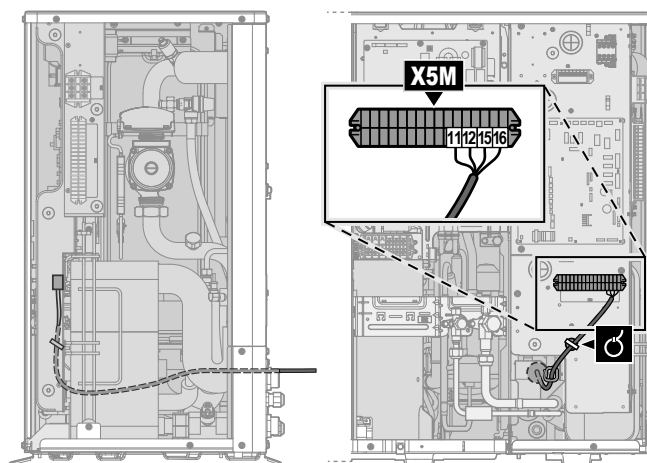

### Installing the user interface, and connecting the user interface cable to it


You need the following user interface accessories (delivered on top of the unit):

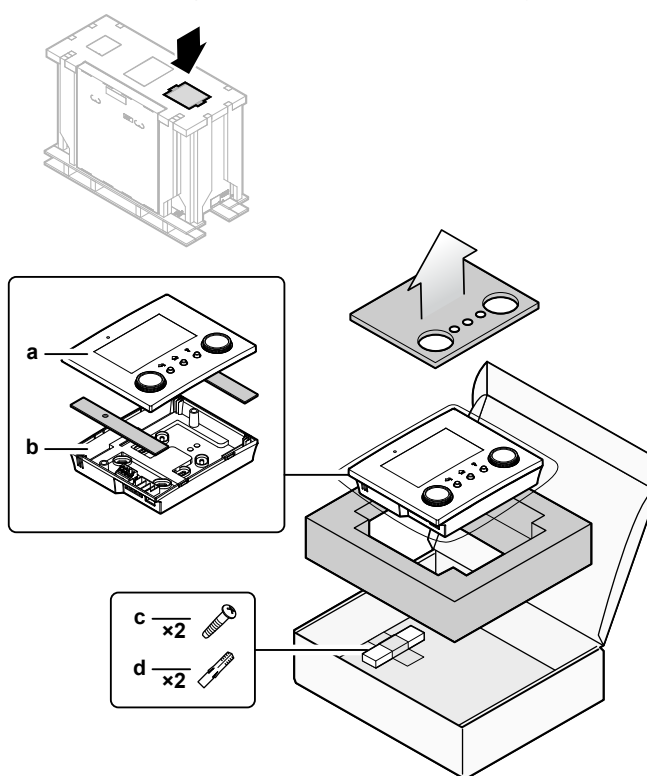

- a Front plate
- b Rear plate
- c Screws
- d Wall plugs

#### 1 Mount the rear plate to the wall.


- Use the 2 screws and wall plugs.
- Use any of the 6 holes. The holes are compatible with standard electrical box extenders of 60 mm.

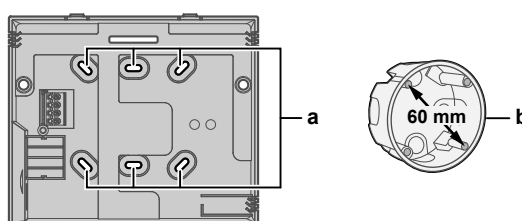

- a** Holes
- b** Electrical box extender (field supply)

## 2 Connect the user interface cable to the user interface.


- Choose one of the 4 possible wiring intakes (**a**, **b**, **c** or **d**).
- If you choose the left or right side, make a hole for the cable in the part of the casing where the casing is thinner.

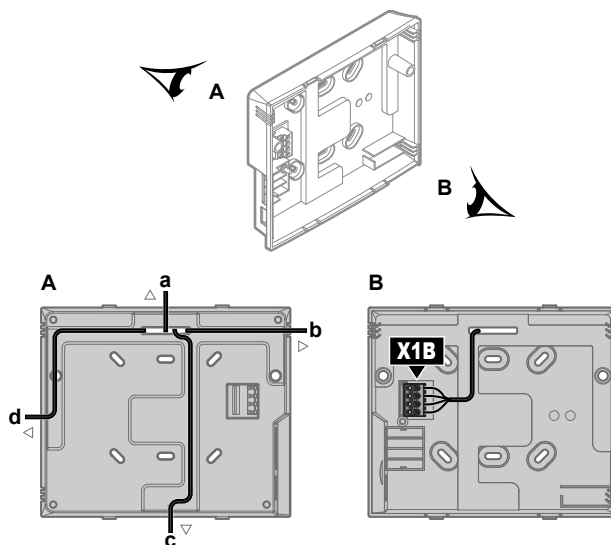

- a** Top side
- b** Left side
- c** Bottom side
- d** Right side

## 3 Mount the front plate.

- Align the positioning pins and push the front plate onto the rear plate until it moves into place with a click.
- The connector pins are automatically inserted correctly.

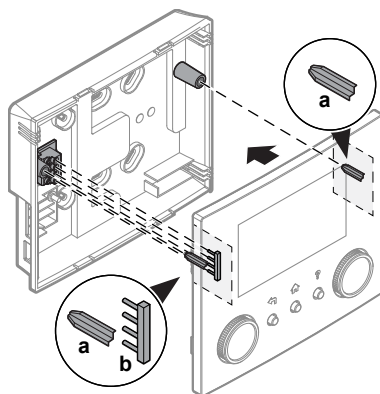


- a** Positioning pins
- b** Connector pins


## Opening the user interface after it is installed

If you need to open the user interface after it is installed, proceed as follows:

- 1 Remove the WLAN cartridge and USB memory stick (if any).

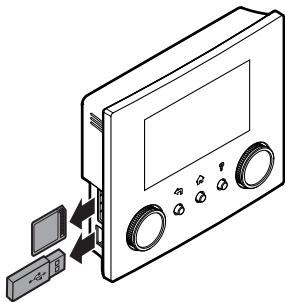

- 2 Push the rear plate on each of the 4 spots where the snap-fits are located.

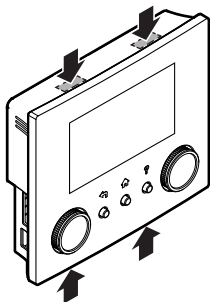

9.2.6 To connect the shut-off valve



**INFORMATION**

**Shut-off valve usage example.** In case of one LWT zone, and a combination of underfloor heating and heat pump convectors, install a shut-off valve before the underfloor heating to prevent condensation on the floor during cooling operation. For more information, see the installer reference guide.



Wires: 2×0.75 mm<sup>2</sup>  
Maximum running current: 100 mA  
230 V AC supplied by PCB




—


- 1 Open the service cover. See "[To open the outdoor unit](#)" [▶ 72].
- 2 Connect the valve control cable to the appropriate terminals as shown in the illustration below.



**NOTICE**

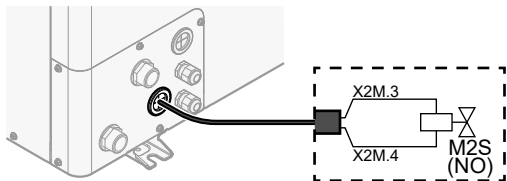

Only connect NO (normally open) valves.

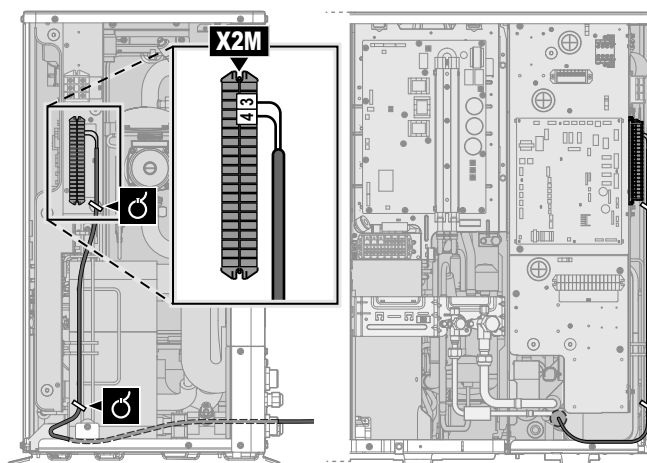



- 3 Fix the cable with cable ties to the cable tie mountings.

### 9.2.7 To connect the electricity meters


	Wires: 2 (per meter)×0.75 mm <sup>2</sup> Electricity meters: 12 V DC pulse detection (voltage supplied by PCB)
	[9.A] Energy metering



#### INFORMATION



In case of an electricity meter with transistor output, check the polarity. The positive polarity MUST be connected to X5M/6 and X5M/4; the negative polarity to X5M/5 and X5M/3.

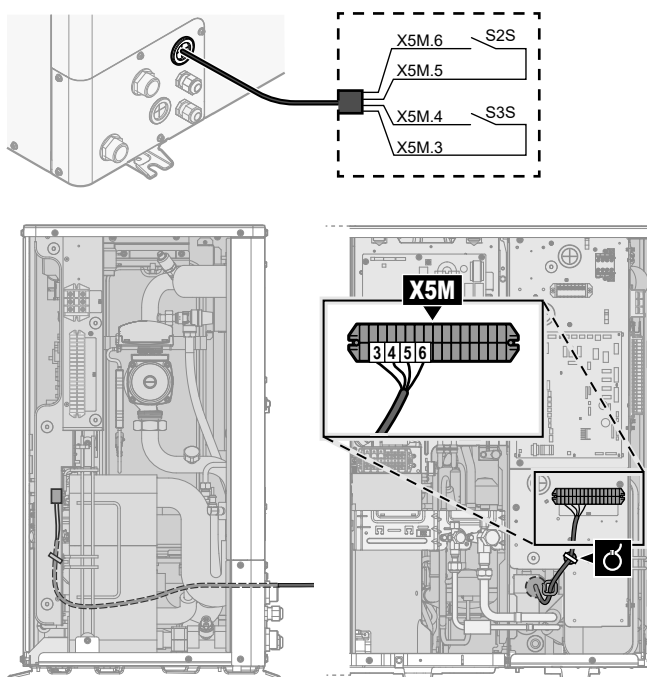- 1 Open the service cover. See ["To open the outdoor unit"](#) [ 72].
- 2 Connect the electricity meters cable to the appropriate terminals as shown in the illustration below.




- 3 Fix the cable with cable ties to the cable tie mountings.

9.2.8 To connect the domestic hot water pump



	Wires: (2+GND)×0.75 mm <sup>2</sup> DHW pump output. Maximum load: 2 A (inrush), 230 V AC, 1 A (continuous)
	[9.2.2] DHW pump [9.2.3] DHW pump schedule

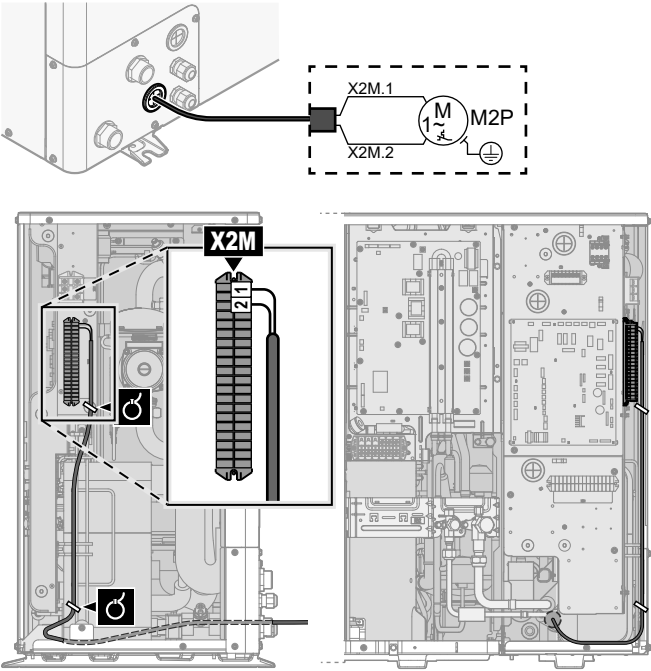- 1 Open the service cover. See ["To open the outdoor unit"](#) [▶ 72].
- 2 Connect the domestic hot water pump cable to the appropriate terminals as shown in the illustration below.





- 3 Fix the cable with cable ties to the cable tie mountings.

9.2.9 To connect the alarm output

	Wires: (2+1)×0.75 mm <sup>2</sup> Maximum load: 0.3 A, 250 V AC
	[9.D] Alarm output

- 1 Open the service cover. See ["To open the outdoor unit"](#) [▶ 72].
- 2 Connect the alarm output cable to the appropriate terminals as shown in the illustration below.

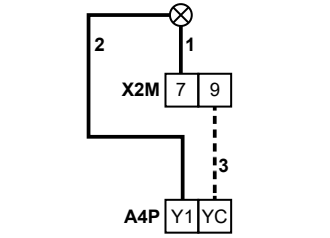	<b>1+2</b>	Wires connected to the alarm output
	<b>3</b>	Wire between X2M and A4P
	A4P	Installation of EKR1HBAA is required.

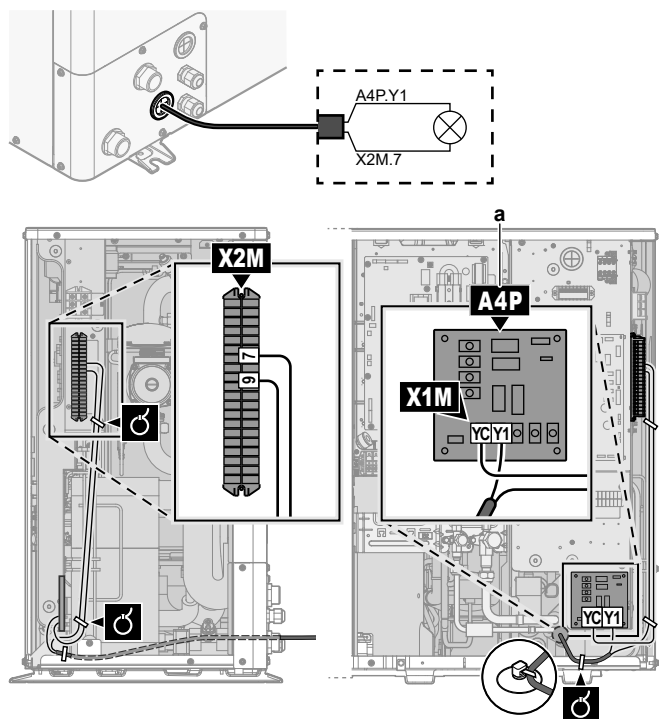

a Installation of EKR1HBAA is required.



**WARNING**

**Stripped wire.** Make sure that stripped wire cannot make contact with possible water on the bottom plate.

- 3 Fix the cable with cable ties to the cable tie mountings.

9.2.10 To connect the space cooling/heating ON/OFF output



**INFORMATION**

Cooling is only applicable in case of reversible models.




Wires: (2+1)×0.75 mm<sup>2</sup>  
Maximum load: 0.3 A, 250 V AC



—

- 1 Open the service cover. See "To open the outdoor unit" [ 72].
- 2 Connect the space cooling/heating ON/OFF output cable to the appropriate terminals as shown in the illustration below.

	<b>1+2</b>	Wires connected to the space cooling/heating ON/OFF output
	<b>3</b>	Wire between X2M and A4P
	A4P	Installation of EKR1HBAA is required.

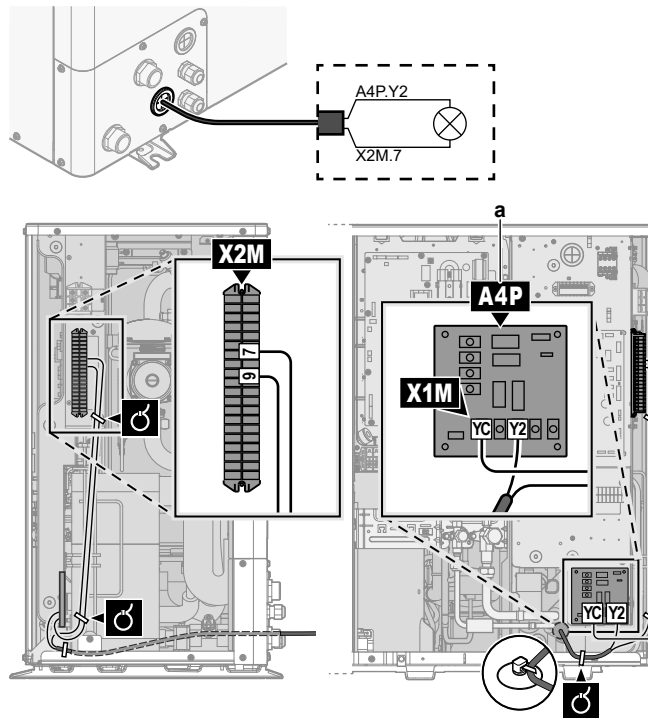

a Installation of EKR1HBAA is required.



#### WARNING


**Stripped wire.** Make sure that stripped wire cannot make contact with possible water on the bottom plate.


- 3 Fix the cable with cable ties to the cable tie mountings.

#### 9.2.11 To connect the changeover to external heat source

	<p>Wires: 2×0.75 mm<sup>2</sup></p> <p>Maximum load: 0.3 A, 250 V AC</p> <p>Minimum load: 20 mA, 5 V DC</p>
	<p>[9.C] Bivalent</p>

- 1 Open the service cover. See ["To open the outdoor unit"](#) [▶ 72].
- 2 Connect the changeover to external heat source cable to the appropriate terminals as shown in the illustration below.

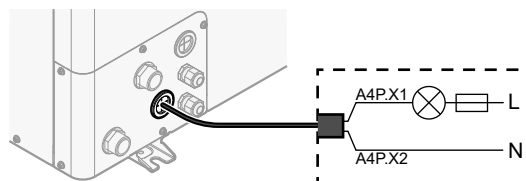

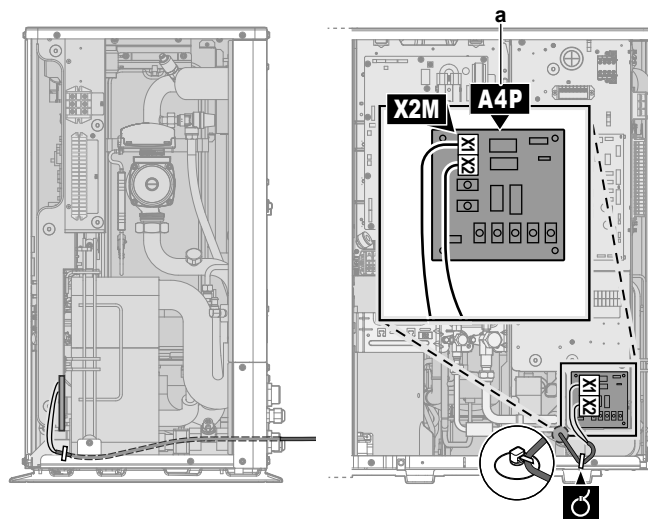




a Installation of EKR1HBAA is required.

- 3 Fix the cable with cable ties to the cable tie mountings.

### 9.2.12 To connect the power consumption digital inputs

	Wires: 2 (per input signal)×0.75 mm <sup>2</sup> Power limitation digital inputs: 12 V DC / 12 mA detection (voltage supplied by PCB)
	[9.9] Power consumption control.

- 1 Open the service cover. See ["To open the outdoor unit"](#) [▶ 72].
- 2 Connect the power consumption digital inputs cable to the appropriate terminals as shown in the illustration below.

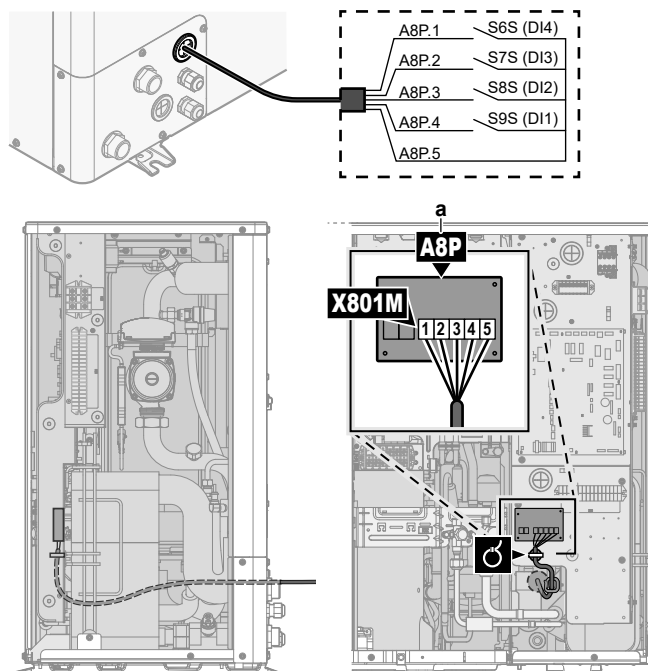



a Installation of EKR1AHTA is required.


- 3 Fix the cable with cable ties to the cable tie mountings.



## 9.2.13 To connect the safety thermostat (normally closed contact)

	<p>Wires: 2×0.75 mm<sup>2</sup></p> <p>Maximum length: 50 m</p> <p>Safety thermostat contact: 16 V DC detection (voltage supplied by PCB). The voltage-free contact shall ensure the minimum applicable load of 15 V DC, 10 mA.</p>
	—

- 1 Open the service cover. See ["To open the outdoor unit"](#) [▶ 72].
- 2 Connect the safety thermostat (normally closed) cable to the appropriate terminals as shown in the illustration below.

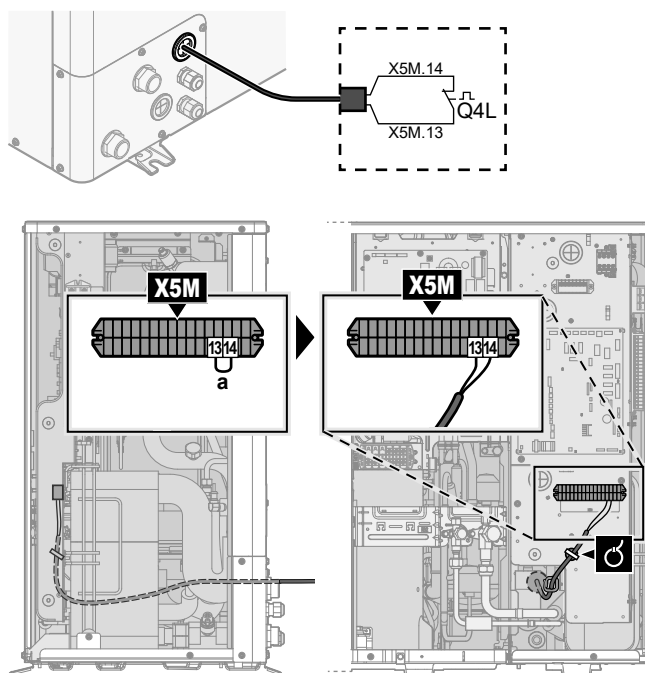

a Remove jumper

- 3 Fix the cable with cable ties to the cable tie mountings.

**NOTICE**

Make sure to select and install the safety thermostat according to the applicable legislation.

In any case, to prevent unnecessary tripping of the safety thermostat, we recommend the following:

- The safety thermostat is automatically resettable.
- The safety thermostat has a maximum temperature variation rate of 2°C/min.
- There is a minimum distance of 2 m between the safety thermostat and the motorized 3-way valve delivered with the domestic hot water tank.

**NOTICE**

**Error.** If you remove the jumper (open circuit) but do NOT connect the safety thermostat, stop error 8H-03 will occur.

## 9.2.14 To connect a Smart Grid

This topic describes 2 possible ways to connect the outdoor unit to a Smart Grid:

- In case of low voltage Smart Grid contacts
- In case of high voltage Smart Grid contacts. This requires the installation of the Smart Grid relay kit (EKRELSG).



The 2 incoming Smart Grid contacts can activate the following Smart Grid modes:

Smart Grid contact		Smart Grid operation mode
①	②	
0	0	Free running
0	1	Forced off
1	0	Recommended on
1	1	Forced on


The use of a Smart Grid pulse meter is not mandatory:

If Smart Grid pulse meter is...	Then [9.8.8] Limit setting kw is...
Used ([9.A.2] Electricity meter 2 ≠ None)	Not applicable
Not used ([9.A.2] Electricity meter 2 = None)	Applicable

## In case of low voltage Smart Grid contacts

	Wires (Smart Grid pulse meter): 0.5 mm <sup>2</sup> Wires (low voltage Smart Grid contacts): 0.5 mm <sup>2</sup>
	[9.8.4]=3 (Benefit kWh power supply = Smart grid) [9.8.5] Smart grid operation mode [9.8.6] Allow electrical heaters [9.8.7] Enable room buffering [9.8.8] Limit setting kw

The wiring of the Smart Grid in case of low voltage contacts is as follows:

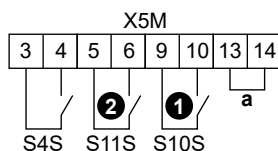


**a** Jumper (factory-mounted). If you also connect a safety thermostat (Q4L), replace the jumper with the safety thermostat wires.

**S4S** Smart Grid pulse meter (optional)

**①/S10S** Low voltage Smart Grid contact 1

**②/S11S** Low voltage Smart Grid contact 2

- 1 Open the service cover. See ["To open the outdoor unit"](#) [ 72].
- 2 Connect the wiring as follows:

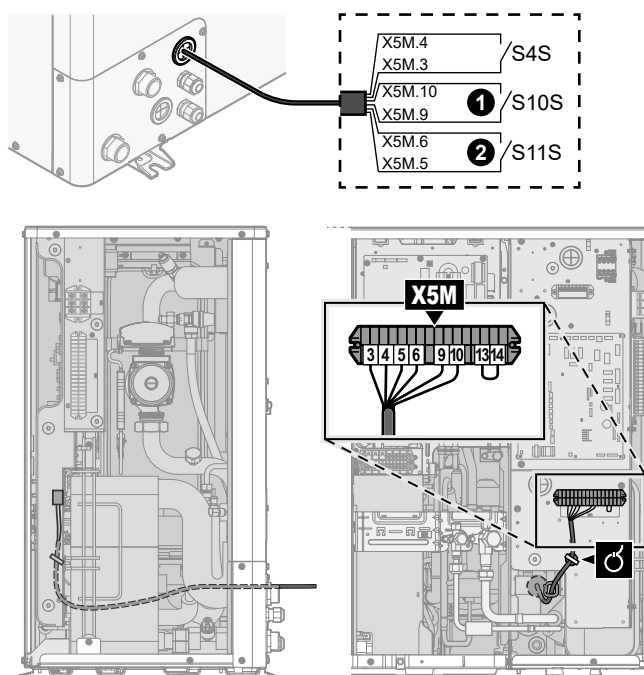


3 Fix the cables with cable ties to the cable tie mountings.

### In case of high voltage Smart Grid contacts

	Wires (Smart Grid pulse meter): 0.5 mm <sup>2</sup> Wires (high voltage Smart Grid contacts): 1 mm <sup>2</sup>
	[9.8.4]=3 (Benefit kWh power supply = Smart grid) [9.8.5] Smart grid operation mode [9.8.6] Allow electrical heaters [9.8.7] Enable room buffering [9.8.8] Limit setting kw

The wiring of the Smart Grid in case of high voltage contacts is as follows:

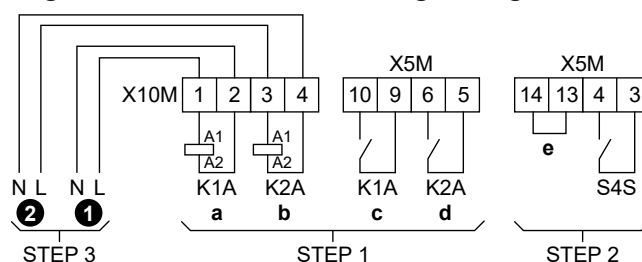

**STEP 1** Smart Grid relay kit installation

**STEP 2** Low voltage connections

**STEP 3** High voltage connections

① High voltage Smart Grid contact 1

② High voltage Smart Grid contact 2

**K1A** Relay for Smart Grid contact 1

**K2A** Relay for Smart Grid contact 2


**a, b** Coil sides of relays

**c, d** Contact sides of relays


**e** Jumper (factory-mounted). If you also connect a safety thermostat (Q4L), replace the jumper with the safety thermostat wires.

**S4S** Smart Grid pulse meter (optional)


1 Install the components of the Smart Grid relay kit as follows:

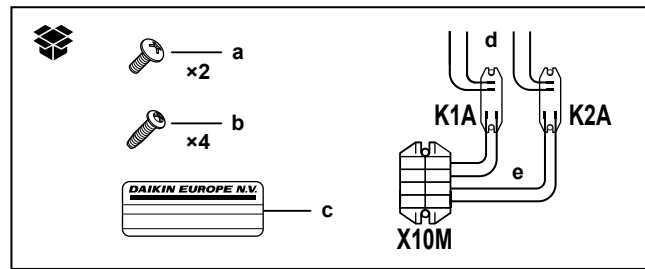


- K1A** Relay for Smart Grid contact 1  
**K2A** Relay for Smart Grid contact 2  
**X10M** Terminal block  
**a** Screws for X10M  
**b** Screws for K1A and K2A  
**c** Sticker to put on the high voltage wires  
**d** Wires between the relays and X5M (AWG22 ORG)  
**e** Wires between the relays and X10M (AWG18 RED)

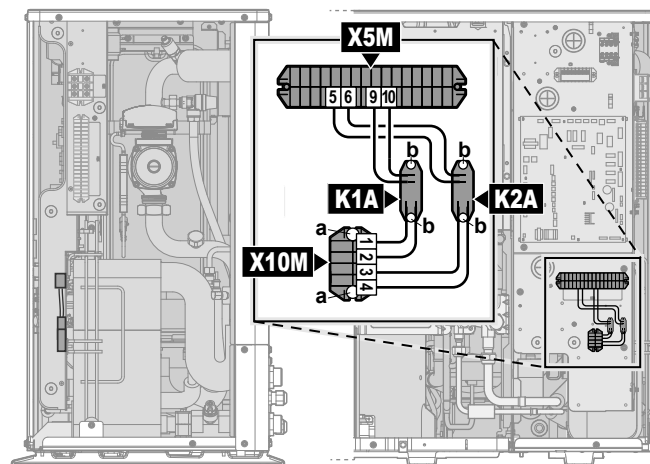


## 2 Connect the low voltage wiring as follows:

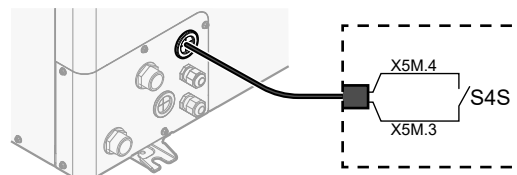


**S4S** Smart Grid pulse meter (optional)

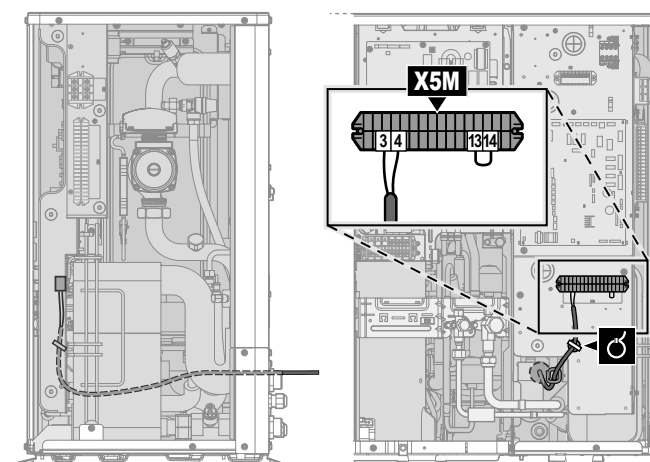

## 3 Connect the high voltage wiring as follows:

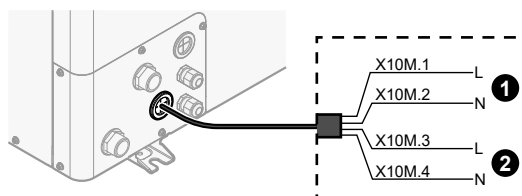

- ❶ High voltage Smart Grid contact 1
- ❷ High voltage Smart Grid contact 2

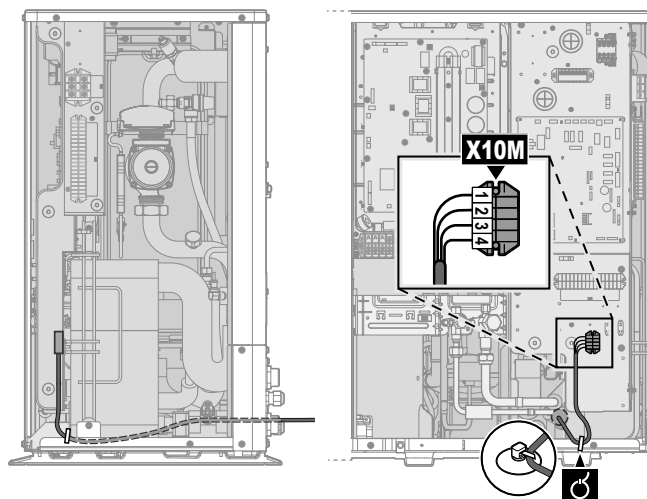

- ❹ Fix the cables with cable ties to the cable tie mountings. If necessary, bundle excessive cable length with a cable tie.

# 10 Finishing the outdoor unit installation

## 10.1 To check the insulation resistance of the compressor



### NOTICE

If, after installation, refrigerant accumulates in the compressor, the insulation resistance over the poles can drop, but if it is at least 1 MΩ, then the unit will not break down.

- Use a 500 V mega-tester when measuring insulation.
- Do NOT use a mega-tester for low voltage circuits.

- 1 Measure the insulation resistance over the poles.

If	Then
≥1 MΩ	Insulation resistance is OK. This procedure is finished.
<1 MΩ	Insulation resistance is not OK. Go to the next step.

- 2 Turn ON the power and leave it on for 6 hours.

**Result:** The compressor will heat up and evaporate any refrigerant in the compressor.

- 3 Measure the insulation resistance again.

# 11 Configuration



## INFORMATION

Cooling is only applicable in case of reversible models.

## In this chapter

11.1	Overview: Configuration.....	123
11.1.1	To access the most used commands .....	124
11.1.2	To connect the PC cable to the switch box .....	126
11.2	Configuration wizard .....	127
11.3	Possible screens .....	128
11.3.1	Possible screens: Overview .....	128
11.3.2	Home screen .....	129
11.3.3	Main menu screen .....	131
11.3.4	Menu screen.....	132
11.3.5	Setpoint screen .....	132
11.3.6	Detailed screen with values .....	133
11.4	Preset values and schedules.....	134
11.4.1	Using preset values .....	134
11.4.2	Using and programming schedules .....	134
11.4.3	Schedule screen: Example .....	138
11.4.4	Setting the energy prices .....	142
11.5	Weather-dependent curve.....	144
11.5.1	What is a weather-dependent curve?.....	144
11.5.2	2-points curve.....	144
11.5.3	Slope-offset curve .....	145
11.5.4	Using weather-dependent curves .....	147
11.6	Settings menu .....	149
11.6.1	Malfunctioning .....	149
11.6.2	Room .....	149
11.6.3	Main zone .....	154
11.6.4	Additional zone .....	163
11.6.5	Space heating/cooling.....	168
11.6.6	Tank .....	176
11.6.7	User settings.....	184
11.6.8	Information.....	188
11.6.9	Installer settings .....	189
11.6.10	Commissioning .....	214
11.6.11	Operation .....	214
11.6.12	WLAN.....	214
11.7	Menu structure: Overview user settings.....	217
11.8	Menu structure: Overview installer settings.....	219

## 11.1 Overview: Configuration

This chapter describes what you have to do and know to configure the system after it is installed.

### Why

If you do NOT configure the system correctly, it might NOT work as expected. The configuration influences the following:

- The calculations of the software
- What you can see on and do with the user interface

### How

You can configure the system via the user interface.

- **First time – Configuration wizard.** When you turn ON the user interface for the first time (via the unit), the configuration wizard starts to help you configure the system.
- **Restart the configuration wizard.** If the system is already configured, you can restart the configuration wizard. To restart the configuration wizard, go to **Installer settings > Configuration wizard**. To access **Installer settings**, see ["To access the most used commands"](#) [▶ 124].
- **Afterwards.** If necessary, you can make changes to the configuration in the menu structure or the overview settings.



#### INFORMATION

When the configuration wizard is finished, the user interface will show an overview screen and request to confirm. When confirmed, the system will restart and the home screen will be displayed.

### Accessing settings – Legend for tables

You can access the installer settings using two different methods. However, NOT all settings are accessible via both methods. If so, the corresponding table columns in this chapter are set to N/A (not applicable).

Method	Column in tables
Accessing settings via the breadcrumb in the <b>home menu screen</b> or the <b>menu structure</b> . To enable breadcrumbs, press the <b>?</b> button in the home screen.	<b>#</b> For example: [2.9]
Accessing settings via the code in the <b>overview field settings</b> .	<b>Code</b> For example: [C-07]



 
 

See also:

- ["To access the installer settings"](#) [▶ 125]
- ["11.8 Menu structure: Overview installer settings"](#) [▶ 219]

#### 11.1.1 To access the most used commands

### To change the user permission level


You can change the user permission level as follows:
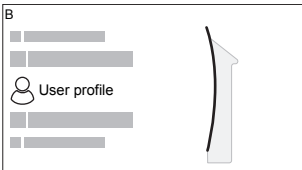
<b>1</b>	Go to [B]: <b>User profile</b> . 	
<b>2</b>	Enter the applicable pin code for the user permission level.	—
	▪ Browse through the list of digits and change the selected digit.	
	▪ Move the cursor from left to right.	
	▪ Confirm the pin code and proceed.	

### Installer pin code


The **Installer** pin code is **5678**. Additional menu items and installer settings are now available.



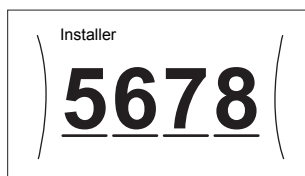


### Advanced user pin code

The **Advanced user** pin code is **1234**. Additional menu items for the user are now visible.

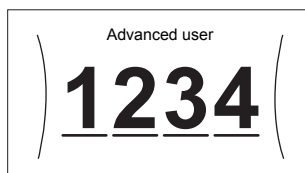

### User pin code

The **User** pin code is **0000**.

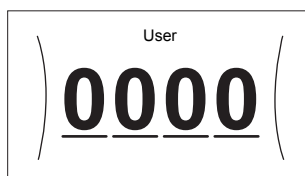



### To access the installer settings

- 1 Set the user permission level to **Installer**.
- 2 Go to [9]: **Installer settings**.

### To modify an overview setting

**Example:** Modify [1-01] from 15 to 20.

Most settings can be configured via the menu structure. If for any reason it is required to change a setting using the overview settings, then the overview settings can be accessed as follows:

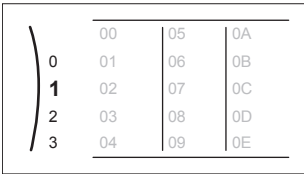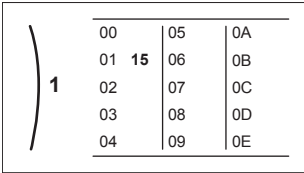1	Set the user permission level to <b>Installer</b> . See <a href="#">"To change the user permission level"</a> [▶ 124].	—
2	Go to [9.I]: <b>Installer settings &gt; Overview field settings</b> .	
3	Turn the left dial to select the first part of the setting and confirm by pressing the dial. 	
4	Turn the left dial to select the second part of the setting 	

5	Turn the right dial to modify the value from 15 to 20.	○●●●●●															
	<table border="1"> <tbody> <tr><td>00</td><td>05</td><td>0A</td></tr> <tr><td>01</td><td>20</td><td>0B</td></tr> <tr><td>02</td><td>07</td><td>0C</td></tr> <tr><td>03</td><td>08</td><td>0D</td></tr> <tr><td>04</td><td>09</td><td>0E</td></tr> </tbody> </table>	00	05	0A	01	20	0B	02	07	0C	03	08	0D	04	09	0E	
00	05	0A															
01	20	0B															
02	07	0C															
03	08	0D															
04	09	0E															
6	Press the left dial to confirm the new setting.	●●●●●○															
7	Press the center button to go back to the home screen.	⬆															

**INFORMATION**

When you change the overview settings and you go back to the home screen, the user interface will show a popup screen and request to restart the system.


When confirmed, the system will restart and recent changes will be applied.

### 11.1.2 To connect the PC cable to the switch box


This connection between PC and hydro PCB is needed when updating the hydro software and EEPROM.

**Prerequisite:** The EKPCCAB4 kit is required.

- 1 Connect the USB connector of the cable to your PC.
- 2 Connect the plug of the cable to X10A on A1P (hydro PCB).

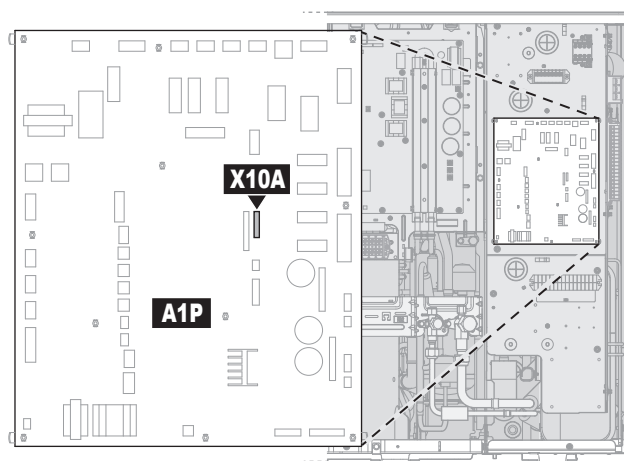

- 3 Pay special attention to the position of the plug!

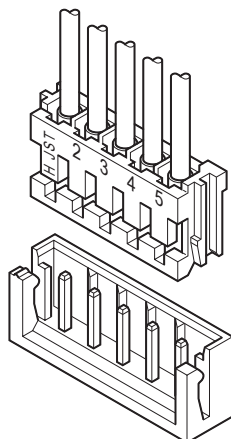

## 11.2 Configuration wizard

After first power ON of the system, the user interface will guide you using the configuration wizard. This way you can set the most important initial settings. This way the unit will be able to run properly. Afterwards, more detailed settings can be done via the menu structure if required.

You can find a short overview of the settings in the configuration here. All the settings can also be adjusted in the settings menu (use the breadcrumbs).


For the setting...		Refer to...
Language [7.1]		
Time/date [7.2]		
	Hours	—
	Minutes	
	Year	
	Month	
	Day	
System		
	Backup heater type [9.3.1]	"Installer settings" [▶ 189]
	Domestic hot water [9.2.1]	
	Emergency [9.5]	
	Number of zones [4.4]	"Space heating/cooling" [▶ 168]
	Glycol Filled system (overview field setting [E-0D])	"Installer settings" [▶ 189]
	Booster heater capacity [9.4.1] (if applicable)	
Backup heater (if applicable)		
	Voltage [9.3.2]	"Backup heater" [▶ 192]
	Configuration [9.3.3]	
	Capacity step 1 [9.3.4]	
	Additional capacity step 2 [9.3.5] (if applicable)	
Main zone		
	Emitter type [2.7]	"Main zone" [▶ 154]
	Control [2.9]	
	Setpoint mode [2.4]	
	Heating WD curve [2.5] (if applicable)	
	Cooling WD curve [2.6] (if applicable)	
	Schedule [2.1]	
	WD curve type [2.E]	

For the setting...		Refer to...
Additional zone (only if [4.4]=1)		
Emitter type [3.7]		"Additional zone" [▶ 163]
Control (read only) [3.9]		
Setpoint mode [3.4]		
Heating WD curve [3.5] (if applicable)		
Cooling WD curve [3.6] (if applicable)		
Schedule [3.1]		
WD curve type [3.C] (read only)		
Tank (if applicable)		
Heat up mode [5.6]		"Tank" [▶ 176]
Comfort setpoint [5.2]		
Eco setpoint [5.3]		
Reheat setpoint [5.4]		
Hysteresis [5.9] and [5.A]		

## 11.3 Possible screens

### 11.3.1 Possible screens: Overview


The most common screens are as follows:

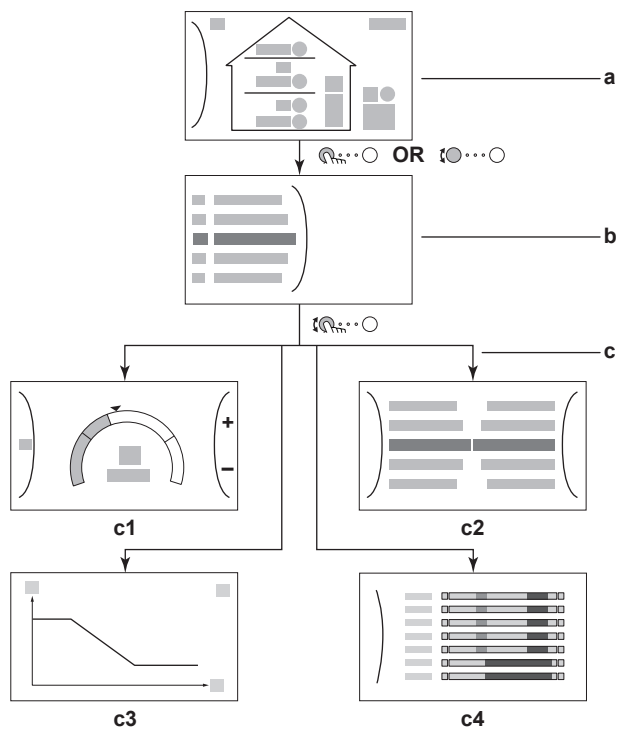




- a Home screen
- b Main menu screen






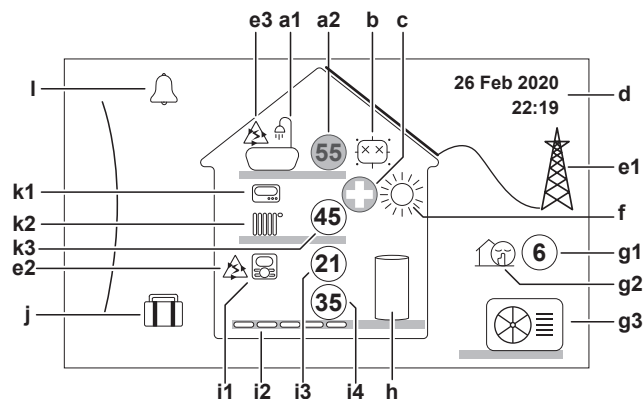 


 

- c Lower level screens:
  - c1: Setpoint screen
  - c2: Detailed screen with values
  - c3: Screen with weather-dependent curve
  - c4: Screen with schedule














 



### 11.3.2 Home screen



Press the  button to go back to the home screen. You see an overview of the unit configuration and the room and setpoint temperatures. Only symbols applicable for your configuration are visible on the home screen.



Possible actions on this screen	
	Go through the list of the main menu.
	Go to the main menu screen.
?	Enable/disable breadcrumbs.


 
Item	Description	
a	<b>Domestic hot water</b>	
	a1 	Domestic hot water
	a2 	Measured tank temperature <sup>(a)</sup>
b	<b>Disinfection / Powerful</b>	
		Disinfection mode active
		Powerful operation mode active
c	<b>Emergency</b>	
		Heat pump failure and system operates in <b>Emergency</b> mode or heat pump is forced off.
d	<b>Current date and time</b>	
e	<b>Smart energy</b>	
	e1 	Smart energy is available via solar panels or smart grid.
	e2 	Smart energy is currently being used for space heating.
	e3 	Smart energy is currently being used for domestic hot water.
f	<b>Space operation mode</b>	
		Cooling
		Heating


Item		Description
<b>g</b>	<b>Outdoor / quiet mode</b>	
	<b>g1</b>	 Measured outdoor temperature <sup>(a)</sup>
	<b>g2</b>	 Quiet mode active
	<b>g3</b>	 Outdoor unit
<b>h</b>	<b>Domestic hot water tank</b>	
		Standalone tank installed
<b>i</b>	<b>Main zone</b>	
	<b>i1</b>	Installed room thermostat type:
		 Unit operation is decided based on the ambient temperature of the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat).
		 Unit operation is decided by the external room thermostat (wired or wireless).
		— No room thermostat installed or set. Unit operation is decided based on the leaving water temperature regardless of the actual room temperature and/or heating demand of the room.
	<b>i2</b>	Installed heat emitter type:
		 Underfloor heating
		 Fancoil unit
		 Radiator
	<b>i3</b>	 Measured room temperature <sup>(a)</sup>
	<b>i4</b>	 Leaving water temperature setpoint <sup>(a)</sup>
<b>j</b>	<b>Holiday mode</b>	
		Holiday mode active
<b>k</b>	<b>Additional zone</b>	
	<b>k1</b>	Installed room thermostat type:
		 Unit operation is decided by the external room thermostat (wired or wireless).
		— No room thermostat installed or set. Unit operation is decided based on the leaving water temperature regardless of the actual room temperature and/or heating demand of the room.
	<b>k2</b>	Installed heat emitter type:
		 Underfloor heating
		 Fancoil unit
		 Radiator
	<b>k3</b>	 Leaving water temperature setpoint <sup>(a)</sup>

Item	Description
I	<b>Malfunction</b>
	 A malfunction occurred.
	 See "To display the help text in case of a malfunction" [▶ 241] for more information.



<sup>(a)</sup> If the corresponding operation (for example: space heating) is not active, the circle is greyed out.


 


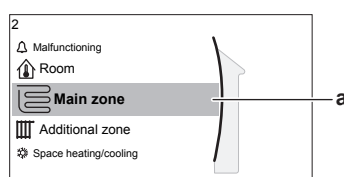

### 11.3.3 Main menu screen









Starting from the home screen, press () or turn () the left dial to open the main menu screen. From the main menu, you can access the different setpoint screens and submenus.




a Selected submenu

Possible actions on this screen	
	Go through the list.
	Enter the submenu.
?	Enable/disable breadcrumbs.


Submenu		Description
[0]	 or  <b>Malfunctioning</b>	<b>Restriction:</b> Only displayed if a malfunction occurs.  See "To display the help text in case of a malfunction" [▶ 241] for more information.
[1]	 <b>Room</b>	<b>Restriction:</b> Only displayed if a dedicated Human Comfort Interface (BRC1HHDA used as room thermostat) is controlling the outdoor unit.  Set the room temperature.
[2]	 <b>Main zone</b>	Shows the applicable symbol for your main zone emitter type.  Set the leaving water temperature for the main zone.
[3]	 <b>Additional zone</b>	<b>Restriction:</b> Only displayed if there are two leaving water temperature zones. Shows the applicable symbol for your additional zone emitter type.  Set the leaving water temperature for the additional zone (if present).
[4]	 <b>Space heating/cooling</b>	Shows the applicable symbol of your unit.  Put the unit in heating mode or cooling mode. You cannot change the mode on heating only models.



Submenu		Description
[5]	 Tank	Set the domestic hot water tank temperature.
[7]	 User settings	Gives access to user settings such as holiday mode and quiet mode.
[8]	 Information	Displays data and information about the outdoor unit.
[9]	 Installer settings	<b>Restriction:</b> Only for the installer. Gives access to advanced settings.
[A]	 Commissioning	<b>Restriction:</b> Only for the installer. Perform tests and maintenance.
[B]	 User profile	Change the active user profile.
[C]	 Operation	Turn heating/cooling functionality and domestic hot water preparation on or off.
[D]	 Wireless gateway	<b>Restriction:</b> Only displayed if a wireless LAN (WLAN) is installed. Contains settings needed when configuring the Daikin Residential Controller app.

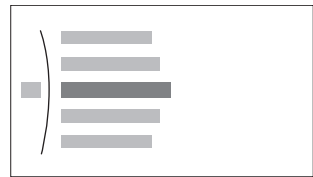11.3.4 Menu screen

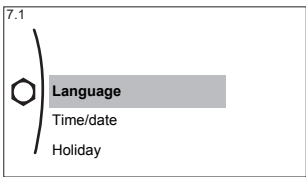

**Example:**




Possible actions on this screen	
	Go through the list.
	Enter the submenu/setting.

11.3.5 Setpoint screen


The setpoint screen is displayed for screens describing system components that need a setpoint value.

Examples

[1] Room temperature screen

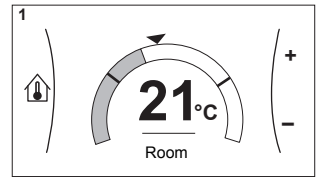


[2] Main zone screen

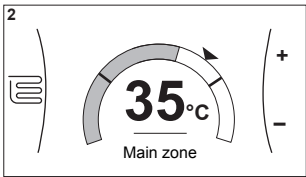





[3] Additional zone screen

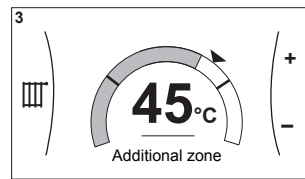

[5] Tank temperature screen

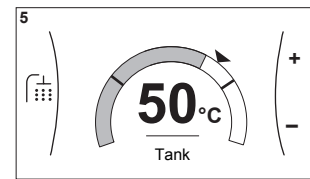

### Explanation

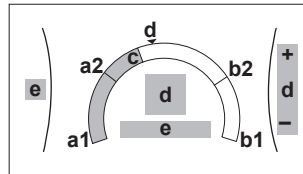


#### Possible actions on this screen

	Go through the list of the submenu.
	Go to the submenu.
	Adjust and automatically apply the desired temperature.


Item	Description	
Minimum temperature limit	<b>a1</b>	Fixed by the unit
	<b>a2</b>	Restricted by the installer
Maximum temperature limit	<b>b1</b>	Fixed by the unit
	<b>b2</b>	Restricted by the installer
Current temperature	<b>c</b>	Measured by the unit
Desired temperature	<b>d</b>	Turn the right dial to increase/decrease.
Submenu	<b>e</b>	Turn or press the left dial to go to the submenu.

### 11.3.6 Detailed screen with values

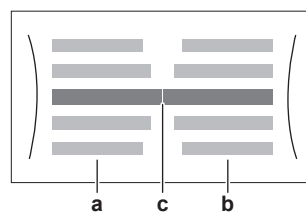

- a** Settings
- b** Values
- c** Selected setting and value

#### Example:

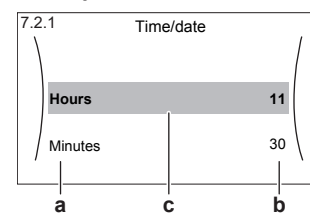

#### Possible actions on this screen

	Go through the list of settings.
	Change the value.
	Go to the next setting.
	Confirm changes and proceed.

## 11.4 Preset values and schedules

### 11.4.1 Using preset values

#### About preset values

For some settings in the system, you can define preset values. You only need to set these values one time, then reuse the values in other screens such as the scheduling screen. If you later want to change the value, you only have to do it in one place.

#### Possible preset values

You can set the following user-defined preset values:

Preset value		Where used
Tank temperatures under [5] <b>Tank</b>  <b>Restriction:</b> Only applicable if a DHW tank is present.	[5.2] <b>Comfort setpoint</b>	You can use these preset values in [5.5] <b>Schedule</b> (weekly schedule screen for the DHW tank) if the DHW tank mode is one of the following: <ul style="list-style-type: none"> <li>▪ <b>Schedule only</b></li> <li>▪ <b>Schedule + reheat</b></li> </ul>
	[5.3] <b>Eco setpoint</b>	
	[5.4] <b>Reheat setpoint</b>	The software uses this preset value if the DHW tank mode is <b>Schedule + reheat</b> .
Electricity prices under [7.5] <b>User settings &gt; Electricity price</b>  <b>Restriction:</b> Only applicable if <b>Bivalent</b> is enabled by the installer.	[7.5.1] <b>High</b>	You can use these preset values in [7.5.4] <b>Schedule</b> (weekly schedule screen for the energy prices).  See " <a href="#">Setting the energy prices</a> " [▶ 142].
	[7.5.2] <b>Medium</b>	
	[7.5.3] <b>Low</b>	

Additional to the user-defined preset values, the system also contains some system-defined preset values that you can use when programming schedules.

**Example:** In [7.4.2] **User settings > Quiet > Schedule** (weekly schedule for when the unit has to use which quiet mode level), you can use the following system-defined preset values: **Quiet/More quiet/Most quiet**.

### 11.4.2 Using and programming schedules



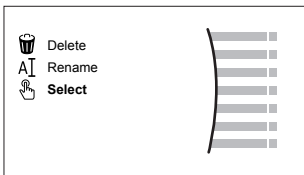


#### About schedules

Depending on your system layout and installer configuration, schedules for multiple controls may be available.

You can...	See...
Set if a specific control needs to act according to a schedule.	" <b>Activation screen</b> " in " <a href="#">Possible schedules</a> " [▶ 135]
Select which schedule you currently want to use for a specific control. The system contains some predefined schedules. You can:	

You can...	See...
Consult which schedule is currently selected.	" <b>Schedule/Control</b> " in " <a href="#">Possible schedules</a> " [ <a href="#">▶ 135</a> ]
Select another schedule if needed.	" <a href="#">To select which schedule you currently want to use</a> " [ <a href="#">▶ 135</a> ]
Program your own schedules if the predefined schedules are not satisfactory. The actions you can program are control specific.	<ul style="list-style-type: none"> <li>"<b>Possible actions</b>" in "<a href="#">Possible schedules</a>" [<a href="#">▶ 135</a>]</li> <li>"<a href="#">Schedule screen: Example</a>" [<a href="#">▶ 138</a>]</li> </ul>
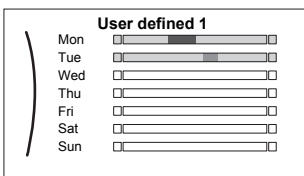
### To select which schedule you currently want to use

1	Go to the schedule for the specific control. See " <b>Schedule/Control</b> " in " <a href="#">Possible schedules</a> " [ <a href="#">▶ 135</a> ]. <b>Example:</b> For the schedule for the desired room temperature in heating mode, go to [1.2] <b>Room &gt; Heating schedule</b> .	
2	Select the name of the current schedule. 	
3	Select <b>Select</b> . 	
4	Select the schedule that you currently want to use.	

### Possible schedules

The table contains the following information:


- **Schedule/Control:** This column shows you where you can consult the currently selected schedule for the specific control. If needed, you can:
  - Select another schedule. See "[To select which schedule you currently want to use](#)" [[▶ 135](#)].
  - Program your own schedule. See "[Schedule screen: Example](#)" [[▶ 138](#)].
- **Predefined schedules:** Number of available predefined schedules in the system for the specific control. If needed, you can program your own schedule.
- **Activation screen:** For most controls, a schedule is only effective if it activated in its corresponding activation screen. This entry shows you where to activate it.
- **Possible actions:** Actions you can use when programming a schedule. For most schedules, you can program up to 6 actions per day.

Schedule/Control	Description
<b>[1.2] Room &gt; Heating schedule</b> Schedule for the desired room temperature in heating mode.	<b>Predefined schedules:</b> 3 <b>Activation screen:</b> [1.1] Schedule <b>Possible actions:</b> Temperatures within range.
<b>[1.3] Room &gt; Cooling schedule</b> Schedule for the desired room temperature in cooling mode.	<b>Predefined schedules:</b> 1 <b>Activation screen:</b> [1.1] Schedule <b>Possible actions:</b> Temperatures within range.
<b>[2.2] Main zone &gt; Heating schedule</b> Schedule for the desired leaving water temperature for the main zone in heating mode.	<b>Predefined schedules:</b> 3 <b>Activation screen:</b> [2.1] Schedule <b>Possible actions:</b> <ul style="list-style-type: none"> <li>In case of weather-dependent: Shift temperatures within range.</li> <li>Otherwise: Temperatures within range</li> </ul>
<b>[2.3] Main zone &gt; Cooling schedule</b> Schedule for the desired leaving water temperature for the main zone in cooling mode.	<b>Predefined schedules:</b> 1 <b>Activation screen:</b> [2.1] Schedule <b>Possible actions:</b> <ul style="list-style-type: none"> <li>In case of weather-dependent: Shift temperatures within range.</li> <li>Otherwise: Temperatures within range</li> </ul>
<b>[3.2] Additional zone &gt; Heating schedule</b> Schedule for when the system is allowed to heat up the additional zone in heating mode.	<b>Predefined schedules:</b> 1 <b>Activation screen:</b> [3.1] Schedule <b>Possible actions:</b> <ul style="list-style-type: none"> <li><b>Off:</b> When the system is NOT allowed to heat up the additional zone.</li> <li><b>On:</b> When the system is allowed to heat up the additional zone.</li> </ul>
<b>[3.3] Additional zone &gt; Cooling schedule</b> Schedule for when the system is allowed to cool down the additional zone in cooling mode.	<b>Predefined schedules:</b> 1 <b>Activation screen:</b> [3.1] Schedule <b>Possible actions:</b> <ul style="list-style-type: none"> <li><b>Off:</b> When the system is NOT allowed to cool down the additional zone.</li> <li><b>On:</b> When the system is allowed to cool down the additional zone.</li> </ul>
<b>[4.2] Space heating/cooling &gt; Operation mode schedule</b> Schedule (per month) for when to operate the unit in heating mode and when in cooling mode.	See <a href="#">"To set the space operation mode"</a> [▶ 169].

Schedule/Control	Description
<p>[5.5] Tank &gt; Schedule</p> <p>Schedule for the domestic hot water tank temperature for your normal domestic hot water needs.</p>	<p><b>Predefined schedules:</b> 1</p> <p><b>Activation screen:</b> Not applicable. This schedule is automatically activated if the DHW mode is one of the following:</p> <ul style="list-style-type: none"> <li>▪ Schedule only</li> <li>▪ Schedule + reheat</li> </ul> <p><b>Possible actions:</b></p> <ul style="list-style-type: none"> <li>▪ <b>Comfort:</b> When to start heating the tank to the user-defined preset value [5.2] <b>Comfort setpoint</b>.</li> <li>▪ <b>Eco:</b> When to start heating the tank to the user-defined preset value [5.3] <b>Eco setpoint</b>.</li> <li>▪ <b>Stop:</b> When to stop heating the tank, even if the desired tank temperature is not reached yet.</li> </ul> <p><b>Note:</b> In <b>Schedule + reheat</b> mode, the system also takes the user-defined preset value [5.4] <b>Reheat setpoint</b> into account.</p>
<p>[7.4.2] User settings &gt; Quiet &gt; Schedule</p> <p>Schedule for when the unit has to use which quiet mode level.</p>	<p><b>Predefined schedules:</b> 1</p> <p><b>Activation screen:</b> [7.4.1] <b>Activation</b> (only available to installers).</p> <p><b>Possible actions:</b> You can use the following system-defined preset values:</p> <ul style="list-style-type: none"> <li>▪ Quiet</li> <li>▪ More quiet</li> <li>▪ Most quiet</li> </ul> <p>See <a href="#">"About quiet mode"</a> [▶ 185].</p>
<p>[7.5.4] User settings &gt; Electricity price &gt; Schedule</p> <p>Schedule for when a certain electricity tariff is valid.</p>	<p><b>Predefined schedules:</b> 1</p> <p><b>Activation screen:</b> Not applicable</p> <p><b>Possible actions:</b> You can use the following system-defined preset values:</p> <ul style="list-style-type: none"> <li>▪ High</li> <li>▪ Medium</li> <li>▪ Low</li> </ul> <p>See <a href="#">"Setting the energy prices"</a> [▶ 142].</p>
<p><b>Restriction:</b> Only available to installers.</p> <p>[9.4.2] Installer settings &gt; Booster heater &gt; BSH allowance schedule</p>	<p><b>Predefined schedules:</b> 1</p> <p><b>Activation screen:</b> Not applicable</p> <p><b>Possible actions:</b> You can program 2 actions per day.</p> <ul style="list-style-type: none"> <li>▪ <b>Off:</b> Booster heater operation NOT allowed.</li> <li>▪ <b>On:</b> Booster heater operation allowed.</li> </ul>

11.4.3 Schedule screen: Example

This example shows how to set a room temperature schedule in heating mode for the main zone.




**INFORMATION**

The procedures to program other schedules are similar.

To program the schedule: overview


 

**Example:** You want to program the following schedule:

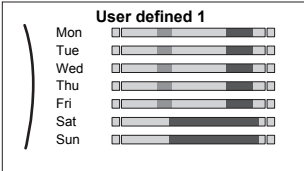






**Prerequisite:** The room temperature schedule is only available if room thermostat control is active. If leaving water temperature control is active, you can program the main zone schedule instead.

- 1 Go to the schedule.
- 2 (optional) Clear the content of the whole week schedule or the content of a selected day schedule.
- 3 Program the schedule for **Monday**.
- 4 Copy the schedule to the other weekdays.
- 5 Program the schedule for **Saturday** and copy it to **Sunday**.
- 6 Give the schedule a name.




To go to the schedule

1	Go to [1.1]: <b>Room &gt; Schedule</b> .	
2	Set scheduling to <b>Yes</b> .	
3	Go to [1.2]: <b>Room &gt; Heating schedule</b> .	

 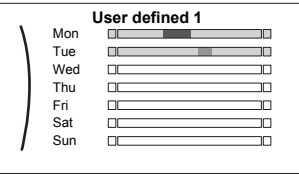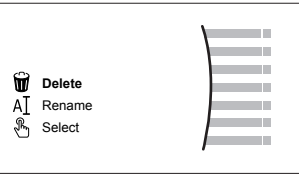   
 



To clear the content of the week schedule

1	Select the name of the current schedule. <div></div>	
2	Select <b>Delete</b> . <div></div>	
3	Select <b>OK</b> to confirm.	


 

 


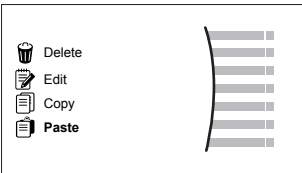
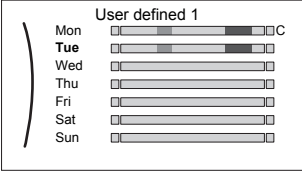

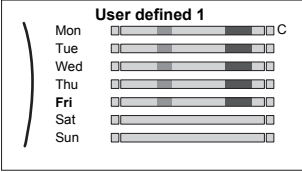
### To clear the content of a day schedule

1	Select the day of which you want to clear the content. For example <b>Friday</b>	
2	Select <b>Delete</b> .	
3	Select <b>OK</b> to confirm.	



### To program the schedule for Monday

1	Select <b>Monday</b> .	
2	Select <b>Edit</b> .	
3	Use the left dial to select an entry and edit the entry with the right dial. You can program up to 6 actions each day. On the bar, a high temperature has a darker colour than a low temperature.	 
4	Confirm the changes. <b>Result:</b> The schedule for Monday is defined. The value of the last action is valid until the next programmed action. In this example, Monday is the first day you programmed. Thus, the last programmed action is valid up to the first action of next Monday.	

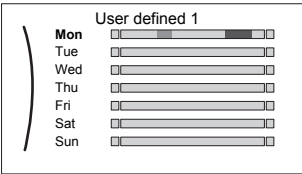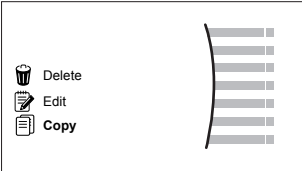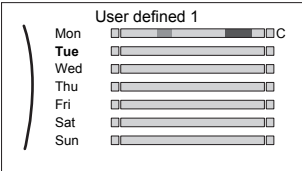








## To copy the schedule to the other weekdays

1	<p>Select <b>Monday</b>.</p> 	
2	<p>Select <b>Copy</b>.</p>  <p><b>Result:</b> Next to the copied day, "C" is displayed.</p>	
3	<p>Select <b>Tuesday</b>.</p> 	
4	<p>Select <b>Paste</b>.</p>  <p><b>Result:</b></p> 	
5	<p>Repeat this action for all other weekdays.</p> 	—

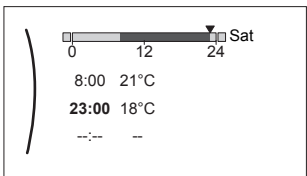

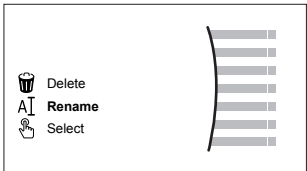



 
## To program the schedule for Saturday and copy it to Sunday

1	Select <b>Saturday</b> .	
2	Select <b>Edit</b> .	

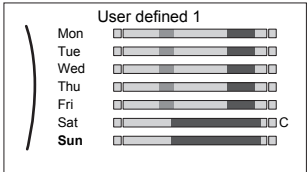

3	Use the left dial to select an entry and edit the entry with the right dial. 	 
4	Confirm the changes.	
5	Select <b>Saturday</b> .	
6	Select <b>Copy</b> .	
7	Select <b>Sunday</b> .	
8	Select <b>Paste</b> . <b>Result:</b> 	
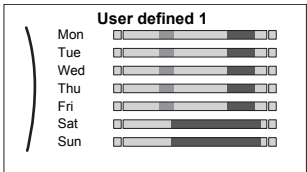
### To rename the schedule

1	Select the name of the current schedule. 	
2	Select <b>Rename</b> . 	
3	(optional) To delete the current schedule name, browse through the character list until ← is displayed, then press to remove the previous character. Repeat for each character of the schedule name.	
4	To name the current schedule, browse through the character list and confirm the selected character. The schedule name can contain up to 15 characters.	
5	Confirm the new name.	



#### INFORMATION

Not all schedules can be renamed.

### Usage example: You work in a 3-shift system

If you work in a 3-shift system, you can do the following:

- 1 Program 3 room temperature schedules and give them appropriate names.  
**Example:** EarlyShift, DayShift and LateShift
- 2 Select the schedule that you currently want to use.

#### 11.4.4 Setting the energy prices




In the system, you can set the following energy prices:

- a fixed gas price
- 3 electricity price levels
- a weekly schedule timer for electricity prices.

**Example: How to set the energy prices on the user interface?**

Price	Value in breadcrumb
Fuel: 5.3 euro cents/kWh	[7.6]=5.3
Electricity: 12 euro cents/kWh	[7.5.1]=12

##### To set the gas price

 


1	Go to [7.6]: <b>User settings &gt; Gas price.</b>	
2	Select the correct gas price.	
3	Confirm the changes.	



##### INFORMATION

Price value ranging from 0.00~990 valuta/kWh (with 2 significant values).

##### To set the electricity price

1	Go to [7.5.1]/[7.5.2]/[7.5.3]: <b>User settings &gt; Electricity price &gt; High/Medium/Low.</b>	
2	Select the correct electricity price.	
3	Confirm the changes.	
4	Repeat this for all three electricity prices.	—



##### INFORMATION



Price value ranging from 0.00~990 valuta/kWh (with 2 significant values).



##### INFORMATION

If no schedule is set, the **Electricity price for High** is taken into account.

##### To set the electricity price schedule timer

1	Go to [7.5.4]: <b>User settings &gt; Electricity price &gt; Schedule.</b>	
2	Program the selection using the scheduling screen. You can set the <b>High</b> , <b>Medium</b> and <b>Low</b> electricity prices according to your electricity supplier.	—
3	Confirm the changes.	

**INFORMATION**

The values correspond with the electricity price values for **High**, **Medium** and **Low** previously set. If no schedule is set, the electricity price for **High** is taken into account.

**About energy prices in case of an incentive per kWh renewable energy**

An incentive can be taken into account when setting the energy prices. Although the running cost can increase, the total operation cost, taking into account the reimbursement will be optimized.

**NOTICE**

Make sure to modify the setting of the energy prices at the end of the incentive period.

**To set the gas price in case of an incentive per kWh renewable energy**

Calculate the value for the gas price with the following formula:

- Actual gas price+(Incentive/kWh×0.9)

For the procedure to set the gas price, see ["To set the gas price"](#) [▶ 142].

**To set the electricity price in case of an incentive per kWh renewable energy**

Calculate the value for the electricity price with following formula:

- Actual electricity price+Incentive/kWh

For the procedure to set the electricity price, see ["To set the electricity price"](#) [▶ 142].

**Example**

This is an example and the prices and/or values used in this example are NOT accurate.

Data	Price/kWh
Gas price	4.08
Electricity price	12.49
Renewable heat incentive per kWh	5

**Calculation of the gas price**

Gas price=Actual gas price+(Incentive/kWh×0.9)

Gas price=4.08+(5×0.9)

Gas price=8.58

**Calculation of the electricity price**

Electricity price=Actual electricity price+Incentive/kWh

Electricity price=12.49+5

Electricity price=17.49

Price	Value in breadcrumb
Gas: 4.08 /kWh	[7.6]=8.6
Electricity: 12.49 /kWh	[7.5.1]=17

## 11.5 Weather-dependent curve

### 11.5.1 What is a weather-dependent curve?

#### Weather-dependent operation

The unit operates 'weather dependent' if the desired leaving water or tank temperature is determined automatically by the outdoor temperature. It therefore is connected to a temperature sensor on the North wall of the building. If the outdoor temperature drops or rises, the unit compensates instantly. Thus, the unit does not have to wait for feedback by the thermostat to increase or decrease the temperature of the leaving water or tank. Because it reacts more quickly, it prevents high rises and drops of the indoor temperature and water temperature at tap points.

#### Advantage

Weather-dependent operation reduces energy consumption.

#### Weather-dependent curve

To be able to compensate for differences in temperature, the unit relies on its weather-dependent curve. This curve defines how much the temperature of the tank or leaving water must be at different outdoor temperatures. Because the slope of the curve depends on local circumstances such as climate and the insulation of the house, the curve can be adjusted by an installer or user.

#### Types of weather-dependent curve

There are 2 types of weather-dependent curves:

- 2-points curve
- Slope-offset curve

Which type of curve you use to make adjustments, depends on your personal preference. See ["Using weather-dependent curves"](#) [▶ 147].

#### Availability

The weather-dependent curve is available for:

- Main zone - Heating
- Main zone - Cooling
- Additional zone - Heating
- Additional zone - Cooling
- Tank (only available to installers)




#### INFORMATION

To operate weather dependent, correctly configure the setpoint of the main zone, additional zone or tank. See ["Using weather-dependent curves"](#) [▶ 147].





### 11.5.2 2-points curve

Define the weather-dependent curve with these two setpoints:

- Setpoint (X1, Y2)
- Setpoint (X2, Y1)

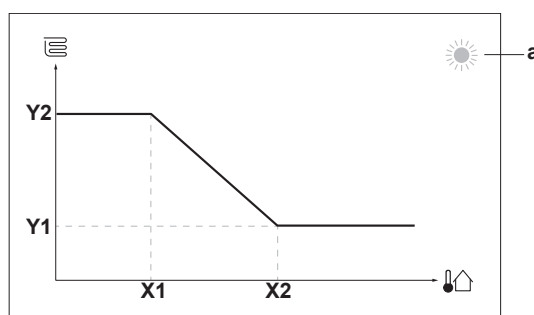

Item	Description
<b>a</b>	<p>Selected weather dependent zone:</p> <ul style="list-style-type: none"> <li>☀️: Main zone or additional zone heating</li> <li>❄️: Main zone or additional zone cooling</li> <li>🚿: Domestic hot water</li> </ul>
<b>X1, X2</b>	Examples of outdoor ambient temperature
<b>Y1, Y2</b>	<p>Examples of desired tank temperature or leaving water temperature. The icon corresponds to the heat emitter for that zone:</p> <ul style="list-style-type: none"> <li>🛏️: Underfloor heating</li> <li>🌀: Fan coil unit</li> <li>🔥: Radiator</li> <li>🚿: Domestic hot water tank</li> </ul>

   Possible actions on this screen	
	Go through the temperatures.
	Change the temperature.
	Go to the next temperature.
	Confirm changes and proceed.

### 11.5.3 Slope-offset curve


## Slope and offset

Define the weather-dependent curve by its slope and offset:


- Change the **slope** to differently increase or decrease the temperature of the leaving water for different ambient temperatures. For example, if leaving water temperature is in general fine but at low ambient temperatures too cold, raise the slope so that leaving water temperature is heated increasingly more at decreasingly lower ambient temperatures.
- Change the **offset** to equally increase or decrease the temperature of the leaving water for different ambient temperatures. For example, if leaving water temperature is always a bit too cold at different ambient temperatures, shift the offset up to equally increase the leaving water temperature for all ambient temperatures.

## Examples

Weather-dependent curve when slope is selected:

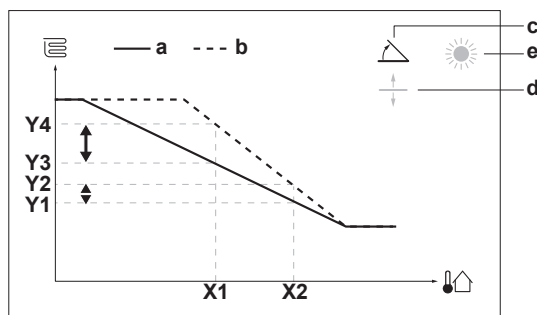

Weather-dependent curve when offset is selected:

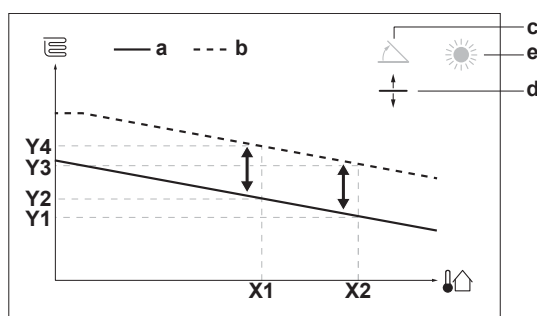

Item	Description
<b>a</b>	WD curve before changes.
<b>b</b>	WD curve after changes (as example): <ul style="list-style-type: none"> <li>When slope is changed, the new preferred temperature at X1 is unequally higher than the preferred temperature at X2.</li> <li>When offset is changed, the new preferred temperature at X1 is equally higher as the preferred temperature at X2.</li> </ul>
<b>c</b>	Slope
<b>d</b>	Offset
<b>e</b>	Selected weather dependent zone: <ul style="list-style-type: none"> <li>☀: Main zone or additional zone heating</li> <li>❄: Main zone or additional zone cooling</li> <li>🏠: Domestic hot water</li> </ul>
<b>X1, X2</b>	Examples of outdoor ambient temperature
<b>Y1, Y2, Y3, Y4</b>	Examples of desired tank temperature or leaving water temperature. The icon corresponds to the heat emitter for that zone: <ul style="list-style-type: none"> <li>🏠: Underfloor heating</li> <li>🏠: Fan coil unit</li> <li>🏠: Radiator</li> <li>🏠: Domestic hot water tank</li> </ul>

Possible actions on this screen	
	Select slope or offset.
	Increase or decrease the slope/offset.
	When slope is selected: set slope and go to offset. When offset is selected: set offset.
	Confirm changes and return to the submenu.

#### 11.5.4 Using weather-dependent curves

Configure weather-dependent curves as following:

##### To define the setpoint mode

To use the weather-dependent curve, you need to define the correct setpoint mode:

Go to setpoint mode ...	Set the setpoint mode to ...
<b>Main zone – Heating</b>	
[2.4] Main zone > Setpoint mode	WD heating, fixed cooling OR Weather dependent
<b>Main zone – Cooling</b>	
[2.4] Main zone > Setpoint mode	Weather dependent
<b>Additional zone – Heating</b>	
[3.4] Additional zone > Setpoint mode	WD heating, fixed cooling OR Weather dependent
<b>Additional zone – Cooling</b>	
[3.4] Additional zone > Setpoint mode	Weather dependent
<b>Tank</b>	
[5.B] Tank > Setpoint mode	<b>Restriction:</b> Only available to installers. Weather dependent

##### To change the type of weather-dependent curve

To change the type for all zones (main + additional) and for the tank, go to [2.E] **Main zone > WD curve type**.

Viewing which type is selected is also possible via:

- [3.C] **Additional zone > WD curve type**
- [5.E] **Tank > WD curve type**

**Restriction:** Only available to installers.

##### To change the weather-dependent curve

Zone	Go to ...
<b>Main zone – Heating</b>	[2.5] Main zone > Heating WD curve
<b>Main zone – Cooling</b>	[2.6] Main zone > Cooling WD curve

Zone	Go to ...
<b>Additional zone – Heating</b>	[3.5] Additional zone > Heating WD curve
<b>Additional zone – Cooling</b>	[3.6] Additional zone > Cooling WD curve
<b>Tank</b>	<b>Restriction:</b> Only available to installers. [5.C] Tank > WD curve

**INFORMATION****Maximum and minimum setpoints**

You cannot configure the curve with temperatures that are higher or lower than the set maximum and minimum setpoints for that zone or for the tank. When the maximum or minimum setpoint is reached, the curve flattens out.

### To fine-tune the weather-dependent curve: slope-offset curve

The following table describes how to fine-tune the weather-dependent curve of a zone or tank:

You feel ...		Fine-tune with slope and offset:	
At regular outdoor temperatures ...	At cold outdoor temperatures ...	Slope	Offset
OK	Cold	↑	—
OK	Hot	↓	—
Cold	OK	↓	↑
Cold	Cold	—	↑
Cold	Hot	↓	↑
Hot	OK	↑	↓
Hot	Cold	↑	↓
Hot	Hot	—	↓

### To fine-tune the weather-dependent curve: 2-points curve

The following table describes how to fine-tune the weather-dependent curve of a zone or tank:

You feel ...		Fine-tune with setpoints:			
At regular outdoor temperatures ...	At cold outdoor temperatures ...	Y2 <sup>(a)</sup>	Y1 <sup>(a)</sup>	X1 <sup>(a)</sup>	X2 <sup>(a)</sup>
OK	Cold	↑	—	↑	—
OK	Hot	↓	—	↓	—
Cold	OK	—	↑	—	↑
Cold	Cold	↑	↑	↑	↑
Cold	Hot	↓	↑	↓	↑
Hot	OK	—	↓	—	↓
Hot	Cold	↑	↓	↑	↓
Hot	Hot	↓	↓	↓	↓


 



<sup>(a)</sup> See "2-points curve" [▶ 144].

## 11.6 Settings menu

You can set additional settings using the main menu screen and its submenus. The most important settings are presented here.

### 11.6.1 Malfunctioning


In case of a malfunction,  or  will appear on the home screen. To display the error code, open the menu screen and go to [0] **Malfunctioning**. Press **?** for more information about the error.

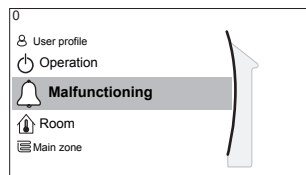


### 11.6.2 Room

#### Overview

The following items are listed in the submenu:

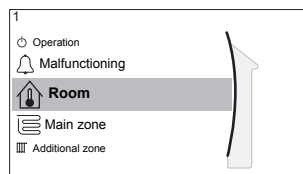

#### [1] Room

 Setpoint screen

[1.1] Schedule

[1.2] Heating schedule

[1.3] Cooling schedule

[1.4] Antifrost

[1.5] Setpoint range

[1.6] Room sensor offset

[1.7] Room sensor offset

[1.9] Room comfort setpoint

#### Setpoint screen

Control the room temperature of the main zone via setpoint screen [1] **Room**.

See "Setpoint screen" [▶ 132].

#### Schedule

Indicate if the room temperature is controlled according to a schedule or not.

#	Code	Description
[1.1]	N/A	<b>Schedule:</b> <ul style="list-style-type: none"> <li><b>No:</b> Room temperature is directly controlled by the user.</li> <li><b>Yes:</b> Room temperature is controlled by a schedule and can be modified by the user.</li> </ul>

### Heating schedule

Applicable for all models.

Define a heating schedule of the room temperature in [1.2] **Heating schedule**.

See "Schedule screen: Example" [▶ 138].

### Cooling schedule

Only applicable for reversible models.

Define a cooling schedule of the room temperature in [1.3] **Cooling schedule**.

See "Schedule screen: Example" [▶ 138].

### Antifrost

[1.4] **Antifrost** prevents the room from getting too cold. This setting is applicable when [2.9] **Control=Room thermostat**, but also offers functionality for leaving water temperature control and external room thermostat control. In case of the latter two, **Antifrost** can be activated by setting field setting [2-06]=1.

Room frost protection, when enabled, is not guaranteed when there is no room thermostat that can activate the heat pump. This is the case when:

- [2.9] **Control=External room thermostat** and [C.2] **Space heating/cooling=Off**, or if
- [2.9] **Control=Leaving water**.

In the above cases, **Antifrost** will heat the space heating water to a reduced setpoint when the outdoor temperature is lower than 6°C.

Main zone unit control method [2.9]	Description
Leaving water temperature control ([C-07]=0)	Room frost protection is NOT guaranteed.
External room thermostat control ([C-07]=1)	Allow for the external room thermostat to take care of room frost protection: <ul style="list-style-type: none"> <li>▪ Set [C.2] <b>Space heating/cooling=On</b>.</li> </ul>
Room thermostat control ([C-07]=2)	Allow for the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat) to take care of room frost protection: <ul style="list-style-type: none"> <li>▪ Set antifrost [1.4.1] <b>Activation=Yes</b>.</li> <li>▪ Set the temperature of the antifrost function in [1.4.2] <b>Room setpoint</b>.</li> </ul>



#### NOTICE

If the system does NOT contain a backup heater, then:

- Make sure that the room antifrost control is activated ([2-06]=1).
- Do NOT change the default room antifrost temperature [2-05].
- Make sure that the water pipe freeze prevention is activated ([4-04]≠2).



#### INFORMATION

If a U4 error occurs, room frost protection is NOT guaranteed.

**NOTICE**

If the room **Antifrost** setting is active and a U4 error occurs, the unit will automatically start the **Antifrost** function via the backup heater. If the backup heater is not allowed for room frost protection during a U4 error, the room **Antifrost** setting **MUST** be disabled.

**NOTICE**

**Room frost protection.** Even if you turn OFF space heating/cooling operation ([C.2]: **Operation** > **Space heating/cooling**), room frost protection operation –if enabled– can still activate. However, for leaving water temperature control and external room thermostat control, the protection is NOT guaranteed.

For more detailed information about room frost protection in relation to the applicable unit control method, see the sections below.

**Leaving water temperature control ([C-07]=0)**

Under leaving water temperature control, room frost protection is NOT guaranteed. However, if room antifrost [2-06] is activated, limited frost protection by the unit is possible:

If...	Then...
<ul style="list-style-type: none"> <li>▪ <b>Space heating/cooling=Off</b>, and</li> <li>▪ Outdoor ambient temperature drops below 6°C</li> </ul>	<ul style="list-style-type: none"> <li>▪ The unit will supply leaving water to the heat emitters to heat up the room again, and</li> <li>▪ the temperature setpoint of the leaving water will be lowered.</li> </ul>
<ul style="list-style-type: none"> <li>▪ <b>Space heating/cooling=On</b>, and</li> <li>▪ <b>Operation mode=Heating</b></li> </ul>	The unit will supply leaving water to the heat emitters to heat up the room according to normal logic.
<ul style="list-style-type: none"> <li>▪ <b>Space heating/cooling=On</b>, and</li> <li>▪ <b>Operation mode=Cooling</b></li> </ul>	There is no room frost protection.

**External room thermostat control ([C-07]=1)**

Under external room thermostat control, room frost protection is guaranteed by the external room thermostat, provided that:

- [C.2] **Space heating/cooling=On**, and
- [9.5.1] **Emergency=Automatic** or **auto SH normal/DHW off**.

However, if [1.4.1] **Antifrost** is activated, limited frost protection by the unit is possible.

In case of 1 leaving water temperature zone:

If...	Then...
<ul style="list-style-type: none"> <li>▪ <b>Space heating/cooling=Off</b>, and</li> <li>▪ Outdoor ambient temperature drops below 6°C</li> </ul>	<ul style="list-style-type: none"> <li>▪ The unit will supply leaving water to the heat emitters to heat up the room again, and</li> <li>▪ the temperature setpoint of the leaving water will be lowered.</li> </ul>

If...	Then...
<ul style="list-style-type: none"> <li>▪ Space heating/cooling=On, and</li> <li>▪ The external room thermostat is "Thermo OFF", and</li> <li>▪ Outdoor temperature drops below 6°C</li> </ul>	<ul style="list-style-type: none"> <li>▪ The unit will supply leaving water to the heat emitters to heat up the room again, and</li> <li>▪ the temperature setpoint of the leaving water will be lowered.</li> </ul>
<ul style="list-style-type: none"> <li>▪ Space heating/cooling=On, and</li> <li>▪ The external room thermostat is "Thermo ON"</li> </ul>	Room frost protection is guaranteed by the normal logic.

In case of 2 leaving water temperature zones:

If...	Then...
<ul style="list-style-type: none"> <li>▪ Space heating/cooling=Off, and</li> <li>▪ Outdoor ambient temperature drops below 6°C</li> </ul>	<ul style="list-style-type: none"> <li>▪ The unit will supply leaving water to the heat emitters to heat up the room again, and</li> <li>▪ the temperature setpoint of the leaving water will be lowered.</li> </ul>
<ul style="list-style-type: none"> <li>▪ Space heating/cooling=On, and</li> <li>▪ Operation mode=Heating, and</li> <li>▪ The external room thermostat is "Thermo OFF", and</li> <li>▪ Outdoor temperature drops below 6°C</li> </ul>	<ul style="list-style-type: none"> <li>▪ The unit will supply leaving water to the heat emitters to heat up the room again, and</li> <li>▪ the temperature setpoint of the leaving water will be lowered.</li> </ul>
<ul style="list-style-type: none"> <li>▪ Space heating/cooling=On, and</li> <li>▪ Operation mode=Cooling</li> </ul>	There is no room frost protection.

#### Room thermostat control ([C-07]=2)

During room thermostat control, room frost protection [2-06] is guaranteed when activated. If so, and the room temperature drops below the room antifrost temperature [2-05], the unit will supply leaving water to the heat emitters to heat up the room again.

#	Code	Description
[1.4.1]	[2-06]	<b>Activation:</b> <ul style="list-style-type: none"> <li>▪ 0 No: Antifrost functionality is OFF.</li> <li>▪ 1 Yes: Antifrost functionality is on.</li> </ul>
[1.4.2]	[2-05]	<b>Room setpoint:</b> <ul style="list-style-type: none"> <li>▪ 4°C~16°C</li> </ul>



#### INFORMATION

When the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat) is disconnected (because of incorrect wiring or damage of the cable), then room frost protection is NOT guaranteed.

**NOTICE**

If **Emergency** is set to **Manual** ([9.5.1]=0), and the unit is triggered to start emergency operation, the unit will stop and needs to be recovered manually via the user interface. To recover operation manually, go to the **Malfunctioning** main menu screen, and confirm emergency operation before starting.

Room frost protection is active even if the user does not confirm emergency operation.

**Setpoint range**

Only applicable in room thermostat control.

To save energy by preventing overheating or undercooling the room, you can limit the range of the room temperature for heating and/or cooling.

**NOTICE**

When adjusting the room temperature ranges, all desired room temperatures are also adjusted to guarantee they are between the limits.

#	Code	Description
[1.5.1]	[3-07]	Heating minimum
[1.5.2]	[3-06]	Heating maximum
[1.5.3]	[3-09]	Cooling minimum
[1.5.4]	[3-08]	Cooling maximum

**Room sensor offset**

Only applicable in room thermostat control.

To calibrate the (external) room temperature sensor, give an offset to the value of the room thermistor as measured by the Human Comfort Interface (BRC1HHDA used as room thermostat) or by the external room sensor. The setting can be used to compensate for situations where the Human Comfort Interface or the external room sensor cannot be installed at the ideal location.

See ["6.7 Setting up an external temperature sensor"](#) [▶ 63].

#	Code	Description
[1.6]	[2-0A]	<b>Room sensor offset</b> (Human Comfort Interface (BRC1HHDA used as room thermostat)): Offset on the actual room temperature measured by the Human Comfort Interface. ▪ $-5^{\circ}\text{C} \sim 5^{\circ}\text{C}$ , step $0.5^{\circ}\text{C}$
[1.7]	[2-09]	<b>Room sensor offset</b> (external room sensor option): Only applicable if the external room sensor option is installed and configured. ▪ $-5^{\circ}\text{C} \sim 5^{\circ}\text{C}$ , step $0.5^{\circ}\text{C}$

**Room comfort setpoint**

**Restriction:** Only applicable if:

- Smart Grid is enabled ([9.8.4]=**Smart grid**), and
- Room buffering is enabled ([9.8.7]=**Yes**)


If room buffering is enabled, the extra energy from photovoltaic panels is buffered in the DHW tank and in the space heating/cooling circuit (i.e. heat up or cool down the room). With the room comfort setpoints (cooling/heating) you can modify the maximum/minimum setpoints that will be used when buffering the extra energy in the space heating/cooling circuit.

#	Code	Description
[1.9.1]	[9-0A]	<b>Heating comfort setpoint</b> ▪ [3-07]~[3-06]°C
[1.9.2]	[9-0B]	<b>Cooling comfort setpoint</b> ▪ [3-09]~[3-08]°C

### 11.6.3 Main zone

#### Overview

The following items are listed in the submenu:

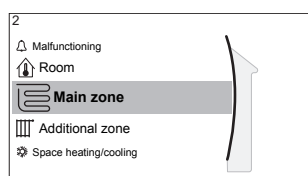

#### [2] Main zone

Setpoint screen

[2.1] Schedule

[2.2] Heating schedule

[2.3] Cooling schedule

[2.4] Setpoint mode

[2.5] Heating WD curve

[2.6] Cooling WD curve

[2.7] Emitter type

[2.8] Setpoint range

[2.9] Control

[2.A] Thermostat type

[2.B] Delta T

[2.C] Modulation

[2.E] WD curve type

#### Setpoint screen

Control the leaving water temperature for the main zone via setpoint screen [2] **Main zone**.

See "Setpoint screen" [▶ 132].

#### Schedule

Indicate if the temperature of the leaving water is defined according to a schedule or not.

Influence of the LWT setpoint mode [2.4] is as follows:

- In **Fixed** LWT setpoint mode, the scheduled actions consist of desired leaving water temperatures, either preset or custom.
- In **Weather dependent** LWT setpoint mode, the scheduled actions consist of desired shift actions, either preset or custom.

#	Code	Description
[2.1]	N/A	Schedule: <ul style="list-style-type: none"> <li>0: No</li> <li>1: Yes</li> </ul>

### Heating schedule

Define a heating temperature schedule for the main zone via [2.2] **Heating schedule**.

See "Schedule screen: Example" [▶ 138].

### Cooling schedule

Define a cooling temperature schedule for the main zone via [2.3] **Cooling schedule**.

See "Schedule screen: Example" [▶ 138].

### Setpoint mode

Define the setpoint mode:

- **Fixed:** the desired leaving water temperature does not depend on the outdoor ambient temperature.
- In **WD heating, fixed cooling** mode, the desired leaving water temperature:
  - depends on the outdoor ambient temperature for heating
  - does NOT depend on the outdoor ambient temperature for cooling
- In **Weather dependent** mode, the desired leaving water temperature depends on the outdoor ambient temperature.

#	Code	Description
[2.4]	N/A	Setpoint mode: <ul style="list-style-type: none"> <li>Fixed</li> <li>WD heating, fixed cooling</li> <li>Weather dependent</li> </ul>

When weather dependent operation is active, low outdoor temperatures will result in warmer water and vice versa. During weather dependent operation, the user can shift the water temperature up or down by a maximum of 10°C.

### Heating WD curve

Set weather-dependent heating for the main zone (if [2.4]=1 or 2):

#	Code	Description
[2.5]	[1-00] [1-01] [1-02] [1-03]	<p>Set weather-dependent heating:</p> <p><b>Note:</b> There are 2 methods to set the weather dependent curve. See "2-points curve" [▶ 144] and "Slope-offset curve" [▶ 145]. Both curve types require 4 field settings to be configured according to the figure below.</p> <p>▪ <math>T_t</math>: Target leaving water temperature (main zone)</p> <p>▪ <math>T_a</math>: Outdoor temperature</p> <p>▪ [1-00]: Low outdoor ambient temperature. <math>-40^{\circ}\text{C} \sim +5^{\circ}\text{C}</math></p> <p>▪ [1-01]: High outdoor ambient temperature. <math>10^{\circ}\text{C} \sim 25^{\circ}\text{C}</math></p> <p>▪ [1-02]: Desired leaving water temperature when the outdoor temperature equals or drops below the low ambient temperature. <math>[9-01]^{\circ}\text{C} \sim [9-00]^{\circ}\text{C}</math></p> <p><b>Note:</b> This value should be higher than [1-03] as for low outdoor temperatures warmer water is required.</p> <p>▪ [1-03]: Desired leaving water temperature when the outdoor temperature equals or rises above the high ambient temperature. <math>[9-01]^{\circ}\text{C} \sim \min(45, [9-00])^{\circ}\text{C}</math></p> <p><b>Note:</b> This value should be lower than [1-02] as for high outdoor temperatures less warm water is required.</p>

### Cooling WD curve

Set weather-dependent cooling for the main zone (if [2.4]=2):



#	Code	Description
[2.6]	[1-06] [1-07] [1-08] [1-09]	<p>Set weather-dependent cooling:</p> <p><b>Note:</b> There are 2 methods to set the weather dependent curve. See "2-points curve" [▶ 144] and "Slope-offset curve" [▶ 145]. Both curve types require 4 field settings to be configured according to the figure below.</p> <p>▪ <math>T_t</math>: Target leaving water temperature (main zone)</p> <p>▪ <math>T_a</math>: Outdoor temperature</p> <p>▪ [1-06]: Low outdoor ambient temperature. 10°C~25°C</p> <p>▪ [1-07]: High outdoor ambient temperature. 25°C~43°C</p> <p>▪ [1-08]: Desired leaving water temperature when the outdoor temperature equals or drops below the low ambient temperature. [9-03]°C~[9-02]°C</p> <p><b>Note:</b> This value should be higher than [1-09] as for low outdoor temperatures less cold water is required.</p> <p>▪ [1-09]: Desired leaving water temperature when the outdoor temperature equals or rises above the high ambient temperature. [9-03]°C~[9-02]°C</p> <p><b>Note:</b> This value should be lower than [1-08] as for high outdoor temperatures colder water is required.</p>

### Emitter type

Heating up or cooling down the main zone can take longer. This depends on:

- The water volume of the system
- The heater emitter type of the main zone

The setting **Emitter type** can compensate for a slow or a quick heating/cooling system during the heat up/cool down cycle. In room thermostat control, **Emitter type** influences the maximum modulation of the desired leaving water temperature, and the possibility for usage of the automatic cooling/heating changeover based on the indoor ambient temperature.

It is important to set **Emitter type** correctly and in accordance with your system layout. The target delta T for the main zone depends on it.

#	Code	Description
[2.7]	[2-0C]	<b>Emitter type:</b> <ul style="list-style-type: none"> <li>0: Underfloor heating</li> <li>1: Fancoil unit</li> <li>2: Radiator</li> </ul>

The setting **Emitter type** influences the space heating setpoint range and the target delta T in heating as follows:

Emitter type Main zone	Space heating setpoint range [9-01]~[9-00]	Target delta T in heating [1-0B]
0: Underfloor heating	Maximum 55°C	Variable (see [2.B.1])
1: Fancoil unit	Maximum 55°C	Variable (see [2.B.1])
2: Radiator	Maximum 60°C	Fixed 8°C



#### NOTICE

The maximum setpoint in space heating depends on the emitter type as can be seen in above table. If there are 2 water temperature zones, then the maximum setpoint is the maximum of the 2 zones.



#### NOTICE

NOT configuring the system in the following way can cause damage to the heat emitters. If there are 2 zones, it is important that in heating:

- the zone with the lowest water temperature is configured as the main zone, and
- the zone with the highest water temperature is configured as the additional zone.



#### NOTICE

If there are 2 zones and the emitter types are wrongly configured, water of high temperature can be sent towards a low temperature emitter (underfloor heating). To avoid this:

- Install an aquastat/thermostatic valve to avoid too high temperatures towards a low temperature emitter.
- Make sure you set the emitter types for the main zone [2.7] and for the additional zone [3.7] correctly in accordance with the connected emitter.



#### NOTICE

**Average emitter temperature** = Leaving water temperature – (Delta T)/2

This means that for a same leaving water temperature setpoint, the average emitter temperature of radiators is lower than that of underfloor heating because of a bigger delta T.

Example radiators:  $40 - 8/2 = 36^{\circ}\text{C}$

Example underfloor heating:  $40 - 5/2 = 37.5^{\circ}\text{C}$

To compensate, you can:

- Increase the weather-dependent curve desired temperatures [2.5].
- Enable leaving water temperature modulation and increase the maximum modulation [2.C].

### Setpoint range

To prevent a wrong (i.e. too hot or too cold) leaving water temperature for the main leaving water temperature zone, limit its temperature range.



#### NOTICE

In case of a floor heating application it is important to limit the:


- maximum leaving water temperature at heating operation according to the specifications of the floor heating installation.
- the minimum leaving water temperature at cooling operation to 18~20°C to prevent condensation on the floor.



#### NOTICE

- When adjusting the leaving water temperature ranges, all desired leaving water temperatures are also adjusted to guarantee they are between the limits.
- Always balance between the desired leaving water temperature with the desired room temperature and/or the capacity (according to the design and selection of the heat emitters). The desired leaving water temperature is the result of several settings (preset values, shift values, weather-dependent curves, modulation). As a result, too high or too low leaving water temperatures could occur which lead to overtemperatures or capacity shortage. By limiting the leaving water temperature range to adequate values (depending on the heat emitter), such situations can be avoided.

**Example:** In heating mode, leaving water temperatures must be sufficiently higher than the room temperatures. To avoid that the room cannot heat up as desired, set the minimum leaving water temperature to 28°C.

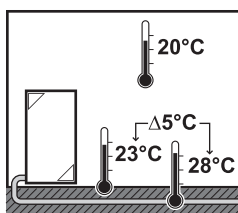

#	Code	Description
Leaving water temperature range for the main leaving water temperature zone (= the leaving water temperature zone with the lowest leaving water temperature in heating operation and the highest leaving water temperature in cooling operation)		
[2.8.1]	[9-01]	<b>Heating minimum:</b> <ul style="list-style-type: none"> <li>▪ 15°C~37°C</li> </ul>
[2.8.2]	[9-00]	<b>Heating maximum:</b> <ul style="list-style-type: none"> <li>▪ [2-0C]=2 (emitter type main zone = radiator) 37°C~60°C</li> <li>▪ Else: 37°C~55°C</li> </ul>
[2.8.3]	[9-03]	<b>Cooling minimum:</b> <ul style="list-style-type: none"> <li>▪ 5°C~18°C</li> </ul>
[2.8.4]	[9-02]	<b>Cooling maximum:</b> <ul style="list-style-type: none"> <li>▪ 18°C~22°C</li> </ul>

## Control

Define how the operation of the unit is controlled.

Control	In this control...
Leaving water	Unit operation is decided based on the leaving water temperature regardless the actual room temperature and/or heating or cooling demand of the room.
External room thermostat	Unit operation is decided by the external thermostat or equivalent (e.g. heat pump convector).
Room thermostat	Unit operation is decided based on the ambient temperature of the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat).

#	Code	Description
[2.9]	[C-07]	<ul style="list-style-type: none"> <li>0: Leaving water</li> <li>1: External room thermostat</li> <li>2: Room thermostat</li> </ul>

## Thermostat type

Only applicable in external room thermostat control.



### NOTICE

If an external room thermostat is used, the external room thermostat will control the room frost protection. However, the room frost protection is only possible if [C.2] Space heating/cooling=On.

#	Code	Description
[2.A]	[C-05]	<p>External room thermostat type for the main zone:</p> <ul style="list-style-type: none"> <li>1: <b>1 contact</b>: The used external room thermostat can only send a thermo ON/OFF condition. There is no separation between heating or cooling demand. The room thermostat is connected to only 1 digital input (X2M/35). Select this value in case of a connection to the heat pump convector (FWXV).</li> <li>2: <b>2 contacts</b>: The used external room thermostat can send a separate heating/cooling thermo ON/OFF condition. The room thermostat is connected to 2 digital inputs (X2M/35 and X2M/34). Select this value in case of connection to multi-zoning wired controls (see "<a href="#">Possible options for the outdoor unit</a>" [▶ 26]), wired room thermostats (EKRTWA) or wireless room thermostats (EKTR1).</li> </ul>

## Leaving water temperature: Delta T

In heating for the main zone, the target delta T (temperature difference) depends on the selected emitter type for the main zone.

Delta T is the absolute value of the temperature difference between the leaving water and entering water.

The unit is designed to support underfloor loops operation. The recommended leaving water temperature for underfloor loops is 35°C. In such case, the unit will realize a temperature difference of 5°C, which means that the entering water temperature is around 30°C.

Depending on the installed type of heat emitters (radiators, heat pump convector, underfloor loops) or situation, you can change the difference between entering and leaving water temperature.

**Note:** The pump will regulate its flow to keep the delta T. In some special cases, the measured delta T can differ from the set value.



#### INFORMATION

When only the backup heater is active in heating, delta T will be controlled according to the fixed capacity of the backup heater. It is possible that this delta T is different from the selected target delta T.



#### INFORMATION

In heating, the target delta T will only be achieved after some operation time, when the setpoint is being reached, because of the big difference between leaving water temperature setpoint and inlet temperature at startup.



#### INFORMATION

If the main zone or the additional zone has a heating demand, and this zone is equipped with radiators, then the target delta T that the unit will use in heating operation will be 8°C fixed.

If the zones are not equipped with radiators, then in heating the unit will give priority to the target delta T for the additional zone, if there is a heating demand in the additional zone.

In cooling the unit will give priority to the target delta T for the additional zone, if there is a cooling demand in the additional zone.

#	Code	Description
[2.B.1]	[1-0B]	<b>Delta T heating:</b> A minimum temperature difference is required for proper operation of heat emitters in heating mode. <ul style="list-style-type: none"> <li>▪ If [2-0C]=2, this is fixed to 8°C</li> <li>▪ Else: 3°C~10°C</li> </ul>
[2.B.2]	[1-0D]	<b>Delta T cooling:</b> A minimum temperature difference is required for proper operation of heat emitters in cooling mode. <ul style="list-style-type: none"> <li>▪ 3°C~10°C</li> </ul>

### Leaving water temperature: Modulation

Only applicable in case of room thermostat control.

When using the room thermostat functionality, the customer needs to set the desired room temperature. The unit will supply hot water to the heat emitters and the room will be heated.

Additionally, also the desired leaving water temperature must be configured: if **Modulation** is enabled, the unit automatically calculates the desired leaving water temperature. These calculations are based on:

- the preset temperatures, or
- the desired weather-dependent temperatures (if weather-dependent is enabled)

Moreover, with **Modulation** enabled, the desired leaving water temperature is lowered or raised in function of the desired room temperature and the difference between the actual and the desired room temperature. This results in:

- stable room temperatures, exactly matching the desired temperature (higher comfort level)
- less on/off cycles (lower noise level, higher comfort and higher efficiency)
- water temperatures as low as possible to match the desired temperature (higher efficiency)


If **Modulation** is disabled, set the desired leaving water temperature via [2] **Main zone**.

#	Code	Description
[2.C.1]	[8-05]	<b>Modulation:</b> <ul style="list-style-type: none"> <li>▪ 0 No (disabled)</li> <li>▪ 1 Yes (enabled)</li> </ul> <b>Note:</b> The desired leaving water temperature can only be read out on the user interface.
[2.C.2]	[8-06]	<b>Max modulation:</b> <ul style="list-style-type: none"> <li>▪ 0°C~10°C</li> </ul> This is the temperature value by which the desired leaving water temperature is increased or decreased.



#### INFORMATION

When leaving water temperature modulation is enabled, the weather-dependent curve needs to be set to a higher position than [8-06] plus the minimum leaving water temperature required to reach a stable condition on the comfort setpoint for the room. To increase efficiency, modulation can lower the leaving water temperature. By setting the weather-dependent curve to a higher position, it cannot drop below the minimum setpoint. See the illustration below.

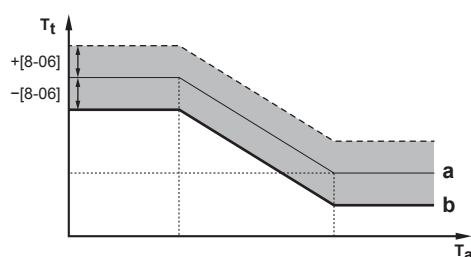

**a** Weather-dependent curve

**b** Minimum leaving water temperature setpoint required to reach a stable condition on the comfort setpoint for the room.

#### WD curve type

The weather dependent curve can be defined using the **2-points** method or the **Slope-Offset** method.


See "[2-points curve](#)" [▶ 144] and "[Slope-offset curve](#)" [▶ 145].

#	Code	Description
[2.E]	N/A	<ul style="list-style-type: none"> <li>2-points</li> <li>Slope-Offset</li> </ul>

#### 11.6.4 Additional zone

##### Overview

The following items are listed in the submenu:

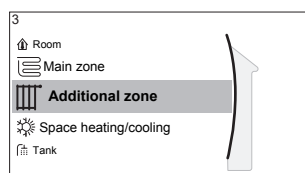

##### [3] Additional zone

Setpoint screen

[3.1] Schedule

[3.2] Heating schedule

[3.3] Cooling schedule

[3.4] Setpoint mode

[3.5] Heating WD curve

[3.6] Cooling WD curve

[3.7] Emitter type

[3.8] Setpoint range

[3.9] Control

[3.A] Thermostat type

[3.B] Delta T

[3.C] WD curve type

##### Setpoint screen

Control the leaving water temperature for the additional zone via setpoint screen [3] **Additional zone**.

See "Setpoint screen" [▶ 132].

##### Schedule

Indicates if the desired leaving water temperature is according to a schedule.

See "Main zone" [▶ 154].

#	Code	Description
[3.1]	N/A	Schedule: <ul style="list-style-type: none"> <li>No</li> <li>Yes</li> </ul>

##### Heating schedule

Define a heating temperature schedule for the additional zone via [3.2] **Heating schedule**.

See "Schedule screen: Example" [▶ 138].

##### Cooling schedule

Define a cooling temperature schedule for the additional zone via [3.3] **Cooling schedule**.

See "Schedule screen: Example" [▶ 138].

### Setpoint mode

The setpoint mode of the additional zone can be independently set from the setpoint mode of the main zone.

See **"Setpoint mode"** [▶ 155].

#	Code	Description
[3.4]	N/A	Setpoint mode: <ul style="list-style-type: none"> <li>▪ Fixed</li> <li>▪ WD heating, fixed cooling</li> <li>▪ Weather dependent</li> </ul>

### WD curve type

The weather dependent curve can be defined using the **2-points** method or the **Slope-Offset** method.

Also see **"2-points curve"** [▶ 144] and **"Slope-offset curve"** [▶ 145].

The curve type in the menu of the additional zone is read only. It corresponds to the curve type that is in use for the main zone. Thus, changing the curve type for the additional zone must be done in the menu of the main zone: [2.E] **WD curve type**.


Also see **"Main zone"** [▶ 154].

#	Code	Description
[2.E]	N/A	<ul style="list-style-type: none"> <li>▪ 2-points</li> <li>▪ Slope-Offset</li> </ul>

### Heating WD curve

Set weather-dependent heating for the additional zone (if [3.4]=1 or 2):

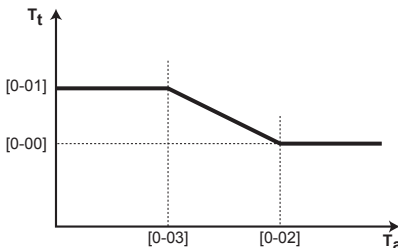

#	Code	Description
[3.5]	[0-00] [0-01] [0-02] [0-03]	<p>Set weather-dependent heating:</p> <p><b>Note:</b> There are 2 methods to set the weather dependent curve. See "<a href="#">2-points curve</a>" [▶ 144] and "<a href="#">Slope-offset curve</a>" [▶ 145]. Both curve types require 4 field settings to be configured according to the figure below.</p>  <ul style="list-style-type: none"> <li>▪ <math>T_t</math>: Target leaving water temperature (additional zone)</li> <li>▪ <math>T_a</math>: Outdoor temperature</li> <li>▪ [0-03]: Low outdoor ambient temperature. <math>-40^{\circ}\text{C} \sim +5^{\circ}\text{C}</math></li> <li>▪ [0-02]: High outdoor ambient temperature. <math>10^{\circ}\text{C} \sim 25^{\circ}\text{C}</math></li> <li>▪ [0-01]: Desired leaving water temperature when the outdoor temperature equals or drops below the low ambient temperature. <math>[9-05]^{\circ}\text{C} \sim [9-06]^{\circ}\text{C}</math></li> </ul> <p><b>Note:</b> This value should be higher than [0-00] as for low outdoor temperatures warmer water is required.</p> <ul style="list-style-type: none"> <li>▪ [0-00]: Desired leaving water temperature when the outdoor temperature equals or rises above the high ambient temperature. <math>[9-05] \sim \min(45, [9-06])^{\circ}\text{C}</math></li> </ul> <p><b>Note:</b> This value should be lower than [0-01] as for high outdoor temperatures less warm water is required.</p>

### Cooling WD curve

Set weather-dependent cooling for the additional zone (if [3.4]=2):

#	Code	Description
[3.6]	[0-04] [0-05] [0-06] [0-07]	<p>Set weather-dependent cooling:</p> <p><b>Note:</b> There are 2 methods to set the weather dependent curve. See "2-points curve" [▶ 144] and "Slope-offset curve" [▶ 145]. Both curve types require 4 field settings to be configured according to the figure below.</p> <ul style="list-style-type: none"> <li>▪ <math>T_t</math>: Target leaving water temperature (additional zone)</li> <li>▪ <math>T_a</math>: Outdoor temperature</li> <li>▪ [0-07]: Low outdoor ambient temperature. 10°C~25°C</li> <li>▪ [0-06]: High outdoor ambient temperature. 25°C~43°C</li> <li>▪ [0-05]: Desired leaving water temperature when the outdoor temperature equals or drops below the low ambient temperature. [9-07]°C~[9-08]°C</li> </ul> <p><b>Note:</b> This value should be higher than [0-04] as for low outdoor temperatures less cold water is required.</p> <ul style="list-style-type: none"> <li>▪ [0-04]: Desired leaving water temperature when the outdoor temperature equals or rises above the high ambient temperature. [9-07]°C~[9-08]°C</li> </ul> <p><b>Note:</b> This value should be lower than [0-05] as for high outdoor temperatures colder water is required.</p>

### Emitter type

For more information about **Emitter type**, see "Main zone" [▶ 154].

#	Code	Description
[3.7]	[2-0D]	<p><b>Emitter type:</b></p> <ul style="list-style-type: none"> <li>▪ 0: Underfloor heating</li> <li>▪ 1: Fancoil unit</li> <li>▪ 2: Radiator</li> </ul>

The setting of the emitter type has an influence on the space heating setpoint range and the target delta T in heating as follows:

Emitter type Additional zone	Space heating setpoint range [9-05]~[9-06]	Target delta T in heating [1-0C]
0: Underfloor heating	Maximum 55°C	Variable (see [3.B.1])
1: Fancoil unit	Maximum 55°C	Variable (see [3.B.1])
2: Radiator	Maximum 60°C	Fixed 8°C

### Setpoint range

For more information about **Setpoint range**, see "[Main zone](#)" [▶ 154].

#	Code	Description
Leaving water temperature range for the additional leaving water temperature zone (= the leaving water temperature zone with the highest leaving water temperature in heating operation and the lowest leaving water temperature in cooling operation)		
[3.8.1]	[9-05]	Heating minimum: 15°C~37°C
[3.8.2]	[9-06]	<b>Heating maximum</b> <ul style="list-style-type: none"> <li>▪ [2-0D]=2 (emitter type additional zone = radiator) 37°C~60°C</li> <li>▪ Else: 37°C~55°C</li> </ul>
[3.8.3]	[9-07]	<b>Cooling minimum</b> <ul style="list-style-type: none"> <li>▪ 5°C~18°C</li> </ul>
[3.8.4]	[9-08]	<b>Cooling maximum</b> <ul style="list-style-type: none"> <li>▪ 18°C~22°C</li> </ul>

### Control

The control type for the additional zone is read only. It is determined by the control type of the main zone.

See "[Main zone](#)" [▶ 154].

#	Code	Description
[3.9]	N/A	<b>Control:</b> <ul style="list-style-type: none"> <li>▪ <b>Leaving water</b> if the control type of the main zone is <b>Leaving water</b>.</li> <li>▪ <b>External room thermostat</b> if the control type of the main zone is: <ul style="list-style-type: none"> <li>- External room thermostat, or</li> <li>- Room thermostat.</li> </ul> </li> </ul>

### Thermostat type

Only applicable in external room thermostat control.

Also see "[Main zone](#)" [▶ 154].

#	Code	Description
[3.A]	[C-06]	<p>External room thermostat type for the additional zone:</p> <ul style="list-style-type: none"> <li>1: <b>1 contact</b>. Connected to only 1 digital input (X2M/35a)</li> <li>2: <b>2 contacts</b>. Connected to 2 digital inputs (X2M/34a and X2M/35a)</li> </ul>

#### Leaving water temperature: Delta T


For more information, see "[Main zone](#)" [▶ 154].

#	Code	Description
[3.B.1]	[1-0C]	<p><b>Delta T heating:</b> A minimum temperature difference is required for the good operation of heat emitters in heating mode.</p> <ul style="list-style-type: none"> <li>If [2-0D] = 2, this is fixed to 8°C</li> <li>Else: 3°C~10°C</li> </ul>
[3.B.2]	[1-0E]	<p><b>Delta T cooling:</b> A minimum temperature difference is required for the good operation of heat emitters in cooling mode.</p> <ul style="list-style-type: none"> <li>3°C~10°C</li> </ul>

### 11.6.5 Space heating/cooling

#### Overview

The following items are listed in the submenu:

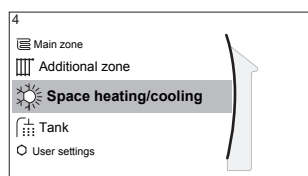

#### [4] Space heating/cooling



- [4.1] Operation mode
- [4.2] Operation mode schedule
- [4.3] Operation range
- [4.4] Number of zones
- [4.5] Pump operation mode
- [4.6] Unit type
- [4.7] Pump limitation
- [4.9] Pump outside range
- [4.A] Increase around 0°C
- [4.B] Overshoot
- [4.C] Antifrost

#### About space operation modes

Your unit can be a heating or a heating/cooling model:

- If your unit is a heating model, it can heat up a space.
- If your unit is a heating/cooling model, it can both heat up and cool down a space. You have to tell the system which operation mode to use.

**To determine if a heating/cooling heat pump model is installed**


 
<b>1</b>	Go to [4]: <b>Space heating/cooling</b> .	
<b>2</b>	Check if [4.1] <b>Operation mode</b> is listed and editable. If so, a heating/cooling heat pump model is installed.	

To tell the system which space operation to use, you can:

You can...	Location
Check which space operation mode is currently used.	Home screen
Set the space operation mode permanently.	Main menu
Restrict automatic changeover according to a monthly schedule.	

**To check which space operation mode is currently used**



The space operation mode is displayed on the home screen:

- When the unit is in heating mode, the  icon is shown.
- When the unit is in cooling mode, the  icon is shown.

The status indicator shows if the unit is currently in operation:

- When the unit is not in operation, the status indicator will show a blue pulsation with an interval of approximately 5 seconds.
- While the unit is in operation, the status indicator will light up blue constantly.

**To set the space operation mode**





<b>1</b>	Go to [4.1]: <b>Space heating/cooling &gt; Operation mode</b>	
<b>2</b>	Select one of the following options: <ul style="list-style-type: none"> <li>▪ <b>Heating:</b> Only heating mode</li> <li>▪ <b>Cooling:</b> Only cooling mode</li> <li>▪ <b>Automatic:</b> The operation mode changes automatically between heating and cooling based on the outdoor temperature. Restricted per month according to the <b>Operation mode schedule</b> [4.2].</li> </ul>	

Automatic heating/cooling changeover is only applicable for reversible models.

When **Automatic** is selected, the unit switches its operation mode, based on the **Operation mode schedule** [4.2]. In this schedule, the end user indicates which operation is allowed for each month.

**To restrict automatic changeover according to a schedule**

**Conditions:** You set the space operation mode to **Automatic**.

<b>1</b>	Go to [4.2]: <b>Space heating/cooling &gt; Operation mode schedule</b> .	
<b>2</b>	Select a month.	
<b>3</b>	For each month, select an option: <ul style="list-style-type: none"> <li>▪ <b>Reversible:</b> Not restricted</li> <li>▪ <b>Heating only:</b> Restricted</li> <li>▪ <b>Cooling only:</b> Restricted</li> </ul>	
<b>4</b>	Confirm the changes.	

**Example: Changeover restrictions**

When	Restriction
During cold season. <b>Example:</b> October, November, December, January, February and March.	Heating only
During warm season. <b>Example:</b> June, July and August.	Cooling only
In-between. <b>Example:</b> April, May and September.	Reversible

The unit determines its operation mode by the outdoor temperature if:

- **Operation mode=Automatic**, and
- **Operation mode schedule=Reversible**.

The unit determines its operation mode in such a way that it will always stay within the following operation ranges:

- **Space heating off temperature**
- **Space cooling off temperature**

The outdoor temperature is time-averaged. If the outdoor temperature drops, the operation mode will switch to heating and vice versa.

If the outdoor temperature is between the **Space heating off temperature** and the **Space cooling off temperature**, the operation mode remains unchanged.

**Operation range**

Depending on the average outdoor temperature, the operation of the unit in space heating or space cooling is prohibited.

#	Code	Description
[4.3.1]	[4-02]	<b>Space heating off temperature:</b> When the averaged outdoor temperature rises above this value, space heating is turned off. <sup>(a)</sup> ▪ 14°C~35°C
[4.3.2]	[F-01]	<b>Space cooling off temperature:</b> When the averaged outdoor temperature drops below this value, space cooling is turned off. <sup>(a)</sup> ▪ 10°C~35°C

<sup>(a)</sup> This setting is also used in automatic heating/cooling changeover.

**NOTICE**

**Maximum value [4-02].** For models without integrated backup heater:

- Default value [4-02]=25°C. You can change this value, but do NOT exceed the maximum value.
- If the external backup heater kit is installed: Maximum value [4-02]=35°C
- If the external backup heater kit is NOT installed: Maximum value [4-02]=25°C

**Exception:** If the system is configured in room thermostat control with one leaving water temperature zone and quick heat emitters, the operation mode will change based on the measured indoor temperature. Besides the desired heating/cooling

room temperature, the installer sets a hysteresis value (e.g. when in heating, this value is related to the desired cooling temperature) and an offset value (e.g. when in heating, this value is related to the desired heating temperature).

**Example:** A unit is configured as following:

- Desired room temperature in heating mode: 22°C
- Desired room temperature in cooling mode: 24°C
- Hysteresis value: 1°C
- Offset: 4°C

Changeover from heating to cooling will occur when the room temperature rises above the maximum of the desired cooling temperature added by the hysteresis value (thus  $24+1=25^{\circ}\text{C}$ ) and the desired heating temperature added by the offset value (thus  $22+4=26^{\circ}\text{C}$ ).

Oppositely, changeover from cooling to heating will occur when the room temperature drops below the minimum of the desired heating temperature subtracted by the hysteresis value (thus  $22-1=21^{\circ}\text{C}$ ) and the desired cooling temperature subtracted by the offset value (thus  $24-4=20^{\circ}\text{C}$ ).

Guard timer to prevent too frequent changing from heating to cooling and vice versa.

#	Code	Description
Changeover settings related to the indoor temperature. Only applicable when <b>Automatic</b> is selected and the system is configured in room thermostat control with 1 leaving water temperature zone and quick heat emitters.		
N/A	[4-0B]	Hysteresis: ensures that changeover is only done when necessary.  The space operation only changes from heating to cooling when the room temperature rises above the desired cooling temperature added by the hysteresis value.  ▪ Range: 1°C~10°C
N/A	[4-0D]	Offset: ensures that the active desired room temperature is always reached.  In heating mode, the space operation only changes when the room temperature rises above the desired heating temperature added by the offset value.  ▪ Range: 1°C~10°C



### Number of zones

The system can supply leaving water to up to 2 water temperature zones. During configuration, the number of water zones must be set.



#### INFORMATION

**Mixing station.** If your system layout contains 2 LWT zones, you need to install a mixing station in front of the main LWT zone.
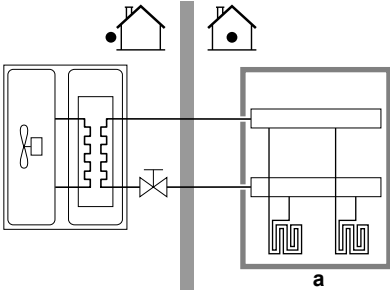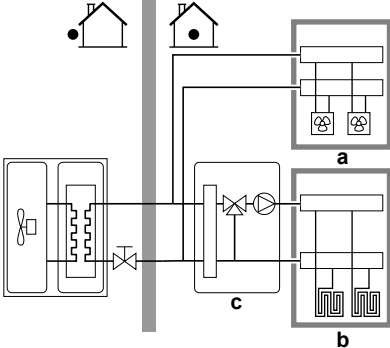
#	Code	Description
[4.4]	[7-02]	<div><div>▪ 0: Single zone</div><div>Only one leaving water temperature zone:</div><div></div><div>a Main LWT zone</div></div>
[4.4]	[7-02]	<div><div>▪ 1: Dual zone</div><div>Two leaving water temperature zones. The main leaving water temperature zone consists of the higher load heat emitters and a mixing station to achieve the desired leaving water temperature. In heating:</div><div></div><div>a Additional LWT zone: Highest temperature</div><div>b Main LWT zone: Lowest temperature</div><div>c Mixing station</div></div>



NOTICE

NOT configuring the system in the following way can cause damage to the heat emitters. If there are 2 zones, it is important that in heating:

- the zone with the lowest water temperature is configured as the main zone, and
- the zone with the highest water temperature is configured as the additional zone.



NOTICE



If there are 2 zones and the emitter types are wrongly configured, water of high temperature can be sent towards a low temperature emitter (underfloor heating). To avoid this:


- Install an aquastat/thermostatic valve to avoid too high temperatures towards a low temperature emitter.
- Make sure you set the emitter types for the main zone [2.7] and for the additional zone [3.7] correctly in accordance with the connected emitter.



### Pump operation mode

When the space heating/cooling operation is OFF, the pump is always OFF. When space heating/cooling operation is ON, you have the choice between these operation modes:
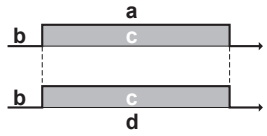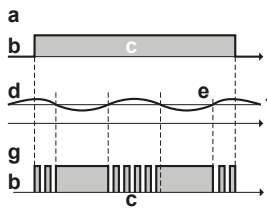
#	Code	Description
[4.5]	[F-0D]	<p><b>Pump operation mode:</b></p> <ul style="list-style-type: none"> <li>▪ <b>0 Continuous:</b> Continuous pump operation, regardless of thermo ON or OFF condition. <b>Remark:</b> Continuous pump operation requires more energy than sample or request pump operation.</li> </ul>  <p><b>a</b> Space heating/cooling control  <b>b</b> Off  <b>c</b> On  <b>d</b> Pump operation</p>
[4.5]	[F-0D]	<ul style="list-style-type: none"> <li>▪ <b>1 Sample:</b> The pump is ON when there is heating or cooling demand as the leaving water temperature has not yet reached the desired temperature yet. When thermo OFF condition occurs, the pump runs every 3 minutes to check the water temperature and demand heating or cooling if necessary. <b>Remark:</b> Sample is ONLY available in leaving water temperature control.</li> </ul>  <p><b>a</b> Space heating/cooling control  <b>b</b> Off  <b>c</b> On  <b>d</b> LWT temperature  <b>e</b> Actual  <b>f</b> Desired  <b>g</b> Pump operation</p>
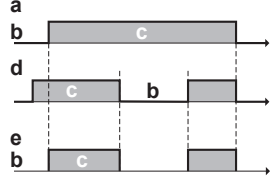
#	Code	Description
[4.5]	[F-0D]	<ul style="list-style-type: none"> <li>▪ <b>2 Request:</b> Pump operation based on request.</li> </ul> <p><b>Example:</b> Using a room thermostat and thermostat creates thermo ON/OFF condition.</p> <p><b>Remark:</b> NOT available in leaving water temperature control.</p>  <p><b>a</b> Space heating/cooling control  <b>b</b> Off  <b>c</b> On  <b>d</b> Heating demand (by external room thermostat or room thermostat)  <b>e</b> Pump operation</p>

### Unit type

In this part of the menu it can be read out which type of unit is used:


#	Code	Description
[4.6]	[E-02]	<p><b>Unit type:</b></p> <ul style="list-style-type: none"> <li>▪ 0 Reversible</li> <li>▪ 1 Heating only</li> </ul>

### Pump limitation

Pump speed limitation [9-0D] defines the maximum pump speed. In normal conditions, the default setting should NOT be modified. The pump speed limitation will be overruled when the flow rate is in the range of the minimum flow (error 7H).

#	Code	Description
[4.7]	[9-0D]	<p><b>Pump limitation:</b></p> <ul style="list-style-type: none"> <li>▪ 0: No limitation</li> <li>▪ 1~4: General limitation. There is limitation in all conditions. The required delta T control and comfort are NOT guaranteed.</li> <li>▪ 5~8: Limitation when no actuators. When there is no heating output, the pump speed limitation is applicable. When there is heating output, the pump speed is only determined by delta T in relation to the required capacity. With this limitation range, delta T is possible and the comfort is guaranteed.</li> </ul>

The maximum values depend on the unit type:

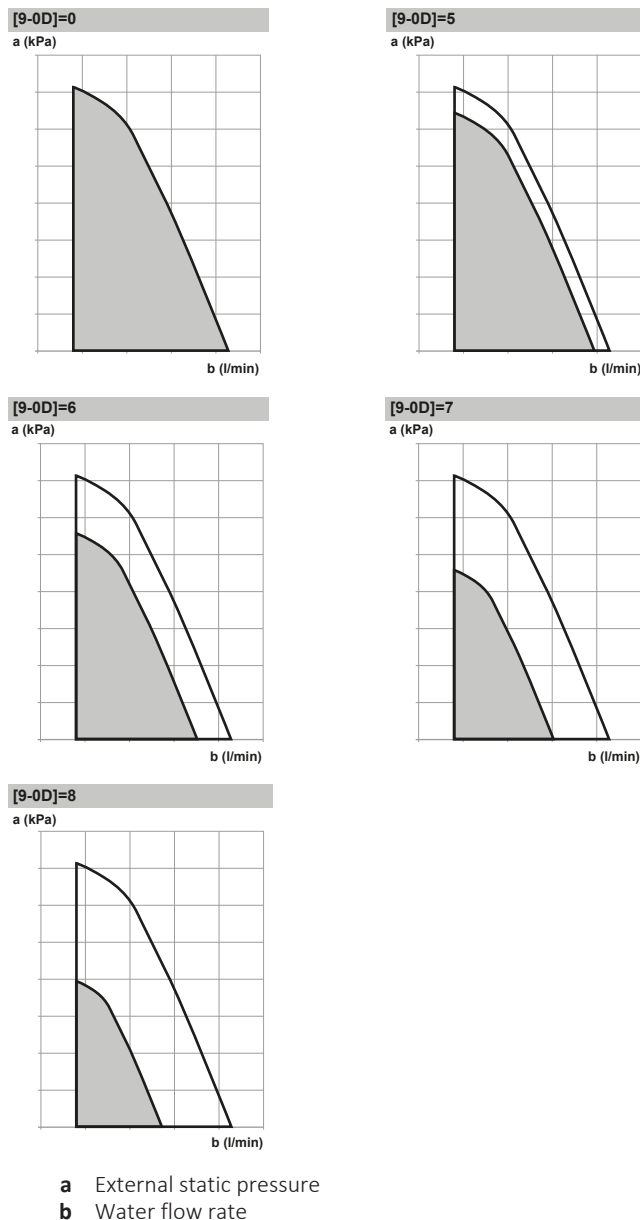

### Pump outside range


When the pump operation function is disabled the pump will stop if the outdoor temperature is higher than the value set by the **Space heating off temperature** [4-02] or if the outdoor temperature drops below the value set by the **Space cooling off temperature** [F-01]. When the pump operation is enabled, the pump operation is possible at all outdoor temperatures.

#	Code	Description
[4.9]	[F-00]	Pump operation: <ul style="list-style-type: none"> <li>0: Disabled if outdoor temperature is higher than [4-02] or lower than [F-01] depending on heating/cooling operation mode.</li> <li>1: Possible at all outdoor temperatures.</li> </ul>

### Increase around 0°C

Use this setting to compensate for possible heat losses of the building due to the evaporation of melted ice or snow. (e.g. in cold region countries).

In heating operation, the desired leaving water temperature is locally increased around an outdoor temperature of 0°C. This compensation can be selected when using an absolute or a weather dependent desired temperature (see illustration below).

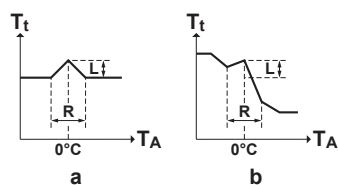

a Absolute desired LWT

b Weather dependent desired LWT

#	Code	Description
[4.A]	[D-03]	Increase around 0°C: <ul style="list-style-type: none"> <li>0: No</li> <li>1: increase 2°C, span 4°C</li> <li>2: increase 4°C, span 4°C</li> <li>3: increase 2°C, span 8°C</li> <li>4: increase 4°C, span 8°C</li> </ul>

### Overshoot

**Restriction:** This function is only applicable in heating mode.

This function defines how much the water temperature may rise above the desired leaving water temperature before the compressor stops. The compressor will start up again when the leaving water temperature drops below the desired leaving water temperature.

#	Code	Description
[4.B]	[9-04]	Overshoot: <ul style="list-style-type: none"> <li>1°C~4°C</li> </ul>

### Undershoot

**Restriction:** This function is only applicable in cooling mode during compressor startup. It is NOT applicable for stable operation.

This function defines how much the water temperature may drop below the desired leaving water temperature before the compressor stops. The compressor will start up again when the leaving water temperature rises above the desired leaving water temperature.

#	Code	Description
N/A	[9-09]	Undershoot: <ul style="list-style-type: none"> <li>1°C~18°C</li> </ul>


### Antifrost

**Antifrost** [1.4] or [4.C] prevents the room from getting too cold. For more information about room frost protection, see "[Room](#)" ► 149].

## 11.6.6 Tank

### Overview

The following items are listed in the submenu:

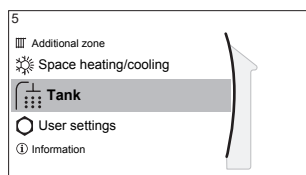

## [5] Tank

Setpoint screen

[5.1] **Powerful operation**

[5.2] **Comfort setpoint**

[5.3] **Eco setpoint**

[5.4] **Reheat setpoint**

[5.5] **Schedule**

[5.6] **Heat up mode**

[5.7] **Disinfection**

[5.8] **Maximum**

[5.9] **Hysteresis**

[5.A] **Hysteresis**

[5.B] **Setpoint mode**

[5.C] **WD curve**

[5.D] **Margin**

### Tank setpoint screen

You can set the domestic hot water temperature using the setpoint screen. For more information about how to do this, see "[Setpoint screen](#)" ► 132].

### Powerful operation

You can use powerful operation to immediately start heating up the water to the preset value (Storage comfort). However, this consumes extra energy. If powerful operation is active, will be shown on the home screen.

#### To activate powerful operation

Activate or deactivate **Powerful operation** as follows:

<b>1</b>	Go to [5.1]: <b>Tank &gt; Powerful operation</b>	
<b>2</b>	Turn powerful operation <b>Off</b> or <b>On</b> .	

Usage example: You immediately need more hot water

If you are in the following situation:

- You already consumed most of your hot water.
- You cannot wait for the next scheduled action to heat up the DHW tank.

Then you can activate DHW powerful operation.

**Advantage:** The DHW tank immediately starts heating up the water to the preset value (Storage comfort).



#### INFORMATION

When powerful operation is active, the risk of space heating/cooling and capacity shortage comfort problems is significant. In case of frequent domestic hot water operation, frequent and long space heating/cooling interruptions will happen.

### Comfort setpoint

Only applicable when domestic hot water preparation is **Schedule only** or **Schedule + reheat**. When programming the schedule, you can make use of the comfort setpoint as a preset value. When you later want to change the storage setpoint, you only have to do it in one place.

The tank will heat up until the **storage comfort temperature** has been reached. It is the higher desired temperature when a storage comfort action is scheduled.

Additionally, a storage stop can be programmed. This feature puts a stop to tank heating even if the setpoint has NOT been reached. Only program a storage stop when tank heating is absolutely undesirable.

#	Code	Description
[5.2]	[6-0A]	Comfort setpoint: ▪ 30°C~[6-0E]°C

### Eco setpoint

The **storage economic temperature** denotes the lower desired tank temperature. It is the desired temperature when a storage economic action is scheduled (preferably during day).

#	Code	Description
[5.3]	[6-0B]	Eco setpoint: ▪ 30°C~min(50,[6-0E])°C

### Reheat setpoint

**Desired reheat tank temperature**, used:

- in **Schedule + reheat** mode, during reheat mode: the guaranteed minimum tank temperature is set by the **Reheat setpoint** minus the reheat hysteresis. If the tank temperature drops below this value, the tank is heated up.
- during storage comfort, to prioritize the domestic hot water preparation. When the tank temperature rises above this value, domestic hot water preparation and space heating/cooling are executed sequentially.

#	Code	Description
[5.4]	[6-0C]	Reheat setpoint: ▪ 30°C~min(50,[6-0E])°C

### Schedule

You can set the tank temperature schedule using the schedule screen. For more information about this screen, see "[Schedule screen: Example](#)" [▶ 138].

### Heat up mode

The domestic hot water can be prepared in 3 different ways. They differ from each other by the way the desired tank temperature is set and how the unit acts upon it.

#	Code	Description
[5.6]	[6-0D]	Heat up mode: ▪ 0: <b>Reheat only</b> : Only reheat operation is allowed. ▪ 1: <b>Schedule + reheat</b> : The domestic hot water tank is heated according to a schedule and between the scheduled heat up cycles, reheat operation is allowed. ▪ 2: <b>Schedule only</b> : The domestic hot water tank can ONLY be heated according to a schedule.

See the operation manual for more details.

**INFORMATION**

Risk of space heating capacity shortage for domestic hot water tank without internal booster heater: In case of frequent domestic hot water operation, frequent and long space heating/cooling interruption will happen when selecting the following:

**Tank > Heat up mode > Reheat only.**

**Disinfection**


Applies only to installations with a domestic hot water tank.

The disinfection function disinfects the domestic hot water tank by periodically heating the domestic hot water to a specific temperature.

**CAUTION**

The disinfection function settings **MUST** be configured by the installer according to the applicable legislation.

#	Code	Description
[5.7.1]	[2-01]	<b>Activation:</b> <ul style="list-style-type: none"> <li>0: No</li> <li>1: Yes</li> </ul>
[5.7.2]	[2-00]	<b>Operation day:</b> <ul style="list-style-type: none"> <li>0: Every day</li> <li>1: Monday</li> <li>2: Tuesday</li> <li>3: Wednesday</li> <li>4: Thursday</li> <li>5: Friday</li> <li>6: Saturday</li> <li>7: Sunday</li> </ul>
[5.7.3]	[2-02]	<b>Start time</b>
[5.7.4]	[2-03]	<b>Tank setpoint:</b> 55°C~75°C
[5.7.5]	[2-04]	<b>Duration:</b> 5~60 minutes

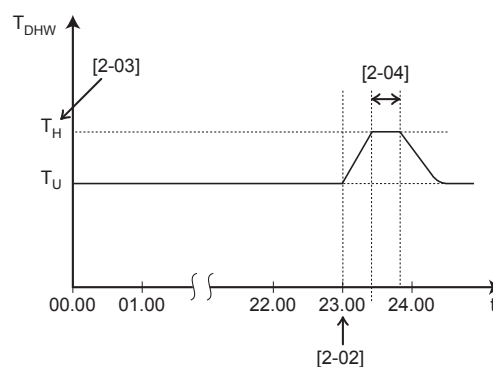

$T_{DHW}$  Domestic hot water temperature  
 $T_U$  User setpoint temperature  
 $T_H$  High setpoint temperature [2-03]  
 $t$  Time

**WARNING**

Be aware that the domestic hot water temperature at the hot water tap will be equal to the value selected in field setting [2-03] after a disinfection operation.

When the high domestic hot water temperature can be a potential risk for human injuries, a mixing valve (field supply) shall be installed at the hot water outlet connection of the domestic hot water tank. This mixing valve shall secure that the hot water temperature at the hot water tap never rise above a set maximum value. This maximum allowable hot water temperature shall be selected according to the applicable legislation.

**CAUTION**

Be sure that the disinfection function start time [5.7.3] with defined duration [5.7.5] is NOT interrupted by possible domestic hot water demand.

**CAUTION**

**BSH allowance schedule** [9.4.2] is used to restrict or allow booster heater operation based on a weekly program. Advice: In order to avoid unsuccessful disinfection function, at least allow the booster heater (by the weekly program) for minimum 4 hours starting from the scheduled start-up of disinfection. If the booster heater is restricted during disinfection, this function will NOT be successful and the applicable warning AH will be generated.

**NOTICE**

**Disinfection mode.** Even if you turn OFF tank heating operation ([C.3]: **Operation** > **Tank**), disinfection mode will remain active. However, if you turn it OFF while disinfection is running, an AH error occurs.

**INFORMATION**

In case of error code AH and no interruption of the disinfection function occurred due to domestic hot water tapping, following actions are recommended:

- When the **Reheat only** or **Schedule + reheat** mode is selected, it is recommended to program the start-up of the disinfection function at least 4 hours later than the last expected large hot water tapping. This start-up can be set by installer settings (disinfection function).
- When the **Schedule only** mode is selected, it is recommended to program an **Eco** action 3 hours before the scheduled start-up of the disinfection function to preheat the tank.

**INFORMATION**

Disinfection function is restarted in case the domestic hot water temperature drops 5°C below the disinfection target temperature within the duration time.

**Maximum DHW temperature setpoint**

The maximum temperature that users can select for the domestic hot water. You can use this setting to limit the temperatures at the hot water taps.

**INFORMATION**

During disinfection of the domestic hot water tank, the DHW temperature can exceed this maximum temperature.

**INFORMATION**

Limit the maximum hot water temperature according to the applicable legislation.



#	Code	Description
[5.8]	[6-0E]	<b>Maximum:</b> The maximum temperature that users can select for the domestic hot water. You can use this setting to limit the temperature at the hot water taps. The maximum temperature is NOT applicable during disinfection function. See disinfection function.

### Hysteresis

The following ON hysteresis can be set.

#### Heat pump ON hysteresis

Applicable when domestic hot water preparation is reheat only. When the tank temperature drops below the reheat temperature minus the heat pump ON hysteresis temperature, the tank heats up to the reheat temperature.

The minimum ON temperature is 20°C, even if setpoint hysteresis is smaller than 20°C.

#	Code	Description
[5.9]	[6-00]	Heat pump ON hysteresis ▪ 2°C~40°C

#### Reheat hysteresis

Applicable when domestic hot water preparation is scheduled+reheat. When the tank temperature drops below the reheat temperature minus the reheat hysteresis temperature, the tank heats up to the reheat temperature.

#	Code	Description
[5.A]	[6-08]	Reheat hysteresis ▪ 2°C~20°C

#### Setpoint mode

#	Code	Description
[5.B]	N/A	<b>Setpoint mode:</b> ▪ Fixed ▪ Weather dependent

#### WD curve type

The weather dependent curve can be set using the **2-points** method or the **Slope-Offset** method. For more information about each method, see "[2-points curve](#)" [▶ 144] and "[Slope-offset curve](#)" [▶ 145]. The curve type in the menu is read only, and will correspond to the curve type set for the main zone. Changing the curve type for the tank must be done in the main zone **WD curve type** [2.E] menu. See "[Main zone](#)" [▶ 154] for more information.

#	Code	Description
[5.E]	N/A	▪ 0: 2-points ▪ 1: Slope-Offset

### WD curve

When weather dependent operation is active the desired tank temperature is determined automatically depending on the averaged outdoor temperature: low outdoor temperatures will result in higher desired tank temperatures as the cold water tap is colder and vice versa.

In case of **Schedule only** or **Schedule + reheat** domestic hot water preparation, the storage comfort temperature is weather dependent (according to the weather dependent curve), the storage economic and reheat temperature are NOT weather dependent.

In case of **Reheat only** domestic hot water preparation, the desired tank temperature is weather dependent (according to the weather dependent curve). During weather dependent operation, the end-user cannot adjust the desired tank temperature on the user interface. Also see "[11.5 Weather-dependent curve](#)" [▶ 144].


#	Code	Description
[5.C]	[0-0E] [0-0D] [0-0C] [0-0B]	<p><b>WD curve:</b></p> <p><b>Note:</b> There are 2 methods to set the weather dependent curve. See "<a href="#">2-points curve</a>" [▶ 144] and "<a href="#">Slope-offset curve</a>" [▶ 145] for more information about the different curve types. Both curve types require 4 field settings to be configured according to the figure below.</p> <ul style="list-style-type: none"> <li>▪ <math>T_{DHW}</math>: The desired tank temperature.</li> <li>▪ <math>T_a</math>: The (averaged) outdoor ambient temperature</li> <li>▪ [0-0E]: low outdoor ambient temperature: <math>-40^{\circ}\text{C} \sim 5^{\circ}\text{C}</math></li> <li>▪ [0-0D]: high outdoor ambient temperature: <math>10^{\circ}\text{C} \sim 25^{\circ}\text{C}</math></li> <li>▪ [0-0C]: desired tank temperature when the outdoor temperature equals or drops below the low ambient temperature: <math>45^{\circ}\text{C} \sim [6-0E]^{\circ}\text{C}</math></li> <li>▪ [0-0B]: desired tank temperature when the outdoor temperature equals or rises above the high ambient temperature: <math>35^{\circ}\text{C} \sim [6-0E]^{\circ}\text{C}</math></li> </ul>

### Margin

In domestic hot water operation, the following hysteresis value can be set for the heat pump operation:

#	Code	Description
[5.D]	[6-01]	The temperature difference determining the heat pump OFF temperature. Range: 0°C~10°C

Example: setpoint ( $T_U$ ) > maximum heat pump temperature-[6-01] ( $T_{HP\ MAX}$ -[6-01])

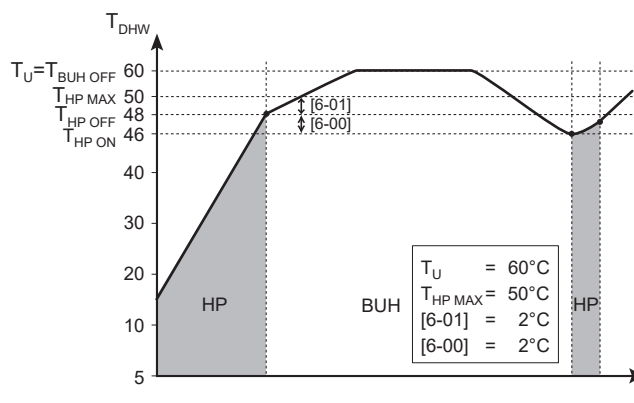

**BUH** Backup heater

**HP** Heat pump. If heating up time by the heat pump takes too long, auxiliary heating by the backup heater can take place

$T_{BUH\ OFF}$  Backup heater OFF temperature ( $T_U$ )

$T_{HP\ MAX}$  Maximum heat pump temperature at sensor in domestic hot water tank

$T_{HP\ OFF}$  Heat pump OFF temperature ( $T_{HP\ MAX}$ -[6-01])


$T_{HP\ ON}$  Heat pump ON temperature ( $T_{HP\ OFF}$ -[6-00])

$T_{DHW}$  Domestic hot water temperature

$T_U$  User setpoint temperature (as set on the user interface)

$t$  Time

Example: setpoint ( $T_U$ ) ≤ maximum heat pump temperature-[6-01] ( $T_{HP\ MAX}$ -[6-01])

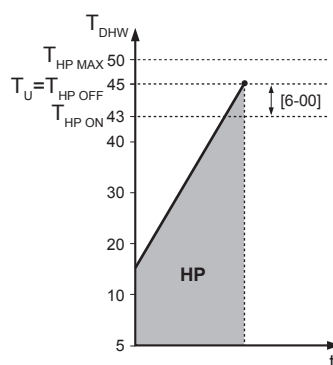

**HP** Heat pump. If heating up time by the heat pump takes too long, auxiliary heating by the backup heater can take place

$T_{HP\ MAX}$  Maximum heat pump temperature at sensor in domestic hot water tank

$T_{HP\ OFF}$  Heat pump OFF temperature ( $T_{HP\ MAX}$ -[6-01])

$T_{HP\ ON}$  Heat pump ON temperature ( $T_{HP\ OFF}$ -[6-00])

$T_{DHW}$  Domestic hot water temperature

$T_U$  User setpoint temperature (as set on the user interface)

$t$  Time




#### INFORMATION

The maximum heat pump temperature depends on the ambient temperature. For more information, see the operation range.

11.6.7 User settings

Overview

The following items are listed in the submenu:

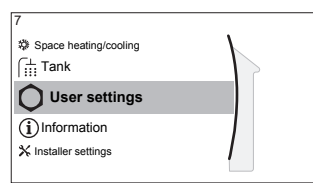

[7] User settings

[7.1] Language

[7.2] Time/date

[7.3] Holiday

[7.4] Quiet

[7.5] Electricity price


[7.6] Gas price

Language

#	Code	Description
[7.1]	N/A	Language

Time/date

#	Code	Description
[7.2]	N/A	Set the local time and date



**INFORMATION**

By default, daylight savings time is enabled and clock format is set to 24 hours. These settings can be changed during initial configuration or via the menu structure [7.2]: **User settings > Time/date.**

Holiday

About holiday mode


During your holiday, you can use the holiday mode to deviate from your normal schedules without having to change them. While holiday mode is active, space heating/cooling operation and domestic hot water operation will be turned off. Room frost protection, water pipe freeze prevention and anti-legionella operation will remain active.

Typical workflow










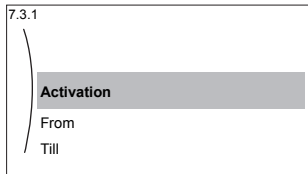

Using holiday mode typically consists of the following stages:

- 1 Setting the starting date and ending date of your holiday.
- 2 Activating the holiday mode.

To check if holiday mode is activated and/or running

If  is displayed on the home screen, holiday mode is active.

### To configure the holiday

1	Activate the holiday mode.	—
	<ul style="list-style-type: none"> <li>Go to [7.3.1]: <b>User settings &gt; Holiday &gt; Activation.</b></li> </ul> 	
	<ul style="list-style-type: none"> <li>Select <b>On</b>.</li> </ul>	
2	Set the first day of your holiday.	—
	<ul style="list-style-type: none"> <li>Go to [7.3.2]: <b>From</b>.</li> </ul>	
	<ul style="list-style-type: none"> <li>Select a date.</li> </ul>	 
	<ul style="list-style-type: none"> <li>Confirm the changes.</li> </ul>	
3	Set the last day of your holiday.	—
	<ul style="list-style-type: none"> <li>Go to [7.3.3]: <b>Till</b>.</li> </ul>	
	<ul style="list-style-type: none"> <li>Select a date.</li> </ul>	 
	<ul style="list-style-type: none"> <li>Confirm the changes.</li> </ul>	

## Quiet

### About quiet mode

You can use quiet mode to decrease the sound of the outdoor unit. However, this also decreases the heating/cooling capacity of the system. There are multiple quiet mode levels.

The installer can:

- Completely deactivate quiet mode
- Manually activate a quiet mode level
- Enable the user to program a quiet mode schedule

If enabled by the installer, the user can program a quiet mode schedule.




#### INFORMATION



 

If the outdoor temperature is below zero, we recommend to NOT use the most quiet level.

### To check if quiet mode is active

If  is displayed on the home screen, quiet mode is active.

### To use quiet mode

1	Go to [7.4.1]: <b>User settings &gt; Quiet &gt; Activation.</b>	
2	Do one of the following:	—

If you want to...	Then...	
Completely deactivate quiet mode	Select <b>Off</b> . <b>Result:</b> The unit never runs in quiet mode. The user cannot change this.	
Manually activate a quiet mode level	Select <b>Manual</b> .	
	Go to [7.4.3] <b>Level</b> and select the applicable quiet mode level. <b>Example: Most quiet.</b> <b>Result:</b> The unit always runs in the selected quiet mode level. The user cannot change this.	
Enable the user to program a quiet mode schedule	Select <b>Automatic</b> . <b>Result:</b> The unit runs in quiet mode according to a schedule. The user (or you) can program the schedule in [7.4.2] <b>Schedule</b> . For more information about scheduling, see " <a href="#">Schedule screen: Example</a> " [▶ 138].	

### Electricity prices and gas price

Only applicable in combination with the bivalent function. See also "[Bivalent](#)" [▶ 208].



 
#	Code	Description
[7.5.1]	N/A	Electricity price > High
[7.5.2]	N/A	Electricity price > Medium
[7.5.3]	N/A	Electricity price > Low
[7.6]	N/A	Gas price



#### INFORMATION

Electricity price can only be set when bivalent is ON ([9.C.1] or [C-02]). These values can only be set in menu structure [7.5.1], [7.5.2] and [7.5.3]. Do NOT use overview settings.

### To set the gas price




<b>1</b>	Go to [7.6]: <b>User settings &gt; Gas price</b> .	
<b>2</b>	Select the correct gas price.	
<b>3</b>	Confirm the changes.	



#### INFORMATION

 Price value ranging from 0.00~990 valuta/kWh (with 2 significant values).

### To set the electricity price

<b>1</b>	Go to [7.5.1]/[7.5.2]/[7.5.3]: <b>User settings &gt; Electricity price &gt; High/Medium/Low</b> .	
<b>2</b>	Select the correct electricity price.	
<b>3</b>	Confirm the changes.	

4	Repeat this for all three electricity prices.	—
---	---	---

**INFORMATION**

Price value ranging from 0.00~990 valuta/kWh (with 2 significant values).

**INFORMATION**

If no schedule is set, the **Electricity price** for **High** is taken into account.

**To set the electricity price schedule timer**

1	Go to [7.5.4]: <b>User settings &gt; Electricity price &gt; Schedule</b> .	
2	Program the selection using the scheduling screen. You can set the <b>High</b> , <b>Medium</b> and <b>Low</b> electricity prices according to your electricity supplier.	—
3	Confirm the changes.	

**INFORMATION**

The values correspond with the electricity price values for **High**, **Medium** and **Low** previously set. If no schedule is set, the electricity price for **High** is taken into account.

**About energy prices in case of an incentive per kWh renewable energy**

An incentive can be taken into account when setting the energy prices. Although the running cost can increase, the total operation cost, taking into account the reimbursement will be optimized.

**NOTICE**

Make sure to modify the setting of the energy prices at the end of the incentive period.

**To set the gas price in case of an incentive per kWh renewable energy**

Calculate the value for the gas price with the following formula:

- Actual gas price+(Incentive/kWh×0.9)

For the procedure to set the gas price, see ["To set the gas price"](#) [▶ 186].

**To set the electricity price in case of an incentive per kWh renewable energy**

Calculate the value for the electricity price with following formula:

- Actual electricity price+Incentive/kWh

For the procedure to set the electricity price, see ["To set the electricity price"](#) [▶ 186].

**Example**

This is an example and the prices and/or values used in this example are NOT accurate.

Data	Price/kWh
Gas price	4.08
Electricity price	12.49
Renewable heat incentive per kWh	5

### Calculation of the gas price

Gas price=Actual gas price+(Incentive/kWh×0.9)

Gas price=4.08+(5×0.9)

Gas price=8.58

### Calculation of the electricity price

Electricity price=Actual electricity price+Incentive/kWh

Electricity price=12.49+5


Electricity price=17.49

Price	Value in breadcrumb
Gas: 4.08 /kWh	[7.6]=8.6
Electricity: 12.49 /kWh	[7.5.1]=17

## 11.6.8 Information

### Overview

The following items are listed in the submenu:

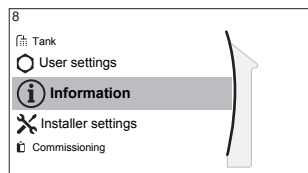

#### [8] Information

- [8.1] Energy data
- [8.2] Malfunction history
- [8.3] Dealer information
- [8.4] Sensors
- [8.5] Actuators
- [8.6] Operation modes
- [8.7] About
- [8.8] Connection status
- [8.9] Running hours
- [8.A] Reset

### Dealer information

The installer can fill in his contact number here.

#	Code	Description
[8.3]	N/A	Number that users can call in case of problems.

### Reset

Reset the configuration settings stored in the MMI (user interface delivered as accessory).

**Example:** Energy meterings, holiday settings.



#### INFORMATION

This does not reset the configuration settings and field settings of the hydro module of the outdoor unit.



#	Code	Description
[8.A]	N/A	Reset the MMI EEPROM to factory default


#### Possible read-out information

In menu...	You can read out...
[8.1] Energy data	Produced energy, consumed electricity, and consumed gas
[8.2] Malfunction history	Malfunction history
[8.3] Dealer information	Contact/helpdesk number
[8.4] Sensors	Room temperature, outside temperature, leaving water temperature,...
[8.5] Actuators	Status/mode of each actuator <b>Example:</b> Unit pump ON/OFF
[8.6] Operation modes	Current operation mode <b>Example:</b> Defrost/oil return mode
[8.7] About	Version information about the system
[8.8] Connection status	Information about the connection status of the unit, the room thermostat and WLAN.
[8.9] Running hours	Running hours of specific system components

### 11.6.9 Installer settings

#### Overview

The following items are listed in the submenu:

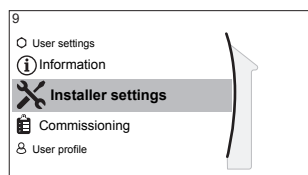

## [9] Installer settings

- [9.1] Configuration wizard
- [9.2] Domestic hot water
- [9.3] Backup heater
- [9.4] Booster heater
- [9.5] Emergency
- [9.6] Balancing
- [9.7] Water pipe freeze prevention
- [9.8] Benefit kWh power supply
- [9.9] Power consumption control
- [9.A] Energy metering
- [9.B] Sensors
- [9.C] Bivalent
- [9.D] Alarm output
- [9.E] Auto restart
- [9.F] Power saving function
- [9.G] Disable protections
- [9.H] Forced defrost
- [9.I] Overview field settings
- [9.N] Export MMI settings

### Configuration wizard

After first power ON of the system, the user interface will guide you using the configuration wizard. This way you can set the most important initial settings. This way the unit will be able to run properly. Afterwards, more detailed settings can be done via the menu structure if required.

To restart the configuration wizard, go to **Installer settings > Configuration wizard [9.1]**.

### Domestic hot water

This part only applies to systems with an optional domestic hot water tank installed.

#### Domestic hot water

The following setting determines if the system can prepare domestic hot water or not, and which tank is used. Set this setting according to the actual installation.

#	Code	Description
[9.2.1]	[E-05] <sup>(a)</sup>	▪ No DHW
	[E-06] <sup>(a)</sup>	No tank installed.
	[E-07] <sup>(a)</sup>	▪ EKHWS/E Tank with booster heater installed at the side of the tank. ▪ EKHWP/HYC Tank with optional booster heater installed at the top of the tank.

- <sup>(a)</sup> Use the menu structure instead of the overview settings. Menu structure setting [9.2.1] replaces the following 3 overview settings:
- [E-05]: Can the system prepare domestic hot water?
  - [E-06]: Is a domestic hot water tank installed in the system?
  - [E-07]: What kind of domestic hot water tank is installed?

In case of EKHWP, we recommend to use the following settings:

#	Code	Item	EKHWP
[9.2.1]	[E-07]	Tank type	5: EKHWP/HYC
N/A	[4-05]	Thermistor type	0: Automatic
[5.8]	[6-0E]	Maximum tank temperature	≤70°C

In case of EKHWS\*D\* / EKHWSU\*D\*, we recommend to use the following settings:

#	Code	Item	EKHWS*D* / EKHWSU*D*
[9.2.1]	[E-07]	Tank type	0: EKHWS/E
N/A	[4-05]	Thermistor type	0: Automatic
[5.8]	[6-0E]	Maximum tank temperature	≤75°C

In case of a third-party tank, we recommend to use the following settings:

#	Code	Item	Third-party tank
[9.2.1]	[E-07]	Tank type	0: EKHWS/E
N/A	[4-05]	Thermistor type	0: Automatic
[5.8]	[6-0E]	Maximum tank temperature	≤75°C

**DHW pump**

#	Code	Description
[9.2.2]	[D-02]	<b>DHW pump:</b> <ul style="list-style-type: none"> <li>0: <b>No DHW pump:</b> NOT installed</li> <li>1: <b>Instant hot water:</b> Installed for instant hot water when water is tapped. The user sets the operation timing of the domestic hot water pump using the schedule. Control of this pump is possible with the user interface.</li> <li>2 <b>Disinfection:</b> Installed for disinfection. It runs when the disinfection function of the domestic hot water tank is running. No further settings are needed.</li> <li>3 <b>Circulation :</b> Installed for tank preheating. Necessary for systems without backup heater. It runs when the domestic hot water tank is being preheated. No further settings are needed.</li> <li>4 <b>Circulation and disinfection:</b> Combination of 2 and 3. It runs when the disinfection function of the domestic hot water tank is running, or when the domestic hot water tank is being preheated. No further settings are needed.</li> </ul>

See also:

- "DHW pump for instant hot water" [► 50]
- "DHW pump for disinfection" [► 51]
- "DHW pump for tank preheating" [► 52]

**DHW pump schedule**

Program a schedule for the DHW pump (**only for field supplied domestic hot water pump for secondary return**).

**Program a domestic hot water pump schedule** to determine when to turn on and off the pump.

When turned on, the pump runs and makes sure hot water is instantly available at the tap. To save energy, only turn on the pump during periods of the day when instant hot water is necessary.

**Backup heater**

Besides the type of backup heater, the voltage, configuration and capacity must be set on the user interface.

The capacities for the different steps of the backup heater must be set for the energy metering and/or power consumption feature to work properly. When measuring the resistance value of each heater, you can set the exact heater capacity and this will lead to more accurate energy data.

**Backup heater type**

- For models with integrated backup heater, this is fixed to 3V.

- For other models, this can be set to **No heater**, or **External heater** (i.e. when the optional external backup heater kit is installed).

#	Code	Description
[9.3.1]	[E-03]	<ul style="list-style-type: none"> <li>0: No heater</li> <li>1: External heater</li> <li>2: 3V</li> </ul>

### Voltage

- For a 3V model, this is fixed to 230V, 1ph.
- The optional external backup heater can be set to 230V, 1ph or 400V, 3ph.

#	Code	Description
[9.3.2]	[5-0D]	<ul style="list-style-type: none"> <li>0: 230V, 1ph</li> <li>2: 400V, 3ph</li> </ul>

### Configuration

The backup heater can be configured in different ways. It can be chosen to have a 1-step only backup heater or a backup heater with 2 steps. If 2 steps, the capacity of the second step depends on this setting. It can also be chosen to have a higher capacity of the second step in emergency.

- For a 3V model, this is fixed to Relay 1.
- The optional external backup heater can be set to the following:

#	Code	Description
[9.3.3]	[4-0A]	<ul style="list-style-type: none"> <li>0: Relay 1</li> <li>1: Relay 1 / Relay 1+2</li> <li>2: Relay 1 / Relay 2</li> <li>3: Relay 1 / Relay 2 <b>Emergency</b> Relay 1+2</li> </ul>



#### INFORMATION

Settings [9.3.3] and [9.3.5] are linked. Changing one setting influences the other. If you change one, check if the other is still as expected.



#### INFORMATION

During normal operation, the capacity of the second step of the backup heater at nominal voltage is equal to [6-03]+[6-04].



#### INFORMATION

If [4-0A]=3 and emergency mode is active, the power usage of the backup heater is maximal and equal to  $2 \times [6-03] + [6-04]$ .

### Capacity step 1

#	Code	Description
[9.3.4]	[6-03]	<ul style="list-style-type: none"> <li>The capacity of the first step of the backup heater at nominal voltage.</li> </ul>

### Additional capacity step 2

**Restriction:** Only applicable in case the external backup heater kit is installed.

#	Code	Description
[9.3.5]	[6-04]	<ul style="list-style-type: none"> <li>The capacity difference between the second and first step of the backup heater at nominal voltage. Nominal value depends on backup heater configuration.</li> </ul>

### Equilibrium

#	Code	Description
[9.3.6]	[5-00]	<b>Equilibrium:</b> Is backup heater operation allowed above equilibrium temperature during space heating operation? <ul style="list-style-type: none"> <li>1: NOT allowed</li> <li>0: Allowed</li> </ul>
[9.3.7]	[5-01]	<b>Equilibrium temperature:</b> Outdoor temperature below which operation of the backup heater is allowed. Range: -15°C~35°C



#### INFORMATION

Above 10°C ambient temperature, the heat pump will operate until 55°C. Configuring a higher setpoint with an ambient temperature that is higher than the set equilibrium temperature will prevent the backup heater from assisting. The backup heater will ONLY assist if you increase the equilibrium temperature [5-01] to the required ambient temperature you need to reach the higher setpoint.

### Operation

#	Code	Description
[9.3.8]	[4-00]	Backup heater operation: <ul style="list-style-type: none"> <li>0: Restricted</li> <li>1: Allowed</li> <li>2: Only DHW: Backup heater operation is enabled for domestic hot water and disabled for space heating.</li> </ul>

## Booster heater

### Capacity

The capacity of the booster heater must be set for the energy metering and/or power consumption control feature to work properly. When measuring the resistance value of the booster heater, you can set the exact heater capacity and this will lead to more accurate energy data.

#	Code	Description
[9.4.1]	[6-02]	<b>Capacity</b> [kW]. Only applies to domestic hot water tank with an internal booster heater. The capacity of the booster heater at nominal voltage. Range: 0~10 kW

### BSH allowance schedule

Program when the booster heater can operate. You can set a schedule for the booster heater here using the schedule screen. Two actions per day are allowed in a week schedule. For more information, see "[Schedule screen: Example](#)" [▶ 138].

**Example:** Only allow the booster heater to operate during the night.

### BSH eco timer

#	Code	Description
[9.4.3]	[8-03]	<p>Booster heater delay timer.</p> <p>Start-up delay time for the booster heater when domestic hot water mode is active.</p> <ul style="list-style-type: none"> <li>When domestic hot water mode is NOT active, the delay time is 20 minutes.</li> <li>The delay time starts from booster heater ON temperature.</li> <li>By adapting the booster heater delay time versus the maximum running time, you can find an optimal balance between the energy efficiency and the heat up time.</li> <li>If the booster heater delay time is set too high, it might take a long time before the domestic hot water reaches its set temperature.</li> <li>The setting [8-03] is only meaningful if setting [4-03]=1. Setting [4-03]=0/2/3/4 limits the booster heater automatically in relation to heat pump operation time in domestic water heating mode.</li> <li>Make sure that [8-03] is always in relation with the maximum running time [8-01].</li> </ul> <p>Range: 20~95 minutes</p>

### Operation

#	Code	Description
[9.4.4]	[4-03]	<p>Defines the operation permission of the booster heater depending on ambient, domestic hot water temperature or operation mode of heat pump. This setting is only applicable in reheat mode for applications with separate domestic hot water tank. When setting [4-03]=1/2/3/4, the booster heater operation can still be restricted by the booster heater allowance schedule.</p>

#	Code	Description
[9.4.4]	[4-03]	<ul style="list-style-type: none"> <li>▪ <b>0 Restricted:</b> Booster heater operation is NOT allowed except for "Disinfection function" and "Powerful domestic water heating".</li> </ul> <p>Only use this in case the heat pump capacity can cover the heating requirements of the house and domestic hot water during the complete heating season.</p> <p>The booster heater will not be allowed to operate when <math>T_a &lt; [5-03]</math> and <math>[5-02]=1</math>. The domestic hot water temperature can be maximum the heat pump OFF temperature.</p>
[9.4.4]	[4-03]	<ul style="list-style-type: none"> <li>▪ <b>1 Allowed:</b> Booster heater operation is allowed when required.</li> </ul>
[9.4.4]	[4-03]	<ul style="list-style-type: none"> <li>▪ <b>2 Overlap:</b> The booster heater is allowed outside the operation range of the heat pump for domestic hot water operation.</li> </ul> <p>Booster heater operation is only allowed if:</p> <ul style="list-style-type: none"> <li>- Ambient temperature is out of the operating range: <math>T_a &lt; [5-03]</math> or <math>T_a &gt; 35^{\circ}\text{C}</math></li> </ul> <p>The booster heater is only allowed to operate when <math>T_a &lt; [5-03]</math> if space heating priority is enabled (<math>[5-02]=1</math>).</p> <ul style="list-style-type: none"> <li>- Domestic hot water temperature is <math>2^{\circ}\text{C}</math> lower than the heat pump OFF temperature.</li> </ul> <p>If bivalent operation is enabled (<math>[C-02]=1</math>) and permission signal for auxiliary boiler is ON, the booster heater will be restricted even when <math>T_a &lt; [5-03]</math>.</p>
9.4.4	[4-03]	<ul style="list-style-type: none"> <li>▪ <b>3 Compressor off:</b> The booster heater is allowed when the heat pump is NOT active in domestic hot water operation.</li> </ul> <p>Same as setting 1, but simultaneous heat pump domestic hot water operation and booster heater operation is not allowed.</p>
9.4.4	[4-03]	<ul style="list-style-type: none"> <li>▪ <b>4 Legionella only:</b> Booster heater operation is NOT allowed except for "Disinfection function".</li> </ul> <p>Only use this in case the capacity of the heat pump can cover the heating requirements of the house and domestic hot water over the complete heating season.</p> <p>The booster heater will not be allowed to operate when <math>T_a &lt; [5-03]</math> and <math>[5-02]=1</math>. The domestic hot water temperature can be maximum the heat pump OFF temperature.</p>



## Emergency

### Emergency

When the heat pump fails to operate, the backup heater and/or booster heater can serve as an emergency heater. It then takes over the heat load either automatically or by manual interaction.

- When **Emergency** is set to **Automatic** and a heat pump failure occurs, the backup heater automatically takes over the heat load, and the booster heater in the optional tank takes over the domestic hot water production.
- When **Emergency** is set to **Manual** and a heat pump failure occurs, the domestic hot water heating and space heating stops.

To manually recover it via the user interface, go to the **Malfunctioning** main menu screen and confirm whether the backup heater and/or booster heater can take over the heat load or not.

- Alternatively, when **Emergency** is set to:
  - **auto SH reduced/DHW on**, space heating is reduced but domestic hot water is still available.
  - **auto SH reduced/DHW off**, space heating is reduced and domestic hot water is NOT available.
  - **auto SH normal/DHW off**, space heating operates as normally but domestic hot water is NOT available.

Similarly as in **Manual** mode, the unit can take the full load with the backup heater and/or booster heater if the user activates this via the **Malfunctioning** main menu screen.

To keep energy consumption low, we recommend to set **Emergency** to **auto SH reduced/DHW off** if the house is unattended for longer periods.

#	Code	Description
[9.5.1]	[4-06]	<ul style="list-style-type: none"> <li>▪ 0: <b>Manual</b></li> <li>▪ 1: <b>Automatic</b></li> <li>▪ 2: <b>auto SH reduced/DHW on</b></li> <li>▪ 3: <b>auto SH reduced/DHW off</b></li> <li>▪ 4: <b>auto SH normal/DHW off</b></li> </ul>



#### INFORMATION

The auto emergency setting can be set in the menu structure of the user interface only.



#### INFORMATION

If a heat pump failure occurs and **Emergency** is set to **Manual**, the room frost protection function, the underfloor heating screed dryout function, and the water pipe antifreeze function will remain active even if the user does NOT confirm emergency operation.

### HP forced off

**HP forced off** mode can be activated to allow the backup heater to provide domestic hot water and space heating. When this mode is activated:

- Heat pump operation is NOT possible
- Cooling is NOT possible

#	Code	Description
[9.5.2]	[7-06]	Activation of the <b>HP forced off</b> mode: <ul style="list-style-type: none"> <li>0: disabled</li> <li>1: enabled</li> </ul>

## Glycol filled system

### Glycol Filled system

This setting gives the installer the possibility to indicate whether the system is filled with glycol or water. This is important in case glycol is used to protect the water circuit against freezing. If NOT set correctly, the liquid in the piping can freeze.

#	Code	Description
N/A	[E-0D]	<b>Glycol Filled system:</b> Is the system filled with glycol? <ul style="list-style-type: none"> <li>0: No</li> <li>1: Yes</li> </ul>



#### NOTICE

If you add glycol to the water, you also need to install a flow switch (EKFLSW1).

## Balancing

### Priorities

For systems with a separate domestic hot water tank.


#	Code	Description
[9.6.1]	[5-02]	<b>Space heating priority:</b> Defines whether domestic hot water is made by booster heater only when outdoor temperature is below space heating priority temperature. <ul style="list-style-type: none"> <li>0: <b>Off</b> (default)</li> <li>1: <b>On</b></li> </ul> Please do NOT change the default value. [5-01] Equilibrium temperature and [5-03] Space heating priority temperature are related to backup heater. So, you must set [5-03] equal or a few degrees higher than [5-01].
[9.6.2]	[5-03]	<b>Priority temperature:</b> Defines the outdoor temperature which below the domestic hot water will be heated by booster heater only. Please do NOT change the default value. Range: -15°C~35°C

#	Code	Description
[9.6.3]	[5-04]	<b>Offset BSH setpoint:</b> Setpoint correction for domestic hot water temperature: setpoint correction for the desired domestic hot water temperature, to be applied at low outdoor temperature when space heating priority is enabled. The corrected (higher) setpoint will make sure that the total heat capacity of the water in the tank remains approximately unchanged, by compensating for the colder bottom water layer of the tank (because the heat exchanger coil is not operational) with a warmer top layer. Range: 0°C~20°C

### Timers


For simultaneous space and domestic hot water operation request.

#### [8-02]: Anti-recycle timer

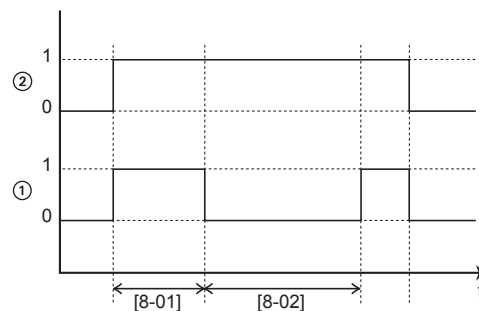

- 1 Heat pump domestic water heating mode (1=active, 0=not active)
- 2 Hot water request for heat pump (1=request, 0=no request)
- t Time

#### [8-04]: Additional timer at [4-02]/[F-01]

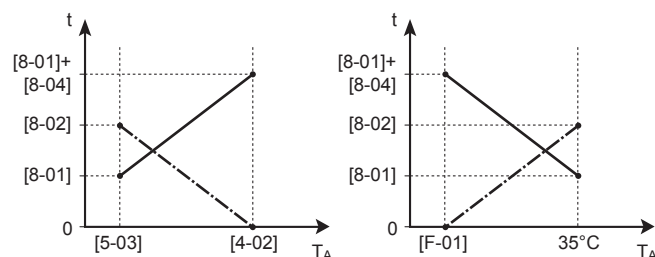

- $T_A$  Ambient (outdoor) temperature
- t Time
- Anti-recycle timer
- Maximum running time domestic hot water

#	Code	Description
[9.6.4]	[8-02]	<b>Anti-recycle timer:</b> Minimum time between two cycles for domestic hot water. The actual anti-recycling time also depends on setting [8-04]. Range: 0~10 hours <b>Remark:</b> The minimum time is 0.5 hours even when the selected value is 0.

#	Code	Description
[9.6.5]	[8-00]	<b>Minimum running timer:</b> Do NOT change.
[9.6.6]	[8-01]	<b>Maximum running timer</b> for domestic hot water operation. Domestic hot water heating stops even when the target domestic hot water temperature is NOT reached. The actual maximum running time also depends on setting [8-04]. <ul style="list-style-type: none"> <li>When <b>Control=Room thermostat</b>: This preset value is only taken into account if there is a request for space heating or cooling. If there is NO request for space heating/cooling, the tank is heated until the setpoint has been reached.</li> <li>When <b>Control≠Room thermostat</b>: This preset value is always taken into account.</li> </ul> Range: 5~95 minutes <b>Remark:</b> It is NOT allowed to set [8-01] to a value below 10 minutes.
[9.6.7]	[8-04]	<b>Additional timer:</b> Additional running time for the maximum running time depending on the outdoor temperature [4-02] or [F-01]. Range: 0~95 minutes

### Water pipe freeze prevention

Only relevant for installations with water piping outdoors. This function tries to protect outdoor water piping from freezing.

#	Code	Description
[9.7]	[4-04]	<b>Water pipe freeze prevention:</b> <ul style="list-style-type: none"> <li>0: <b>Intermittent</b>: Do NOT use.</li> <li>1: <b>Continuous</b></li> <li>2: <b>Off</b></li> </ul>



#### NOTICE

If the system does NOT contain a backup heater, then:

- Make sure that the room antifrost control is activated ([2-06]=1).
- Do NOT change the default room antifrost temperature [2-05].
- Make sure that the water pipe freeze prevention is activated ([4-04]≠2).



#### NOTICE

**Water pipe freeze prevention.** Even if you turn OFF space heating/cooling operation ([C.2]: **Operation** > **Space heating/cooling**), water pipe freeze prevention –if enabled– will remain active.

**Preferential kWh rate power supply**

#	Code	Description
[9.8.2]	[D-00]	<p><b>Restriction:</b> Only applicable if [9.8.4] is NOT set to <b>Smart grid</b>.</p> <p><b>Allow heater:</b> Which heaters are allowed to operate during preferential kWh rate power supply?</p> <ul style="list-style-type: none"> <li>0 <b>No:</b> None</li> <li>1 <b>Only BSH:</b> Booster heater only</li> <li>2 <b>Only BUH:</b> Backup heater only</li> <li>3 <b>All:</b> All heaters</li> </ul> <p>See also below table (Allowed heaters during preferential kWh rate power supply).</p> <p>Setting 2 is only meaningful if the preferential kWh rate power supply is of type 1 or the hydro module is connected to a separate normal kWh rate power supply (via X2M/5-6) and the backup heater is NOT connected to the preferential kWh rate power supply.</p>
[9.8.3]	[D-05]	<p><b>Restriction:</b> Only applicable if [9.8.4] is NOT set to <b>Smart grid</b>.</p> <p><b>Allow pump:</b></p> <ul style="list-style-type: none"> <li>0 <b>No:</b> Pump is forced off</li> <li>1 <b>Yes:</b> No limitation</li> </ul>
[9.8.4]	[D-01]	<p>Connection to a <b>Benefit kWh power supply</b> or a <b>Smart grid</b>:</p> <ul style="list-style-type: none"> <li>0 <b>No:</b> The outdoor unit is connected to a normal power supply.</li> <li>1 <b>Open:</b> The outdoor unit is connected to a preferential kWh rate power supply. When the preferential kWh rate signal is sent by the electricity company, the contact will open and the unit will go in forced off mode. When the signal is released again, the voltage-free contact will close and the unit will restart operation. Therefore, always enable the auto restart function.</li> <li>2 <b>Closed:</b> The outdoor unit is connected to a preferential kWh rate power supply. When the preferential kWh rate signal is sent by the electricity company, the contact will close and the unit will go in forced off mode. When the signal is released again, the voltage-free contact will open and the unit will restart operation. Therefore, always enable the auto restart function.</li> <li>3 <b>Smart grid:</b> A Smart Grid is connected to the system</li> </ul>

#	Code	Description
[9.8.5]	N/A	<p><b>Restriction:</b> Only applicable if [9.8.4]=<b>Smart grid</b>.</p> <p>Shows the Smart Grid operation mode sent by the 2 incoming Smart Grid contacts.</p> <p><b>Smart grid operation mode:</b></p> <ul style="list-style-type: none"> <li>▪ Free running</li> <li>▪ Forced off</li> <li>▪ Recommended on</li> <li>▪ Forced on</li> </ul> <p>See also below table (Smart Grid operation modes).</p>
[9.8.6]	N/A	<p><b>Restriction:</b> Only applicable if [9.8.4]=<b>Smart grid</b>.</p> <p>To set if electrical heaters are allowed.</p> <p><b>Allow electrical heaters:</b></p> <ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>
[9.8.7]	N/A	<p><b>Restriction:</b> Only applicable in case of room thermostat control, and if [9.8.4]=<b>Smart grid</b>.</p> <p>To set if room buffering will be enabled.</p> <p><b>Enable room buffering:</b></p> <ul style="list-style-type: none"> <li>▪ <b>No:</b> The extra energy from the photovoltaic panels is only buffered in the DHW tank (i.e. heat up the DHW tank).</li> <li>▪ <b>Yes:</b> The extra energy from the photovoltaic panels is buffered in the DHW tank, and in the space heating/cooling circuit (i.e. heat up or cool down the room).</li> </ul>

#	Code	Description
[9.8.8]	N/A	<p><b>Limit setting kw</b></p> <p><b>Restriction:</b> Only applicable if:</p> <ul style="list-style-type: none"> <li>▪ [9.8.4]=Smart grid.</li> <li>▪ There is no pulse meter (power meter) for photovoltaic panels available ([9.A.2] <b>Electricity meter 2 = None</b>)</li> </ul> <p>Normally, when a pulse meter is available, the following happens:</p> <ul style="list-style-type: none"> <li>▪ The pulse meter measures the power produced by the photovoltaic panels.</li> <li>▪ The unit limits its power consumption during the Smart Grid's "Recommended ON" mode to only use the power provided by the photovoltaic panels.</li> </ul> <p>However, when the pulse meter is not available, you can still limit the unit's power consumption using this setting (<b>Limit setting kw</b>). This prevents overconsumption and thus requiring the use of power from the grid.</p>

#### Allowed heaters during preferential kWh rate power supply

[D-00]	Booster heater	Backup heater	Compressor
0	Forced OFF	Forced OFF	Forced OFF
1	Permitted		
2	Forced OFF	Permitted	
3	Permitted		

#### Smart Grid operation modes

The 2 incoming Smart Grid contacts (see ["To connect a Smart Grid"](#) [► 118]) can activate the following Smart Grid modes:

Smart Grid contact		[9.8.5] Smart grid operation mode
①	②	
0	0	Free running
0	1	Forced off
1	0	Recommended on
1	1	Forced on

#### Free running:

The Smart Grid function is NOT active.

#### Forced off:

- The unit forces OFF the compressor and the heaters (backup heater, booster heater).
- The safety functions (water pipe freeze prevention, drain prevention, room frost protection) and defrost are NOT overruled.

#### Recommended on:

- In case the space heating/cooling request is OFF and the tank temperature is reached, the unit can choose to buffer energy from the photovoltaic panels in the room (only in case of room thermostat control) or in the DHW tank instead of putting the photovoltaic panel energy on the grid.

The goal is to buffer the energy from the photovoltaic panels. Therefore, the capacity of the unit is limited to what the photovoltaic panels are providing.

If Smart Grid pulse meter is...	Then the limit is...
Available	Decided by the unit based on the input of the Smart Grid pulse meter.
Not available	Decided by [9.8.8] <b>Limit setting</b> kw

- The safety functions (water pipe freeze prevention, drain prevention, room frost protection) and defrost are not overruled (capacity will not be limited for these functions)

#### Forced on:

Similar to **Recommended on**, but there is no capacity limitation. The goal is NOT to use the grid as much as possible.

### Power consumption control

#### Power consumption control

See "6 Application guidelines" [▶ 31] for detailed information about this functionality.

#	Code	Description
[9.9.1]	[4-08]	<b>Power consumption control:</b> <ul style="list-style-type: none"> <li>0 <b>No</b>: Disabled.</li> <li>1 <b>Continuous</b>: Enabled: You can set one power limitation value (in A or kW) to which the system power consumption will be limited for all the time.</li> <li>2 <b>Inputs</b>: Enabled: You can set up to four different power limitation values (in A or kW) to which the system power consumption will be limited when the corresponding digital input asks.</li> </ul>
[9.9.2]	[4-09]	<b>Type:</b> <ul style="list-style-type: none"> <li>0 <b>Amp</b>: The limitation values are set in A.</li> <li>1 <b>kW</b>: The limitation values are set in kW.</li> </ul>

Limit when [9.9.1]=**Continuous** and [9.9.2]=**Amp**:

#	Code	Description
[9.9.3]	[5-05]	<b>Limit</b> : Only applicable in case of full time current limitation mode. 0 A~50 A

Limits when [9.9.1]=**Inputs** and [9.9.2]=**Amp**:

#	Code	Description
[9.9.4]	[5-05]	<b>Limit 1</b> : 0 A~50 A



#	Code	Description
[9.9.5]	[5-06]	<b>Limit 2:</b> 0 A~50 A
[9.9.6]	[5-07]	<b>Limit 3:</b> 0 A~50 A
[9.9.7]	[5-08]	<b>Limit 4:</b> 0 A~50 A

Limit when [9.9.1]=**Continuous** and [9.9.2]=kW:

#	Code	Description
[9.9.8]	[5-09]	<b>Limit:</b> Only applicable in case of full time power limitation mode. 0 kW~20 kW

Limits when [9.9.1]=**Inputs** and [9.9.2]=kW:

#	Code	Description
[9.9.9]	[5-09]	<b>Limit 1:</b> 0 kW~20 kW
[9.9.A]	[5-0A]	<b>Limit 2:</b> 0 kW~20 kW
[9.9.B]	[5-0B]	<b>Limit 3:</b> 0 kW~20 kW
[9.9.C]	[5-0C]	<b>Limit 4:</b> 0 kW~20 kW

### Priority heater

#	Code	Description
[9.9.D]	[4-01]	<p><b>Power consumption control DISABLED</b> <b>[4-08]=0</b></p> <ul style="list-style-type: none"> <li>0 <b>None</b> : Backup heater and booster heater can operate simultaneously.</li> <li>1 <b>Booster heater</b>: The booster heater is prioritised.</li> <li>2 <b>Backup heater</b>: The backup heater is prioritised.</li> </ul> <p><b>Power consumption control ENABLED</b> <b>[4-08]=1/2</b></p> <ul style="list-style-type: none"> <li>0 <b>None</b> : Depending on the power limitation level, the booster heater will be limited first, before the backup heater is limited.</li> <li>1 <b>Booster heater</b>: Depending on the power limitation level, the backup heater will be limited first, before the booster heater is limited.</li> <li>2 <b>Backup heater</b>: Depending on the power limitation level, the booster heater will be limited first, before the backup heater is limited.</li> </ul>

**Note:** In case power consumption control is DISABLED (for all models) the setting [4-01] defines whether backup heater and booster heater can operate simultaneously, or if the booster heater/backup heater has priority over the backup heater/booster heater.

In case power consumption control is ENABLED, the setting [4-01] defines the priority of the electrical heaters depending on applicable limitation.

**BBR16**

See "[BBR16 power limitation](#)" [▶ 62] for detailed information about this functionality.

**INFORMATION**

**Restriction:** BBR16 settings are only visible when the language of the user interface is set to Swedish.

**NOTICE**

**2 weeks to change.** After you activated BBR16, you only have 2 weeks to change its settings (**BBR16 activation** and **BBR16 power limit**). After 2 weeks, the unit freezes these settings.

**Note:** This is different from the permanent power limitation, which is always changeable.

**BBR16 activation**

#	Code	Description
[9.9.F]	[7-07]	<b>BBR16 activation:</b> <ul style="list-style-type: none"> <li>0: disabled</li> <li>1: enabled</li> </ul>

**BBR16 power limit**

#	Code	Description
[9.9.G]	[N/A]	<b>BBR16 power limit:</b> This setting can only be modified via the menu structure. <ul style="list-style-type: none"> <li>0 kW~25 kW, step 0.1 kW</li> </ul>

**Energy metering****Energy metering**

If energy metering is performed by the use of external power meters, configure the settings as described below. Select the pulse frequency output of each power meter in accordance with the power meter specifications. It is possible to connect up to 2 power meters with different pulse frequencies. If only 1 or no power meter is used, select '**None**' to indicate the corresponding pulse input is NOT used.

#	Code	Description
[9.A.1]	[D-08]	<b>Electricity meter 1:</b> <ul style="list-style-type: none"> <li>0 None: NOT installed</li> <li>1 1/10kWh: Installed</li> <li>2 1/kWh: Installed</li> <li>3 10/kWh: Installed</li> <li>4 100/kWh: Installed</li> <li>5 1000/kWh: Installed</li> </ul>

#	Code	Description
[9.A.2]	[D-09]	<b>Electricity meter 2:</b> <ul style="list-style-type: none"> <li>0 <b>None</b>: NOT installed</li> <li>1 <b>1/10kWh</b>: Installed</li> <li>2 <b>1/kWh</b>: Installed</li> <li>3 <b>10/kWh</b>: Installed</li> <li>4 <b>100/kWh</b>: Installed</li> <li>5 <b>1000/kWh</b>: Installed</li> </ul> In case of pulse meter for photovoltaic panels: <ul style="list-style-type: none"> <li>6 <b>100/kWh for PV panel</b>: Installed</li> <li>7 <b>1000/kWh for PV panel</b>: Installed</li> </ul>

## Sensors

### External sensor

#	Code	Description
[9.B.1]	[C-08]	<b>External sensor:</b> When an optional external ambient sensor is connected, the type of the sensor must be set. <ul style="list-style-type: none"> <li>0 <b>None</b> : NOT installed. The thermistor in the user interface and in the outdoor unit are used for measurement.</li> <li>1 <b>Outdoor</b>: Connected to the hydro PCB of the outdoor unit measuring the <b>outdoor temperature</b>. <b>Remark:</b> For some functionality, the temperature sensor in the outdoor unit is still used.</li> <li>2 <b>Room</b>: Connected to the hydro PCB of the outdoor unit measuring the <b>indoor temperature</b>. The temperature sensor in the user interface is NOT used anymore. <b>Remark:</b> This value has only meaning in room thermostat control.</li> </ul>

### Ext. amb. sensor offset

ONLY applicable in case an external outdoor ambient sensor is connected and configured.

You can calibrate the external outdoor ambient temperature sensor. It is possible to give an offset to the thermistor value. This setting can be used to compensate for situations where the external outdoor ambient sensor cannot be installed on the ideal installation location.

#	Code	Description
[9.B.2]	[2-0B]	<b>Ext. amb. sensor offset:</b> Offset on the ambient temperature measured on the external outdoor temperature sensor. <ul style="list-style-type: none"> <li>-5°C~5°C, step 0.5°C</li> </ul>

### Averaging time

The average timer corrects the influence of ambient temperature variations. The weather-dependent setpoint calculation is done on the average outdoor temperature.

The outdoor temperature is averaged over the selected time period.

#	Code	Description
[9.B.3]	[1-0A]	<b>Averaging time:</b> <ul style="list-style-type: none"> <li>0: No averaging</li> <li>1: 12 hours</li> <li>2: 24 hours</li> <li>3: 48 hours</li> <li>4: 72 hours</li> </ul>



#### INFORMATION

If the power saving function is activated (see [E-08]), the average outdoor temperature calculation is only possible in case the external outdoor temperature sensor is used. See "6.7 Setting up an external temperature sensor" [▶ 63].

## Bivalent

### Bivalent

Only applicable in case of auxiliary boiler.

#### About bivalent

The purpose of this function is to determine which heating source can/will provide the space heating, either the heat pump system or the auxiliary boiler.

#	Code	Description
[9.C.1]	[C-02]	<b>Bivalent:</b> Indicates if the space heating is also performed by means of another heat source than the system. <ul style="list-style-type: none"> <li>0 <b>No:</b> Not installed</li> <li>1 <b>Yes:</b> Installed. The auxiliary boiler (gas boiler, oil burner) will operate when the outdoor ambient temperature is low. During bivalent operation, the heat pump is turned off. Set this value in case an auxiliary boiler is used.</li> </ul>


- If **Bivalent** is enabled: When the outdoor temperature drops below the bivalent ON temperature (fixed or variable based on energy prices), the space heating by the heat pump stops automatically and the permission signal for the auxiliary boiler is active.
- If **Bivalent** is disabled: Space heating is only done by the heat pump within the operation range. The permission signal for the auxiliary boiler is always inactive.

The switch-over between the heat pump system and the auxiliary boiler is based on the following settings:

- [C-03] and [C-04]
- Electricity and gas prices ([7.5.1], [7.5.2], [7.5.3], and [7.6])

[C-03], [C-04], and  $T_{calc}$

Based on the settings above, the heat pump system calculates a value  $T_{calc}$ , which is variable between  $[C-03]$  and  $[C-03]+[C-04]$ .

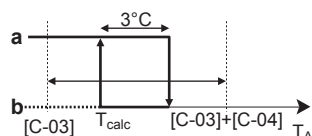

$T_A$  Outdoor temperature

$T_{calc}$  Bivalent ON temperature (variable). Below this temperature, the auxiliary boiler will always be ON.  $T_{calc}$  can never go below  $[C-03]$  or above  $[C-03]+[C-04]$ .

$3^{\circ}\text{C}$  Fixed hysteresis to prevent too much switching between heat pump system and auxiliary boiler

**a** Auxiliary boiler active


**b** Auxiliary boiler inactive

If the outdoor temperature...	Then...	
	Space heating by the heat pump system...	Bivalent signal for the auxiliary boiler is...
Drops below $T_{calc}$	Stops	Active
Rises above $T_{calc}+3^{\circ}\text{C}$	Starts	Inactive



#### INFORMATION

- The bivalent operation function has no impact on the domestic water heating mode. The domestic hot water is still and only heated by the heat pump.
- The permission signal for the auxiliary boiler is located on the EKR1HBAA (digital I/O PCB). When it is activated, the contact X1, X2 is closed and open when it is deactivated. See illustration below for the schematic location of this contact.

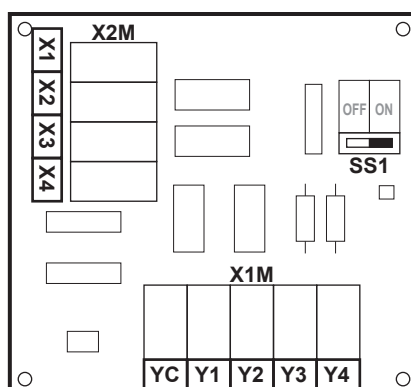

#	Code	Description
9.C.3	$[C-03]$	Range: $-25^{\circ}\text{C} \sim 25^{\circ}\text{C}$ (step: $1^{\circ}\text{C}$ )
9.C.4	$[C-04]$	Range: $2^{\circ}\text{C} \sim 10^{\circ}\text{C}$ (step: $1^{\circ}\text{C}$ ) The higher the value of $[C-04]$ , the higher the accuracy of the switch-over between the heat pump system and the auxiliary boiler.


To determine the value of  $[C-03]$ , proceed as follows:

- Determine the COP (= coefficient of performance) using the formula:

Formula	Example
$\text{COP} = (\text{Electricity price} / \text{gas price})^{(a)} \times \text{boiler efficiency}$	If: <ul style="list-style-type: none"> <li>Electricity price: 20 c€/kWh</li> <li>Gas price: 6 c€/kWh</li> <li>Boiler efficiency: 0.9</li> </ul> Then: $\text{COP} = (20/6) \times 0.9 = 3$

<sup>(a)</sup> Make sure to use the same units of measurement for the electricity price and gas price (example: both c€/kWh).

- 2 Determine the value of [C-03] using the graph. For an example, see the table legend.

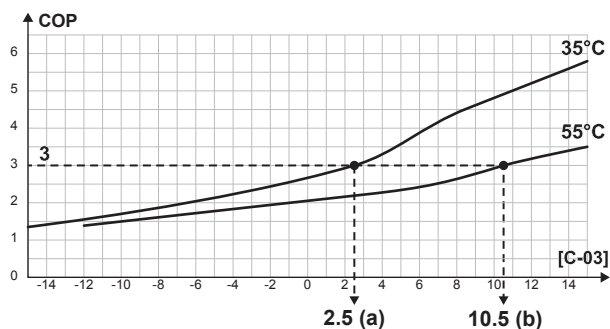

- a [C-03]=2.5 in case of COP=3 and LWT=35°C  
b [C-03]=10.5 in case of COP=3 and LWT=55°C



#### NOTICE

Make sure to set the value of [5-01] at least 1°C higher than the value of [C-03].

### Electricity and gas prices



#### INFORMATION

To set electricity and gas price values, do NOT use overview settings. Set them in the menu structure instead ([7.5.1], [7.5.2], [7.5.3], and [7.6]). For more information on how to set the energy prices, see the operation manual and the user reference guide.



#### INFORMATION

**Solar panels.** If solar panels are used, set the electricity price value very low to promote the use of the heat pump.

#	Code	Description
[7.5.1]	N/A	User settings > Electricity price > High
[7.5.2]	N/A	User settings > Electricity price > Medium
[7.5.3]	N/A	User settings > Electricity price > Low
[7.6]	N/A	User settings > Gas price

## Alarm output

### Alarm output

#	Code	Description
[9.D]	[C-09]	<p><b>Alarm output:</b> Indicates the logic of the alarm output on the digital I/O PCB during malfunctioning.</p> <ul style="list-style-type: none"> <li>▪ <b>0 Abnormal:</b> The alarm output will be powered when an alarm occurs. By setting this value, a distinction is made between the detection of an alarm, and the detection of a power failure.</li> <li>▪ <b>1 Normal:</b> The alarm output will NOT be powered when an alarm occurs.</li> </ul> <p>See also table below (Alarm output logic).</p>

### Alarm output logic

[C-09]	Alarm	No alarm	No power supply to unit
0	Closed output	Open output	Open output
1	Open output	Closed output	

## Auto restart

### Auto restart

When power returns after a power supply failure, the auto restart function reapplies the user interface settings at the time of the power failure. Therefore, it is recommended to always enable the function.

If the preferential kWh rate power supply is of the type that power supply is interrupted, always enable the auto restart function. Continuous hydro module control can be guaranteed independent of the preferential kWh rate power supply status, by connecting the hydro module to a separate normal kWh rate power supply.

#	Code	Description
[9.E]	[3-00]	<p><b>Auto restart:</b></p> <ul style="list-style-type: none"> <li>▪ <b>0: Manual</b></li> <li>▪ <b>1: Automatic</b></li> </ul>

Disable protections



INFORMATION

**Protective functions – "Installer-on-site mode".** The software is equipped with protective functions, such as room antifrost. The unit automatically runs these functions when necessary.

During installation or service this behaviour is undesired. Therefore, the protective functions can be disabled:

- **At first power-on:** The protective functions are disabled by default. After 36 h they will be automatically enabled.
- **Afterwards:** An installer can manually disable the protective functions by setting [9.G]: **Disable protections=Yes**. After his work is done, he can enable the protective functions by setting [9.G]: **Disable protections=No**.

#	Code	Description
[9.G]	N/A	Disable protections: <ul style="list-style-type: none"><li>▪ 0: No</li><li>▪ 1: Yes</li></ul>

Power saving function

Power saving function




NOTICE

**Power saving function.** If you want to use the power saving function, on the compressor module PCB:

Disconnect X804A from X805A.

Connect X804A to X806A.

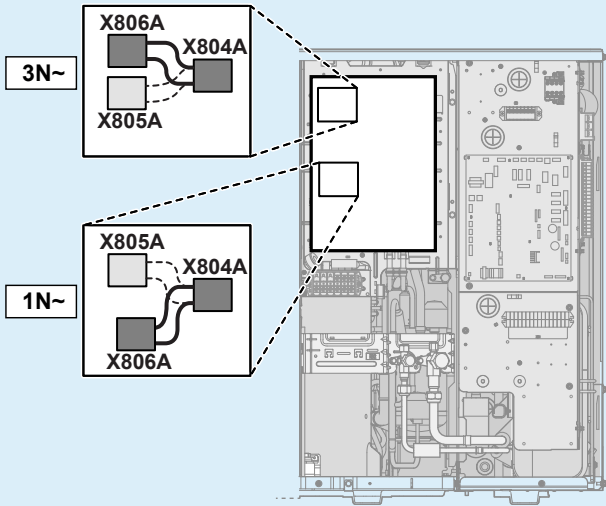

Defines whether the power supply to the compressor module can be interrupted (internally by hydro module control) during stand-still conditions (no space heating/cooling nor domestic hot water demand). The final decision to allow power interruption of the compressor module during standstill depends on the ambient temperature, compressor conditions and minimum internal timers.

To enable the power saving function setting, [E-08] needs to be enabled on the user interface.



#	Code	Description
[9.F]	[E-08]	Power saving function for compressor module: <ul style="list-style-type: none"> <li>▪ 0: No</li> <li>▪ 1: Yes</li> </ul>

## Forced defrost

### Forced defrost

Manually start a defrost operation.

#	Code	Description
[9.H]	N/A	Do you want to start a defrost operation? <ul style="list-style-type: none"> <li>▪ Back</li> <li>▪ OK</li> </ul>



#### NOTICE

**Forced defrost start-up.** You can only start forced defrost when the heating operation has been running for a while.

## Overview field settings

All settings can be done using the menu structure. If for any reason it is required to change a setting using the overview settings, then the overview settings can be accessed in the field settings overview [9.I]. See ["To modify an overview setting" \[125\]](#).



## Export MMI settings


### About exporting the configuration settings

Export the configuration settings of the unit to a USB memory stick, via the MMI (the user interface delivered as accessory). When troubleshooting, these settings can be provided to our Service department.

#	Code	Description
[9.N]	N/A	Your MMI settings will be exported to the connected storage device: <ul style="list-style-type: none"> <li>▪ Back</li> <li>▪ OK</li> </ul>

### To export MMI settings

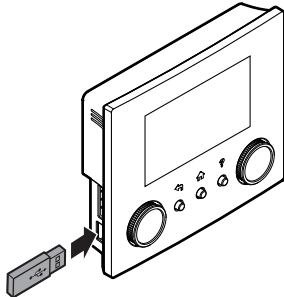
1	Insert a USB memory stick in the user interface. 	—
2	On the user interface, go to [9.N] Export MMI settings.	

<b>3</b>	Select <b>OK</b> .	
<b>4</b>	Remove the USB memory stick.	—

### 11.6.10 Commissioning

#### Overview

The following items are listed in the submenu:

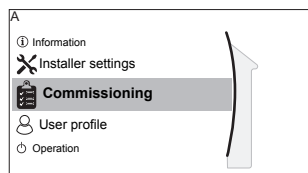

#### [A] Commissioning

[A.1] Operation test run

[A.2] Actuator test run

[A.3] Air purge

[A.4] UFH screed dryout


#### About commissioning

See: "12 Commissioning" [▶ 220]

### 11.6.11 Operation

#### Overview

The following items are listed in the submenu:

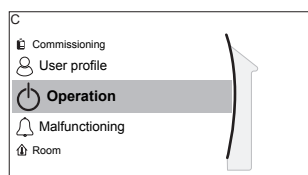

#### [C] Operation

[C.1] Room

[C.2] Space heating/cooling

[C.3] Tank

#### To enable or disable functionalities

In the operation menu, you can separately enable or disable functionalities of the unit.

#	Code	Description
[C.1]	N/A	Room: ▪ 0: Off ▪ 1: On
[C.2]	N/A	Space heating/cooling: ▪ 0: Off ▪ 1: On
[C.3]	N/A	Tank: ▪ 0: Off ▪ 1: On

### 11.6.12 WLAN




#### INFORMATION

**Restriction:** WLAN settings are only visible when a WLAN cartridge is inserted in the user interface.

## Overview

The following items are listed in the submenu:

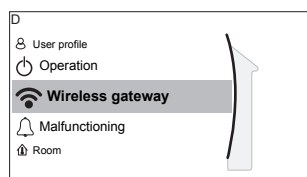


### [D] Wireless gateway



- [D.1] Mode
- [D.2] Reboot
- [D.3] WPS
- [D.4] Remove from cloud
- [D.5] Home network connection
- [D.6] Cloud connection

## About the WLAN cartridge

The WLAN cartridge connects the system to the internet. The user you can then control the system via the Daikin Residential Controller app.

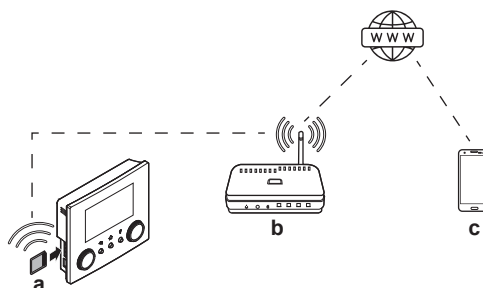This needs the following components:



<b>a</b>	WLAN cartridge	The WLAN cartridge needs to be inserted in the user interface. See the installation manual of the WLAN cartridge.
<b>b</b>	Router	Field supply.
<b>c</b>	Smartphone + app 	The Daikin Residential Controller app needs to be installed on the user's smartphone. See: <a href="http://www.onlinecontroller.daikineurope.com/">http://www.onlinecontroller.daikineurope.com/</a> 

## Configuration

To configure the Daikin Residential Controller app, follow the in-app instructions. While doing this, the following actions and information are needed on the user interface:

**Mode:** Turn AP mode ON (= WLAN adapter active as access point) or OFF.

#	Code	Description
[D.1]	N/A	Enable AP mode: <ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>

**Reboot:** Reboot the WLAN cartridge.

#	Code	Description
[D.2]	N/A	Reboot the gateway: <ul style="list-style-type: none"> <li>▪ Back</li> <li>▪ OK</li> </ul>

**WPS:** Connect the WLAN cartridge to the router.

#	Code	Description
[D.3]	N/A	WPS: <ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>



#### INFORMATION

You can only use this function if it is supported by the software version of the WLAN, and the software version of the Daikin Residential Controller app.

**Remove from cloud:** Remove the WLAN cartridge from the cloud.

#	Code	Description
[D.4]	N/A	Remove from cloud: <ul style="list-style-type: none"> <li>▪ No</li> <li>▪ Yes</li> </ul>


**Home network connection:** Read out the status of the connection to the home network.

#	Code	Description
[D.5]	N/A	Home network connection: <ul style="list-style-type: none"> <li>▪ Disconnected from [WLAN_SSID]</li> <li>▪ Connected to [WLAN_SSID]</li> </ul>

**Cloud connection:** Read out the status of the connection to the cloud.

#	Code	Description
[D.6]	N/A	Cloud connection: <ul style="list-style-type: none"> <li>▪ Not connected</li> <li>▪ Connected</li> </ul>

## 11.7 Menu structure: Overview user settings

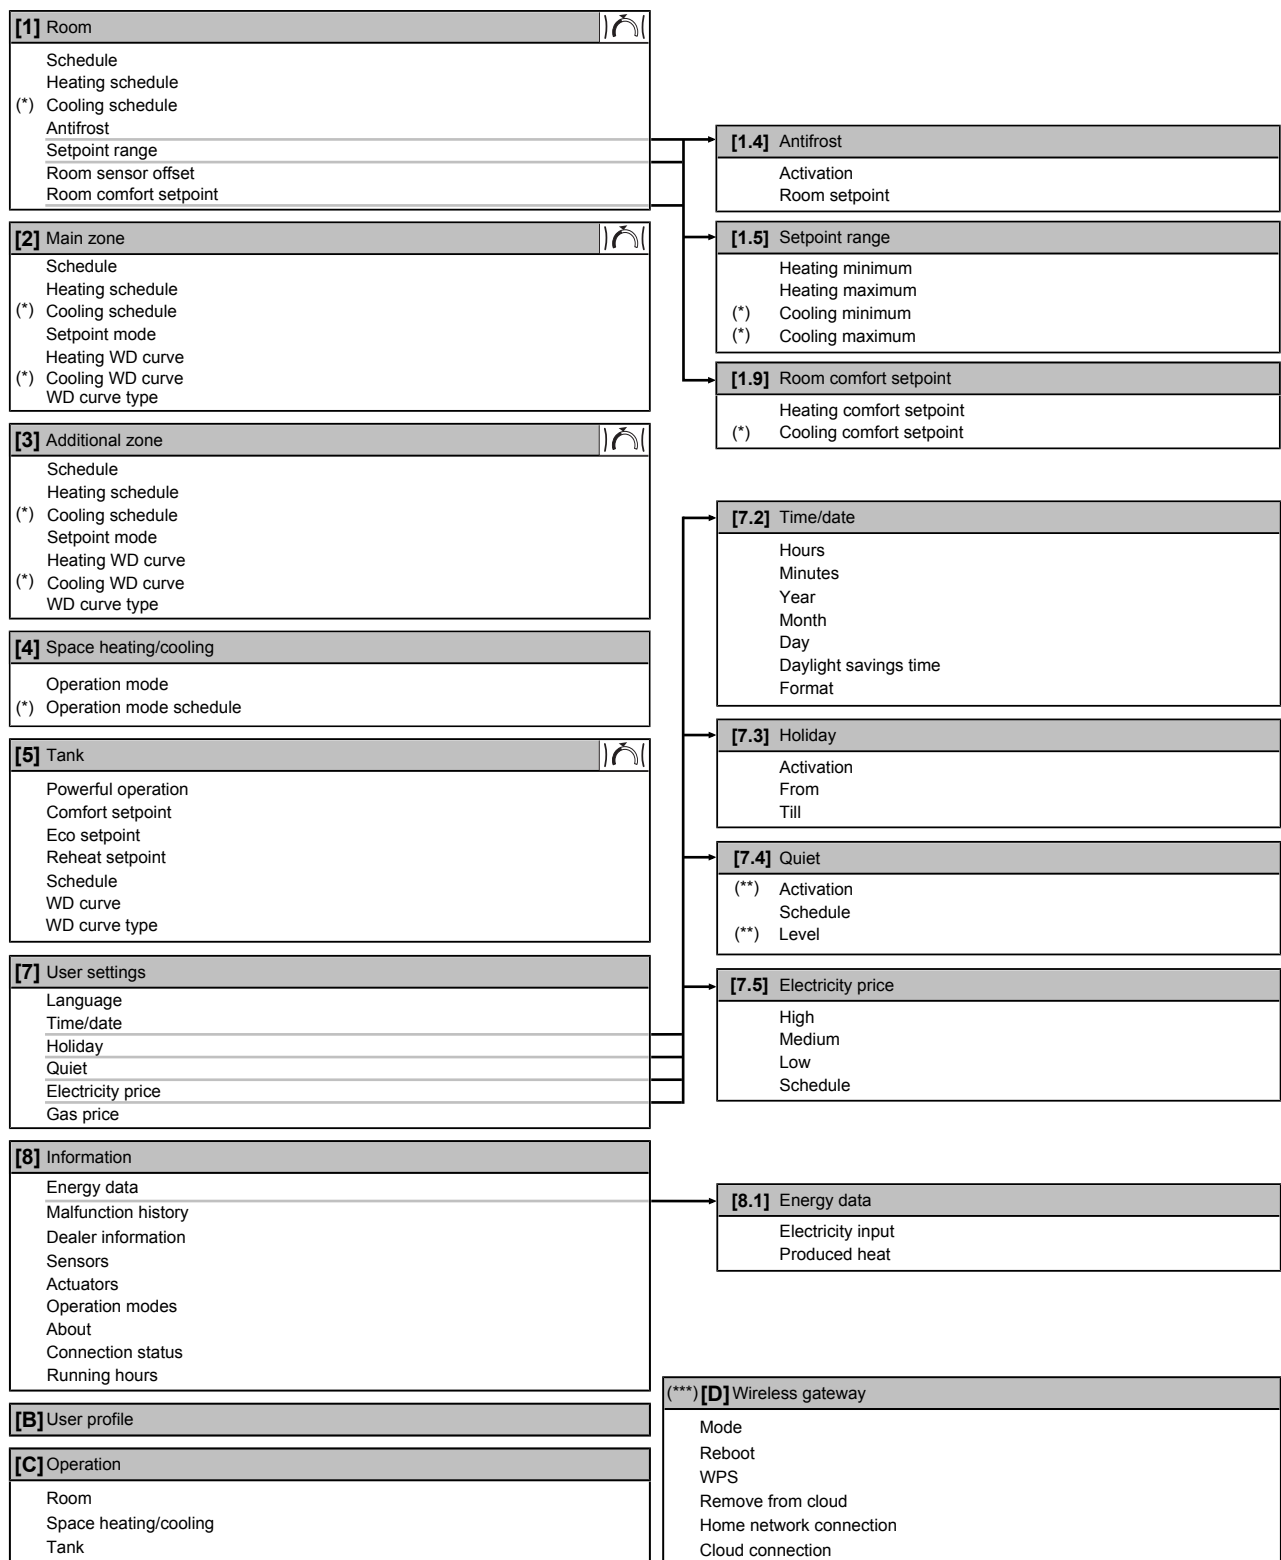

Setpoint screen

(\*)

Only applicable for reversible models

(\*\*)

Only accessible by installer

(\*\*\*)

Only applicable when WLAN is installed



### INFORMATION

Depending on the selected installer settings and unit type, settings will be visible/invisible.

## 11.8 Menu structure: Overview installer settings

[9] Installer settings	[9.2] Domestic hot water
Configuration wizard Domestic hot water Backup heater Booster heater Emergency Balancing Water pipe freeze prevention Benefit kWh power supply Power consumption control Energy metering Sensors Bivalent Alarm output Auto restart Power saving function Disable protections Forced defrost Overview field settings Export MMI settings	Domestic hot water DHW pump DHW pump schedule Solar
	[9.3] Backup heater
	Backup heater type Voltage Configuration Capacity step 1 Additional capacity step 2 Equilibrium Equilibrium temperature Operation
	[9.4] Booster heater
	Capacity BSH allowance schedule BSH eco timer Operation
	[9.6] Balancing
	Space heating priority Priority temperature Offset BSH setpoint Anti-recycle timer Minimum running timer Maximum running timer Additional timer
	[9.8] Benefit kWh power supply
	Allow heater Allow pump Benefit kWh power supply Smart grid operation mode Allow electrical heaters Enable room buffering Limit setting kw
	[9.9] Power consumption control
	Power consumption control Type Limit Limit 1 Limit 2 Limit 3 Limit 4 Priority heater (*) BBR16 activation (*) BBR16 power limit
	[9.A] Energy metering
	Electricity meter 1 Electricity meter 2
	[9.B] Sensors
	External sensor Ext. amb. sensor offset Averaging time
	[9.C] Bivalent
	Bivalent Boiler efficiency Temperature Hysteresis

(\*) Only applicable in Swedish language.



### INFORMATION

Depending on the selected installer settings and unit type, settings will be visible/invisible.

# 12 Commissioning



**NOTICE**

**General commissioning checklist.** Next to the commissioning instructions in this chapter, a general commissioning checklist is also available on the Daikin Business Portal (authentication required).

The general commissioning checklist is complementary to the instructions in this chapter and can be used as a guideline and reporting template during the commissioning and hand-over to the user.



**NOTICE**

**For models with integrated backup heater:** The unit contains an automatic air purge valve on the backup heater. Make sure it is open. All automatic air purge valves in the system (in the unit, and in the field piping –if any) must remain open after commissioning.



**For other models:** The unit contains a manual air purge valve. Make sure it is closed. Only open it when performing an air purge.



**INFORMATION**

**Protective functions – "Installer-on-site mode".** The software is equipped with protective functions, such as room antifrost. The unit automatically runs these functions when necessary.

During installation or service this behaviour is undesired. Therefore, the protective functions can be disabled:

- **At first power-on:** The protective functions are disabled by default. After 12 h they will be automatically enabled.
- **Afterwards:** An installer can manually disable the protective functions by setting [9.G]: **Disable protections=Yes**. After his work is done, he can enable the protective functions by setting [9.G]: **Disable protections=No**.

## In this chapter

12.1	Overview: Commissioning .....	220
12.2	Precautions when commissioning.....	221
12.3	Checklist before commissioning.....	221
12.4	Checklist during commissioning .....	222
12.4.1	Minimum flow rate .....	222
12.4.2	Air purge function .....	223
12.4.3	Operation test run.....	225
12.4.4	Actuator test run .....	226
12.4.5	Underfloor heating screed dryout .....	227

## 12.1 Overview: Commissioning

This chapter describes what you have to do and know to commission the system after it is installed and configured.



### Typical workflow

Commissioning typically consists of the following stages:

- 1 Checking the "Checklist before commissioning".
- 2 Performing an air purge.
- 3 Performing a test run for the system.
- 4 If necessary, performing a test run for one or more actuators.
- 5 If necessary, performing an underfloor heating screed dryout.

## 12.2 Precautions when commissioning



### INFORMATION

During the first running period of the unit, the required power may be higher than stated on the nameplate of the unit. This phenomenon is caused by the compressor, that needs a continuous run time of 50 hours before reaching smooth operation and stable power consumption.



### NOTICE

Before starting up the system, the unit **MUST** be energised for at least 6 hours. At negative ambient temperatures, the compressor oil needs to be heated to avoid oil shortage and compressor breakdown during startup.



### NOTICE

**ALWAYS** operate the unit with thermistors and/or pressure sensors/switches. If **NOT**, burning of the compressor might be the result.

## 12.3 Checklist before commissioning

After the installation of the unit, first check the items listed below. Once all checks are fulfilled, the unit must be closed. Power-up the unit after it is closed.

<input type="checkbox"/>	You read the complete installation instructions, as described in the <b>installer reference guide</b> .
<input type="checkbox"/>	The <b>outdoor unit</b> is properly mounted.
<input type="checkbox"/>	<b>Field wiring</b> Be sure that the field wiring has been carried out according to the instructions described in the chapter " <a href="#">9 Electrical installation</a> " [▶ 87], according to the wiring diagrams and according to the applicable legislation.
<input type="checkbox"/>	The system is properly <b>earthed</b> and the earth terminals are tightened.
<input type="checkbox"/>	The <b>fuses</b> or locally installed protection devices are installed according to this document, and have <b>NOT</b> been bypassed.
<input type="checkbox"/>	The <b>power supply voltage</b> matches the voltage on the identification label of the unit.
<input type="checkbox"/>	There are <b>NO loose connections</b> or damaged electrical components in the switch box.
<input type="checkbox"/>	There are <b>NO damaged components</b> or <b>squeezed pipes</b> on the inside of the outdoor unit.
<input type="checkbox"/>	Only for models with integrated backup heater (F1B: field supply), or if the external backup heater kit (F1B: factory-mounted in the backup heater kit) is installed: <b>Backup heater circuit breaker F1B</b> is turned ON.

<input type="checkbox"/>	Only for tanks with built-in booster heater: <b>Booster heater circuit breaker</b> F2B (field supply) is turned ON.
<input type="checkbox"/>	The correct pipe size is installed and the <b>pipes</b> are properly insulated.
<input type="checkbox"/>	There are no <b>water leaks</b> inside the outdoor unit.
<input type="checkbox"/>	The <b>shut-off valves</b> are properly installed and fully open.
<input type="checkbox"/>	For models with integrated backup heater: The <b>automatic air purge valve</b> (on the backup heater) is open. For other models: The <b>manual air purge valve</b> is closed.
<input type="checkbox"/>	The <b>pressure relief valve</b> purges water when opened. Clean water must come out.
<input type="checkbox"/>	The <b>minimum water volume</b> is guaranteed in all conditions. See "To check the water volume and flow rate" in <a href="#">"8.1 Preparing water piping"</a> [▶ 73].
<input type="checkbox"/>	(if applicable) The <b>domestic hot water tank</b> is filled completely.

## 12.4 Checklist during commissioning

<input type="checkbox"/>	The <b>minimum flow rate</b> is guaranteed in all conditions. See "To check the water volume and flow rate" in <a href="#">"8.1 Preparing water piping"</a> [▶ 73].
<input type="checkbox"/>	To perform an <b>air purge</b> .
<input type="checkbox"/>	To perform a <b>test run</b> .
<input type="checkbox"/>	To perform an <b>actuator test run</b> .
<input type="checkbox"/>	<b>Underfloor screed dryout function</b> The underfloor screed dryout function is started (if necessary).

### 12.4.1 Minimum flow rate

#### Purpose

For a correct operating unit, it is important to check if the minimum flow rate is reached. If needed, modify the bypass valve setting.

If operation is...	Then the minimum required flow rate is...
Cooling	20 l/min
Heating/defrost when outdoor temperature is above –5°C	
Heating/defrost when outdoor temperature is below –5°C	22 l/min
Domestic hot water production	28 l/min

#### To check the minimum flow rate

<b>1</b>	Check the hydraulic configuration to find out which space heating loops can be closed by mechanical, electronic, or other valves.	—
<b>2</b>	Close all space heating loops that can be closed.	—

3	Start the pump test run (see "Actuator test run" [▶ 226]).	—
4	Read out the flow rate <sup>(a)</sup> and modify the bypass valve setting to reach the minimum required flow rate + 2 l/min.	—

<sup>(a)</sup> During pump test run, the unit can operate below the minimum required flow rate.

## 12.4.2 Air purge function

### Purpose

When commissioning and installing the unit, it is very important to remove all air in the water circuit. When the air purge function is running, the pump operates without actual operation of the unit and the removal of air in the water circuit will start.



#### NOTICE

Before starting the air purge, open the safety valve and check if the circuit is sufficiently filled with water. Only if water escapes the valve after opening it, you can start the air purge procedure.

### Manual or automatic

There are 2 modes for purging air:

- Manual: You can set the pump speed to low or high. You can set the circuit (the position of the 3-way valve) to Space or Tank. Air purge must be performed for both space heating and tank (domestic hot water) circuits.
- Automatic: The unit automatically changes the pump speed and switches the position of the 3-way valve between the space heating and the domestic hot water circuit.

### Typical workflow

Purging the air from the system should consist of:

- 1 Performing a manual air purge
- 2 Performing an automatic air purge



#### NOTICE

**For models with integrated backup heater:** The unit contains an automatic air purge valve on the backup heater. Make sure it is open. All automatic air purge valves in the system (in the unit, and in the field piping –if any) must remain open after commissioning.



**For other models:** The unit contains a manual air purge valve. Make sure it is closed. Only open it when performing an air purge.



#### NOTICE

When purging air with the manual air purge valve of the unit, collect any fluid that might leak out of the valve. If this fluid is NOT collected, it might drip on internal components and damage the unit.

**INFORMATION**

- To purge air, use all air purge valves present in the system. This includes the automatic or manual air purge valve of the outdoor unit, as well as any field-supplied valves.
- If the system contains an external backup heater kit, also use the air purge valve of the backup heater.
- If the system contains valve kit EKMBHBP1, it is required to – during the air purge – manually switch the position of the valve kit's 3-way valve by turning its knob, this to prevent air from remaining in the bypass. For more information, see "External backup heater kit" [▶ 101].

**INFORMATION**

Start by performing a manual air purge. When almost all the air is removed, perform an automatic air purge. If necessary, repeat performing the automatic air purge until you are sure that all air is removed from the system. During air purge function, pump speed limitation [9-0D] is NOT applicable.

The air purge function automatically stops after 30 minutes.

**INFORMATION**

For best results, air purge each loop separately.

### To perform a manual air purge

**Conditions:** Make sure all operation is disabled. Go to [C]: **Operation** and turn off **Room, Space heating/cooling** and **Tank** operation.

<b>1</b>	Set the user permission level to <b>Installer</b> . See "To change the user permission level" [▶ 124].	—
<b>2</b>	Go to [A.3]: <b>Commissioning</b> > <b>Air purge</b> .	
<b>3</b>	In the menu, set <b>Type</b> = <b>Manual</b> .	
<b>4</b>	Select <b>Start air purge</b> .	
<b>5</b>	Select <b>OK</b> to confirm. <b>Result:</b> The air purge starts. It stops automatically when ready.	
<b>6</b>	During manual operation: ▪ You can change the pump speed. ▪ You must change the circuit.  To change these settings during the air purge, open the menu and go to [A.3.1.5]: <b>Settings</b> .	
	▪ Scroll to <b>Circuit</b> and set it to <b>Space/Tank</b> .	
	▪ Scroll to <b>Pump speed</b> and set it to <b>Low/High</b> .	
<b>7</b>	To stop the air purge manually:	—
<b>1</b>	Open the menu and go to <b>Stop air purge</b> .	
<b>2</b>	Select <b>OK</b> to confirm.	

### To perform an automatic air purge

**Conditions:** Make sure all operation is disabled. Go to [C]: **Operation** and turn off **Room, Space heating/cooling** and **Tank** operation.

1	Set the user permission level to <b>Installer</b> . See " <a href="#">To change the user permission level</a> " [▶ 124].	—
2	Go to [A.3]: <b>Commissioning</b> > <b>Air purge</b> .	
3	In the menu, set <b>Type</b> = <b>Automatic</b> .	
4	Select <b>Start air purge</b> .	
5	Select <b>OK</b> to confirm. <b>Result:</b> The air purge starts. It stops automatically when done.	
6	To stop the air purge manually:	—
1	In the menu, go to <b>Stop air purge</b> .	
2	Select <b>OK</b> to confirm.	

#### 12.4.3 Operation test run

##### Purpose

Perform test runs on the unit and monitor the leaving water and tank temperatures to check if the unit is working correctly. The following test runs should be made:

- Heating
- Cooling (if applicable)
- Tank

### To perform an operation test run

**Conditions:** Make sure all operation is disabled. Go to [C]: **Operation** and turn off **Room, Space heating/cooling** and **Tank** operation.

1	Set the user permission level to <b>Installer</b> . See " <a href="#">To change the user permission level</a> " [▶ 124].	—
2	Go to [A.1]: <b>Commissioning</b> > <b>Operation test run</b> .	
3	Select a test from the list. <b>Example:</b> <b>Heating</b> .	
4	Select <b>OK</b> to confirm. <b>Result:</b> The test run starts. It stops automatically when ready (±30 min).	
	To stop the test run manually:	—
1	In the menu, go to <b>Stop test run</b> .	
2	Select <b>OK</b> to confirm.	





##### INFORMATION

If the outdoor temperature is outside the range of operation, the unit may NOT operate or may NOT deliver the required capacity.

### To monitor leaving water and tank temperatures

During test run, the correct operation of the unit can be checked by monitoring its leaving water temperature (heating/cooling mode) and tank temperature (domestic hot water mode).

To monitor the temperatures:

<b>1</b>	In the menu, go to <b>Sensors</b> .	
<b>2</b>	Select the temperature information.	






#### 12.4.4 Actuator test run

##### Purpose

Perform an actuator test run to confirm the operation of the different actuators. For example, when you select **Pump**, a test run of the pump will start.

##### To perform an actuator test run

**Conditions:** Make sure all operation is disabled. Go to [C]: **Operation** and turn off **Room, Space heating/cooling** and **Tank** operation.

<b>1</b>	Set the user permission level to Installer. See <a href="#">"To change the user permission level"</a> [▶ 124].	—
<b>2</b>	Go to [A.2]: <b>Commissioning</b> > <b>Actuator test run</b> .	
<b>3</b>	Select a test from the list. <b>Example: Pump</b> .	
<b>4</b>	Select <b>OK</b> to confirm. <b>Result:</b> The actuator test run starts. It stops automatically when ready (±30 min).	
	To stop the test run manually:	—
<b>1</b>	In the menu, go to <b>Stop test run</b> .	
<b>2</b>	Select <b>OK</b> to confirm.	

##### Possible actuator test runs

- **Booster heater** test
- **Backup heater 1** test
- **Backup heater 2** test
- **Pump** test



##### INFORMATION

Make sure that all air is purged before executing the test run. Also avoid disturbances in the water circuit during the test run.

- **Diverter valve** test (3-way valve for switching between space heating and tank heating)
- **Bivalent signal** test
- **Alarm output** test
- **C/H signal** test
- **DHW pump** test

## 12.4.5 Underfloor heating screed dryout

**About underfloor heating screed dryout****Purpose**

The underfloor heating (UFH) screed dryout function is used for drying out the screed of an underfloor heating system during the construction of the building.

**NOTICE**


The installer is responsible for:

- contacting the screed manufacturer for the maximum allowed water temperature, to avoid cracking the screed,
- programming the underfloor heating screed dryout schedule according to the initial heating instructions of the screed manufacturer,
- checking the proper functioning of the setup on a regular basis,
- performing the correct program complying with the type of the used screed.

**To program an underfloor heating screed dryout schedule****Duration and temperature**

The installer can program up to 20 steps. For each step he needs to enter:

- 1 the duration in hours, up to 72 hours,
- 2 the desired leaving water temperature, up to 55°C.

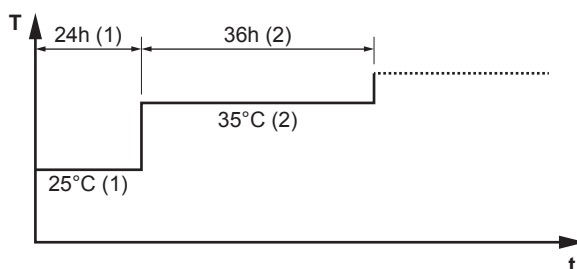**Example:**

**T** Desired leaving water temperature (15~55°C)

**t** Duration (1~72 h)

**(1)** Action step 1

**(2)** Action step 2

**Steps**

<b>1</b>	Set the user permission level to <b>Installer</b> . See <a href="#">"To change the user permission level"</a> [▶ 124].	—
<b>2</b>	Go to [A.4.2]: <b>Commissioning &gt; UFH screed dryout &gt; Program</b> .	
<b>3</b>	Program the schedule: To add a new step, select the next empty line and change its value. To delete a step and all steps below it, decrease the duration to "—".  <ul style="list-style-type: none"> <li>▪ Scroll through the schedule.</li> <li>▪ Adjust the duration (between 1 and 72 hours) and temperatures (between 15°C and 55°C).</li> </ul>	—   
<b>4</b>	Press the left dial to save the schedule.	

### To perform an underfloor heating screed dryout



#### INFORMATION

- If **Emergency** is set to **Manual** ([9.5]=0), and the unit is triggered to start emergency operation, the user interface will ask confirmation before starting. The underfloor heating screed dryout function is active even if the user does NOT confirm emergency operation.
- During underfloor heating screed dryout, pump speed limitation [9-0D] is NOT applicable.



#### NOTICE

To perform an underfloor heating screed dryout, room frost protection needs to be disabled ([2-06]=0). By default, it is enabled ([2-06]=1). However, due to the "installer-on-site" mode (see "Commissioning"), room frost protection will be automatically disabled for 12 hours after the first power-on.

If the screed dryout still needs to be performed after the first 12 hours of power-on, manually disable room frost protection by setting [2-06] to "0", and KEEP it disabled until the screed dryout has finished. Ignoring this notice will result in cracking of the screed.



#### NOTICE

For the underfloor heating screed dryout to be able to start, make sure the following settings are met:

- [4-00]=1
- [C-02]=0
- [D-01]=0
- [4-08]=0
- [4-01]≠1

### Steps

**Conditions:** An underfloor heating screed dryout schedule has been programmed. See ["To program an underfloor heating screed dryout schedule"](#) [▶ 227].


 
**Conditions:** Make sure all operation is disabled. Go to [C]: **Operation** and turn off **Room, Space heating/cooling** and **Tank** operation.

1	Set the user permission level to <b>Installer</b> . See <a href="#">"To change the user permission level"</a> [▶ 124].	—
2	Go to [A.4]: <b>Commissioning</b> > <b>UFH screed dryout</b> .	
3	Select <b>Start UFH screed dryout</b> .	
4	Select <b>OK</b> to confirm. <b>Result:</b> The underfloor heating screed dryout starts. It stops automatically when done.	
5	To stop the underfloor heating screed dryout manually:	—
1	Open the menu and go to <b>Stop UFH screed dryout</b> .	
2	Select <b>OK</b> to confirm.	

### To read out the status of an underfloor heating screed dryout

**Conditions:** You are performing an underfloor heating screed dryout.



<b>1</b>	Press the back button.  <b>Result:</b> A graph is displayed, highlighting the current step of the screed dryout schedule, the total remaining time, and the current desired leaving water temperature.	
<b>2</b>	Press the left dial to open the menu structure and to:	
<b>1</b>	View the status of sensors and actuators.	—
<b>2</b>	Adjust the current program	—

### To stop an underfloor heating (UFH) screed dryout

 

#### U3-error

When the program is stopped by an error or an operation switch off, the U3 error will be displayed on the user interface. To resolve the error codes, see ["15.4 Solving problems based on error codes"](#) [▶ 240].

In case of a power failure, the U3 error is not generated. When power is restored, the unit automatically restarts the latest step and continues the program.


#### Stop UFH screed dryout

To manually stop underfloor heating screed dryout:

<b>1</b>	Go to [A.4.3]: <b>Commissioning &gt; UFH screed dryout</b>	—
<b>2</b>	Select <b>Stop UFH screed dryout</b> .	
<b>3</b>	Select <b>OK</b> to confirm.  <b>Result:</b> The underfloor heating screed dryout is stopped.	

#### Read out UFH screed dryout status

When the program is stopped due to an error, an operation switch-off, or a power failure, you can read out the underfloor heating screed dryout status:

<b>1</b>	Go to [A.4.3]: <b>Commissioning &gt; UFH screed dryout &gt; Status</b>	
<b>2</b>	You can read out the value here: <b>Stopped at</b> + the step where the underfloor screed dryout was stopped.	—
<b>3</b>	Modify and restart the execution of the program <sup>(a)</sup> .	—

<sup>(a)</sup> If the UFH screed dryout program was stopped due to a power failure and the power resumes, the program will automatically restart the last implemented step.

## 13 Hand-over to the user

Once the test run is finished and the unit operates properly, please make sure the following is clear for the user:

- Fill in the installer setting table (in the operation manual) with the actual settings.
- Make sure that the user has the printed documentation and ask him/her to keep it for future reference. Inform the user that he can find the complete documentation at the URL mentioned earlier in this manual.
- Explain the user how to properly operate the system and what to do in case of problems.
- Show the user what to do for the maintenance of the unit.
- Explain the user about energy saving tips as described in the operation manual.

# 14 Maintenance and service



## NOTICE

**General maintenance/inspection checklist.** Next to the maintenance instructions in this chapter, a general maintenance/inspection checklist is also available on the Daikin Business Portal (authentication required).

The general maintenance/inspection checklist is complementary to the instructions in this chapter and can be used as a guideline and reporting template during maintenance.



## NOTICE

Maintenance **MUST** be done by an authorized installer or service agent.

We recommend performing maintenance at least once a year. However, applicable legislation might require shorter maintenance intervals.

## In this chapter

14.1	Maintenance safety precautions.....	231
14.2	Yearly maintenance .....	231
14.2.1	Yearly maintenance outdoor unit: overview .....	231
14.2.2	Yearly maintenance outdoor unit: instructions.....	232

## 14.1 Maintenance safety precautions



### DANGER: RISK OF ELECTROCUTION



### DANGER: RISK OF BURNING/SCALDING



### NOTICE: Risk of electrostatic discharge

Before performing any maintenance or service work, touch a metal part of the unit in order to eliminate static electricity and to protect the PCB.

## 14.2 Yearly maintenance

### 14.2.1 Yearly maintenance outdoor unit: overview

Check the following at least once a year:

- Heat exchanger
- Water filter
- Water pressure
- Water pressure relief valve
- Pressure relief valve of the domestic hot water tank
- Switch box

## 14.2.2 Yearly maintenance outdoor unit: instructions

**Heat exchanger**


The heat exchanger of the outdoor unit can get blocked up due to dust, dirt, leaves, etc. It is recommended to clean the heat exchanger yearly. A blocked heat exchanger can lead to too low pressure or too high pressure leading to worse performance.

**Water filter**

Close the valve. Clean and rinse the water filter.

**NOTICE**

Handle the filter with care. To prevent damage to the mesh of the filter, do NOT use excessive force when you reinsert it.

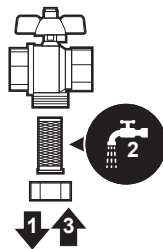**Water pressure**

Keep water pressure above 1 bar. If it is lower, add water.

**Water pressure relief valve**

Open the valve and check if it operates correctly. **The water may be very hot!**

Checkpoints are:

- The water flow coming from the relief valve is high enough, no blockage of the valve or in between piping is suspected.
- Dirty water coming out of the relief valve:
  - open the valve until the discharged water does NOT contain dirt anymore
  - flush the system

It is recommended to do this maintenance more frequently.

**Pressure relief valve of the domestic hot water tank (field supply)**

Open the valve.

**CAUTION**

Water coming out of the valve may be very hot.

- Check if nothing blocks the water in the valve or in between piping. The water flow coming from the relief valve must be high enough.
- Check if the water coming out of the relief valve is clean. If it contains debris or dirt:
  - Open the valve until the discharged water does not contain debris or dirt anymore.
  - Flush and clean the complete tank, including the piping between the relief valve and cold water inlet.

To make sure this water originates from the tank, check after a tank heat up cycle.

**INFORMATION**

It is recommended to perform this maintenance more than once a year.

**Switch box**

- Carry out a thorough visual inspection of the switch box and look for obvious defects such as loose connections or defective wiring.
- Using an ohmmeter, check if contactors K1M, K2M, K3M and K5M (depending on your installation) operate correctly. All contacts of these contactors must be in open position when the power is turned OFF.

**WARNING**

If the internal wiring is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons.

# 15 Troubleshooting

## In this chapter

15.1	Overview: Troubleshooting .....	234
15.2	Precautions when troubleshooting .....	234
15.3	Solving problems based on symptoms .....	235
15.3.1	Symptom: The unit is NOT heating or cooling as expected .....	235
15.3.2	Symptom: Hot water does NOT reach the desired temperature .....	235
15.3.3	Symptom: The compressor does NOT start (space heating or domestic water heating) .....	236
15.3.4	Symptom: The system is making gurgling noises after commissioning .....	236
15.3.5	Symptom: The pump is blocked .....	237
15.3.6	Symptom: The pump is making noise (cavitation) .....	237
15.3.7	Symptom: The pressure relief valve opens .....	238
15.3.8	Symptom: The water pressure relief valve leaks .....	238
15.3.9	Symptom: The space is NOT sufficiently heated at low outdoor temperatures .....	239
15.3.10	Symptom: The pressure at the tapping point is temporarily unusually high .....	240
15.3.11	Symptom: Tank disinfection function is NOT completed correctly (AH-error) .....	240
15.4	Solving problems based on error codes .....	240
15.4.1	To display the help text in case of a malfunction .....	241
15.4.2	Error codes of the unit .....	241

## 15.1 Overview: Troubleshooting

This chapter describes what you have to do in case of problems.

It contains information about:

- Solving problems based on symptoms
- Solving problems based on error codes

### Before troubleshooting

Carry out a thorough visual inspection of the unit and look for obvious defects such as loose connections or defective wiring.

## 15.2 Precautions when troubleshooting



### WARNING

- When carrying out an inspection on the switch box of the unit, ALWAYS make sure that the unit is disconnected from the mains. Turn off the respective circuit breaker.
- When a safety device was activated, stop the unit and find out why the safety device was activated before resetting it. NEVER shunt safety devices or change their values to a value other than the factory default setting. If you are unable to find the cause of the problem, call your dealer.



### DANGER: RISK OF ELECTROCUTION



### WARNING

Prevent hazards due to inadvertent resetting of the thermal cut-out: power to this appliance MUST NOT be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly turned ON and OFF by the utility.

**DANGER: RISK OF BURNING/SCALDING**

## 15.3 Solving problems based on symptoms

### 15.3.1 Symptom: The unit is NOT heating or cooling as expected

Possible causes	Corrective action
The temperature setting is NOT correct	Check the temperature setting on the remote controller. Refer to the operation manual.
The water flow is too low	<p>Check and make sure that:</p> <ul style="list-style-type: none"> <li>▪ All shut-off valves of the water circuit are completely open.</li> <li>▪ The water filter is clean. Clean if necessary.</li> <li>▪ There is no air in the system. Purge air if necessary. You can purge air manually (see <a href="#">"To perform a manual air purge"</a> [▶ 224]) or use the automatic air purge function (see <a href="#">"To perform an automatic air purge"</a> [▶ 225]).</li> <li>▪ The water pressure is &gt;1 bar.</li> <li>▪ The expansion vessel is NOT broken.</li> <li>▪ The resistance in the water circuit is NOT too high for the pump (see the ESP curve).</li> </ul> <p>If the problem persists after you have conducted all of the above checks, contact your dealer. In some cases, it is normal that the unit decides to use a low water flow.</p>
The water volume in the installation is too low	Make sure that the water volume in the installation is above the minimum required value (see <a href="#">"To check the water volume and flow rate"</a> [▶ 76]).

### 15.3.2 Symptom: Hot water does NOT reach the desired temperature

Possible causes	Corrective action
One of the tank temperature sensors is broken.	See the service manual of the unit for the corresponding corrective action.


 
## 15.3.3 Symptom: The compressor does NOT start (space heating or domestic water heating)

Possible causes	Corrective action
The unit must start up out of its operation range (the water temperature is too low)	<p><b>If the system contains a backup heater:</b></p> <p>If the water temperature is too low, the unit uses the backup heater to reach the minimum water temperature first (15°C).</p> <p>Check and make sure that:</p> <ul style="list-style-type: none"> <li>▪ The power supply to the backup heater is correctly wired.</li> <li>▪ The backup heater thermal protector is NOT activated.</li> <li>▪ The backup heater contactors are NOT broken.</li> </ul> <p><b>If the system does NOT contain a backup heater:</b></p> <p>It may be required to start up with a small water volume. To do this, gradually open the heat emitters. As a result, the water temperature will gradually rise. Monitor the inlet water temperature and make sure it does NOT drop below 25°C.</p> <p>If the problem persists after you have done all of the above checks, contact your dealer.</p>
The preferential kWh rate power supply settings and electrical connections do NOT match	<p>This should match with the connections as explained in:</p> <ul style="list-style-type: none"> <li>▪ "To connect the main power supply" [▶ 97]</li> <li>▪ "About preferential kWh rate power supply" [▶ 89]</li> <li>▪ "Overview of electrical connections except external actuators" [▶ 90]</li> </ul>
The preferential kWh rate signal was sent by the electricity company	<p>In the user interface of the unit, go to [8.5.B] <b>Information &gt; Actuators &gt; Forced off contact</b>.</p> <p>If <b>Forced off contact</b> is <b>On</b>, the unit is operating under the preferential kWh rate. Wait for the power to return (maximum 2 hours).</p>

## 15.3.4 Symptom: The system is making gurgling noises after commissioning

Possible cause	Corrective action
There is air in the system.	Purge air from the system. <sup>(a)</sup>





Possible cause	Corrective action
Various malfunctions.	Check if  or  is displayed on the home screen of the user interface. See <a href="#">"To display the help text in case of a malfunction" [▶ 241]</a> for more information about the malfunction.

<sup>(a)</sup> We recommend to purge air with the air purge function of the unit (to be performed by the installer). If you purge air from the heat emitters or collectors, mind the following:




#### WARNING

**Air purging heat emitters or collectors.** Before you purge air from heat emitters or collectors, check if  or  is displayed on the home screen of the user interface.

- If not, you can purge air immediately.
- If yes, make sure that the room where you want to purge air is sufficiently ventilated. **Reason:** Refrigerant might leak into the water circuit, and subsequently into the room when you purge air from the heat emitters or collectors.

### 15.3.5 Symptom: The pump is blocked

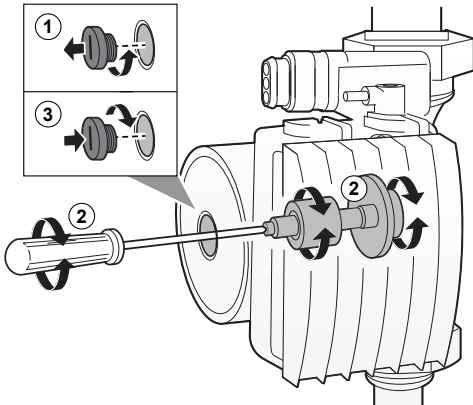Possible causes	Corrective action
If the unit has been powered off for a long time, lime might block the rotor of the pump.	<p>Remove the screw of the stator housing and use a screwdriver to turn back and forth the ceramic shaft of the rotor until the rotor is deblocked.<sup>(a)</sup></p> <p><b>Note:</b> Do NOT use excessive force.</p> 

<sup>(a)</sup> If you cannot deblock the rotor of the pump with this method, you will need to disassemble the pump and turn the rotor by hand.

### 15.3.6 Symptom: The pump is making noise (cavitation)

Possible causes	Corrective action
There is air in the system	Purge air manually (see <a href="#">"To perform a manual air purge" [▶ 224]</a> ) or use the automatic air purge function (see <a href="#">"To perform an automatic air purge" [▶ 225]</a> ).

Possible causes	Corrective action
The water pressure at the pump inlet is too low	<p>Check and make sure that:</p> <ul style="list-style-type: none"> <li>▪ The water pressure is &gt;1 bar.</li> <li>▪ The water pressure sensor is not broken.</li> <li>▪ The expansion vessel is NOT broken.</li> <li>▪ The pre-pressure setting of the expansion vessel is correct (see <a href="#">"Changing the pre-pressure of the expansion vessel" [▶ 79]</a>).</li> </ul>

### 15.3.7 Symptom: The pressure relief valve opens

Possible causes	Corrective action
The expansion vessel is broken	Replace the expansion vessel.
The water volume in the installation is too high	Make sure that the water volume in the installation is below the maximum allowed value (see <a href="#">"To check the water volume and flow rate" [▶ 76]</a> and <a href="#">"Changing the pre-pressure of the expansion vessel" [▶ 79]</a> ).
The water circuit head is too high	<p>The water circuit head is the difference in height between the outdoor unit and the highest point of the water circuit. If the outdoor unit is located at the highest point of the installation, the installation height is considered 0 m. The maximum water circuit head is 10 m.</p> <p>Check the installation requirements.</p>

### 15.3.8 Symptom: The water pressure relief valve leaks

Possible causes	Corrective action
Dirt is blocking the water pressure relief valve outlet	<p>Check whether the pressure relief valve works correctly by turning the red knob on the valve counterclockwise:</p> <ul style="list-style-type: none"> <li>▪ If you do NOT hear a clacking sound, contact your dealer.</li> <li>▪ If the water keeps running out of the unit, close both the water inlet and outlet shut-off valves first and then contact your dealer.</li> </ul>

## 15.3.9 Symptom: The space is NOT sufficiently heated at low outdoor temperatures

Possible causes	Corrective action
If the system contains a backup heater: The backup heater operation is not activated	<p>Check the following:</p> <ul style="list-style-type: none"> <li>The backup heater operation mode is enabled. Go to: [9.3.8]: <b>Installer settings &gt; Backup heater &gt; Operation</b> [4-00]</li> <li>The backup heater overcurrent circuit breaker is on. If not, turn it back on.</li> <li>The thermal protector of the backup heater is NOT activated. If it has, check the following, and then press the reset button in the switch box: <ul style="list-style-type: none"> <li>The water pressure</li> <li>Whether there is air in the system</li> <li>The air purge operation</li> </ul> </li> </ul>
If the system contains a backup heater: The backup heater equilibrium temperature has not been configured correctly	<p>Increase the equilibrium temperature to activate the backup heater operation at a higher outdoor temperature.</p> <p>Go to: [9.3.7]: <b>Installer settings &gt; Backup heater &gt; Equilibrium temperature</b> [5-01]</p>
There is air in the system.	<p>Purge air manually or automatically. See the air purge function in the chapter "<a href="#">12 Commissioning</a>" [▶ 220].</p>
Too much heat pump capacity is used for heating domestic hot water (applies only to installations with a domestic hot water tank)	<p>Check if the <b>Space heating priority</b> settings have been configured appropriately:</p> <ul style="list-style-type: none"> <li>Make sure that the <b>Space heating priority</b> has been enabled. Go to [9.6.1]: <b>Installer settings &gt; Balancing &gt; Space heating priority</b> [5-02]</li> <li>Increase the "space heating priority temperature" to activate backup heater operation at a higher outdoor temperature. Go to [9.6.3]: <b>Installer settings &gt; Balancing &gt; Offset BSH setpoint</b> [5-03]</li> </ul>

## 15.3.10 Symptom: The pressure at the tapping point is temporarily unusually high

Possible causes	Corrective action
Failing or blocked pressure relief valve.	<ul style="list-style-type: none"> <li>Flush and clean the complete tank including the piping between pressure relief valve and the cold water inlet.</li> <li>Replace the pressure relief valve.</li> </ul>

## 15.3.11 Symptom: Tank disinfection function is NOT completed correctly (AH-error)

Possible causes	Corrective action
The disinfection function was interrupted by domestic hot water tapping	Program the start-up of the disinfection function when the coming 4 hours NO domestic hot water tapping is expected.
Large domestic hot water tapping happened recently before the programmed start-up of the disinfection function	<p>If in [5.6] <b>Tank &gt; Heat up mode</b> the mode <b>Reheat only</b> or <b>Schedule + reheat</b> is selected, it is recommended to program the start-up of the disinfection function at least 4 hours later than the last expected large hot water tapping. This start-up can be set by installer settings (disinfection function).</p> <p>If in [5.6] <b>Tank &gt; Heat up mode</b> the mode <b>Schedule only</b> is selected, it is recommended to program a <b>Eco</b> action 3 hours before the scheduled start-up of the disinfection function to preheat the tank.</p>
The disinfection operation was stopped manually: [C.3] <b>Operation &gt; Tank</b> was turned off during disinfection.	Do NOT stop tank operation during disinfection.

## 15.4 Solving problems based on error codes

If the unit runs into a problem, the user interface displays an error code. It is important to understand the problem and to take measures before resetting an error code. This should be done by a licensed installer or by your local dealer.

This chapter gives you an overview of most possible error codes and their descriptions as they appear on the user interface.



**INFORMATION**

See the service manual for:

 
- The complete list of error codes
- A more detailed troubleshooting guideline for each error

## 15.4.1 To display the help text in case of a malfunction

In case of a malfunction, the following will appear on the home screen depending on the severity:


















- : Error
- : Malfunction















 

















You can get a short and a long description of the malfunction as follows:






















 

 





 
<b>1</b>	Press the left dial to open the main menu and go to <b>Malfunctioning</b> .  <b>Result:</b> A short description of the error and the error code is displayed on the screen.	
<b>2</b>	Press <b>?</b> in the error screen.  <b>Result:</b> A long description of the error is displayed on the screen.	<b>?</b>


















## 15.4.2 Error codes of the unit

 = Compressor module,  = Hydro module

Error code	Description	
7H-01		Water flow problem
7H-04		Water flow problem during domestic hot water production
7H-05		Water flow problem during heating/sampling
7H-06		Water flow problem during cooling/defrost
80-01		Returning water temperature sensor problem
81-00		Leaving water temperature sensor problem
81-01		Mixed water thermistor abnormality.
81-06		Entering water temperature thermistor abnormality (indoor unit)
89-01		Heat exchanger frozen (during defrost)
89-02		Heat exchanger frozen (not during defrost)
89-03		Heat exchanger frozen (during defrost)
89-05		Water Heat Exchange Freezing Abnormality during cooling (confirmed)
89-06		Water Heat Exchange Freezing Abnormality during cooling (during counting)
8F-00		Abnormal increase outlet water temperature (DHW)
8H-00		Abnormal increase outlet water temperature
8H-01		Overheating mixed water circuit
8H-02		Overheating mixed water circuit (thermostat)

Error code		Description
8H-03		Overheating water circuit (thermostat)
A1-00		Zero cross detection problem
A5-00		OU: High pressure peak cut / freeze protection problem
AA-01		Backup heater overheated
AC-00		Booster heater overheated
AH-00		Tank disinfection function not completed correctly
AJ-03		Too long DHW heat-up time required
C0-00		Flow sensor malfunction
C4-00		Heat exchanger temperature sensor problem
C5-00		Heat exchanger thermistor abnormality
CJ-02		Room temperature sensor problem
E1-00		OU: PCB defect
E2-00		Leakage current detection error
E3-00		OU: Actuation of high pressure switch (HPS)
E3-24		High pressure switch abnormality
E4-00		Abnormal suction pressure
E5-00		OU: Overheat of inverter compressor motor
E6-00		OU: Compressor startup defect
E7-00		OU: Malfunction of outdoor unit fan motor
E8-00		OU: Power input overvoltage
E9-00		Malfunction of electronic expansion valve
EA-00		OU: Cool/heat switchover problem
EC-00		Abnormal increase tank temperature
EC-04		Tank preheating
F3-00		OU: Malfunction of discharge pipe temperature
F6-00		OU: Abnormal high pressure in cooling
FA-00		OU: Abnormal high pressure, actuation of HPS
H0-00		OU: Voltage/current sensor problem
H1-00		External temperature sensor problem
H3-00		OU: Malfunction of high pressure switch (HPS)
H4-00		Malfunction of low pressure switch
H5-00		Malfunction of compressor overload protection

Error code		Description
H6-00		OU: Malfunction of position detection sensor
H8-00		OU: Malfunction of compressor input (CT) system
H9-00		OU: Malfunction of outdoor air thermistor
HC-00		Tank temperature sensor problem
HC-01		Second tank temperature sensor problem
HJ-10		Water pressure sensor abnormality
J3-00		OU: Malfunction of discharge pipe thermistor
J3-10		Compressor port thermistor abnormality
J5-00		Malfunction of suction pipe thermistor
J6-00		OU: Malfunction of heat exchanger thermistor
J6-07		OU: Malfunction of heat exchanger thermistor
J6-32		Leaving water temperature thermistor Abnormality (outdoor unit)
J6-33		Sensor communication error
J8-00		Malfunction of refrigerant liquid thermistor
JA-00		OU: Malfunction of high pressure sensor
JC-00		Low pressure sensor abnormality
JC-01		Evaporator pressure abnormality
L1-00		Malfunction of INV PCB
L3-00		OU: Electrical box temperature rise problem
L4-00		OU: Malfunction of inverter radiating fin temperature rise
L5-00		OU: Inverter instantaneous overcurrent (DC)
L8-00		Malfunction triggered by a thermal protection in the inverter PCB
L9-00		Prevention of compressor lock
LC-00		Malfunction in communication system of outdoor unit
P1-00		Open-phase power supply imbalance
P3-00		Abnormal direct current
P4-00		OU: Malfunction of radiating fin temperature sensor
PJ-00		Capacity setting mismatch
U0-00		OU: Shortage of refrigerant
U1-00		Malfunction by reverse phase/open-phase

Error code		Description
U2-00		OU: Defect of power supply voltage
U3-00		Underfloor heating screed dryout function not completed correctly
U4-00		Indoor/outdoor unit communication problem
U5-00		User interface communication problem
U7-00		OU: Transmission malfunction between main CPU-INV CPU
U8-01		Connection with LAN adapter lost
U8-02		Connection with room thermostat lost
U8-03		No connection with room thermostat
U8-04		Unknown USB device
U8-05		File malfunction
U8-07		P1P2 communication error
U8-11		Connection with the Wireless gateway lost
UA-00		Indoor unit, outdoor unit matching problem
UA-16		Extension/hydro communication problem
UA-17		Tank type problem
UA-21		Extension/hydro mismatch problem
UF-00		Reversed piping or bad communication wiring detection



#### INFORMATION

In case of error code AH and no interruption of the disinfection function occurred due to domestic hot water tapping, following actions are recommended:

- When the **Reheat only** or **Schedule + reheat** mode is selected, it is recommended to program the start-up of the disinfection function at least 4 hours later than the last expected large hot water tapping. This start-up can be set by installer settings (disinfection function).
- When the **Schedule only** mode is selected, it is recommended to program an **Eco** action 3 hours before the scheduled start-up of the disinfection function to preheat the tank.



#### NOTICE

When the minimum water flow is lower than described in the table below, the unit will temporarily stop operation and the user interface will display error 7H-01. After some time, this error will reset automatically and the unit will resume operation.

If operation is...	Then the minimum required flow rate is...
Cooling	20 l/min
Heating/defrost when outdoor temperature is above -5°C	



If operation is...	Then the minimum required flow rate is...
Heating/defrost when outdoor temperature is below $-5^{\circ}\text{C}$	22 l/min
Domestic hot water production	28 l/min

**INFORMATION**

If error 89-05 or 89-06 occurs, check the minimum water volume during cooling.

**INFORMATION**

Error AJ-03 is reset automatically from the moment there is a normal tank heat-up.

**INFORMATION**

If an U8-04 error occurs, the error can be reset after a successful update of the software. If the software is not successfully updated then you must make sure that your USB device has the FAT32 format.

**INFORMATION**

Error EC-04 is reset automatically from the moment the domestic hot water tank is preheated to a sufficiently high temperature.

**INFORMATION**

If the booster heater overheats and is disabled by the thermostatic safety, the unit will not give an error directly. Check if the booster heater is still in operation if you experience one or more of the following errors:

- Powerful operation takes a very long time to heat up and the error code AJ-03 is displayed.
- During anti-legionella operation (weekly), the error code AH-00 is displayed because the unit cannot reach the requested temperature required for tank disinfection.

**INFORMATION**

A malfunctioning booster heater will have an impact on energy metering and power consumption control.

**INFORMATION**

The user interface will display how to reset an error code.

# 16 Disposal



**NOTICE**

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts **MUST** comply with applicable legislation. Units **MUST** be treated at a specialised treatment facility for reuse, recycling and recovery.

## In this chapter

16.1	To recover refrigerant .....	246
16.1.1	To open the stop valves .....	247
16.1.2	To manually open the electronic expansion valves.....	247
16.1.3	Recovery mode — In case of 3N~ models (7-segments display) .....	248
16.1.4	Recovery mode — In case of 1N~ models (7-LEDs display) .....	251


## 16.1 To recover refrigerant

When disposing of the outdoor unit, you need to recover its refrigerant.

To ensure that no refrigerant remains trapped in the unit:

- Make sure the stop valves are open (**a**, **b**).
- Make sure the electronic expansion valves (**Y1E**, **Y3E**) are open.
- Use all 3 service ports (**a**, **b**, **c**) to recover refrigerant.

### Components

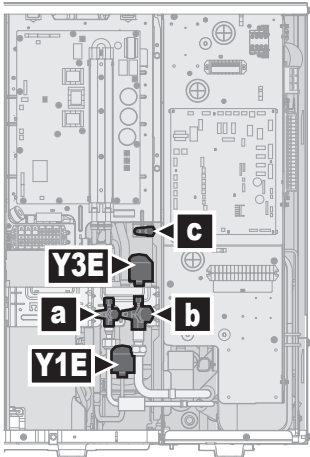

- a** Liquid stop valve with service port
- b** Gas stop valve with service port
- c** Service port 5/16" flare
- Y1E** Electronic expansion valve (main)
- Y3E** Electronic expansion valve (injection)

### To recover refrigerant when power is OFF

- 1 Make sure the stop valves are open.
- 2 Manually open the electronic expansion valves.
- 3 Recover refrigerant from the 3 service ports.

### To recover refrigerant when power is ON

- 1 Make sure the unit is not running.
- 2 Make sure the stop valves are open.

- 3 Activate the recovery mode.

**Result:** The unit opens the electronic expansion valves.


- 4 Recover refrigerant from the 3 service ports.

- 5 Deactivate the recovery mode.

**Result:** The unit returns the electronic expansion valves to their initial state.

### 16.1.1 To open the stop valves

Before recovering refrigerant, make sure the stop valves are open.

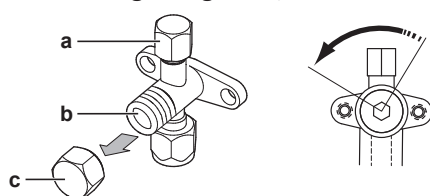


- a Service port and service port cover
- b Stop valve
- c Stop valve cover

- 1 Remove the stop valve cover.
- 2 Insert a hexagon wrench into the stop valve and turn counterclockwise to open.

### 16.1.2 To manually open the electronic expansion valves

Before recovering refrigerant, make sure the electronic expansion valves are open. When power is OFF, this has to be done manually.

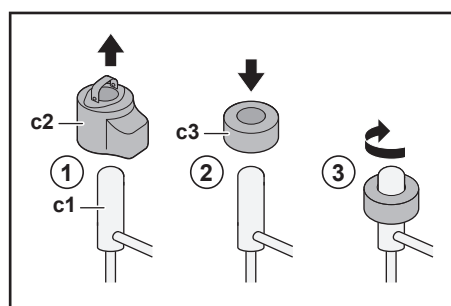

- c1 Electronic expansion valve
- c2 EEV coil
- c3 EEV magnet


- 1 Remove the EEV coil (c2).
- 2 Slide an EEV magnet (c3) over the expansion valve (c1).
- 3 Turn the EEV magnet clockwise to the fully open position of the valve. If you are not sure about what the open position is, turn the valve in its middle position so that refrigerant can pass.

16.1.3 Recovery mode — In case of 3N~ models (7-segments display)


Before recovering refrigerant, make sure the electronic expansion valves are open. When power is ON, this has to be done by using the recovery mode.

Components

To activate/deactivate the recovery mode, you need the following components:



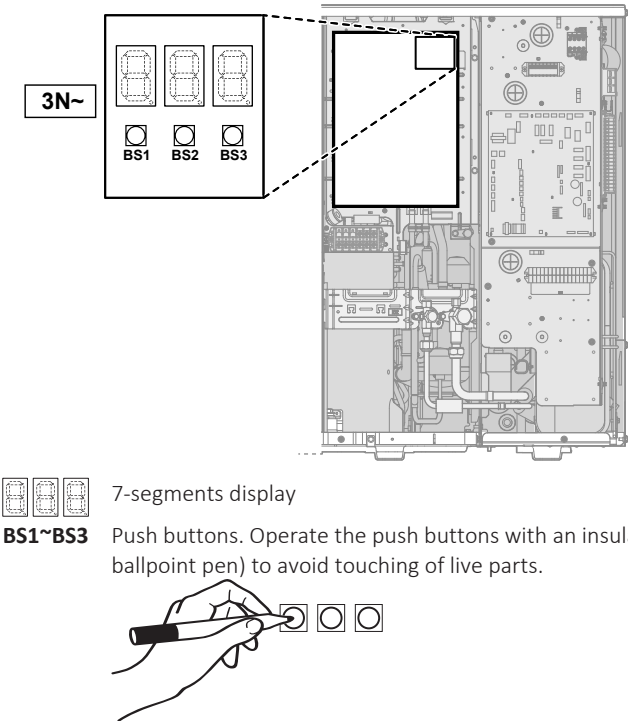







To activate the recovery mode




**INFORMATION**

   If you get confused in the middle of the process, press BS1 to return to the default situation.

     Before recovering refrigerant, activate the recovery mode as follows:

#	Action	7-segments display <sup>(a)</sup>
1	Start from the default situation.	
2	Select mode 2. Press and hold <b>BS1</b> for 5 seconds.	
3	Select setting 9. Press <b>BS2</b> 9 times.	
4	Select value 2.	









#	Action	7-segments display <sup>(a)</sup>
	<b>a</b> Display the current value. Press <b>BS3</b> once.	
	<b>b</b> Change the value to 2. Press <b>BS2</b> once.	
	<b>c</b> Enter the value in the system. Press <b>BS3</b> once.	
	<b>d</b> Confirm. Press <b>BS3</b> once.	
<b>5</b>	Return to the default situation. Press <b>BS1</b> once.	




<sup>(a)</sup>  
 = OFF,  = ON, and  = flashing.

**Result:** The recovery mode is activated. The unit opens the electronic expansion valves.
        
### To deactivate the recovery mode

After recovering refrigerant, deactivate the recovery mode as follows:

#	Procedure	7-segments display <sup>(a)</sup>
<b>1</b>	Start from the default situation.	
<b>2</b>	Select mode 2. Press and hold <b>BS1</b> for 5 seconds.	
<b>3</b>	Select setting 9. Press <b>BS2</b> 9 times.	
<b>4</b>	Select value 2.	
	<b>a</b> Display the current value. Press <b>BS3</b> once.	
	<b>b</b> Change the value to 2. Press <b>BS2</b> once.	
	<b>c</b> Enter the value in the system. Press <b>BS3</b> once.	
	<b>d</b> Confirm. Press <b>BS3</b> once.	
<b>5</b>	Return to the default situation. Press <b>BS1</b> once.	

<sup>(a)</sup>  
 = OFF,  = ON, and  = flashing.

**Result:** The recovery mode is deactivated. The unit returns the electronic expansion valves to their initial state.

**INFORMATION**


**Power OFF.** When power is turned OFF and turned ON again, the recovery mode is deactivated automatically.

### 16.1.4 Recovery mode — In case of 1N~ models (7-LEDs display)

Before recovering refrigerant, make sure the electronic expansion valves are open. When power is ON, this has to be done by using the recovery mode.


#### Components

To activate/deactivate the recovery mode, you need the following components:

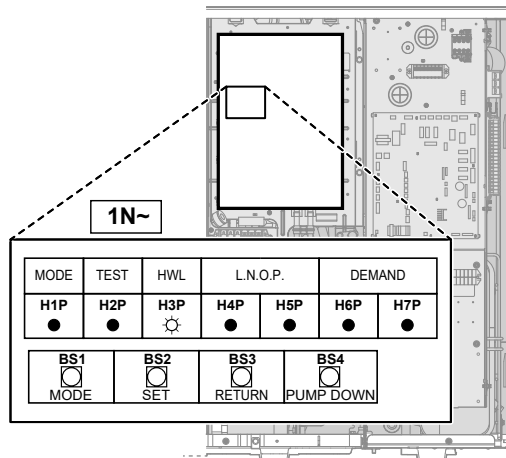

**H1P~H7P** 7-LEDs display

**BS1~BS4** Push buttons. Operate the push buttons with an insulated stick (such as a closed ballpoint pen) to avoid touching of live parts.

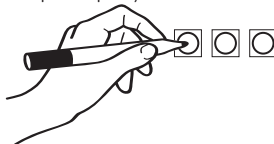

#### To activate the recovery mode



#### INFORMATION

If you get confused in the middle of the process, press BS1 to return to the default situation.

Before recovering refrigerant, activate the recovery mode as follows:

#	Action	7-LEDs display <sup>(a)</sup>						
		H1P	H2P	H3P	H4P	H5P	H6P	H7P
1	Start from the default situation.	●	●	●	●	●	●	●
2	Press and hold <b>BS1</b> for 5 seconds.	○	●	●	●	●	●	●
3	Press <b>BS2</b> 9 times.	○	●	●	○	●	●	○
4	Press <b>BS3</b> once.	○	●	●	●	●	●	◐
5	Press <b>BS2</b> once.	○	●	●	●	●	◐	●
6	Press <b>BS3</b> once.	○	●	●	●	●	○	●
7	Press <b>BS3</b> once. The flashing H1P indicates the recovery mode has been correctly selected and is activated.	◐	●	●	●	●	●	●

#	Action	7-LEDs display <sup>(a)</sup>						
		H1P	H2P	H3P	H4P	H5P	H6P	H7P
8	Press <b>BS1</b> once.  H1P keeps flashing, indicating that you are in a mode that does not allow compressor operation.	●	●	●	●	●	●	●

<sup>(a)</sup> ● = OFF, ○ = ON, and ● = flashing.

**Result:** The recovery mode is activated. The unit opens the electronic expansion valves.

### To deactivate the recovery mode

After recovering refrigerant, deactivate the recovery mode as follows:

#	Procedure	7-LEDs display <sup>(a)</sup>						
		H1P	H2P	H3P	H4P	H5P	H6P	H7P
1	Press and hold <b>BS1</b> for 5 seconds.	●	●	●	●	●	●	●
2	Press <b>BS2</b> 9 times.	●	●	●	○	●	●	○
3	Press <b>BS3</b> once.	●	●	●	●	●	○	●
4	Press <b>BS2</b> once.	●	●	●	●	●	●	○
5	Press <b>BS3</b> once.	●	●	●	●	●	●	○
6	Press <b>BS3</b> once.	●	●	●	●	●	●	●
7	Press <b>BS1</b> once to return to the default situation.	●	●	●	●	●	●	●

<sup>(a)</sup> ● = OFF, ○ = ON, and ● = flashing.

**Result:** The recovery mode is deactivated. The unit returns the electronic expansion valves to their initial state.



#### INFORMATION

**Power OFF.** When power is turned OFF and turned ON again, the recovery mode is deactivated automatically.











# 17 Technical data

A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

## In this chapter

17.1	Service space: Outdoor unit .....	254
17.2	Piping diagram: Outdoor unit.....	256
17.3	Wiring diagram: Outdoor unit.....	258

## 17.1 Service space: Outdoor unit

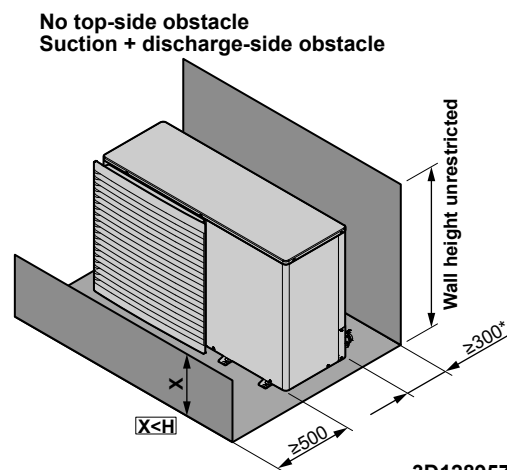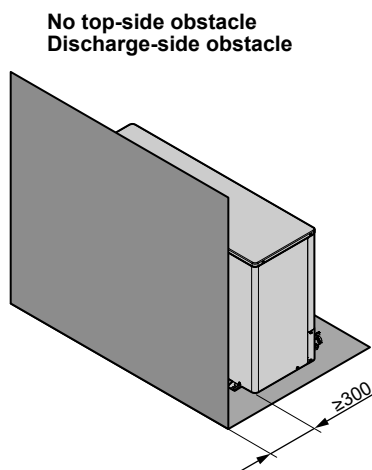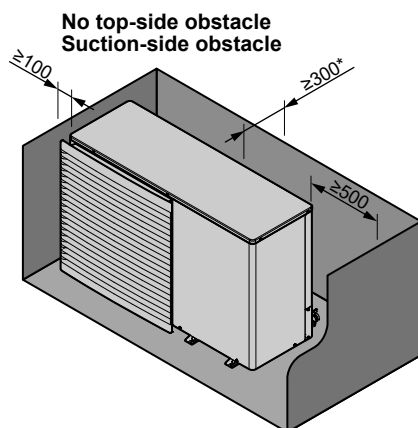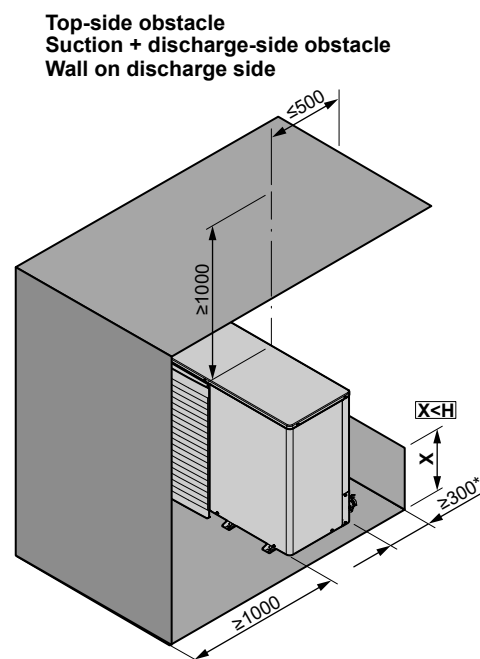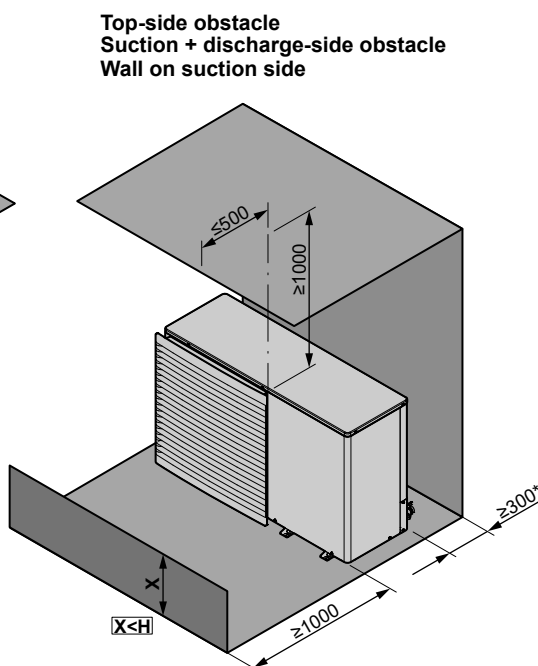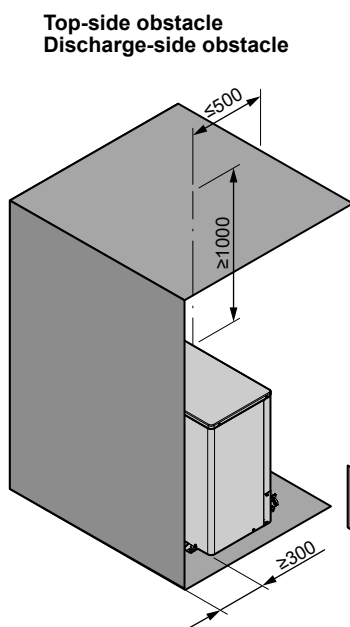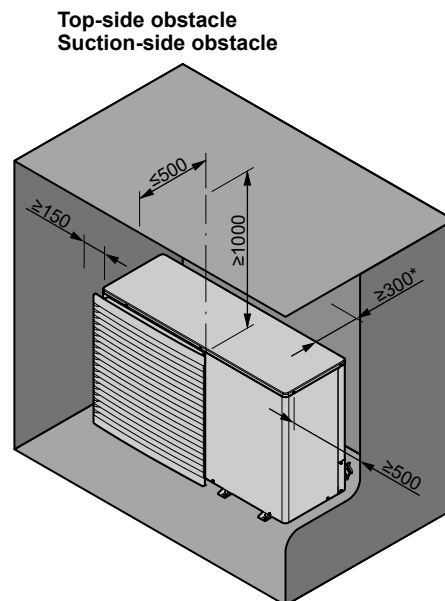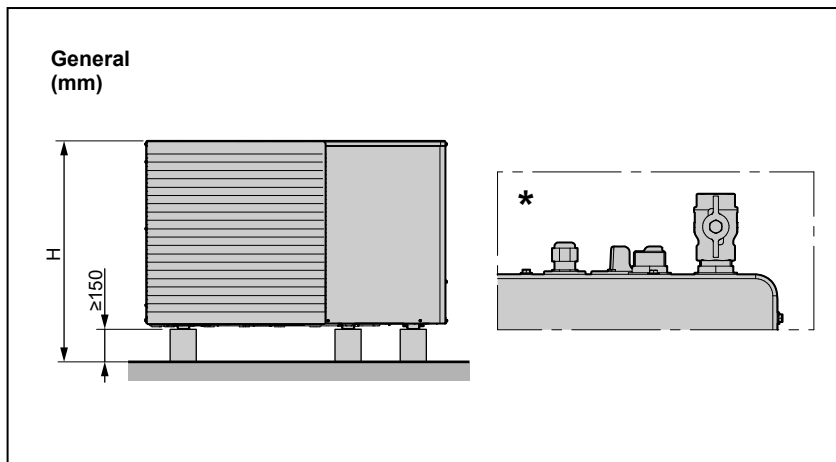


3D128957

English	Translation
Discharge-side obstacle	Discharge-side obstacle
General	General
No top-side obstacle	No top-side obstacle
Suction + discharge-side obstacle	Suction + discharge-side obstacle
Suction-side obstacle	Suction-side obstacle
Top-side obstacle	Top-side obstacle
Wall height unrestricted	Wall height unrestricted
Wall on discharge side	Wall on discharge side
Wall on suction side	Wall on suction side

## 17.2 Piping diagram: Outdoor unit

EBLA09~16DA3V3 (1N~), EDLA09~16DA3V3 (1N~), EBLA09~16DA3W1 (3N~) and EDLA09~16DA3W1 (3N~)

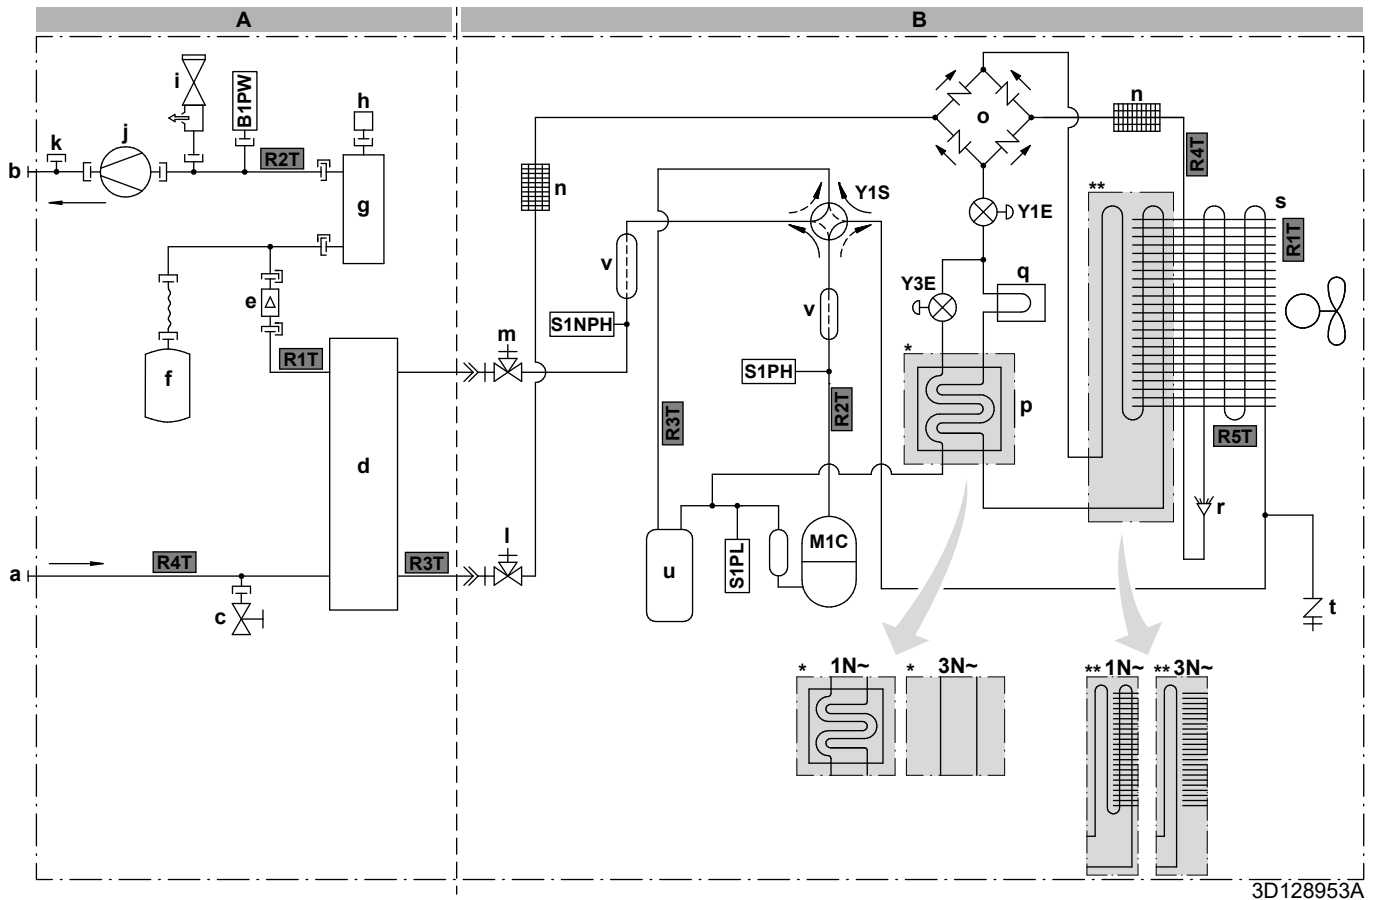

3D128953A

**A Hydro module****B Compressor module**

- a** Water IN (screw connection, male, 1")
- b** Water OUT (screw connection, male, 1")
- c** Drain valve (water circuit)
- d** Plate heat exchanger
- e** Flow sensor
- f** Expansion vessel
- g** Backup heater
- h** Automatic air purge valve
- i** Safety valve
- j** Pump
- k** Connection for optional flow switch
- l** Liquid stop valve with service port
- m** Gas stop valve with service port
- n** Filter
- o** Rectifier
- p** Economiser
- q** Heat sink
- r** Distributor
- s** Heat exchanger
- t** Service port 5/16" flare
- u** Accumulator
- v** Muffler

**B1PW** Space heating water pressure sensor**M1C** Compressor**S1PH** High pressure switch**S1PL** Low pressure switch**S1NPH** Pressure sensor**Y1E** Electronic expansion valve (main)**Y3E** Electronic expansion valve (injection)**Y1S** Solenoid valve (4-way valve)**Thermistors (hydro module):****R1T** Outlet water heat exchanger**R2T** Outlet water backup heater**R3T** Refrigerant liquid side**R4T** Inlet water**Thermistors (compressor module):****R1T** Outdoor air**R2T** Compressor discharge**R3T** Compressor suction**R4T** Air heat exchanger**R5T** Air heat exchanger, middle**Refrigerant flow:**

➔ Heating

➔ Cooling

**Connections:**


⌋ Screw connection

➤ Flare connection

⌋ Quick coupling

● Brazed connection

## EBLA09~16DAV3 (1N~), EDLA09~16DAV3 (1N~), EBLA09~16DAW1 (3N~) and EDLA09~16DAW1 (3N~)

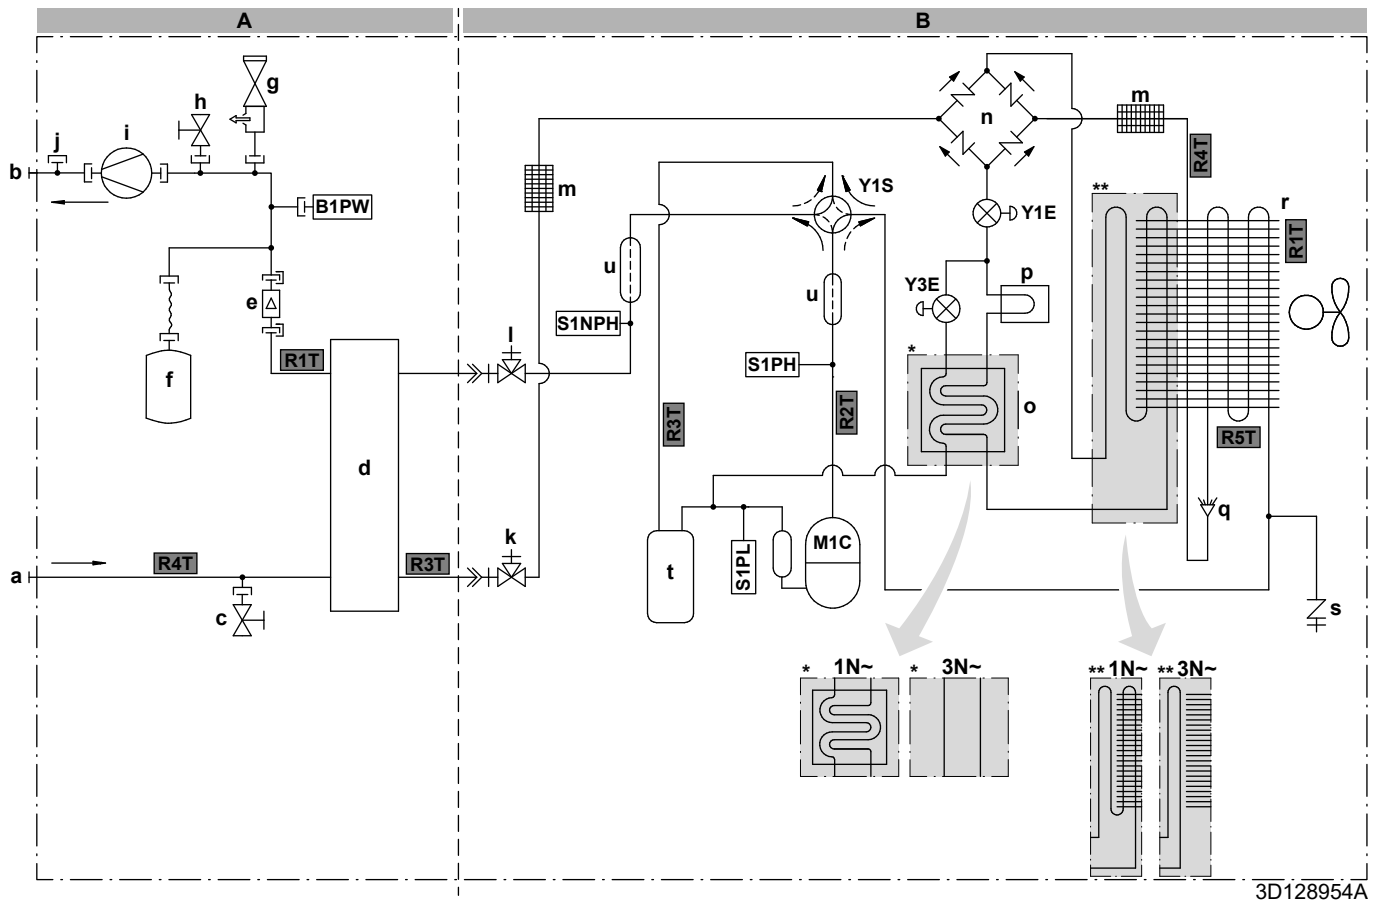

3D128954A

**A Hydro module****B Compressor module**

- a** Water IN (screw connection, male, 1")
- b** Water OUT (screw connection, male, 1")
- c** Drain valve (water circuit)
- d** Plate heat exchanger
- e** Flow sensor
- f** Expansion vessel
- g** Safety valve
- h** Manual air purge valve
- i** Pump
- j** Connection for optional flow switch
- k** Liquid stop valve with service port
- l** Gas stop valve with service port
- m** Filter
- n** Rectifier
- o** Economiser
- p** Heat sink
- q** Distributor
- r** Heat exchanger
- s** Service port 5/16" flare
- t** Accumulator
- u** Muffler

**B1PW** Space heating water pressure sensor**M1C** Compressor**S1PH** High pressure switch**S1PL** Low pressure switch**S1NPH** Pressure sensor**Y1E** Electronic expansion valve (main)**Y3E** Electronic expansion valve (injection)**Y1S** Solenoid valve (4-way valve)**Thermistors (hydro module):****R1T** Outlet water heat exchanger**R3T** Refrigerant liquid side**R4T** Inlet water**Thermistors (compressor module):****R1T** Outdoor air**R2T** Compressor discharge**R3T** Compressor suction**R4T** Air heat exchanger**R5T** Air heat exchanger, middle**Refrigerant flow:**

→ Heating

⇝ Cooling

**Connections:**

—|— Screw connection

—&gt;&gt;— Flare connection

—|— Quick coupling





—•— Brazed connection

## 17.3 Wiring diagram: Outdoor unit

The wiring diagram is delivered with the unit, located at the inside of the service cover.

### Compressor module

  
 
 

Translation of text on wiring diagram:

English		Translation
(1) Connection diagram		(1) Connection diagram
Compressor SWB		Compressor switch box
Outdoor		Outdoor
(2) Compressor switch box layout		(2) Compressor switch box layout
Front		Front
Rear		Rear
(3) Legend		(3) Legend
		*: Optional; #: Field supply
A1P		Printed circuit board (main)
A2P		Printed circuit board (noise filter)
A3P (only for 1N~ models)		Printed circuit board (flash)
Q1DI	#	Earth leakage circuit breaker
X1M		Terminal strip
(4) Notes		(4) Notes
X1M		Main terminal
-----		Earth wiring
-----		Field supply
①		Several wiring possibilities
		Option
		Wiring depending on model
		Switch box
		PCB

### Hydro module

   Translation of text on wiring diagram:

English		Translation
(1) Connection diagram		(1) Connection diagram
3 wire type SPDT		3 wire type SPDT
Booster heater power supply		Booster heater power supply
Compressor switch box		Compressor switch box
External BUH		External backup heater kit
For DHW tank option		For DHW tank option

English	Translation
For external BUH option	For external backup heater kit
Hydro SWB power supplied from compressor SWB	Hydro switch box power supplied from compressor switch box
Hydro	Hydro module
Normal kWh rate power supply	Normal kWh rate power supply
Only for normal power supply (standard)	Only for normal power supply (standard)
Only for preferential kWh rate power supply (outdoor)	Only for preferential kWh rate power supply (outdoor)
Outdoor	Outdoor
SWB1	Hydro switch box 1 (front side)
SWB2	Hydro switch box 2 (right side)
Use normal kWh rate power supply for hydro SWB	Use normal kWh rate power supply for hydro switch box
(2) Hydro SWB layout	(2) Hydro switch box layout
For external BUH option	For external backup heater kit
For internal BUH option	For models with integrated backup heater
SWB1	Hydro switch box 1 (front side)
SWB2	Hydro switch box 2 (right side)
SWB3	Hydro switch box 3 (behind SWB2)
(3) Notes	(3) Notes
X1M	Terminal (main)
X2M	Terminal (field wiring for AC)
X3M	Terminal (external backup heater kit)
X4M	Terminal (booster heater power supply)
X5M	Terminal (field wiring for DC)
X9M	Terminal (integrated backup heater power supply)
X10M	Terminal (high voltage Smart Grid)
-----	Earth wiring
-----	Field supply
①	Several wiring possibilities
	Option
	Wiring depending on model
	Switch box
	PCB
(4) Legend	(4) Legend
	*: Optional; #: Field supply

English		Translation
A1P		Main PCB
A2P	*	ON/OFF thermostat (PC=power circuit)
A3P	*	Heat pump convector
A4P	*	Digital I/O PCB
A8P	*	Demand PCB
A11P		MMI (= standalone user interface delivered as accessory) – Main PCB
A14P	*	PCB of the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)
A15P	*	Receiver PCB (wireless ON/OFF thermostat)
CN* (A4P)	*	Connector
DS1 (A8P)	*	DIP switch
E*P (A9P)		Indication LED
F1B	#	Overcurrent fuse backup heater
F2B	#	Overcurrent fuse booster heater
F1U, F2U (A4P)		Fuse 5 A 250 V for digital I/O PCB
K1A, K2A	*	High voltage Smart Grid relay
K1M		Safety contactor backup heater
K3M	*	Contactor booster heater
K*R (A4P)		Relay on PCB
M2P	#	Domestic hot water pump
M2S	#	2-way valve for cooling mode
M3S	*	3-way valve for floorheating / domestic hot water
M4S	*	Bypass valve kit (for external backup heater kit)
PC (A15P)	*	Power circuit
PHC1 (A4P)	*	Optocoupler input circuit
Q2L	*	Thermal protector booster heater
Q4L	#	Safety thermostat
Q*DI	#	Earth leakage circuit breaker
R1H (A2P)	*	Humidity sensor
R1T (A2P)	*	Ambient sensor of the ON/OFF thermostat
R1T (A14P)	*	Ambient sensor of the dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)
R2T (A2P)	*	External sensor (floor or ambient)







English		Translation
R5T	*	Domestic hot water thermistor
R6T	*	External indoor or outdoor ambient thermistor
S1L	*	Flow switch
S1S	#	Preferential kWh rate power supply contact
S2S	#	Electricity meter pulse input 1
S3S	#	Electricity meter pulse input 2
S4S	#	Smart Grid feed-in
S6S~S9S	*	Digital power limitation inputs
S10S, S11S	#	Low voltage Smart Grid contact
SS1 (A4P)	*	Selector switch
TR1		Power supply transformer
X4M	*	Terminal strip (booster heater power supply)
X8M	#	Terminal strip (power supply at client side)
X9M		Terminal strip (integrated backup heater power supply)
X10M	*	Terminal strip (Smart Grid power supply)
X*, X*A, X*Y		Connector
X*M		Terminal strip
(5) Option PCBs		(5) Option PCBs
Alarm output		Alarm output
Changeover to ext. heat source		Changeover to external heat source
Max. load		Maximum load
Min. load		Minimum load
Only for demand PCB option		Only for demand PCB option
Only for digital I/O PCB option		Only for digital I/O PCB option
Options: ext. heat source output, alarm output		Options: external heat source output, alarm output
Options: On/OFF output		Options: ON/OFF output
Power limitation digital inputs: 12 V DC / 12 mA detection (voltage supplied by PCB)		Power limitation digital inputs: 12 V DC / 12 mA detection (voltage supplied by PCB)
Space C/H On/OFF output		Space cooling/heating ON/OFF output
SWB		Hydro switch box 1 (front side)
(6) Options		(6) Options
Continuous		Continuous current

English	Translation
DHW pump output	Domestic hot water pump output
Electric pulse meter input: 12 V DC pulse detection (voltage supplied by PCB)	Electricity meter pulse input: 12 V DC pulse detection (voltage supplied by PCB)
Ext. ambient sensor option (indoor or outdoor)	External indoor or outdoor ambient thermistor
For cooling mode	For cooling mode
For HP tariff	For preferential kWh rate power supply
For HV smartgrid	For high voltage Smart Grid
For LV smartgrid	For low voltage Smart Grid
For safety thermostat	For safety thermostat
For smartgrid	For Smart Grid
Inrush	Inrush current
Max. load	Maximum load
MMI	Standalone user interface (delivered as accessory)
NO valve	Normal open valve
Only for ***	Only for ***
Preferential kWh rate power supply contact: 16 V DC detection (voltage supplied by PCB)	Preferential kWh rate power supply contact: 16 V DC detection (voltage supplied by PCB)
Remote user interface	Dedicated Human Comfort Interface (BRC1HHDA used as room thermostat)
Safety thermostat contact: 16 V DC detection (voltage supplied by PCB)	Safety thermostat contact: 16 V DC detection (voltage supplied by PCB)
SD card	Card slot for WLAN cartridge
Smartgrid contacts	Smart Grid contacts
Smartgrid PV power pulse meter	Smart Grid photovoltaic power pulse meter
SWB1	Hydro switch box 1 (front side)
SWB2	Hydro switch box 2 (right side)
WLAN cartridge	WLAN cartridge
(7) External On/OFF thermostats and heat pump convector	(7) External ON/OFF thermostats and heat pump convector
Additional LWT zone	Additional leaving water temperature zone
Main LWT zone	Main leaving water temperature zone
Only for external sensor (floor/ambient)	Only for external sensor (floor or ambient)
Only for heat pump convector	Only for heat pump convector
Only for wired On/OFF thermostat	Only for wired ON/OFF thermostat

English	Translation
Only for wireless On/OFF thermostat	Only for wireless ON/OFF thermostat

### Hydro module — Integrated backup heater

    
Translation of text on wiring diagram:

English	Translation
(1) Connection diagram	(1) Connection diagram
For internal BUH option	For models with integrated backup heater
Hydro	Hydro module
Outdoor	Outdoor
SWB2	Hydro switch box 2 (right side)
(2) Notes	(2) Notes
X1M	Terminal (main)
X2M	Terminal (field wiring for AC)
X4M	Terminal (booster heater power supply)
X5M	Terminal (field wiring for DC)
X9M	Terminal (integrated backup heater power supply)
X10M	Terminal (Smart Grid)
-----	Earth wiring
-----	Field supply
①	Several wiring possibilities
	Option
	Wiring depending on model
	Switch box
	PCB
(3) BUH switch box	(3) Backup heater switch box
SWB1	Hydro switch box 1 (front side)
SWB2	Hydro switch box 2 (right side)
SWB3	Hydro switch box 3 (behind SWB2)
(4) Legend	(4) Legend
	*: Optional; #: Field supply
A1P	Main PCB
A4P	* Digital I/O PCB
A8P	* Demand PCB
F1B	# Overcurrent fuse backup heater
K1A, K2A	* High voltage Smart Grid relay
K1M	Safety contactor backup heater
K3M	* Contactor booster heater

English		Translation
Q1DI	#	Earth leakage circuit breaker
TR1		Power supply transformer
X4M	*	Terminal strip (booster heater power supply)
X6M	#	Terminal strip (power supply at client side)
X9M		Terminal strip (integrated backup heater power supply)
X10M	*	Terminal (high voltage Smart Grid)
X*A		Connector
X*M		Terminal strip

## Electrical connection diagram

For more details, please check the unit wiring.

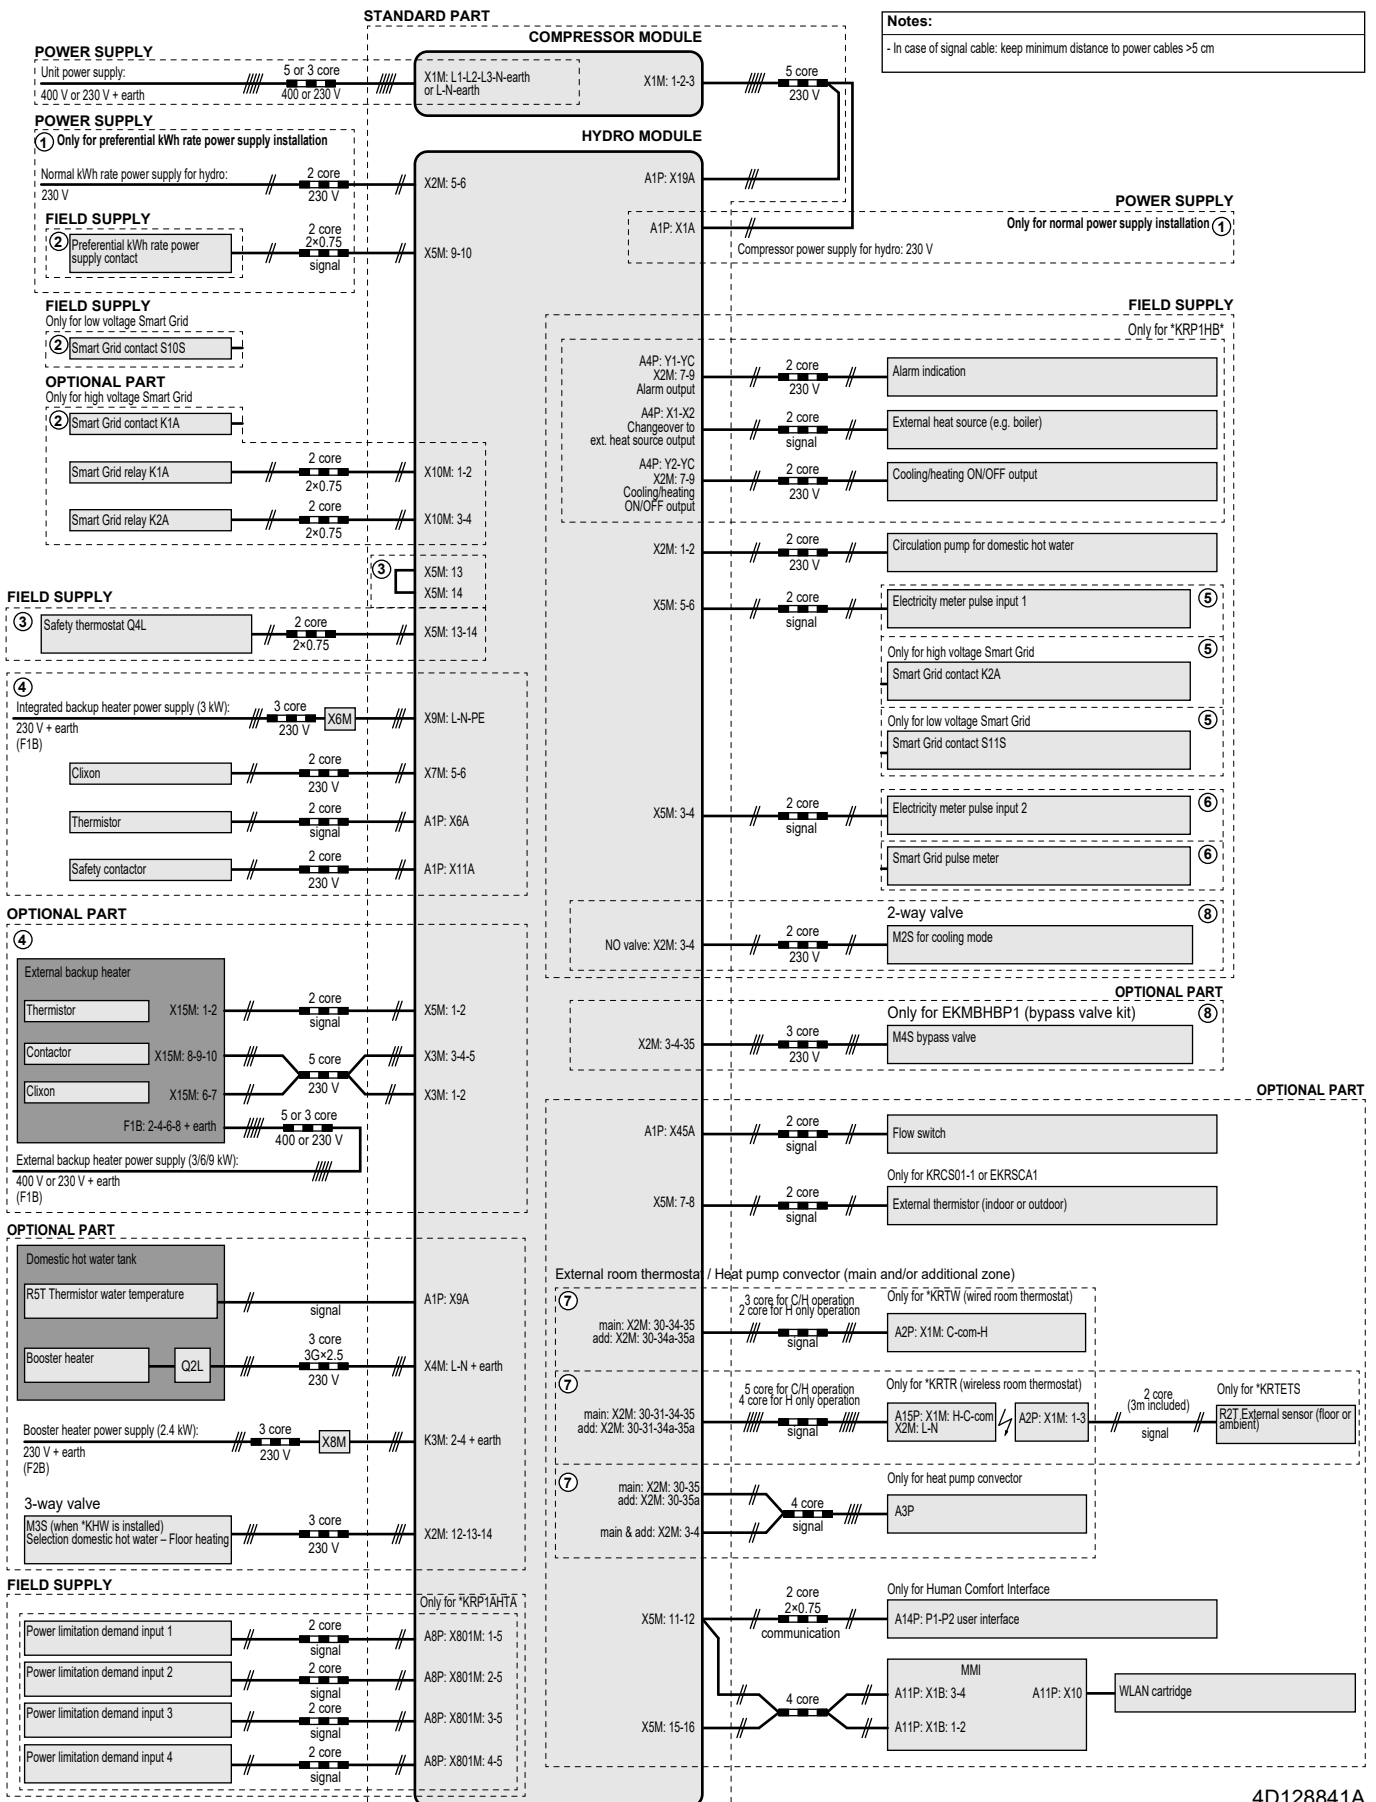

4D128841A

# 18 Glossary

**Dealer**

Sales distributor for the product.

**Authorised installer**

Technical skilled person who is qualified to install the product.

**User**

Person who is owner of the product and/or operates the product.

**Applicable legislation**

All international, European, national and local directives, laws, regulations and/or codes that are relevant and applicable for a certain product or domain.

**Service company**

Qualified company which can perform or coordinate the required service to the product.

**Installation manual**

Instruction manual specified for a certain product or application, explaining how to install, configure and maintain it.

**Operation manual**

Instruction manual specified for a certain product or application, explaining how to operate it.

**Maintenance instructions**

Instruction manual specified for a certain product or application, which explains (if relevant) how to install, configure, operate and/or maintain the product or application.

**Accessories**

Labels, manuals, information sheets and equipment that are delivered with the product and that need to be installed according to the instructions in the accompanying documentation.

**Optional equipment**

Equipment made or approved by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

**Field supply**

Equipment NOT made by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

**Field settings table**[8.7.5] = ....**0221****Applicable units**

EDLA09DA3V3  
 EDLA11DA3V3  
 EDLA14DA3V3  
 EDLA16DA3V3  
 EBLA09DA3V3  
 EBLA11DA3V3  
 EBLA14DA3V3  
 EBLA16DA3V3  
 EDLA09DAV3  
 EDLA11DAV3  
 EDLA14DAV3  
 EDLA16DAV3  
 EBLA09DAV3  
 EBLA11DAV3  
 EBLA14DAV3  
 EBLA16DAV3  
 EDLA09DA3W1  
 EDLA11DA3W1  
 EDLA14DA3W1  
 EDLA16DA3W1  
 EBLA09DA3W1  
 EBLA11DA3W1  
 EBLA14DA3W1  
 EBLA16DA3W1  
 EDLA09DAW1  
 EDLA11DAW1  
 EDLA14DAW1  
 EDLA16DAW1  
 EBLA09DAW1  
 EBLA11DAW1  
 EBLA14DAW1  
 EBLA16DAW1

**Notes**

- (\*1) \*V3/W1
- (\*2) \*3V3/3W1
- (\*3) EDLA\*
- (\*4) EBLA\*

Field settings table					Installer setting at variance with default value	
Breadcrumb	Field code	Setting name		Range, step Default value	Date	Value
<b>Room</b>						
	└ Antifrost					
1.4.1	[2-06]	Room frost protection	R/W	0: Disabled <b>1: Enabled</b>		
1.4.2	[2-05]	Room antifrost temperature	R/W	4~16°C, step: 1°C <b>8°C</b>		
	└ Setpoint range					
1.5.1	[3-07]	Heating minimum	R/W	12~18°C, step: 1°C <b>12°C</b>		
1.5.2	[3-06]	Heating maximum	R/W	18~30°C, step: 1°C <b>30°C</b>		
1.5.3	[3-09]	Cooling minimum	R/W	15~25°C, step: 1°C <b>15°C</b>		
1.5.4	[3-08]	Cooling maximum	R/W	25~35°C, step: 1°C <b>35°C</b>		
<b>Room</b>						
1.6	[2-09]	Room sensor offset	R/W	-5~5°C, step: 0,5°C <b>0°C</b>		
1.7	[2-0A]	Room sensor offset	R/W	-5~5°C, step: 0,5°C <b>0°C</b>		
	└ Room comfort setpoint					
1.9.1	[9-0A]	Heating comfort setpoint	R/W	[3-07]~[3-06]°C, step: 0,5°C <b>23°C</b>		
1.9.2	[9-0B]	Cooling comfort setpoint	R/W	[3-09]~[3-08]°C, step: 0,5°C <b>23°C</b>		
<b>Main zone</b>						
2.4		Setpoint mode		0: Fixed 1: WD heating, fixed cooling <b>2: Weather dependent</b>		
	└ Heating WD curve					
2.5	[1-00]	Low ambient temp. for LWT main zone heating WD curve.	R/W	-40~5°C, step: 1°C <b>-10°C</b>		
2.5	[1-01]	High ambient temp. for LWT main zone heating WD curve.	R/W	10~25°C, step: 1°C <b>15°C</b>		
2.5	[1-02]	Leaving water value for low ambient temp. for LWT main zone heating WD curve.	R/W	[9-01]~[9-00], step: 1°C <b>35°C</b>		
2.5	[1-03]	Leaving water value for high ambient temp. for LWT main zone heating WD curve.	R/W	[9-01]~min(45, [9-00])°C, step: 1°C <b>25°C</b>		
	└ Cooling WD curve					
2.6	[1-06]	Low ambient temp. for LWT main zone cooling WD curve.	R/W	10~25°C, step: 1°C <b>20°C</b>		
2.6	[1-07]	High ambient temp. for LWT main zone cooling WD curve.	R/W	25~43°C, step: 1°C <b>35°C</b>		
2.6	[1-08]	Leaving water value for low ambient temp. for LWT main zone cooling WD curve.	R/W	[9-03]~[9-02]°C, step: 1°C <b>22°C</b>		
2.6	[1-09]	Leaving water value for high ambient temp. for LWT main zone cooling WD curve.	R/W	[9-03]~[9-02]°C, step: 1°C <b>18°C</b>		
<b>Main zone</b>						
2.7	[2-0C]	Emitter type	R/W	<b>0: Underfloor heating</b> 1: Fancoil unit 2: Radiator		
	└ Setpoint range					
2.8.1	[9-01]	Heating minimum	R/W	15~37°C, step: 1°C <b>25°C</b>		
2.8.2	[9-00]	Heating maximum	R/W	[2-0C]=2: 37~60, step: 1°C <b>60°C</b> [2-0C]≠2: 37~55, step: 1°C <b>55°C</b>		
2.8.3	[9-03]	Cooling minimum	R/W	5~18°C, step: 1°C <b>7°C</b>		
2.8.4	[9-02]	Cooling maximum	R/W	18~22°C, step: 1°C <b>22°C</b>		
<b>Main zone</b>						
2.9	[C-07]	Control	R/W	<b>0: LWT control</b> 1: Ext RT control 2: RT control		
2.A	[C-05]	Thermostat type	R/W	0: - 1: 1 contact <b>2: 2 contacts</b>		
	└ Delta T					
2.B.1	[1-0B]	Delta T heating	R/W	[2-0C] ≠ 2 (Radiator) 3~10°C, step: 1°C <b>5°C</b> [2-0C] = 2 (Radiator) 8°C		
2.B.2	[1-0D]	Delta T cooling	R/W	3~10°C, step: 1°C <b>5°C</b>		
	└ Modulation					
2.C.1	[8-05]	Modulation	R/W	<b>0: No</b> 1: Yes		
2.C.2	[8-06]	Max modulation	R/W	0~10°C, step: 1°C <b>5°C</b>		
<b>Additional zone</b>						
3.4		Setpoint mode		0: Fixed 1: WD heating, fixed cooling <b>2: Weather dependent</b>		
	└ Heating WD curve					
3.5	[0-00]	Leaving water value for high ambient temp. for LWT add zone heating WD curve.	R/W	[9-05]~min(45,[9-06])°C, step: 1°C <b>25°C</b>		
3.5	[0-01]	Leaving water value for low ambient temp. for LWT add zone heating WD curve.	R/W	[9-05]~[9-06]°C, step: 1°C <b>35°C</b>		
3.5	[0-02]	High ambient temp. for LWT add zone heating WD curve.	R/W	10~25°C, step: 1°C <b>15°C</b>		
3.5	[0-03]	Low ambient temp. for LWT add zone heating WD curve.	R/W	-40~5°C, step: 1°C <b>-10°C</b>		
	└ Cooling WD curve					
3.6	[0-04]	Leaving water value for high ambient temp. for LWT add zone cooling WD curve.	R/W	[9-07]~[9-08]°C, step: 1°C <b>18°C</b>		
3.6	[0-05]	Leaving water value for low ambient temp. for LWT add zone cooling WD curve.	R/W	[9-07]~[9-08]°C, step: 1°C <b>22°C</b>		

(\*) \*V3/W1  
 (\*) \*3V3/3W1  
 (\*) EDLA\*  
 (\*) EBLA\*



Field settings table					Installer setting at variance with default value	
Breadcrumb	Field code	Setting name		Range, step Default value	Date	Value
3.6	[0-06]	High ambient temp. for LWT add zone cooling WD curve.	R/W	25~43°C, step: 1°C <b>35°C</b>		
3.6	[0-07]	Low ambient temp. for LWT add zone cooling WD curve.	R/W	10~25°C, step: 1°C <b>20°C</b>		
Additional zone						
3.7	[2-0D]	Emitter type	R/W	<b>0: Underfloor heating</b> 1: Fancoil unit 2: Radiator		
└ Setpoint range						
3.8.1	[9-05]	Heating minimum	R/W	15~37°C, step: 1°C <b>25°C</b>		
3.8.2	[9-06]	Heating maximum	R/W	[2-0D]=2: 37~60, step: 1°C <b>60°C</b> [2-0D]≠2: 37~55, step: 1°C <b>55°C</b>		
3.8.3	[9-07]	Cooling minimum	R/W	5~18°C, step: 1°C <b>7°C</b>		
3.8.4	[9-08]	Cooling maximum	R/W	18~22°C, step: 1°C <b>22°C</b>		
Additional zone						
3.A	[C-06]	Thermostat type	R/W	0: - 1: 1 contact <b>2: 2 contacts</b>		
└ Delta T						
3.B.1	[1-0C]	Delta T heating	R/W	[2-0D] ≠ 2 (Radiator) 3~10°C, step: 1°C <b>5°C</b> [2-0D] = 2 (Radiator) 8°C		
3.B.2	[1-0E]	Delta T cooling	R/W	3~10°C, step: 1°C <b>5°C</b>		
Space heating / cooling						
└ Operation range						
4.3.1	[4-02]	Space heating OFF temp	R/W	14~35°C, step: 1°C with BUH: <b>35°C</b> without BUH: <b>25°C</b>		
4.3.2	[F-01]	Space cooling OFF temp	R/W	10~35°C, step: 1°C <b>20°C</b>		
Space heating / cooling						
4.4	[7-02]	Number of zones	R/W	<b>0: 1 LWT zone</b> 1: 2 LWT zones		
4.5	[F-0D]	Pump operation mode	R/W	0: Continuous <b>1: Sample</b> 2: Request		
4.6	[E-02]	Unit type	R/W (*4) R/O (*3)	<b>0: Reversible(*4)</b> <b>1: Heating only (*3)</b>		
4.7	[9-0D]	Pump limitation	R/W	0~8, step:1 0: No limitation 1~4: 80~50% 5~8: 80~50% during sampling <b>6</b>		
Space heating / cooling						
4.9	[F-00]	Pump outside range	R/W	<b>0: Restricted</b> 1: Allowed		
4.A	[D-03]	Increase around 0°C	R/W	0: No <b>1: increase 2°C, span 4°C</b> 2: increase 4°C, span 4°C 3: increase 2°C, span 8°C 4: increase 4°C, span 8°C		
4.B	[9-04]	Overshoot	R/W	1~4°C, step: 1°C <b>4°C</b>		
4.C	[2-06]	Room frost protection	R/W	0: Disabled <b>1: Enabled</b>		
Tank						
5.2	[6-0A]	Comfort setpoint	R/W	30~[6-0E]°C, step: 1°C <b>50°C</b>		
5.3	[6-0B]	Eco setpoint	R/W	30~min(50, [6-0E])°C, step: 1°C <b>45°C</b>		
5.4	[6-0C]	Reheat setpoint	R/W	30~min(50, [6-0E])°C, step: 1°C <b>45°C</b>		
5.6	[6-0D]	Heat up mode	R/W	0: Reheat only <b>1: Reheat + sched.</b> 2: Scheduled only		
└ Disinfection						
5.7.1	[2-01]	Activation	R/W	0: No <b>1: Yes</b>		
5.7.2	[2-00]	Operation day	R/W	0: Each day 1: Monday 2: Tuesday 3: Wednesday 4: Thursday <b>5: Friday</b> 6: Saturday 7: Sunday		
5.7.3	[2-02]	Start time	R/W	0~23 hour, step: 1 hour <b>1</b>		
5.7.4	[2-03]	Tank setpoint	R/W	55~75°C, step: 5°C <b>70°C</b>		
5.7.5	[2-04]	Duration	R/W	5~60 min, step: 5 min <b>10 min</b>		
Tank						
5.8	[6-0E]	Maximum	R/W	40~75°C, step: 1°C <b>60°C</b> [E-07]=0 40~80°C, step: 1°C <b>60°C</b> [E-07]=5		
5.9	[6-00]	Hysteresis	R/W	2~40°C, step: 1°C <b>27°C</b>		

(\*1) \*V3/W1  
 (\*2) \*3V3/3W1  
 (\*3) EDLA\*  
 (\*4) EBLA\*

(#) Setting is not applicable for this unit.

Field settings table						Installer setting at variance with default value	
Breadcrumb	Field code	Setting name		Range, step	Default value	Date	Value
5.A	[6-08]	Hysteresis	R/W	2~20°C, step: 1°C	10°C		
5.B		Setpoint mode	R/W	0: Fixed 1: Weather dependent			
└─ WD curve							
5.C	[0-0B]	Leaving water value for high ambient temp. for DHW WD curve.	R/W	35~[6-0E]°C, step: 1°C	55°C		
5.C	[0-0C]	Leaving water value for low ambient temp. for DHW WD curve.	R/W	45~[6-0E]°C, step: 1°C	55°C		
5.C	[0-0D]	High ambient temp. for DHW WD curve.	R/W	10~25°C, step: 1°C	15°C		
5.C	[0-0E]	Low ambient temp. for DHW WD curve.	R/W	-40~5°C, step: 1°C	-10°C		
Tank							
5.D	[6-01]	Margin	R/W	0~10°C, step: 1°C	2°C		
User settings							
└─ Quiet							
7.4.1		Activation	R/W	0: OFF 1: Manual 2: Automatic			
└─ Electricity price							
7.5.1		High	R/W	0,00~990/kWh	1/kWh		
7.5.2		Medium	R/W	0,00~990/kWh	1/kWh		
7.5.3		Low	R/W	0,00~990/kWh	1/kWh		
User settings							
7.6		Gas price	R/W	0,00~990/kWh 0,00~290/MBtu	1,0/kWh		
Installer settings							
└─ Configuration wizard							
└─ System							
9.1	[E-03]	BUH type	R/W (*1) R/O (*2)	0: no BUH (*1) 1: External BUH 2: 3V (*2)			
9.1	[E-05] [E-06] [E-07]	Domestic hot water	R/W	0: No DHW 2: EKHW 7: EKHPW			
9.1	[4-06]	Emergency	R/W	0: Manual 1: Automatic(normal SH/DHW ON) 2: Auto red SH/DHW ON 3: Auto red SH/DHW OFF 4: SH ON/DHW OFF			
9.1	[7-02]	Number of zones	R/W	0: Single zone 1: Dual zone			
└─ Backup heater							
9.1	[5-0D]	Voltage	R/W (*1) R/O (*2)	0: 230V, 1~ 1: 230V, 3~ 2: 400V, 3~			
9.1	[4-0A]	Configuration	R/W	0: 1 1: 1/1+2 2: 1/2 3: 1/2 + 1/1+2 in emergency			
9.1	[6-03]	Capacity step 1	R/W	0~10kW, step: 0,2kW 0kW (*1) 3kW (*2)			
9.1	[6-04]	Additional capacity step 2	R/O (*2) R/W (*1)	0~10kW, step: 0,2kW 0kW			
└─ Main zone							
9.1	[2-0C]	Emitter type	R/W	0: Underfloor heating 1: Fancoil unit 2: Radiator			
9.1	[C-07]	Control	R/W	0: LWT control 1: Ext RT control 2: RT control			
9.1		Setpoint mode	R/W	0: Fixed 1: WD heating, fixed cooling 2: Weather dependent			
9.1		Schedule	R/W	0: No 1: Yes			
9.1	[1-00]	Low ambient temp. for LWT main zone heating WD curve.	R/W	-40~5°C, step: 1°C	-10°C		
9.1	[1-01]	High ambient temp. for LWT main zone heating WD curve.	R/W	10~25°C, step: 1°C	15°C		
9.1	[1-02]	Leaving water value for low ambient temp. for LWT main zone heating WD curve.	R/W	[9-01]~[9-00], step: 1°C	35°C		
9.1	[1-03]	Leaving water value for high ambient temp. for LWT main zone heating WD curve.	R/W	[9-01]~min[45, [9-00]]°C, step: 1°C	25°C		
9.1	[1-06]	Low ambient temp. for LWT main zone cooling WD curve.	R/W	10~25°C, step: 1°C	20°C		
9.1	[1-07]	High ambient temp. for LWT main zone cooling WD curve.	R/W	25~43°C, step: 1°C	35°C		
9.1	[1-08]	Leaving water value for low ambient temp. for LWT main zone cooling WD curve.	R/W	[9-03]~[9-02]°C, step: 1°C	22°C		
9.1	[1-09]	Leaving water value for high ambient temp. for LWT main zone cooling WD curve.	R/W	[9-03]~[9-02]°C, step: 1°C	18°C		
└─ Additional zone							
9.1	[2-0D]	Emitter type	R/W	0: Underfloor heating 1: Fancoil unit 2: Radiator			
9.1		Setpoint mode	R/W	0: Fixed 1: WD heating, fixed cooling 2: Weather dependent			
9.1		Schedule	R/W	0: No 1: Yes			
9.1	[0-00]	Leaving water value for high ambient temp. for LWT add zone heating WD curve.	R/W	[9-05]~min[45, [9-06]]°C, step: 1°C	25°C		
9.1	[0-01]	Leaving water value for low ambient temp. for LWT add zone heating WD curve.	R/W	[9-05]~[9-06]°C, step: 1°C	35°C		

(\*1) \*V3/W1  
 (\*2) \*3V3/3W1  
 (\*3) EDLA\*  
 (\*4) EBLA\*

Field settings table					Installer setting at variance with default value	
Breadcrumb	Field code	Setting name		Range, step Default value	Date	Value
9.1	[0-02]	High ambient temp. for LWT add zone heating WD curve.	R/W	10~25°C, step: 1°C <b>15°C</b>		
9.1	[0-03]	Low ambient temp. for LWT add zone heating WD curve.	R/W	-40~5°C, step: 1°C <b>-10°C</b>		
9.1	[0-04]	Leaving water value for high ambient temp. for LWT add zone cooling WD curve.	R/W	[9-07]~[9-08]°C, step: 1°C <b>18°C</b>		
9.1	[0-05]	Leaving water value for low ambient temp. for LWT add zone cooling WD curve.	R/W	[9-07]~[9-08]°C, step: 1°C <b>22°C</b>		
9.1	[0-06]	High ambient temp. for LWT add zone cooling WD curve.	R/W	25~43°C, step: 1°C <b>35°C</b>		
9.1	[0-07]	Low ambient temp. for LWT add zone cooling WD curve.	R/W	10~25°C, step: 1°C <b>20°C</b>		
└ Tank						
9.1	[6-0D]	Heat up mode	R/W	0: Reheat only <b>1: Reheat + sched.</b> 2: Scheduled only		
9.1	[6-0A]	Comfort setpoint	R/W	30~[6-0E]°C, step: 1°C <b>50°C</b>		
9.1	[6-0B]	Eco setpoint	R/W	30~min(50, [6-0E])°C, step: 1°C <b>45°C</b>		
9.1	[6-0C]	Reheat setpoint	R/W	30~min(50, [6-0E])°C, step: 1°C <b>45°C</b>		
└ Domestic hot water						
9.2.1	[E-05] [E-06] [E-07]	Domestic hot water	R/W	<b>0: No DHW</b> 2: EKHWP 7: EKHWP		
9.2.2	[D-02]	DHW pump	R/W	<b>0: No</b> 1: Secondary rtn 2: Disinf. Shunt 3: Circulation Pump 4: Circulation Pump and disinf. Shunt		
9.2.4	[D-07]	Solar	R/W	<b>0: No</b> 1: Yes		
└ Back up heater						
9.3.1	[E-03]	BUH type	R/W (*1) R/O (*2)	<b>0: no BUH (*1)</b> 1: External BUH <b>2: 3V (*2)</b>		
9.3.2	[5-0D]	Voltage	R/W (*1) R/O (*2)	<b>0: 230V, 1~</b> 1: 230V, 3~ 2: 400V, 3~		
9.3.3	[4-0A]	Configuration	R/W	<b>0: 1</b> 1: 1/1+2 2: 1/2 3: 1/2 + 1/1+2 in emergency		
9.3.4	[6-03]	Capacity step 1	R/W	0~10kW, step: 0,2kW <b>0kW (*1)</b> <b>3kW (*2)</b>		
9.3.5	[6-04]	Additional capacity step 2	R/O (*2) R/W (*1)	0~10kW, step: 0,2kW <b>0kW</b>		
9.3.6	[5-00]	Equilibrium	R/W	0: Allowed <b>1: Not allowed</b>		
9.3.7	[5-01]	Equilibrium temperature	R/W	-15~35°C, step: 1°C <b>0°C</b>		
9.3.8	[4-00]	Operation	R/W	0: Disabled <b>1: Enabled</b> 2: Only DHW		
└ Booster heater						
9.4.1	[6-02]	Capacity	R/W	0~10kW, step: 0,2kW <b>3kW</b>		
9.4.3	[8-03]	BSH eco timer	R/W	20~95 min, step: 5 min <b>50 min</b>		
9.4.4	[4-03]	Operation	R/W	0: Restricted 1: Allowed 2: Overlap <b>3: Compressor off</b> 4: Legionella only		
└ Emergency						
9.5.1	[4-06]	Emergency	R/W	0: Manual 1: Automatic(normal SH/DHW ON) 2: Auto red SH/DHW ON <b>3: Auto red SH/DHW OFF</b> 4: SH ON/DHW OFF		
9.5.2	[7-06]	HP Forced OFF	R/W	<b>0: Disabled</b> 1: Enabled		
└ Balancing						
9.6.1	[5-02]	Space heating priority	R/W	<b>0: Disabled</b> 1: Enabled		
9.6.2	[5-03]	Priority temperature	R/W	-15~35°C, step: 1°C <b>0°C</b>		
9.6.3	[5-04]	Offset BSH setpoint	R/W	0~20°C, step: 1°C <b>10°C</b>		
9.6.4	[8-02]	Anti-recycle timer	R/W	0~10 hour, step: 0,5 hour <b>3 hour</b>		
9.6.5	[8-00]	Minimum running timer	R/W	0~20 min, step 1 min <b>1 min</b>		
9.6.6	[8-01]	Maximum running timer	R/W	5~95 min, step: 5 min <b>30 min</b>		
9.6.7	[8-04]	Additional timer	R/W	0~95 min, step: 5 min <b>95 min</b>		
Installer settings						
9.7	[4-04]	Water pipe freeze prevention		0: Intermittent (not to be used) <b>1: Continuous</b> 2: Off		
└ Benefit kWh power supply						
9.8.2	[D-00]	Allow heater	R/W	<b>0: None</b> 1: BSH only 2: BUH only 3: All heaters		
9.8.3	[D-05]	Allow pump	R/W	0: Forced off <b>1: As normal</b>		

(\*1) \*V3/W1  
 (\*2) \*3V3/3W1  
 (\*3) EDLA\*  
 (\*4) EBLA\*

(#) Setting is not applicable for this unit.

Field settings table					Installer setting at variance with default value	
Breadcrumb	Field code	Setting name		Range, step Default value	Date	Value
9.8.4	[D-01]	Benefit kWh power supply	R/W	<b>0: No</b> 1: Active open 2: Active closed 3: Smart grid		
9.8.6		Allow electric heaters		<b>0: No</b> <b>1: Yes</b>		
9.8.7		Enable Room buffering		<b>0: No</b> 1: Yes		
9.8.8		Limit setting kW		0~20 kW, step: 0,5 kW <b>20 kW</b>		
└ Power consumption control						
9.9.1	[4-08]	Power consumption control	R/W	<b>0: No limitation</b> 1: Continuous 2: Digital inputs		
9.9.2	[4-09]	Type	R/W	<b>0: Current</b> <b>1: Power</b>		
9.9.3	[5-05]	Limit	R/W	0~50 A, step: 1 A <b>50 A</b>		
9.9.4	[5-05]	Limit 1	R/W	0~50 A, step: 1 A <b>50 A</b>		
9.9.5	[5-06]	Limit 2	R/W	0~50 A, step: 1 A <b>50 A</b>		
9.9.6	[5-07]	Limit 3	R/W	0~50 A, step: 1 A <b>50 A</b>		
9.9.7	[5-08]	Limit 4	R/W	0~50 A, step: 1 A <b>50 A</b>		
9.9.8	[5-09]	Limit	R/W	0~20 kW, step: 0,5 kW <b>20 kW</b>		
9.9.9	[5-09]	Limit 1	R/W	0~20 kW, step: 0,5 kW <b>20 kW</b>		
9.9.A	[5-0A]	Limit 2	R/W	0~20 kW, step: 0,5 kW <b>20 kW</b>		
9.9.B	[5-0B]	Limit 3	R/W	0~20 kW, step: 0,5 kW <b>20 kW</b>		
9.9.C	[5-0C]	Limit 4	R/W	0~20 kW, step: 0,5 kW <b>20 kW</b>		
9.9.D	[4-01]	Priority heater		<b>0: None</b> 1: BSH 2: BUH		
└ Energy metering						
9.A.1	[D-08]	Electricity meter 1	R/W	<b>0: No</b> 1: 0,1 pulse/kWh 2: 1 pulse/kWh 3: 10 pulse/kWh 4: 100 pulse/kWh 5: 1000 pulse/kWh		
9.A.2	[D-09]	Electricity meter 2 / PV meter	R/W	<b>0: No</b> 1: 0,1 pulse/kWh 2: 1 pulse/kWh 3: 10 pulse/kWh 4: 100 pulse/kWh 5: 1000 pulse/kWh 6: 100 pulse/kWh (PV meter) 7: 1000 pulse/kWh (PV meter)		
└ Sensors						
9.B.1	[C-08]	External sensor	R/W	<b>0: No</b> 1: Outdoor sensor 2: Room sensor		
9.B.2	[2-0B]	Ext. amb. sensor offset	R/W	-5~5°C, step: 0,5°C <b>0°C</b>		
9.B.3	[1-0A]	Averaging time	R/W	<b>0: No averaging</b> 1: 12 hours 2: 24 hours 3: 48 hours 4: 72 hours		
└ Bivalent						
9.C.1	[C-02]	Bivalent	R/W	<b>0: No</b> 1: Bivalent		
9.C.2	[7-05]	Boiler efficiency	R/W	<b>0: Very high</b> 1: High 2: Medium 3: Low 4: Very low		
9.C.3	[C-03]	Temperature	R/W	-25~25°C, step: 1°C <b>0°C</b>		
9.C.4	[C-04]	Hysteresis	R/W	2~10°C, step 1°C <b>3°C</b>		
Installer settings						
9.D	[C-09]	Alarm output	R/W	<b>0: Normally open</b> 1: Normally closed		
9.E	[3-00]	Auto restart	R/W	<b>0: No</b> <b>1: Yes</b>		
9.F	[E-08]	Power saving function	R/W	<b>0: Disabled</b> <b>1: Enabled</b>		
9.G		Disable protections	R/W	<b>0: No</b> <b>1: Yes</b>		
└ Overview field settings						
9.I	[0-00]	Leaving water value for high ambient temp. for LWT add zone heating WD curve.	R/W	[9-05]~min(45,[9-06])°C, step: 1°C <b>25°C</b>		
9.I	[0-01]	Leaving water value for low ambient temp. for LWT add zone heating WD curve.	R/W	[9-05]~[9-06]°C, step: 1°C <b>35°C</b>		
9.I	[0-02]	High ambient temp. for LWT add zone heating WD curve.	R/W	10~25°C, step: 1°C <b>15°C</b>		
9.I	[0-03]	Low ambient temp. for LWT add zone heating WD curve.	R/W	-40~5°C, step: 1°C <b>-10°C</b>		
9.I	[0-04]	Leaving water value for high ambient temp. for LWT add zone cooling WD curve.	R/W	[9-07]~[9-08]°C, step: 1°C <b>18°C</b>		
9.I	[0-05]	Leaving water value for low ambient temp. for LWT add zone cooling WD curve.	R/W	[9-07]~[9-08]°C, step: 1°C <b>22°C</b>		
9.I	[0-06]	High ambient temp. for LWT add zone cooling WD curve.	R/W	25~43°C, step: 1°C <b>35°C</b>		
9.I	[0-07]	Low ambient temp. for LWT add zone cooling WD curve.	R/W	10~25°C, step: 1°C <b>20°C</b>		

(\*) \*V3/W1  
 (\*) \*3V3/3W1  
 (\*) EDLA\*  
 (\*) EBLA\*

Field settings table					Installer setting at variance with default value	
Breadcrumb	Field code	Setting name		Range, step Default value	Date	Value
9.I	[0-0B]	Leaving water value for high ambient temp. for DHW WD curve.	R/W	35-[6-0E]°C, step: 1°C <b>55°C</b>		
9.I	[0-0C]	Leaving water value for low ambient temp. for DHW WD curve.	R/W	45-[6-0E]°C, step: 1°C <b>55°C</b>		
9.I	[0-0D]	High ambient temp. for DHW WD curve.	R/W	10-25°C, step: 1°C <b>15°C</b>		
9.I	[0-0E]	Low ambient temp. for DHW WD curve.	R/W	-40-5°C, step: 1°C <b>-10°C</b>		
9.I	[1-00]	Low ambient temp. for LWT main zone heating WD curve.	R/W	-40-5°C, step: 1°C <b>-10°C</b>		
9.I	[1-01]	High ambient temp. for LWT main zone heating WD curve.	R/W	10-25°C, step: 1°C <b>15°C</b>		
9.I	[1-02]	Leaving water value for low ambient temp. for LWT main zone heating WD curve.	R/W	[9-01]-[9-00], step: 1°C <b>35°C</b>		
9.I	[1-03]	Leaving water value for high ambient temp. for LWT main zone heating WD curve.	R/W	[9-01]-min(45, [9-00])°C, step: 1°C <b>25°C</b>		
9.I	[1-04]	Weather dependent cooling of the main leaving water temperature zone.	R/W	0: Disabled <b>1: Enabled</b>		
9.I	[1-05]	Weather dependent cooling of the additional leaving water temperature zone	R/W	0: Disabled <b>1: Enabled</b>		
9.I	[1-06]	Low ambient temp. for LWT main zone cooling WD curve.	R/W	10-25°C, step: 1°C <b>20°C</b>		
9.I	[1-07]	High ambient temp. for LWT main zone cooling WD curve.	R/W	25-43°C, step: 1°C <b>35°C</b>		
9.I	[1-08]	Leaving water value for low ambient temp. for LWT main zone cooling WD curve.	R/W	[9-03]-[9-02]°C, step: 1°C <b>22°C</b>		
9.I	[1-09]	Leaving water value for high ambient temp. for LWT main zone cooling WD curve.	R/W	[9-03]-[9-02]°C, step: 1°C <b>18°C</b>		
9.I	[1-0A]	What is the averaging time for the outdoor temp?	R/W	<b>0: No averaging</b> 1: 12 hours 2: 24 hours 3: 48 hours 4: 72 hours		
9.I	[1-0B]	What is the desired delta T in heating for the main zone?	R/W	[2-0C] ≠ 2 (Radiator) 3-10°C, step: 1°C <b>5°C</b> [2-0C] = 2 (Radiator) 8°C		
9.I	[1-0C]	What is the desired delta T in heating for the additional zone?	R/W	[2-0D] ≠ 2 (Radiator) 3-10°C, step: 1°C <b>5°C</b> [2-0D] = 2 (Radiator) 8°C		
9.I	[1-0D]	What is the desired delta T in cooling for the main zone?	R/W	3-10°C, step: 1°C <b>5°C</b>		
9.I	[1-0E]	What is the desired delta T in cooling for the additional zone?	R/W	3-10°C, step: 1°C <b>5°C</b>		
9.I	[2-00]	When should the disinfection function be executed?	R/W	0: Each day 1: Monday 2: Tuesday 3: Wednesday 4: Thursday <b>5: Friday</b> 6: Saturday 7: Sunday		
9.I	[2-01]	Should the disinfection function be executed?	R/W	<b>0: No</b> 1: Yes		
9.I	[2-02]	When should the disinfection function start?	R/W	0-23 hour, step: 1 hour <b>1</b>		
9.I	[2-03]	What is the disinfection target temperature?	R/W	55-75°C, step: 5°C <b>70°C</b>		
9.I	[2-04]	How long must the tank temperature be maintained?	R/W	5-60 min, step: 5 min <b>10 min</b>		
9.I	[2-05]	Room antifrost temperature	R/W	4-16°C, step: 1°C <b>8°C</b>		
9.I	[2-06]	Room frost protection	R/W	0: Disabled <b>1: Enabled</b>		
9.I	[2-09]	Adjust the offset on the measured room temperature	R/W	-5-5°C, step: 0,5°C <b>0°C</b>		
9.I	[2-0A]	Adjust the offset on the measured room temperature	R/W	-5-5°C, step: 0,5°C <b>0°C</b>		
9.I	[2-0B]	What is the required offset on the measured outdoor temp.?	R/W	-5-5°C, step: 0,5°C <b>0°C</b>		
9.I	[2-0C]	What emitter type is connected to the main LWT zone?	R/W	<b>0: Underfloor heating</b> 1: Fancoil unit 2: Radiator		
9.I	[2-0D]	What emitter type is connected to the additional LWT zone?	R/W	<b>0: Underfloor heating</b> 1: Fancoil unit 2: Radiator		
9.I	[2-0E]	What is the maximum allowed current over the heatpump ?	R/W	20-50 A, step: 1 A <b>50 A</b>		
9.I	[3-00]	Is auto restart of the unit allowed?	R/W	0: No <b>1: Yes</b>		
9.I	[3-01]	--		<b>0</b>		
9.I	[3-02]	--		<b>1</b>		
9.I	[3-03]	--		<b>4</b>		
9.I	[3-04]	--		<b>2</b>		
9.I	[3-05]	--		<b>1</b>		
9.I	[3-06]	What is the maximum desired room temperature in heating?	R/W	18-30°C, step: 1°C <b>30°C</b>		
9.I	[3-07]	What is the minimum desired room temperature in heating?	R/W	12-18°C, step: 1°C <b>12°C</b>		
9.I	[3-08]	What is the maximum desired room temperature in cooling?	R/W	25-35°C, step: 1°C <b>35°C</b>		
9.I	[3-09]	What is the minimum desired room temperature in cooling?	R/W	15-25°C, step: 1°C <b>15°C</b>		
9.I	[4-00]	What is the BUH operation mode?	R/W	0: Disabled <b>1: Enabled</b> 2: Only DHW		
9.I	[4-01]	Which electric heater has priority?	R/W	<b>0: None</b> 1: BSH 2: BUH		

(\*1) \*V3/W1  
 (\*2) \*3V3/3W1  
 (\*3) EDLA\*  
 (\*4) EBLA\*

(#) Setting is not applicable for this unit.

4P627273-1 - 2020.09

Field settings table					Installer setting at variance with default value	
Breadcrumb	Field code	Setting name		Range, step Default value	Date	Value
9.I	[4-02]	Below which outdoor temperature is heating allowed?	R/W	14~35°C, step: 1°C with BUH: <b>35°C</b> without BUH: <b>25°C</b>		
9.I	[4-03]	Operation permission of the booster heater.	R/W	0: Restricted 1: Allowed 2: Overlap <b>3: Compressor off</b> 4: Legionella only		
9.I	[4-04]	Water pipe freeze prevention		0: Intermittent (not to be used) <b>1: Continuous</b> 2: Off		
9.I	[4-05]	--		<b>0</b>		
9.I	[4-06]	Emergency	R/W	0: Manual 1: Automatic(normal SH/DHW ON) 2: Auto red SH/DHW ON <b>3: Auto red SH/DHW OFF</b> 4: SH ON/DHW OFF		
9.I	[4-07]	--		<b>6</b>		
9.I	[4-08]	Which power limitation mode is required on the system?	R/W	<b>0: No limitation</b> 1: Continuous 2: Digital inputs		
9.I	[4-09]	Which power limitation type is required?	R/W	0: Current <b>1: Power</b>		
9.I	[4-0A]	Backup heater configuration	R/W	<b>0: 1</b> 1: 1/1+2 2: 1/2 3: 1/2 + 1/1+2 in emergency		
9.I	[4-0B]	Automatic cooling/heating changeover hysteresis.	R/W	1~10°C, step: 0.5°C <b>1°C</b>		
9.I	[4-0D]	Automatic cooling/heating changeover offset.	R/W	1~10°C, step: 0.5°C <b>3°C</b>		
9.I	[4-0E]	--		<b>6</b>		
9.I	[5-00]	Is backup heater operation allowed above equilibrium temperature during space heating operation?	R/W	0: Allowed <b>1: Not allowed</b>		
9.I	[5-01]	What is the equilibrium temperature for the building?	R/W	-15~35°C, step: 1°C <b>0°C</b>		
9.I	[5-02]	Space heating priority.	R/W	<b>0: Disabled</b> 1: Enabled		
9.I	[5-03]	Space heating priority temperature.	R/W	-15~35°C, step: 1°C <b>0°C</b>		
9.I	[5-04]	Set point correction for domestic hot water temperature.	R/W	0~20°C, step: 1°C <b>10°C</b>		
9.I	[5-05]	What is the requested limit for DI1?	R/W	0~50 A, step: 1 A <b>50 A</b>		
9.I	[5-06]	What is the requested limit for DI2?	R/W	0~50 A, step: 1 A <b>50 A</b>		
9.I	[5-07]	What is the requested limit for DI3?	R/W	0~50 A, step: 1 A <b>50 A</b>		
9.I	[5-08]	What is the requested limit for DI4?	R/W	0~50 A, step: 1 A <b>50 A</b>		
9.I	[5-09]	What is the requested limit for DI1?	R/W	0~20 kW, step: 0.5 kW <b>20 kW</b>		
9.I	[5-0A]	What is the requested limit for DI2?	R/W	0~20 kW, step: 0.5 kW <b>20 kW</b>		
9.I	[5-0B]	What is the requested limit for DI3?	R/W	0~20 kW, step: 0.5 kW <b>20 kW</b>		
9.I	[5-0C]	What is the requested limit for DI4?	R/W	0~20 kW, step: 0.5 kW <b>20 kW</b>		
9.I	[5-0D]	Backup heater voltage	R/W (*1) R/O (*2)	<b>0: 230V, 1~</b> 1: 230V, 3~ 2: 400V, 3~		
9.I	[5-0E]	--		<b>1</b>		
9.I	[6-00]	The temperature difference determining the heat pump ON temperature.	R/W	2~40°C, step: 1°C <b>27°C</b>		
9.I	[6-01]	The temperature difference determining the heat pump OFF temperature.	R/W	0~10°C, step: 1°C <b>2°C</b>		
9.I	[6-02]	What is the capacity of the booster heater?	R/W	0~10kW, step: 0.2kW <b>3kW</b>		
9.I	[6-03]	What is the capacity of the backup heater step 1?	R/W	0~10kW, step: 0.2kW <b>0kW (*1)</b> <b>3kW (*2)</b>		
9.I	[6-04]	What is the capacity of the backup heater step 2?	R/O (*2) R/W (*1)	0~10kW, step: 0.2kW <b>0kW</b>		
9.I	[6-05]	--		<b>0</b>		
9.I	[6-06]	--		<b>0</b>		
9.I	[6-07]	What is the capacity of the bottom plate heater?	R/W	0~200W, step: 10W <b>0W</b>		
9.I	[6-08]	What is the hysteresis to be used in reheat mode?	R/W	2~20°C, step: 1°C <b>10°C</b>		
9.I	[6-09]	--		<b>0</b>		
9.I	[6-0A]	What is the desired comfort storage temperature?	R/W	30~[6-0E]°C, step: 1°C <b>50°C</b>		
9.I	[6-0B]	What is the desired eco storage temperature?	R/W	30~min(50, [6-0E])°C, step: 1°C <b>45°C</b>		
9.I	[6-0C]	What is the desired reheat temperature?	R/W	30~min(50, [6-0E])°C, step: 1°C <b>45°C</b>		
9.I	[6-0D]	What is the desired DHW production type?	R/W	0: Reheat only <b>1: Reheat + sched.</b> 2: Scheduled only		
9.I	[6-0E]	What is the maximum DHW temperature setpoint?	R/W	40~75°C, step: 1°C <b>60°C [E-07]=0</b> 40~80°C, step: 1°C <b>60°C [E-07]=5</b>		
9.I	[7-00]	Domestic hot water booster heater overshoot temperature.	R/W	0~4°C, step: 1°C <b>0°C</b>		
9.I	[7-01]	Domestic hot water booster heater hysteresis.	R/W	2~40°C, step: 1°C <b>2°C</b>		
9.I	[7-02]	How many leaving water temperature zones are there?	R/W	<b>0: 1 LWT zone</b> 1: 2 LWT zones		
9.I	[7-03]	--		<b>2.5</b>		
9.I	[7-04]	--		<b>0</b>		

(\*1) \*V3/W1  
 (\*2) \*3V3/3W1  
 (\*3) EDLA\*  
 (\*4) EBLA\*

Field settings table					Installer setting at variance with default value	
Breadcrumb	Field code	Setting name		Range, step Default value	Date	Value
9.I	[7-05]	Boiler efficiency	R/W	<b>0: Very high</b> 1: High 2: Medium 3: Low 4: Very low		
9.I	[7-06]	HP Forced OFF	R/W	<b>0: Disabled</b> 1: Enabled		
9.I	[7-07]	BBR16 activation	R/W	<b>0: Disabled</b> 1: Enabled		
9.I	[8-00]	Minimum running time for domestic hot water operation.	R/O	0-20 min, step 1 min <b>1 min</b>		
9.I	[8-01]	Maximum running time for domestic hot water operation.	R/W	5-95 min, step: 5 min <b>30 min</b>		
9.I	[8-02]	Anti-recycling time.	R/W	0-10 hour, step: 0,5 hour <b>3 hour</b>		
9.I	[8-03]	Booster heater delay timer.	R/W	20-95 min, step: 5 min <b>50 min</b>		
9.I	[8-04]	Additional running time for the maximum running time.	R/W	0-95 min, step: 5 min <b>95 min</b>		
9.I	[8-05]	Allow modulation of the LWT to control the room temp?	R/W	<b>0: No</b> 1: Yes		
9.I	[8-06]	Leaving water temperature maximum modulation.	R/W	0-10°C, step: 1°C <b>5°C</b>		
9.I	[8-07]	What is the desired comfort main LWT in cooling?	R/W	[9-03]~[9-02], step: 1°C <b>18°C</b>		
9.I	[8-08]	What is the desired eco main LWT in cooling?	R/W	[9-03]~[9-02], step: 1°C <b>20°C</b>		
9.I	[8-09]	What is the desired comfort main LWT in heating?	R/W	[9-01]~[9-00], step: 1°C <b>35°C</b>		
9.I	[8-0A]	What is the desired eco main LWT in heating?	R/W	[9-01]~[9-00], step: 1°C <b>33°C</b>		
9.I	[8-0B]	--		<b>13</b>		
9.I	[8-0C]	--		<b>10</b>		
9.I	[8-0D]	--		<b>16</b>		
9.I	[9-00]	What is the maximum desired LWT for main zone in heating?	R/W	[2-0C]#2: 37-60, step: 1°C <b>60°C</b> [2-0C]#2: 37-55, step: 1°C <b>55°C</b>		
9.I	[9-01]	What is the minimum desired LWT for main zone in heating?	R/W	15-37°C, step: 1°C <b>25°C</b>		
9.I	[9-02]	What is the maximum desired LWT for main zone in cooling?	R/W	18-22°C, step: 1°C <b>22°C</b>		
9.I	[9-03]	What is the minimum desired LWT for main zone in cooling?	R/W	5-18°C, step: 1°C <b>7°C</b>		
9.I	[9-04]	Leaving water temperature overshoot temperature.	R/W	1-4°C, step: 1°C <b>4°C</b>		
9.I	[9-05]	What is the minimum desired LWT for add. zone in heating?	R/W	15-37°C, step: 1°C <b>25°C</b>		
9.I	[9-06]	What is the maximum desired LWT for add. zone in heating?	R/W	[2-0D]#2: 37-60, step: 1°C <b>60°C</b> [2-0D]#2: 37-55, step: 1°C <b>55°C</b>		
9.I	[9-07]	What is the minimum desired LWT for add. zone in cooling?	R/W	5-18°C, step: 1°C <b>7°C</b>		
9.I	[9-08]	What is the maximum desired LWT for add. zone in cooling?	R/W	18-22°C, step: 1°C <b>22°C</b>		
9.I	[9-09]	What is the allowed undershoot in cooling?	R/W	1-18°C, step: 1°C <b>18°C</b>		
9.I	[9-0A]	What is the room buffering temperature in heating?	R/W	[3-07]~[3-06]°C, step: 0,5°C <b>23°C</b>		
9.I	[9-0B]	What is the room buffering temperature in Cooling?	R/W	[3-09]~[3-08]°C, step: 0,5°C <b>23°C</b>		
9.I	[9-0C]	Room temperature hysteresis.	R/W	1-6°C, step: 0,5°C <b>1 °C</b>		
9.I	[9-0D]	Pump speed limitation	R/W	0-8, step:1 0 : No limitation 1-4 : 80-50% 5-8 : 80-50% during sampling <b>6</b>		
9.I	[9-0E]	--		<b>6</b>		
9.I	[C-00]	Domestic heating water priority.	R/W	0: Solar priority <b>1: Heat pump priority</b>		
9.I	[C-01]	--		<b>0</b>		
9.I	[C-02]	Is an external backup heat source connected?	R/W	<b>0: No</b> 1: Bivalent		
9.I	[C-03]	Bivalent activation temperature.	R/W	-25~-25°C, step: 1°C <b>0°C</b>		
9.I	[C-04]	Bivalent hysteresis temperature.	R/W	2-10°C, step 1°C <b>3°C</b>		
9.I	[C-05]	What is the thermo request contact type for the main zone?	R/W	0: - 1: 1 contact <b>2: 2 contacts</b>		
9.I	[C-06]	What is the thermo request contact type for the add. zone?	R/W	0: - 1: 1 contact <b>2: 2 contacts</b>		
9.I	[C-07]	What is the unit control method in space operation?	R/W	<b>0: LWT control</b> 1: Ext RT control 2: RT control		
9.I	[C-08]	Which type of external sensor is installed?	R/W	<b>0: No</b> 1: Outdoor sensor 2: Room sensor		
9.I	[C-09]	What is the required alarm output contact type?	R/W	<b>0: Normally open</b> 1: Normally closed		
9.I	[C-0A]	--		<b>0</b>		
9.I	[C-0B]	--		<b>0</b>		
9.I	[C-0C]	--		<b>0</b>		
9.I	[C-0D]	--		<b>0</b>		
9.I	[C-0E]	--		<b>0</b>		

(\*1) \*V3/W1

(\*2) \*3V3/3W1

(\*3) EDLA\*

(\*4) EBLA\*



(#) Setting is not applicable for this unit.

4P627273-1 - 2020.09

Field settings table					Installer setting at variance with default value	
Breadcrumb	Field code	Setting name		Range, step Default value	Date	Value
9.I	[D-00]	Which heaters are permitted if prefer. kWh rate PS is cut?	R/W	<b>0: None</b> 1: BSH only 2: BUH only 3: All heaters		
9.I	[D-01]	Contact type of preferential kWh rate PS installation?	R/W	<b>0: No</b> 1: Active open 2: Active closed 3: Smart grid		
9.I	[D-02]	Which type of DHW pump is installed?	R/W	<b>0: No</b> 1: Secondary rtn 2: Disinf. Shunt 3: Circulation Pump 4: Circulation Pump and disinf. Shunt		
9.I	[D-03]	Leaving water temperature compensation around 0°C.	R/W	<b>0: No</b> <b>1: increase 2°C, span 4°C</b> 2: increase 4°C, span 4°C 3: increase 2°C, span 8°C 4: increase 4°C, span 8°C		
9.I	[D-04]	Is a demand PCB connected?	R/W	<b>0: No</b> 1: Pwr consmp ctrl		
9.I	[D-05]	Is the pump allowed to run if prefer. kWh rate PS is cut?	R/W	<b>0: Forced off</b> <b>1: As normal</b>		
9.I	[D-07]	Is a solar kit connected?	R/W	<b>0: No</b> 1: Yes		
9.I	[D-08]	Is an external kWh meter used for power measurement?	R/W	<b>0: No</b> 1: 0,1 pulse/kWh 2: 1 pulse/kWh 3: 10 pulse/kWh 4: 100 pulse/kWh 5: 1000 pulse/kWh		
9.I	[D-09]	Is an external kWh meter used for power measurement, kWh meter used for smart grid or a gas meter for hybrid unit?	R/W	<b>0: No</b> 1: 0,1 pulse/kWh 2: 1 pulse/kWh 3: 10 pulse/kWh 4: 100 pulse/kWh 5: 1000 pulse/kWh 6: 100 pulse/kWh (PV meter) 7: 1000 pulse/kWh (PV meter) 8: 1 pulse/m³ (gas meter) 9: 10 pulses/m³ (gas meter) 10: 100 pulses/m³ (gas meter)		
9.I	[D-0B]	--		<b>2</b>		
9.I	[D-0C]	--		<b>0</b>		
9.I	[D-0D]	--		<b>0</b>		
9.I	[D-0E]	--		<b>0</b>		
9.I	[E-00]	Which type of unit is installed?	R/W (*6) R/O (*7)	<b>0: Reversible (*4)</b> <b>1: Heating only (*3)</b>		
9.I	[E-01]	Which type of compressor is installed?	R/O	<b>1</b>		
9.I	[E-02]	What is the indoor unit software type?	R/W (*4) R/O (*3)	<b>0: Reversible (*4)</b> <b>1: Cooling only (*3)</b>		
9.I	[E-03]	What is the number of backup heater steps?	R/W (*1) R/O (*2)	<b>0: no BUH (*1)</b> 1: External BUH <b>2: 3V (*2)</b>		
9.I	[E-04]	Is the power saving function available on the outdoor unit?	R/O	<b>0: No</b> <b>1: Yes</b>		
9.I	[E-05]	Can the system prepare domestic hot water?	R/W	<b>0: No</b> 1: Yes		
9.I	[E-06]	Is a DHW tank installed in the system?	R/O	<b>0: No</b> <b>1: Yes</b>		
9.I	[E-07]	What kind of DHW tank is installed?	R/W	0-6 <b>0: EKHWP</b> 5: EKHWP		
9.I	[E-08]	Power saving function for outdoor unit.	R/W	<b>0: Disabled</b> <b>1: Enabled</b>		
9.I	[E-09]	--		<b>1</b>		
9.I	[E-0B]	Is a bi-zone kit installed?		<b>0</b>		
9.I	[E-0C]	--		<b>0</b>		
9.I	[E-0D]	Is glycol present in the system?		<b>0: No</b> 1: Yes		
9.I	[E-0E]	--		<b>0</b>		
9.I	[F-00]	Pump operation allowed outside range.	R/W	<b>0: Disabled</b> 1: Enabled		
9.I	[F-01]	Above which outdoor temperature is cooling allowed?	R/W	10~35°C, step: 1°C <b>20°C</b>		
9.I	[F-02]	Bottom plate heater ON temperature.	R/W	3~10°C, step: 1°C <b>3°C</b>		
9.I	[F-03]	Bottom plate heater hysteresis.	R/W	2~5°C, step: 1°C <b>5°C</b>		
9.I	[F-04]	Is a bottom plate heater connected?	R/O	<b>0</b>		
9.I	[F-05]	--		<b>0</b>		
9.I	[F-09]	Pump operation during flow abnormality.	R/W	<b>0: Disabled</b> 1: Enabled		
9.I	[F-0A]	--		<b>0</b>		
9.I	[F-0B]	--		<b>0</b>		
9.I	[F-0C]	--		<b>1</b>		
9.I	[F-0D]	What is the pump operation mode?	R/W	0: Continuous <b>1: Sample</b> 2: Request		

(\*) \*V3/W1  
 (\*) \*3V3/3W1  
 (\*) EDLA\*  
 (\*) EBLA\*



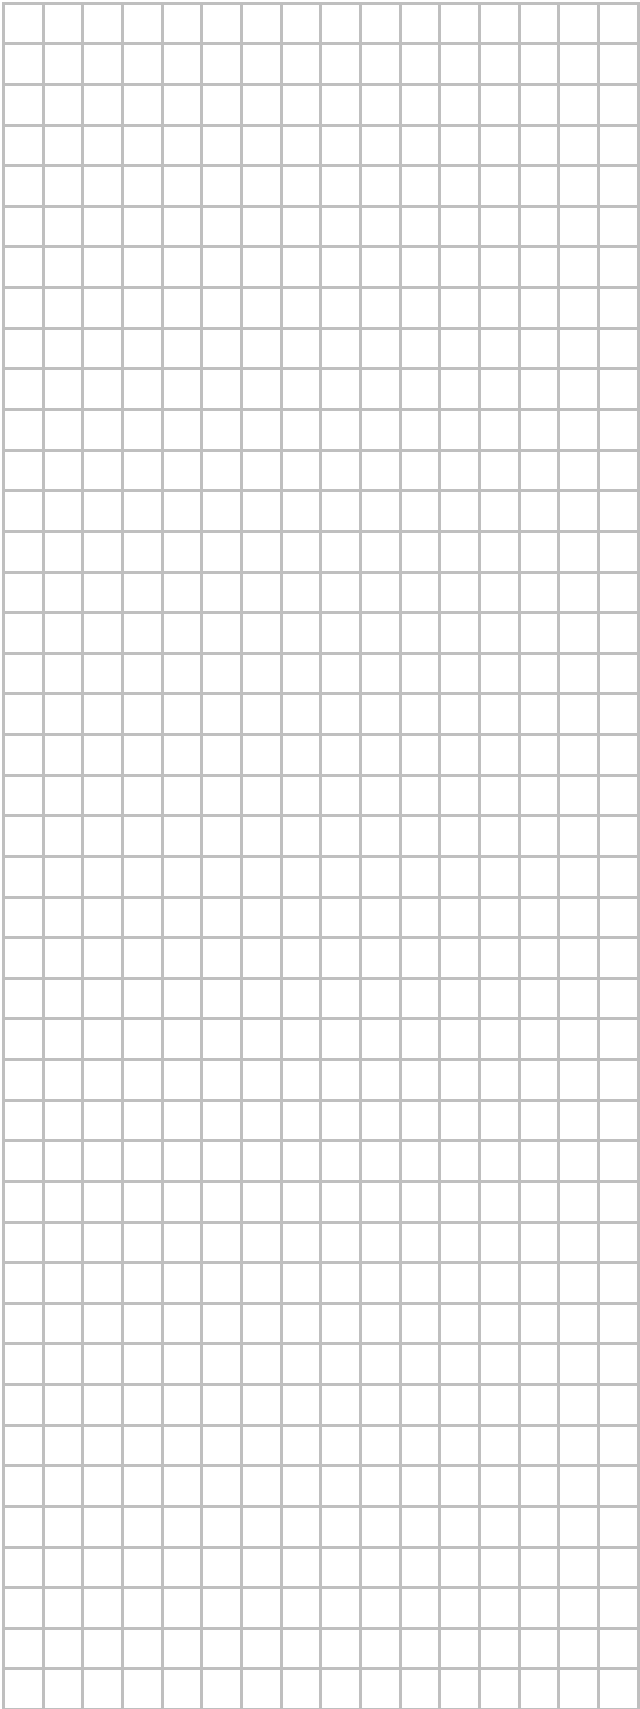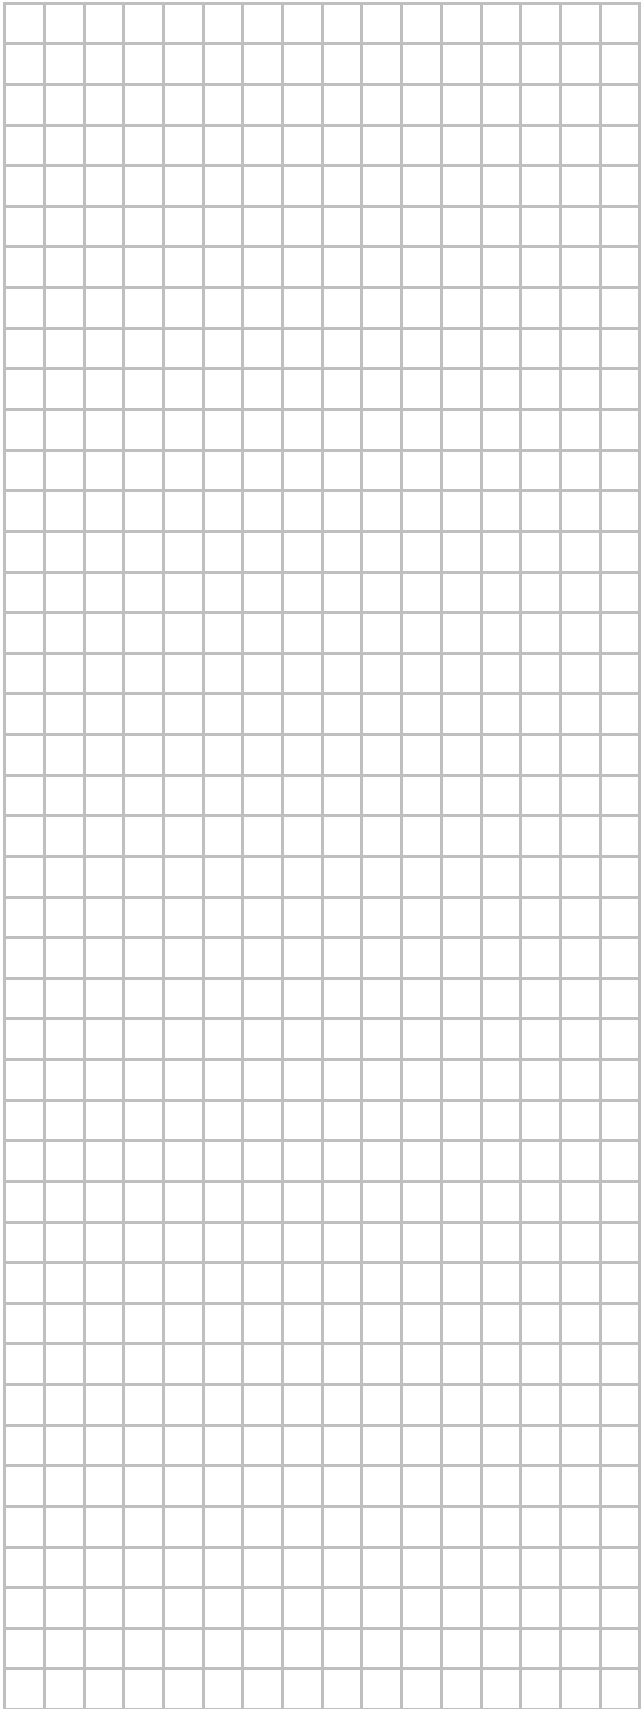





ERC

Copyright 2020 Daikin

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P620241-1 2020.06