




Installation manual

Daikin room air conditioner

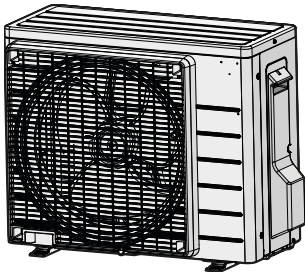

RXF20C5V1B
RXF25C5V1B
RXF35C5V1B
RXF42C5V1B

Installation manual
Daikin room air conditioner

English

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DE-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΠΛΗΡΩΣΤΗ
CE - KONFORMITÄTSSERKLÄRUNG
CE - DECLARATION OF CONFORMITY
CE - DECLARATION OF CONFORMITY
CE - CONFORMITEITSVERKLARING

Daikin Europe N.V.

01 000 declares under its sole responsibility that the air conditioning models to which this declaration relates.
02 000 erklärt auf seine alleinige Verantwortung, dass die Modelle der Klimaanlage für die diese Erklärung bestimmt ist.
03 000 déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration.
04 000 verklaart hierbij te eigen oorspronkelijk verantwoordelijkheid dat de airconditioning units waarna deze verklaring betrekking heeft.
05 000 déclare à titre sa seule responsabilité que les modèles de air conditionné à des quelles hace référence à la déclaration.
06 000 δηλώνω στο δικό μου αποκλειστικό δικαίωμα ευθύτητας ότι τα μοντέλα της κλιματιστικής συσκευής που αναφέρονται στην παρούσα δήλωση.
07 000 объявляю на свое исключительное право ответственности, что модели кондиционеров, к которым относится данная декларация, являются моими.
08 000 declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere.

RXF20C5V1B, ARXF25C5V1B, RXF35C5V1B, ARXF42C5V1B,
ARXF20C5V1B, ARXF25C5V1B, ARXF35C5V1B, ARXF42C5V1B,

01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
02 werden (niet) aanvaard volgens de volgende norm(en) of andere normatieve document(en), op voorwaarde dat deze worden gebruikt overeenkomstig onze instructies:
03 sont conformes à la(s) norme(s) ou autre(s) document(s) normatifs, pour autant qu'ils soient utilisés conformément à nos instructions:
04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativos, siempre que sean utilizados de acuerdo con nuestras instrucciones:
06 sono conformi all(i) seguente(s) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
07 ako súhlasíme s touto (nóvou) normou (i) (s touto skupinou (i) normami), ovšem při použití podle (našich) instrukcí:
08 в соответствии с следующей (следующими) нормой (и) (и группой (и) нормативных документов), при условии их использования согласно нашим инструкциям:

CE - DECLARACIÓN-DE-CONFORMIDAD
CE - DICHIARAZIONE-DE-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΠΛΗΡΩΣΤΗ
CE - KONFORMITÄTSSERKLÄRUNG
CE - DECLARATION OF CONFORMITY
CE - DECLARATION OF CONFORMITY
CE - CONFORMITEITSVERKLARING

CE - ERKLÆRING OM SAMSVAR
CE - ЛАВІТІСЬ ПІДТВЕРДЖЕННЯ
CE - PROHLÁŠENÍ SHODY
CE - DECLARAȚIE DE CONFORMITATE

09 000 заявляет, исключительно под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящая декларация:
10 000 erklærer under enersvar, at klimaanlægsmødelerne, som denne deklaration vedrører:
11 000 deklarerer i egenansvar, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:
12 000 erklærer et pålievend ansvar for at de luftkonditioneringsmodeller som berøres af denne deklaration, indebærer at:
13 000 innotbaa ykstonnan omalla vastuulleen, että tähän ilmastointilaitteiden mallit:
14 000 pronajšie na se poje odgovornosti, że modeły klimatyzacji, o których mowa w tym proklamacji, zawierają:
15 000 ізповілю по своїй виключній відповідальності, що моделі кліматизації, на які в даній заяві відноситься:
16 000 teljes felelősséggel tudatában kijelentem, hogy a klímaberendezések modellek, melyekre a nyilatkozat vonatkozik:

CE - IZJAVA O SKLADNOSTI
CE - VASTANUSKELARATASOON
CE - ДЕКЛАРАЦІЯ-А-С-СОБІТЕСТВИМЕ
CE - DECLARAȚIE DE CONFORMITATE

CE - ATTIKITES-DEKLARACIJA
CE - ATILISTIES-DEKLARACIJA
CE - VYLASENE-ZHODY
CE - UYGUNLUK-BEYANI

17 000 deklarije na vlastita odgovornost, da modele klimatizatorů, kových dočlyží nížejsze deklaraci:
18 000 deklaar op proprie aanspreekbaarheid dat de apparaten die hieronder genoemd worden, worden gebruikt in overeenstemming met de volgende instructies:
19 000 z tego odpowiedzialności, że urządzenia klimatyzacyjne, do których odnosi się niniejsza deklaracja, będą używane zgodnie z poniższymi instrukcjami:
20 000 deklariroja na svojo odgovornost, da modelne klimatisatorji, ki so vključeni v to deklaracijo, morajo biti uporabljeni skladno s spodnjimi navodili:
21 000 versta sousa responsabilité de déclarer que les modèles de climatisation installés, à qui on se réfère dans la présente déclaration, seront utilisés conformément aux instructions qui leur sont fournies:
22 000 являю на свою відповідальність, що моделі кондиціонерів, на які в даній заяві відноситься, будуть використовуватися відповідно до наведених інструкцій:
23 000 являю на свою відповідальність, що моделі кондиціонерів, на які в даній заяві відноситься, будуть використовуватися відповідно до наведених інструкцій:
24 000 являю на свою відповідальність, що моделі кондиціонерів, на які в даній заяві відноситься, будуть використовуватися відповідно до наведених інструкцій:
25 000 являю на свою відповідальність, що моделі кондиціонерів, на які в даній заяві відноситься, будуть використовуватися відповідно до наведених інструкцій:

08 eshte em conformitate cu cel (se) urselele (s) norma (s) (si) urselele (s) document (s) normativ (s), deace ce este sejeim utilizatos de acorcu cu sa nastea instructiuni:
09 corresponds aux suivants standards ou autres documents normatifs, à condition qu'ils soient utilisés conformément à nos instructions:
10 overholder følgende standard(er) eller andre tekniske dokument(er), forudsat at disse anvendes i henhold til vore instruktioner:
11 respektive utövning av ett (överensstämmelse med och följer följande standard(er) eller andra normativa dokument, under förutsättning att användning sker i överensstämmelse med våra instruktioner:
12 respektive dīstvi er i överensstemmelse med følgende standard(er) eller andre normative dokument(er), under forudsætning at (at disse bruges i henhold til vore instruktioner):
13 vastavai seavaaen standardiden ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen että niitä käytetään ohjeemme mukaisesti:
14 za předpokladu, že jsou využity v souladu s našimi pokyny, odpovídají následujícím normám nebo normativním dokumentům:
15 u skladu sa slededom standardom (i) a li drugim normativnim dokumentom (i) na, uz uvjet da se oni koriste u skladu s našim uputama:

Low Voltage 2014/35/EU
Electromagnetic Compatibility 2014/30/EU
Machinery 2006/42/EC

01 Note* as set out in <A> and judged positively by
02 Hinweis* wie in <A> ausgeführt und von positiv beurteilt.
03 Remark* tel que défini dans <A> et évalué positivement par
04 Bemerk* zoals vermeld in <A> en positief beoordeeld door
05 Note* como se establece en <A> y es valorado positivamente por
06 Note* delnato nel <A> e guizado positivamente da
07 Znakujon* unuq adogijto on <A> xprkto bndv mto odijono m <A> e com o parecer positivo de de acordo com o Certificado <C>
08 Note* zoals vermeld in <A> en positief beoordeeld door
09 Примечание* по утверждению <A> и положительному мнению относительно Сертификата <C>
10 Bemerk* como se establece en <A> y es valorado positivamente por de acuerdo con el Certificado <C>

19 do upostavljanu dobici:
20 nastaviti rješavati:
21 ostanak rješavati na:
22 nastaviti rješavati na:
23 nastaviti rješavati na:
24 nastaviti rješavati na:
25 nastaviti rješavati na:
26 nastaviti rješavati na:
27 nastaviti rješavati na:
28 nastaviti rješavati na:

01 Directives as amended
02 Direktiven, med senere ændringer
03 Direktiven, med frelagna ändringar
04 Richtlinien, teils que modifiées
05 Richtlinien, teils geändert
06 Richtlinien, teils geändert
07 Richtlinien, teils geändert
08 Richtlinien, teils geändert
09 Richtlinien, teils geändert

21 Znakujon* karto e ispravno e <A> i ispravno potvrdjeno ot
22 Paraba* karto e ispravno e <A> i ispravno potvrdjeno ot
23 Paraba* karto e ispravno e <A> i ispravno potvrdjeno ot
24 Paraba* karto e ispravno e <A> i ispravno potvrdjeno ot
25 Paraba* karto e ispravno e <A> i ispravno potvrdjeno ot

01** Daikin Europe N.V. is authorised to compile the Technical Construction File.
02** Daikin Europe N.V. hat die Berechtigung die Technische Konstruktionssakte zusammenzustellen.
03** Daikin Europe N.V. est autorisée à compiler le Dossier de Construction Technique.
04** Daikin Europe N.V. is bevoegd om het Technisch Constructiedossier samen te stellen.
05** Daikin Europe N.V. est autorizada a compilar el Archivo de Construcción Técnica.
06** Daikin Europe N.V. è autorizzata a redigere il File Tecnico di Costruzione.

07** H Daikin Europe N.V. evoa spondonijon va ovovotij Ton Teyvno ofkolo konoceusij.
08** H Daikin Europe N.V. esta autorizada a compilar a documentação técnica de fabrico.
09** Kompanija Daikin Europe N.V. imovovovoeva ostanak komentir tehničkih dokumenata.
10** Daikin Europe N.V. is bevoegd om het Technisch Constructiedossier samen te stellen.
11** Daikin Europe N.V. est autorizada a compilar el Archivo de Construcción Técnica.
12** Daikin Europe N.V. ha lilesele il a kompilare den Tehnische constructiedossier.

13** Daikin Europe N.V. on valituud lastamaan Teknisen asiakirjan.
14** Společnost Daikin Europe N.V. má oprávnění ke kompilaci souboru technické konstrukce.
15** Daikin Europe N.V. je ověřen za zpracovatele a redaktora technické konstrukce.
16** A Daikin Europe N.V. jogosult a műszaki konstrukciós dokumentáció összeállítására.
17** Daikin Europe N.V. me upowaznienie do zbierania i opracowywania dokumentacji konstrukcyjnej.
18** Daikin Europe N.V. este autorizată să compileze Dosarul tehnic de construcție.

19** Daikin Europe N.V. je pooblaščen za sestavo datoteke s tehnično mapo.
20** Daikin Europe N.V. on voluttu kustanna tehnilis dokumentaalsoon.
21** Daikin Europe N.V. e oopkappana ja osastari Anra sa tehnikoos konstruujne.
22** Daikin Europe N.V. yea gilaia sudaryi shi tehnikoos konstruujne faila.
23** Daikin Europe N.V. ir autorizats sastādīt tehnikoos konstruujne failu.
24** Spoločnosť Daikin Europe N.V. je oprávnená vytvoriť súhrnnú technickú konštrukciu.
25** Daikin Europe N.V. Teknik Yapı Dosyasını derlemeye yetkilidir.

DAIKIN



Hiroimitsu Iwasaki

Director

Ostend, 4th of November 2020

3P516375-16N

Table of contents

1	About the documentation	3
1.1	About this document.....	3
2	Specific installer safety instructions	3
3	About the box	5
3.1	Outdoor unit.....	5
3.1.1	To unpack the outdoor unit	5
3.1.2	To remove the accessories from the outdoor unit.....	5
4	Unit installation	6
4.1	Preparing the installation site	6
4.1.1	Installation site requirements of the outdoor unit	6
4.1.2	Additional installation site requirements of the outdoor unit in cold climates	6
4.2	Mounting the outdoor unit.....	6
4.2.1	To provide the installation structure	6
4.2.2	To install the outdoor unit.....	7
4.2.3	To provide drainage	7
4.2.4	To prevent the outdoor unit from falling over	7
5	Piping installation	7
5.1	Preparing refrigerant piping	7
5.1.1	Refrigerant piping requirements.....	7
5.1.2	Refrigerant piping length and height difference	7
5.1.3	Refrigerant piping insulation	7
5.2	Connecting the refrigerant piping	8
5.2.1	About connecting the refrigerant piping	8
5.2.2	Precautions when connecting the refrigerant piping	8
5.2.3	To connect the refrigerant piping to the outdoor unit	8
5.3	Checking the refrigerant piping	8
5.3.1	To check for leaks.....	8
5.3.2	To perform vacuum drying	8
6	Charging refrigerant	9
6.1	About charging refrigerant.....	9
6.2	About the refrigerant.....	9
6.3	To determine the additional refrigerant amount	9
6.4	To determine the complete recharge amount	9
6.5	To charge additional refrigerant	10
6.6	To fix the fluorinated greenhouse gases label.....	10
7	Electrical installation	10
7.1	Specifications of standard wiring components	10
7.2	To connect the electrical wiring to the outdoor unit	10
8	Finishing the outdoor unit installation	11
8.1	To finish the outdoor unit installation.....	11
8.2	To close the outdoor unit.....	11
9	Commissioning	11
9.1	Checklist before commissioning	11
9.2	Checklist during commissioning	11
9.3	To perform a test run	11
9.4	Starting up the outdoor unit	12
10	Troubleshooting	12
10.1	Fault diagnosis using LED on outdoor unit PCB	12
11	Disposal	12
12	Technical data	13
12.1	Wiring diagram	13
12.1.1	Unified wiring diagram legend.....	13
12.2	Piping diagram	15
12.2.1	Piping diagram: Outdoor unit	15

1 About the documentation

1.1 About this document



INFORMATION

Make sure that the user has the printed documentation and ask him/her to keep it for future reference.

Target audience

Authorised installers



WARNING

Make sure installation, servicing, maintenance, repair and applied materials follow the instructions from Daikin and, in addition, comply with applicable legislation and are performed by qualified persons only. In Europe and areas where IEC standards apply, EN/IEC 60335-2-40 is the applicable standard.



INFORMATION

This document only describes installation instructions specific to the outdoor unit. For installation of the indoor unit (mounting the indoor unit, connecting the refrigerant piping to the indoor unit, connecting the electrical wiring to the indoor unit ...), see the installation manual of the indoor unit.

Documentation set

This document is part of a documentation set. The complete set consists of:

• General safety precautions:

- Safety instructions that you **MUST** read before installing
- Format: Paper (in the box of the outdoor unit)

• Outdoor unit installation manual:

- Installation instructions
- Format: Paper (in the box of the outdoor unit)

• Installer reference guide:

- Preparation of the installation, reference data,...
- Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.

Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

2 Specific installer safety instructions

Always observe the following safety instructions and regulations.

Unit installation (see "**4 Unit installation**" [▶ 6])



WARNING

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.

2 Specific installer safety instructions

Installation site (see "[4.1 Preparing the installation site](#)" ▶ 6))



CAUTION

- Check if the installation location can support the unit's weight. Poor installation is hazardous. It can also cause vibrations or unusual operating noise.
- Provide sufficient service space.
- Do NOT install the unit so that it is in contact with a ceiling or a wall, as this may cause vibrations.



WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).

Connecting the refrigerant piping (see "[5.2 Connecting the refrigerant piping](#)" ▶ 8))



CAUTION

- No brazing or welding on site for units with R32 refrigerant charge during shipment.
- During installation of the refrigeration system, joining of parts with at least one part charged shall be performed taking into account the following requirements: inside occupied spaces non permanent joints are not allowed for R32 refrigerant except for site made joints directly connecting the indoor unit to piping. Site made joints directly connecting piping to indoor units shall be of non permanent type.



CAUTION

- Use the flare nut fixed to the unit.
- To prevent gas leakage, apply refrigeration oil only to the inside of the flare. Use refrigeration oil for R32.
- Do NOT reuse joints.



CAUTION

- Do NOT use mineral oil on flared part.
- Do NOT reuse piping from previous installations.
- NEVER install a drier to this R32 unit to guarantee its lifetime. The drying material may dissolve and damage the system.



WARNING

Connect the refrigerant piping securely before running the compressor. If the refrigerant piping is NOT connected and the stop valve is open when the compressor is run, air will be sucked in. This will cause abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.



CAUTION

- Incomplete flaring may cause refrigerant gas leakage.
- Do NOT re-use flares. Use new flares to prevent refrigerant gas leakage.
- Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.



CAUTION

Do NOT open the valves before flaring is complete. This would cause refrigerant gas leakage.



DANGER: RISK OF EXPLOSION

Do NOT start the unit if it is vacuumed.

Charging refrigerant (see "[6 Charging refrigerant](#)" ▶ 9))



WARNING

The refrigerant inside the unit is mildly flammable, but normally does NOT leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.

Turn off any combustible heating devices, ventilate the room, and contact the dealer where you purchased the unit.

Do NOT use the unit until a service person confirms that the part from which the refrigerant leaked has been repaired.



WARNING

- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.



CAUTION

To avoid compressor breakdown, do NOT charge more than the specified amount of refrigerant.



WARNING

NEVER directly touch any accidental leaking refrigerant. This could result in severe wounds caused by frostbite.

Electrical installation (see "[7 Electrical installation](#)" ▶ 10))



WARNING

Appliance shall be installed in accordance with national wiring regulations.



WARNING

- All wiring MUST be performed by an authorised electrician and MUST comply with the applicable legislation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction MUST comply with the applicable legislation.



WARNING

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shock.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do NOT come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do NOT use taped wires, stranded conductor wires, extension cords, or connections from a star system. They can cause overheating, electrical shock or fire.
- Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.

**WARNING**

ALWAYS use multicore cable for power supply cables.

**WARNING**

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provide full disconnection under overvoltage category III.

**WARNING**

If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**WARNING**

Do **NOT** connect the power supply to the indoor unit. This could result in electrical shock or fire.

**WARNING**

- Do **NOT** use locally purchased electrical parts inside the product.
- Do **NOT** branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.

**WARNING**

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.

**DANGER: RISK OF ELECTROCUTION**

All electrical parts (including thermistors) are powered by the power supply. Do not touch them with bare hands.

**DANGER: RISK OF ELECTROCUTION**

Disconnect the power supply for more than 10 minutes, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage **MUST** be less than 50 V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.

Finishing indoor unit installation (see **"8 Finishing the outdoor unit installation"** [p 11])

**DANGER: RISK OF ELECTROCUTION**

- Make sure that the system is earthed properly.
- Turn off the power supply before servicing.
- Install the switch box cover before turning on the power supply.

Commissioning (see **"9 Commissioning"** [p 11])

**DANGER: RISK OF ELECTROCUTION****DANGER: RISK OF BURNING/SCALDING****CAUTION**

Do **NOT** perform the test operation while working on the indoor units.

When performing the test operation, **NOT** only the outdoor unit, but the connected indoor unit will operate as well. Working on an indoor unit while performing a test operation is dangerous.



**CAUTION**

Do **NOT** insert fingers, rods or other objects into the air inlet or outlet. Do **NOT** remove the fan guard. When the fan is rotating at high speed, it will cause injury.

3 About the box

3.1 Outdoor unit


3.1.1 To unpack the outdoor unit

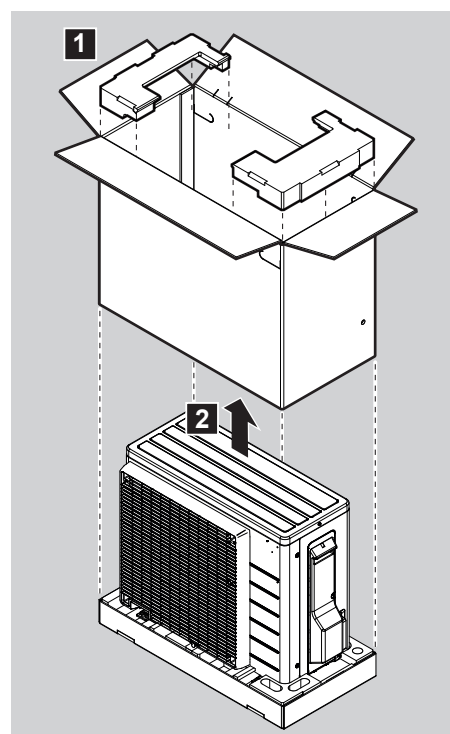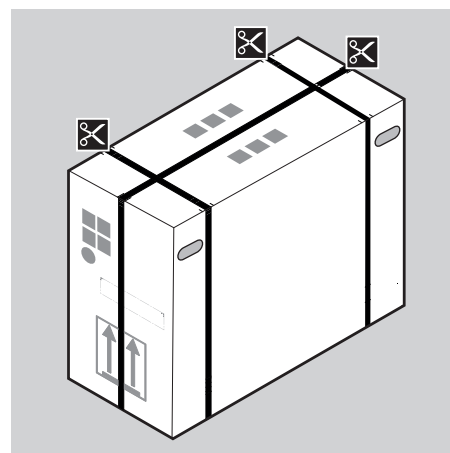**WARNING**

Make sure installation, servicing, maintenance and repair comply with instructions from Daikin and with applicable legislation (for example national gas regulation) and are executed only by authorised persons.

3.1.2 To remove the accessories from the outdoor unit

- Lift the outdoor unit.
- Remove the accessories at the bottom of the package.

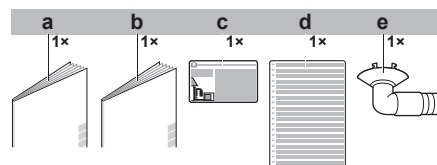

4 Unit installation

- a General safety precautions
- b Outdoor unit installation manual
- c Fluorinated greenhouse gases label
- d Multilingual fluorinated greenhouse gases label
- e Drain plug (located on the bottom of the packing case)

4 Unit installation

4.1 Preparing the installation site



WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).




WARNING

Make sure installation, servicing, maintenance and repair comply with instructions from Daikin and with applicable legislation (for example national gas regulation) and are executed only by authorised persons.


4.1.1 Installation site requirements of the outdoor unit

Mind the following spacing guidelines:

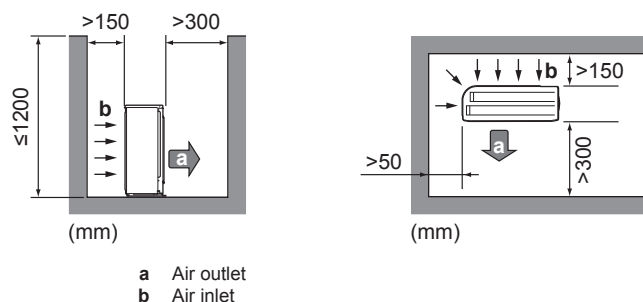


It is recommended to install a baffle plate when the air outlet is exposed to wind.

It is recommended to install the outdoor unit with the air inlet facing the wall and NOT directly exposed to the wind.

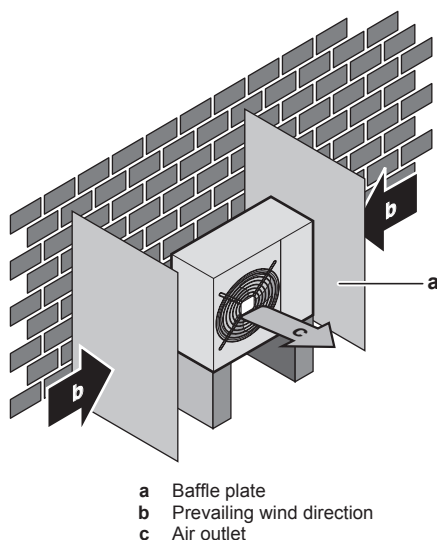

4.1.2 Additional installation site requirements of the outdoor unit in cold climates

Protect the outdoor unit against direct snowfall and take care that the outdoor unit is NEVER snowed up.

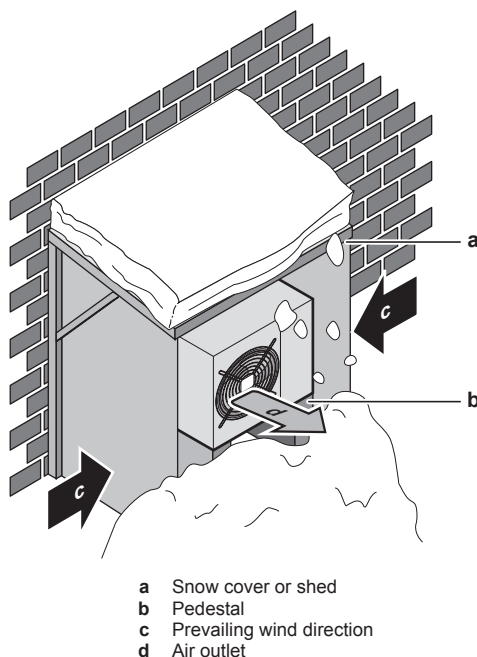


It is recommended to provide at least 150 mm of free space below the unit (300 mm for heavy snowfall areas). Additionally, make sure the unit is positioned at least 100 mm above the maximum expected level of snow. If necessary, construct a pedestal. See "4.2 Mounting the outdoor unit" [p 6] for more details.

In heavy snowfall areas it is very important to select an installation site where the snow will NOT affect the unit. If lateral snowfall is possible, make sure that the heat exchanger coil is NOT affected by the snow. If necessary, install a snow cover or shed and a pedestal.


4.2 Mounting the outdoor unit

4.2.1 To provide the installation structure

Prepare 4 sets of M8 or M10 anchor bolts, nuts and washers (field supply).

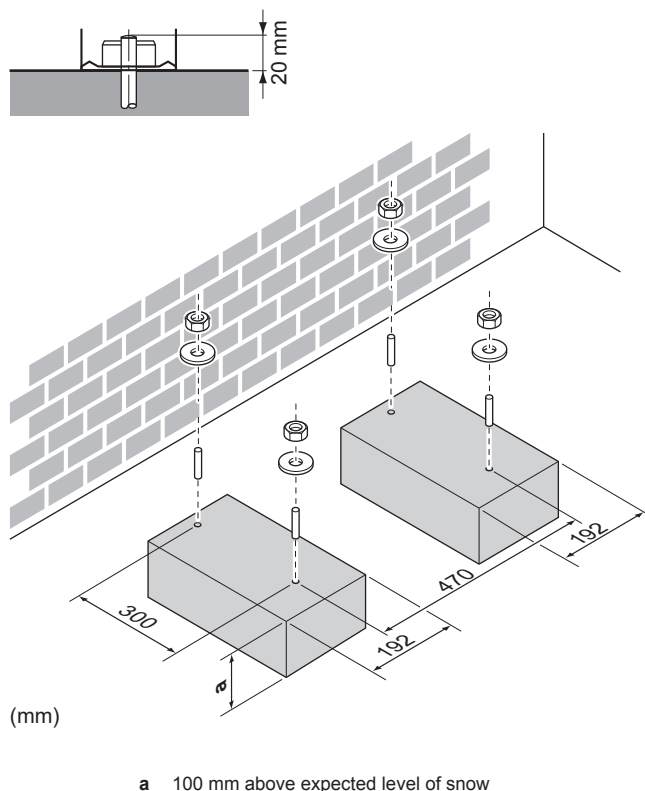

4.2.2 To install the outdoor unit

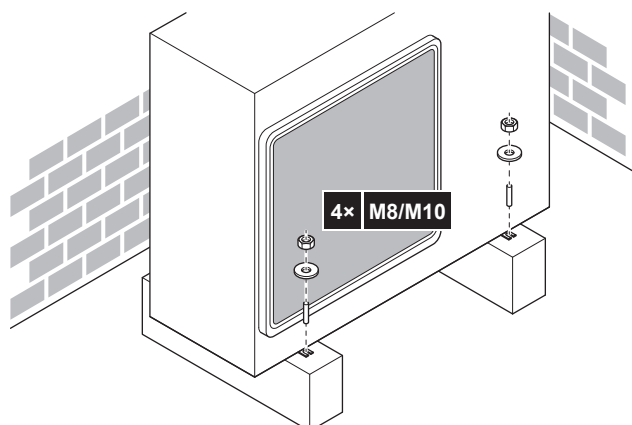

4.2.3 To provide drainage



NOTICE

If the unit is installed in a cold climate, take adequate measures so that the evacuated condensate CANNOT freeze.



NOTICE


If the drain holes of the outdoor unit are blocked up by a mounting base or floor surface, place additional foot bases ≤30 mm under the outdoor unit's feet.



INFORMATION

For information on the available options, contact your dealer.

- 1 Use a drain plug for drainage.
- 2 Use a Ø16 mm hose (field supply).

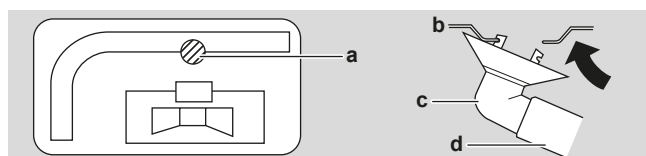


- a Drain port
- b Bottom frame
- c Drain plug
- d Hose (field supply)

4.2.4 To prevent the outdoor unit from falling over

In case the unit is installed in places where strong wind can tilt the unit, take following measure:

- 1 Prepare 2 cables as indicated in the following illustration (field supply).
- 2 Place the 2 cables over the outdoor unit.
- 3 Insert a rubber sheet between the cables and the outdoor unit to prevent the cables from scratching the paint (field supply).
- 4 Attach the ends of the cables.
- 5 Tighten the cables.

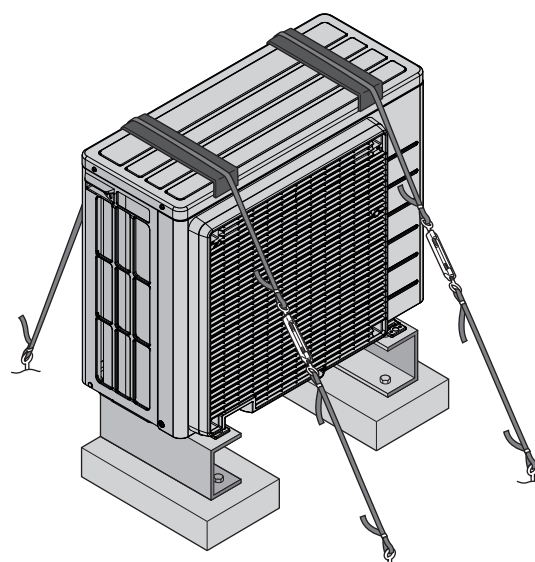

5 Piping installation

5.1 Preparing refrigerant piping

5.1.1 Refrigerant piping requirements

- **Piping material:** Phosphoric acid deoxidised seamless copper.
- **Piping diameter:**

Liquid piping	Ø6.4 mm (1/4")
Gas piping	Ø9.5 mm (3/8")

- **Piping temper grade and thickness:**

Outer diameter (Ø)	Temper grade	Thickness (t) ^(a)	
6.4 mm (1/4")	Annealed (O)	≥0.8 mm	
9.5 mm (3/8")	Annealed (O)		

^(a) Depending on the applicable legislation and the maximum working pressure of the unit (see "PS High" on the unit name plate), larger piping thickness might be required.

5.1.2 Refrigerant piping length and height difference


What?	Distance
Maximum allowable pipe length	20 m
Minimum allowable pipe length	1.5 m
Maximum allowable height difference	12 m

5.1.3 Refrigerant piping insulation

- Use polyethylene foam as insulation material:
 - with a heat transfer rate between 0.041 and 0.052 W/mK (0.035 and 0.045 kcal/mh°C)
 - with a heat resistance of at least 120°C
- Insulation thickness

Pipe outer diameter (Ø _p)	Insulation inner diameter (Ø _i)	Insulation thickness (t)
6.4 mm (1/4")	8~10 mm	≥10 mm
9.5 mm (3/8")	12~15 mm	

 5 Piping installation



If the temperature is higher than 30°C and the humidity is higher than RH 80%, the thickness of the insulation materials should be at least 20 mm to prevent condensation on the surface of the insulation.

5.2 Connecting the refrigerant piping



DANGER: RISK OF BURNING/SCALDING



WARNING

- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.

5.2.1 About connecting the refrigerant piping

Before connecting the refrigerant piping

Make sure the outdoor and indoor unit are mounted.

Typical workflow

Connecting the refrigerant piping involves:

- Connecting the refrigerant piping to the indoor unit
- Connecting the refrigerant piping to the outdoor unit
- Insulating the refrigerant piping
- Keeping in mind the guidelines for:
 - Pipe bending
 - Flaring pipe ends
 - Using the stop valves

5.2.2 Precautions when connecting the refrigerant piping



DANGER: RISK OF BURNING/SCALDING



CAUTION

- Use the flare nut fixed to the main unit.
- To prevent gas leakage, apply refrigeration oil only to the inside of the flare. Use refrigeration oil for R32.
- Do NOT reuse joints.




WARNING

Connect the refrigerant piping securely before running the compressor. If the refrigerant piping is NOT connected and the stop valve is open when the compressor is run, air will be sucked in. This will cause abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.

5.2.3 To connect the refrigerant piping to the outdoor unit

- Piping length.** Keep field piping as short as possible.
- Piping protection.** Protect the field piping against physical damage.

- 1 Connect the liquid refrigerant connection from the indoor unit to the liquid stop valve of the outdoor unit.

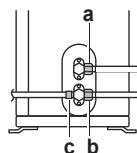

- a Liquid stop valve
- b Gas stop valve
- c Service port

- 2 Connect the gas refrigerant connection from the indoor unit to the gas stop valve of the outdoor unit.



NOTICE

It is recommended that the refrigerant piping between indoor and outdoor unit is installed in a ducting or the refrigerant piping is wrapped with finishing tape.

5.3 Checking the refrigerant piping

5.3.1 To check for leaks



NOTICE

Do NOT exceed the unit's maximum working pressure (see "PS High" on the unit name plate).



NOTICE

ALWAYS use a recommended bubble test solution from your wholesaler.

NEVER use soap water:

- Soap water may cause cracking of components, such as flare nuts or stop valve caps.
- Soap water may contain salt, which absorbs moisture that will freeze when the piping gets cold.
- Soap water contains ammonia which may lead to corrosion of flared joints (between the brass flare nut and the copper flare).

- 1 Charge the system with nitrogen gas up to a gauge pressure of at least 200 kPa (2 bar). It is recommended to pressurize to 3000 kPa (30 bar) in order to detect small leaks.
- 2 Check for leaks by applying the bubble test solution to all connections.
- 3 Discharge all nitrogen gas.

5.3.2 To perform vacuum drying

- 1 Vacuum the system until the pressure on the manifold indicates -0.1 MPa (-1 bar).
- 2 Leave as is for 4-5 minutes and check the pressure:

If the pressure...	Then...
Does not change	There is no moisture in the system. This procedure is finished.
Increases	There is moisture in the system. Go to the next step.

- 3 Vacuum the system for at least 2 hours to a manifold pressure of -0.1 MPa (-1 bar).
- 4 After turning the pump OFF, check the pressure for at least 1 hour.
- 5 If you do NOT reach the target vacuum or CANNOT maintain the vacuum for 1 hour, do the following:

- Check for leaks again.
- Perform vacuum drying again.



NOTICE

Make sure to open the stop valves after installing the refrigerant piping and performing vacuum drying. Running the system with the stop valves closed may break the compressor.

6 Charging refrigerant

6.1 About charging refrigerant

The outdoor unit is factory charged with refrigerant, but in some cases the following might be necessary:

What	When
Charging additional refrigerant	When the total liquid piping length is more than specified (see later).
Completely recharging refrigerant	Example: <ul style="list-style-type: none"> ▪ When relocating the system. ▪ After a leak.

Charging additional refrigerant

Before charging additional refrigerant, make sure the outdoor unit's **external** refrigerant piping is checked (leak test, vacuum drying).



INFORMATION

Depending on the units and/or the installation conditions, it might be necessary to connect electrical wiring before you can charge refrigerant.

Typical workflow – Charging additional refrigerant typically consists of the following stages:

- 1 Determining if and how much you have to charge additionally.
- 2 If necessary, charging additional refrigerant.
- 3 Filling in the fluorinated greenhouse gases label, and fixing it to the inside of the outdoor unit.

Completely recharging refrigerant

Before completely recharging refrigerant, make sure the following is done:

- 1 All refrigerant is recovered from the system.
- 2 The outdoor unit's **external** refrigerant piping is checked (leak test, vacuum drying).
- 3 Vacuum drying on the outdoor unit's **internal** refrigerant piping is performed.



NOTICE

Before completely recharging, perform vacuum drying on the outdoor unit's **internal** refrigerant piping as well.

Typical workflow – Completely recharging refrigerant typically consists of the following stages:

- 1 Determining how much refrigerant to charge.
- 2 Charging refrigerant.
- 3 Filling in the fluorinated greenhouse gases label, and fixing it to the inside of the outdoor unit.

6.2 About the refrigerant

This product contains fluorinated greenhouse gases. Do NOT vent gases into the atmosphere.

Refrigerant type: R32

Global warming potential (GWP) value: 675



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

Please contact your installer for more information.



WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).



WARNING

- Do NOT pierce or burn refrigerant cycle parts.
- Do NOT use cleaning materials or means to accelerate the defrosting process other than those recommended by the manufacturer.
- Be aware that the refrigerant inside the system is odourless.



WARNING

The refrigerant inside the unit is mildly flammable, but normally does NOT leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.

Turn off any combustible heating devices, ventilate the room, and contact the dealer where you purchased the unit.

Do NOT use the unit until a service person confirms that the part from which the refrigerant leaked has been repaired.

6.3 To determine the additional refrigerant amount

If the total liquid piping length is...	Then...
≤10 m	Do NOT add additional refrigerant.
>10 m	R=(total length (m) of liquid piping–10 m)×0.020 R=Additional charge (kg) (rounded in units of 0.01 kg)



INFORMATION

Piping length is the one-way length of liquid piping.

6.4 To determine the complete recharge amount



INFORMATION

If a complete recharge is necessary, the total refrigerant charge is: the factory refrigerant charge (see unit name plate) + the determined additional amount.

7 Electrical installation

6.5 To charge additional refrigerant



WARNING


- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.

Prerequisite: Before charging refrigerant, make sure the refrigerant piping is connected and checked (leak test and vacuum drying).

- 1 Connect the refrigerant cylinder to the service port.
- 2 Charge the additional refrigerant amount.
- 3 Open the gas stop valve.

6.6 To fix the fluorinated greenhouse gases label

- 1 Fill in the label as follows:

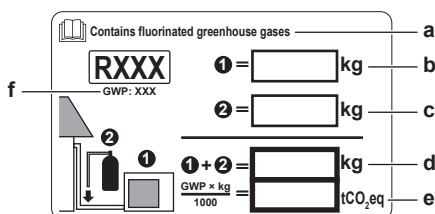

- If a multilingual fluorinated greenhouse gases label is delivered with the unit (see accessories), peel off the applicable language and stick it on top of a.
- Factory refrigerant charge: see unit name plate
- Additional refrigerant amount charged
- Total refrigerant charge
- Quantity of fluorinated greenhouse gases** of the total refrigerant charge expressed as tonnes CO₂ equivalent.
- GWP = Global warming potential



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

Use the GWP value mentioned on the refrigerant charge label.

- 2 Fix the label on the inside of the outdoor unit near the gas and liquid stop valves.

7 Electrical installation



DANGER: RISK OF ELECTROCUTION



WARNING

- All wiring **MUST** be performed by an authorised electrician and **MUST** comply with the applicable legislation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction **MUST** comply with the applicable legislation.



WARNING

ALWAYS use multicore cable for power supply cables.



WARNING

If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



WARNING

Do **NOT** connect the power supply to the indoor unit. This could result in electrical shock or fire.



WARNING

- Do **NOT** use locally purchased electrical parts inside the product.
- Do **NOT** branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.



WARNING

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.



WARNING


Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.

7.1 Specifications of standard wiring components


Component		
Power supply cable	Voltage	220~240 V
	Phase	1~
	Frequency	50 Hz
	Wire sizes	MUST comply with applicable legislation
Interconnection cable (indoor↔outdoor)		4-core cable ≥1.5 mm ² and applicable for 220~240 V
Recommended field fuse		16 A
Earth leakage circuit breaker		MUST comply with applicable legislation

7.2 To connect the electrical wiring to the outdoor unit

- 1 Remove the service cover.
- 2 Open the wire clamp.
- 3 Connect the interconnection cable and power supply as follows:

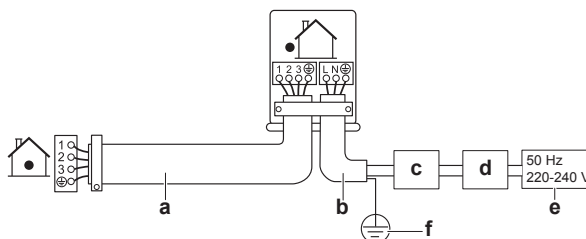

- Interconnection cable
- Power supply cable
- Circuit breaker
- Residual current device
- Power supply
- Earth

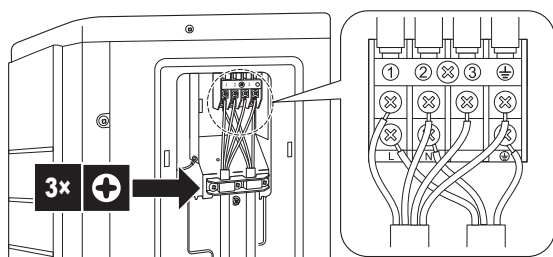


- 4 Tighten the terminal screws securely. We recommend using a Phillips screwdriver.

8 Finishing the outdoor unit installation

8.1 To finish the outdoor unit installation

- 1 Insulate and fix the refrigerant piping and cables as follows:

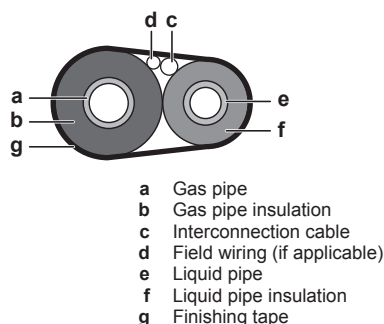


- 2 Install the service cover.

8.2 To close the outdoor unit



NOTICE

When closing the outdoor unit cover, make sure that the tightening torque does NOT exceed 1.3 N•m.

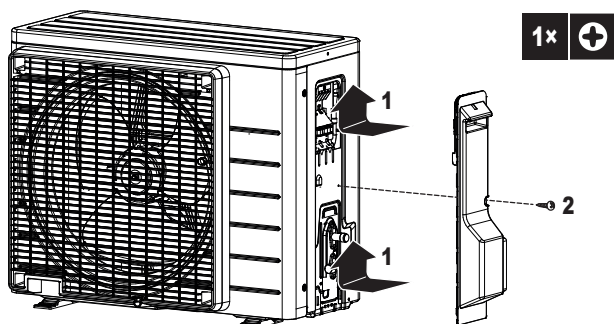

9 Commissioning



NOTICE

ALWAYS operate the unit with thermistors and/or pressure sensors/switches. If NOT, burning of the compressor might be the result.

9.1 Checklist before commissioning

After the installation of the unit, first check the items listed below. Once all checks are fulfilled, the unit must be closed. Power-up the unit after it is closed.

<input type="checkbox"/>	The indoor unit is properly mounted.
<input type="checkbox"/>	The outdoor unit is properly mounted.
<input type="checkbox"/>	The system is properly earthed and the earth terminals are tightened.
<input type="checkbox"/>	The power supply voltage matches the voltage on the identification label of the unit.
<input type="checkbox"/>	There are NO loose connections or damaged electrical components in the switch box.
<input type="checkbox"/>	There are NO damaged components or squeezed pipes on the inside of the indoor and outdoor units.
<input type="checkbox"/>	There are NO refrigerant leaks .
<input type="checkbox"/>	The refrigerant pipes (gas and liquid) are thermally insulated.
<input type="checkbox"/>	The correct pipe size is installed and the pipes are properly insulated.
<input type="checkbox"/>	The stop valves (gas and liquid) on the outdoor unit are fully open.
<input type="checkbox"/>	The following field wiring has been carried out according to this document and the applicable legislation between the outdoor unit and the indoor unit.
<input type="checkbox"/>	Drainage Make sure drainage flows smoothly. Possible consequence: Condensate water might drip.
<input type="checkbox"/>	The indoor unit receives the signals of the user interface .
<input type="checkbox"/>	The specified wires are used for the interconnection cable .
<input type="checkbox"/>	The fuses, circuit breakers , or locally installed protection devices are installed according to this document, and have NOT been bypassed.

9.2 Checklist during commissioning

<input type="checkbox"/>	To perform an air purge .
<input type="checkbox"/>	To perform a test run .

9.3 To perform a test run

Prerequisite: Power supply MUST be in the specified range.

Prerequisite: Test run may be performed in cooling or heating mode.

Prerequisite: Test run should be performed in accordance with the operation manual of the indoor unit to make sure that all functions and parts are working properly.

- 1 In cooling mode, select the lowest programmable temperature. In heating mode, select the highest programmable temperature. Test run can be disabled if necessary.
- 2 When the test run is finished, set the temperature to a normal level. In cooling mode: 26~28°C, in heating mode: 20~24°C.
- 3 The system stops operating 3 minutes after the unit is turned OFF.

10 Troubleshooting



INFORMATION




- Even if the unit is turned OFF, it consumes electricity.
- When the power turns back on after a power break, the previously selected mode will be resumed.

9.4 Starting up the outdoor unit

See the indoor unit installation manual for configuration and commissioning of the system.

10 Troubleshooting

10.1 Fault diagnosis using LED on outdoor unit PCB

LED is...	Diagnosis
 flashing	Normal. <ul style="list-style-type: none">▪ Check the indoor unit.
 ON	<ul style="list-style-type: none">▪ Turn the power OFF and back ON, and check the LED within approximately 3 minutes. If the LED is ON again, the outdoor unit PCB is faulty.
 OFF	<ol style="list-style-type: none">1 Supply voltage (for power saving).2 Power supply fault.3 Turn the power OFF and back ON, and check the LED within approximately 3 minutes. If the LED is OFF again, the outdoor unit PCB is faulty.



DANGER: RISK OF ELECTROCUTION

- When the unit is not operating, the LEDs on the PCB are turned off in order to save power.
- Even when the LEDs are off, the terminal block and the PCB may be powered.

11 Disposal



NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts MUST comply with applicable legislation. Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery.

- Units are marked with the following symbol:



This means that electrical and electronic products may NOT be mixed with unsorted household waste. Do NOT try to dismantle the system yourself: the dismantling of the system, treatment of the refrigerant, of oil and of other parts must be done by an authorized installer and must comply with applicable legislation. Units must be treated at a specialized treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.

12 Technical data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

12.1 Wiring diagram

12.1.1 Unified wiring diagram legend

For applied parts and numbering, refer to the wiring diagram on the unit. Part numbering is by Arabic numbers in ascending order for each part and is represented in the overview below by "*" in the part code.

Symbol	Meaning	Symbol	Meaning
	Circuit breaker		Protective earth
	Connection		Protective earth (screw)
	Connector		Rectifier
	Earth		Relay connector
	Field wiring		Short-circuit connector
	Fuse		Terminal
	Indoor unit		Terminal strip
	Outdoor unit		Wire clamp
	Residual current device		

Symbol	Colour	Symbol	Colour
BLK	Black	ORG	Orange
BLU	Blue	PNK	Pink
BRN	Brown	PRP, PPL	Purple
GRN	Green	RED	Red
GRY	Grey	WHT	White
		YLW	Yellow

Symbol	Meaning
A*P	Printed circuit board
BS*	Pushbutton ON/OFF, operation switch
BZ, H*O	Buzzer
C*	Capacitor
AC*, CN*, E*, HA*, HE*, HL*, HN*, HR*, MR*_A, MR*_B, S*, U, V, W, X*A, K*R_*, NE	Connection, connector
D*, V*D	Diode
DB*	Diode bridge
DS*	DIP switch
E*H	Heater
FU*, F*U, (for characteristics, refer to PCB inside your unit)	Fuse
FG*	Connector (frame ground)
H*	Harness
H*P, LED*, V*L	Pilot lamp, light emitting diode

Symbol	Meaning
HAP	Light emitting diode (service monitor green)
HIGH VOLTAGE	High voltage
IES	Intelligent eye sensor
IPM*	Intelligent power module
K*R, KCR, KFR, KHuR, K*M	Magnetic relay
L	Live
L*	Coil
L*R	Reactor
M*	Stepper motor
M*C	Compressor motor
M*F	Fan motor
M*P	Drain pump motor
M*S	Swing motor
MR*, MRCW*, MRM*, MRN*	Magnetic relay
N	Neutral
n=*, N=*	Number of passes through ferrite core
PAM	Pulse-amplitude modulation
PCB*	Printed circuit board
PM*	Power module
PS	Switching power supply
PTC*	PTC thermistor
Q*	Insulated gate bipolar transistor (IGBT)
Q*C	Circuit breaker
Q*DI, KLM	Earth leak circuit breaker
Q*L	Overload protector
Q*M	Thermo switch
Q*R	Residual current device
R*	Resistor
R*T	Thermistor
RC	Receiver
S*C	Limit switch
S*L	Float switch
S*NG	Refrigerant leak detector
S*NPH	Pressure sensor (high)
S*NPL	Pressure sensor (low)
S*PH, HPS*	Pressure switch (high)
S*PL	Pressure switch (low)
S*T	Thermostat
S*RH	Humidity sensor
S*W, SW*	Operation switch
SA*, F1S	Surge arrester
SR*, WLU	Signal receiver
SS*	Selector switch
SHEET METAL	Terminal strip fixed plate
T*R	Transformer
TC, TRC	Transmitter
V*, R*V	Varistor
V*R	Diode bridge, Insulated-gate bipolar transistor (IGBT) power module
WRC	Wireless remote controller
X*	Terminal


12 Technical data

Symbol	Meaning
X*M	Terminal strip (block)
Y*E	Electronic expansion valve coil
Y*R, Y*S	Reversing solenoid valve coil
Z*C	Ferrite core
ZF, Z*F	Noise filter


12.2 Piping diagram

12.2.1 Piping diagram: Outdoor unit

RXF20C, RXF25C, RXF35C, ARXF20C, ARXF25C, ARXF35C

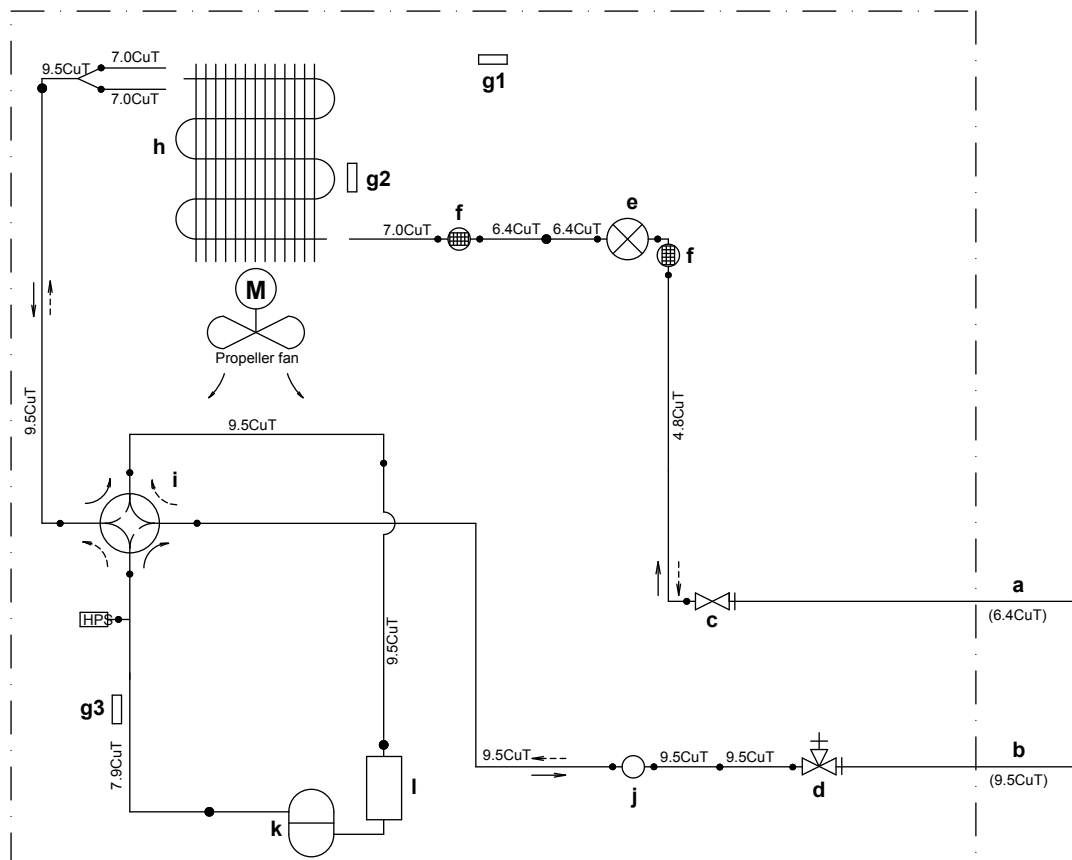

RXF42C, ARXF42C

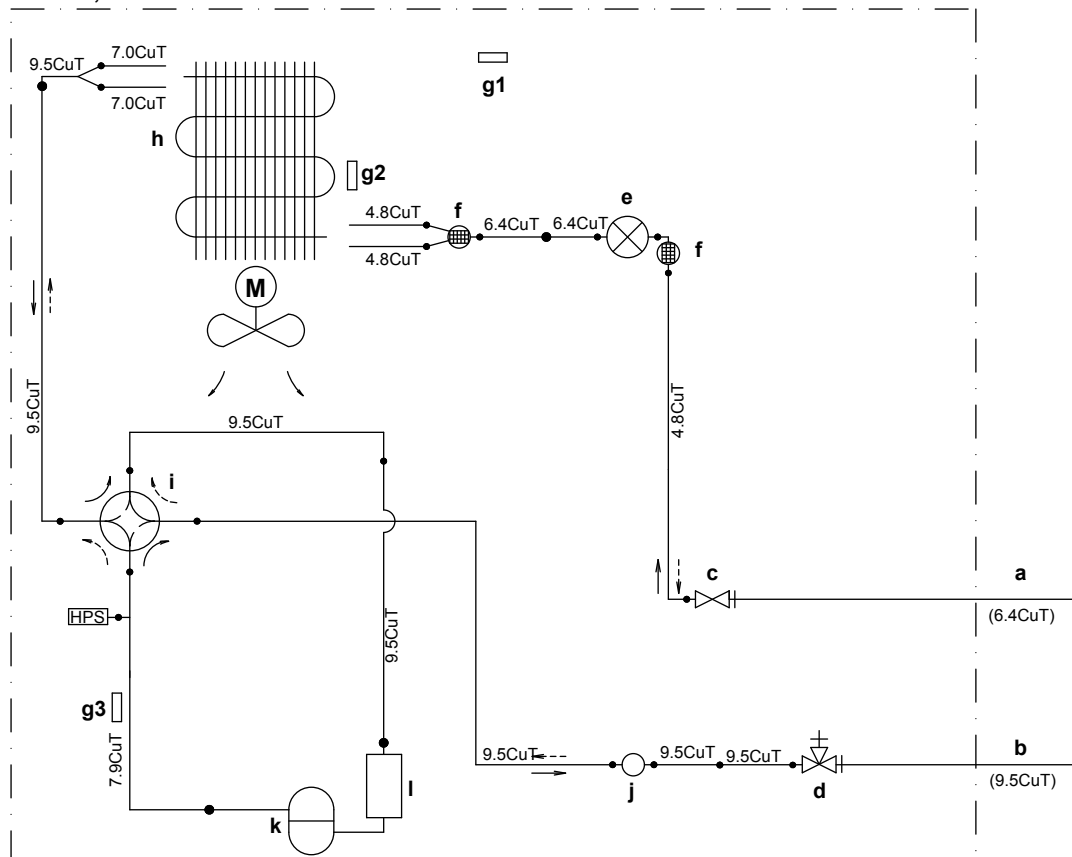

12 Technical data

a	Liquid field piping	h	Heat exchanger thermistor
b	Gas field piping	i	4 way valve (ON: heating)
c	Liquid stop valve	j	Muffler
d	Gas stop valve	k	Compressor
e	Electronic expansion valve	l	Accumulator
f	Muffler with filter	HPS	High pressure switch (automatic reset)
g1	Outdoor temperature thermistor	M	Propeller fan
g2	Heat exchanger thermistor	---	Refrigerant flow: cooling
g3	Discharge pipe thermistor	—>	Refrigerant flow: heating







**DAIKIN ISITMA VE SOĞUTMA SİSTEMLERİ SAN.TİC. A.Ş.**

Gülsuyu Mahallesi, Fevzi Çakmak Caddesi, Burçak Sokak, No:20, 34848 Maltepe

İSTANBUL / TÜRKİYE

Tel: 0216 453 27 00

Faks: 0216 671 06 00

Çağrı Merkezi: 444 999 0

Web: www.daikin.com.tr

Copyright 2020 Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

3P519299-10S 2020.08