




Installation manual

R32 Split Series

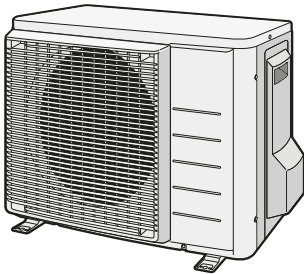

RXM20R5V1B
RXM25R5V1B
RXM35R5V1B
ARXM25R5V1B
ARXM35R5V1B

Installation manual
R32 Split Series

English

CE - DECLARATION-OF-COMFORMITY
CE - KONFORMITÄTSERKLÄRUNG
CE - DECLARATION-DE CONFORMITE
CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DI-CONFORMITÀ
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАЯВЛЕНИЕ-О-СООТВЕТСТВИИ
CE - ÖVERENSSTÄMMELSEERKLÄRING
CE - FÖRSÄKRAN-OM-ÖVERENSSTÄMMELSE

CE - ERKLÆRING OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUUDESTA
CE - PROHLÁŠENÍ-O-SHOĐĚ

CE - IZJAVA-O-USKLAĐENOSTI
CE - MEGFELELŐSÉGI-NYILATKOZAT
CE - DEKLARACIJA-ZGDNOŠĆI
CE - DECLARATION-DE-CONFORMITE

CE - ATITIKTIES-DEKLARĀCIJA
CE - ATBILSTĪBAS-DEKLARĀCIJA
CE - VYHLÁŠENIE-ZHODY
CE - UYGUNLĪK-BEYANI

Daikin Europe N.V.

01
02
03
04
05
06
07
08
09
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839

10	09	08	07	06	05	04	03	02	01	00	99	98	97	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	99	98	97	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	99	98	97	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	99	98	97	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	99	98	97	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

[illegible]

RXM20R5V1B, RXM25R5V1B, RXM35R5V1B, ARXM25R5V1B, ARXM35R5V1B,

are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
 worden (vogennde normen) (en/of) eenen anderen Normdokument (de) -dokumenten entspreken, unter der Voraussetzung, dass sie ge-
 unseren Anweisungen eingesetzt werden:
 sont conformes à (aux) norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
 conforme de (vogennde normen) (en/of) een of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze
 instructies:

05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:

306 sono conformi all(i) seguente(i) standard(s) o all(tri) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni
307 είναι σύμφωνα με τ(α) ακόλουθ(α) πρότυπο(α) ή άλλο(α) έγγραφο(α) κανονισμ(α)ίων, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:

EN60335-2-40,

[illegible]

01 Nota*	as set out in <A> and judged positively by 	06 Nota*	delimitado pelo <A> e julgado positivamente da
02 Hinweis*	as according to the Certificate <A>	07 Stellungn°*	segundo o Certificado <A>
03 Hinweis*	wie in <A> aufgelistet und von positiv beurteilt gemäuss. Zertifikat <A>	08 Nota*	como se estabeleceu em <A> e com o parecer positivo da segundo o certificado <A>
03 Remarque*	qui définit dans <A> et évalué positivement par 	09 Примечание*	de acordo com o Certificado <A>
04 Bemerk*	wozu vermerkt in <A> als positiver Beurteilungs- ergebnissen Zertifikat <A>	10 Bemerk*	cuja uvaženo v <A> i s odgovarajućim stavovima izdanog u <A> potvrđuje uvidela u . Potpuno Certifikat <A>
05 Nota*	as set out in <A> and judged positively by 		

01** Dairin Europe N.V. is authorised to compile the Technical Construction File.
02** Dairin Europe N.V. hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.
03** Dairin Europe N.V. est autorisée à compiler le Dossier de Construction Technique.
04** Dairin Europe N.V. is bevoegd om het Technisch Constructiedossier samen te stellen.
05** Dairin Europe N.V. está autorizado a compilar el Archivo de Construcción Técnica.
06** Dairin Europe N.V. è autorizzata ad redigere il File tecnico di Costruzione.

07	H Dakin Europe N.V. είναι εξουσιοδοτημένη να συντάξει τον Τεχνικό φάκελο κατασκευής.
08	A Dakin Europe N.V. está autorizada a compilar a documentação técnica de fabrico.
09	Компания Дакін Еуропа N.V. уполномочена составлять Технический документ
10	Dakin Europe N.V. er autoriseret til at udarbejde de tekniske konstruktionsdata.
11	Dakin Europe N.V. är bemyndigad att sammanställa den tekniska konstruktionsfilen.
12	Dakin Europe N.V. har tilfættelse til at kompilere den Tekniske konstruktionsfilen.

- 13^o Daikin Europe N.V. on valitud teinud laulu. Tekst on asjakohane.
- 14^o Společnost Daikin Europe N.V. má oprávnění ke kompiaci, soubojům.
- 15^o Daikin Europe N.V. je ověřen za izradu Datoteke o tehničkih kolonah.
- 16^o A Daikin Europe N.V. joposluša i mislazi konstrukcijske dokumente.
- 17^o Daikin Europe N.V. ma upowaznienie do zbierania i opracowywania danych.
- 18^o Daikin Europe N.V. este autorizat să compliceze Documentul tehnic de

[illegible]

Low Voltage 2014/35/EU
Electromagnetic Compatibility 2014/30/EU
Machinery 2006/42/EC

11 Information*	enlig <4> och poklats av <4> enlig och enlig <4>	16 Moglyghejs*	enlig <4> oglyg <4> oglyg oglyg <4> oglyg <4> oglyg <4>	21 Information*	enlig <4> oglyg <4> oglyg <4> oglyg <4>
12 Merk*	bedom de Fenkmer <4> oglyg oglyg <4> oglyg <4> oglyg <4>	17 Uvaga*	oglyg <4> oglyg <4> oglyg <4> oglyg <4>	22 Perisida*	oglyg <4> oglyg <4> oglyg <4> oglyg <4>
13 Huon*	jola on esatly asatlyss <4> jola oglyg <4> oglyg <4> oglyg <4>	18 Noli*	oglyg <4> oglyg <4> oglyg <4> oglyg <4>	23 Plazims*	oglyg <4> oglyg <4> oglyg <4> oglyg <4>
14 Pozimla*	jak jolo uedeno <4> oglyg <4> oglyg <4>	19 Opomba*	oglyg <4> oglyg <4> oglyg <4> oglyg <4>	24 Pozimla*	oglyg <4> oglyg <4> oglyg <4> oglyg <4>
15 Nepomna*	kalo je izbrano u <4> oglyg <4> oglyg <4>			25 Not*	oglyg <4> oglyg <4> oglyg <4> oglyg <4>

- 13^o Dákin Europe N.V. on valitultu laimaaan. Teknisen asakijan.
- 14^o Spoločnosť Dákin Europe N.V. má oprávnenie k kompletu súboru technické konštrukcie.
- 15^o Dákin Europe N.V. je ovlašten za opradu Dátekve o konštrukcii.
- 16^o A Dákin Europe N.V. jogsallu a mészaki konstruksiók dokumentációsszállására.
- 17^o Dákin Europe N.V. má upovažnenie do zbierania a opracowania dokumentacji konstrukcji.
- 18^o Dákin Europe N.V. este autorizat să completeze Dosarul Tehnic de construcție.

[illegible][illegible]

<A>	DAIKIN.TCF.032E3/08-2020
	DEKRA (NB0344)
<C>	215619.0551-EMC

19 th	Daklin Europe N.V. je pooblaščen za sestavo datoteke s tehnično napo.
20 th	Daklin Europe N.V. on vlogi kosičena tehnični dokumentaciji.
21 st	Daklin Europe N.V. je odpravljen da s strani Arta za tehnične raz
22 nd	Daklin Europe N.V. je glavna sodnijski tehnični konsultacijski tla.
23 rd	Daklin Europe N.V. je avtorizacijski tehnični dokumentaciji.
24 th	Splošnost Daklin Europe N.V. je pravična vlogi s strani tehnični ko
25 th	Daklin Europe N.V. je vlogi Arta. Posredni delavci vlogi.

DAIKIN

Hiromitsu Iwasaki

Director

Ostend, 5th of October 2020

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

Table of contents

1	About the documentation	3
1.1	About this document.....	3
2	About the box	3
2.1	Outdoor unit.....	3
2.1.1	To remove the accessories from the outdoor unit.....	3
3	Preparation	3
3.1	Preparing the installation site	3
3.1.1	Installation site requirements of the outdoor unit	3
3.1.2	Additional installation site requirements of the outdoor unit in cold climates	4
3.1.3	Refrigerant piping length and height difference	4
4	Installation	4
4.1	Mounting the outdoor unit.....	4
4.1.1	To provide the installation structure	4
4.1.2	To install the outdoor unit.....	5
4.1.3	To provide drainage	5
4.2	Connecting the refrigerant piping	5
4.2.1	To connect the refrigerant piping to the outdoor unit ..	5
4.3	Checking the refrigerant piping	5
4.3.1	To check for leaks.....	5
4.3.2	To perform vacuum drying	6
4.4	Charging refrigerant	6
4.4.1	About charging refrigerant	6
4.4.2	About the refrigerant	6
4.4.3	To determine the additional refrigerant amount	6
4.4.4	To determine the complete recharge amount	7
4.4.5	To charge additional refrigerant	7
4.4.6	To fix the fluorinated greenhouse gases label	7
4.5	Connecting the electrical wiring.....	7
4.5.1	Specifications of standard wiring components.....	8
4.5.2	To connect the electrical wiring to the outdoor unit.....	8
4.6	Finishing the outdoor unit installation	8
4.6.1	To finish the outdoor unit installation	8
5	Commissioning	8
5.1	Checklist before commissioning	8
5.2	Checklist during commissioning	9
5.3	To perform a test run.....	9
6	Troubleshooting	9
6.1	Fault diagnosis using LED on outdoor unit PCB	9
7	Disposal	9
8	Technical data	10
8.1	Wiring diagram	10

1 About the documentation

1.1 About this document



INFORMATION

Make sure that the user has the printed documentation and ask him/her to keep it for future reference.

Target audience

Authorised installers

Documentation set

This document is part of a documentation set. The complete set consists of:

General safety precautions:

- Safety instructions that you **MUST** read before installing
- Format: Paper (in the box of the outdoor unit)

Outdoor unit installation manual:

- Installation instructions
- Format: Paper (in the box of the outdoor unit)

Installer reference guide:

- Preparation of the installation, reference data,...
- Format: Digital files on <http://www.daikineurope.com/support-and-manuals/product-information/>

Latest revisions of the supplied documentation may be available on the regional Daikin website or via your dealer.

The original documentation is written in English. All other languages are translations.

Technical engineering data


- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

2 About the box

2.1 Outdoor unit

2.1.1 To remove the accessories from the outdoor unit

- 1 Lift the outdoor unit.
- 2 Remove the accessories at the bottom of the package.

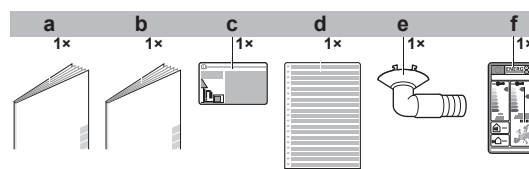

- a General safety precautions
- b Outdoor unit installation manual
- c Fluorinated greenhouse gases label
- d Multilingual fluorinated greenhouse gases label
- e Drain plug (located on the bottom of the packing case)
- f Energy label

3 Preparation

3.1 Preparing the installation site




WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).

3.1.1 Installation site requirements of the outdoor unit

Mind the following spacing guidelines:

4 Installation

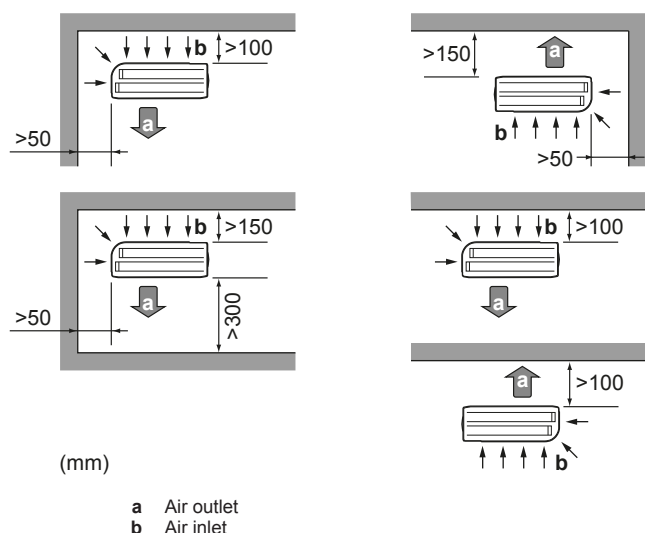


NOTICE

The height of the wall on the outlet side of the outdoor unit **MUST** be ≤ 1200 mm.

It is recommended to install a baffle plate when the air outlet is exposed to wind.

It is recommended to install the outdoor unit with the air inlet facing the wall and **NOT** directly exposed to the wind.

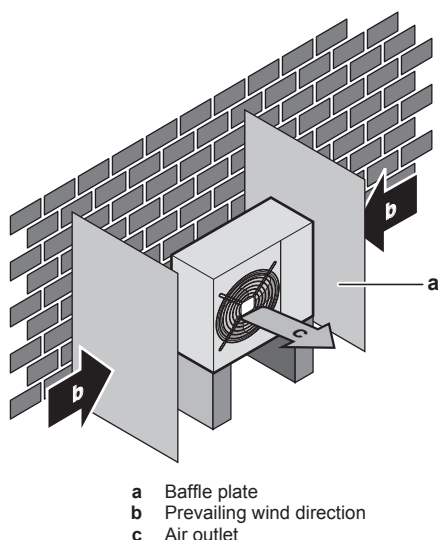

Do **NOT** install the unit in sound sensitive areas (e.g. near a bedroom), so that the operation noise will cause no trouble.

Note: If the sound is measured under actual installation conditions, the measured value might be higher than the sound pressure level mentioned in "Sound spectrum" in the data book due to environmental noise and sound reflections.




INFORMATION

The sound pressure level is less than 70 dBA.

3.1.2 Additional installation site requirements of the outdoor unit in cold climates

Protect the outdoor unit against direct snowfall and take care that the outdoor unit is **NEVER** snowed up.

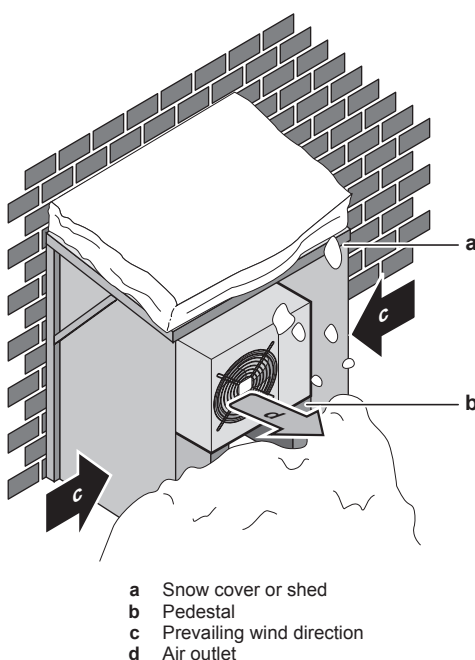

In any case, provide at least 300 mm of free space below the unit. Additionally, make sure the unit is positioned at least 100 mm above the maximum expected level of snow. See ["4.1 Mounting the outdoor unit" \[p 4\]](#) for more details.

In heavy snowfall areas it is very important to select an installation site where the snow will **NOT** affect the unit. If lateral snowfall is possible, make sure that the heat exchanger coil is **NOT** affected by the snow. If necessary, install a snow cover or shed and a pedestal.

3.1.3 Refrigerant piping length and height difference

What?	Distance
Maximum allowable pipe length	20 m
Minimum allowable pipe length	1.5 m
Maximum allowable height difference	15 m

 
4 Installation


4.1 Mounting the outdoor unit

4.1.1 To provide the installation structure

Use a vibration-proof rubber (field supply) in cases where vibrations may be transmitted to the building.


Prepare 4 sets of M8 or M10 anchor bolts, nuts and washers (field supply).



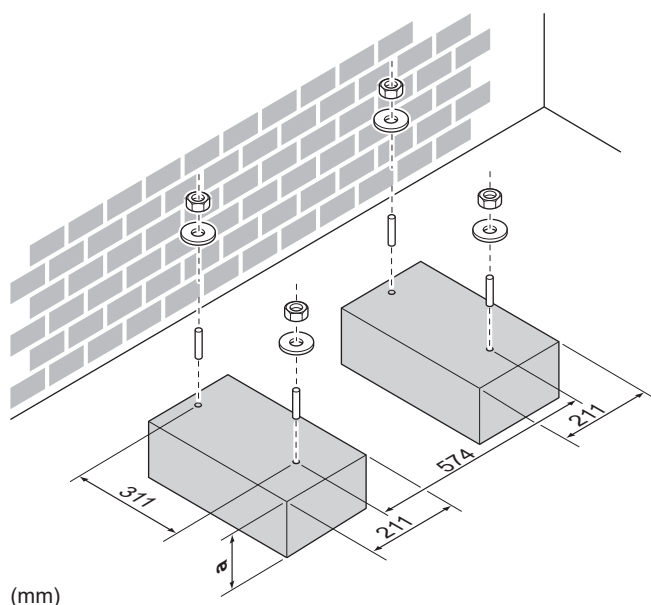

a 100 mm above expected level of snow

4.1.2 To install the outdoor unit

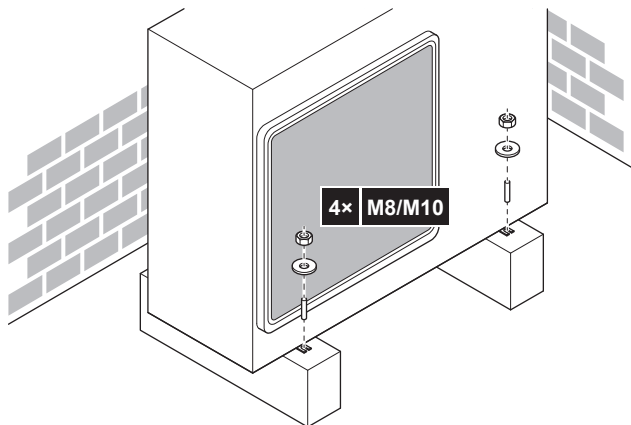

4.1.3 To provide drainage



NOTICE

If the unit is installed in a cold climate, take adequate measures so that the evacuated condensate CANNOT freeze.



NOTICE


If the drain holes of the outdoor unit are blocked up by a mounting base or floor surface, place additional foot bases ≤30 mm under the outdoor unit's feet.



INFORMATION

For information on the available options, contact your dealer.

- 1 Use a drain plug for drainage.
- 2 Use a Ø16 mm hose (field supply).

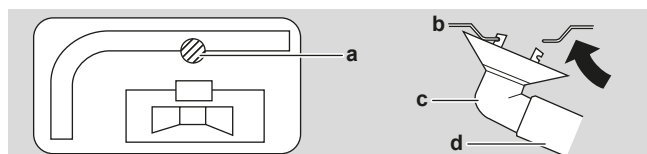

a Drain port
b Bottom frame

- c Drain plug
d Hose (field supply)

4.2 Connecting the refrigerant piping



DANGER: RISK OF BURNING/SCALDING

4.2.1 To connect the refrigerant piping to the outdoor unit

- **Piping length.** Keep field piping as short as possible.
- **Piping protection.** Protect the field piping against physical damage.



WARNING


Connect the refrigerant piping securely before running the compressor. If the refrigerant piping is NOT connected and the stop valve is open when the compressor is run, air will be sucked in. This will cause abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.



CAUTION

- Use the flare nut fixed to the unit.
- To prevent gas leakage, apply refrigeration oil only to the inside of the flare. Use refrigeration oil for R32.
- Do NOT reuse joints.

- 1 Connect the liquid refrigerant connection from the indoor unit to the liquid stop valve of the outdoor unit.

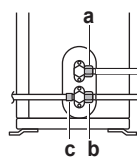

a Liquid stop valve
b Gas stop valve
c Service port

- 2 Connect the gas refrigerant connection from the indoor unit to the gas stop valve of the outdoor unit.



NOTICE

It is recommended that the refrigerant piping between indoor and outdoor unit is installed in a ducting or the refrigerant piping is wrapped with finishing tape.

4.3 Checking the refrigerant piping

4.3.1 To check for leaks



NOTICE

Do NOT exceed the unit's maximum working pressure (see "PS High" on the unit name plate).



NOTICE

Make sure to use a recommended bubble test solution from your wholesaler. Do not use soap water, which may cause cracking of flare nuts (soap water may contain salt, which absorbs moisture that will freeze when the piping gets cold), and/or lead to corrosion of flared joints (soap water may contain ammonia which causes a corrosive effect between the brass flare nut and the copper flare).

- 1 Charge the system with nitrogen gas up to a gauge pressure of at least 200 kPa (2 bar). It is recommended to pressurize to 3000 kPa (30 bar) in order to detect small leaks.

4 Installation

- 2 Check for leaks by applying the bubble test solution to all connections.
- 3 Discharge all nitrogen gas.

4.3.2 To perform vacuum drying



DANGER: RISK OF EXPLOSION

Do NOT start the unit if it is vacuumed.

- 1 Vacuum the system until the pressure on the manifold indicates -0.1 MPa (-1 bar).
- 2 Leave as is for 4-5 minutes and check the pressure:

If the pressure...	Then...
Does not change	There is no moisture in the system. This procedure is finished.
Increases	There is moisture in the system. Go to the next step.

- 3 Vacuum the system for at least 2 hours to a manifold pressure of -0.1 MPa (-1 bar).
- 4 After turning the pump OFF, check the pressure for at least 1 hour.
- 5 If you do NOT reach the target vacuum or CANNOT maintain the vacuum for 1 hour, do the following:
 - Check for leaks again.
 - Perform vacuum drying again.



NOTICE

Make sure to open the stop valves after installing the refrigerant piping and performing vacuum drying. Running the system with the stop valves closed may break the compressor.

4.4 Charging refrigerant

4.4.1 About charging refrigerant

The outdoor unit is factory charged with refrigerant, but in some cases the following might be necessary:

What	When
Charging additional refrigerant	When the total liquid piping length is more than specified (see later).
Completely recharging refrigerant	Example: ▪ When relocating the system. ▪ After a leak.

Charging additional refrigerant

Before charging additional refrigerant, make sure the outdoor unit's **external** refrigerant piping is checked (leak test, vacuum drying).



INFORMATION

Depending on the units and/or the installation conditions, it might be necessary to connect electrical wiring before you can charge refrigerant.

Typical workflow – Charging additional refrigerant typically consists of the following stages:

- 1 Determining if and how much you have to charge additionally.
- 2 If necessary, charging additional refrigerant.
- 3 Filling in the fluorinated greenhouse gases label, and fixing it to the inside of the outdoor unit.

Completely recharging refrigerant

Before completely recharging refrigerant, make sure the following is done:

- 1 All refrigerant is recovered from the system.
- 2 The outdoor unit's **external** refrigerant piping is checked (leak test, vacuum drying).
- 3 Vacuum drying on the outdoor unit's **internal** refrigerant piping is performed.



NOTICE

Before completely recharging, perform vacuum drying on the outdoor unit's **internal** refrigerant piping as well.

Typical workflow – Completely recharging refrigerant typically consists of the following stages:

- 1 Determining how much refrigerant to charge.
- 2 Charging refrigerant.
- 3 Filling in the fluorinated greenhouse gases label, and fixing it to the inside of the outdoor unit.

4.4.2 About the refrigerant

This product contains fluorinated greenhouse gases. Do NOT vent gases into the atmosphere.

Refrigerant type: R32

Global warming potential (GWP) value: 675



WARNING: FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.



WARNING

The appliance shall be stored in a room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).



WARNING

- Do NOT pierce or burn refrigerant cycle parts.
- Do NOT use cleaning materials or means to accelerate the defrosting process other than those recommended by the manufacturer.
- Be aware that the refrigerant inside the system is odourless.



WARNING

The refrigerant inside the unit is mildly flammable, but normally does NOT leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.

Turn off any combustible heating devices, ventilate the room, and contact the dealer where you purchased the unit.

Do NOT use the unit until a service person confirms that the part from which the refrigerant leaked has been repaired.

4.4.3 To determine the additional refrigerant amount

If the total liquid piping length is...	Then...
≤ 10 m	Do NOT add additional refrigerant.

If the total liquid piping length is...	Then...
>10 m	$R = (\text{total length (m) of liquid piping} - 10 \text{ m}) \times 0.020$ $R = \text{Additional charge (kg) (rounded in units of 0.01 kg)}$

**INFORMATION**

Piping length is the one-way length of liquid piping.

4.4.4 To determine the complete recharge amount

**INFORMATION**

If a complete recharge is necessary, the total refrigerant charge is: the factory refrigerant charge (see unit name plate) + the determined additional amount.

4.4.5 To charge additional refrigerant

**WARNING**


- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.

Prerequisite: Before charging refrigerant, make sure the refrigerant piping is connected and checked (leak test and vacuum drying).

- Connect the refrigerant cylinder to the service port.
- Charge the additional refrigerant amount.
- Open the gas stop valve.

4.4.6 To fix the fluorinated greenhouse gases label

- Fill in the label as follows:

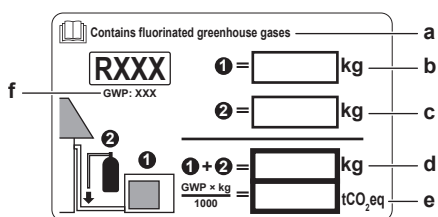

- If a multilingual fluorinated greenhouse gases label is delivered with the unit (see accessories), peel off the applicable language and stick it on top of a.
- Factory refrigerant charge: see unit name plate
- Additional refrigerant amount charged
- Total refrigerant charge
- Quantity of fluorinated greenhouse gases** of the total refrigerant charge expressed as tonnes CO₂ equivalent.
- GWP = Global warming potential

**NOTICE**

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

Use the GWP value mentioned on the refrigerant charge label.

- Fix the label on the inside of the outdoor unit near the gas and liquid stop valves.

4.5 Connecting the electrical wiring

**DANGER: RISK OF ELECTROCUTION****WARNING**

- All wiring **MUST** be performed by an authorised electrician and **MUST** comply with the applicable legislation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction **MUST** comply with the applicable legislation.

**WARNING**

ALWAYS use multicore cable for power supply cables.

**WARNING**

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provide full disconnection under overvoltage category III.

**WARNING**

If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**WARNING**

Do NOT connect the power supply to the indoor unit. This could result in electrical shock or fire.

**WARNING**

- Do NOT use locally purchased electrical parts inside the product.
- Do NOT branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.

**WARNING**

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.


**DANGER: RISK OF ELECTROCUTION**

All electrical parts (including thermistors) are powered by the power supply. Do not touch them with bare hands.

**DANGER: RISK OF ELECTROCUTION**

Disconnect the power supply for more than 10 minutes, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage **MUST** be less than 50 V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.

5 Commissioning

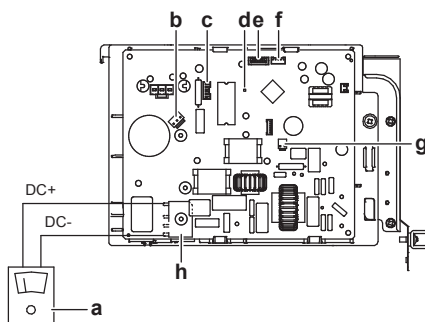


- a Multimeter (DC voltage range)
- b S80 – reversing solenoid valve lead wire
- c S70 – fan motor lead wire
- d LED
- e S90 – thermistor lead wire
- f S20 – electronic expansion valve lead wire
- g S40 – thermal overload relay lead wire
- h DB1 - diode bridge

4.5.1 Specifications of standard wiring components


Component		Class 20	Class 25+35
Power supply cable	Voltage	220~240 V	
	Phase	1~	
	Frequency	50 Hz	
	Wire sizes	3-core cable 2.5 mm ² ~4.0 mm ² H05RN-F (60245 IEC 57)	
Interconnection cable (indoor↔outdoor)		4-core cable 1.5 mm ² ~2.5 mm ² and applicable for 220~240 V H05RN-F (60245 IEC 57)	
Recommended field fuse		10 A	13 A
Earth leakage circuit breaker		MUST comply with applicable legislation	

4.5.2 To connect the electrical wiring to the outdoor unit

- 1 Remove the service cover.
- 2 Open the wire clamp.
- 3 Connect the interconnection cable and power supply as follows:

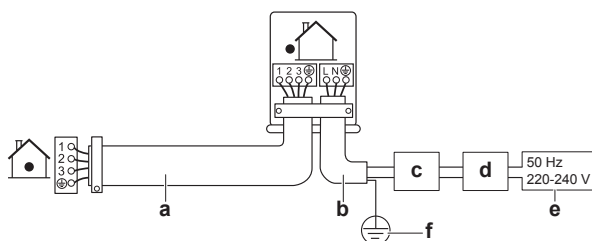

- a Interconnection cable
- b Power supply cable
- c Circuit breaker
- d Earth leakage circuit breaker
- e Power supply
- f Earth

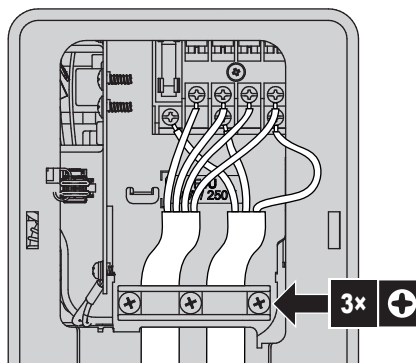

- 4 Tighten the terminal screws securely. We recommend using a Phillips screwdriver.

4.6 Finishing the outdoor unit installation


4.6.1 To finish the outdoor unit installation



DANGER: RISK OF ELECTROCUTION

- Make sure that the system is earthed properly.
- Turn off the power supply before servicing.
- Install the service cover before turning on the power supply.

- 1 Insulate and fix the refrigerant piping and cables as follows:

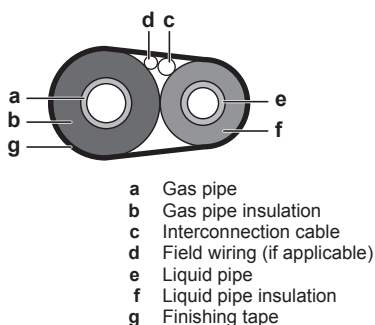

- 2 Install the service cover.

5 Commissioning



NOTICE

ALWAYS operate the unit with thermistors and/or pressure sensors/switches. If NOT, burning of the compressor might be the result.

5.1 Checklist before commissioning

After the installation of the unit, first check the items listed below. Once all checks are fulfilled, the unit must be closed. Power-up the unit after it is closed.

☐	The indoor unit is properly mounted.
☐	The outdoor unit is properly mounted.
☐	The system is properly earthed and the earth terminals are tightened.
☐	The power supply voltage matches the voltage on the identification label of the unit.
☐	There are NO loose connections or damaged electrical components in the switch box.

☐	There are NO damaged components or squeezed pipes on the inside of the indoor and outdoor units.
☐	There are NO refrigerant leaks .
☐	The refrigerant pipes (gas and liquid) are thermally insulated.
☐	The correct pipe size is installed and the pipes are properly insulated.
☐	The stop valves (gas and liquid) on the outdoor unit are fully open.
☐	The following field wiring has been carried out according to this document and the applicable legislation between the outdoor unit and the indoor unit.
☐	Drainage Make sure drainage flows smoothly. Possible consequence: Condensate water might drip.
☐	The indoor unit receives the signals of the user interface .
☐	The specified wires are used for the interconnection cable .
☐	The fuses, circuit breakers , or locally installed protection devices are installed according to this document, and have NOT been bypassed.

5.2 Checklist during commissioning

☐	To perform an air purge .
☐	To perform a test run .

5.3 To perform a test run

Prerequisite: Power supply MUST be in the specified range.

Prerequisite: Test run may be performed in cooling or heating mode.

Prerequisite: Test run should be performed in accordance with the operation manual of the indoor unit to make sure that all functions and parts are working properly.

- 1 In cooling mode, select the lowest programmable temperature. In heating mode, select the highest programmable temperature. Test run can be disabled if necessary.
- 2 When the test run is finished, set the temperature to a normal level. In cooling mode: 26~28°C, in heating mode: 20~24°C.
- 3 The system stops operating 3 minutes after the unit is turned OFF.



INFORMATION

- Even if the unit is turned OFF, it consumes electricity.
- When the power turns back on after a power break, the previously selected mode will be resumed.

LED is...	Diagnosis
ON	▪ Turn the power OFF and back ON, and check the LED within approximately 3 minutes. If the LED is ON again, the outdoor unit PCB is faulty.
OFF	1 Supply voltage (for power saving). 2 Power supply fault. 3 Turn the power OFF and back ON, and check the LED within approximately 3 minutes. If the LED is OFF again, the outdoor unit PCB is faulty.



DANGER: RISK OF ELECTROCUTION

- When the unit is not operating, the LEDs on the PCB are turned off in order to save power.
- Even when the LEDs are off, the terminal block and the PCB may be powered.

7 Disposal



NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts MUST comply with applicable legislation. Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery.

6 Troubleshooting

6.1 Fault diagnosis using LED on outdoor unit PCB


LED is...	Diagnosis
flashing	Normal. ▪ Check the indoor unit.



8 Technical data

8 Technical data

A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of latest technical data is available on the Daikin Business Portal (authentication required).

 8.1 Wiring diagram

Unified Wiring Diagram Legend					
For applied parts and numbering, refer to the wiring diagram on the unit. Part numbering is by Arabic numbers in ascending order for each part and is represented in the overview below by symbol "*" in the part code.					
	:	CIRCUIT BREAKER		:	PROTECTIVE EARTH
	:	CONNECTION		:	PROTECTIVE EARTH (SCREW)
	:	CONNECTOR		:	RECTIFIER
	:	EARTH		:	RELAY CONNECTOR
	:	FIELD WIRING		:	SHORT-CIRCUIT CONNECTOR
	:	FUSE		:	TERMINAL
	:	INDOOR UNIT		:	TERMINAL STRIP
	:	OUTDOOR UNIT		:	WIRE CLAMP
BLK : BLACK	GRN : GREEN	PNK : PINK	WHT : WHITE		
BLU : BLUE	GRY : GREY	PRP, PPL : PURPLE	YLW : YELLOW		
BRN : BROWN	ORG : ORANGE	RED : RED			
A*P	:	PRINTED CIRCUIT BOARD	PS	:	SWITCHING POWER SUPPLY
BS*	:	PUSHBUTTON ON/OFF, OPERATION SWITCH	PTC*	:	THERMISTOR PTC
BZ, H*O	:	BUZZER	Q*	:	INSULATED GATE BIPOLAR TRANSISTOR (IGBT)
C*	:	CAPACITOR	Q*DI	:	EARTH LEAK CIRCUIT BREAKER
AC*, CN*, E*, HA*, HE*, HL*, HN*,	:	CONNECTION, CONNECTOR	Q*L	:	OVERLOAD PROTECTOR
HR*, MR*_A, MR*_B, S*, U, V,			Q*M	:	THERMO SWITCH
W, X*A, K*R_*			R*	:	RESISTOR
D*, V*D	:	DIODE	R*T	:	THERMISTOR
DB*	:	DIODE BRIDGE	RC	:	RECEIVER
DS*	:	DIP SWITCH	S*C	:	LIMIT SWITCH
E*H	:	HEATER	S*L	:	FLOAT SWITCH
F*U, FU* (FOR CHARACTERISTICS, REFER TO PCB INSIDE YOUR UNIT)	:	FUSE	S*NPH	:	PRESSURE SENSOR (HIGH)
FG*	:	CONNECTOR (FRAME GROUND)	S*NPL	:	PRESSURE SENSOR (LOW)
H*	:	HARNESS	S*PH, HPS*	:	PRESSURE SWITCH (HIGH)
H*P, LED*, V*L	:	PILOT LAMP, LIGHT EMITTING DIODE	S*PL	:	PRESSURE SWITCH (LOW)
HAP	:	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	S*T	:	THERMOSTAT
HIGH VOLTAGE	:	HIGH VOLTAGE	S*RH	:	HUMIDITY SENSOR
IES	:	INTELLIGENT EYE SENSOR	S*W, SW*	:	OPERATION SWITCH
IPM*	:	INTELLIGENT POWER MODULE	SA*, F1S	:	SURGE ARRESTOR
K*R, KCR, KFR, KHuR, K*M	:	MAGNETIC RELAY	SR*, WLU	:	SIGNAL RECEIVER
L	:	LIVE	SS*	:	SELECTOR SWITCH
L*	:	COIL	SHEET METAL	:	TERMINAL STRIP FIXED PLATE
L*R	:	REACTOR	T*R	:	TRANSFORMER
M*	:	STEPPER MOTOR	TC, TRC	:	TRANSMITTER
M*C	:	COMPRESSOR MOTOR	V*, R*V	:	VARISTOR
M*F	:	FAN MOTOR	V*R	:	DIODE BRIDGE
M*P	:	DRAIN PUMP MOTOR	WRC	:	WIRELESS REMOTE CONTROLLER
M*S	:	SWING MOTOR	X*	:	TERMINAL
MR*, MRCW*, MRM*, MRN*	:	MAGNETIC RELAY	X*M	:	TERMINAL STRIP (BLOCK)
N	:	NEUTRAL	Y*E	:	ELECTRONIC EXPANSION VALVE COIL
n=*, N=*	:	NUMBER OF PASSES THROUGH FERRITE CORE	Y*R, Y*S	:	REVERSING SOLENOID VALVE COIL
PAM	:	PULSE-AMPLITUDE MODULATION	Z*C	:	FERRITE CORE
PCB*	:	PRINTED CIRCUIT BOARD	ZF, Z*F	:	NOISE FILTER
PM*	:	POWER MODULE			

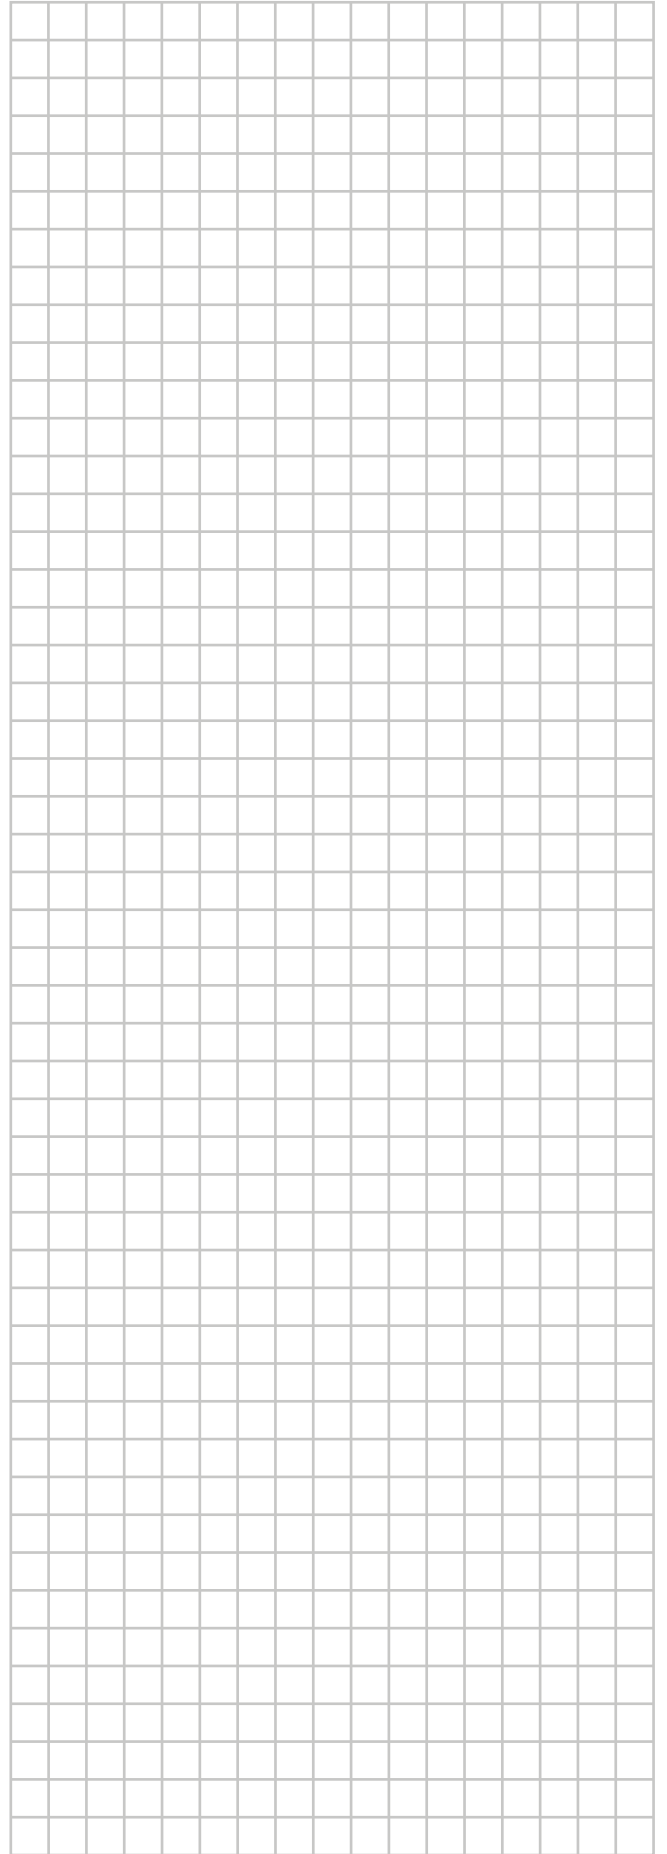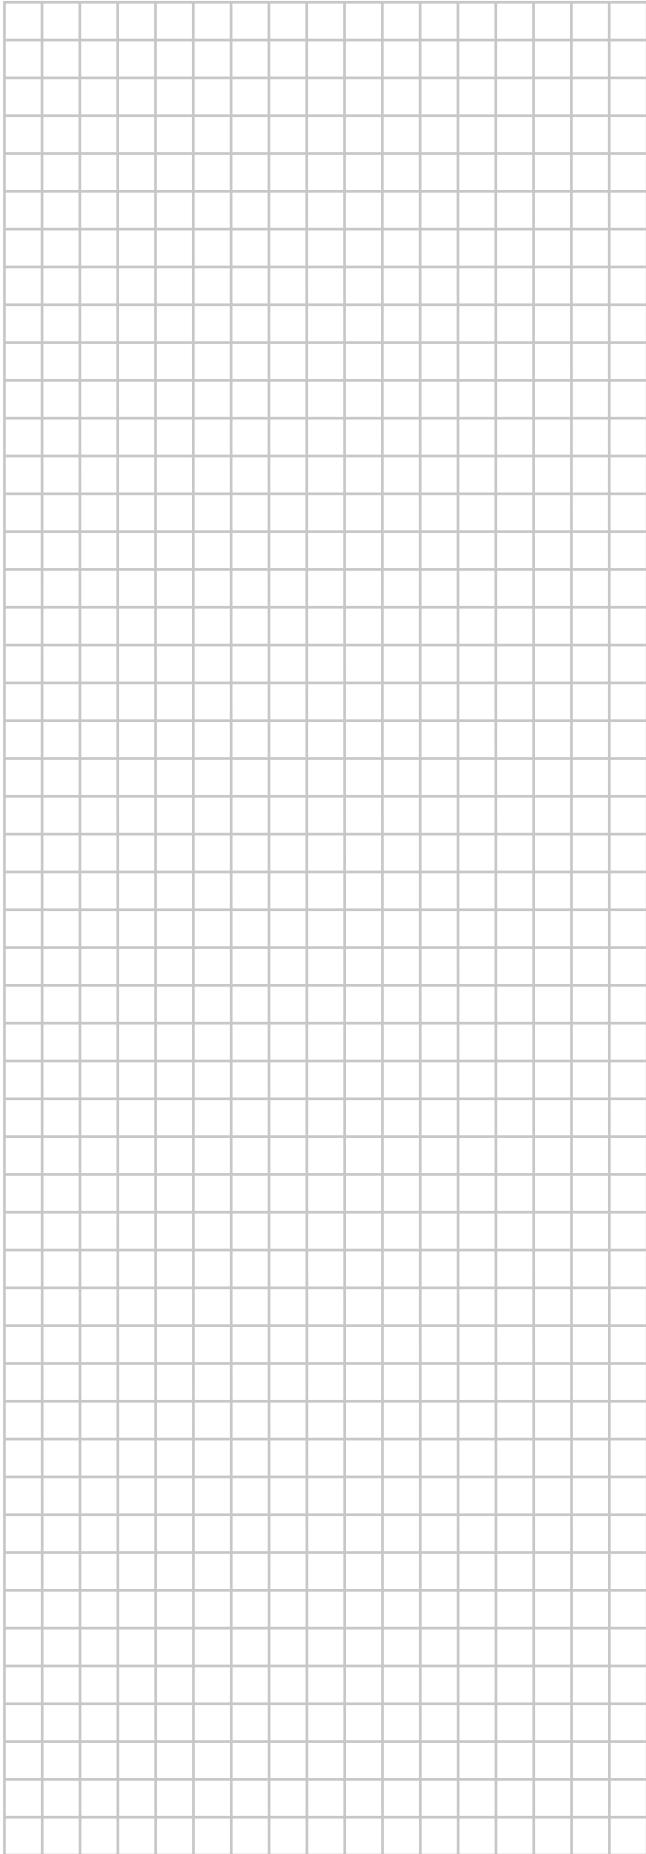

**DAIKIN ISITMA VE SOĞUTMA SİSTEMLERİ SAN.TİC. A.Ş.**

Gülsuyu Mahallesi, Fevzi Çakmak Caddesi, Burçak Sokak, No:20, 34848 Maltepe

İSTANBUL / TÜRKİYE

Tel: 0216 453 27 00

Faks: 0216 671 06 00

Çağrı Merkezi: 444 999 0

Web: www.daikin.com.tr

Copyright 2020 Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

3P519299-8R 2020.07