




AIR CONDITIONER

KEEP THIS MANUAL FOR FUTURE REFERENCE

SIMPLE REMOTE CONTROLLER

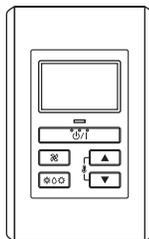

OPERATING MANUAL

FUJITSU GENERAL LIMITED

P/N 9371069029-05

English

SAFETY PRECAUTIONS

- The "SAFETY PRECAUTIONS" indicated in this manual contain important information pertaining to your safety. Be sure to observe them. For details of the operation methods, refer to this manual. Request the user to keep this manual on hand for future use, such as for relocating or repairing the unit.

WARNING

This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

- In the event of a malfunction (burning smell, etc.), immediately stop operation, turn off the electrical breaker, and consult authorized service personnel. Do not repair or modify any damaged cable by yourself. Let the authorized service personnel to do it. Improper work will cause a electric shock or a fire. This unit contains no user-serviceable parts. Always consult authorized service personnel for repairs. When moving, consult authorized service personnel for disconnection and installation of this unit. Do not touch with wet hands. It may cause an electric shock. If children may approach the unit, take preventive measures so that they cannot reach the unit. Do not repair or modify by yourself. It may cause a fault or accident. Do not use flammable gases near this equipment. It may cause a fire from leaking gas.

CAUTION

This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

- Do not set vessels containing a liquid on this unit. Doing so will cause heating, fire, or electric shock. Do not expose this unit directly to water. Doing so will cause trouble, electric shock, or heating. Dispose of the packing materials safely. Tear and dispose of the plastic packing bags so that children cannot play with them. There is the danger of suffocation if children play with the original plastic bags. Do not place electrical devices within 1 m of this unit. It may cause malfunction or failure. Do not use fire near this unit or place a heating apparatus nearby. It may cause malfunction. Do not touch the switches with sharp objects. Doing so will cause injury, trouble, or electric shock.

OPERATING TIPS

Cooling / heating priority

(AIRSTAGE™ (V-II Series Heat Pump model only))

- If another indoor unit in the same system is already operating in the cooling mode or dry mode, heating mode settings cannot be performed. An indoor unit that is set up as an Administrative Indoor Unit can operate in the AUTO mode. Administrative Indoor Unit: Special indoor unit is not restricted by the switching of cooling and heating described above.

TROUBLE SHOOTING

Before requesting service, perform the following checks:

Table with 2 columns: Symptom, Problem. Row 1: Symptom: Doesn't operate at all. Problem: Has there been a power failure? Has a fuse blown out, or a circuit breaker been tripped? Is the main power switch set to the OFF position? It is being controlled centralized?

If the problem persists after performing these checks, or if you notice burning smells, or the operation lamp flashes, immediately stop operation, turn off the electrical breaker and consult authorized service personnel.

SPECIFICATIONS

Table with 2 columns: Specification, Value. Rows: MODEL (UTY-RSKY/UTY-RSKG/UTY-RSKYT), POWER (DC12V), DIMENSION & WEIGHT (HEIGHT: 120 mm, WIDTH: 75 mm, DEPTH: 14 mm, WEIGHT: UTY-RSKY/UTY-RSKG: 90 g, UTY-RSKYT: 100 g)

# OPERATION

Instructions on heating are not applicable for the "COOLING-ONLY" models.


## START / STOP

Each press of the "⏻/⏮" button alternates operation and stop. When operating, operation lamp (green)  will light up.

## FAN SPEED

Press the "🌀" button to select the fan speed while in operation.

### i NOTES

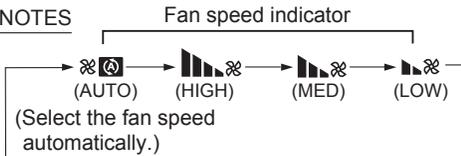

## OPERATION MODE

Press "🌀⊙⚙️" button to select the operation mode while in operation.

### i NOTES



- \* A heat pump model that is not set up as an Administrative Indoor Unit cannot operate in the AUTO modes.
- \*\* FAN cannot be selected for a heat pump model. Refer to details in the Administrative Indoor Unit OPERATING TIPS.
- \*\*\* Heating operation can not be performed in the "COOLING-ONLY" models.

- If the priority mode is set to "Priority on Administrative Indoor Unit", the operating mode of other indoor units except Administrative Indoor Unit will be controlled by an Administrative Indoor Unit.
- If the operating mode of Administrative Indoor Unit is set to "AUTO", "AUTO" is displayed in addition to the indicator of current operating mode on other wired remote controllers except Administrative Indoor Unit. In this case, operation of other indoor units is controlled by the Administrative Indoor Unit.


Ex. : When operating mode of the Administrative Indoor Unit is set to "AUTO" while air conditioning setting. (The indication on other wired remote controllers except Administrative Indoor Unit).

When Administrative Indoor Unit is set to "AUTO".



### i NOTES

- (1) When  is displayed, there are functions for which settings cannot be made. When a button is pushed to change a restricted setting,  will flash.
  - (2) When  is displayed, some operation are restricted. In such case, contact the administrator.
  - (3) During Automatic Defrosting operation and Oil Recovery operation,  will be displayed on the remote controller.
  - (4) • When "⊙!" or "⊙!" is indicated on the temperature indicator, it means under maintenance.  
• When "RF" is indicated on the temperature indicator, anti freeze function is activated. However, this function cannot be operated by the remote controller.
  - (5) Preset values are displayed when the "🌀⊙⚙️" button, the "🌀 ▲" button or "🌀 ▼" button, the "🌀" button is pressed while stopping.
  - (6) Mode indication blinks when inoperative setting of indoor unit is made.
  - (7) Blinking of the fan speed indicator means the timing for filter cleaning of the indoor unit.
- To erase indication, press the "🌀" button for more than 2 seconds.

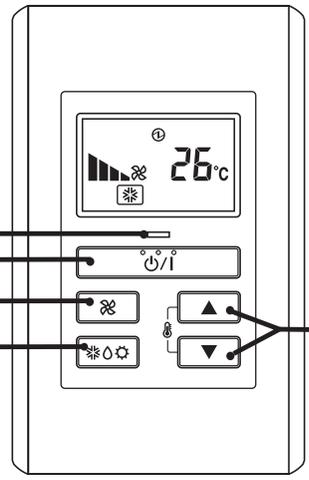

## TEMPERATURE

Press the "🌀 ▲" button or "🌀 ▼" button to set the room temperature while in operation.


### i NOTES

Temperature setting range	AUTO	18 to 30°C
	COOL/DRY	18 to 30°C
	HEAT	10 to 30°C

- \* Room temperatures as low as 10 to 15 °C cannot be set depending on the model. (Heating)
- \* The temperature setting should be considered a standard value, and may differ somewhat from the actual room temperature.

## ERROR CODE

If an error occurs, the following indicator will be shown. ("Er" will appear in the set room temperature indicator.)  
**If "Er" is displayed, immediately contact authorized service personnel. Do not used the operation as shown to the right if an error has occurred.**  
Occurrence of an error is indicated by the blinking of operation lamp.

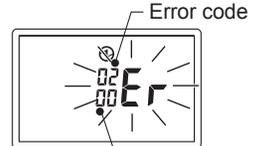

Faulty unit No. (0-15, C0)  
Ex. Error code