

**SPLIT TYPE
ROOM AIR CONDITIONER**

**CASSETTE type
INVERTER**

SERVICE INSTRUCTION

Models	Indoor unit	Outdoor unit
	AU*24LUAR	AO*24LMAKL
	AU*30LUAS	AO*30LMAWL
	AU*36LUAS	AO*36LMAWL
	AU*45LUAS	AO*45LJBYL
	AU*54LUAS	AO*54LJBYL

Refrigerant

R410A

CONTENTS

1. SPECIFICATIONS

SPECIFICATIONS.....	01-01
---------------------	-------

2. DIMENSIONS

DIMENSIONS.....	02-01
-----------------	-------

3. REFRIGERANT SYSTEM DIAGRAM

REFRIGERANT CIRCUIT.....	03-01
--------------------------	-------

4. CIRCUIT DIAGRAM

CIRCUIT DIAGRAM.....	04-01
----------------------	-------

5. DESCRIPTION OF EACH CONTROL OPERATION

5-1 COOLING OPERATION.....	05-01
5-1-1 COOLING CAPACITY CONTROL.....	05-01
5-2 HEATING OPERATION.....	05-02
5-2-1 HEATING CAPACITY CONTROL.....	05-02
5-3 DRY OPERATION.....	05-03
5-3-1 INDOOR UNIT CONTROL.....	05-03
5-4 AUTO CHANGEOVER OPERATION.....	05-04
5-5 INDOOR FAN CONTROL.....	05-05
5-6 OUTDOOR FAN CONTROL.....	05-07
5-7 LOUVER CONTROL.....	05-08
5-8 COMPRESSOR CONTROL.....	05-09
5-9 TIMER OPERATION CONTROL.....	05-11
5-10 ELECTRONIC EXPANSION VALVE CONTROL.....	05-13
5-11 TEST OPERATION CONTROL.....	05-13
5-12 PREVENT TO START FOR 3 MINUTES (3 MINUTES ST).....	05-13
5-13 4-WAY VALVE EXTENSION SELECT.....	05-13
5-14 AUTO RESTART.....	05-13
5-15 PUMP DOWN (For AU*30/ 36/ 45/ 54LUAS).....	05-14
5-16 COMPRESSOR PREHEATING.....	05-14
5-17 DEFROST OPERATION CONTROL.....	05-15
5-18 DRAIN PUMP OPERATION.....	05-18
5-19 ENERGY SAVE FUNCTION.....	05-18
5-20 VARIOUS PROTECTIONS.....	05-19

6. REFRIGERANT CAUTION -R410A-

6-1 R410A TOOLS	06-01
6-2 PRECAUTION FOR INSTALLATION	06-02
6-3 PRECAUTION FOR SERVICING	06-04
6-4 NEW REFRIGERANT R410A	06-05
6-5 DEFERENCE FROM CONVENTIONAL MODEL (R22) AND PRECAUTIONS	06-08

7. TROUBLE SHOOTING

7-1 ERROR DISPLAY	07-01
7-1-1 WIRED REMOTE CONTROLLER DISPLAY.....	07-01
7-1-2 OUTDOOR UNIT DISPLAY.....	07-03
7-2 TROUBLE SHOOTING WITH ERROR CODE	07-04
7-3 TROUBLE SHOOTING WITH NO ERROR CODE	07-24
7-4 SERVICE PARTS INFORMATION	07-29

8. APPENDING DATA

8-1 CAPACITY TABLE	08-01
8-2 OPERATION RANGE	08-06
8-3 ELECTRIC CHARACTERISTICS	08-07
8-4 SAFETY DEVICE	08-09
8-5 FUNCTION SETTING	08-11
8-5-1 INDOOR UNIT.....	08-11
8-5-2 OUTDOOR UNIT (AO*30/ 36LMAWL).....	08-13
8-5-3 OUTDOOR UNIT (AO*45/ 54LJBYL).....	08-15
8-5-4 WIRED REMOTE CONTROLLER.....	08-17

9. INSTALLATION MANUAL

10. REPLACEMENT PARTS

1 REPLACEMENT PARTS (For OUTDOOR UNIT)	10-01
1-1 For AOU18/ 24LMAKL.....	10-01
1-1-1 PARTS LAYOUT DRAWING.....	10-01
1-1-2 WIRING.....	10-03
1-1-3 DISASSEMBLY PROCESS.....	10-04
1-2 For AO*30/ 36LMAWL.....	10-08
1-2-1 PARTS LAYOUT DRAWING.....	10-08
1-2-2 WIRING.....	10-10
1-2-3 DISASSEMBLY PROCESS.....	10-11
1-2-4 ASSEMBLY PROCESS of INVERTER UNIT.....	10-16
1-3 For AO*45/ 54LJBYL.....	10-21
1-3-1 PARTS LAYOUT DRAWING.....	10-21
1-3-2 WIRING.....	10-23
1-3-3 DISASSEMBLY PROCESS.....	10-25
1-3-4 ASSEMBLY PROCESS of INVERTER UNIT.....	10-31
2 REPLACEMENT PARTS (For INDOOR UNIT)	10-36
2-1 PARTS LAYOUT DRAWING.....	10-36

CASSETTE type INVERTER

1 . SPECIFICATIONS

1. SPECIFICATIONS

TYPE				CASSETTE MODELS		
				INVERTER HEAT PUMP TYPE		
MODEL NAME		INDOOR		AU*24LUAR		
		OUTDOOR		AO*24LMAKL		
POWER SOURCE				230V~ 50Hz		
AVAILABLE VOLTAGE RANGE				198-264V~ 50Hz		
EUROPEAN ENERGY LABEL			COOLING	C		
CAPACITY	COOLING	RATED / MAX	kW	7.10/8.00		
			BTU/h	24200/27300		
	HEATING	RATED / MAX	kW	7.80/9.00		
			BTU/h	26600/30700		
INPUT POWER	COOLING	RATED / MAX	kW	2.53/2.98		
	HEATING	RATED / MAX	kW	2.40/2.98		
CURRENT	COOLING	RATED / MAX	A	11.1/13.0		
	HEATING	RATED / MAX		10.5/13.0		
STARTING CURRENT			A	10		
EER		COOLING	kW/kW	2.81		
COP		HEATING		3.25		
MOISTURE REMOVAL			l/h(pints/h)	2.0(4.2)		
AIR CIRCULATION COOL/HEAT	INDOOR	High	m ³ /h	1250/1250		
		Med		1080/1080		
		Low		920/920		
	OUTDOOR	High		3200/3200		
High		r.p.m		540/490		
Med				480/430		
Low	390/340					
Quiet	-					
OUTDOOR	High		780/780			
	Low		400/400			
FAN TYPE x Qty		INDOOR		Turbo x 1		
		OUTDOOR		Propeller x 1		
FAN MOTOR OUTPUT		INDOOR	W	40		
		OUTDOOR		65		
NOISE LEVEL (SOUND PRESSURE)	INDOOR	High	dB(A)	46/46		
		Med		44/44		
		Low		39/39		
COOL/HEAT	OUTDOOR			52/54		
COMPRESSOR	TYPE			Hermetic type, 4 poles, DC motor, TWIN ROTARY		
	OUTPUT			W	1300	
	STARTING METHOD			Inverter		
HEAT EXCHANGER TYPE	INDOOR	Coil		Copper tube		
		Fin		Aluminium		
		Rows x Stages		2 x 10		
		Fin Pitch	mm	1.30		
	Coil Dimensions	210 x 970 x 26.6				
	OUTDOOR	Coil		Copper tube		
		Fin		Aluminium		
		Rows x Stages		2 x 30		
Fin Pitch		mm	1.45			
Coil Dimensions	630 x 901 x 36.38					
CASING COLOR		INDOOR	White (5Y9/0.5NN)			
		OUTDOOR	Beige(10YR7.5/1.0NN)			
DIMENSIONS H x W x D	INDOOR	NET	mm	246 x 830 x 830		
	OUTDOOR			650 x 830 x 320		
	INDOOR	GROSS		355 x 1060 x 1025		
	OUTDOOR			743 x 984 x 413		
WEIGHT	INDOOR	NET / GROSS	kg(lbs)	34/44(75/97)		
	OUTDOOR			54/58(119/128)		
PIPE	CONNECTION METHOD			FLARE		
	SIZE	LIQUID	mm	φ9.52(3/8inc)		
		GAS		φ15.88(5/8inc)		
	MAX LENGTH		m	25(chargeless: 10)		
MAX HEIGHT		m	15			
REFRIGERANT		TYPE		R410A		
		CHARGE	g	1800		
REFRIGERANT OIL		TYPE		POE		
REMOTE CONTROLLER				Wired		
DRAIN PIPE	MATERIAL			ABS		
	SIZE		mm	Outer diameter 37.0/Inner diameter 32.0		

Note: Specifications are based on the following conditions.
Cooling: Indoor temperature of 27 °CDB / 19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB.
Heating: Indoor temperature of 20 °CDB / 15 °CWB, and outdoor temperature of 7 °CDB/6 °CWB.
Pipe length : 7.5 m, Height difference : 0 m.(Outdoor unit - Indoor unit)

TYPE				CASSETTE MODELS	
				INVERTER HEAT PUMP TYPE	
MODEL NAME	INDOOR		AU*30LUAS	AU*36LUAS	
	OUTDOOR		AO*30LMAWL	AO*36LMAWL	
POWER SOURCE			230V ~ 50Hz	230V ~ 50Hz	
AVAILABLE VOLTAGE RANGE			198-264V ~ 50Hz		
EUROPEAN ENERGY LABEL			C	E	
CAPACITY	COOLING	RATED/MAX	kW	8.50/10.00	10.00/11.20
			BTU/h	29000/34100	34100/38200
	HEATING	RATED/MAX	kW	10.00/11.20	11.20/12.77
			BTU/h	34100/38200	38200/43600
INPUT POWER	COOLING	RATED/MAX	kW	2.86/3.46	4.01/4.08
	HEATING	RATED/MAX		2.84/3.37	3.49/4.15
CURRENT	COOLING	RATED/MAX	A	12.5/15.2	17.6/17.9
	HEATING	RATED/MAX		12.4/14.8	15.2/18.2
STARTING CURRENT			A	15	15
EER		COOLING	kW/kW		2.97
COP		HEATING	kW/kW		3.52
MOISTURE REMOVAL			l/h (pints/h)	3.0(6.3)	4.0(8.4)
AIR CIRCULATION COOL/HEAT	INDOOR	High	m ³ /h	1550/1550	
		Med		1300/1300	
		Low		1100/1100	
	OUTDOOR	High		3600/3800	
FAN SPEED COOL/HEAT	INDOOR	High	r.p.m	600/600	
		Med		490/490	
		Low		420/420	
		Quiet		-/-	
	OUTDOOR	High		850/900	
FAN TYPE x Q'ty		INDOOR		Turbo × 1	
		OUTDOOR		Propeller × 1	
FAN MOTOR OUTPUT		INDOOR	W	100	
		OUTDOOR		103	
NOISE LEVEL (SOUND PRESSURE)	INDOOR	High	dB(A)	48.0/48.0	
		Med		44.0/44.0	
		Low		41.0/41.0	
COOL/HEAT	OUTDOOR			53.0/55.0	54.0/55.0
COMPRESSOR	TYPE		DC TWIN ROTARY(INVERTER)		
	OUTPUT		W	1300	
	STARTING METHOD		INVERTER		
HEAT EXCHANGER TYPE	INDOOR	Coil		Copper tube	
		Fin		Aluminium	
		Rows × Stages		2 × 12	
		Fin Pitch	mm	1.30	
	Coil Dimensions			252 × 970 × 26.6	
	OUTDOOR	Coil		Copper tube	
		Fin		Aluminium	
		Rows × Stages		2 × 38	
Fin Pitch		mm	1.30		
Coil Dimensions			798 × 900 × 36.38		
CASING COLOR		INDOOR		White(5Y9/0.5NN)	
		OUTDOOR		Beige(10YR7.5/1.0NN)	
DIMENSIONS H × W × D	INDOOR	NET	mm	296 × 830 × 830	
	OUTDOOR			830 × 900 × 330	
	INDOOR	GROSS		455 × 1060 × 1025	
	OUTDOOR			970 × 1050 × 445	
WEIGHT	INDOOR	NET /	kg(lbs)	37/52(82/115)	
	OUTDOOR	GROSS		64/70(141/154)	
PIPE	CONNECTION METHOD			FLARE	
	SIZE	LIQUID	mm	φ9.52(3/8 inc.)	
		GAS		φ15.88(5/8 inc.)	
	MAX LENGTH		m	50(chargeless:15)	
	MAX HEIGHT		m	30	
REFRIGERANT		TYPE	R410A		
		CHARGE	g	2200	
REFRIGERANT OIL		TYPE		POE	
OPERATION(OUTDOOR)	COOLING	°C	-10 to 43		
	HEATING		-10 to 24		
REMOTE CONTROLLER			WIRED		
DRAIN PIPE	MATERIAL			ABS	
	SIZE		mm	Outer diameter 37.0 / Inner diameter 32.0	

Note: Specifications are based on the following conditions.
Cooling: Indoor temperature of 27 °CDB / 19 °CWB and outdoor temperature of 35 °CDB/24 °CWB.
Heating: Indoor temperature of 20 °CDB / 15 °CWB and outdoor temperature of 7 °CDB/6 °CWB.
Pipe length : 7.5 m, Height difference : 0 m.(Outdoor unit - Indoor unit)

TYPE				CASSETTE TYPE	
				INVERTER HEAT PUMP TYPE	
MODEL NAME		INDOOR		AU*45LUAS	
		OUTDOOR		AO*45LJBYL	
POWER SOURCE				230V ~ 50Hz	
AVAILABLE VOLTAGE RANGE				198-264V ~ 50Hz	
CAPACITY	COOLING	RATED / MAX	kW	12.5 / 14.0	
			BTU/h	42700 / 47800	
	HEATING	RATED / MAX	kW	14.0 / 16.0	
			BTU/h	48000 / 56300	
INPUT POWER	COOLING	RATED / MAX	kW	4.45 / 5.15	
	HEATING	RATED / MAX		3.95 / 4.60	
CURRENT	COOLING	RATED / MAX	A	19.5 / 22.6	
	HEATING	RATED / MAX		17.3 / 20.0	
STARTING CURRENT			A	15	
EER		COOLING	kW/kW	2.81	
COP		HEATING		3.54	
MOISTURE REMOVAL			l/h(pints/h)	4.5(9.5)	
AIR CIRCULATION COOL/HEAT	INDOOR	High	m ³ /h	1700/1700	
		Med		1420/1420	
		Low		1200/1200	
		Quiet		-	
	OUTDOOR	High		6600/6600	
		Low		-	
FAN SPEED COOL/HEAT	INDOOR	High	r.p.m	680/680	
		Med		580/580	
		Low		500/500	
		Quiet		-	
	OUTDOOR	High		Upper fan : 850/850 Lower fan : 750/750	
		Low		-	
FAN TYPE x Q'ty		INDOOR		Turbo x 1	
		OUTDOOR		Propeller x 2	
FAN MOTOR OUTPUT		INDOOR	W	100	
		OUTDOOR		103 x 2	
NOISE LEVEL (SOUND PRESSURE) COOL/HEAT	INDOOR	High	dB(A)	50 / 50	
		Med		48 / 48	
		Low		45 / 45	
		Quiet		-	
	OUTDOOR	High		54 / 55.5	
		Low		-	
COMPRESSOR	TYPE		DC SCROLL(INVERTER)		
	OUTPUT	W	2500		
	STARTING METHOD		Inverter		
HEAT EXCHANGER TYPE	INDOOR	Coil	Copper tube		
		Fin	Aluminium		
		Rows x Stages	3 x 12		
		Fin Pitch	mm	1.4	
		Coil Dimensions		252 x 970 x 39.9	
	OUTDOOR	Coil	Copper tube		
		Fin	Aluminium		
		Rows x Stages	2 x 60		
		Fin Pitch	mm	1.3	
		Coil Dimensions		1260 x 900 x 36.38	
CASING COLOR		INDOOR	White(5Y9/0.5NN)		
		OUTDOOR	Beige(10YR7.5/1.0NN)		
DIMENSIONS H x W x D	INDOOR	NET	mm	296 x 830 x 830	
	OUTDOOR			1290 x 900 x 330	
	INDOOR	GROSS		455 x 1060 x 1025	
	OUTDOOR			1430 x 1050 x 445	
WEIGHT	INDOOR	NET /	kg(lbs)	40/55(88/121)	
	OUTDOOR	GROSS		105/112(231/247)	
PIPE	CONNECTION METHOD			FLARE	
	SIZE	LIQUID	mm	φ9.52(3/8 inc.)	
		GAS		φ15.88(5/8 inc.)	
	MAX LENGTH		m	70 (chargeless:20)	
MAX HEIGHT		m	30		
REFRIGERANT		TYPE		R410A	
		CHARGE	g	3400	
REFRIGERANT OIL		TYPE		POE	
OPERATION(OUTDOOR)		COOLING	°C	-15 to 43	
		HEATING		-15 to 24	
REMOTE CONTROLLER				WIRED	
DRAIN PIPE	MATERIAL			ABS	
	SIZE	mm	Outer diameter 37.0 / Inner diameter 32.0		

Note: Specifications are based on the following conditions.
Cooling: Indoor temperature of 27 °CDB / 19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB.
Heating: Indoor temperature of 20 °CDB / 15 °CWB, and outdoor temperature of 7 °CDB/6 °CWB.
Pipe length : 7.5 m, Height difference : 0 m. (Outdoor unit - Indoor unit)

TYPE			CASSETTE MODELS			
			INVERTER HEAT PUMP TYPE			
MODEL NAME	INDOOR		AUT30LUAS	AUT36LUAS		
	OUTDOOR		AOT30LMAWL	AOT36LMAWL		
POWER SOURCE			240V ~ 50Hz	240V ~ 50Hz		
AVAILABLE VOLTAGE RANGE			198-264V ~ 50Hz			
CAPACITY	COOLING	RATED/MAX	kW	8.50 / 10.00	10.00 / 11.20	
			BTU/h	29000 / 34100	34100 / 38200	
	HEATING	RATED/MAX	kW	10.00 / 11.20	11.20 / 12.77	
			BTU/h	34100 / 38200	38200 / 43600	
INPUT POWER	COOLING	RATED/MAX	kW	2.86 / 3.50	4.01 / 4.20	
	HEATING	RATED/MAX		2.84 / 3.50	3.49 / 4.20	
CURRENT	COOLING	RATED/MAX	A	12.0 / 14.6	16.8 / 17.5	
	HEATING	RATED/MAX		11.9 / 14.6	14.6 / 17.5	
STARTING CURRENT			A	15	15	
EER	COOLING		kW/kW	2.97	2.49	
COP	HEATING			3.52	3.21	
MOISTURE REMOVAL			l/h (pints/h)	3.0(6.3)	4.0(8.40)	
AIR CIRCULATION COOL/HEAT	INDOOR	High	m ³ /h	1600 / 1600		
		Med		1350 / 1350		
		Low		1150 / 1150		
	OUTDOOR	High	3600 / 3800			
FAN SPEED COOL/HEAT	INDOOR	High	r.p.m	620 / 620		
		Med		510 / 510		
		Low		440 / 440		
		Quiet		-		
	OUTDOOR	High	850 / 900			
FAN TYPE x Q'ty			INDOOR	Turbo x 1		
			OUTDOOR	Propeller x 1		
FAN MOTOR OUTPUT			INDOOR	W	100	
			OUTDOOR		103	
NOISE LEVEL (SOUND PRESSURE)	INDOOR	High	dB(A)	48.0 / 48.0		
		Med		44.0 / 44.0		
		Low		41.0 / 41.0		
COOL/HEAT	OUTDOOR			53.0 / 55.0	54.0 / 55.0	
COMPRESSOR	TYPE		DC TWIN ROTARY(INVERTER)			
	OUTPUT	W	1300			
	STARTING METHOD		INVERTER			
HEAT EXCHANGER TYPE	INDOOR	Coil	Copper tube			
		Fin	Aluminium			
		Rows x Stages	2 x 12			
		Fin Pitch	mm	1.30		
	Coil Dimensions	252 x 970 x 26.6				
	OUTDOOR	Coil	Copper tube			
		Fin	Aluminium			
		Rows x Stages	2 x 38			
Fin Pitch		mm	1.30			
Coil Dimensions	798 x 900 x 36.38					
CASING COLOR			INDOOR	White(5Y9/0.5NN)		
			OUTDOOR	Beige(10YR7.5/1.0NN)		
DIMENSIONS H x W x D	INDOOR	NET	mm	296 x 830 x 830		
	OUTDOOR			830 x 900 x 330		
	INDOOR	GROSS		455 x 1060 x 1025		
	OUTDOOR			970 x 1050 x 445		
WEIGHT	INDOOR	NET	kg(lb)	37 (82)		
	OUTDOOR			64 (141)		
	INDOOR	GROSS		52 (115)		
	OUTDOOR			70 (154)		
PIPE	CONNECTION METHOD			FLARE		
	SIZE	LIQUID	mm	φ9.52(3/8 inc.)		
		GAS		φ15.88(5/8 inc.)		
	MAX LENGTH			m	50(chargeless:15)	
	MAX HEIGHT			m	30	
REFRIGERANT	TYPE		R410A			
	CHARGE	g	2200			
REFRIGERANT OIL	TYPE		POE			
OPERATION(OUTDOOR)	COOLING	°C	-10 to 43			
	HEATING		-10 to 24			
REMOTE CONTROLLER			WIRED			
DRAIN PIPE	MATERIAL			ABS		
	SIZE	mm	Outer diameter 37.0 / Inner diameter 32.0			

Note: Specifications are based on the following conditions.
Cooling: Indoor temperature of 27 °CDB / 19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB.
Heating: Indoor temperature of 20 °CDB / 15 °CWB, and outdoor temperature of 7 °CDB/6 °CWB.
Pipe length : 7.5 m, Height difference : 0 m.(Outdoor unit - Indoor unit)

TYPE				CASSETTE MODELS	
				INVERTER HEAT PUMP TYPE	
MODEL NAME		INDOOR		AUT45LUAS	AUT54LUAS
		OUTDOOR		AOT45LJBYL	AOT54LJBYL
POWER SOURCE				240V~ 50Hz	240V~ 50Hz
AVAILABLE VOLTAGE RANGE				198-264V ~ 50Hz	198-264V ~ 50Hz
CAPACITY	COOLING	RATED / MAX	kW	12.5 / 14.0	14.0 / 14.5
			BTU/h	42700 / 47800	47800 / 49500
	HEATING	RATED / MAX	kW	14.0 / 16.0	16.0 / 16.5
			BTU/h	48000 / 56300	54600 / 56300
INPUT POWER	COOLING	RATED / MAX	kW	4.45 / 5.15	5.60 / 5.70
	HEATING	RATED / MAX	kW	3.95 / 4.60	4.85 / 5.20
CURRENT	COOLING	RATED / MAX	A	18.6 / 22.6	23.5 / 24.0
	HEATING	RATED / MAX	A	16.6 / 20.0	20.4 / 21.8
STARTING CURRENT			A	15	15
EER		COOLING	kW/kW	2.81	2.50
COP		HEATING	kW/kW	3.54	3.30
MOISTURE REMOVAL			l/h(pints/h)	4.5(9.5)	5.5(11.6)
AIR CIRCULATION COOL/HEAT	INDOOR	High	m ³ /h	1750/1750	1750/1750
		Med		1470/1470	1470/1470
		Low		1250/1250	1250/1250
	Quiet	-		-	
OUTDOOR	High	6600/6600	6600/6600		
	Low	-	-		
FAN SPEED COOL/HEAT	INDOOR	High	r.p.m	700/700	700/700
		Med		600/600	600/600
		Low		520/520	520/520
		Quiet		-	-
	OUTDOOR	High		Upper fan 850 , Lower fan 750	Upper fan : 850 , Lower fan : 750
		Low		-	-
FAN TYPE × Qty		INDOOR		Turbo × 1	Turbo × 1
		OUTDOOR		Propeller × 2	Propeller × 2
FAN MOTOR OUTPUT		INDOOR	W	100	100
		OUTDOOR	W	103 × 2	103 × 2
NOISE LEVEL (SOUND PRESSURE) COOL/HEAT	INDOOR	High	dB(A)	51 / 51	51 / 51
		Med		49 / 49	49 / 49
		Low		46 / 46	46 / 46
		Quiet		-	-
OUTDOOR				54 / 55.5	54 / 55.5
COMPRESSOR	TYPE			DC SCROLL(INVERTER)	DC SCROLL(INVERTER)
	OUTPUT		W	2500	2500
	STARTING METHOD			Inverter	Inverter
HEAT EXCHANGER TYPE	INDOOR	Coil	mm	Copper tube	Copper tube
		Fin		Aluminium	Aluminium
		Rows x Stages		3 × 12	3 × 12
		Fin Pitch		1.4	1.4
	Coil Dimensions	252 × 970 × 39.9		252 × 970 × 39.9	
	OUTDOOR	Coil		Copper tube	Copper tube
		Fin		Aluminium	Aluminium fin
		Rows x Stages		2 × 60	2 × 60
Fin Pitch		1.3	1.3		
Coil Dimensions	1260 × 900 × 36.38	1260 × 900 × 36.38			
CASING COLOR		INDOOR		White(5Y9/0.5NN)	White(5Y9/0.5NN)
		OUTDOOR		Beige(10YR7.5/1.0NN)	Beige(10YR7.5/1.0NN)
DIMENSIONS H × W × D	INDOOR	NET	mm	296 × 830 × 830	296 × 830 × 830
		OUTDOOR		1290 × 900 × 330	1290 × 900 × 330
	OUTDOOR	GROSS		455 × 1060 × 1025	455 × 1060 × 1025
				1430 × 1050 × 445	1430 × 1050 × 445
WEIGHT	INDOOR	NET / GROSS	kg(lbs)	40/55 (88/121)	40/55 (88/121)
	OUTDOOR			105/112 (231/247)	105/112 (231/247)
PIPE	CONNECTION METHOD			FLARE	FLARE
	SIZE	LIQUID	mm	φ9.52(3/8 inc.)	φ9.52(3/8 inc.)
		GAS		φ15.88(5/8 inc.)	φ15.88(5/8 inc.)
	MAX LENGTH		m	70 (chargeless:20)	70 (chargeless : 20)
	MAX HEIGHT		m	30	30
REFRIGERANT		TYPE		R410A	R410A
		CHARGE	g	3400	3400
REFRIGERANT OIL		TYPE		POE	POE
OPERATION(OUTDOOR)	COOLING	°C		-15 to 43	-15 to 43
	HEATING		-15 to 24	-15 to 24	
REMOTE CONTROLLER TYPE			WIRED	WIRED	
DRAIN PIPE	MATERIAL			ABS	ABS
	SIZE		mm	Outer diameter 37.0 / Inner diameter 32.0	Outer diameter 37.0 / Inner diameter 32.0


Note: Specifications are based on the following conditions.
Cooling: Indoor temperature of 27 °CDB / 19 °CWB, and outdoor temperature of 35 °CDB/24 °CWB.
Heating: Indoor temperature of 20 °CDB / 15 °CWB, and outdoor temperature of 7 °CDB/6 °CWB.
Pipe length : 7.5 m, Height difference : 0 m.(Outdoor unit - Indoor unit)

CASSETTE type INVERTER


2 . DIMENSIONS

2. DIMENSIONS


■ MODEL : AU*24LUAR

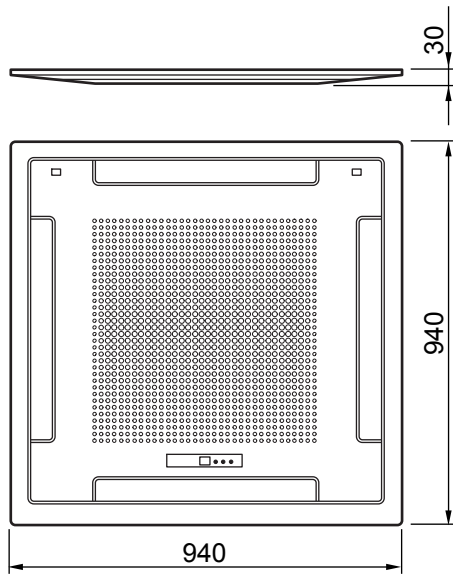


Bottom view (Panel)

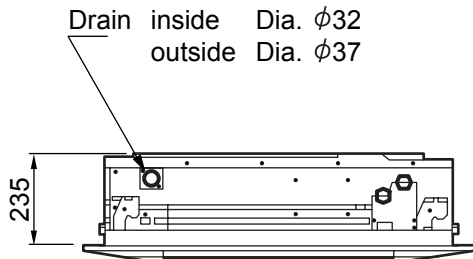

Side view (Standard setting)

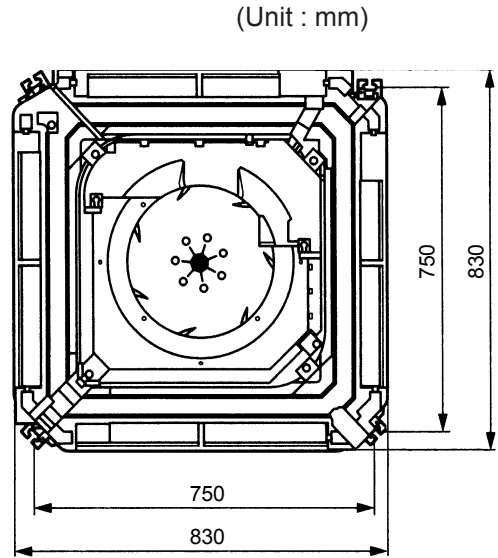


Bottom view

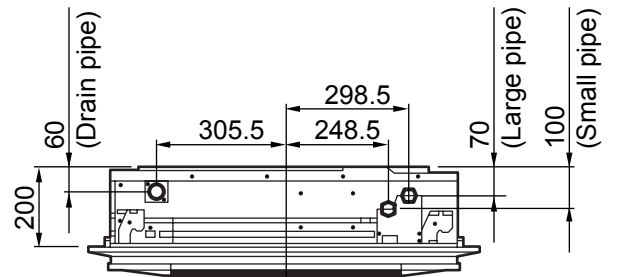


Side view (Slender setting)

■ MODEL : AO*24LMAKL

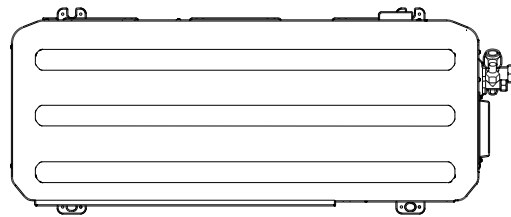


Top view

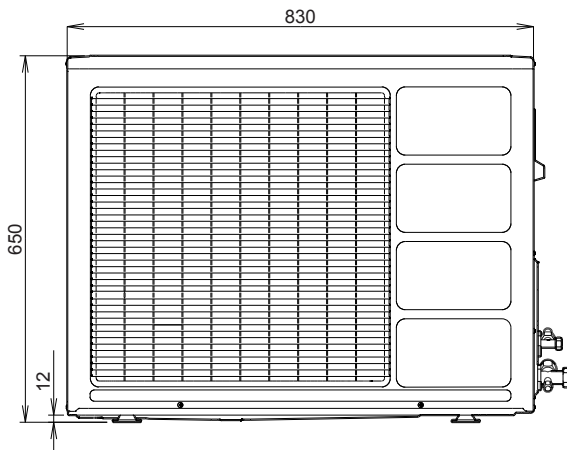


Front view

(Unit : mm)

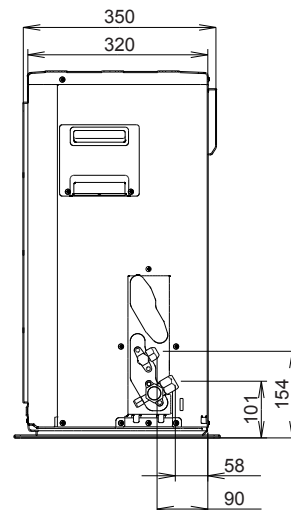


Side view



■ MODEL : AU*30/ 36LUAS

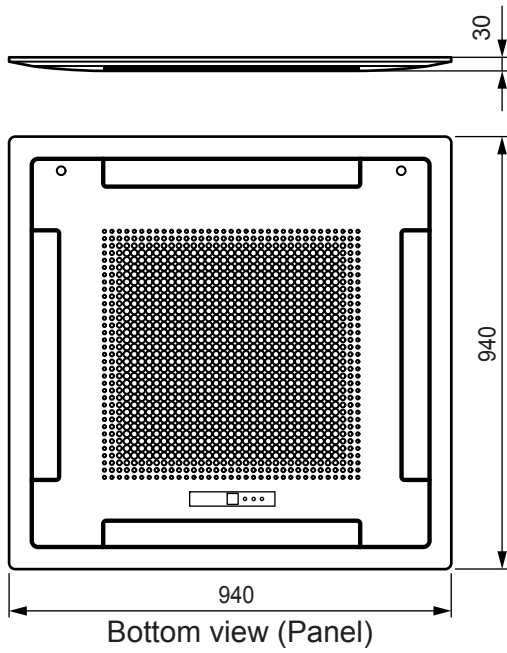


(Unit : mm)

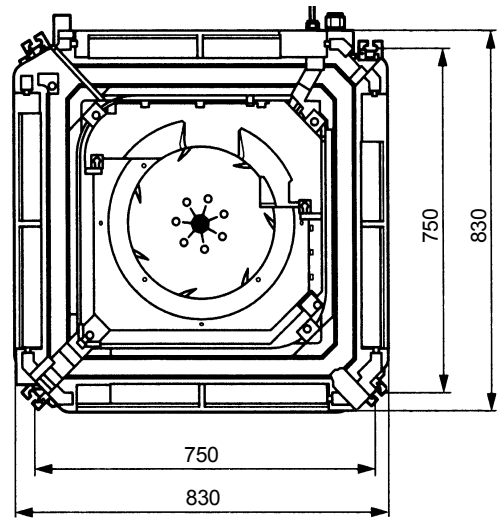




Bottom view

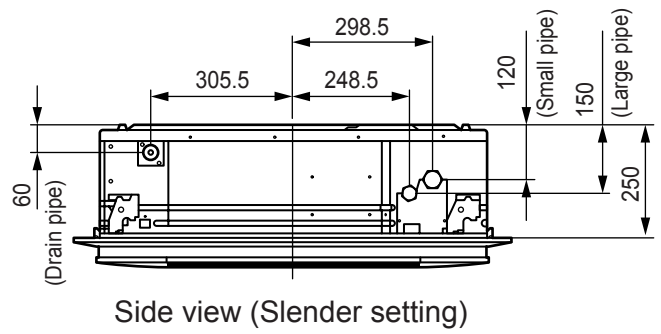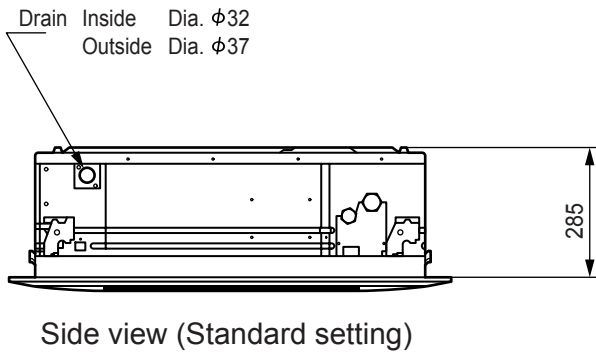


■ MODEL : AO*30/ 36LMAWL

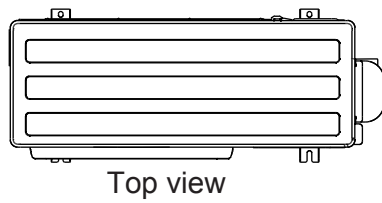




(Unit : mm)

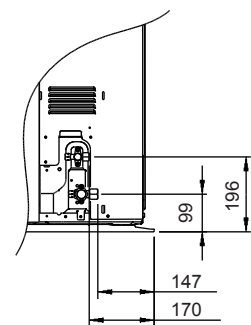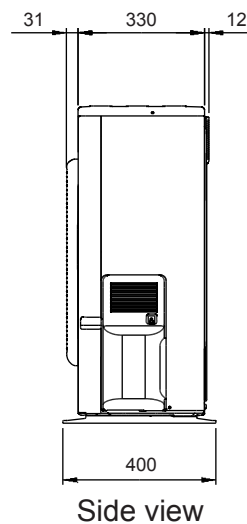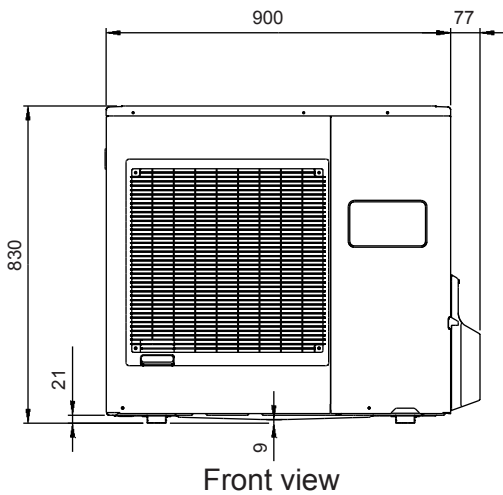


■ MODEL : AU*45/ 54LUAS

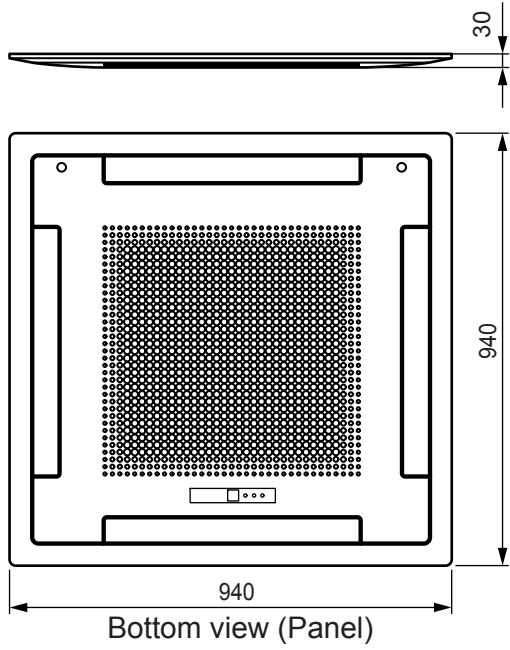




(Unit : mm)

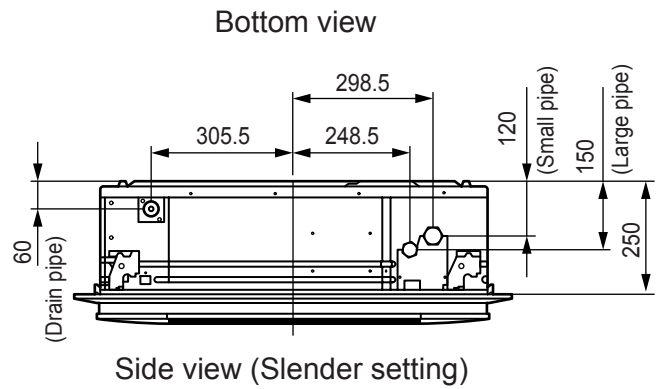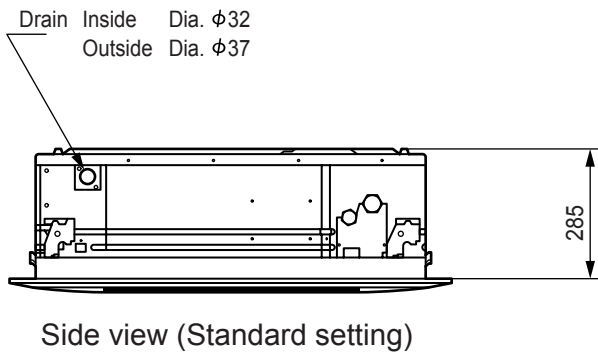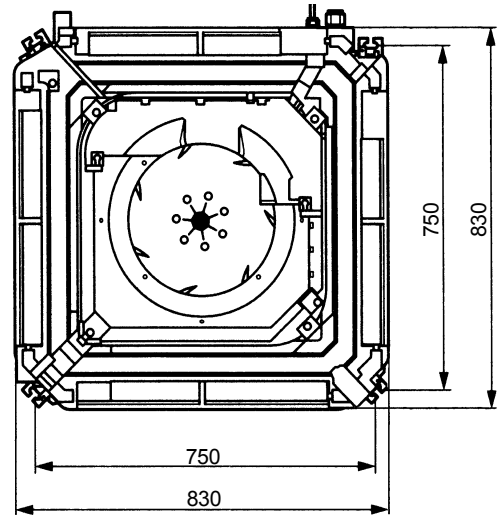

■ MODEL : AO*45/ 54LJBYL

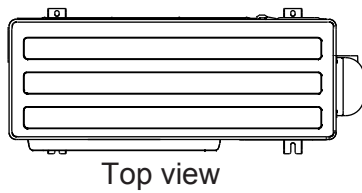

(Unit : mm)

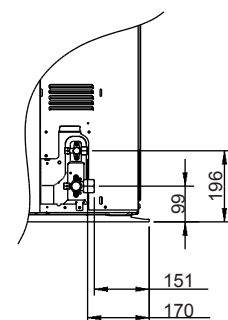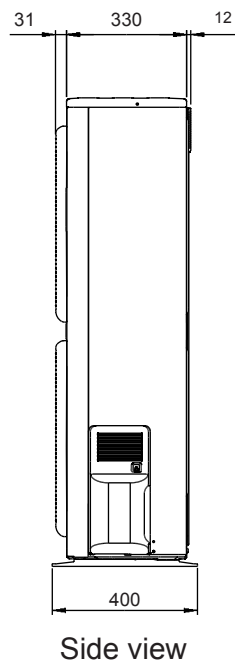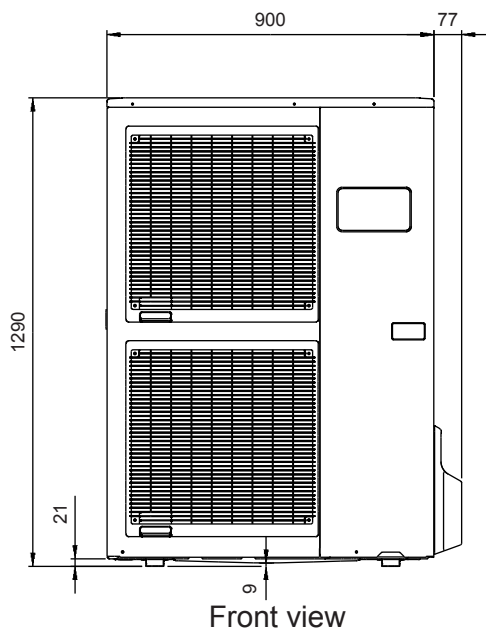


CASSETTE type INVERTER


3 . REFRIGERANT SYSTEM DIAGRAM

3. REFRIGERANT CIRCUIT


■ MODEL : AU*24LUAR / AO*24LMAKL

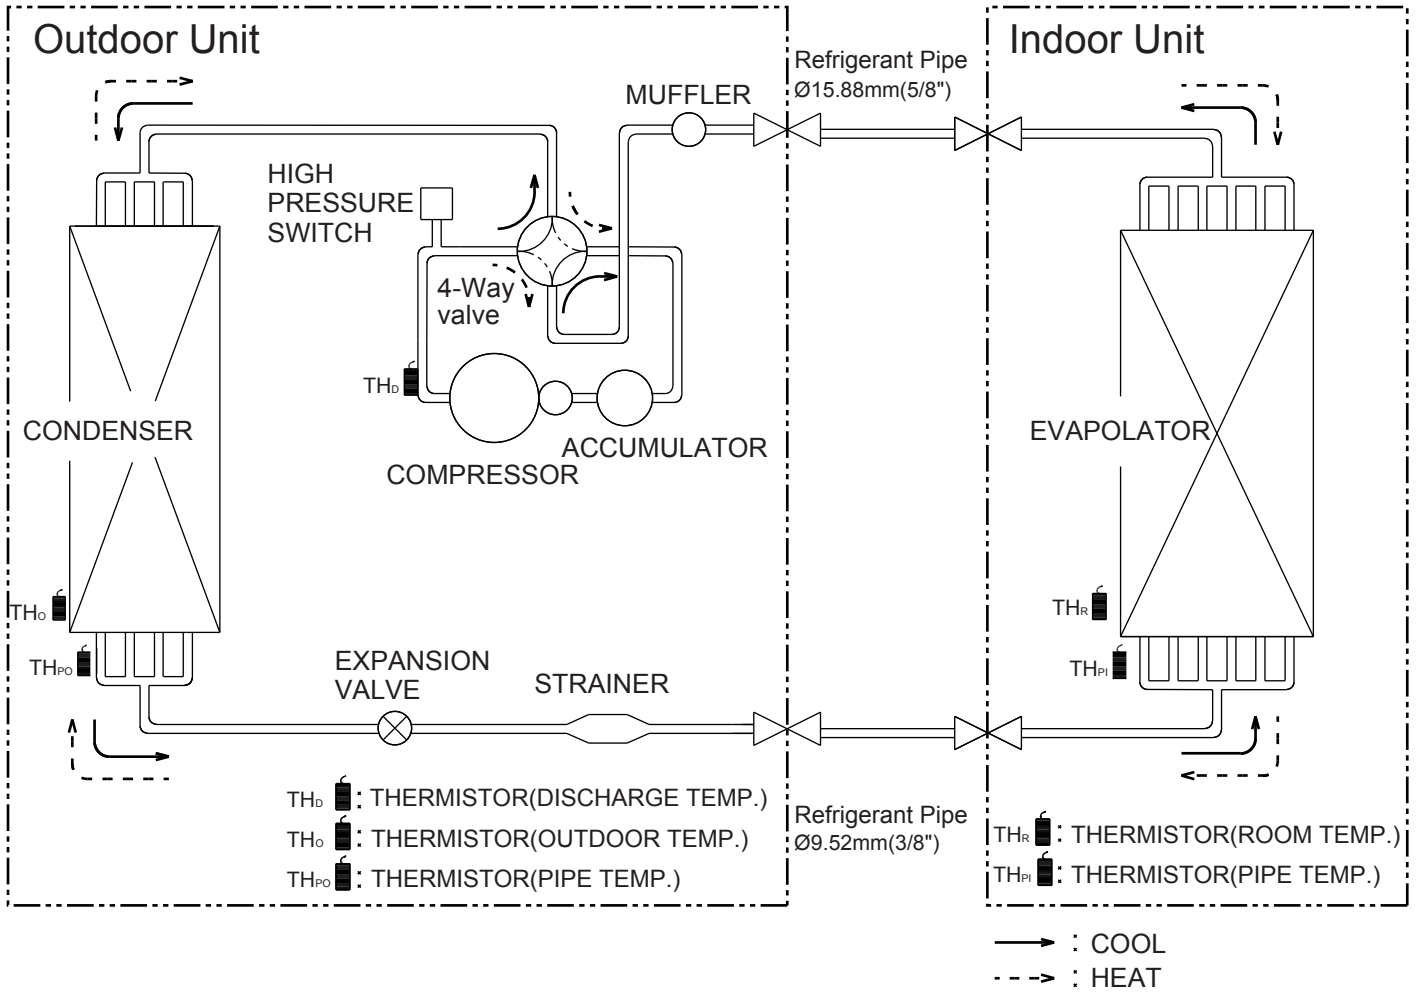

■ MODEL : AU*30/ 36LUAS / AO*30/ 36LMAWL

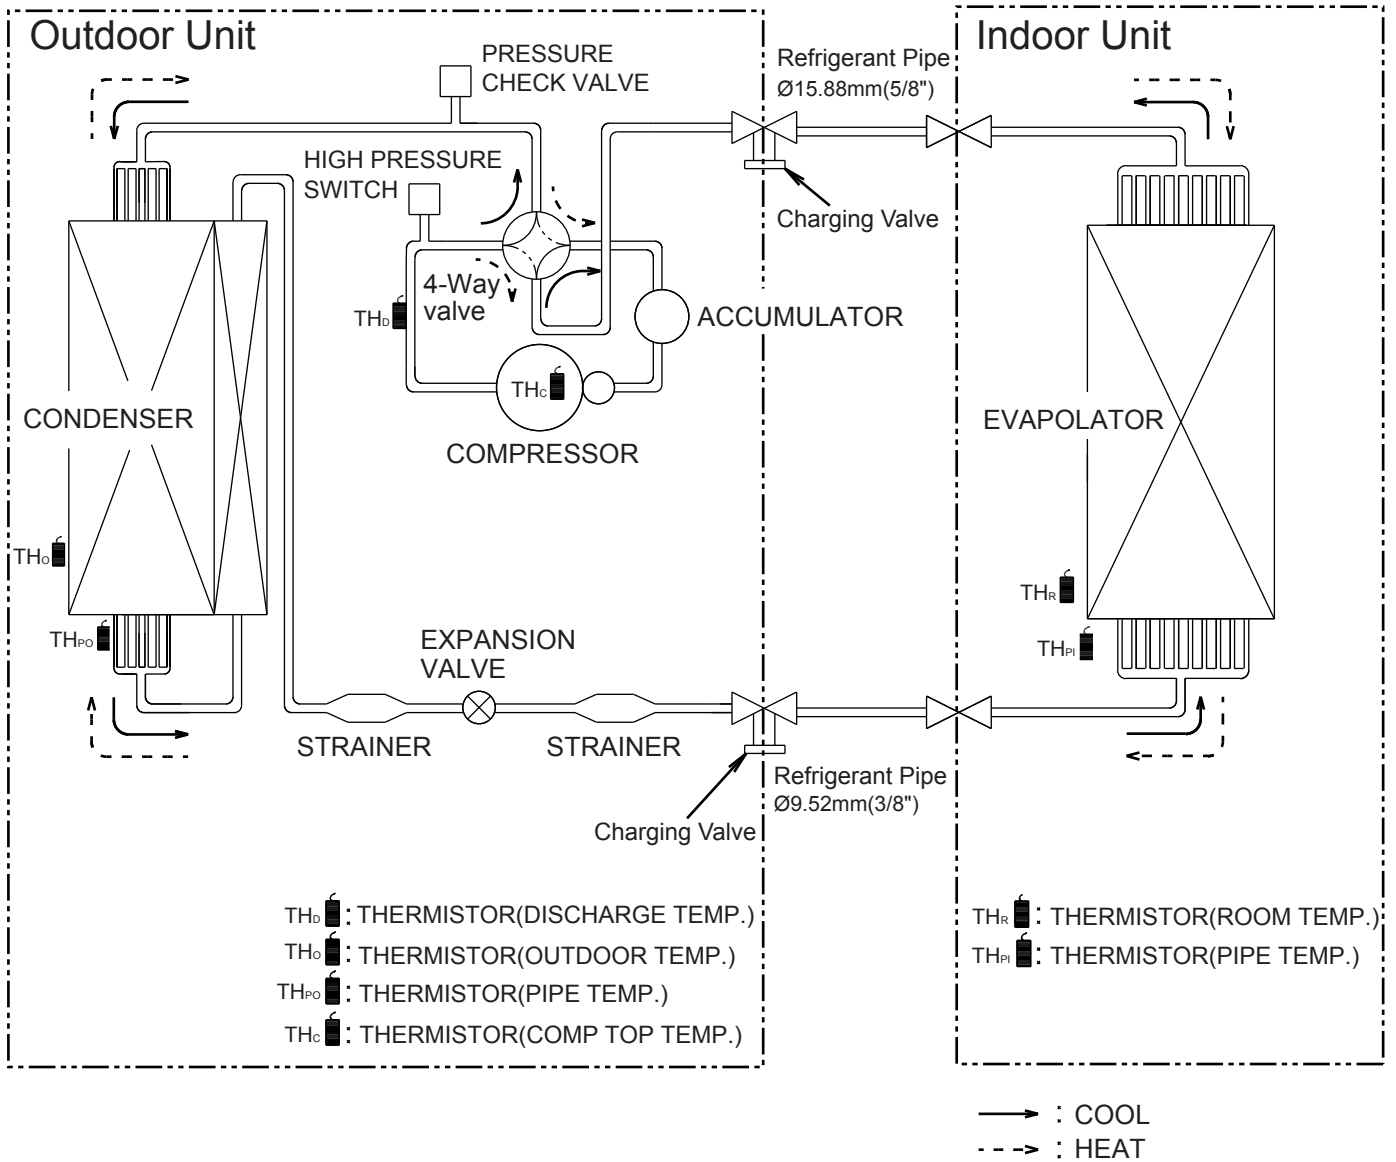

■ MODEL : AU*45/ 54LUAS / AO*45/ 54LJBYL

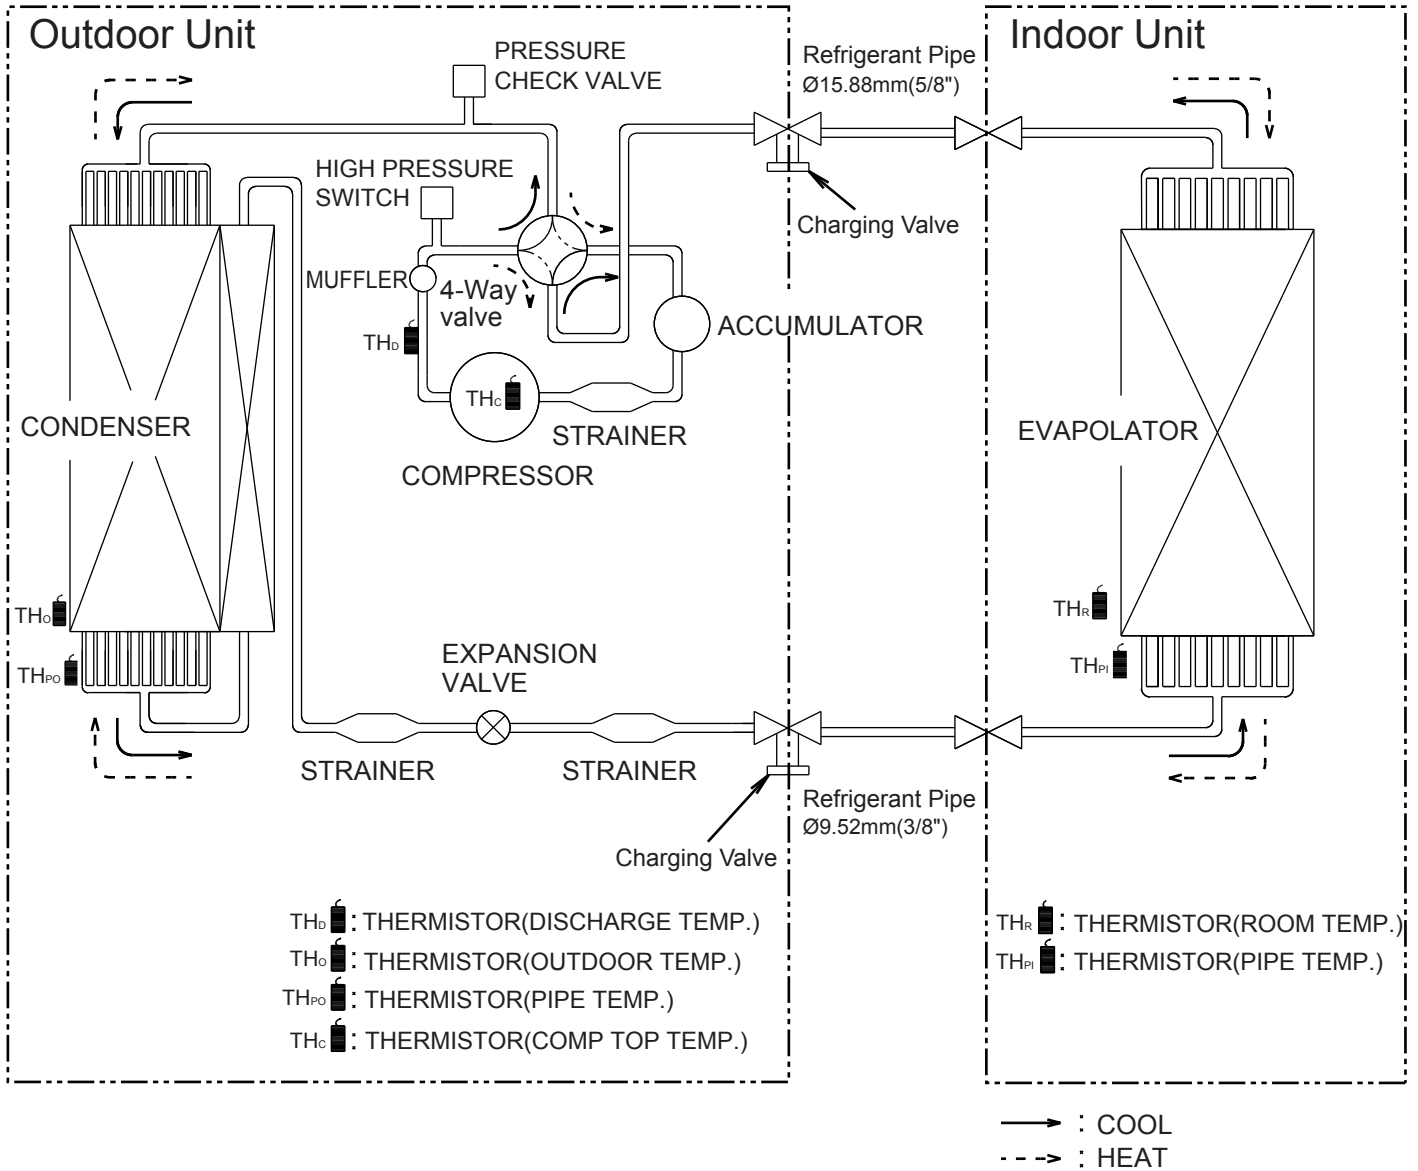


CASSETTE type INVERTER


4 . CIRCUIT DIAGRAM

4. CIRCUIT DIAGRAM


■ MODEL : AU*24LUAR

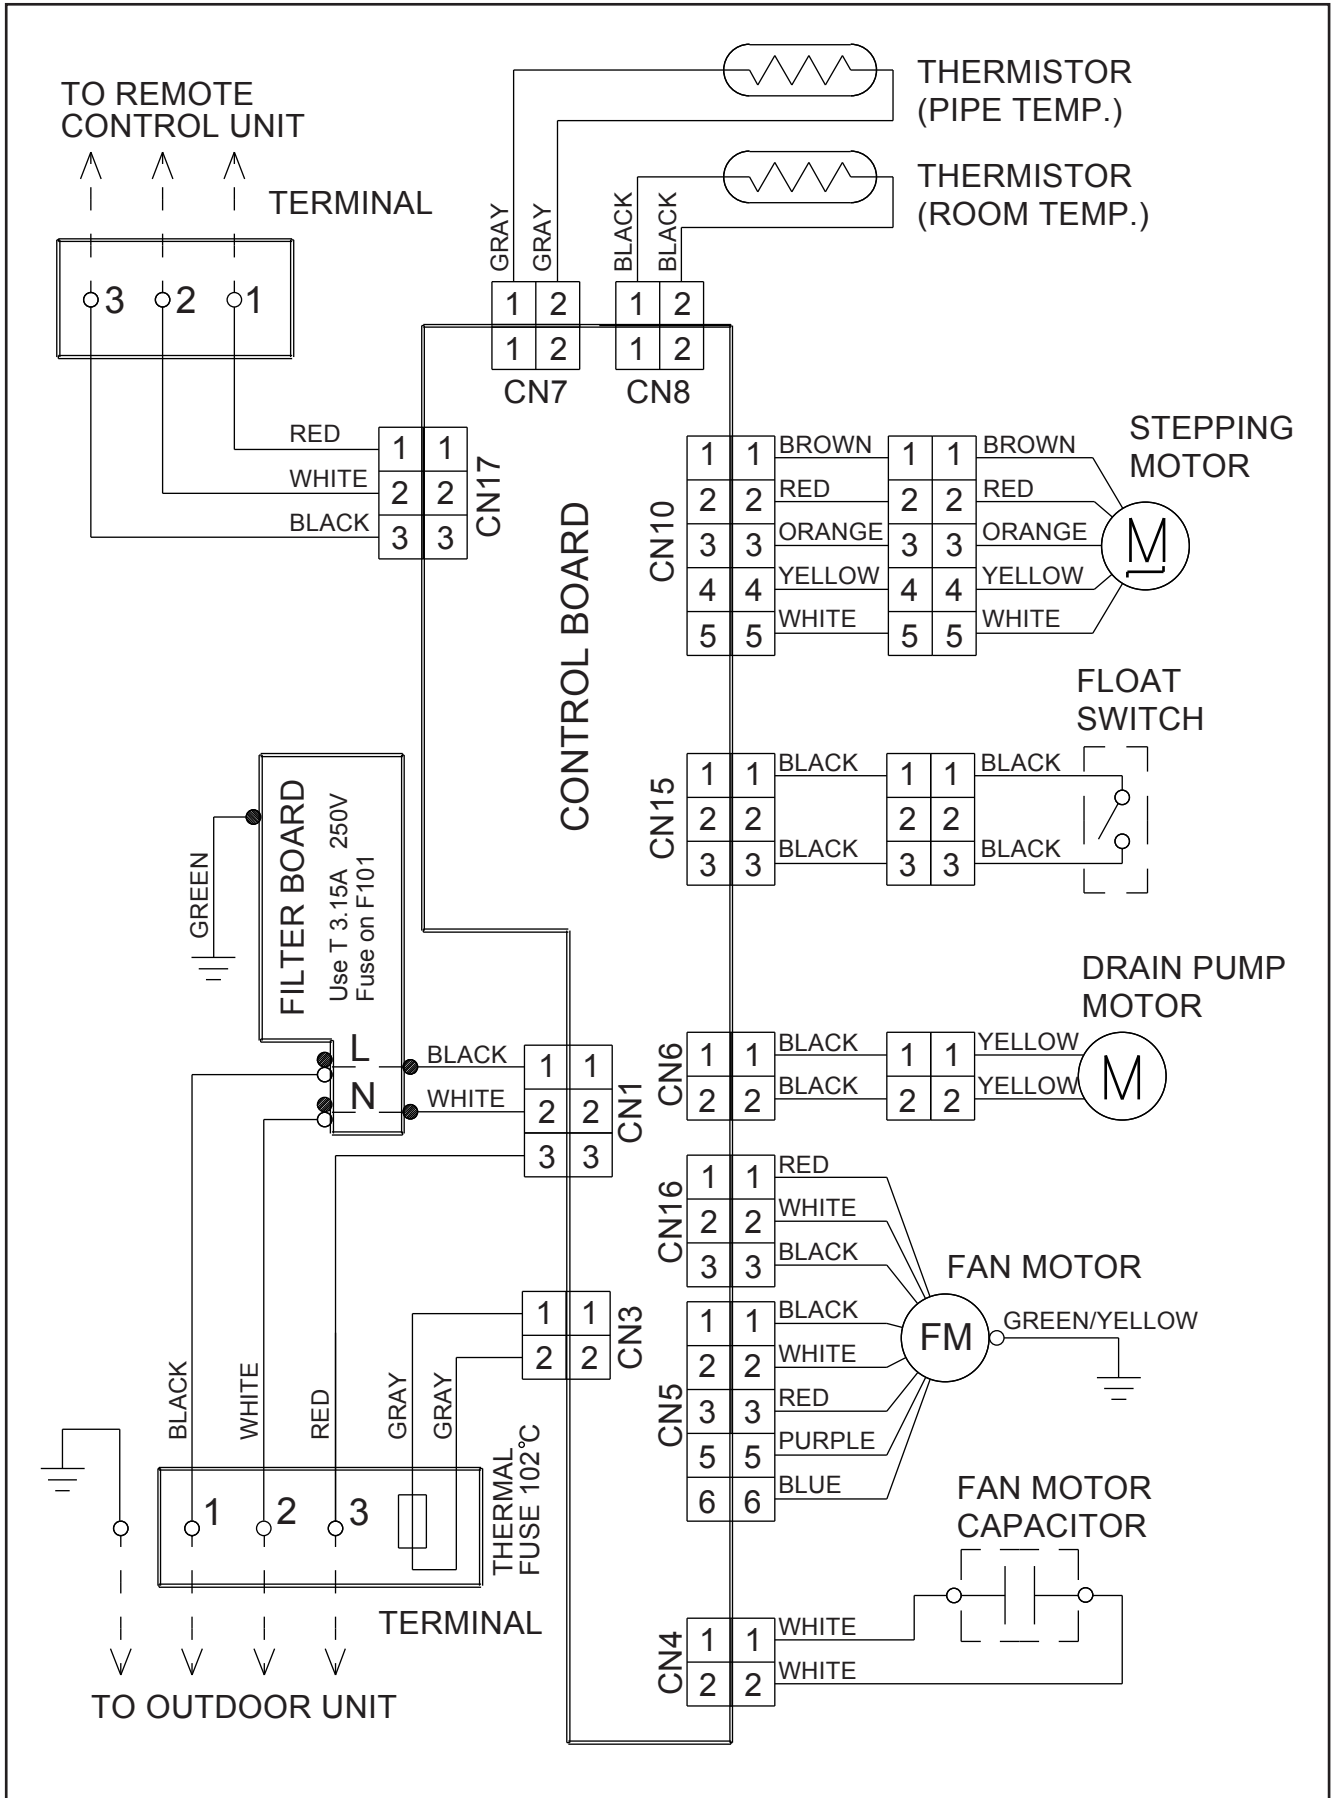


■ MODEL : AU*30/ 36/ 45/ 54LUAS

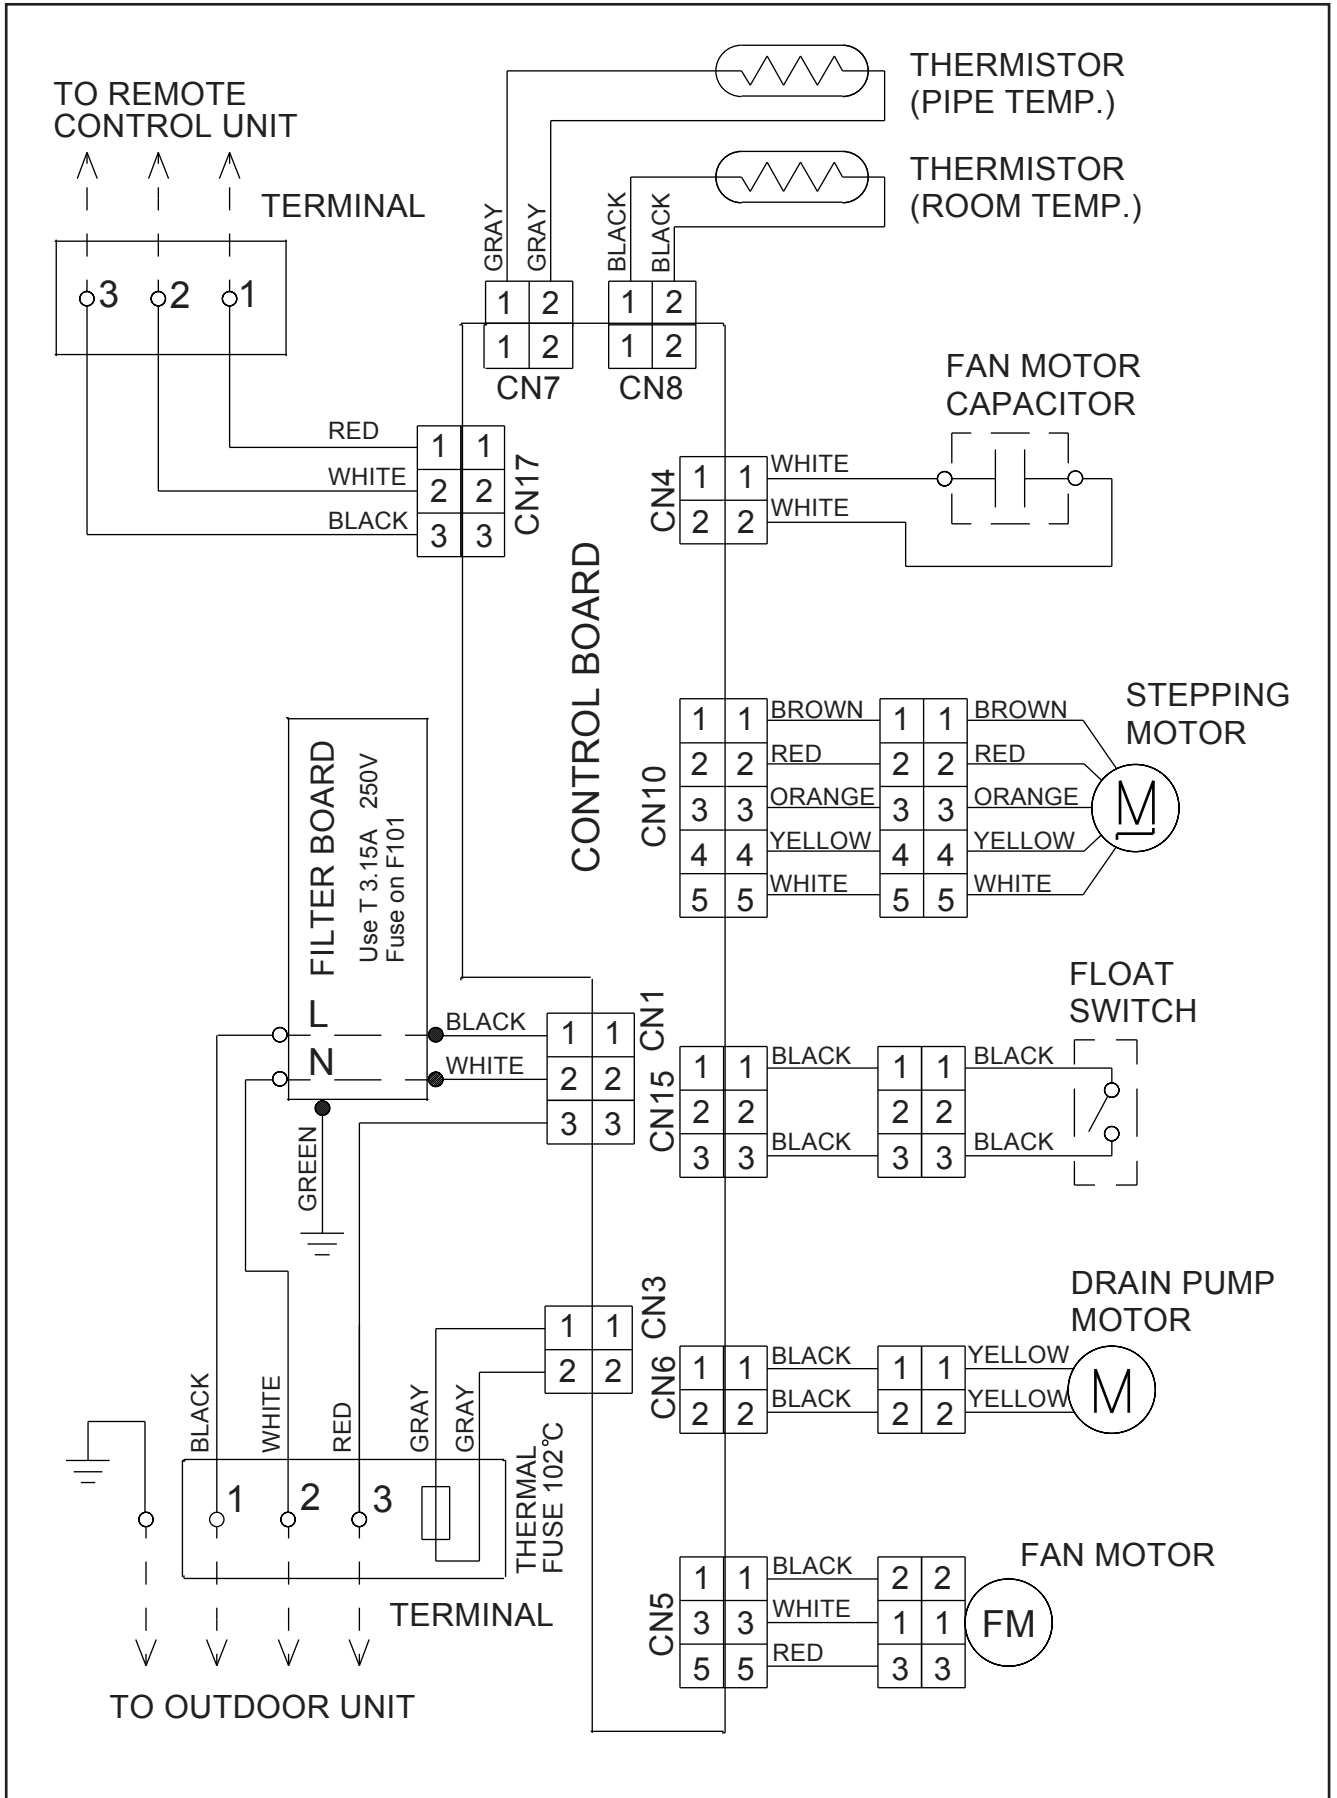


■ MODEL : AO*24LMAKL

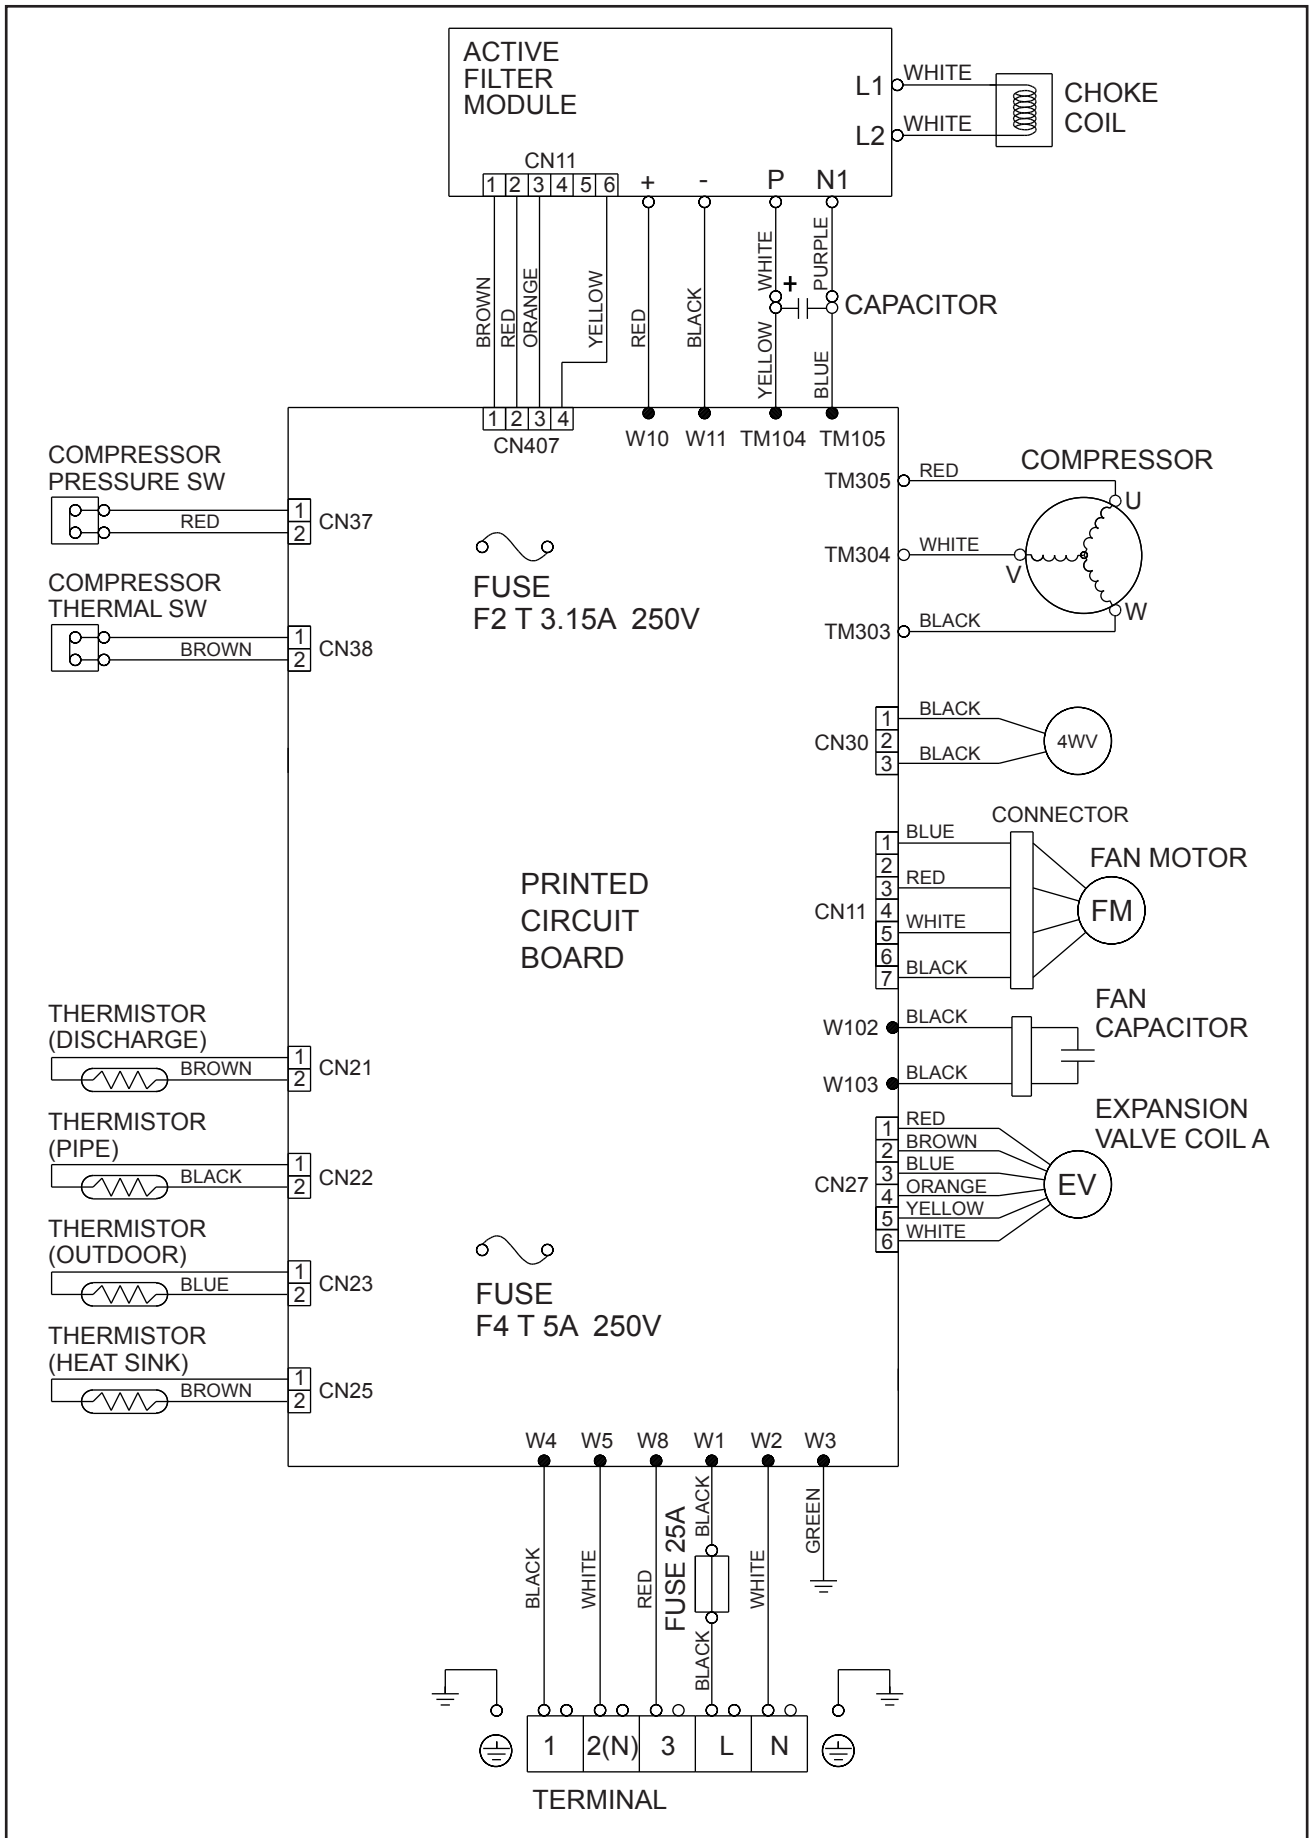

■ MODEL : AO*30/ 36LMAWL

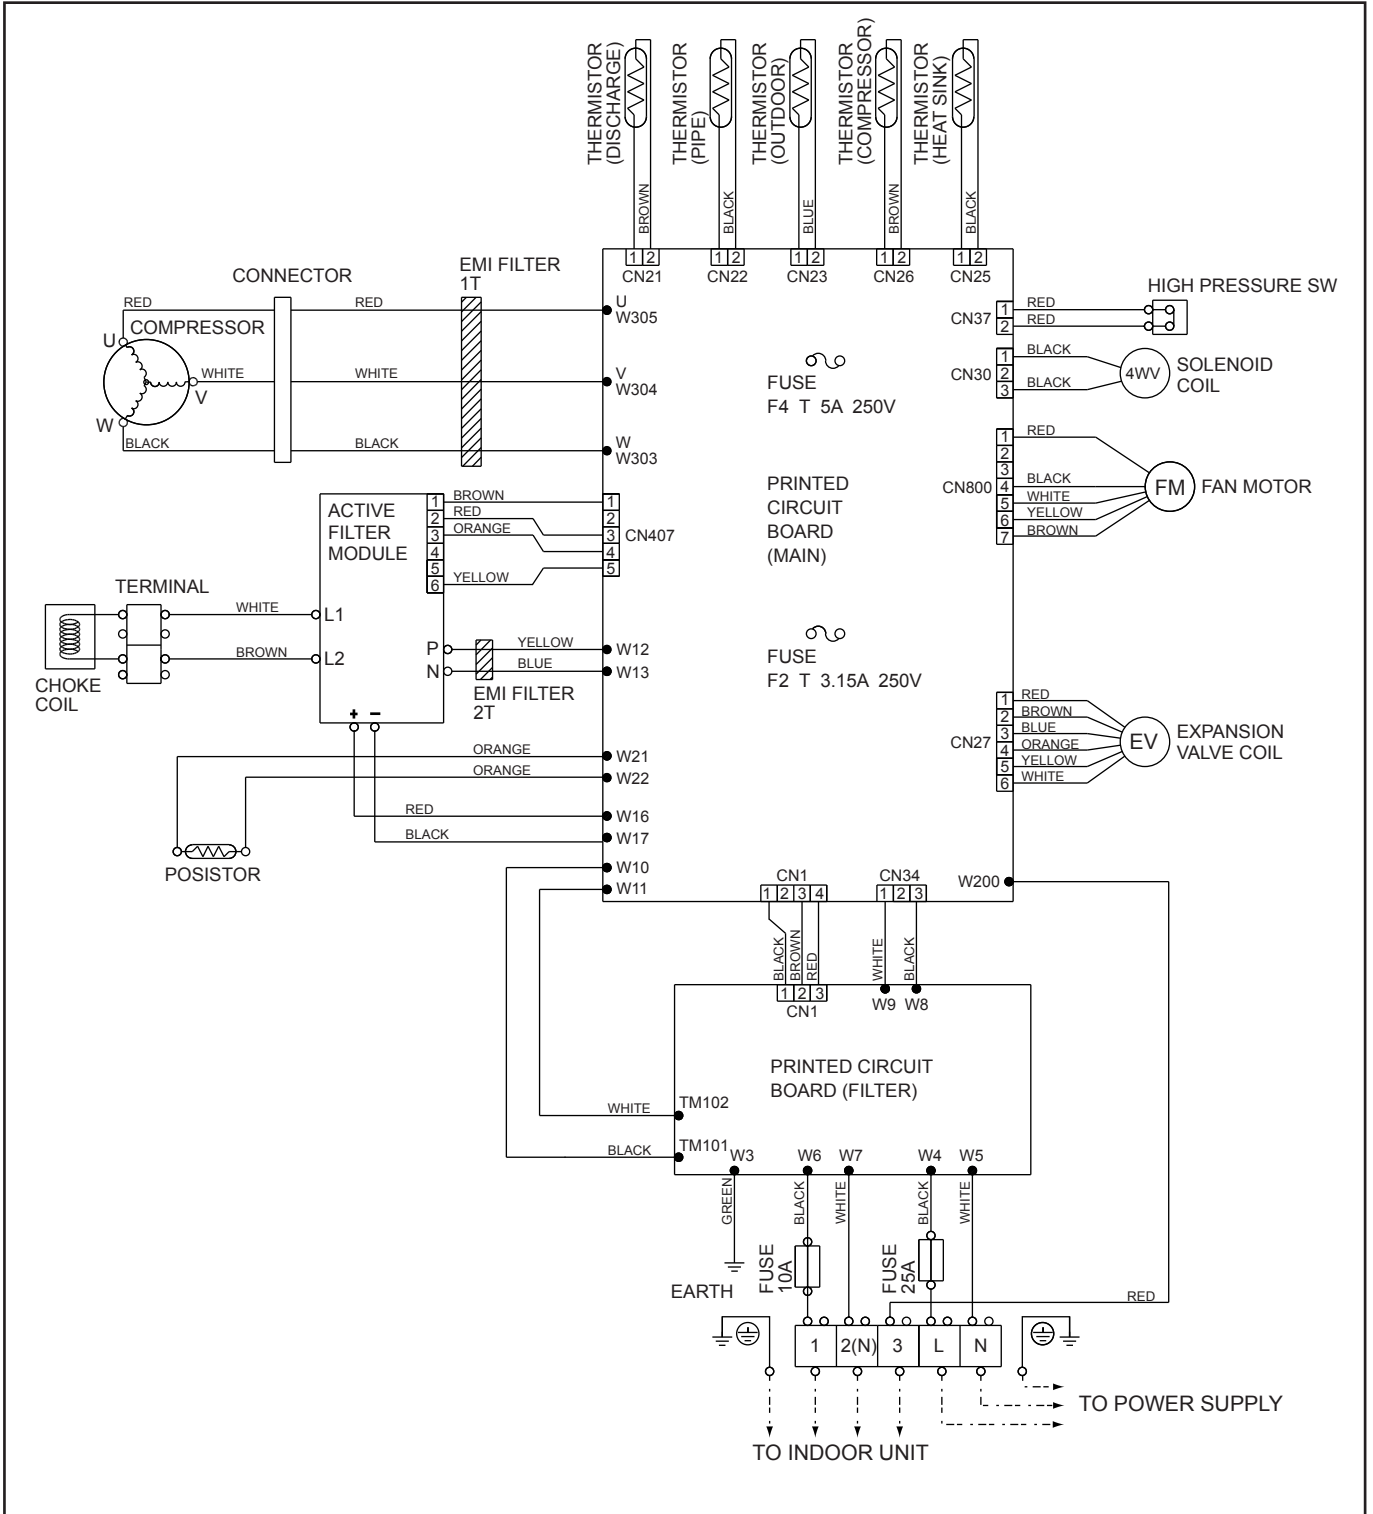

■ MODEL : AO*45/ 54LJBYL

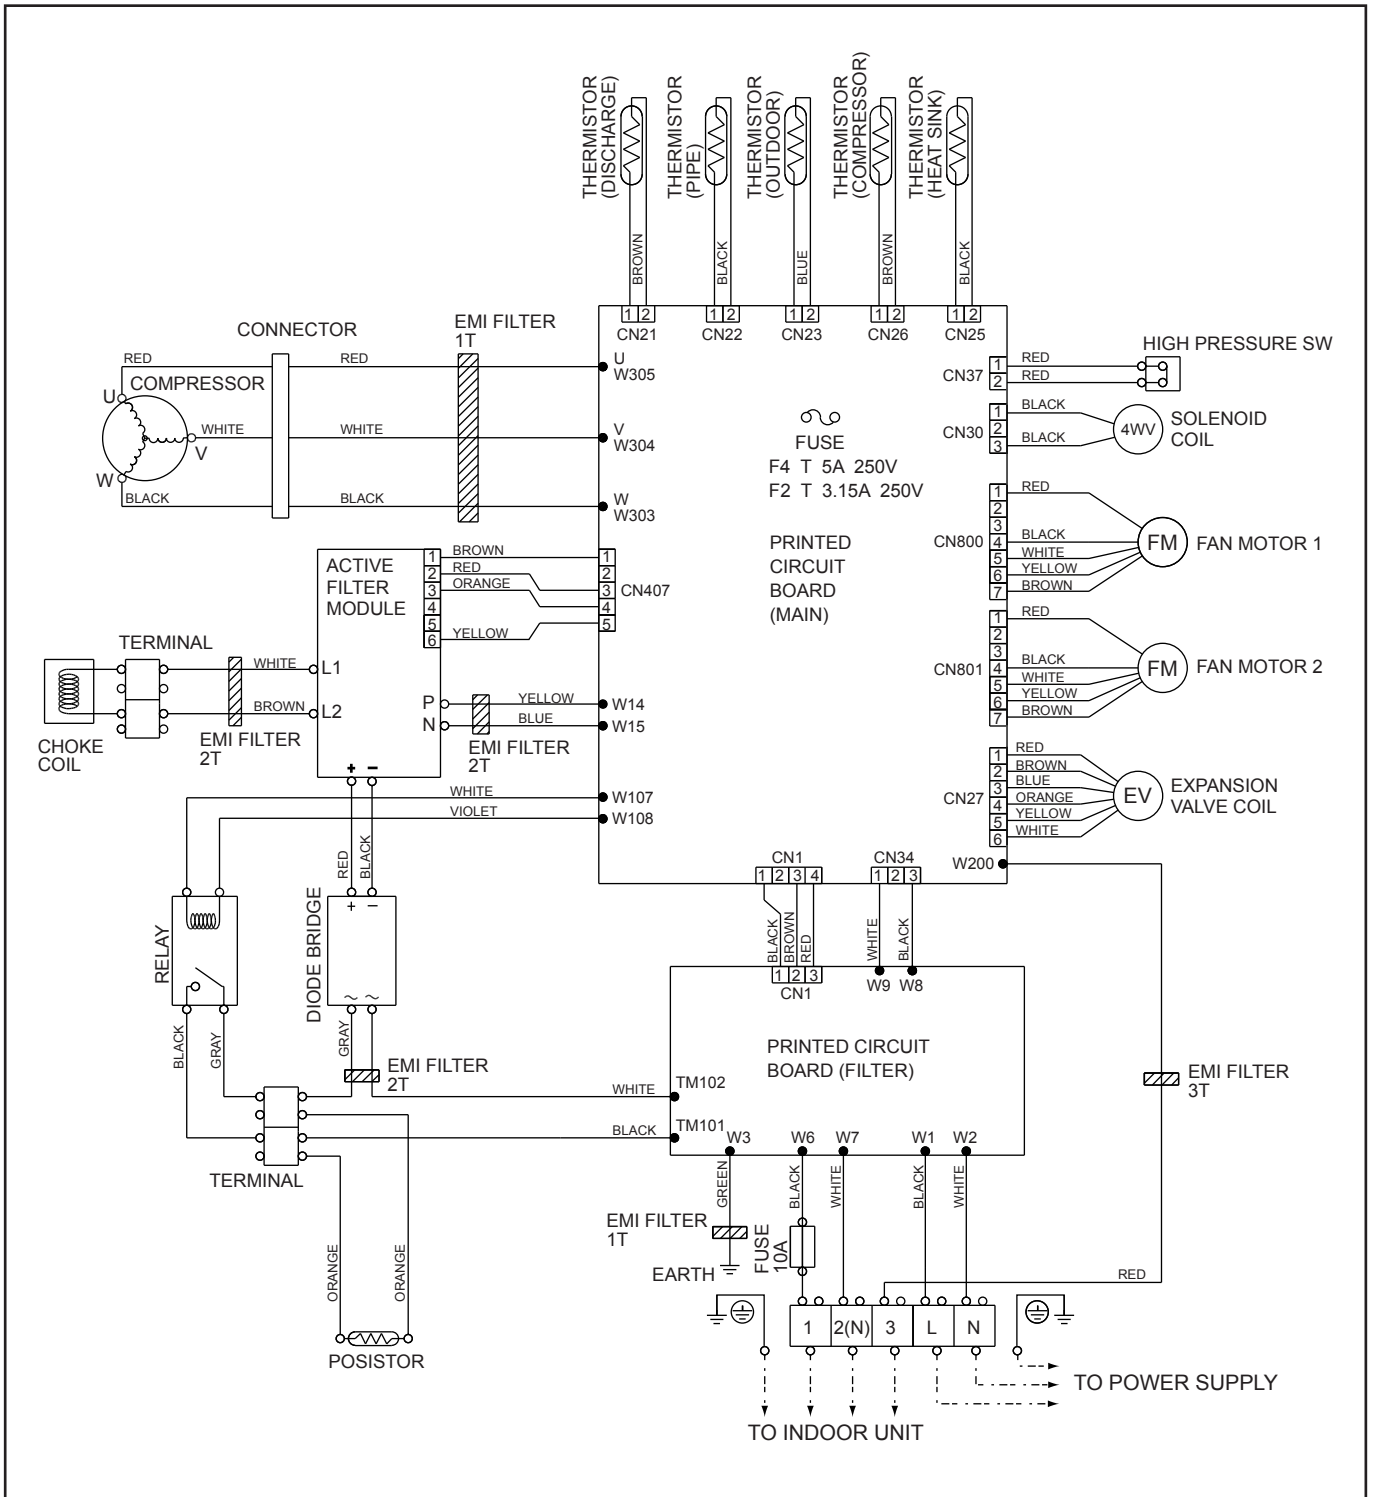

CASSETTE type INVERTER

5 . DESCRIPTION OF EACH CONTROL OPERATION

5. DESCRIPTION OF EACH CONTROL OPERATION

5-1. COOLING OPERATION

5-1-1 COOLING CAPACITY CONTROL

A sensor (room temperature thermistor) built in the indoor unit will usually perceive difference or variation between a set temperature and present room temperature, and controls the operation frequency of the compressor.

- * If the room temperature is 2 degC higher than a set temperature, the compressor operation frequency will attain to maximum performance.
- * If the room temperature is 2 degC lower than a set temperature, the compressor will be stopped.
- * When the room temperature is between +2 degC to -2 degC of the setting temperature, the compressor frequency is controlled within the range shown in Table1. However, the maximum frequency is limited in the range shown in Figure 1 based on the fan speed mode and the outdoor temperature.

(Table 1 : Compressor Frequency Range)

	minimum frequency	maximum frequency
AU*24LUAR	15Hz	75Hz
AU*30LUAS	20Hz	90Hz
AU*36LUAS	20Hz	90Hz
AU*45LUAS	20Hz	92Hz
AU*54LUAS	20Hz	92Hz

(Fig. 1 : Limit of Maximum Frequency based on Outdoor Temperature)

Outdoor air temperature		Fan speed mode				
		Hi	Me	Lo		
31°C	A zone	AU*24LUAR	A zone	75Hz	52Hz	52Hz
			B zone	52Hz	42Hz	42Hz
			C zone	42Hz	36Hz	36Hz
			D zone	36Hz	30Hz	30Hz
19°C	B zone	AU*30LUAS	A zone	90Hz	70Hz	70Hz
			B zone	70Hz	65Hz	65Hz
			C zone	65Hz	55Hz	55Hz
			D zone	55Hz	45Hz	45Hz
11°C	C zone	AU*36LUAS	A zone	90Hz	75Hz	75Hz
			B zone	75Hz	70Hz	70Hz
			C zone	70Hz	65Hz	65Hz
			D zone	65Hz	55Hz	55Hz
	D zone	AU*45LUAS	A zone	92Hz	72Hz	72Hz
			B zone	72Hz	60Hz	60Hz
			C zone	60Hz	60Hz	60Hz
			D zone	60Hz	53Hz	53Hz
		AU*54LUAS	A zone	92Hz	85Hz	85Hz
			B zone	85Hz	72Hz	72Hz
			C zone	72Hz	67Hz	67Hz
			D zone	67Hz	60Hz	60Hz

5-2. HEATING OPERATION

5-2-1 HEATING CAPACITY CONTROL

A sensor (room temperature thermistor) built in the indoor unit will usually perceive difference or variation between a set temperature and present room temperature, and controls the operation frequency of the compressor.

- * If the room temperature is lower 3 degC than a set temperature, the compressor operation frequency will attain to maximum performance.
- * If the room temperature is higher 2 degC than a set temperature, the compressor will be stopped.
- * When the room temperature is between +2 degC to -3 degC of the setting temperature, the compressor frequency is controlled within the range shown in Table2. However, the maximum frequency is limited in the range shown in Figure 2 based on the outdoor temperature.

(Table 2 : Compressor Frequency Range)

	minimum frequency	maximum frequency
AU*24LUAR	15Hz	75Hz
AU*30LUAS	20Hz	95Hz
AU*36LUAS	20Hz	95Hz
AU*45LUAS	20Hz	92Hz
AU*54LUAS	20Hz	92Hz

(Fig.2 : Limit of Maximum Frequency based on Outdoor Temperature)

Outdoor air temperature		Limit of Maximum Frequency	
16°C ————— C zone 12°C ————— B zone A zone	AU*24LUAR	A zone	75Hz
		B zone	75Hz
		C zone	75Hz
	AU*30LUAS	A zone	95Hz
		B zone	90Hz
		C zone	80Hz
	AU*36LUAS	A zone	95Hz
		B zone	90Hz
		C zone	80Hz
AU*45LUAS	A zone	92Hz	
	B zone	90Hz	
	C zone	80Hz	
AU*54LUAS	A zone	92Hz	
	B zone	90Hz	
	C zone	80Hz	

5-3. DRY OPERATION


5-3-1 INDOOR UNIT CONTROL

The compressor rotation frequency shall change according to set temperature and room temperature variation which the room temperature sensor of the indoor unit has detected as shown in the Table 3.


(Table 3 : Compressor frequency)

	Operating frequency
AU*24LUAR	28Hz
AU*30LUAS	45Hz
AU*36LUAS	45Hz
AU*45LUAS	30Hz
AU*54LUAS	53Hz

(Fig.3 : Compressor Control based on Room Temperature)

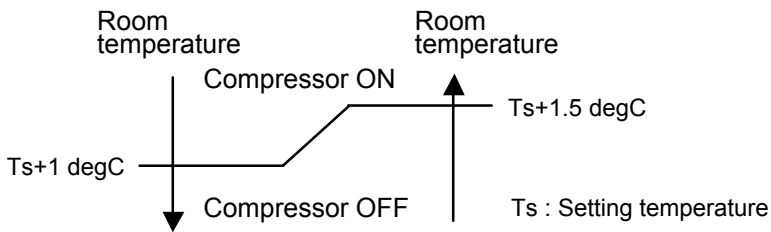

(Fig.4 : Indoor Fan Control)

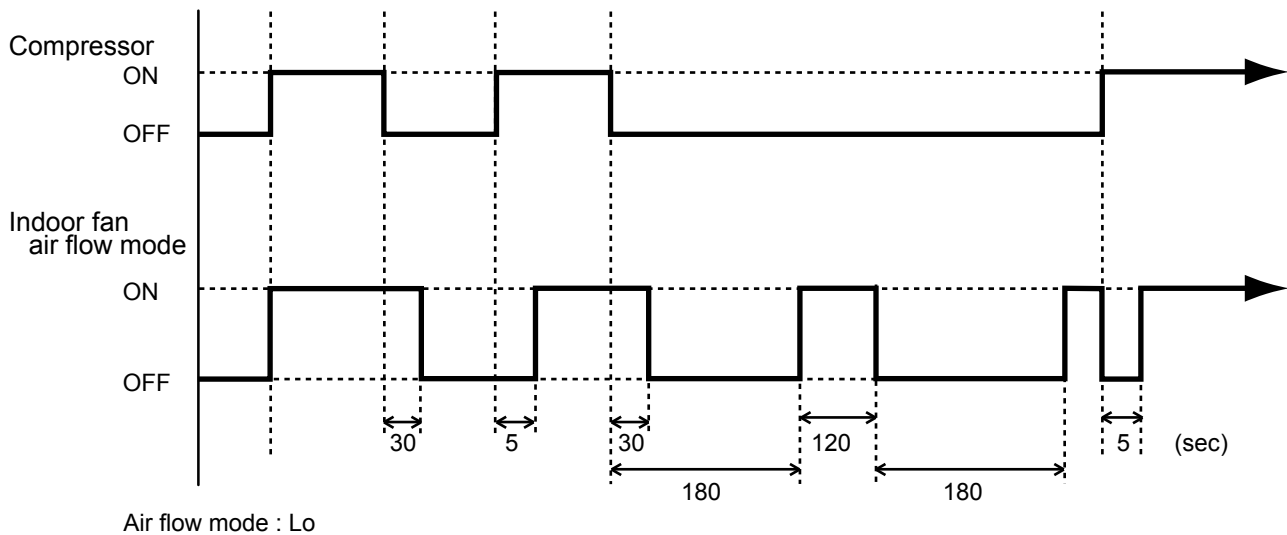

5-4. AUTO CHANGEOVER OPERATION

When the air conditioner is set to the AUTO mode by remote control, operation starts in the optimum mode from among the HEATING, COOLING and MONITORING modes. During operation, the optimum mode is automatically switched in accordance with temperature changes. The temperature can be set between 18°C and 30°C in 1 degC steps.

- ① When operation starts, only the indoor fan is operated for 1 minute. (Air flow mode: S- Lo)
After 1 minute, depends on the room temperature and outdoor unit's operation mode, the operation mode is selected in accordance with the table below.

(Table 4 : Operation mode selection table)

Room temperature :TR	Operation mode
$TR \geq T_s + 2 \text{ degC}$	Cooling
$T_s + 2 \text{ degC} > TR > T_s - 2 \text{ degC}$	Monitoring
$T_s + 2 \text{ degC} \geq TR$	Heating

T_s : Setting temperature

- ② When COOLING was selected at ①, the same operation as COOLING OPERATION is performed.
- ③ When HEATING was selected at ①, the same operation as HEATING OPERATION is performed.
- ④ When the compressor was stopped for 6 consecutive minutes by the temperature control function after the COOLING or HEATING operation mode was selected at ① above, operation is switched to MONITORING and the operation mode is selected again.

5-5. INDOOR FAN CONTROL

1. Fan speed

(Table 5 : Indoor Fan Speed)

• AU*24LUAR

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	490
	Me	430
	Lo	340
	S-Lo	250
Cooling	Hi	540
	Me	480
	Lo	390
	S-Lo	250

• AU*30LUAS

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	620
	Me	510
	Lo	440
	S-Lo	300
Cooling	Hi	620
	Me	510
	Lo	440
	S-Lo	300

• AU*36LUAS

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	620
	Me	510
	Lo	440
	S-Lo	300
Cooling	Hi	620
	Me	510
	Lo	440
	S-Lo	300

• AU*45LUAS

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	700
	Me	600
	Lo	520
	S-Lo	300
Cooling	Hi	700
	Me	600
	Lo	520
	S-Lo	300

• AU*54LUAS

Operation mode	Air flow mode	Speed (rpm)
Heating	Hi	700
	Me	600
	Lo	520
	S-Lo	300
Cooling	Hi	700
	Me	600
	Lo	520
	S-Lo	300

2. FAN OPERATION

The airflow can be switched in 4 steps such as AUTO, LOW, MED, HIGH, while the indoor fan only runs.


When [AUTO] is selected, the indoor fan motor runs LO and OFF at 1 minute intervals.

3. COOLING OPERATION

Switch the airflow [AUTO], and the indoor fan motor will run according to a room temperature, as shown in Figure 5.

On the other hand, if switched in [HIGH]~[LOW], the indoor motor will run at a constant airflow of [COOL] operation modes LOW, MED, HIGH, as shown in Table 5.

(Fig.5 : Airflow change - over (Cooling : AUTO))

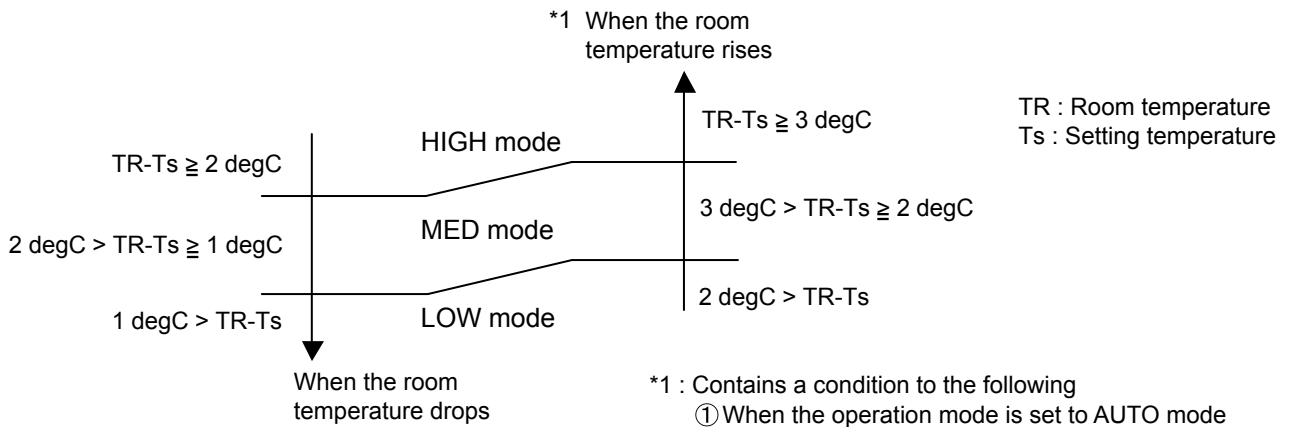

- *1 : Contains a condition to the following
- ① When the operation mode is set to AUTO mode at the start of operation.
 - ② When the setting temperature was changed.
 - ③ When the operation mode was changed to COOLING mode.
 - ④ When the airflow mode was changed to AUTO mode.


4. HEATING OPERATION

When the airflow is set to [AUTO], the indoor fan motor operates [MED] mode.

Then the indoor fan motor will run according to a room temperature, as shown in Figure 6.

On the other hand, if switched in [HIGH] ~ [LOW], the indoor motor will run at a constant airflow of [COOL] operation modes LOW, MED, HIGH, as shown in Table 5.


(Fig.6 : Airflow change - over (Heating : AUTO))

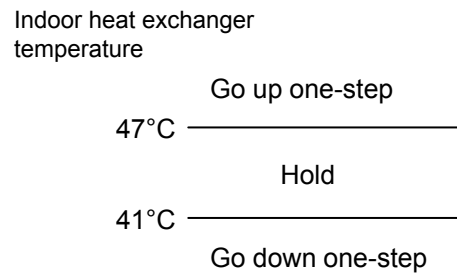

5. COOL AIR PREVENTION CONTROL (Heating mode)

The maximum value of the indoor fan speed is set as shown in Figure 7, based on the detected temperature by the indoor heat exchanger sensor on heating mode.

(Fig.7 : Cool Air Prevention Control)

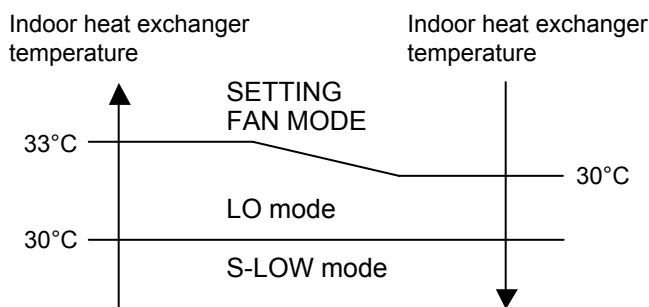

6. DRY OPERATION

Refer to the Figure 4.

During the dry mode operation, the fan speed setting can not be changed.

5-6. OUTDOOR FAN CONTROL

1. Outdoor Fan Motor

Following table shows the fan speed of the outdoor unit.

(Table 6 : Fan speed of the outdoor unit)

		Cooling	Heating
AU*24LUAR		780/ 400 rpm	780/ 400 rpm
AU*30LUAS		850/ 780/ 400/ 250/ 170 rpm	900/ 780/ 400/ 250/ 170 rpm
AU*36LUAS			
AU*45LUAS	Upper fan	850/ 780/ 400/ 350/ 300 rpm	850/ 780/ 350/ 200/ 150 rpm
AU*54LUAS	Lower fan	780/ 750/ 350/ 0 rpm	780/ 750/ 350/ 200/ 150 rpm

* AU*45/ 54LUAS have two fan motors.

* The outdoor fan speed changes in the range mentioned above depending on the compressor frequency and outdoor temperature.

(When the compressor frequency and outdoor temperature increase, the outdoor fan speed also changes to the higher speed.

When the compressor frequency and outdoor temperature decrease, the outdoor fan speed also changes to the lower speed.)

* For AU*24LUAR

When the outdoor heat exchanger temperature is lower than 2°C, the fan speed switches to 780rpm on heating mode.

For AU*30/ 36LUAS

* It runs at 500rpm for 20 seconds after starting up the outdoor fan.

When the outdoor heat exchanger temperature is lower than 2°C, the fan speed switches to 900rpm on heating mode.

For AU*45/ 54LUAS

* It runs at 500rpm for 20 seconds after starting up the outdoor fan.


When the outdoor heat exchanger temperature is lower than 2°C, the fan speed switches to 850rpm(Upper fan) and 750rpm(Lower fan) on heating mode.

5-7. LOUVER CONTROL

1. VERTICAL LOUVER CONTROL

(Function Range)


Each time the button is pressed, the air direction range will change as follows:



(Operation Range)

Cooling / Dry mode : }
Heating mode : } ①-②-③-④
Fan mode : }

(Fig.8 : Air Direction Range)

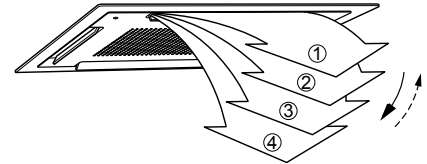

Use the air direction adjustments within the ranges shown above.

- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.

Cooling / Dry / Fan mode : Horizontal flow ①
Heating mode : Downward flow ④

- For AU*24LUAR

At the start of operation if the setting louver position is ①, the setting position is set to ① after the louver moves from totally-enclosed position to ②. (Positioning Control)

- For AU*30/ 36/ 45/ 54LUAS

At the start of operation if the setting louver position is ① or ②, the setting position is set to ① or ② after the louver moves from totally-enclosed position to ③. (Positioning Control)

- The indoor fan motor starts after the louver reaches to the setting position.

2. SWING OPERATION

When the swing signal is received from the remote controller, the vertical louver starts to swing. The range of swing depends on the set airflow direction.

(Swinging Range)

Airflow direction set	Range of swing
①	① to ③
②	② to ④
③	② to ④
④	① to ④

- When the indoor fan is either at S-Lo or Stop mode, the swinging operation is interrupted and the louver stops at the memorized position.
(Stop mode means Operation stop.)

5-8. COMPRESSOR CONTROL

1. OPERATION FREQUENCY RANGE

The operation frequency of the compressor is different based on the operation mode as shown in Table 7.

(Table 7 : Compressor Operation Frequency Range)


	Cooling		Heating		Dry
	Min	Max	Min	Max	
AU*24LUAR	15Hz	75Hz	15Hz	75Hz	28Hz
AU*30LUAS	20Hz	90Hz	20Hz	95Hz	45Hz
AU*36LUAS	20Hz	90Hz	20Hz	95Hz	45Hz
AU*45LUAS	20Hz	92Hz	20Hz	92Hz	30Hz
AU*54LUAS	20Hz	92Hz	20Hz	92Hz	53Hz

2. OPERATION FREQUENCY CONTROL AT START UP

2-1. For AU*24LUAR

The compressor frequency soon after the start-up is controlled as shown in Figure 9.


(Fig.9 : Compressor Control at Start-up)

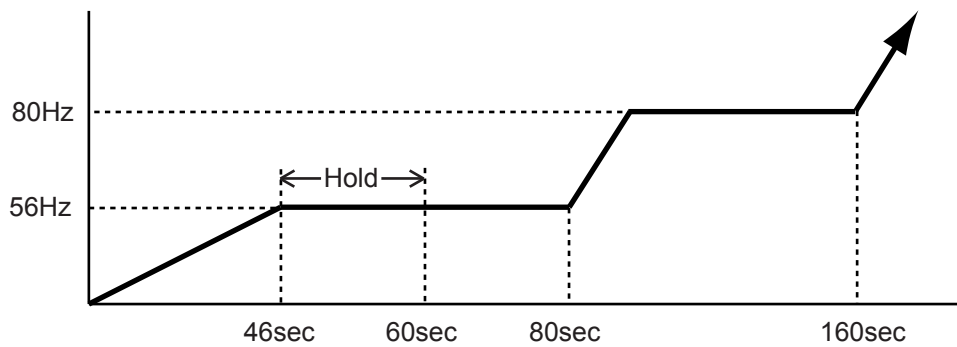

2-2. For AU*30/ 36/ 45/ 54LUAS

The compressor frequency soon after the start-up is controlled as shown in Figure 10.

(Fig.10 : Compressor Control at Start-up)

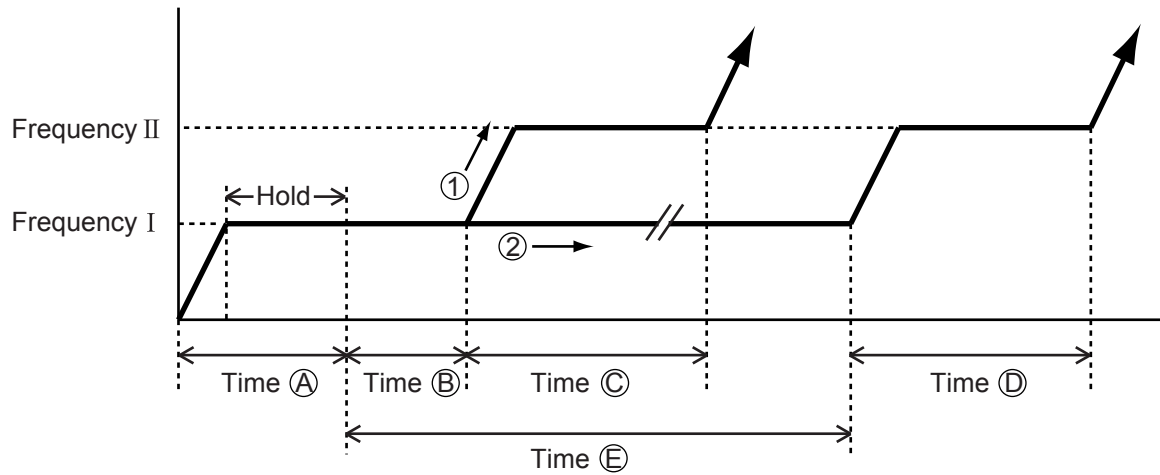

For AU*30/ 36LUAS

- ① Discharge pipe temp. $\geq 30^{\circ}\text{C}$
- ② Discharge pipe temp. $< 30^{\circ}\text{C}$

For AU*45/ 54LUAS

- ① Discharge pipe temp. $\geq 35^{\circ}\text{C}$
- ② Discharge pipe temp. $< 35^{\circ}\text{C}$

(Frequency)

	Frequency I	Frequency II
AU*30LUAS	40Hz	56Hz
AU*36LUAS		
AU*45LUAS	56Hz	70Hz
AU*54LUAS		

(Time)

	Time (A)	Time (B)	Time (C)	Time (D)	Time (E)
AU*30LUAS	180sec	60sec	120sec	120sec	720sec
AU*36LUAS					
AU*45LUAS	180sec	80sec	180sec	180sec	720sec
AU*54LUAS					

5-9. TIMER OPERATION CONTROL


5-9-1 Wired Remote Controller

AR-3TA14


- ON / TIMER
- OFF / TIMER
- WEEKLY TIMER
- TEMPERATURE SET BACK TIMER

1. ON / OFF TIMER

- OFF timer : When the clock reaches the set time, the air conditioner will be turned off.

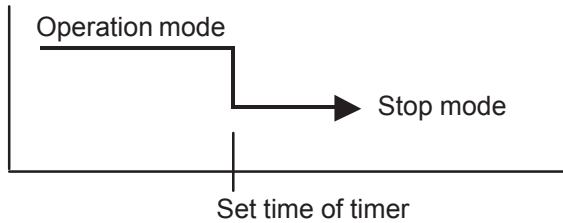


- ON timer : When the clock reaches the set time, the air conditioner will be turned on.

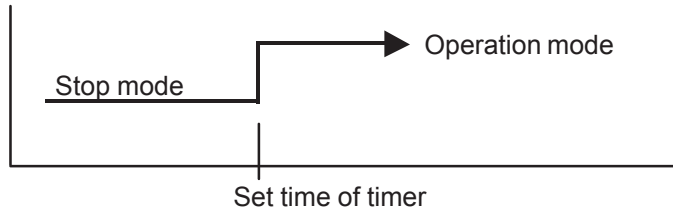

2. WEEKLY TIMER

2-1. WEEKLY TIMER

- Use this timer function to set operating time for each day of the week.
- The weekly timer allows up to two ON and OFF time to set up per day.

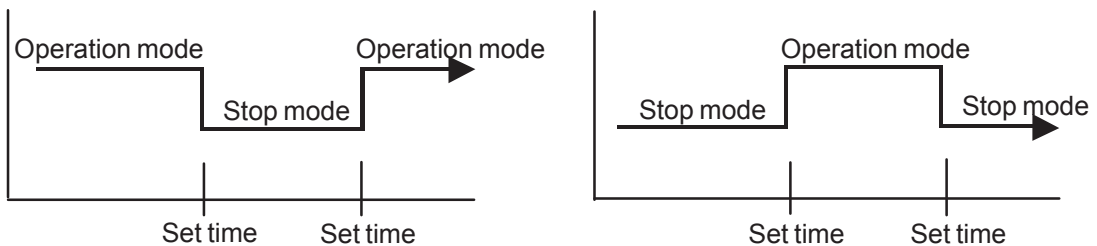


- The operating time can be set in 30 min increments only.
- The OFF time can be carried over to next day.
- The ON timer and the OFF timer functions cannot be set with using the weekly timer. Both ON and OFF time must be set.


2-2. DAY OFF setting

- The DAY OFF setting is only available for days for which weekly settings already exist.
- If the operating time carries over to the next day (during a next day setting), the effective DAY OFF range will be set as shown below.

- Normal

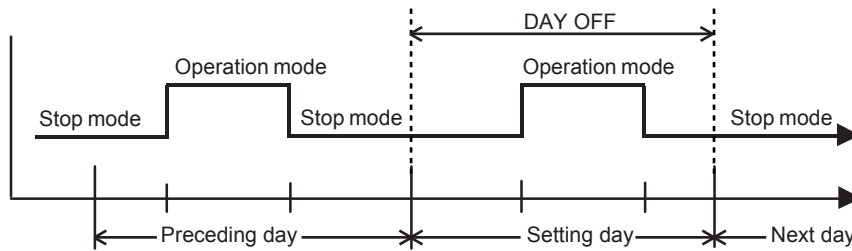

- Next day setting

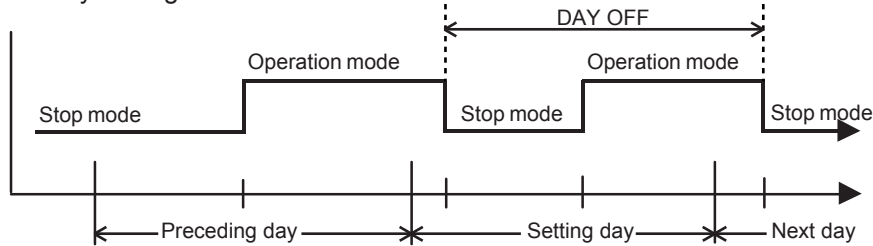


- The DAY OFF setting can only be set one time. The DAY OFF setting is cancelled automatically after the set day has passed.

3. TEMPERATURE SET BACK TIMER

- The SET BACK timer only changes the set temperature for 7 days, it cannot be used to start or stop air conditioner operation.
- The SET BACK timer can be set to operate up to two times per day but only one temperature setting can be used.
- During the COOL/DRY mode, the air conditioner will operate at a minimum of 18°C even if the SET BACK temperature is set to 17°C or lower.

Case of SET BACK timer on the Cooling operation.

(Setting temperature :22°C, SET BACK temperature :26°C)

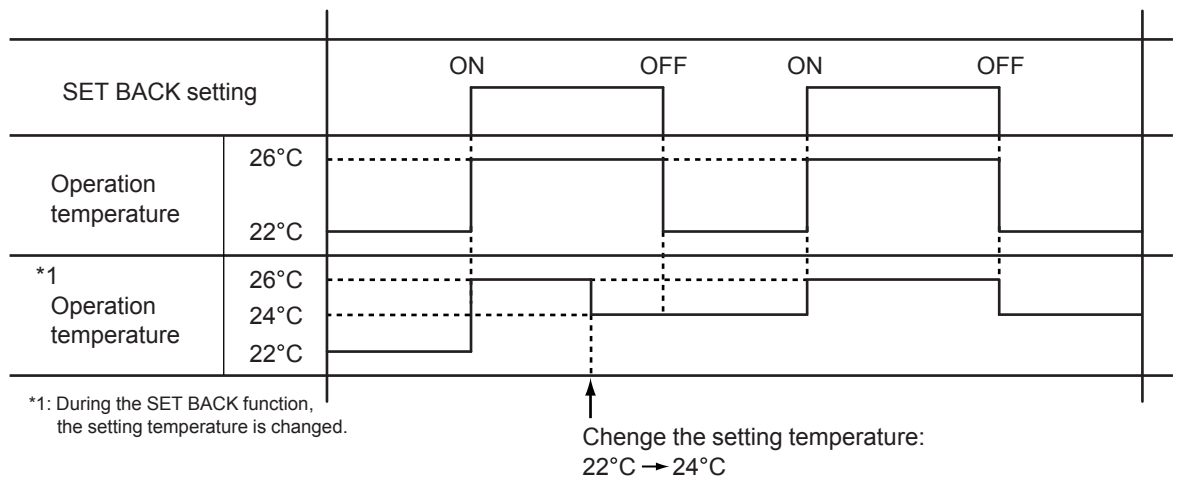

5-10. ELECTRONIC EXPANSION VALVE CONTROL

The most proper opening of the electronic expansion valve is calculated and controlled under the present operating condition based on the following values.

The compressor frequency, the temperatures detected by the discharge temperature sensor and the outdoor temperature sensor.

- * The pulse range of the electronic expansion valve control is between 50 to 480 pulses.
- * At the time of supplying the power to the outdoor unit, the initialization of the electronic expansion valve is operated (1000 pulses are input to the closing direction).

5-11. TEST OPERATION CONTROL

• With Wired Remote Controller

Under the condition where the air conditioner stops, press the MASTER CONTROL button and the FAN CONTROL button simultaneously for 5 seconds or more, and the test operation control mode will appear.

During test running, "a!" will display on the remote controller display.

Set the test operation mode, and the compressor will continue to run regardless of whatever the room temperature sensor detects.

The test operation mode is released if 60 minutes have passed after setting up the test operation.

5-12. PREVENT TO RESTART FOR 3 MINUTES (3 MINUTES ST)

The compressor won't enter operation status for 3 minutes after the compressor is stopped, even if any operation is given.

5-13. 4-WAY VALVE EXTENSION SELECT

At the time when the air conditioner is switched from the cooling mode to heating mode, the compressor is stopped, and the 4-way valve is switched in 3 minutes later after the compressor stopped.

5-14. AUTO RESTART

When the power was interrupted by a power failure, etc. during operation, the operation contents at that time are memorized and when power is recovered, operation is automatically resumed with the memorized operation contents.

When the power is interrupted and recovered during timer operation, timer operation is canceled, but only setting time is memorized.

[Operation contents memorized when the power is interrupted]

- Operation mode
- Set temperature
- Set air flow
- Timer mode and timer time
- Air flow Direction
- Swing
- Thermistor detected position

5-15. PUMP DOWN (For AU*30/ 36/ 45/ 54LUAS)

Perform the following procedures to collect the refrigerant when moving the indoor unit or the outdoor unit.

When the product is stopped:

1. Press the PUMP DOWN switch (SW2) on the outdoor unit.
(The LED on the outdoor unit circuit board flickers every 1second.)
2. The pump down operation (cooling operation) begins right away.
After operation starts, close the 3-way valve (liquid).
3. After 2-3minutes, operation stops. Close the 3-way valve (gas) within 1minute after operations stops.
4. The LED will go out 3minutes after it stops. Disconnect the power supply after confirming that the LED has gone out.

When the product is operating:

1. Press the PUMP DOWN switch (SW2) on the outdoor unit. The LED on the outdoor unit circuit board flickers every 1second, and operation stops.
At this point, recovery has not been completed, so do not close the 2 and 3-way valves.
2. The pump down operation (cooling operation) begins after 3minutes.
Close the 3-way valve (liquid) after operation starts.
3. After 2-3minutes, operation stops. Close the 3-way valve (gas) within 1minute after operations stops.
4. The LED will go out 3minutes after it stops. Disconnect the power supply after confirming that the LED has gone out.

5-16. COMPRESSOR PREHEATING

When the outdoor heat exchanger temperature is lower than Operation temperature (Refer to Table 8) and the heating operation has been stopped for 3 hours, power is applied to the compressor and the compressor is heated.

(By heating the compressor, warm air is quickly discharged when operation is started.)

When operation was started, and when the outdoor temperature rises to Release temperature or greater, preheating is over.

(Table 8 : Preheating Operation / Release Temperature)

Before 24 hour		After 24 hour	
Operation temperature	Release temperature	Operation temperature	Release temperature
3°C	7°C	0°C	4°C

5-17. DEFROST OPERATION CONTROL

1. CONDITION OF STARTING THE DEFROST OPERATION

1-1. For AU*24LUAR

The defrost operation starts when the outdoor heat exchanger temperature sensor detects the temperature lower than the values shown in Table 9-1.

(Table 9-1 : Condition of starting Defrost Operation)

	Compressor integrating operation :Less than 40min.	Compressor integrating operation :40min and over	
		Less than 6 min. *1 or 10min. *2	After 6 min. *1 or 10min. *2
AU*24LUAR	Does not operate	-8°C	

*1. It means contiguous operation time.

*2. Compressor stop time: Below 20min. → Select 6min.
Above 20min. → Select 10min.

1-2. For AU*30/ 36/ 45/ 54LUAS

The defrost operation starts when the outdoor heat exchanger temperature sensor detects the temperature lower than the values shown in Table 9-2.

(Table 9-2 : Condition of starting Defrost Operation)

	Compressor integrating operation :Less than 45min.	Compressor integrating operation :45min and over		Outdoor temp. - Outdoor heat exchanger temp.	Outdoor heat exchanger temp.
		Less than 6 min. *1 or 10min. *2	After 6 min. *1 or 10min. *2		
AU*30LUAS	Does not operate		-8°C *3	_____	_____
AU*36LUAS			-10°C *4		
AU*45LUAS	Does not operate		-8°C *3	12 degC	_____
AU*54LUAS			-10°C *4		
			_____	_____	-20°C

*1. It means contiguous operation time.

*2. Compressor stop time: Below 20min. → Select 6min.
Above 20min. → Select 10min.

*3. Outdoor temp. \geq -1°C

*4. Outdoor temp. $<$ -1°C

2. CONDITION OF THE DEFROST OPERATION COMPLETION

2-1. For AU*24LUAR

Defrost operation is released when the conditions become as shown in Table 10-1.

(Table 10-1 : Defrost Release Condition)

	Release Condition
AU*24LUAR	Outdoor heat exchanger temperature sensor value is higher than 10°C or Compressor operation time has passed 15 minutes.

2-2. For AU*30/ 36/ 45/ 54LUAS

Defrost operation is released when the conditions become as shown in Table 10-2.


(Table 10-2 : Defrost Release Condition)

	Release Condition
AU*30LUAS	Outdoor heat exchanger temperature sensor value is higher than 12°C or Compressor operation time has passed 15 minutes.
AU*36LUAS	
AU*45LUAS	
AU*54LUAS	

3. Defrost Flow Chart


3-1. For AU*24LUAR

The defrosting shall proceed by the integrating operation time as follows.

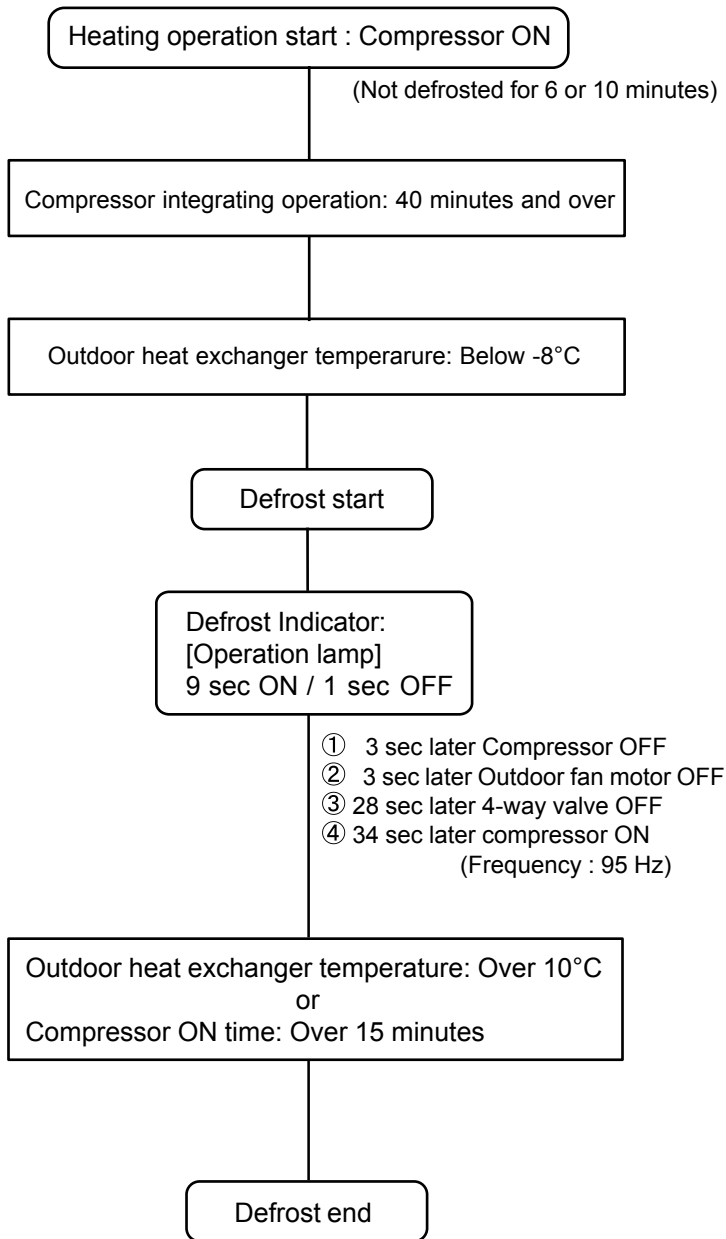

3-2. AU*30/ 36/ 45/ 54LUAS

The defrosting shall proceed by the integrating operation time and outdoor heat exchanger temperature as follows.

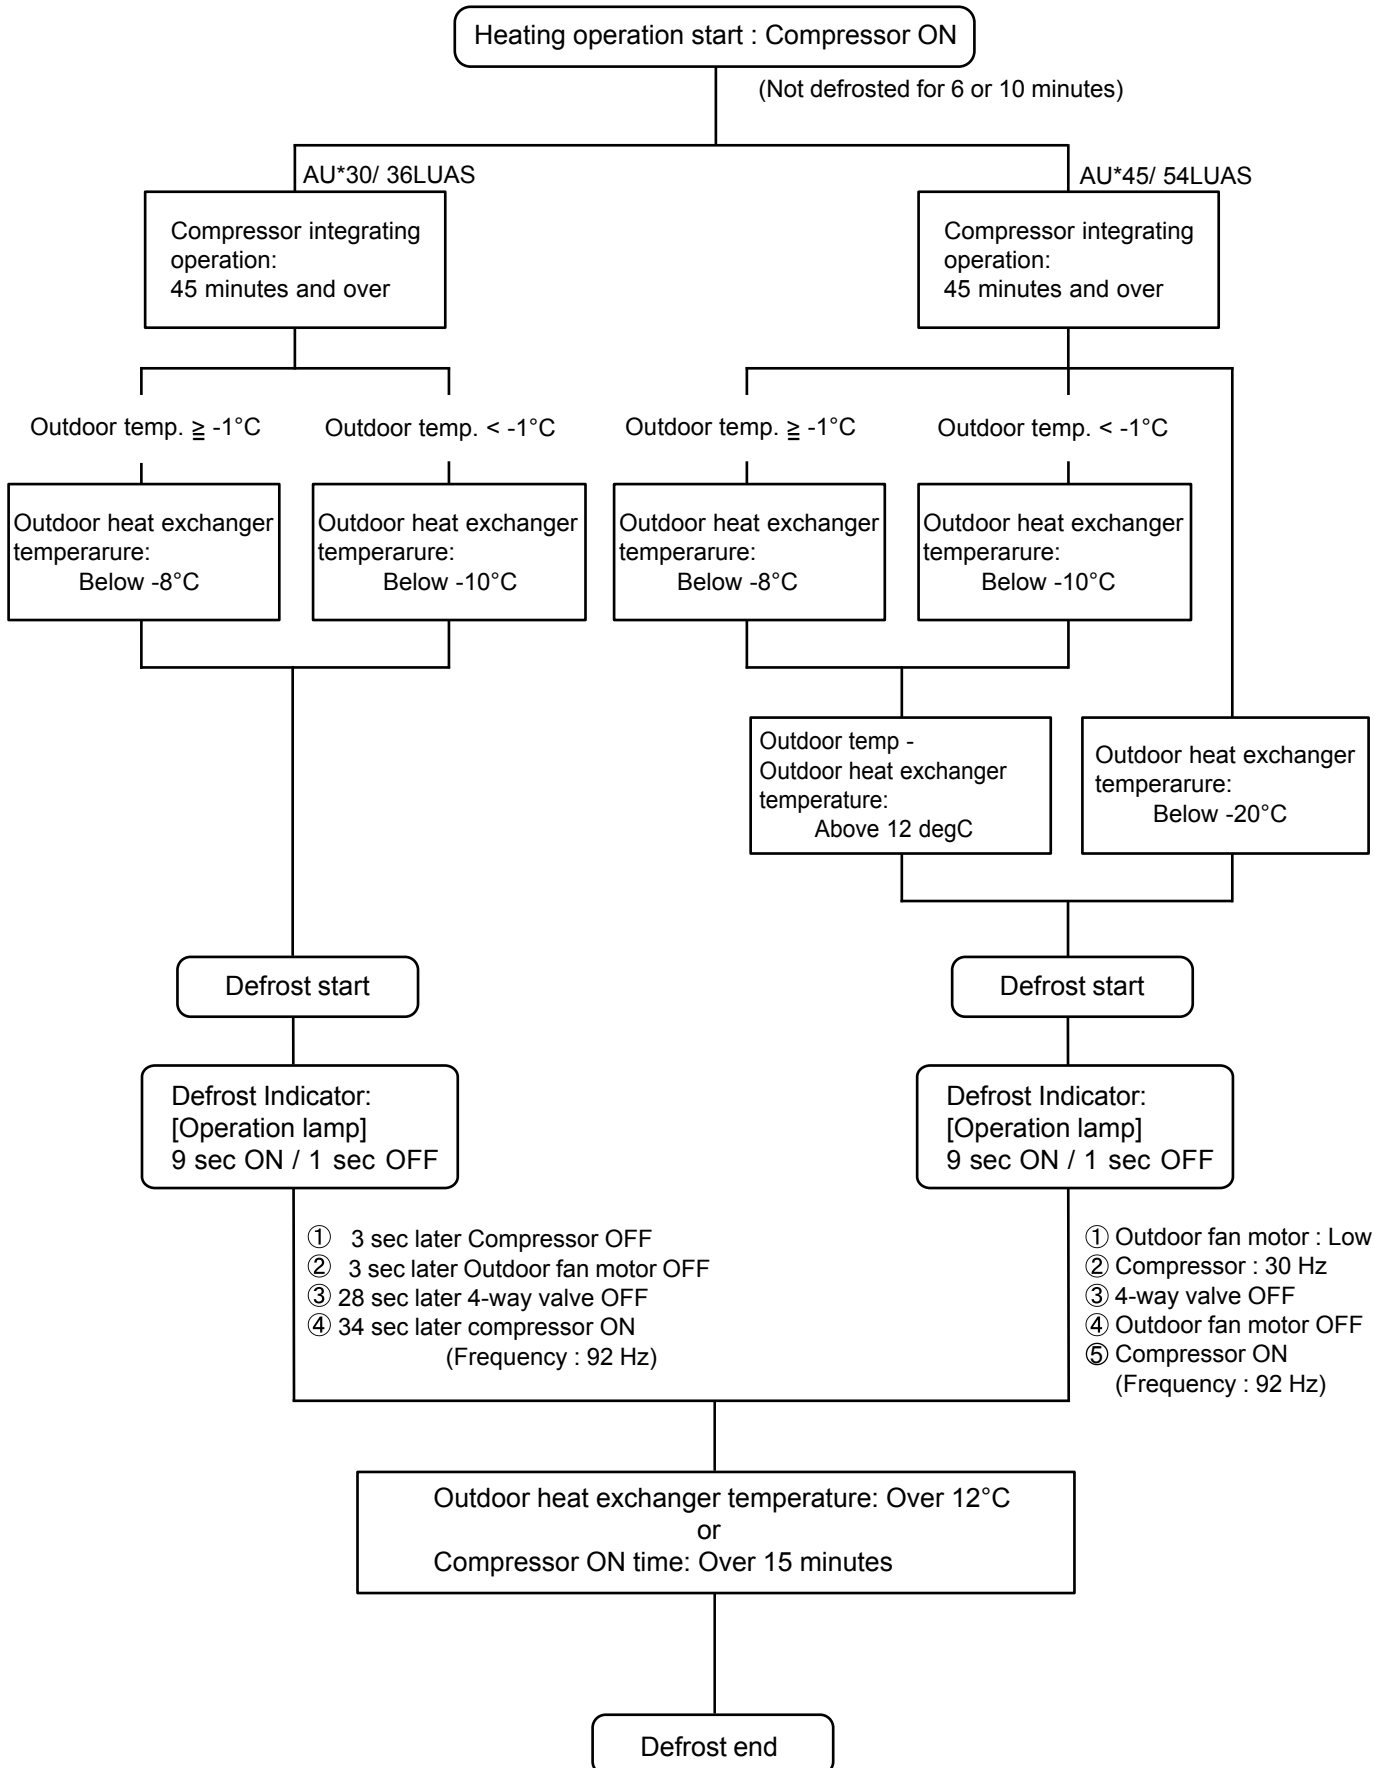

5-18. DRAIN PUMP OPERATION

• During Cooling / Dry operation

1. When the compressor starts, the drain pump starts simultaneously.
2. The drain pump operates continuously for 3 minutes after the compressor is turned off.
3. When the compressor stops by the "Indoor heat exchanger de-icing function", the drain pump is turned off in 1 hour after the compressor stops.
4. When the water level in the drain pan rises up and then the float switch functions:
 - ① The compressor, indoor and outdoor fan motor operation are stopped.
 - ② Drain pump operates continuously for 3 minutes after the float switch is turned off.
(Almost condensing water may be drained)
5. When the float switch turns ON continuously for 3 min., "FAILURE INDICATION" operates.
6. When the float switch turns OFF within 3 min., the unit starts cooling operation.


• During Heating / Fan / Stop operation

1. When the water level in the drain pan rises up and then the float switch functions:
 - ① Drain pump operates continuously for 3 minutes after the float switch is turned off.
(Almost condensing water may be drained)
2. When the float switch turns ON continuously for 3 min., "FAILURE INDICATION" operates.

5-19. ENERGY SAVE FUNCTION


1. During Cooling / Dry operation:

The thermostat temperature setting increases by 1 degC as soon as the ENERGY SAVE button is pressed, and then increases by 1 degC after 1 hour later. Afterwards, energy consumption is saved by continuing to cool or dry at a thermostat temperature of 2 degC higher than setting temperature.

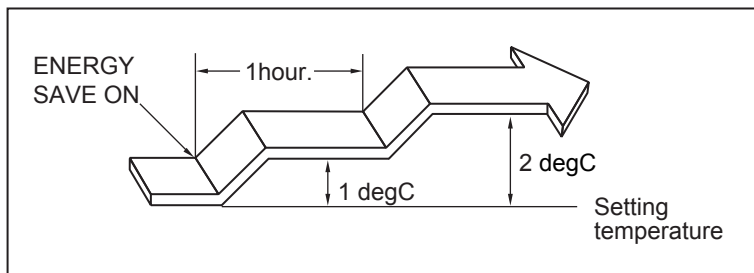

2. During Heating operation:

The thermostat temperature setting decreases by 1 degC as soon as the ENERGY SAVE button is pressed, and then decreases by another 1 degC every 30 minutes. Afterwards, energy consumption is saved by continuing to heat at a thermostat temperature of 4 degC lower than setting temperature.

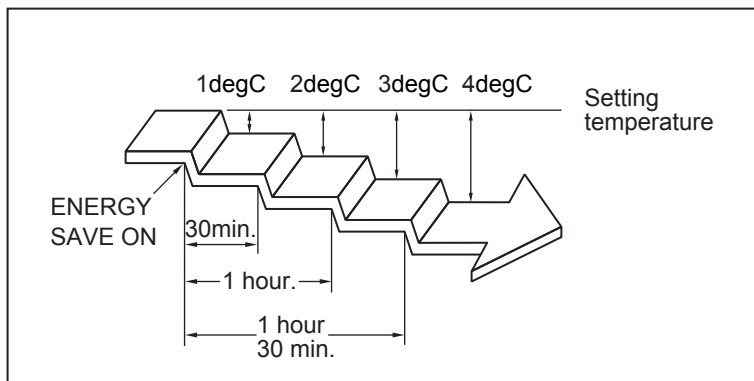

5-20. VARIOUS PROTECTIONS

1. DISCHARGE GAS TEMPERATURE OVER RISE PREVENTION CONTROL

The discharge gas thermosensor (discharge thermistor : Outdoor side) will detect discharge gas temperature.

When the discharge temperature becomes higher than Temperature I ,the compressor frequency is decreased 10 Hz, and it continues to decrease the frequency for 10 Hz every 120 seconds until the temperature becomes lower than Temperature I.

When the discharge temperature becomes lower than Temperature II ,the control of the compressor frequency is released.

When the discharge temperature becomes higher than Temperature III ,the compressor stops.

When the discharge temperature becomes lower than Temperature IV ,the compressor operates.

(Table 11 : Discharge Temperature Over Rise Prevention Control / Release Temperature)

	Temperature I	Temperature II	Temperature III	Temperature IV
AU*24LUAR	110°C	105°C	120°C	80°C
AU*30LUAS				
AU*36LUAS				
AU*45LUAS				
AU*54LUAS				

2. CURRENT RELEASE CONTROL

2-1. For AR*24LUAR

The compressor frequency is controlled so that the outdoor unit input current does not exceeds the current limit value.

The compressor frequency returns to the designated frequency of the indoor unit at the time when the frequency becomes lower than the release value.

(Table 12-1 : Current Release Operation Value / Release Value)

	Current Release Operation Value	Release Value
AU*24LUAR	12.0A	11.5A

2-2. For AU*30/ 36/ 45/ 54LUAS

The compressor frequency is controlled so that the outdoor unit input current does not exceed the current limit value that was set up with the outdoor temperature.

The compressor frequency returns to the designated frequency of the indoor unit at the time when the frequency becomes lower than the release value.

(Table 12-2 : Current Release Operation Value / Release Value)

[Heating]

AU*30LUAS AU*36LUAS	Outdoor unit fan speed				
	900 rpm	780 rpm	400 rpm	250 rpm	170 rpm
$T_0 \geq 16^\circ\text{C}$	15.0A / 14.5A	15.0A / 14.5A	13.0A / 12.5A	10.0A / 9.5A	8.0A / 7.5A
$16^\circ\text{C} > T_0 \geq 5^\circ\text{C}$	18.0A / 17.5A				
$T_0 < 5^\circ\text{C}$		18.0A / 17.5A	18.0A / 17.5A	18.0A / 17.5A	18.0A / 17.5A

T0: Outdoor temperature

[Heating]

AU*45LUAS AU*54LUAS	Outdoor unit fan speed				
	850 rpm	780 rpm	350 rpm	200 rpm	150 rpm
$T_0 \geq 12^\circ\text{C}$	23.5A / 23.0A	20.0A / 19.5A	20.0A / 19.5A	15.0A / 14.5A	12.0A / 11.5A
$T_0 < 12^\circ\text{C}$		23.5A / 23.0A	23.5A / 23.0A	23.5A / 23.0A	23.5A / 23.0A

T0: Outdoor temperature

[Cooling]

AU*30LUAS AU*36LUAS	Outdoor unit fan speed				
	850 rpm	780 rpm	400 rpm	250 rpm	170 rpm
$T_0 \geq 45^\circ\text{C}$	10.0A / 9.5A	10.0A / 9.5A	10.0A / 9.5A	7.0A / 6.5A	5.5A / 5.0A
$45^\circ\text{C} > T_0 \geq 38^\circ\text{C}$	14.0A / 13.5A	14.0A / 13.5A			
$38^\circ\text{C} > T_0 \geq 19^\circ\text{C}$	18.0A / 17.5A				
$19^\circ\text{C} > T_0 \geq 13^\circ\text{C}$		15.0A / 14.5A	15.0A / 14.5A		7.0A / 6.5A
$13^\circ\text{C} > T_0 \geq 0^\circ\text{C}$				12.0A / 11.5A	
$T_0 < 0^\circ\text{C}$					9.5A / 9.0A

T0: Outdoor temperature

[Cooling]


AU*45LUAS AU*54LUAS	Outdoor unit fan speed				
	850 rpm	780 rpm	400 rpm	350 rpm	300 rpm
$T_0 \geq 45^\circ\text{C}$	12.0A / 11.5A	12.0A / 11.5A	12.0A / 11.5A	12.0A / 11.5A	12.0A / 11.5A
$45^\circ\text{C} > T_0 \geq 38^\circ\text{C}$	20.0A / 19.5A	20.0A / 19.5A			
$38^\circ\text{C} > T_0 \geq 31^\circ\text{C}$	23.5A / 23.0A				
$31^\circ\text{C} > T_0 \geq 25^\circ\text{C}$			18.0A / 17.5A		
$25^\circ\text{C} > T_0 \geq 19^\circ\text{C}$				18.0A / 17.5A	
$19^\circ\text{C} > T_0 \geq 13^\circ\text{C}$			20.0A / 19.5A		15.0A / 14.5A
$T_0 < 13^\circ\text{C}$					18.0A / 17.5A

T0: Outdoor temperature

3. ANTI-FREEZING CONTROL (Cooling mode)

The compressor frequency decreases on cooling mode when the indoor heat exchanger temperature sensor detects the temperature lower than 3°C. Then, the anti-freezing control is released when it becomes higher than 6°C.

(Fig.11 : Anti-freezing Protection Operation / Release Temperature)

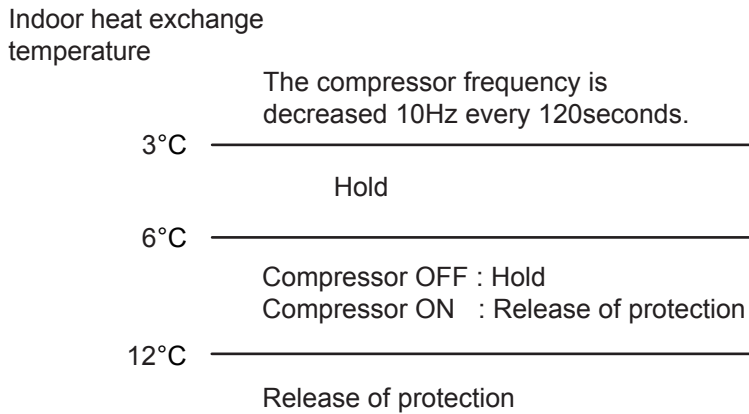

- When the compressor frequency becomes lower than minimum frequency, the compressor operates at minimum frequency. If the indoor heat exchanger temperature sensor detects the temperature lower than 3°C after 2minutes upon operating the compressor at minimum frequency, the compressor stops.


4. COOLING PRESSURE OVER RISE PROTECTION

When the outdoor unit heat exchange sensor temperature rises to 70.5°C or greater, the compressor is stopped and error display is indicated.

5. HIGH TEMPERATURE RELEASE CONTROL (HEATING MODE)

On heating mode, the compressor frequency is controlled as following based on the detection value of the indoor heat exchanger temperature sensor.

(Fig.12 : Heating Overload Protection Control)

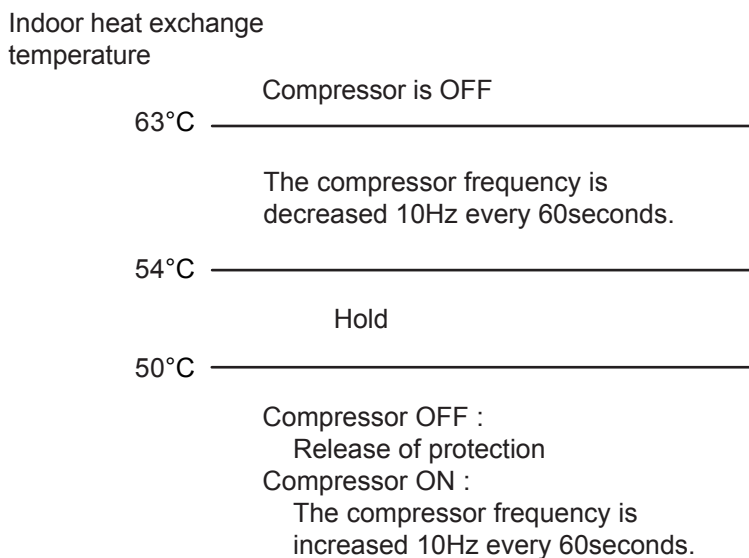

CASSETTE type INVERTER

6 . REFRIGERANT CAUTION -R410A-


6. REFRIGERANT CAUTION -R410A-

6-1. R410A TOOLS

This air conditioner used R410A.
 For installation and servicing, it is necessary to prepare the tools and machines that are different from the previous refrigerant.

- ⊙ **Mark shows the exclusive use for R410A.**
- ⊙ **Gauge manifold** (Fig.4-1)
 The specification of the gauge is different due to higher pressure.
 The size of connection pipe is also different to prevent mis-use.
- ⊙ **Charge hose** (Fig.4-2)
 Since the normal pressure is high, the connection pipe size is also different.
- ⊙ **Refrigerant cylinder** (Fig.4-3)
 Confirm the refrigerant type before charging. Always charge liquid-phase refrigerant.
- Electronic balance for refrigerant charging** (Fig.4-4)
 Electronic balance is recommended as in the case of R410A.
- ⊙ **Vacuum pump with adapter to prevent reverse flow**(Fig.4-5)
 Conventional pump can be used.
- Vacuum holder** (Fig.4-6)
 Conventional pump can be used if adapter for preventing vacuum pump oil from flowing back is used.
- ⊙ **Gas leakage tester** (Fig.4-7)
 Exclusive for HFC
- Refrigerant cleaner** (Fig.4-8)
 Brown paint as designated by the ARI, USA
- ⊙ **Flare tool** (Fig.4-9)
 The shape of flare is different for high pressure condition.
- ⊙ **Torque wrench** (Fig.4-10)
- ⊙ **Refrigerant recovering equipment (Collector)** (Fig.4-11)
 The type which can be used for any refrigerant is available
- Nitrogen cylinder** (Fig.4-12)
 This prevents an oxide film from forming in the pipe silver-alloy brazing work by turning the air out of the pipe and preventing the inside combustion.
- ⊙ **Safety charger** (Fig.4-13)
 It is always compulsory to change the liquid, because R410A is a mixed refrigerant and there is some fear that a mixing ratio changes. In order to avoid the refrigerant from returning to the compressor in a liquid state, the refrigerant can be charged instead of giving a load to the compressor with a safety charger.
- Control valve** (Fig.4-14)
 The control valve prevents the refrigerant from spouting when it is removed, as the charging hose side and the service port side are possible to open and close at the same time.
- Thermistor vacuum gauge** (Fig.4-15)
 To remove moisture from the refrigerating cycle completely, it is necessary to perform appropriate vacuum drying. For that reason, vacuum conditions can be confirmed certainly.
- Vacuum valve** (Fig.4-16)
 This valve builds in a check valve, and it is easily possible to vacuum a refrigerating cycle or check for degree of vacuum with it.

TOOLS AND EQUIPMENT (R410A)

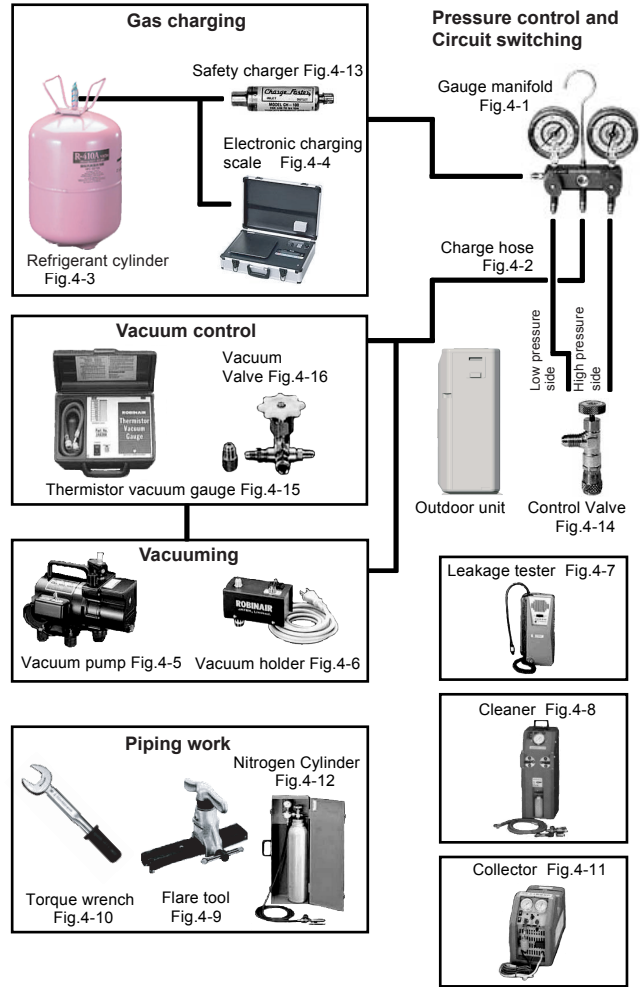

* 1 Gauge Manifold

	R410A	R22, R407C
High pressure gauge	-0.1~5.3 Mpa	-0.1~3.5 Mpa
Compound gauge	-0.1~3.8 Mpa	-0.1~1.7 Mpa
Port size	1/2UNF 5/16"	7/16UNF 1/4"

* 2 Charge hose

	R410A	R22, R407C
Normal pressure	5.1 Mpa	3.4 Mpa
Breaking pressure	27.4 Mpa	17.2 Mpa
Port size	1/2UNF	7/16UNF

6-2. PRECAUTION FOR INSTALLATION

Precaution for installation

Pipe diameter, recommended material and wall thickness


Nominal diameter (in)	1/4"	3/8"	1/2"	5/8"	3/4"	7/8"	1"	1 1/8"	1 1/4"	1 3/8"	1 1/2"
Outside diameter (mm)	6.35	9.52	12.70	15.88	19.05	22.22	25.40	28.58	31.75	34.92	38.10
Material	COPPER JIS H3300-C1220T-O or equivalent ¹⁾					COPPER JIS H3300-C1220T-H or equivalent ²⁾					
Wall thickness ³⁾ (mm)	0.8	0.8	0.8	1.0	1.2	1.0	1.0	1.0	1.1	1.2	1.3

1) Allowable tensile stress ≥ 33 (N/mm²); 2) Allowable tensile stress ≥ 61 (N/mm²); 3) Design pressure 4.2MPa.

The pipe must be properly pressure rated for R410A
The pipe must be an air-conditioning refrigerant pipe.

Flare and flare nuts

Diameter	1/4" (6.35mm)		3/8" (9.52mm)		1/2" (12.7mm)		3/8" (15.88mm)		3/4" (19.05mm)	
Refrigerant	R410A	R22 /R407C	R410A	R22 /R407C	R410A	R22 /R407C	R410A	R22 /R407C	R410A	R22 /R407C
A	9.1	9.0	13.2	13.0	16.6	16.2	19.7	19.4	24	23.7
B	13	12	20	15	13	20	25	23	29	29
C	12	11	16	12.5	19	16	22	20	24	24
Nut width	17		22		26	24	29	27	36	

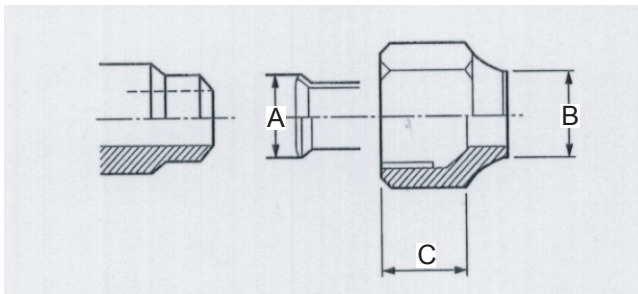


Always use the flare nut that is packed with the product.

Do not use existing (for R22) pipes



- Be sure to use new pipes when replacing conventional (R22) model with HFC (R407C, R410A) model.
- If you use existing pipes, it may cause resolution of compressor oil by remaining mineral oil.

Be careful not to mix moisture and contamination into the pipe

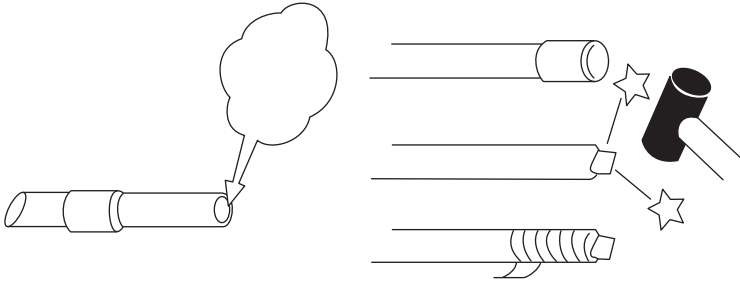


Moisture and contamination in the pipe is a cause of trouble.

Air purge

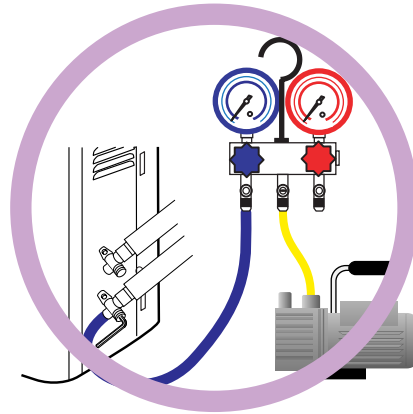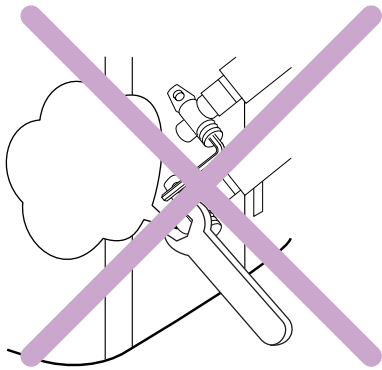


Always use a vacuum pump to purge air.

Refrigerant charge

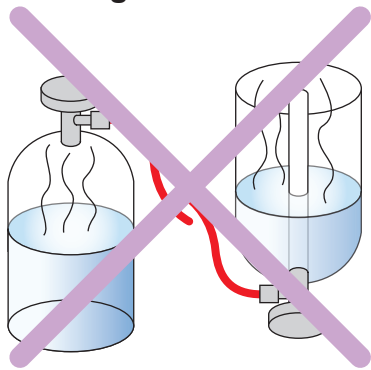

Don't charge from the gas phase side.

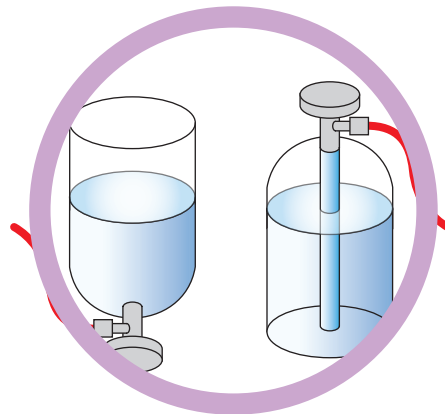

Do it always from the liquid phase side.

Compressor oil is changed

- We developed new synthetic oil, since HFC refrigerant doesn't dissolve in mineral (for R22)oil.
- Be careful to handle synthetic oil, since it resolves easily by moisture and contamination.
- Don't mix new synthetic oil and mineral oil. It may cause trouble.

6-3. PRECAUTION FOR SERVICING

Feature 1 Refrigerant oil is different from before.

<p>Refrigerant oil for New Refrigerant</p> <p>Synthetic oil Ether Esther</p> <p>※ Previously it was mineral oil.</p>	<p>Different point from previous one</p> <ul style="list-style-type: none"> • Absorbent character is high. • Contamination occurs when mixed with other kind of oil. 	<p>Precaution on Tools</p> <ul style="list-style-type: none"> • Use the gauge manifold and charge hose for New Refrigerant(HFC), which shall be segregated from those of R22. • Attach the stop valve on the vacuum pump and avoid the oil from reverse flow. • It is necessary to use the vacuum pump which can obtain the high vacuum condition.
---	--	---


Feature 2 **R410A** New Refrigerant has Approx 1.6 times higher pressure than previous refrigerant. **R22**

<p>R410A</p> <p>High Pressure</p> <p>※ 1.6 times of R22.</p>	<p>Different point from previous one</p> <ul style="list-style-type: none"> • Diameter of Service port has been changed from 1/4 Flare to 5/16 Flare. • JIS standard of flare process It became larger • To keep the thickness of copper tube. (1/4, 3/8 = more than 0.8mm) 	<p>Precaution on Tools</p> <ul style="list-style-type: none"> • It requires the gauge manifold and charge hose exclusively for R410A. • It requires the flare tool and torque wrench that satisfies New JIS standard. <p>※ Previous flare tool + flare adapter can be used as well.</p>
---	--	---


6-4. NEW REFRIGERANT R410A

* What is HFC ?

Phase-out schedule of HCFC according to Montreal protocol

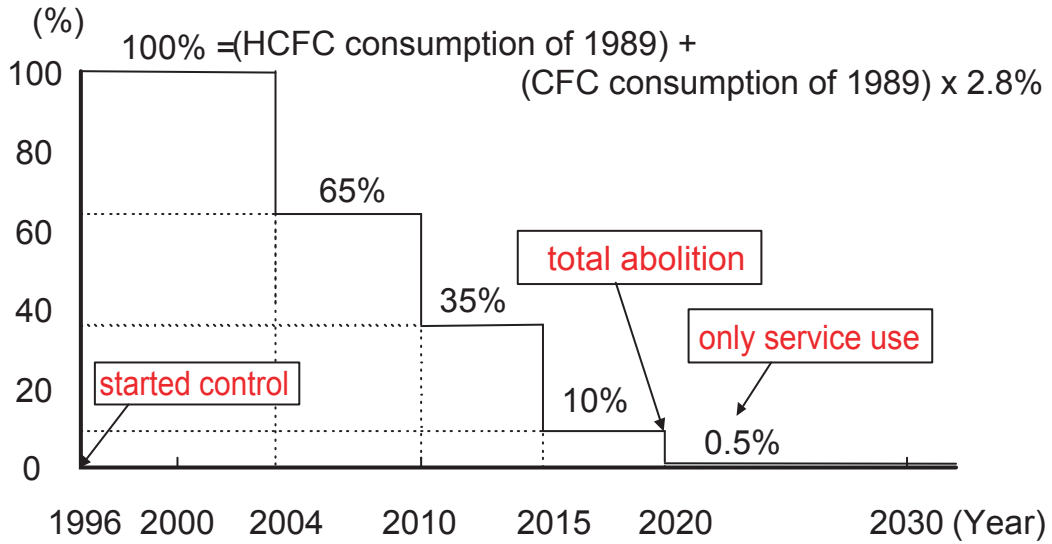

Ozone Layer depleting mechanism

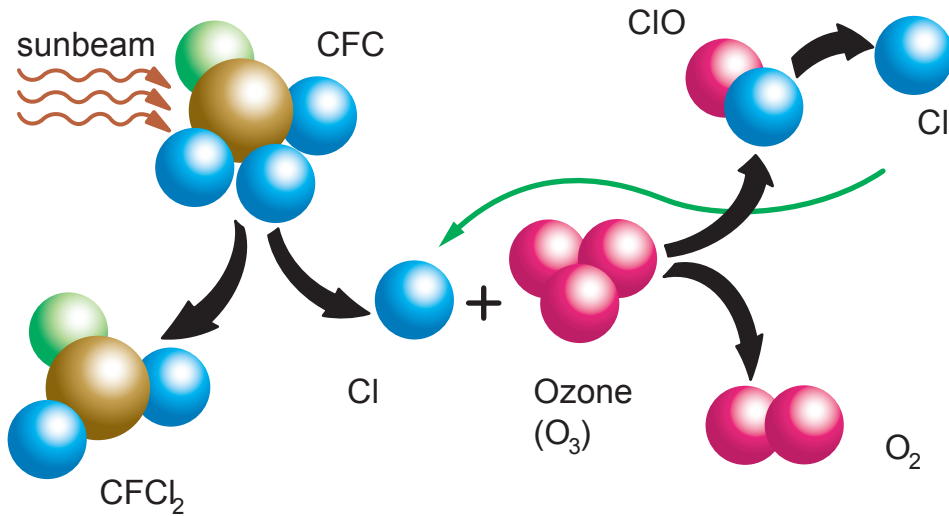

What is CFC and HCFC?

CFC : Chloro-Fluoro-Carbon

High ODP(ozone depletion potential) chemical compound, including chlorine. (ODP:0.6-1.0)
For example : R12 (for refrigerator and car air-conditioner)

HCFC : Hydro-Chloro-Fluoro-Carbon

Low ODP chemical compound, including chlorine and hydrogen. (ODP:0.02-01)
For example : R22 (for air-conditioner)

HFC₃ : Hydro-Fluoro-Carbon

R134a (for Car air conditioner)
R407C (for air conditioner)

Refrigerant characteristics

	R410A	R407C	R22
Composition (wt%)	R32/R125 (50/50)	R32/R125/R134a (23/25/52)	R22 (100)
Boiling Point	- 51.4	- 43.6	- 40.8
Behavior	near azeotrope	zeotrope	---
Pressure at 54.5 °C (kPa)	3,406	2,262	2,151
Temperature Glide (deg)	0.11	5.4	0
ODP	0	0	0.055

Summary of R407C and R410A characteristics

	R410A	R407C
Advantage	<ul style="list-style-type: none"> • higher system performance • Near-Azeotropic refrigerant 	<ul style="list-style-type: none"> • similar pressure as R22 (possible to design large equipment)
Disadvantage	<ul style="list-style-type: none"> • 1.6 times higher pressure than R22 (difficult to design against pressure resistance) 	<ul style="list-style-type: none"> • Zeotropic refrigerant (handle with care)
Suitable for	<ul style="list-style-type: none"> • Small Air-Conditioners 	<ul style="list-style-type: none"> • Large Air-Conditioners

* Designed pressure of R410A refrigerant

Relation between R410A condensing temperature and saturated pressure.

< Pressure → Temp >

Pressure (Mpa)	Temp (°C)
2.20	37.9
2.25	38.7
2.30	39.6
2.35	40.5
2.40	41.3
2.45	42.1
2.55	43.8
2.60	44.6
2.65	45.3
2.70	46.1
2.75	46.8
2.80	47.6
2.85	48.3
2.90	49.0
2.95	49.8
3.00	50.5
3.05	51.2
3.10	51.9
3.15	52.6
3.20	53.2
3.25	53.9
3.30	54.6
3.35	55.3
3.40	55.9
3.45	56.5
3.50	57.1
2.55	57.8
3.60	58.4
3.65	59.0
3.70	59.6
3.75	60.2
3.80	60.8
3.85	61.4
3.90	62.0
3.95	62.5
4.00	63.1
4.05	63.6
4.10	64.2
4.15	64.8

< Temp → Pressure >

Temp (°C)	Pressure (Mpa)
39	2.27
40	2.32
41	2.38
42	2.44
44	2.57
45	2.63
46	2.69
47	2.76
48	2.83
49	2.90
51	3.04
52	3.11
53	3.18
54	3.26
56	3.41
57	3.49
58	3.57
59	3.65
61	3.82
62	3.90
63	3.99
64	4.08

6-5. DEFERENCE FROM CONVENTIONAL MODEL (R22) AND PRECAUTIONS

OIL

- Use new synthetic oils such as ester because HFC series refrigerant has less solubility with mineral oils conventionally used for R22.
- As these new synthetic oils are easily influenced by moisture and dusts, they must be treated more carefully than the conventional lubricating oils.

CAUTION

For installation/servicing, take more precautions than the case of conventional refrigerants to avoid moisture and dusts entering the refrigerant circuit. Also, for storing parts, more precautions must be taken.

COMPRESSOR

- Use better grade of material for sliding parts for securing good lubrication of sliding part as HFC refrigerant does not contain chloride.
- Review insulating materials
- Increase pressure resistance strength

CAUTION

Check if the compressor is suitable for the refrigerant (model) when replacing. Complete welding within 15 minutes after opening the cap when replacing.

HEAT EXCHANGER

- Review the water, contaminants controlling level
- Use thinner tube to increase pressure resistance strength (only outdoor unit) improving performance

CAUTION

During storage, due care must be taken so that foreign matters such as dust and water do not enter.

4-WAY VALVE

- Review materials

CAUTION

Check if the valve is suitable for the refrigerant (model) when replacing.

2, 3-WAY VALVE

- Review material O-ring, valve core seal for securing suitability with oil.

CAUTION

Check if the valve is suitable for the refrigerant (model) when replacing.

Check Valve

- Review materials
- Change shape of pipe ends to increase pressure resistance strength.

CAUTION

Check if the valve is suitable for the refrigerant (model) when replacing.

Other Piping

- Review the water, contaminants controlling level.
- Review thickness of pipes.

CAUTION

During storage, due care must be taken so that foreign matters such as dust and water do not enter.

CASSETTE type INVERTER

7 . TROUBLE SHOOTING

7. TROUBLESHOOTING


7-1 ERROR DISPLAY

7-1-1 WIRED REMOTE CONTROLLER DISPLAY

1. SELF - DIAGNOSIS

When the error indication "E:EE" is displayed, inspection of the air conditioning system is necessary. Please consult authorized service personnel.

Run [Self-Diagnosis] if [E:EE] flashes on the clock display of the remote controller.

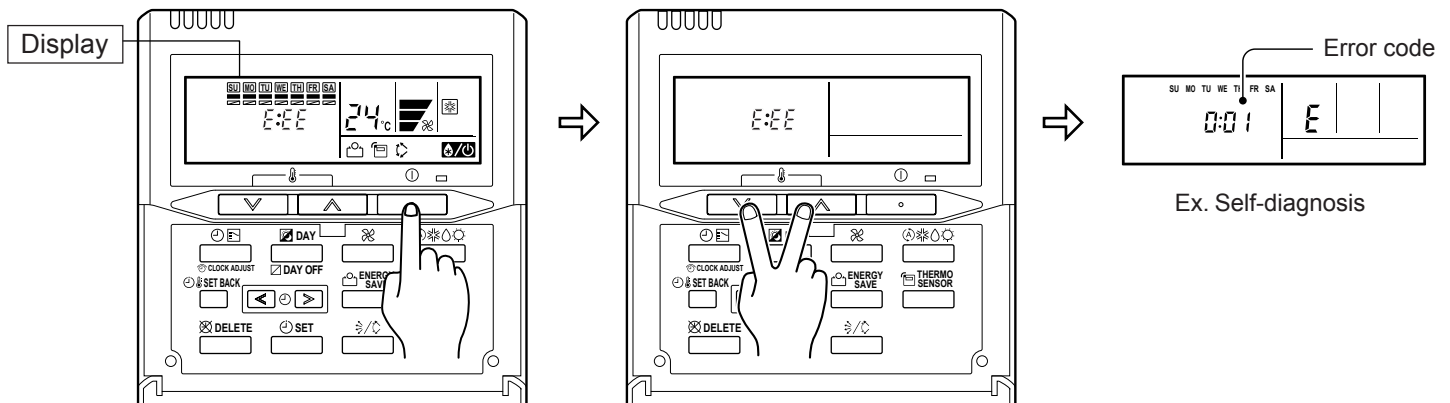

1. Stop the air conditioner operation.
2. Press the SET TEMPERATURE buttons ∇ and \blacktriangle simultaneously for 5 seconds or more to start the self-diagnosis.
3. Press the SET TEMPERATURE buttons ∇ and \blacktriangle simultaneously for 5 seconds or more or there is no key input for 20 seconds to stop the self-diagnosis.



Error code	Error contents	Trouble shooting
E:00	Communication error (indoor unit ← remote control)	1
E:01	Communication error (Serial reverse transfer error)	2
E:02	Room temperature sensor open	3
E:03	Room temperature sensor short-circuited	
E:04	Indoor heat exchanger temperature sensor open	4
E:05	Indoor heat exchanger temperature sensor short-circuited	
E:06	Outdoor heat exchanger temperature sensor error	5
E:09	Water drain abnormal	6
E:0A	Outdoor temperature sensor error	7
E:0C	Outdoor discharge pipe temperature sensor error	8
E:11	Indoor EEPROM abnormal (Model No.)	9
E:12	Indoor fan motor abnormal	10
E:13	Outdoor communication signal error (Forward transfer signal error)	11
E:15	Compressor temperature sensor error	12
E:16	Pressure switch error	13
E:17	IPM error	14
E:18	CT error	15
E:19	Active filter module (AFM) error	16
E:1A	Compressor rotor location cannot detect (permanent stop)	17
E:1b	Outdoor unit fan motor error	18

2. ERROR CODE HISTORY DISPLAY



Up to 16 memorized error codes may be displayed for the indoor unit connected to the remote controller.

1. Stop the air conditioner operation.


2. Press the SET TEMPERATURE buttons ∇ , \blacktriangle and the START/STOP button $\text{\textcircled{1}}$ simultaneously for 5 seconds or more to start the self-diagnosis.

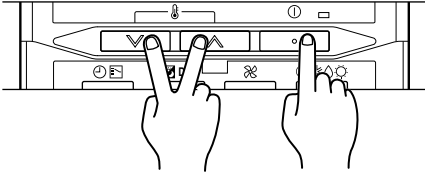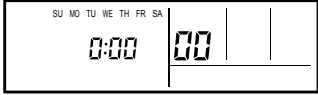3. Press the START/STOP button.

4. Press the SET TEMPERATURE button to select the error history number.

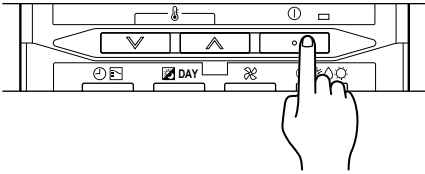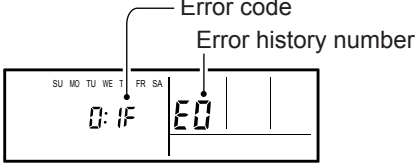

$\left[\begin{array}{cccccccc} 0 & \leftrightarrow & 1 & \leftrightarrow & 2 & \leftrightarrow & 3 & \leftrightarrow & 4 & \leftrightarrow & 5 & \leftrightarrow & 6 & \leftrightarrow & 7 \\ F & \leftrightarrow & E & \leftrightarrow & d & \leftrightarrow & c & \leftrightarrow & b & \leftrightarrow & A & \leftrightarrow & 9 & \leftrightarrow & 8 \end{array} \right]$

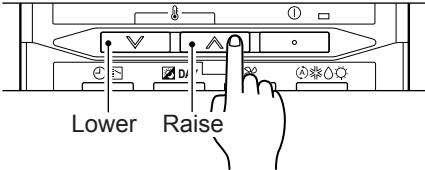5. Press the SET TEMPERATURE buttons ∇ , \blacktriangle and START/STOP button $\text{\textcircled{1}}$ simultaneously for 5 seconds or more or there is no key input for 20 seconds to stop the display.

7-1-2 OUTDOOR UNIT DISPLAY

1. ERROR DISPLAY


Error contents	LED Flashing Pattern	Display priority	Trouble shooting
Outdoor communication signal error (Forward transfer signal error)	1 time flash	1	11
Outdoor discharge pipe temperature sensor error	2 times blink	2	8
Outdoor heat exchanger temperature sensor error	3 times blink	3	5
Outdoor temperature sensor error	4 times blink	4	7
Compressor temperature sensor error	7 times blink	5	12
Heat sink temperature sensor error	8 times blink	6	19
Pressure switch abnormal	9 times blink	7	13
IPM error	12 times blink	8	14
Compressor rotor location cannot detect	13 times blink	9	17
Compressor Start-up error	14 times blink	10	20
Outdoor unit fan motor error (upper fan)	15 times blink	11	18
Outdoor unit fan motor error (lower fan)	16 times blink	12	

(Only for AU*24LUAR (AO*24LMAKL))

Error contents	LED Flashing Pattern	Display priority	Trouble shooting
Outdoor communication signal error (Forward transfer signal error)	1 time flash	1	11
Outdoor discharge pipe temperature sensor error	2 times blink	2	8
Outdoor heat exchanger temperature sensor error	3 times blink	3	5
Outdoor temperature sensor error	4 times blink	4	7
Compressor temperature sensor error	7 times blink	5	12
Pressure switch abnormal	8 times blink	6	13
IPM error	10 times blink	7	14
CT error	11 times blink	8	15
Compressor rotor location cannot detect	12 times blink	9	17
Compressor Start-up error	13 times blink	10	20

2. ERROR DISPLAY METHOD

Outdoor LED Blink (1 to 16 times) 0.5sec ON / 0.5sec OFF blinking

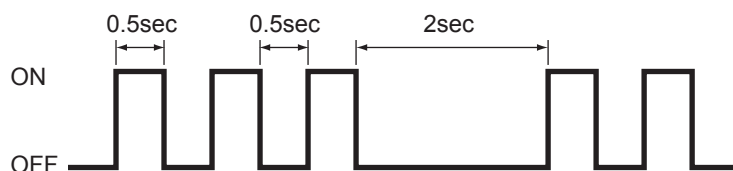

3. NORMAL OPERATION DISPLAY

Operation	LED Blinking Pattern
Normal operation	Continuously lighting
Protected operation	5sec ON / 1sec OFF
Pump down operation	1sec ON / 1sec OFF

7-2 TROUBLE SHOOTING WITH ERROR CODE


<p>Trouble shooting 1 <u>INDOOR UNIT Error Method:</u> Communication Error (Indoor unit ← Remote control)</p>	<p><u>Indicate or Display:</u> Indoor Unit : No LED Outdoor Unit : No indication ERROR CODE : E : 00</p>
--	---

<p><u>Detective Actuators:</u> Indoor unit controller PCB circuit Wired Remote Control</p>	<p><u>Detective details:</u> When the indoor unit cannot receive the signal from Wired Remote more than 10seconds after power ON, or the indoor unit cannot receive the signal more than 1minute during normal operation.</p>
---	---

<p><u>Forecast of Cause:</u> 1. Terminal connection abnormal 2. Wired Remote Control failure 3. Controller PCB failure</p>
--

<p>Check Point 1 : Check the connection of terminal</p>
<p><u>After turning off the power, check & correct the followings.</u> · Check the connection of terminal between remote control and Indoor unit, and check if there is a disconnection of the cable.</p>




<p>Check Point 2 : Check Remote Control and Controller PCB</p>	
<p>· Check Voltage at CN17 of Controller PCB. (Power supply to Remote Control) >> If it is DC12V, Remote Control is failure. (Controller PCB is normal) >> Replace Remote Control >> If it is DC 0V, Controller PCB is failure. (Check Remote Control once again) >> Replace Controller PCB</p> <p>▶ <u>Upon correcting the removed connector or mis-wiring, reset the power.</u></p>	

Trouble shooting 2 OUTDOOR UNIT Error Method: Communication Error (Serial Reverse Transfer Error)	<u>Indicate or Display:</u> Indoor Unit : No LED Outdoor Unit : No indication ERROR CODE : E : 01
--	---

<u>Detective Actuators:</u> Outdoor Unit Main PCB Circuit Active Filter Module	<u>Detective details:</u> When the indoor unit cannot receive the serial signal from Outdoor unit more than 10seconds.
--	---

Forecast of Cause:
1. Connection failure 2. External cause 3. Main PCB failure 4. Active Filter Module failure

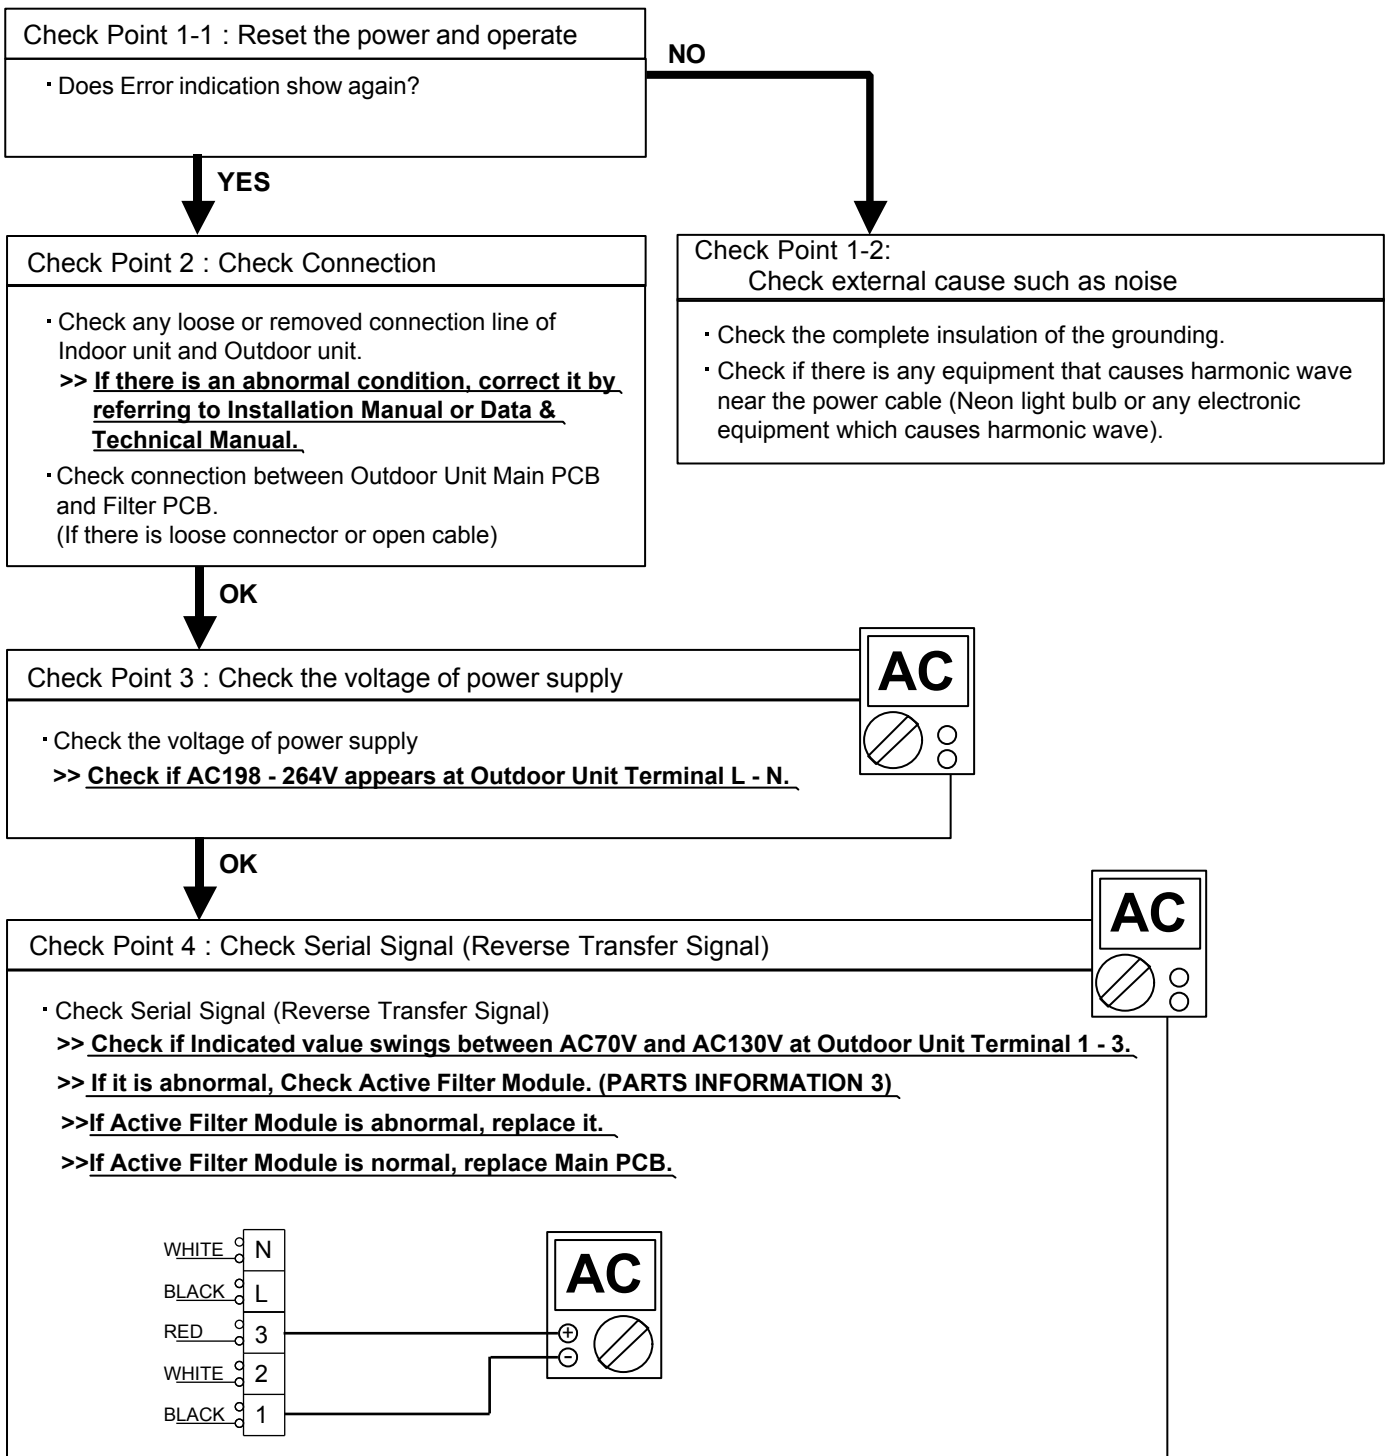

Trouble shooting 3 INDOOR UNIT Error Method: Room Temperature Sensor Error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : No indication ERROR CODE : E : 02 / 03
---	--

Detective Actuators: Indoor Unit Controller PCB Circuit Room Temperature Thermistor	Detective details: When Room Temperature Thermistor open or short-circuit is detected at power ON.
--	--

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Controller PCB failure


Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

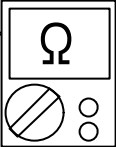

Thermistor Characteristics (Approx. value)


Temperature	0°C	5°C	10°C	15°C	20°C	25°C	30°C	35°C
Resistance Value (kΩ)	33.6	25.9	20.2	15.8	12.5	10.0	8.04	6.51

Temperature	40°C	45°C	50°C
Resistance Value (kΩ)	5.30	4.35	3.59


► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Controller PCB (DC5.0V)



Make sure circuit diagram of indoor unit and check terminal voltage at Thermistor (DC5.0V)

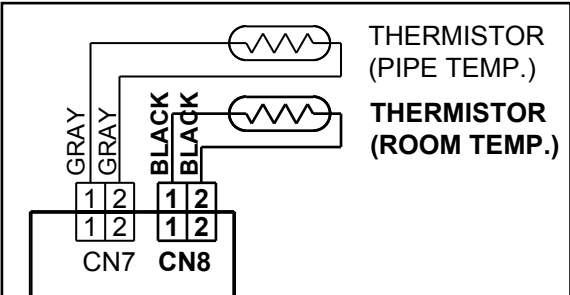

► If the voltage does not appear, replace Controller PCB.

Trouble shooting 4 INDOOR UNIT Error Method: Indoor Heat Exchanger Temperature Sensor Error	<u>Indicate or Display:</u> Indoor Unit : No LED Outdoor Unit : No indication ERROR CODE : E : 04 / 05
--	--

<u>Detective Actuators:</u> Indoor Unit Controller PCB Circuit Heat Exchanger Temperature Thermistor	<u>Detective details:</u> When Heat Exchanger Temperature Thermistor open or short-circuit is detected at power ON.
--	--

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Controller PCB failure


Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

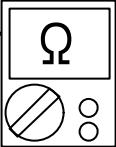

Thermistor Characteristics (Approx. value)


Temperature	0°C	5°C	10°C	15°C	20°C	25°C	30°C	35°C
Resistance Value (kΩ)	176	134	103	80.3	62.9	49.7	39.6	31.7

Temperature	40°C	45°C	50°C
Resistance Value (kΩ)	25.6	20.8	17.1


► **If Thermistor is either open or shorted, replace it and reset the power.**



Check Point 3 : Check voltage of Controller PCB (DC5.0V)



Make sure circuit diagram of indoor unit and check terminal voltage at Thermistor (DC5.0V)

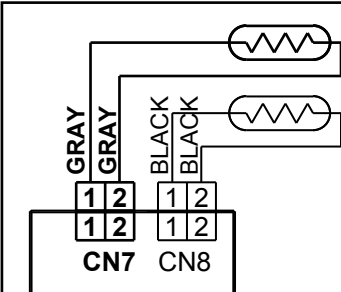

THERMISTOR (PIPE TEMP.)

THERMISTOR (ROOM TEMP.)

► **If the voltage does not appear, replace Controller PCB.**

Trouble shooting 5 OUTDOOR UNIT Error Method: Outdoor Heat Exchanger Temperature Sensor Error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED <u>3 times blink</u> ERROR CODE : E : 06
--	--

Detective Actuators: Outdoor Unit Main PCB Circuit Heat Exchanger Temperature Thermistor	Detective details: When Heat Exchanger Temperature Thermistor open or short-circuit is detected at power ON or while running the compressor.
---	--

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature	-10°C	-5°C	0°C	5°C	10°C	15°C	20°C	25°C	30°C
Resistance Value (kΩ)	27.5	20.9	16.1	12.4	9.73	7.67	6.10	4.89	3.95

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

► If the voltage does not appear, replace Main PCB.

Trouble shooting 6 INDOOR UNIT Error Method: Water Drain Abnormal	Indicate or Display: Indoor Unit : No LED Outdoor Unit : No indication ERROR CODE : E : 09
--	---




Detective Actuators: Indoor Unit Controller PCB Circuit Float Switch	Detective details: When Float Switch is ON for more than 3 minutes.
---	---

Forecast of Cause :
 1. Float Switch failure 2. Shorted connector/ wire 3. Controller PCB failure

Check Point 1 : Check Float Switch

- Check operation of float switch. (any blocking by dust, etc.)
- Remove Float switch and check ON/OFF switching operation by using a meter.

>>If Float switch is detective, replace it.

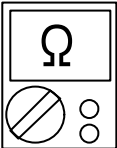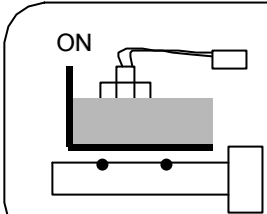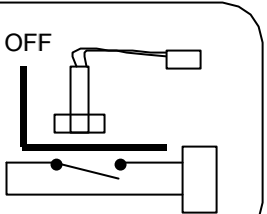↓
OK

Check Point 2 : Check Connector (CN15) / Wire

- Check loose contact of CN15 /shorted wire (pinched wire).

>>Replace Float switch if the wire is abnormal

↓
OK

Check Point 3 : Replace Controller PCB

▶ If Check Point 1 & 2 do not improve the symptom, change Controller PCB.

Trouble shooting 7 OUTDOOR UNIT Error Method: Outdoor Temperature Sensor Error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED 4 times blink ERROR CODE : E : 0A
---	---

Detective Actuators: Outdoor Unit Main PCB Circuit Outdoor Temperature Thermistor	Detective details: When Outdoor Temperature Thermistor open or short-circuit is detected at power ON or while running the compressor.
--	---

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)

Temperature	-20°C	-10°C	-5°C	0°C	5°C	10°C	15°C	20°C
Resistance Value (kΩ)	115	62.3	46.6	35.2	26.9	20.7	16.1	12.6

Temperature	30°C	40°C	50°C	60°C	70°C
Resistance Value (kΩ)	7.97	5.18	3.45	2.36	1.65

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

The diagram shows five thermistor types connected to specific terminals on the Main PCB:

- THERMISTOR (DISCHARGE)**: Connected to terminal **CN21** via a **BROWN** wire.
- THERMISTOR (PIPE)**: Connected to terminal **CN22** via a **BLACK** wire.
- THERMISTOR (OUTDOOR)**: Connected to terminal **CN23** via a **BLUE** wire.
- THERMISTOR (COMPRESSOR)**: Connected to terminal **CN26** via a **BROWN** wire.
- THERMISTOR (HEAT SINK)**: Connected to terminal **CN25** via a **BLACK** wire.

► If the voltage does not appear, replace Main PCB.

Trouble shooting 8 OUTDOOR UNIT Error Method: Outdoor Discharge Pipe Temperature Sensor Error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED 2 times blink ERROR CODE : E : 0C
--	---

Detective Actuators: Outdoor Unit Main PCB Circuit Discharge Pipe Temperature Thermistor	Detective details: When Discharge Pipe Temperature Thermistor open or short-circuit is detected at power ON or while running the compressor.
---	--

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)										
Temperature	0°C	5°C	10°C	15°C	20°C	30°C	40°C	50°C	60°C	
Resistance Value (kΩ)	176	135	105	81.8	64.5	41.1	26.9	18.1	12.5	
Temperature	70°C	80°C	90°C	100°C	120°C	140°C	160°C	180°C		
Resistance Value (kΩ)	8.78	6.31	4.61	3.43	1.98	1.21	0.77	0.51		

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)


Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

► If the voltage does not appear, replace Main PCB.

Trouble shooting 9 INDOOR UNIT Error Method: Indoor EEPROM abnormal (Model No.)	Indicate or Display: Indoor Unit : No LED Outdoor Unit : No indication ERROR CODE : E : 11
--	---

Detective Actuators: Indoor Unit Controller PCB circuit	Detective details: When the model information being read from EEPROM has an apparent error.
---	---

Forecast of Cause: 1. External cause 2. Defective connection of electric components 3. Controller PCB failure

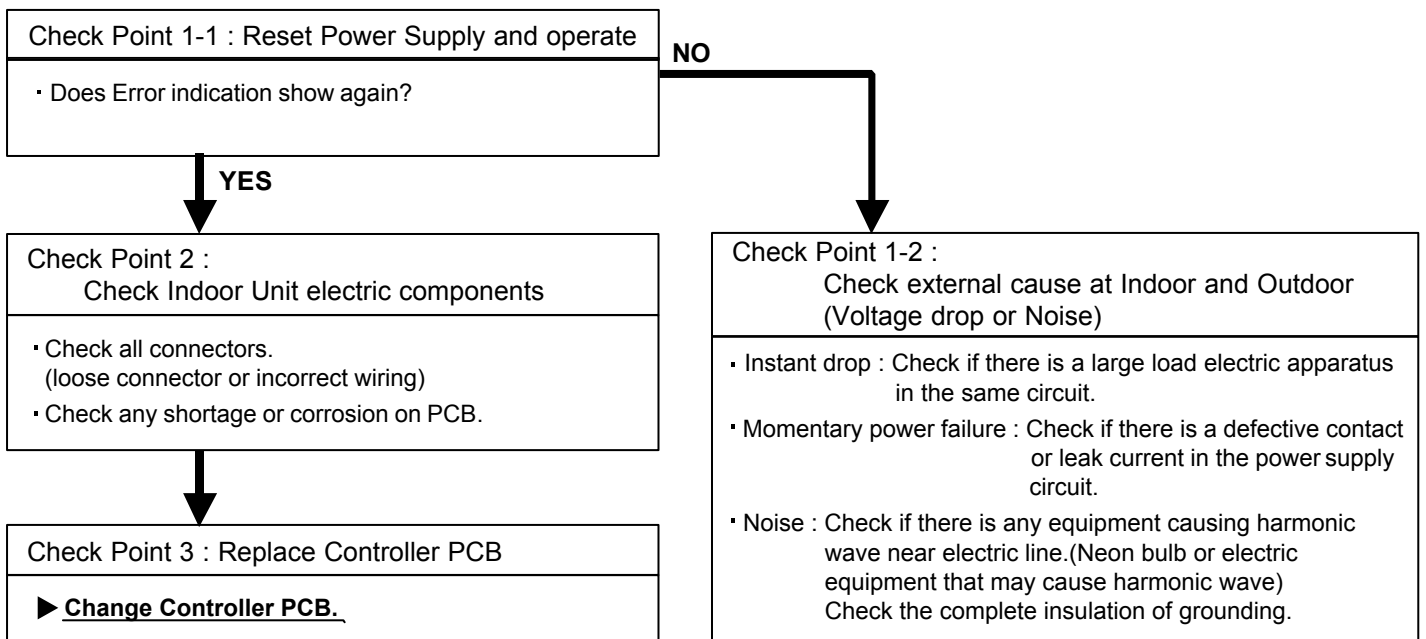

Note : EEPROM

EEPROM(Electronically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if power is turned off. It can change the contents electronically.

To change the contents, it uses higher voltage than normal, and it can not change a partial contents. (Rewriting shall be done upon erasing the all contents.)

There is a limit in a number of rewriting.

Trouble shooting 10 INDOOR UNIT Error Method: Indoor Fan Motor abnormal	Indicate or Display: Indoor Unit : No LED Outdoor Unit : No indication ERROR CODE : E : 12
--	---

Detective Actuators: Indoor Unit Controller PCB Circuit Indoor Fan Motor	Detective details: When the condition that actual frequency of Indoor Fan is below 1/3 of target frequency is continued more than 56 seconds.
---	---

Forecast of Cause: 1. Fan rotation failure 2. Fan motor winding open 3. Motor protection by surrounding temperature rise 4. Capacitor failure 5. Control PCB failure
--

Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)

>>If Fan or Bearing is abnormal, replace it.



Check Point 2 : Check Motor winding

- Check Indoor Fan motor. (PARTS INFORMATION 5)

>>If Fan motor is abnormal, replace it.



Check Point 3 : Check ambient temp. around motor

- Check excessively high temperature around the motor.
(If there is any surrounding equipment that causes heat)


>>Upon the temperature coming down, restart operation.



Check Point 4 : Check Motor Capacitor

- Check continuity of motor capacitor

>>If it is shorted, replace the capacitor.




Check Point 5 : Replace Controller PCB

▶ If Check Point 1- 4 do not improve the symptom, replace Controller PCB.

Trouble shooting 11 INDOOR UNIT Error Method: Outdoor Communication Signal Error (Forward Transfer Signal Error)	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED <u>1 time blink</u> ERROR CODE : E : 13
---	---

Detective Actuators: Indoor Unit Controller PCB Circuit	Detective details: When the outdoor unit cannot receive the serial signal from Indoor unit more than 10seconds.
---	---

Forecast of Cause:
 1. Connection failure 2. External cause 3. Controller PCB failure

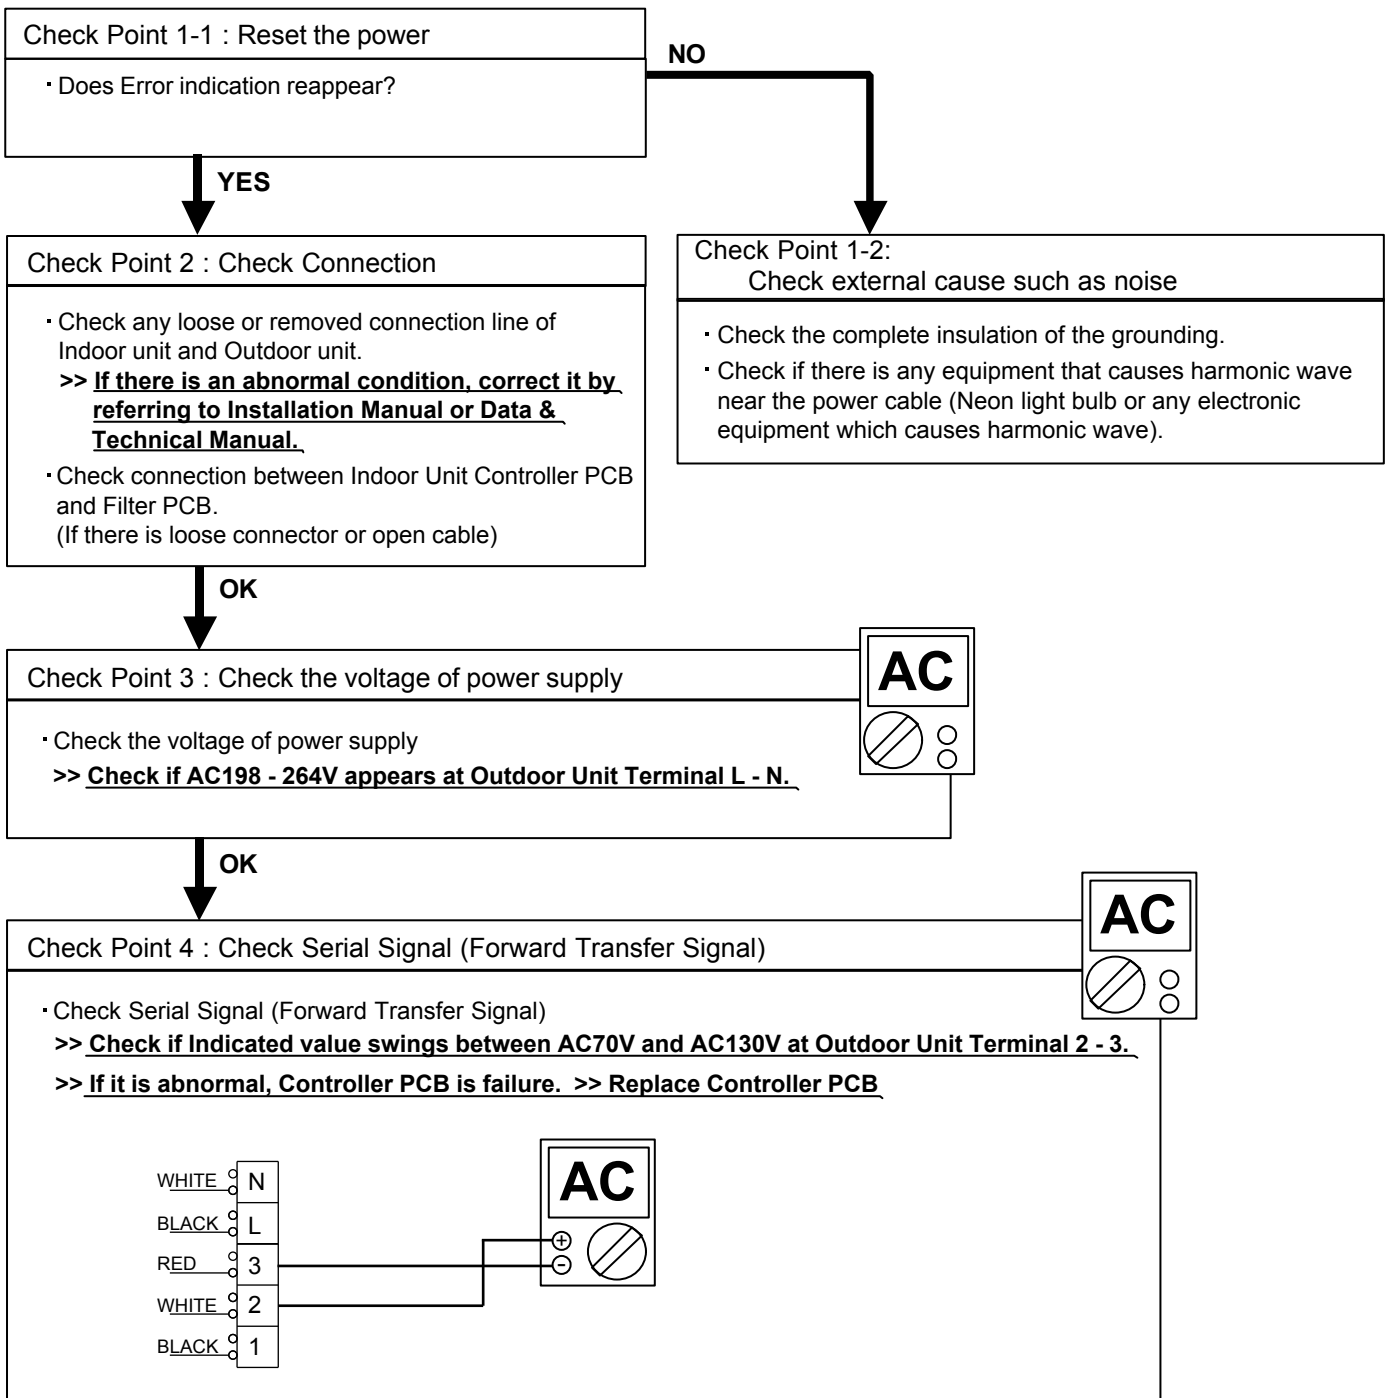

Trouble shooting 12 OUTDOOR UNIT Error Method: Compressor Temperature Sensor Error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED <u>7 times blink</u> ERROR CODE : E : 15
---	--

Detective Actuators: Outdoor Unit Main PCB Circuit Compressor Temperature Thermistor	Detective details: When Compressor Temperature Thermistor open or short-circuit is detected at power ON or while running the compressor.
---	--

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Ω

Thermistor Characteristics (Rough value)

Temperature	0°C	5°C	10°C	15°C	20°C	30°C	40°C	50°C	60°C
Resistance Value (k Ω)	176	135	105	81.8	64.5	41.1	26.9	18.1	12.5

Temperature	70°C	80°C	90°C	100°C	120°C	140°C	160°C	180°C
Resistance Value (k Ω)	8.78	6.31	4.61	3.43	1.98	1.21	0.77	0.51

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

DC

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

► If the voltage does not appear, replace Main PCB.

Trouble shooting 13 OUTDOOR UNIT Error Method: Pressure Switch Error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED <u>9 times blink/ 8 times blink(AU*24LMAKL)</u> ERROR CODE : E : 16
---	---

Detective Actuators: Outdoor Unit Main PCB Circuit Pressure Switch	Detective details: When pressure switch open is detected in 10 seconds after the power is turned on.
---	--

Forecast of Cause :
1. Connector connection failure 2. Pressure Switch failure 3. Main PCB failure

Check Point 1 : Reset Power Supply and operate
· Does abnormal LED indication show again?

NO

YES

Check Point 2 : Check voltage of Main PCB (DC5.0V)

· Make sure circuit diagram of outdoor unit and check terminal voltage at Pressure Switch. (DC5.0V)

► If the voltage does not appear, replace Main PCB.

OK

Check Point 3 : Check Pressure Switch

· Check if connector is loose or cable is open.
>> If no abnormal connection is found, replace Pressure Switch.

► After replacing Pressure Switch, check operating condition and pressure in operation.

Trouble shooting 14 OUTDOOR UNIT Error Method: IPM error (Permanent Stop)	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED <u>12 times blink/ 10 times blink(AU*24LMAKL)</u> ERROR CODE : E : 17
--	---

Detective Actuators: Outdoor Unit Main PCB Circuit Compressor	Detective details: ① When more than normal operating current to IPM in Main PCB flows, the compressor stops. ② After the compressor restarts, if the same operation is repeated within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
--	---

Forecast of Cause : 1. Defective connection of electric components 2. Outdoor Fan Operation failure 3. Outdoor Heat Exchanger clogged 4. Compressor failure 5. Main PCB failure

Check Point 1 : Check connections of Outdoor Unit Electrical Components
<ul style="list-style-type: none"> • Check if the terminal connection is loose. • Check if connector is removed. • Check erroneous connection. • Check if cable is open. >> Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Check Outdoor Fan, Heat Exchanger
<ul style="list-style-type: none"> • Is there anything obstructing the air distribution circuit? • Is there any clogging of Outdoor Heat Exchanger? • Is the Fan rotating by hand when operation is off ? >> If the Fan Motor is locked, replace it. • Check Outdoor Fan Motor. (Refer to Trouble shooting 18) >> If the Fan Motor is failure, replace it.



Check Point 3 : Check Compressor
<ul style="list-style-type: none"> • Check Compressor. (PARTS INFORMATION 2)




Check Point 4 : Replace Main PCB
► If Check Point 1, 2, 3 do not improve the symptom, change Main PCB.

Trouble shooting 15 OUTDOOR UNIT Error Method: CT error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : No indication/ 11 times blink(AU*24LMAKL) ERROR CODE : E : 18
--	--

Detective Actuators: Outdoor Unit Main PCB Circuit Outdoor Unit Filter PCB Circuit (Input current sensor unit)	Detective details: When Input Current Sensor has detected lower than 0.5A while Inverter Compressor is operating at higher than 56Hz, after 1minute upon starting the Compressor. (Except during the defrost operation)
--	--

Forecast of Cause :
 1. Defective connection of electric components 2. External cause 3. Filter PCB failure 4. Main PCB failure

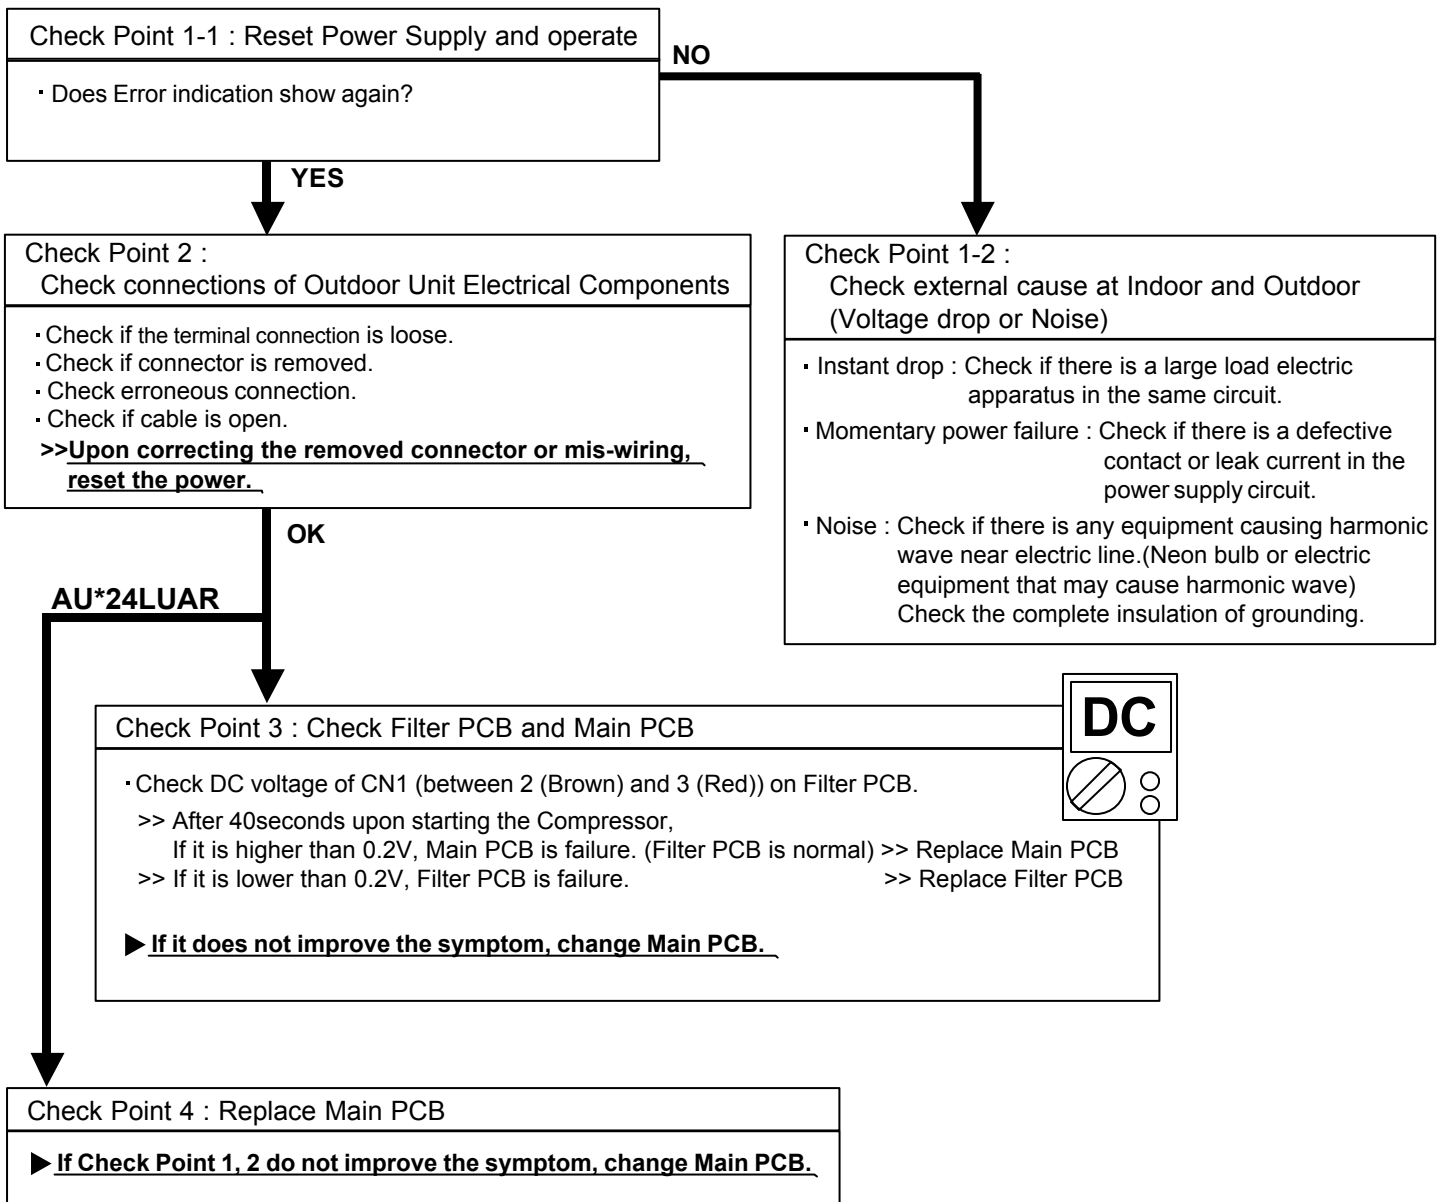

Trouble shooting 16 OUTDOOR UNIT Error Method: Active Filter Module (AFM) error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : No indication ERROR CODE : E : 19
--	---

Detective Actuators: Outdoor Unit Main PCB Circuit Active Filter Module	Detective details: When inverter input DC voltage is higher than 467V or lower than 237V. When a momentary power cut off occurred on low voltage.
--	--

Forecast of Cause : 1. External cause 2. Connector connection failure 3. Active Filter Module failure 4 . Main PCB failure
--

Check Point 1 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)
<ul style="list-style-type: none"> • Instant drop : Check if there is a large load electric apparatus in the same circuit. • Momentary power failure : Check if there is a defective contact or leak current in the power supply circuit. • Noise : Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.



Check Point 2 : Check connection of Connector
<ul style="list-style-type: none"> • Check if connector is removed. • Check erroneous connection. • Check if cable is open. <p>>>Upon correcting the removed connector or mis-wiring, reset the power.</p>



Check Point 3 : Check Active Filter Module
<ul style="list-style-type: none"> • Check Active Filter Module. (PARTS INFORMATION 3) <p>>>If Active Filter Module is abnormal, replace it.</p>



Check Point 4 : Replace Main PCB
<p>▶ If Check Point 1, 2 do not improve the symptom, change Main PCB.</p>

Trouble shooting 17 OUTDOOR UNIT Error Method: Compressor rotor location cannot detect (Permanent Stop)	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED <u>13 times blink/ 12 times blink(AU*24LMAKL)</u> ERROR CODE : E : 1A
--	---

Detective Actuators: Outdoor Unit Main PCB Circuit	Detective details: ① While running the compressor, if the detected rotor location is out of phase with actual rotor location more than 90 degrees, the compressor stops. ② After the compressor restarts, if the same operation is repeated within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
--	---

Forecast of Cause : 1. Defective connection of electric components 2. Main PCB failure

Check Point 1 : Check connection of around the Compressor components
For Compressor Terminal, Main PCB <ul style="list-style-type: none"> • Check if connector is removed. • Check erroneous connection. • Check if cable is open. (Refer to PARTS INFORMATION 2) >>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Replace Main PCB
▶ If Check Point 1 do not improve the symptom, change Main PCB.

Trouble shooting 18 OUTDOOR UNIT Error Method: Outdoor Unit Fan Motor Error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED 15 (Fan motor 1)/ 16(Fan motor 2) times blink ERROR CODE : E : 1b
--	--

Detective Actuators: Outdoor Unit Main PCB Circuit Outdoor Fan Motor	Detective details: ① When outdoor fan rotation speed is less than 100rpm in 20 seconds after fan motor starts, fan motor stops. ② After fan motor restarts, if the same operation within 60sec is repeated 3 times in a row, compressor and fan motor stops. ③ If ① and ② repeats 5 times in a row, compressor and fan motor stops permanently.
---	---

Forecast of Cause:
 1. Fan rotation failure 2. Motor protection by surrounding temperature rise 3. Main PCB failure

Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor)
- >>If Fan or Bearing is abnormal, replace it.**

OK
↓

Check Point 2 : Check ambient temp. around motor

- Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat)
- >>Upon the temperature coming down, restart operation.**

OK
↓

AU*24LUAR

Check Point 3 : Check Output Voltage of Main PCB

- Check outdoor unit circuit diagram and the voltage. (Measure at Main PCB side connector)

AU*30/ 36LUAS

AU*45/ 54LUAS

Read wire	DC voltage
Red - Black	300 ~ 400V
White - Black	15 ± 1.5V

▶ If the voltage is not correct, replace Main PCB.



Check Point 4 : Check Motor winding

- Check Outdoor Fan motor. (**PARTS INFORMATION 6**)
- ▶ If Fan motor is abnormal, replace it.**

Trouble shooting 19 OUTDOOR UNIT Error Method: Heat Sink Temperature Sensor Error	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED <u>8 times blink</u> ERROR CODE : No indication
	Detective Actuators: Outdoor Unit Main PCB Circuit Heat Sink Temperature Thermistor

Detective details: When Heat Sink Temperature Thermistor open or short-circuit is detected at power ON or while running the compressor.

Forecast of Cause :
 1. Connector connection failure 2. Thermistor failure 3. Main PCB failure

Check Point 1 : Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.

>>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Remove connector and check Thermistor resistance value

Thermistor Characteristics (Approx. value)									
Temperature	0°C	5°C	10°C	15°C	20°C	30°C	40°C	50°C	
Resistance Value (kΩ)	16.1	12.4	9.73	7.67	6.10	3.95	2.62	1.79	
Temperature	60°C	70°C	80°C	90°C	100°C	110°C	120°C		
Resistance Value (kΩ)	1.25	0.89	0.65	0.48	0.36	0.27	0.21		

► If Thermistor is either open or shorted, replace it and reset the power.



Check Point 3 : Check voltage of Main PCB (DC5.0V)

Make sure circuit diagram of outdoor unit and check terminal voltage at Thermistor (DC5.0V)

--

► If the voltage does not appear, replace Main PCB.

Trouble shooting 20 OUTDOOR UNIT Error Method: Compressor Start-up error (Permanent Stop)	Indicate or Display: Indoor Unit : No LED Outdoor Unit : LED <u>14 times blink/ 13 times blink(AU*24LMAKL)</u> ERROR CODE : No indication
--	--

Detective Actuators: Outdoor Unit Main PCB Circuit	Detective details: ① On start-up the compressor, when detected rotor position is out of phase with actual rotor position more than 90 degrees,the compressor stops. ② After the compressor restarts, if the same operation is repeated within 40sec, the compressor stops again. ③ If ① and ② repeats 5 times, the compressor stops permanently.
--	--

Forecast of Cause : 1. Defective connection of electric components 2. Main PCB failure

Check Point 1 : Check connection of around the Compressor components
For Compressor Terminal, Main PCB <ul style="list-style-type: none"> • Check if connector is removed. • Check erroneous connection. • Check if cable is open. (Refer to PARTS INFORMATION 2) >>Upon correcting the removed connector or mis-wiring, reset the power.



Check Point 2 : Replace Main PCB
▶ If Check Point 1 do not improve the symptom, replace Main PCB.


7-3 TROUBLE SHOOTING WITH NO ERROR CODE

Trouble shooting 21

Indoor Unit - No Power

Forecast of Cause:

1. Power Supply failure
2. External cause
3. Electrical Components defective

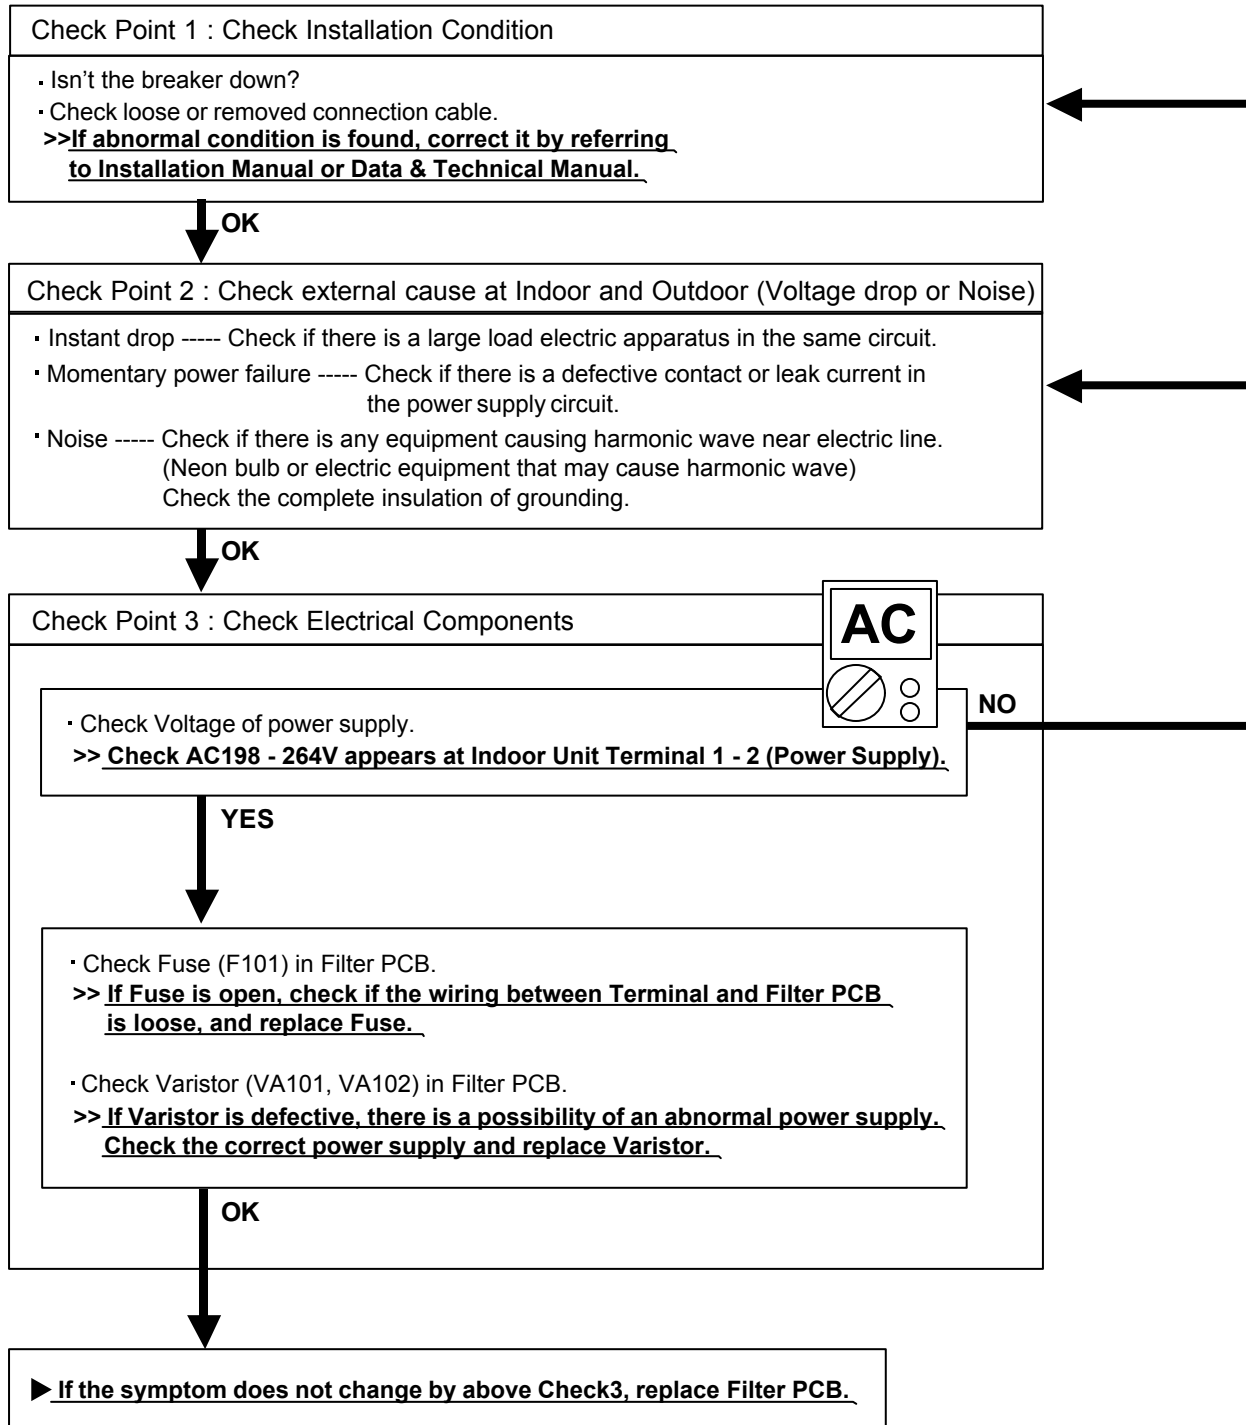

Trouble shooting 22

Outdoor Unit - No Power

Forecast of Cause:

1. Power Supply failure
2. External cause
3. Electrical Components defective

Check Point 1 : Check Installation Condition

- Isn't the breaker down?
- Check loose or removed connection cable.
- >>If abnormal condition is found, correct it by referring to Installation Manual or Data & Technical Manual.**


OK

Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave)
Check the complete insulation of grounding.

OK

Check Point 3 : Check Electrical Components

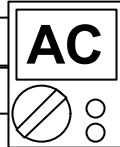

NO

- Check the voltage of power supply.
- >> Check if AC198 - 264V appears at Outdoor Unit Terminal L - N.**

YES

- Check Fuse (F2, F4) in Main PCB.
- >> If Fuse is open, check loose terminal or removed connector (CN1) , and replace Fuse.**
- Check Varistor in Main PCB (VA103).
- >> If Varistor is defective, there is a possibility of an abnormal power supply. Check the correct power supply and replace Varistor. Upon checking the normal power supply, replace Varistor.**

YES

- Check Active Filter Module. (PARTS INFORMATION 3)
- >>If Active Filter Module is abnormal, replace it.**

OK

► **If the symptom does not change by above Check 3, replace Main PCB.**

Trouble shooting 23

No Operation (Power is ON)

Forecast of Cause:

1. Setting/ Connection failure
2. External cause
3. Electrical Component defective

Check Point 1 : Check indoor and outdoor installation condition

- Indoor Unit - Check incorrect wiring between Indoor Unit - Remote Control, or terminals between Indoor Units. Or, check if there is an open cable connection.
- Are these Indoor Unit, Outdoor Unit, and Remote Control suitable model numbers to connect?
>> **If there is some abnormal condition, correct it by referring to Installation manual and Data & Technical Manual.**

OK

Turn off Power and check/ correct followings.

- Is there loose or removed communication line of Indoor Unit and Outdoor Unit?

OK

Check Point 2 : Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line.
(Neon bulb or electric equipment that may cause harmonic wave)
Check the complete insulation of grounding.

OK

Check Point 3 : Check Electrical Components at Indoor and Outdoor

- Check Voltage at CN17 of Controller PCB. (Power supply to Remote Control)
>> **If it is DC12V, Remote Control is failure. (Controller PCB is normal) >> Replace Remote Control**
>> **If it is DC 0V, Controller PCB is failure. (Check Remote Control once again) >> Replace Controller PCB**
>> **If the symptom does not change by above Check 1, 2, 3, replace Main PCB of Outdoor unit.**



Trouble shooting 24

No Cooling / No Heating

Forecast of Cause:

1. Indoor Unit error
2. Outdoor Unit error
3. Effect by Surrounding environment
4. Connection Pipe / Connection Wire failure
5. Refrigeration cycle failure

Check Point 1 : Check Indoor Unit

- Does Indoor Unit FAN run on HIGH FAN?
- Is Air Filter dirty?
- Is Heat Exchanger clogged?
- Check if Energy save function is operated.



Check Point 2 : Check Outdoor Unit Operation

- Check if Outdoor Unit is operating
(If not, refer to Trouble shooting 23)
- Check any objects that obstruct the air flow route.
- Check clogged Heat Exchanger.
- Is the Valve open?



Check Point 3 : Check Site Condition

- Is capacity of Indoor Unit fitted to Room size?
- Any windows open? Or direct sunlight ?




Check Point 4 : Check Indoor/ Outdoor Installation Condition

- Check connection pipe
(specified pipe length & Pipe diameter?)
- Check any loose or removed communication line.
- >> **If there is an abnormal condition, correct it by referring to Installation Manual or Data & Technical Manual.**





Check Point 5 : Check Refrigeration Cycle

- Check if Strainer is clogged (Refer to the figure at right).
- Measure Gas Pressure and if there is a leakage, correct it.
- >> **When recharging the refrigerant, make sure to perform vacuuming, and recharge the specified amount.**
- Check EEV (PARTS INFORMATION 4)
- Check Compressor (PARTS INFORMATION 1,2)



Attention

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference like shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

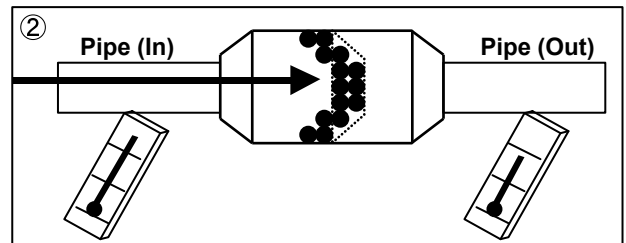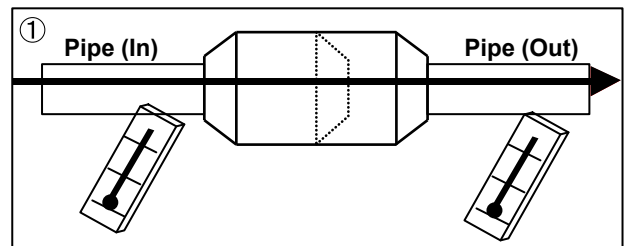

Trouble shooting 25

Abnormal Noise

Forecast of Cause :

1. Abnormal installation (Indoor/ Outdoor)
2. Fan failure(Indoor/ Outdoor)
3. Compressor failure (Outdoor)

Diagnosis method when Abnormal Noise is occurred

- Abnormal noise is coming from Indoor Unit.
(Check and correct followings)

- Is Main Unit installed in stable condition?
- Is the installation of Air suction grille and front panel normal?

OK

- Is Fan broken or deformed?
- Is the screw of Fan loose?
- Is there any object which obstruct the Fan rotation?

- Abnormal noise is coming from Outdoor Unit.
(Check and correct followings)

- Is Main Unit installed in stable condition?
- Is Fan Guard installed normally?

OK

- Is Fan broken or deformed?
- Is the screw of Fan loose?
- Is there any object which obstruct the Fan rotation?

OK

- Check if vibration noise by loose bolt or contact noise of piping is happening.

OK

- Is Compressor locked?
>> Check Compressor (PARTS INFORMATION 1,2)

Trouble shooting 26

Water Leaking

Forecast of Cause:

1. Erroneous installation
2. Drain hose failure
3. Float Switch failure

Diagnosis method when water leak occurs

- Is Main Unit installed in stable condition?
- Is Main Unit broken or deformed at the time of transportation or maintenance?

OK

- Is Drain Hose connection loose?
- Is there a trap in Drain Hose?
- Is Drain Hose clogged?

OK

- Is Fan rotating?
>> Check Fan Motor (PARTS INFORMATION 5)

OK


- Is Float Switch defective?
>> Check Float Switch (Refer to Trouble Shooting 6)

Diagnosis method when water is spitting out.

- Is the filter clogged?

OK

- Check Gas Pressure and correct it if there was a gas leak.

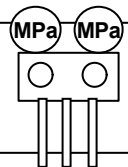


7-4 SERVICE PARTS INFORMATION

SERVICE PARTS INFORMATION 1

Compressor

Diagnosis method of Compressor (If Outdoor Unit LED displays Error, refer to Trouble shooting)

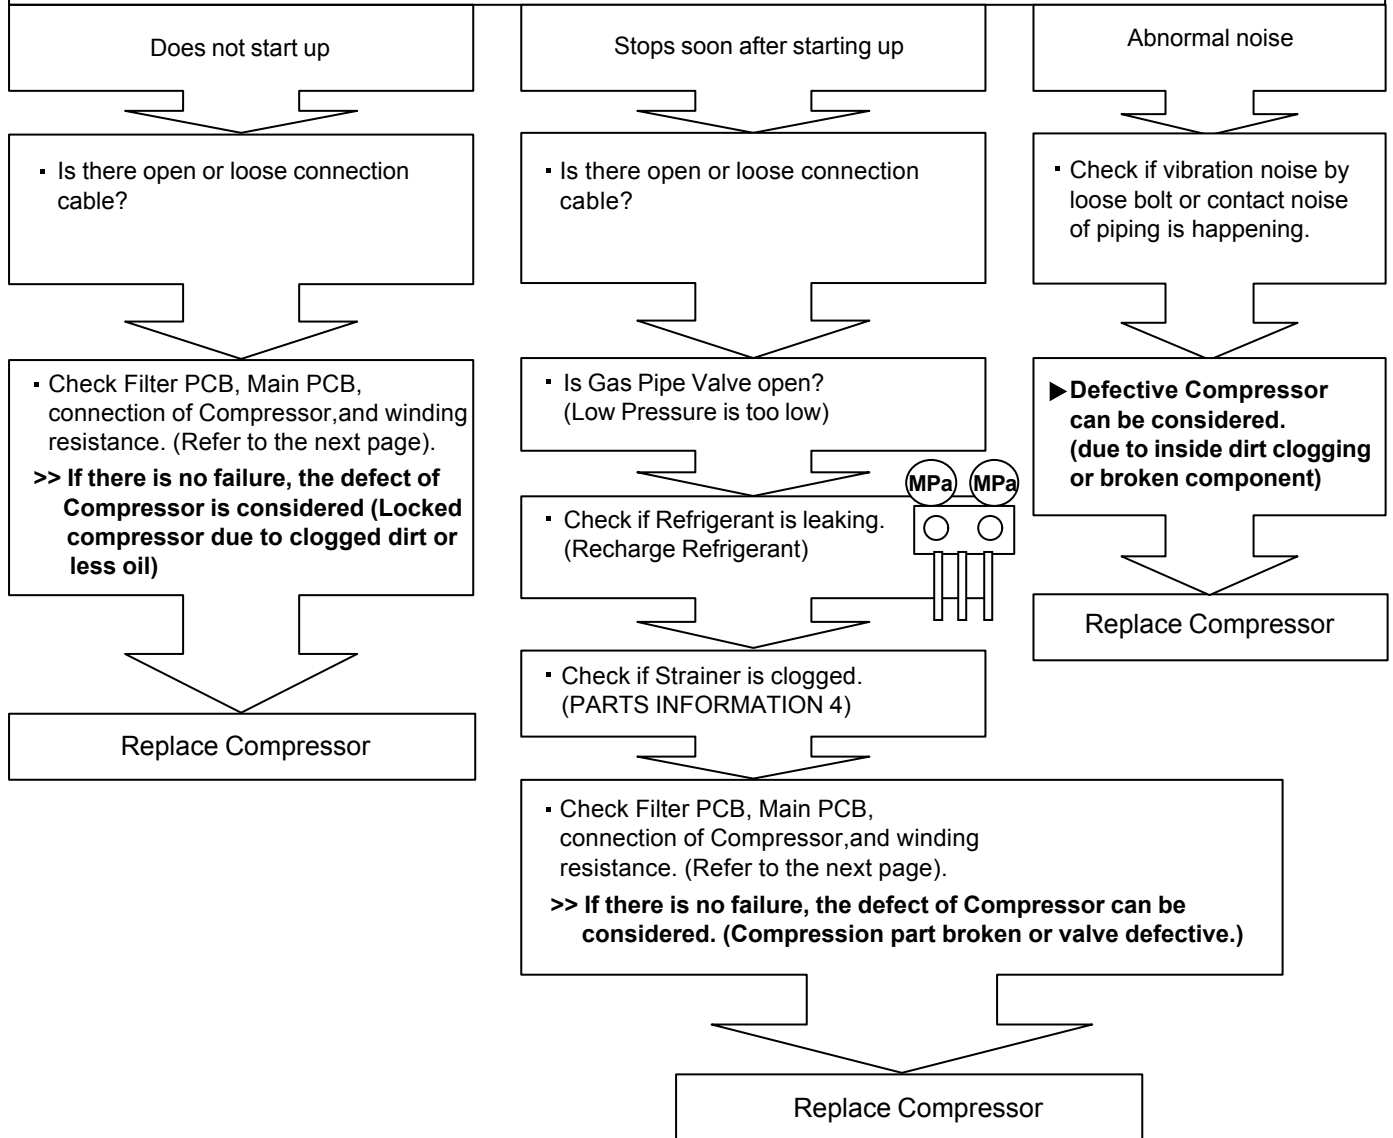


SERVICE PARTS INFORMATION 2


Inverter Compressor

Check Point 1 : Check Connection

- Check terminal connection of Compressor (loose or incorrect wiring)

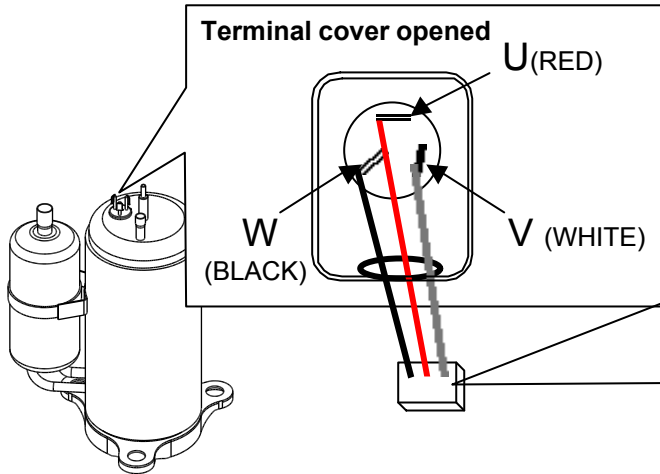


- Check connection of Main PCB (Loose or incorrect wiring)

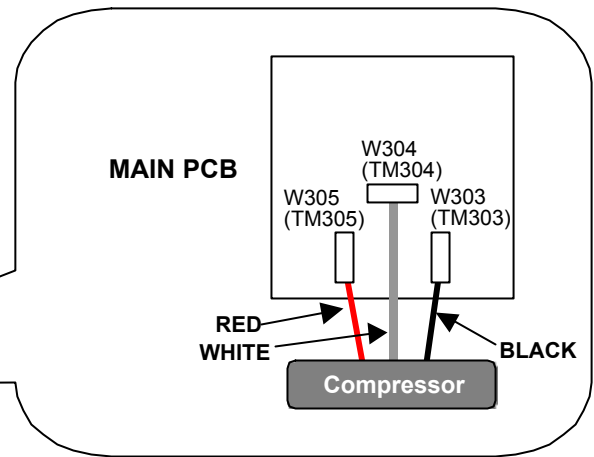

Check Point 2 : Check Winding Resistance

- Check winding resistance of each terminal

► **If the resistance value is 0Ω or infinite, replace Compressor.**

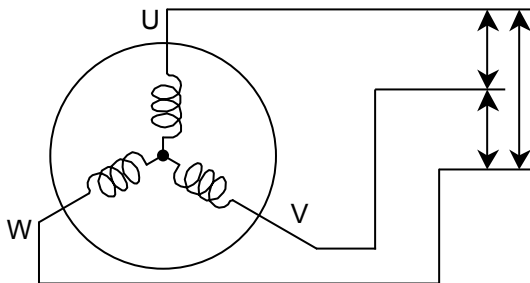

Resistance Value :

1.41 Ω (For AU*24LUAR)

0.88 Ω (For AU*30/ 36LUAS)

0.188 Ω (For AU*45/ 54LUAS)

at 20°C




Check Point 3 : Replace Main PCB

► **If the symptom does not change with above Check 1, 2, replace Main PCB.**


SERVICE PARTS INFORMATION 3

Active Filter Module

Check Point 1 : Check Open or Short-circuit and Diode (D1)



· Remove connector, check the open or short-circuit and the diode in the module

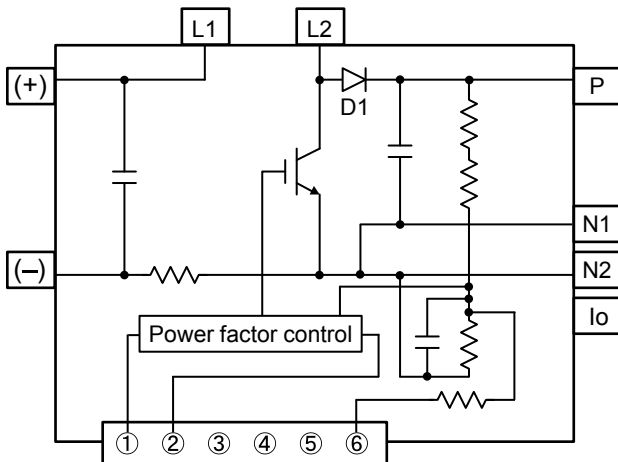

Check the open or short-circuit

Terminal		Resistance value
Tester(+)	Tester(-)	
(+)	(-)	360kΩ ± 20%
(-)	N1	0 Ω
P	(+)	720kΩ ± 20%
L1	L2	1.01MΩ / 761kΩ (Ref. value 1) (Ref. value 2)
P	N1	360kΩ ± 20%
L1,L2	Control Box	∞ Ω
L2	N2	1.65MΩ / 1.14MΩ (Ref. value 1) (Ref. value 2)

Check the diode

Terminal		Resistance value
Tester(+)	Tester(-)	
L2	P	1.32MΩ / 663kΩ (Ref. value 1) (Ref. value 2)
P	L2	1.01MΩ / 762kΩ (Ref. value 1) (Ref. value 2)

Ref. value 1
 Specifications for Multimeter
 Manufacturer : FLUKE
 Model name : FLUKE11
 Power source : DC9V.

Ref. value 2
 Specifications for Multimeter
 Manufacturer : Sanwa
 Model name : PM3
 Power source : DC3V.

► **If it is abnormal,replace ACTIVE FILTER MODULE**

Check Point 2 : Check the Output DC voltage (between P and N1)




· Check the Output DC voltage (between P and N1) of compressor stopping and operating.
 >> If the output voltage of compressor operating is less than the output voltage of compressor stopping,
 Active Filter Module is defective. >> **Replace Active Filter Module**

SERVICE PARTS INFORMATION 4

Outdoor unit Electronic Expansion Valve (EEV)

Check Point 1 : Check Connections

- Check connection of connector (CN27) (Loose connector or open cable)

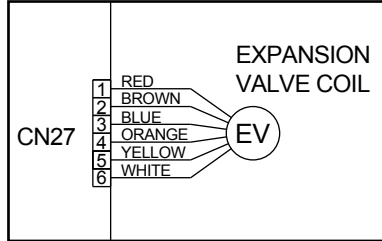

Check Point 2 : Check Coil of EEV

- Remove connector, check each winding resistance of Coil.

Read wire	Resistance value
White - Red	$46 \Omega \pm 4 \Omega$ at 20°C
Yellow - Brown	
Orange - Red	
Blue - Brown	

► **If Resistance value is abnormal, replace EEV.**

Check Point 3 : Check Voltage from Main PCB.

- Remove Connector and check Voltage (DC12V)
- **If it does not appear, replace Main PCB.**




Check Point 4 : Check Noise at start up


- Turn on Power and check operation noise.
- **If an abnormal noise does not show, replace Main PCB.**

Check Point 5 : Check Opening and Closing Operation of Valve

When Valve is closed, it has a temp. difference between Inlet and Outlet.


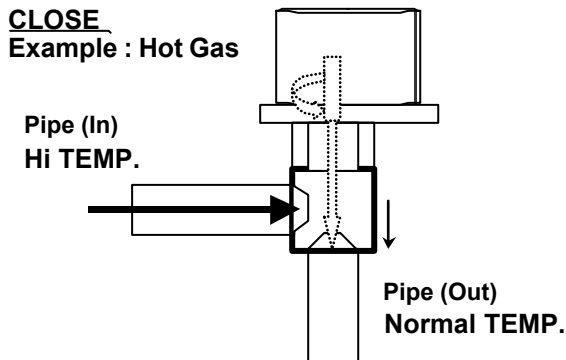


If it is open, it has no temp. difference between Inlet and Outlet.

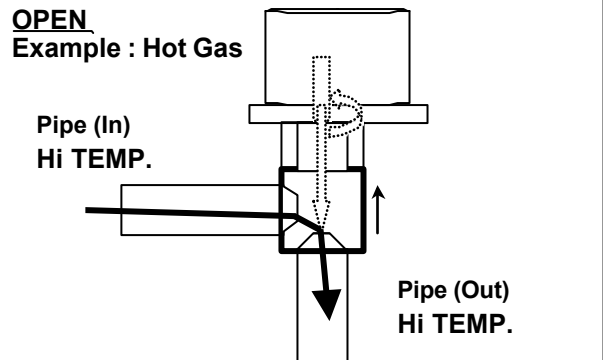

Check Point 6 : Check Strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in ①, but if there is a difference as shown in ②, there is a possibility of inside clogged. In this case, replace Strainer.

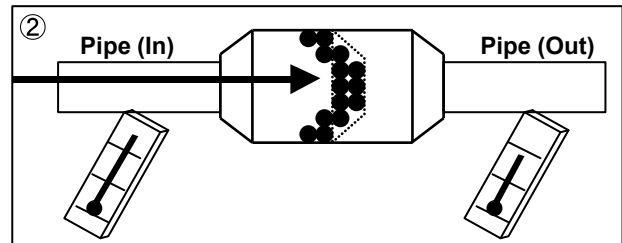
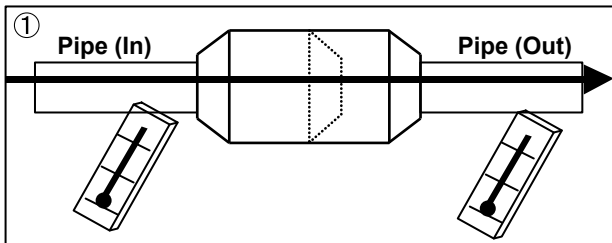


SERVICE PARTS INFORMATION 5

Indoor Unit Fan Motor

Check Point : AU*24LUAR

- Check each winding resistance of the motor
- ▶ **If Resistance value is abnormal, replace motor.**

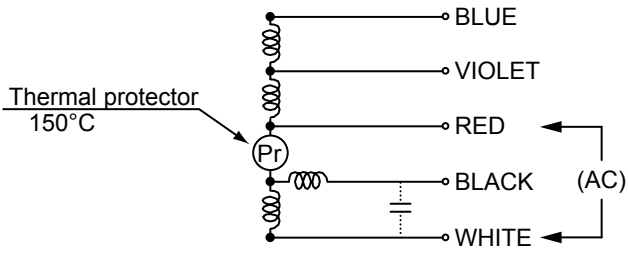
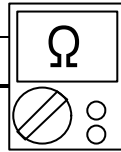


Read Wire	Resistance value
White - Red	120 Ω ± 8%
Red - Black	55.3 Ω ± 8%
Red - Violet	61.2 Ω ± 8%
Red - Violet	283 Ω ± 8%

at 20°C

Check Point : AU*30/ 36/ 45/ 54LUAS

- Check each winding resistance of the motor
- ▶ **If Resistance value is abnormal, replace motor.**

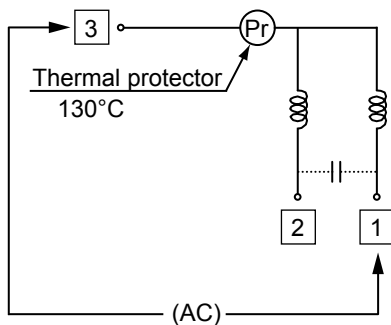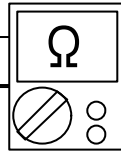

The connector inserting numbers	Resistance value
1 - 3	44.5 Ω ± 10%
2 - 3	40.5 Ω ± 10%

at 20°C



SERVICE PARTS INFORMATION 6

Outdoor Unit Fan Motor

Check Point : AU*24LUAR

• Check each winding resistance of the motor

▶ **If Resistance value is abnormal, replace motor.**

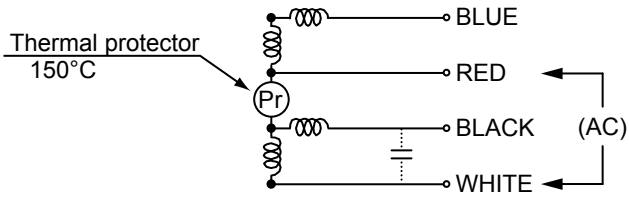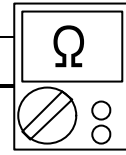

Read Wire	Resistance value
White - Red	54.7 Ω ± 8%
Red - Black	96.3 Ω ± 8%
Red - Blue	185 Ω ± 8%

at 20°C

CASSETTE type INVERTER

8 . APPENDING DATA

8. APPENDING DATA

8-1. CAPACITY TABLE

■ MODEL : AU*24LUAR / AO*24LMAKL

● COOLING

AFR	20.8
-----	------

		Indoor temperature																										
		18°CDB			21°CDB			23°CDB			26°CDB			27°CDB			29°CDB			30°CDB			32°CDB					
		12°CWB			15°CWB			16°CWB			18°CWB			19°CWB			21°CWB			22°CWB			23°CWB					
Outdoor temperature	(°CDB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
	0	4.92	4.28	0.47	5.02	4.04	0.48	5.12	4.27	0.48	5.26	4.44	0.49	5.33	4.41	0.49	5.44	4.33	0.50	5.49	4.29	0.50	5.54	4.47	0.50			
	5	5.06	4.37	0.59	5.17	4.14	0.60	5.30	4.41	0.61	5.49	4.63	0.62	5.56	4.61	0.62	5.70	4.54	0.63	5.76	4.50	0.63	5.82	4.70	0.64			
	10	6.00	5.18	0.92	6.15	4.91	0.94	6.30	5.23	0.95	6.55	5.53	0.97	6.65	5.51	0.98	6.83	5.45	0.99	6.91	5.41	1.00	6.99	5.65	1.00			
	15	5.64	4.85	1.01	5.78	4.58	1.04	5.93	4.91	1.05	6.16	5.20	1.07	6.26	5.18	1.08	6.44	5.13	1.09	6.52	5.10	1.10	6.60	5.35	1.11			
	20	5.53	4.74	1.14	5.65	4.47	1.16	5.79	4.79	1.17	6.01	5.07	1.20	6.11	5.06	1.21	6.28	5.01	1.23	6.37	4.99	1.24	6.45	5.24	1.25			
	25	7.16	6.16	1.86	7.34	5.83	1.88	7.50	6.22	1.90	7.78	6.57	1.92	7.90	6.54	1.94	8.12	6.47	1.96	8.22	6.44	1.97	8.31	6.74	1.98			
	30	6.84	5.85	2.09	7.03	5.57	2.21	7.19	5.96	2.12	7.46	6.30	2.16	7.59	6.28	2.17	7.81	6.23	2.20	7.91	6.20	2.21	8.02	6.52	2.23			
	35	7.25	6.18	2.88	7.39	5.82	2.89	7.58	6.26	2.92	7.86	6.64	2.96	8.00	6.62	2.98	8.26	6.58	3.02	8.38	6.56	3.04	8.50	6.92	3.06			
	40	6.83	5.80	3.20	6.93	5.45	3.21	7.09	5.86	3.23	7.38	6.24	3.28	7.52	6.23	3.30	7.78	6.20	3.35	7.91	6.19	3.37	8.04	6.56	3.42			
43	6.49	5.48	3.31	6.60	5.17	3.32	6.76	5.57	3.34	7.05	5.96	3.39	7.20	5.96	3.41	7.46	5.94	3.46	7.61	5.94	3.48	7.75	6.31	3.51				

● HEATING

AFR	20.8
-----	------

		Indoor temperature															
		16°CDB		18°CDB		20°CDB		23°CDB		25°CDB		27°CDB		30°CDB			
Outdoor temperature	(°CDB)	(°CWB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	
	-10	-11	6.92	3.04	6.81	3.13	6.60	3.23	6.39	3.32	6.28	3.37	6.07	3.47	5.86	3.51	
	-5	-6	6.80	3.05	6.71	3.14	6.52	3.23	6.33	3.31	6.23	3.36	6.04	3.45	5.85	3.49	
	0	-1	7.09	3.01	7.00	3.08	6.82	3.16	6.65	3.24	6.56	3.28	6.38	3.35	6.20	3.39	
	2	1	7.31	3.12	7.23	3.18	7.09	3.25	6.94	3.31	6.86	3.35	6.71	3.41	6.56	3.45	
	7	6	9.27	2.86	9.18	2.92	9.00	2.98	8.82	3.04	8.73	3.07	8.55	3.13	8.37	3.16	
	10	8	9.64	2.93	9.55	2.99	9.37	3.04	9.20	3.10	9.11	3.13	8.94	3.18	8.76	3.21	
	15	12	9.87	2.98	9.78	3.04	9.61	3.09	9.43	3.15	9.34	3.18	9.16	3.23	8.98	3.26	
	20	15	10.06	2.92	9.97	2.98	9.77	3.04	9.58	3.09	9.48	3.12	9.28	3.18	9.09	3.21	
	24	18	10.22	2.86	10.11	2.92	9.90	2.98	9.69	3.04	9.59	3.08	9.37	3.14	9.16	3.17	

AFR: Air flow rate (m³/min)

TC : Total capacity (kW)

SHC: Sensible Heat capacity (kW)

PI : Power Input (kW)

■ MODEL : AU*30LUAS / AO*30LMAWL

● COOLING

AFR	26
-----	----

		Indoor temperature																						
		21°CDB			23°CDB			26°CDB			27°CDB			29°CDB			30°CDB			32°CDB				
		15°CWB			16°CWB			18°CWB			19°CWB			21°CWB			22°CWB			23°CWB				
Outdoor temperature	(°CDB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
	-10	7.59	5.79	1.97	7.73	6.18	1.99	7.99	6.48	2.01	8.12	6.40	2.02	8.36	6.28	2.04	8.48	6.13	2.05	8.58	6.49	2.05		
	0	8.73	6.49	1.73	8.96	7.16	1.74	9.40	7.63	1.75	9.62	7.59	1.75	10.05	7.48	1.76	10.27	7.44	1.77	10.47	7.93	1.77		
	10	7.58	5.71	2.05	7.77	6.15	2.06	8.15	6.63	2.07	8.34	6.53	2.08	8.71	6.46	2.09	8.88	6.35	2.09	9.05	6.78	2.10		
	20	10.04	7.13	2.31	10.40	7.82	2.31	11.14	8.47	2.30	11.52	8.45	2.29	12.28	8.39	2.28	12.67	8.36	2.27	13.05	8.98	2.26		
	30	8.74	6.60	2.78	9.07	7.29	2.78	9.73	7.95	2.79	10.07	7.93	2.79	10.77	7.88	2.78	11.11	7.85	2.78	11.46	8.48	2.78		
	35	8.66	6.57	3.41	8.99	7.26	3.43	9.66	7.92	3.45	10.00	7.90	3.46	10.61	7.83	3.41	10.96	7.80	3.41	11.30	8.43	3.42		
	40	7.09	4.90	3.30	7.37	5.49	3.30	7.95	6.08	3.30	8.25	6.15	3.30	8.86	6.22	3.30	9.08	6.16	3.30	9.38	6.71	3.30		
	43	6.53	4.74	3.30	6.79	5.25	3.30	7.25	5.75	3.30	7.53	5.79	3.30	8.08	5.83	3.30	8.36	5.82	3.30	8.64	6.34	3.30		

● HEATING

AFR	26
-----	----

		Indoor temperature															
		16°CDB		18°CDB		20°CDB		23°CDB		25°CDB		27°CDB		30°CDB			
Outdoor temperature	(°CDB)	(°CWB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	
	-10	-11	7.73	2.79	7.56	2.85	7.49	3.00	7.22	3.08	6.99	3.09	6.76	3.10	6.38	3.10	
	-4	-6	8.87	3.02	8.69	3.08	8.44	3.09	8.02	3.09	7.77	3.11	7.52	3.12	7.11	3.11	
	1	-1	10.21	3.10	9.95	3.11	9.58	3.09	9.11	3.09	8.83	3.10	8.54	3.12	8.04	3.11	
	7	6	11.77	3.37	11.50	3.37	11.20	3.37	10.57	3.37	10.22	3.37	9.79	3.37	9.20	3.37	
	12	10	13.83	3.37	13.35	3.37	13.12	3.37	12.35	3.37	11.92	3.37	11.48	3.37	10.77	3.37	
	18	13	13.32	3.13	13.15	3.22	12.95	3.30	12.61	3.41	12.30	3.48	11.92	3.55	11.34	3.68	
	24	17	12.77	3.02	12.62	3.10	12.45	3.18	11.95	3.18	11.56	3.19	11.21	3.21	10.52	3.22	

AFR: Air flow rate (m³/min) TC : Total capacity (kW) SHC: Sensible Heat capacity (kW) PI : Power Input (kW)

■ MODEL : AUT30LUAS / AOT30LMAWL

● COOLING

AFR	26.7
-----	------

		Indoor temperature																						
		18°CDB			21°CDB			23°CDB			25°CDB			27°CDB			29°CDB			32°CDB				
		12°CWB			15°CWB			16°CWB			18°CWB			19°CWB			21°CWB			23°CWB				
Outdoor temperature	(°CDB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI		
	-10	6.58	5.69	1.77	7.33	5.72	1.80	7.58	6.22	1.81	8.08	6.24	1.83	8.33	6.74	1.83	8.83	6.72	1.85	9.33	7.15	1.87		
	0	7.62	6.14	1.55	8.48	6.18	1.57	8.77	6.71	1.58	9.35	6.74	1.60	9.64	7.28	1.61	10.22	7.25	1.62	10.80	7.72	1.64		
	5	7.09	5.90	1.67	7.89	5.94	1.69	8.16	6.46	1.70	8.70	6.48	1.72	8.97	7.00	1.73	9.51	6.97	1.74	10.04	7.42	1.76		
	10	6.69	5.73	1.84	7.45	5.77	1.87	7.70	6.27	1.88	8.21	6.29	1.89	8.46	6.79	1.90	8.97	6.77	1.92	9.48	7.21	1.94		
	15	7.88	6.26	2.07	8.78	6.30	2.10	9.08	6.84	2.11	9.67	6.87	2.14	9.97	7.42	2.15	10.57	7.39	2.17	11.17	7.87	2.19		
	20	8.86	6.70	2.10	9.87	6.75	2.13	10.21	7.33	2.14	10.88	7.36	2.16	11.22	7.95	2.18	11.89	7.92	2.20	12.57	8.43	2.22		
	25	8.48	6.53	2.38	9.44	6.57	2.42	9.76	7.14	2.43	10.41	7.17	2.46	10.73	7.73	2.47	11.37	7.71	2.49	12.02	8.21	2.52		
	30	7.84	6.24	2.55	8.73	6.28	2.59	9.03	6.82	2.60	9.63	6.85	2.63	9.92	7.39	2.64	10.52	7.37	2.66	11.11	7.84	2.69		
	35	7.90	6.27	3.37	8.80	6.31	3.43	9.10	6.85	3.44	9.70	6.88	3.48	10.00	7.43	3.50	10.60	7.40	3.53	11.20	7.88	3.57		
40	6.73	5.75	3.08	7.50	5.79	3.13	7.76	6.29	3.14	8.27	6.31	3.17	8.52	6.82	3.19	9.03	6.79	3.22	9.55	7.23	3.25			
43	6.27	5.55	3.11	6.98	5.59	3.16	7.22	6.07	3.18	7.69	6.09	3.21	7.93	6.58	3.23	8.41	6.55	3.26	8.88	6.98	3.29			

● HEATING

AFR	26.7
-----	------

		Indoor temperature											
		16°CDB		18°CDB		20°CDB		22°CDB		24°CDB			
Outdoor temperature	(°CDB)	(°CWB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	
	-10	-11	8.18	3.20	7.98	3.26	7.79	3.33	7.60	3.40	7.40	3.46	
	-5	-7	9.21	3.37	8.99	3.44	8.77	3.51	8.55	3.58	8.33	3.65	
	0	-2	10.32	3.42	10.07	3.49	9.83	3.56	9.58	3.63	9.34	3.70	
	5	3	11.34	3.44	11.07	3.51	10.80	3.58	10.53	3.65	10.26	3.73	
	7	6	11.76	3.36	11.48	3.43	11.20	3.50	10.92	3.57	10.64	3.64	
	10	8	12.19	3.38	11.90	3.45	11.61	3.52	11.32	3.59	11.03	3.66	
	15	10	12.49	3.37	12.20	3.44	11.90	3.51	11.60	3.58	11.30	3.65	
	20	15	12.35	3.00	12.06	3.07	11.76	3.13	11.47	3.19	11.18	3.26	
	24	18	12.87	2.97	12.56	3.03	12.26	3.10	11.95	3.16	11.64	3.22	

AFR: Air flow rate (m³/min) TC : Total capacity (kW) SHC: Sensible Heat capacity (kW) PI : Power Input (kW)

■ MODEL : AU*36LUAS / AO*36LMAWL

● COOLING

AFR 26

		Indoor temperature																				
		21°CDB			23°CDB			26°CDB			27°CDB			29°CDB			30°CDB			32°CDB		
		15°CWB			16°CWB			18°CWB			19°CWB			21°CWB			22°CWB			23°CWB		
Outdoor temperature	(°CDB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
	-10	10.91	7.80	1.88	11.18	8.45	1.89	11.72	9.02	1.93	12.01	8.96	1.95	12.58	8.82	1.98	12.87	8.75	2.00	13.14	9.36	2.01
	0	9.83	7.13	2.24	10.07	7.79	2.26	10.54	8.37	2.29	10.78	8.30	2.30	11.23	8.16	2.33	11.46	8.08	2.34	11.66	8.68	2.34
	10	9.73	7.09	2.06	10.01	7.77	2.06	10.57	8.38	2.07	10.85	8.33	2.07	11.40	8.21	2.07	11.67	8.15	2.07	11.93	8.76	2.07
	20	10.77	7.52	2.51	11.15	8.22	2.51	11.93	8.89	2.50	12.33	8.87	2.50	13.14	8.80	2.49	13.55	8.77	2.48	13.95	9.40	2.47
	30	10.04	7.44	3.38	10.40	8.19	3.39	11.15	8.91	3.40	11.54	8.89	3.41	12.31	8.83	3.41	12.71	8.80	3.41	13.09	9.48	3.41
	35	9.73	7.09	4.07	10.11	7.81	4.09	10.80	8.47	4.07	11.20	8.45	4.08	11.93	8.39	4.05	12.33	8.37	4.06	12.73	9.02	4.07
	40	7.31	5.59	3.40	7.60	6.27	3.40	8.20	6.94	3.40	8.51	7.02	3.40	9.13	7.10	3.40	9.36	7.04	3.40	9.67	7.66	3.40
	43	6.73	5.41	3.40	7.00	5.99	3.40	7.48	6.56	3.40	7.76	6.61	3.40	8.33	6.65	3.40	8.62	6.64	3.40	8.91	7.24	3.40

● HEATING

AFR 26

		Indoor temperature														
		16°CDB		18°CDB		20°CDB		23°CDB		25°CDB		27°CDB		30°CDB		
Outdoor temperature	(°CDB)	(°CWB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
	-10	-11	7.73	2.85	7.56	2.90	7.49	3.07	7.22	3.14	7.05	3.20	6.87	3.25	6.60	3.33
	-4	-6	8.87	3.09	8.69	3.14	8.51	3.20	8.22	3.29	8.03	3.34	7.84	3.40	7.53	3.49
	1	-1	10.29	3.20	10.10	3.27	9.88	3.33	9.55	3.43	9.32	3.49	9.09	3.56	8.72	3.66
	7	6	13.27	3.98	13.05	4.06	12.77	4.15	12.30	4.28	11.99	4.36	11.65	4.45	10.97	4.46
	12	10	13.95	3.79	13.74	3.88	13.51	3.96	13.03	4.09	12.67	4.18	12.29	4.26	11.68	4.40
	18	13	13.32	3.20	13.15	3.28	12.95	3.37	12.61	3.48	12.30	3.55	11.92	3.63	11.34	3.76
	24	17	12.77	3.08	12.62	3.17	12.45	3.25	11.95	3.25	11.56	3.25	11.21	3.27	10.52	3.28

AFR: Air flow rate (m³/min) TC : Total capacity (kW) SHC: Sensible Heat capacity (kW) PI : Power Input (kW)

■ MODEL : AUT36LUAS / AOT36LMAWL

● COOLING

AFR 26.7

		Indoor temperature																				
		18 °CDB			21 °CDB			23 °CDB			25 °CDB			27 °CDB			29 °CDB			32 °CDB		
		12 °CWB			15 °CWB			16 °CWB			18 °CWB			19 °CWB			21 °CWB			23 °CWB		
Outdoor temperature	(°CDB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
	-10	7.15	5.98	2.43	7.96	6.02	2.47	8.23	6.54	2.48	8.78	6.57	2.50	9.05	7.09	2.52	9.59	7.06	2.54	10.13	7.52	2.57
	0	8.53	6.60	2.12	9.50	6.64	2.15	9.83	7.22	2.16	10.47	7.24	2.19	10.80	7.82	2.20	11.45	7.79	2.22	12.09	8.30	2.24
	5	7.93	6.33	2.25	8.84	6.37	2.28	9.14	6.92	2.29	9.74	6.95	2.32	10.04	7.50	2.33	10.65	7.47	2.35	11.25	7.96	2.38
	10	8.53	6.60	1.90	9.50	6.64	1.93	9.82	7.21	1.94	10.47	7.24	1.96	10.79	7.82	1.97	11.44	7.79	1.99	12.09	8.29	2.01
	15	9.49	7.04	1.92	10.57	7.09	1.95	10.93	7.70	1.96	11.66	7.73	1.98	12.02	8.35	1.99	12.74	8.32	2.01	13.46	8.86	2.03
	20	9.47	7.03	2.36	10.55	7.08	2.39	10.91	7.69	2.41	11.63	7.72	2.43	11.99	8.34	2.44	12.71	8.31	2.47	13.43	8.84	2.49
	25	9.05	6.84	2.67	10.08	6.88	2.71	10.43	7.48	2.73	11.11	7.51	2.76	11.46	8.10	2.77	12.14	8.07	2.80	12.83	8.60	2.83
	30	8.96	6.79	3.27	9.98	6.84	3.32	10.32	7.43	3.34	11.00	7.46	3.37	11.34	8.05	3.39	12.02	8.02	3.42	12.70	8.54	3.46
	35	8.85	6.74	4.05	9.85	6.79	4.11	10.19	7.37	4.13	10.86	7.40	4.18	11.20	7.99	4.20	11.87	7.96	4.24	12.54	8.48	4.28
	40	6.85	5.85	3.12	7.63	5.89	3.17	7.89	6.40	3.19	8.41	6.43	3.22	8.67	6.94	3.23	9.19	6.91	3.27	9.72	7.36	3.30
43	6.38	5.65	3.16	7.10	5.69	3.21	7.35	6.18	3.22	7.83	6.20	3.25	8.07	6.70	3.27	8.56	6.67	3.30	9.04	7.10	3.34	

● HEATING

AFR 26.7

		Indoor temperature										
		16°CDB		18°CDB		20°CDB		22°CDB		24°CDB		
Outdoor temperature	(°CDB)	(°CWB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
	-10	-11	8.66	3.33	8.45	3.40	8.24	3.47	8.04	3.53	7.83	3.60
	-5	-7	9.74	3.50	9.51	3.57	9.28	3.65	9.05	3.72	8.81	3.79
	0	-2	11.16	3.69	10.89	3.76	10.62	3.84	10.36	3.92	10.09	3.99
	5	3	12.53	3.89	12.23	3.97	11.93	4.05	11.63	4.13	11.33	4.21
	7	6	13.41	4.03	13.09	4.11	12.77	4.20	12.45	4.28	12.13	4.37
	10	8	13.98	4.12	13.65	4.21	13.32	4.29	12.98	4.38	12.65	4.46
	15	10	14.05	3.87	13.72	3.95	13.38	4.03	13.05	4.11	12.71	4.19
	20	15	13.07	3.13	12.76	3.19	12.45	3.26	12.14	3.32	11.83	3.39
	24	18	13.62	3.09	13.29	3.15	12.97	3.22	12.65	3.28	12.32	3.35

AFR: Air flow rate (m³/min) TC : Total capacity (kW) SHC: Sensible Heat capacity (kW) PI : Power Input (kW)

■ MODEL : AU*45LUAS / AO*45LJBYL

● COOLING

AFR 28.3

		Indoor temperature																				
		21°CDB			23°CDB			26°CDB			27°CDB			29°CDB			30°CDB			32°CDB		
		15°CWB			16°CWB			18°CWB			19°CWB			21°CWB			22°CWB			23°CWB		
Outdoor temperature	(°CDB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
	-15	10.59	9.16	2.06	11.13	9.92	2.08	12.07	11.22	2.11	12.55	11.25	2.13	13.50	11.29	2.17	13.99	11.31	2.19	14.49	12.20	2.20
	-10	12.64	10.01	2.45	12.97	10.90	2.46	13.63	11.68	2.49	13.95	11.60	2.51	14.57	11.38	2.53	14.86	11.25	2.54	15.12	12.01	2.55
	0	11.59	9.12	3.05	11.86	9.99	3.07	12.42	10.75	3.11	12.69	10.66	3.13	13.23	10.47	3.15	13.48	10.37	3.16	13.73	11.17	3.17
	10	11.02	8.87	3.36	11.30	9.75	3.38	11.85	10.53	3.42	12.13	10.45	3.43	12.66	10.27	3.46	12.94	10.19	3.48	13.19	10.99	3.49
	20	13.27	9.87	3.53	13.69	10.78	3.53	14.54	11.66	3.52	14.99	11.62	3.52	15.91	11.56	3.50	16.33	11.52	3.48	16.78	12.37	3.47
	30	11.71	9.18	4.24	12.12	10.10	4.25	12.95	10.96	4.26	13.37	10.93	4.27	14.23	10.83	4.27	14.66	10.78	4.27	15.06	11.62	4.27
	35	11.68	9.17	5.13	12.09	10.09	5.16	12.86	10.94	5.13	14.00	10.90	5.15	14.02	11.04	5.18	14.43	10.69	5.13	14.82	11.54	5.15
	40	10.12	8.34	5.00	10.37	9.18	5.00	10.97	9.99	5.00	11.34	10.00	5.00	12.55	9.91	5.00	12.29	9.90	5.00	12.63	10.73	5.00
	43	9.28	7.98	5.00	9.62	8.87	5.00	10.26	9.70	5.00	10.63	9.67	5.00	11.18	9.54	5.00	11.51	9.49	5.00	11.84	10.31	5.00

● HEATING

AFR 28.3

		Indoor temperature														
		16°CDB		18°CDB		20°CDB		23°CDB		25°CDB		27°CDB		30°CDB		
Outdoor temperature	(°CDB)	(°CWB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
	-15	-16	7.32	3.55	7.16	3.61	7.02	3.66	6.43	3.71	6.34	3.79	6.23	3.86	6.06	3.94
	-10	-11	9.55	4.05	9.34	4.12	9.12	4.18	8.79	4.29	8.68	4.51	8.34	4.47	7.92	4.49
	-4	-6	10.99	4.17	10.75	4.25	10.51	4.32	10.07	4.41	9.77	4.43	9.45	4.45	8.93	4.46
	1	-1	12.66	4.41	12.33	4.42	12.00	4.45	11.42	4.45	10.98	4.42	10.63	4.44	10.03	4.44
	7	6	16.57	4.60	16.07	4.60	16.00	4.60	14.96	4.60	14.36	4.60	13.71	4.60	12.86	4.44
	12	10	17.48	4.60	16.96	4.60	16.42	4.60	15.73	4.60	15.07	4.40	14.53	4.44	13.59	4.20
	18	13	18.28	4.40	17.90	4.60	17.34	4.40	16.53	4.40	15.98	4.20	15.37	4.20	14.34	4.00
	20	15	18.01	4.20	17.53	4.20	17.15	4.20	16.36	4.20	15.66	4.00	15.12	4.00	14.17	4.00
	24	17	17.50	4.00	17.01	4.00	16.62	4.00	15.82	4.00	15.11	4.00	14.61	4.00	13.62	4.00

AFR: Air flow rate (m³/min) TC : Total capacity (kW) SHC: Sensible Heat capacity (kW) PI : Power Input (kW)

■ MODEL : AUT45LUAS / AOT45LJBYL

● COOLING

AFR 29.2

		Indoor temperature																							
		18°CDB			21°CDB			23°CDB			26°CDB			27°CDB			29°CDB			30°CDB			32°CDB		
		12°CWB			15°CWB			16°CWB			18°CWB			19°CWB			21°CWB			22°CWB			23°CWB		
Outdoor temperature	(°CDB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI
	-15	10.06	8.42	2.04	10.59	9.16	2.06	11.13	9.92	2.08	12.07	11.22	2.11	12.55	11.25	2.13	13.50	11.29	2.17	13.99	11.31	2.19	14.49	12.20	2.20
	-10	12.00	9.20	2.43	12.64	10.01	2.45	12.97	10.90	2.46	13.63	11.68	2.49	13.95	11.60	2.51	14.57	11.38	2.53	14.86	11.25	2.54	15.12	12.01	2.55
	0	11.01	8.39	3.02	11.59	9.12	3.05	11.86	9.99	3.07	12.42	10.75	3.11	12.69	10.66	3.13	13.23	10.47	3.15	13.48	10.37	3.16	13.73	11.17	3.17
	10	10.47	8.16	3.33	11.02	8.87	3.36	11.30	9.75	3.38	11.85	10.53	3.42	12.13	10.45	3.43	12.66	10.27	3.46	12.94	10.19	3.48	13.19	10.99	3.49
	20	12.61	9.08	3.51	13.27	9.87	3.53	13.69	10.78	3.53	14.54	11.66	3.52	14.99	11.62	3.52	15.91	11.56	3.50	16.33	11.52	3.48	16.78	12.37	3.47
	30	11.13	8.44	4.23	11.71	9.18	4.24	12.12	10.10	4.25	12.95	10.96	4.26	13.37	10.93	4.27	14.23	10.83	4.27	14.66	10.78	4.27	15.06	11.62	4.27
	35	11.10	8.43	5.13	11.68	9.17	5.13	12.09	10.09	5.16	12.86	10.94	5.13	14.00	10.90	5.15	14.02	11.04	5.18	14.43	10.69	5.13	14.82	11.54	5.15
	40	9.61	7.67	5.00	10.12	8.34	5.00	10.37	9.18	5.00	10.97	9.99	5.00	11.34	10.00	5.00	12.55	9.91	5.00	12.29	9.90	5.00	12.63	10.73	5.00
	43	8.82	7.34	5.00	9.28	7.98	5.00	9.62	8.87	5.00	10.26	9.70	5.00	10.63	9.67	5.00	11.18	9.54	5.00	11.51	9.49	5.00	11.84	10.31	5.00

● HEATING

AFR 29.2

		Indoor temperature														
		16°CDB		18°CDB		20°CDB		23°CDB		25°CDB		27°CDB		30°CDB		
Outdoor temperature	(°CDB)	(°CWB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
	-15	-16	8.53	3.78	8.35	3.84	8.24	4.14	7.86	4.14	7.75	4.60	7.45	4.60	7.07	4.60
	-10	-11	10.50	4.20	10.28	4.27	10.03	4.34	9.68	4.46	9.55	4.60	9.17	4.60	8.71	4.60
	-4	-6	12.45	4.38	12.18	4.47	11.91	4.54	11.42	4.60	11.06	4.60	10.71	4.60	10.12	4.60
	1	-1	14.35	4.60	13.97	4.60	13.59	4.60	12.94	4.60	12.45	4.60	12.04	4.60	11.36	4.60
	7	6	16.74	4.60	16.24	4.60	16.00	4.60	15.12	4.60	14.50	4.60	13.85	4.60	12.99	4.60
	12	10	17.66	4.60	17.13	4.60	16.59	4.60	15.89	4.60	15.22	4.60	14.68	4.60	13.73	4.60
	18	13	18.47	4.60	18.08	4.60	17.52	4.60	16.70	4.60	16.15	4.60	15.52	4.60	14.48	4.60
	20	15	18.20	4.60	17.71	4.60	17.33	4.60	16.53	4.60	15.82	4.60	15.28	4.60	14.32	4.60
	24	17	17.50	4.60	17.01	4.60	16.62	4.60	15.82	4.60	15.11	4.60	14.61	4.60	13.62	4.60

AFR: Air flow rate (m³/min) TC : Total capacity (kW) SHC: Sensible Heat capacity (kW) PI : Power Input (kW)

■ MODEL : AUT54LUAS / AOT54LJBYL

● COOLING

AFR 29.2

		Indoor temperature																										
		18°CDB			21°CDB			23°CDB			26°CDB			27°CDB			29°CDB			30°CDB			32°CDB					
		12°CWB		PI	15°CWB		PI	16°CWB		PI	18°CWB		PI	19°CWB		PI	21°CWB		PI	22°CWB		PI	23°CWB		PI			
Outdoor temperature	(°CDB)	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI	TC	SHC	PI			
	-15	10.42	8.29	2.26	10.97	9.01	2.28	11.53	9.76	2.30	12.51	11.04	2.34	13.00	11.06	2.36	13.98	11.10	2.40	14.49	11.12	2.42	15.00	12.00	2.43	15.66	11.81	2.82
	-10	12.43	9.05	2.68	13.09	9.84	2.71	13.43	10.72	2.72	14.12	11.49	2.76	14.45	11.41	2.78	15.09	11.19	2.80	15.39	11.06	2.81	15.66	11.81	2.82	16.33	12.00	3.11
	0	11.40	8.25	3.34	12.00	8.97	3.38	12.29	9.82	3.40	12.86	10.58	3.44	13.14	10.48	3.47	13.71	10.30	3.49	13.96	10.20	3.50	14.22	10.98	3.51	14.89	11.81	3.82
	10	10.84	8.03	3.68	11.41	8.72	3.72	11.70	9.59	3.74	12.27	10.36	3.79	12.56	10.28	3.80	13.11	10.10	3.83	13.40	10.02	3.85	13.66	10.81	3.86	14.33	11.81	4.17
	20	13.06	8.93	3.90	13.75	9.70	3.91	14.18	10.60	3.91	15.06	11.46	3.90	15.52	11.43	3.89	16.47	11.37	3.87	16.91	11.33	3.85	17.38	12.16	3.84	18.33	13.00	4.11
	30	11.53	8.30	4.68	12.13	9.02	4.69	12.55	9.93	4.70	13.41	10.78	4.72	13.84	10.75	4.73	14.74	10.66	4.73	15.18	10.60	4.73	15.59	11.43	4.73	16.53	12.16	5.04
	35	11.50	8.29	5.70	12.10	9.01	5.70	12.53	9.92	5.70	13.32	10.76	5.70	14.50	10.72	5.70	14.52	10.86	5.70	14.95	10.52	5.70	15.35	11.35	5.70	16.70	13.00	6.01
	40	9.95	7.54	5.15	10.48	8.20	5.15	10.74	9.03	5.15	11.36	9.82	5.15	11.75	9.83	5.15	13.00	9.75	5.15	12.73	9.74	5.15	13.08	10.56	5.15	14.83	11.81	5.46
43	9.13	7.22	5.15	9.61	7.84	5.15	9.97	8.72	5.15	10.63	9.54	5.15	11.01	9.51	5.15	11.58	9.39	5.15	11.93	9.34	5.15	12.26	10.14	5.15	14.13	11.81	5.46	

● HEATING

AFR 29.2

			Indoor temperature													
			16°CDB		18°CDB		20°CDB		23°CDB		25°CDB		27°CDB		30°CDB	
Outdoor temperature	(°CDB)	(°CWB)	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
	-15	-16	8.79	4.27	8.61	4.34	8.49	4.68	8.10	4.68	8.00	5.20	7.68	5.20	7.29	5.20
	-10	-11	10.83	4.74	10.60	4.83	10.34	4.91	9.98	5.04	9.85	5.20	9.46	5.20	8.98	5.20
	-4	-6	12.84	4.96	12.56	5.05	12.28	5.14	11.78	5.20	11.40	5.20	11.04	5.20	10.44	5.20
	1	-1	14.80	5.20	14.41	5.20	14.02	5.20	13.35	5.20	12.84	5.20	12.41	5.20	11.71	5.20
	7	6	17.27	5.20	16.74	5.20	16.50	5.20	15.59	5.20	14.96	5.20	14.28	5.20	13.39	5.20
	12	10	18.21	5.20	17.67	5.20	17.11	5.20	16.39	5.20	15.70	5.20	15.14	5.20	14.16	5.20
	18	13	19.05	5.20	18.65	5.20	18.07	5.20	17.22	5.20	16.65	5.20	16.01	5.20	14.94	5.20
	20	15	18.77	5.20	18.26	5.20	17.87	5.20	17.04	5.20	16.32	5.20	15.75	5.20	14.76	5.20
24	17	17.50	5.20	17.01	5.20	16.62	5.20	15.82	5.20	15.11	5.20	14.61	5.20	13.62	5.20	

AFR: Air flow rate (m³/min) TC : Total capacity (kW) SHC: Sensible Heat capacity (kW) PI : Power Input (kW)

8-2. OPERATION RANGE

■ MODEL : AU*24LUAR / AO*24LMAKL

Mode	Operation Range		
	Indoor temperature	Indoor humidity	Outdoor temperature
Cooling Dry	18 to 32°C	About 80% or less	0 to 43°C
Heating	16 to 30°C	–	-10 to 24°C

■ MODEL : AU*30/ 36LUAS / AO*30/ 36LMAWL

Mode	Operation Range		
	Indoor temperature	Indoor humidity	Outdoor temperature
Cooling Dry	18 to 32°C	About 80% or less	-10 to 43°C
Heating	16 to 30°C	–	-10 to 24°C

■ MODEL : AU*45/ 54LUAS / AO*45/ 54LJBYL

Mode	Operation Range		
	Indoor temperature	Indoor humidity	Outdoor temperature
Cooling Dry	18 to 32°C	About 80% or less	-15 to 43°C
Heating	16 to 30°C	–	-15 to 24°C

8-3. ELECTRIC CHARACTERISTICS

Model Name	Indoor unit		AU*24LUAR		AU*30LUAS	
	Outdoor unit		AO*24LMAKL		AO*30LMAWL	
Power Supply	Voltage	V	230 ~			
	Frequency	Hz	50			
Rated Value	Mode		Cooling	Heating	Cooling	Heating
	Current	A	11.1	10.5	12.5	12.4
	Input	kW	2.53	2.40	2.86	2.84
Max Operating Current		A	12.5	12.5	15.2	14.8
Starting Current		A	10	10	15	15
*1) Wiring Spec	Main Fuse (Circuit breaker) Current	A	25		30	
	Power Cable	mm ²	4.0		4.0	
	*2)Limited wiring length	m	33		27	
Indoor Fan Motor	Input	kW	0.153		0.19	
	Full Load Amp.	A	0.64		1.00	
Outdoor Fan Motor	Input	kW	0.15		0.13	
	Full Load Amp.	A	0.73		0.42	

Model Name	Indoor unit		AU*36LUAS		AU*45LUAS	
	Outdoor unit		AO*36LMAWL		AO*45LJBYL	
Power Supply	Voltage	V	230 ~			
	Frequency	Hz	50			
Rated Value	Mode		Cooling	Heating	Cooling	Heating
	Current	A	17.6	15.2	19.5	17.3
	Input	kW	4.01	3.49	4.45	3.95
Max Operating Current		A	17.9	18.2	22.6	20.0
Starting Current		A	15	15	15	15
*1) Wiring Spec	Main Fuse (Circuit breaker) Current	A	30		30	
	Power Cable	mm ²	4.0		6.0	
	*2)Limited wiring length	m	21		27	
Indoor Fan Motor	Input	kW	0.19		0.23	
	Full Load Amp.	A	1.00		1.35	
Outdoor Fan Motor	Input	kW	0.13		0.067 x 2	
	Full Load Amp.	A	0.42		0.34 x 2	

*1) Wiring Spec : Selected Sample
(Selected based on Japan Electrotechnical Standard and Codes Committee E0005)

*2) Limited Wiring length : This is the wiring length in case voltage descent is less than 2%.
When the wiring length becomes long, please select the wiring of a more larger diameter.

Model Name	Indoor unit		AUT30LUAS		AUT36LUAS	
	Outdoor unit		AOT30LMAWL		AOT36LMAWL	
Power Supply	Voltage	V	240 ~			
	Frequency	Hz	50			
Rated Value	Mode		Cooling	Heating	Cooling	Heating
	Current	A	12.0	11.9	16.8	14.6
	Input	kW	2.86	2.84	4.01	3.49
Max Operating Current		A	14.6	14.6	17.5	17.5
Starting Current		A	15	15	15	15
*1) Wiring Spec	Main Fuse (Circuit breaker) Current	A	30		30	
	Power Cable	mm ²	4.0		4.0	
	*2)Limited wiring length	m	27		21	
Indoor Fan Motor	Input	kW	0.19		0.19	
	Full Load Amp.	A	1.00		1.00	
Outdoor Fan Motor	Input	kW	0.13		0.13	
	Full Load Amp.	A	-		-	

Model Name	Indoor unit		AUT45LUAS		AUT54LUAS	
	Outdoor unit		AOT45LJBYL		AOT54LJBYL	
Power Supply	Voltage	V	240 ~			
	Frequency	Hz	50			
Rated Value	Mode		Cooling	Heating	Cooling	Heating
	Current	A	18.6	16.6	23.5	20.4
	Input	kW	4.45	3.95	5.60	4.85
Max Operating Current		A	22.6	20.0	24.0	23.5
Starting Current		A	15	15	15	15
*1) Wiring Spec	Main Fuse (Circuit breaker) Current	A	30		30	
	Power Cable	mm ²	6.0		6.0	
	*2)Limited wiring length	m	27		25	
Indoor Fan Motor	Input	kW	0.23		0.23	
	Full Load Amp.	A	1.35		1.35	
Outdoor Fan Motor	Input	kW	0.067 x 2		0.067x2	
	Full Load Amp.	A	0.34 x 2		0.34x2	

- *1) Wiring Spec : Selected Sample
(Selected based on Japan Electrotechnical Standard and Codes Committee E0005)
- *2) Limited Wiring length : This is the wiring length in case voltage descent is less than 2%.
When the wiring length becomes long, please select the wiring of a more larger diameter.

8-4. SAFETY DEVICE

■ OUTDOOR UNIT

	PROTECTION FORM	AO*24LMAKL
FUSE (SIDE OF POWER SUPPLY TERMINAL)	-	25A 250V
FUSE ON MAIN PCB	-	3.15A 250V
	-	5A 250V
FAN MOTOR PROTECTION	THERMAL PROTECTOR	150±5°C OFF
COMPRESSOR PROTECTION	PRESSURE SWITCH	4.2MPa
	THERMAL SWITCH	OFF 120±5°C ON 85±7°C

	PROTECTION FORM	AO*30LMAWL	AO*36LMAWL
FUSE (SIDE OF POWER SUPPLY TERMINAL)	-	25A 250V	25A 250V
FUSE (SIDE OF INDOOR UNIT)	-	10A 250V	10A 250V
FUSE ON MAIN PCB	-	3.15A 250V	3.15A 250V
	-	5A 250V	5A 250V
FAN MOTOR PROTECTOR	THERMAL PROTECTOR	150±5°C OFF	150±5°C OFF
HIGH PRESSURE PROTECTION	PRESSURE SWITCH	OFF:4.2±0.1MPa ON:3.2±0.15MPa	OFF:4.2±0.1MPa ON:3.2±0.15MPa
DISCHARGE THERMISTOR	THERMAL PROTECTOR	OFF:120±5°C ON:80±5°C	OFF:120±5°C ON:80±5°C
COMPRESSOR THERMISTOR	THERMAL PROTECTOR	OFF:130±5°C ON:80±5°C	OFF:130±5°C ON:80±5°C

	PROTECTION FORM	AO*45LJBYL	AO*54LJBYL
FUSE (SIDE OF INDOOR UNIT TERMINAL)	-	10A 250V	10A 250V
FUSE ON MAIN PCB	-	3.15A 250V	3.15A 250V
	-	5A 250V	5A 250V
FAN MOTOR PROTECTOR	THERMAL PROTECTOR	150±5°C OFF	150±5°C OFF
HIGH PRESSURE PROTECTION	PRESSURE SWITCH	OFF:4.2±0.1MPa ON:3.2±0.15MPa	OFF:4.2±0.1MPa ON:3.2±0.15MPa
DISCHARGE THERMISTOR	THERMAL PROTECTOR	OFF:120±5°C ON:80±5°C	OFF:120±5°C ON:80±5°C
COMPRESSOR THERMISTOR	THERMAL PROTECTOR	OFF:130±5°C ON:80±5°C	OFF:130±5°C ON:80±5°C

■ INDOOR UNIT

	PROTECTION FORM	AU*24LUAR
PCB FUSE	CURRENT FUSE	3.15A 250V
FAN MOTOR PROTECTION	THERMAL PROTECTOR	150±5°C OFF
TERMINAL FUSE	THERMAL FUSE	102±2°C OFF

	PROTECTION FORM	AU*30LUAS	AU*36LUAS
PCB FUSE	-	3.15A 250V	3.15A 250V
FAN MOTOR PROTECTION	THERMAL PROTECTOR	130±5°C OFF	130±5°C OFF
TERMINAL FUSE	THERMAL FUSE	102±2°C OFF	102±2°C OFF

	PROTECTION FORM	AU*45LUAS	AU*54LUAS
PCB FUSE	-	3.15A 250V	3.15A 250V
FAN MOTOR PROTECTION	THERMAL PROTECTOR	130±5°C OFF	130±5°C OFF
TERMINAL FUSE	THERMAL FUSE	102±2°C OFF	102±2°C OFF


8-5. FUNCTION SETTING

8-5-1 INDOOR UNIT

INDOOR UNIT			
DIP SW	SW1	1	Auto restart validity/invalidity
		2	Room temperature correct coefficient
		3	Room temperature correct coefficient
	SW4	1	Forbidden
		2	Ceiling height setting
		3	
Rotary SW	SW2		Indoor unit number setting
Jumper Wire		JM1	Forbidden
		JM2	Forbidden
		JM3	Forbidden

■ SWITCH POSITION

● Indoor unit control circuit board

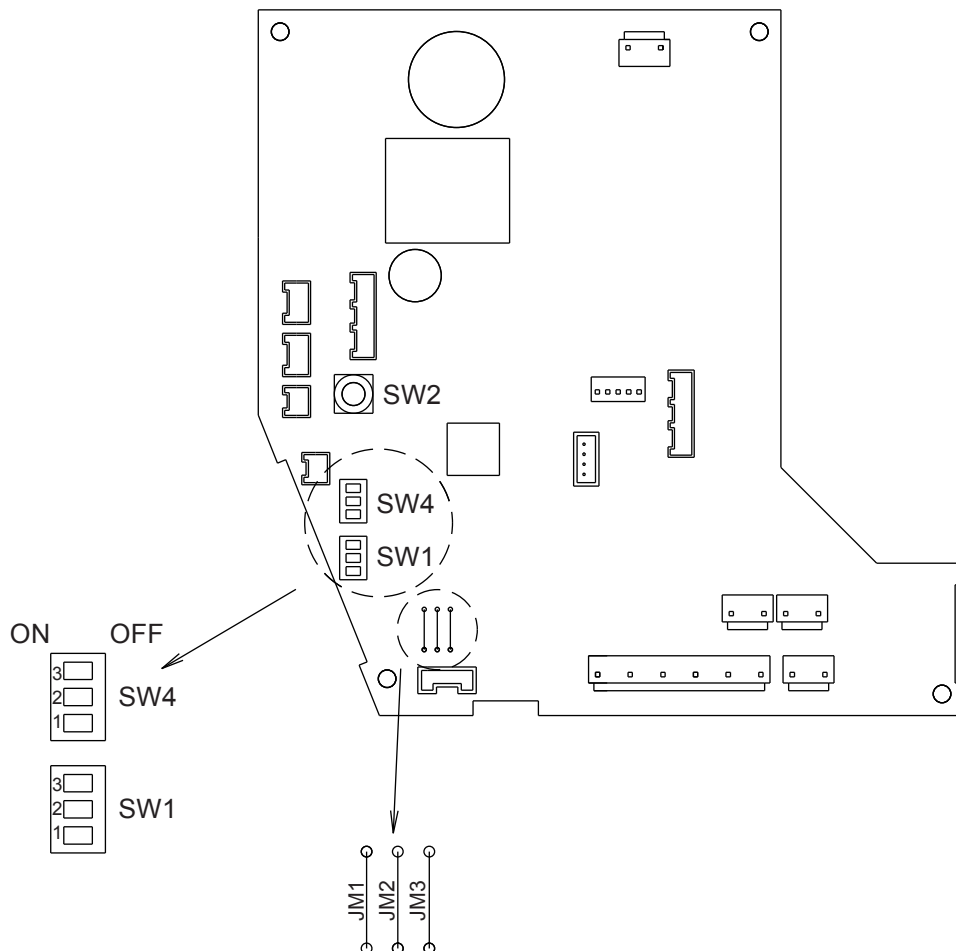

■ DIP SWITCH SETTING

● SW1-1. Auto restart setting

Auto restart function can be selected by turning this switch ON/OFF.

AUTO RESTART SETTING (◆ . . . Factory setting)

SW 1-1	SW state
OFF	Invalidity
◆ ON	Validity

● SW1-2, 1-3. Room temperature correct coefficient of heating.

Decide the heating temperature correct coefficient vale of heating.

TEMPERATURE CORRECTION (◆ . . . Factory setting)

SW 1-2	SW 1-3	SW state		
		heating	dry	cooling
OFF	OFF	+2 deg	-2 deg	-2 deg
ON	OFF	-2 deg	-2 deg	-2 deg
OFF	ON	0 deg	0 deg	0 deg
◆ ON	ON	+4 deg	0 deg	0 deg

● SW4-1. Dip SW 4-1 setting forbidden

(◆ . . . Factory setting)

◆ SW 4-1	OFF
----------	-----

● SW4-2, 4-3. Ceiling height setting

(◆ . . . Factory setting)

Ceiling height(m)		DIP - SW4		
		1	2	3
◆ 2.5-3.0	Normal	-	OFF	OFF
3.0-3.5	High ceiling 1	-	ON	OFF
More than 3.5	High ceiling 2	-	OFF	ON
Less than 2.5	Low ceiling	-	ON	ON

If the setting for a low ceiling is selected, the capacity of the air conditioner decreases slightly.

■ ROTARY SWITCH SETTING (SW2)

This switch can be used when group control system.

Set the indoor unit address in the 0,1,-,15 order.

(◆ . . . Factory setting)

SW 2	SW state
◆ 0	Single
1 - 15	Indoor unit address

■ JUMPER WIRE SETTING

JM 1, 2, 3 setting forbidden

(◆ . . . Factory setting)


JM 1,2,3	SW state
◆ Connect	Forbidden
Disconnect	

8-5-2 OUTDOOR UNIT (AO*30/ 36LMAWL)

OUTDOOR UNIT		
DIP SW 1	1	Change current capacity
	2	
	3	No use (OFF)
PUSH SW		Pump down switch

■ SWITCH POSITION

● Outdoor unit control circuit board

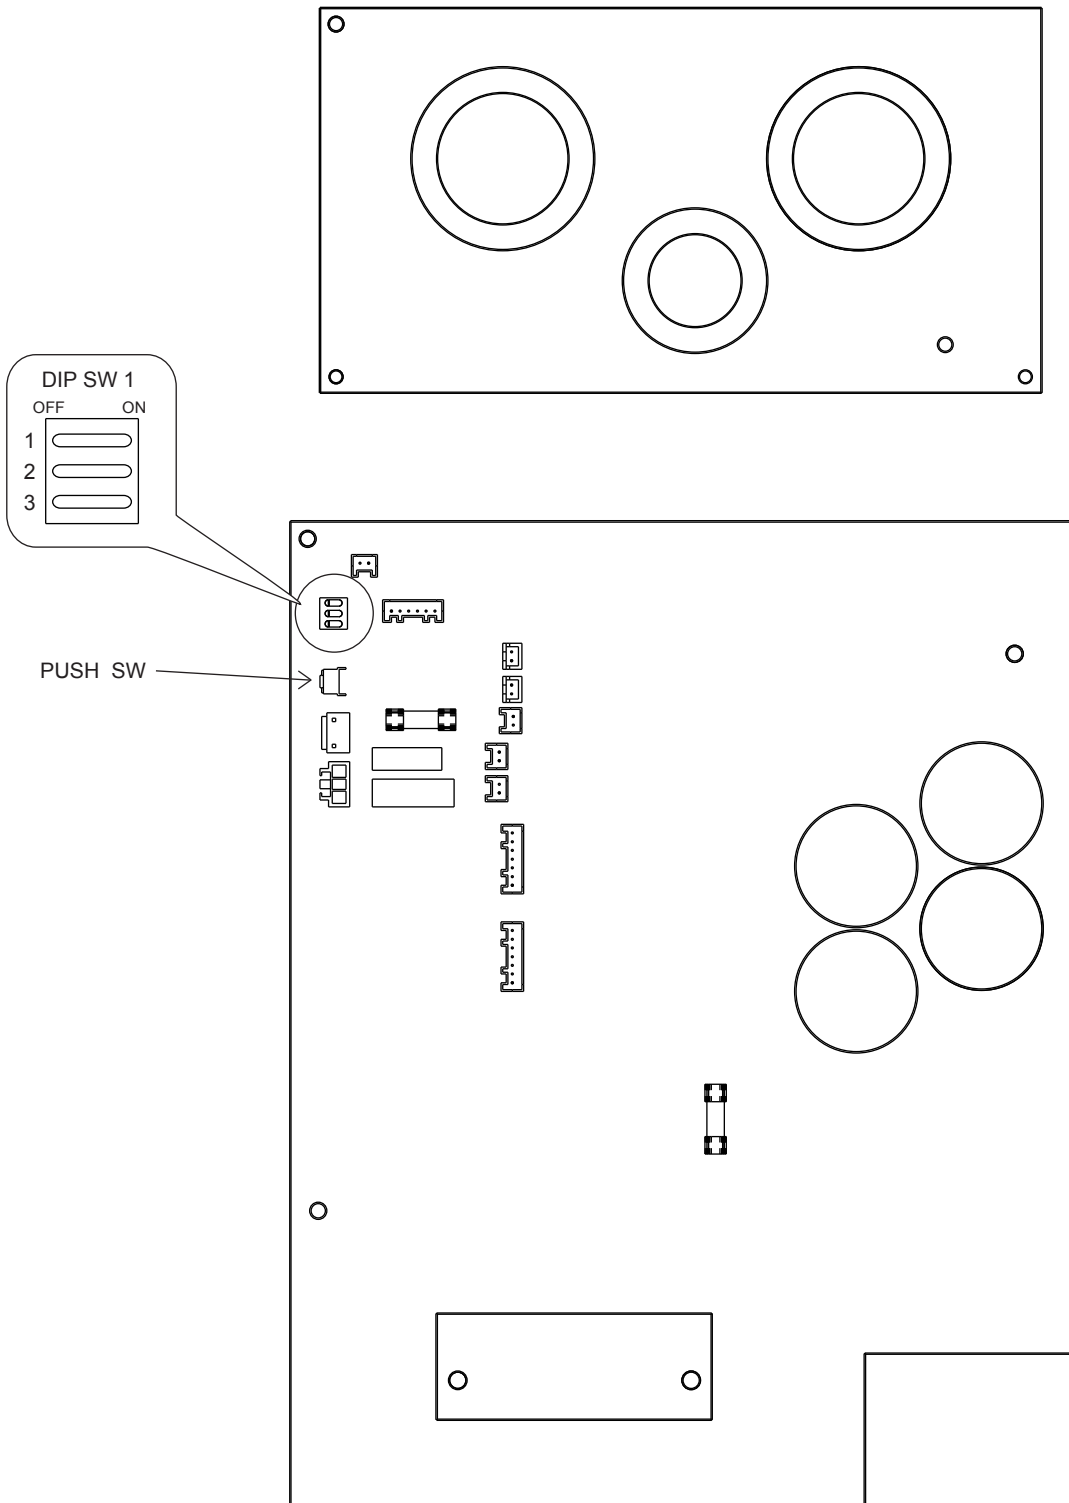

■ DIP SWITCH SETTING

● Current capacity setting

DIP-SW1			CURRENT (MAX.)
1	2	3	
OFF	OFF	OFF	18.0A *1
ON	OFF	OFF	15.0A *2
OFF	ON	OFF	13.5A
ON	ON	OFF	12.0A

*1=36000BTU model's factory setting (AO*36LMAWL)

*2=30000BTU model's factory setting (AO*30LMAWL)

■ PUSH SWITCH SETTING

● SW2 setting


Press the push-button switch, and "PUMP DOWN OPERATION" is starting.

8-5-3 OUTDOOR UNIT (AO*45/ 54LJBYL)

OUTDOOR UNIT		
DIP SW 1	1	Change current capacity
	2	
	3	No use (OFF)
PUSH SW		Pump down switch

■ SWITCH POSITION

● Outdoor unit control circuit board

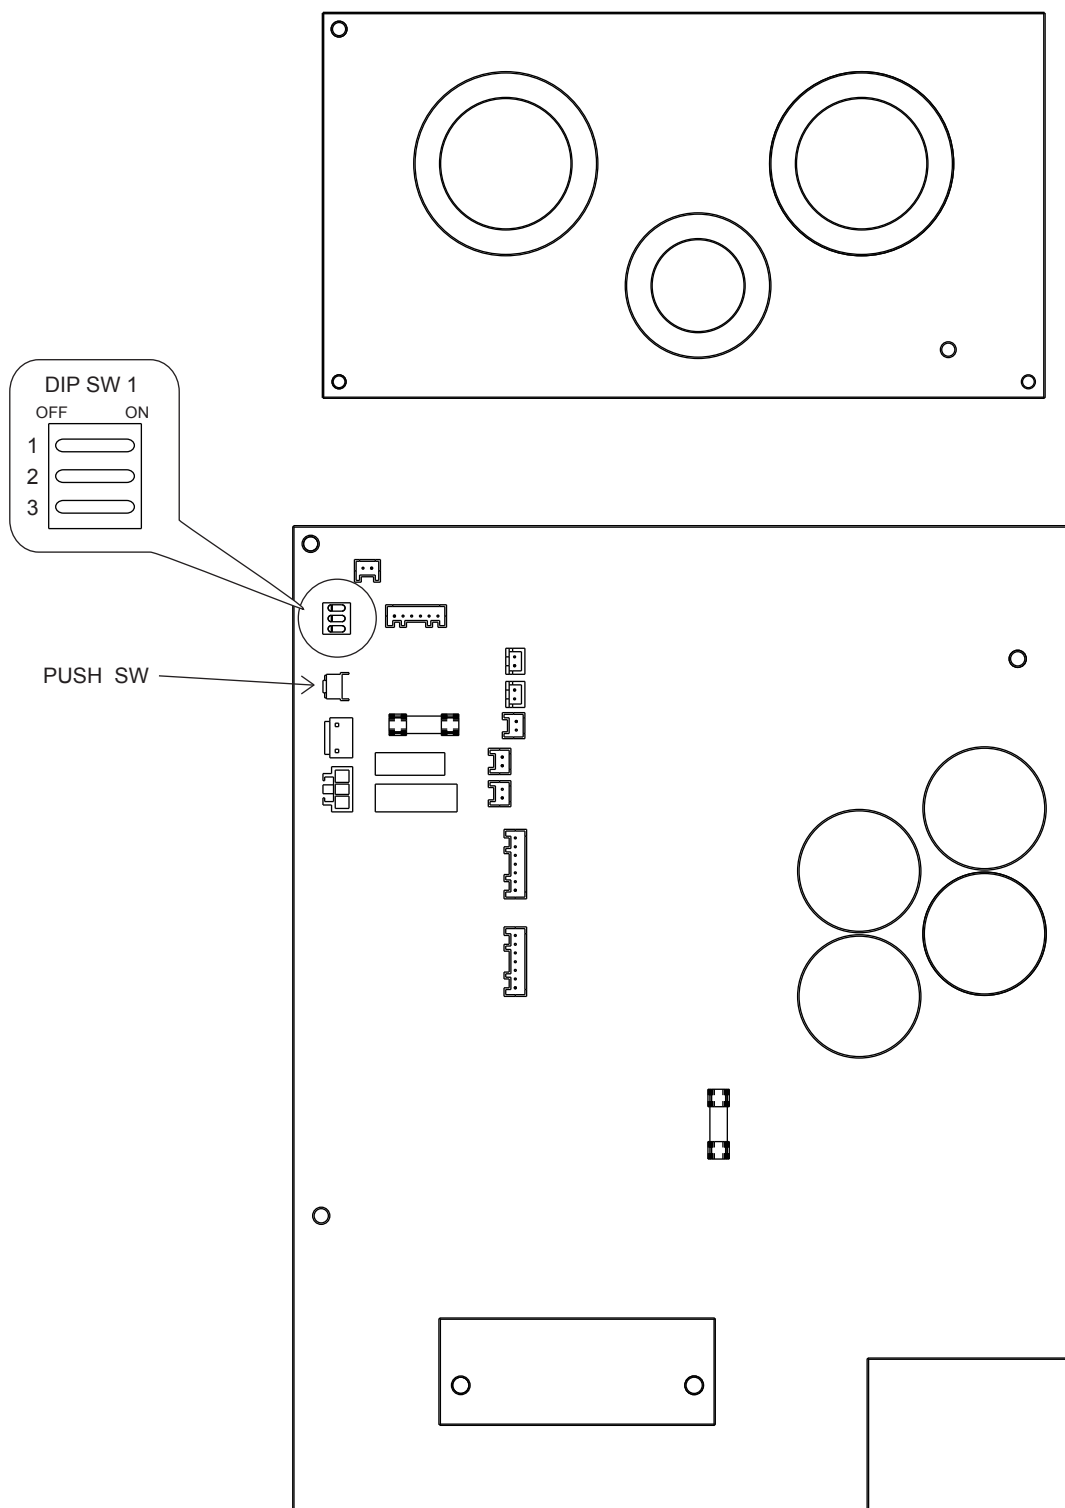

■ DIP SWITCH SETTING

● Current capacity setting

DIP-SW1			CURRENT (MAX.)
1	2	3	
OFF	OFF	OFF	23.5A *1
ON	OFF	OFF	20.0A *2
OFF	ON	OFF	18.0A
ON	ON	OFF	15.5A

*1=54000BTU model's factory setting (AO*54LJBYL)

*2=45000BTU model's factory setting (AO*45LJBYL)

■ PUSH SWITCH SETTING

● SW2 setting


Press the push-button switch, and "PUMP DOWN OPERATION" is starting.

8-5-4 WIRED REMOTE CONTROLLER

Wired remote controller		
DIP SW	1	Dual remote controller setting
	2	
	3	Group control setting
	4	Model setting
	5	Auto changeover setting
	6	Memory backup setting

■ SWITCH POSITION

● Wired remote controller

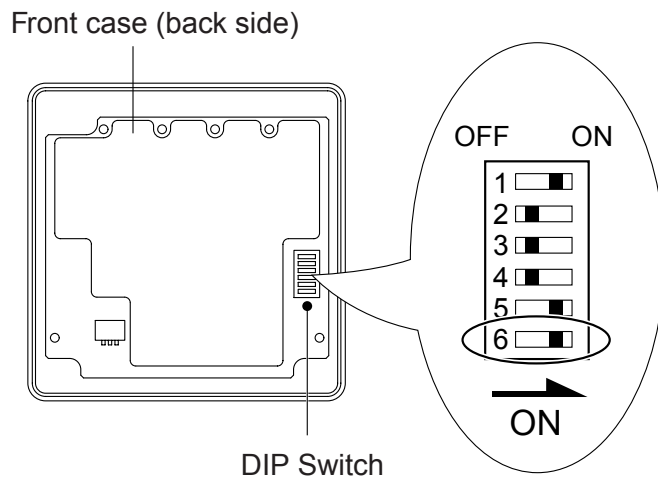

■ DIP SWITCH SETTING

● 1. SW setting

1-1 Dual remote controller setting

Set the remote controller DIP switch No.1 and 2 according to the following table.

(◆ . . . Factory setting)

Number of remote controller	Master unit		Slave unit	
	DIP-SW No.1	DIP-SW No.2	DIP-SW No.1	DIP-SW No.2
◆ 1 (Normal)	ON	OFF	—	—
2 (Dual)	OFF	OFF	ON	ON

1-2 Group control setting

Number of indoor unit connection (One/Multiple)

This is switched according to the number of connected indoor units.

(◆ . . . Factory setting)

DIP-SW No.3	Number of indoor unit
◆ OFF	One unit connection
ON	Multiple unit connection

1-3 Model setting

The system type of the outdoor unit can be selected by setting up DIP switch No.4 as follows.

(◆ . . . Factory setting)

DIP-SW No.4	Model
◆ OFF	Heat Pump model
ON	Cooling only model

1-4 Auto changeover setting

Selecting auto changeover validity / invalidity.

(◆ . . . Factory setting)

DIP-SW No.5	Auto changeover
◆ OFF	Invalidity
ON	Validity

1-5 Memory backup setting

Set to ON to use batteries for the memory backup.if batteries are not used, all of the settings stored in memory will be deleted if there is a power failure.

※ This function is wired remotecontrol only.

(◆ . . . Factory setting)

DIP-SW No.6	Memory backup
◆ OFF	Invalidity
ON	Validity

CASSETTE type INVERTER

9 . INSTALLATION MANUAL

R410A

Cassette Type SPLIT TYPE AIR CONDITIONER

INSTALLATION INSTRUCTION SHEET

(PART NO. 9374318070)

WARNING This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

CAUTION This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

This air conditioner uses new refrigerant HFC (R410A).

The basic installation work procedures are the same as conventional refrigerant models.

However, pay careful attention to the following points:

- Since the working pressure is 1.6 times higher than that of conventional refrigerant models, some of the piping and installation and service areas are special. (See the table below.) Especially, when replacing a conventional refrigerant model with a new refrigerant R410A model, always replace the conventional piping and flare nuts with the R410A piping and flare nuts.
- Models that use refrigerant R410A have a different charging port thread diameter to prevent erroneous charging with conventional refrigerant and for safety. Therefore, check beforehand. The charging port thread diameter for R410A is 1/2 UNF 20 threads per inch.
- Be more careful that foreign matter (oil, water, etc.) does not enter the piping than with refrigerant models. Also, when storing the piping, securely seal the openings by pinching, taping, etc.
- When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.

Special tools for R410A

Tool name	Contents of change
Gauge manifold	Pressure is high and cannot be measured with a conventional gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port was changed.
Charge hose	To increase pressure resistance, the hose material and base size were changed.
Vacuum pump	A conventional vacuum pump can be used by installing a vacuum pump adapter.
Gas leakage detector	Special gas leakage detector for R410A refrigerant R410A.

Table 1 Thicknesses of Annealed Copper Pipes

Pipe outside diameter	Thickness
15.88 mm (5/8 in.)	1.00 mm
9.52 mm (3/8 in.)	0.80 mm

(Nominal diameter is 5/8 in.) even when it is available on the market.

Use copper pipes thinner than 0.8 mm (nominal diameter is 3/8 in.), 1.0 mm (nominal diameter is 5/8 in.). Never use copper pipes thicker than 0.8 mm (nominal diameter is 3/8 in.).

Thicknesses of copper pipes used with R410A are shown in Table 1. Never use conventional refrigerant. It is necessary to choose adequate materials.

As an air conditioner using R410A, the pressure is higher than when using conventional refrigerant. It is necessary to choose adequate materials.





STANDARD PARTS

INDOOR UNIT ACCESSORIES

Name and shape	Application
Coupler heat insulation	For indoor side pipe joint
Special nut A (large flange)	For installing indoor unit
Special nut B (small flange)	For installing indoor unit
Templata	For ceiling hole cutting
Blower cover insulation	For discharged air
Hook wire	For installing intake grille.
Blade (small)	For fixing the remote controller
Remote controller	Remote controller
Tapping screw (flush heads)	For installing the remote controller
Remote controller cord	For connecting the remote controller

INDOOR UNIT INSTALLATION PROCEDURE

- INDOOR UNIT INSTALLATION**
- Install the air conditioner in a location which can withstand a load at least three times the weight of the main unit and which will not amplify sound or vibration. If the installation location is not strong enough, risk that the unit will come loose. Please take care.
- Remove the intake grille.
- Put the intake grille pushstions (two places).

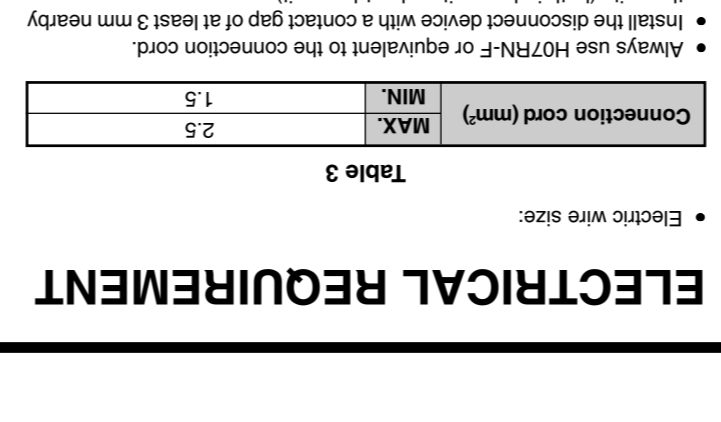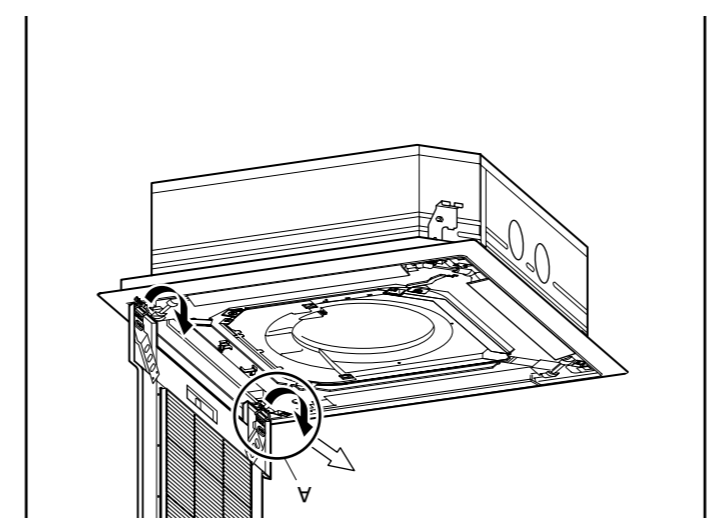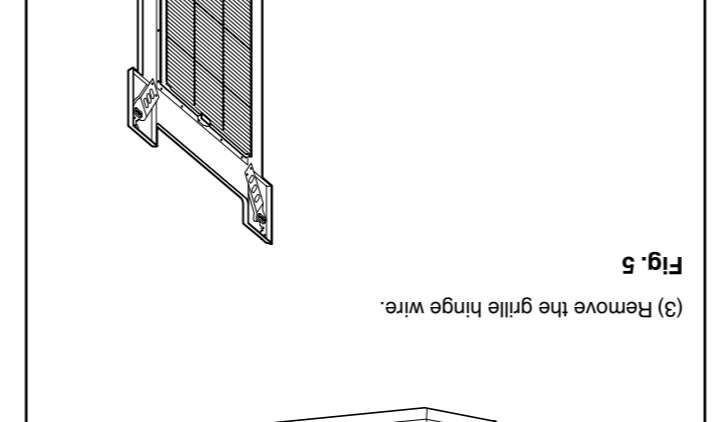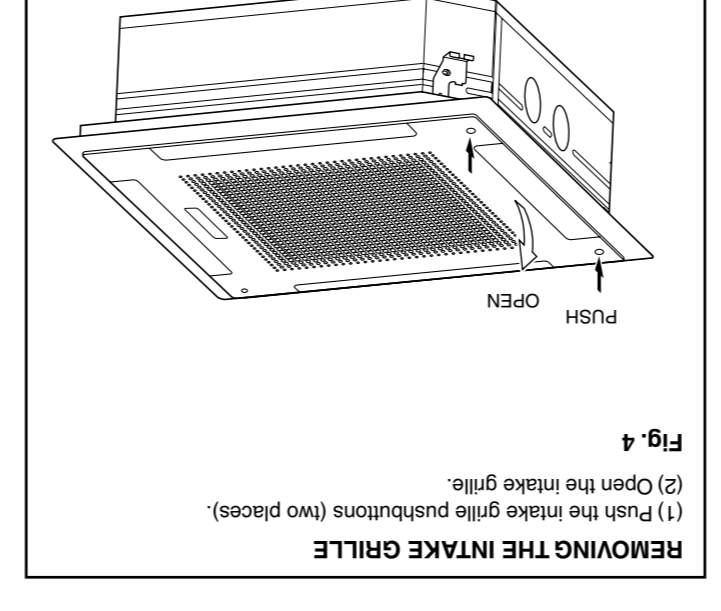


CONNECTION PIPE REQUIREMENT

Table 2

Diameter	Small	Large
Connection cord (mm)	9.52 mm (3/8 in.)	15.88 mm (5/8 in.)









• Electric wire size.

CAUTION Install heat insulation around both the gas and liquid pipes. Failure to do so may cause water leaks. Use heat insulation with heat resistance above 120 °C (R10-use cycle model only). In addition, if the humidity level at the installation location of the piping is expected to exceed 70%, install heat insulation around the refrigerant piping. If the expected humidity level is 70-80%, use heat insulation that is 15 mm or thicker and if the expected humidity exceeds 80%, use heat insulation that is 20 mm or thicker. If heat insulation is used that is not as thick as specified, condensation may form on the surface of the insulation. In addition, use heat insulation with heat conductivity of 0.045 W/(m·K) or less (at 20 °C).












INSTALLATION PROCEDURE









- INDOOR UNIT INSTALLATION**
- Install the air conditioner in a location which can withstand a load at least three times the weight of the main unit and which will not amplify sound or vibration. If the installation location is not strong enough, risk that the unit will come loose. Please take care.
- Remove the intake grille.
- Put the intake grille pushstions (two places).

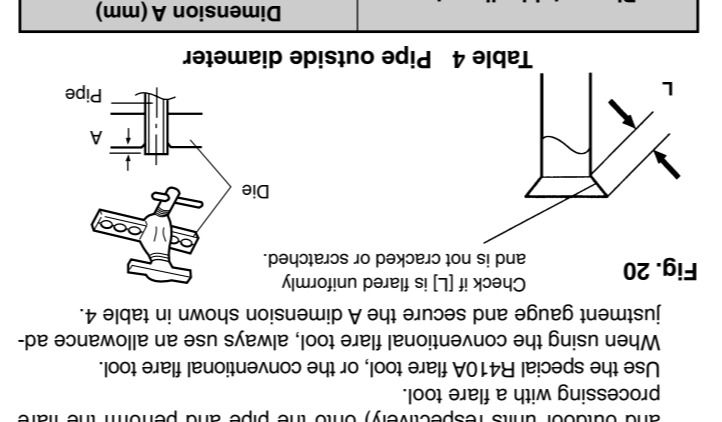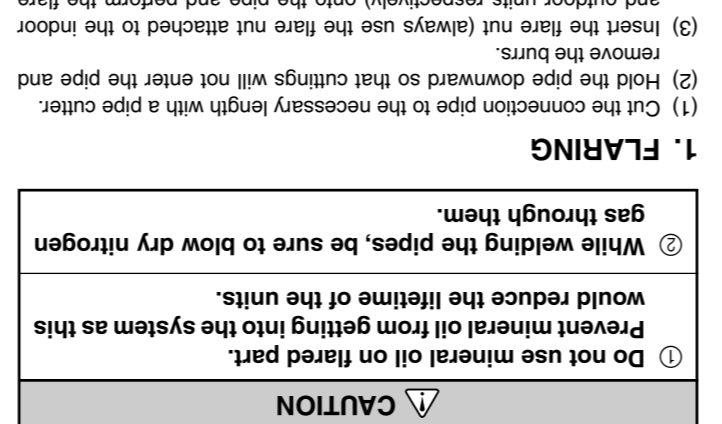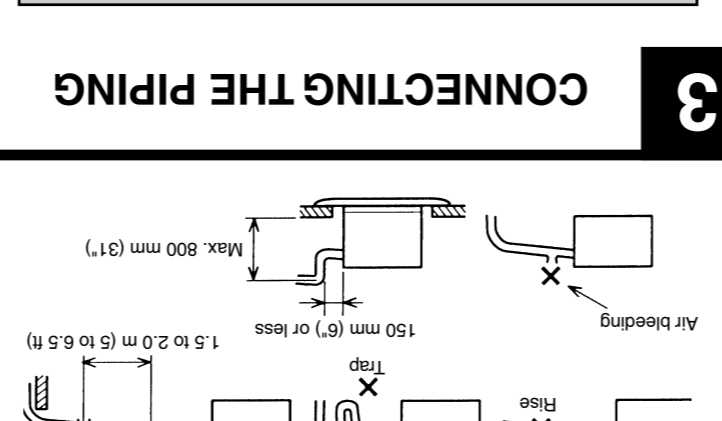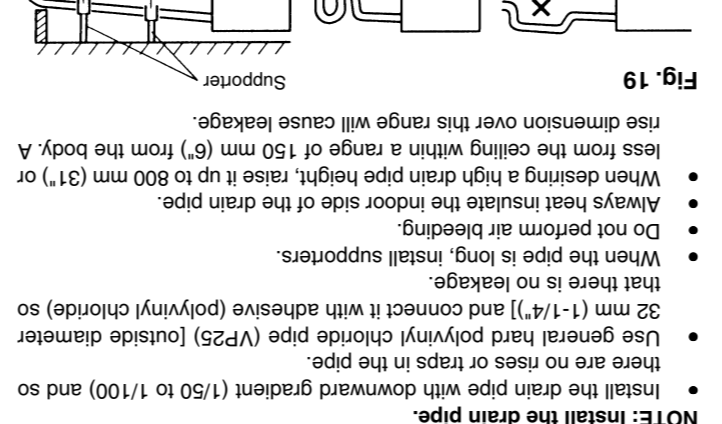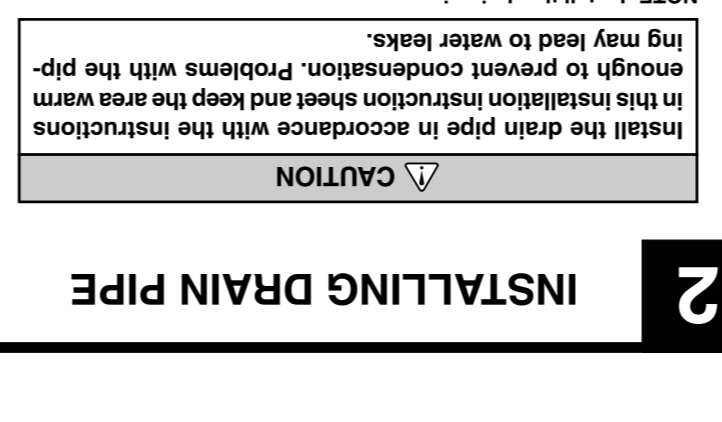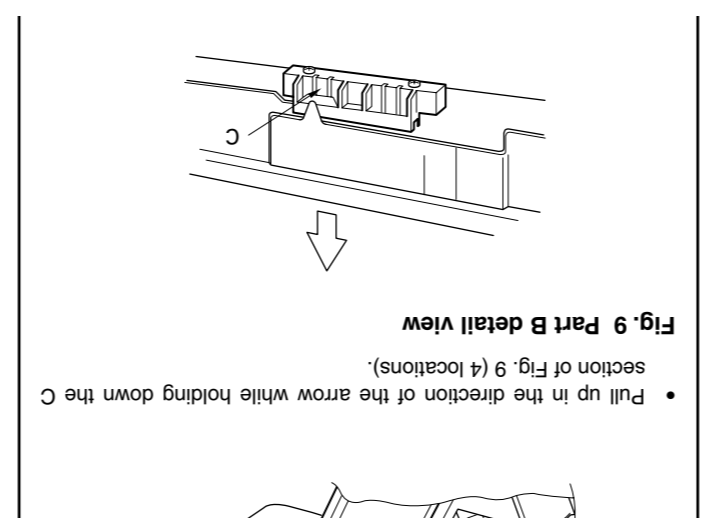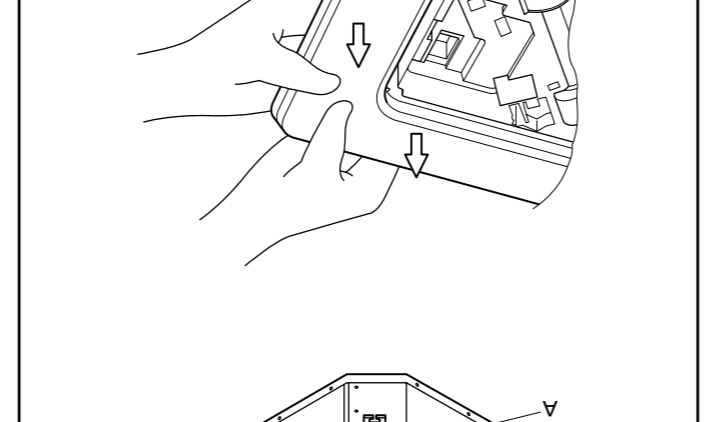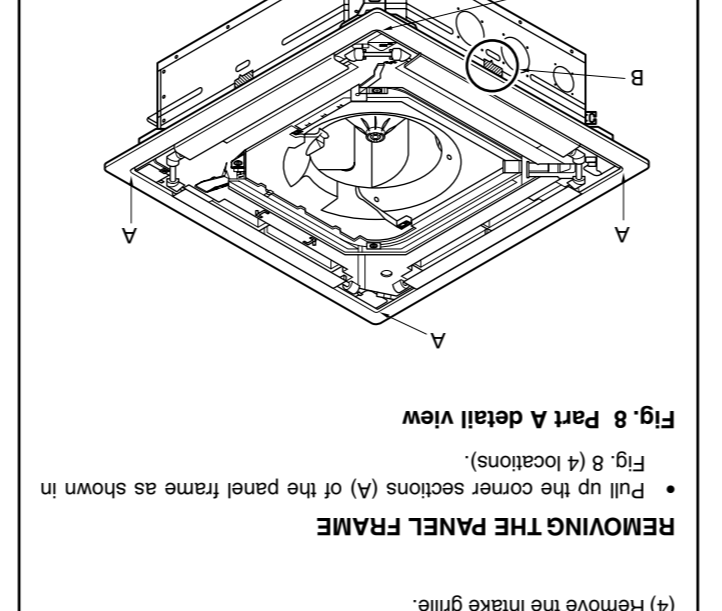








INSTALLING THE PANEL FRAME

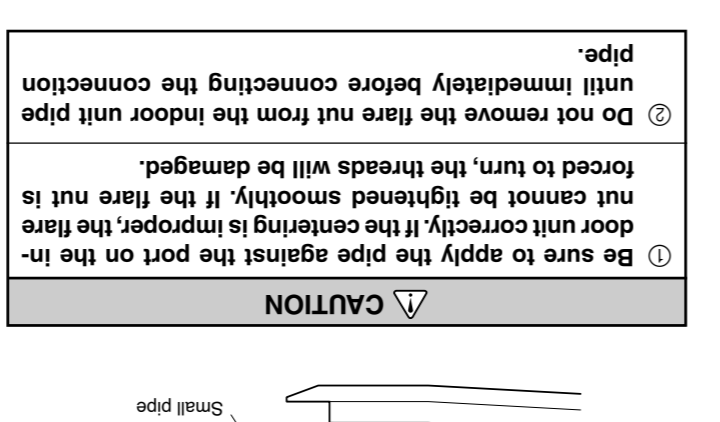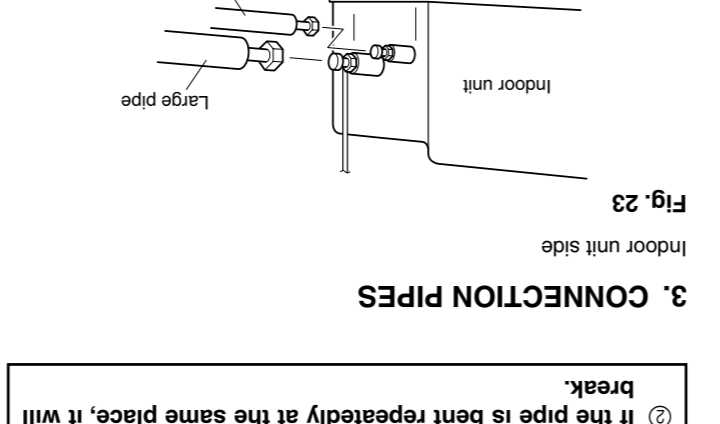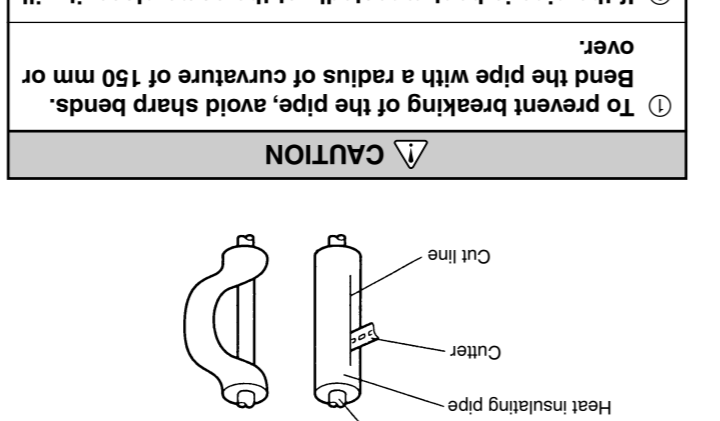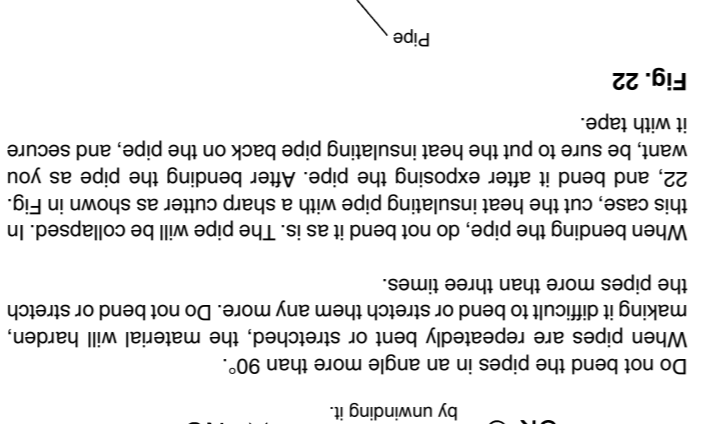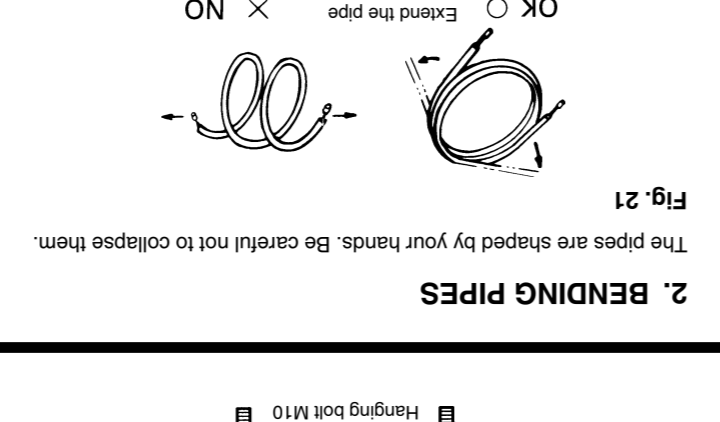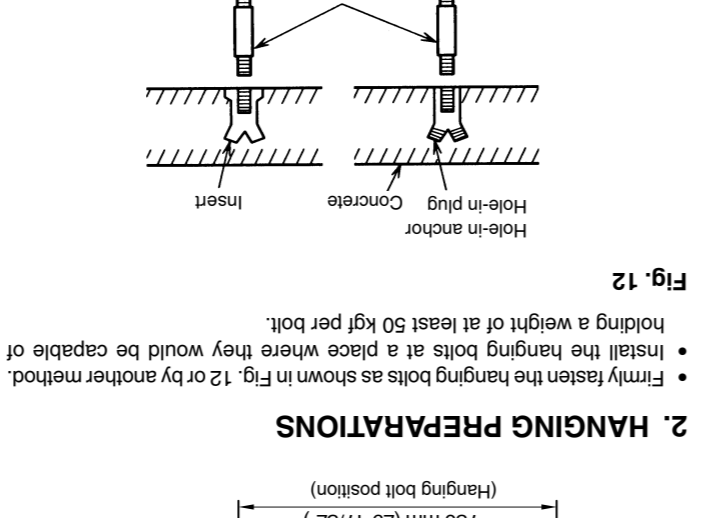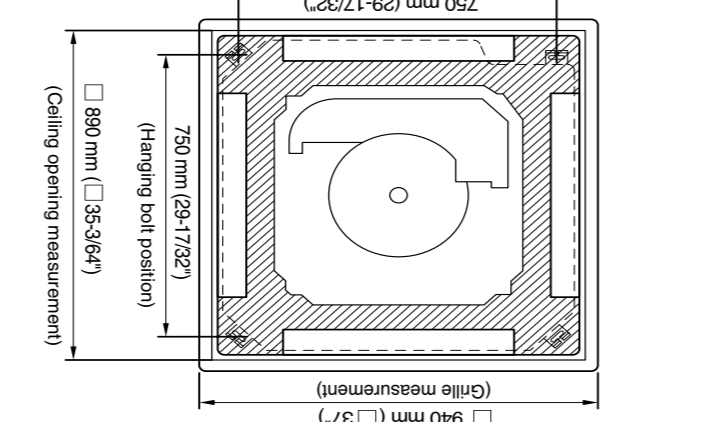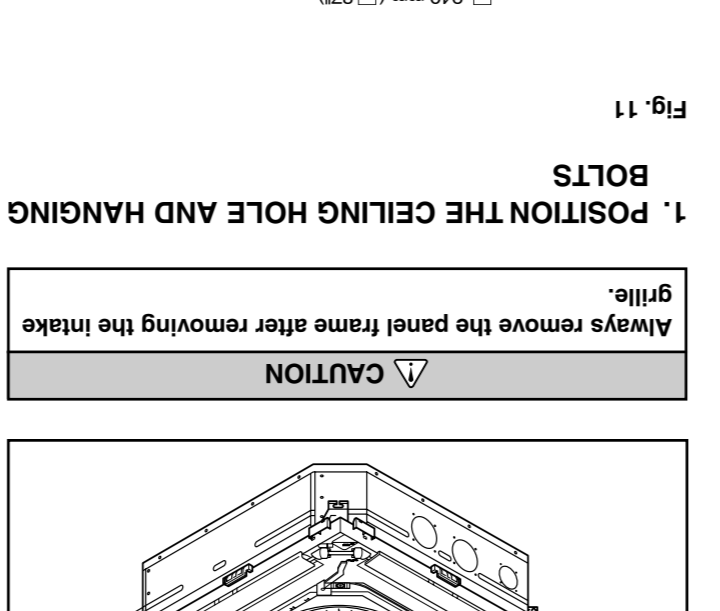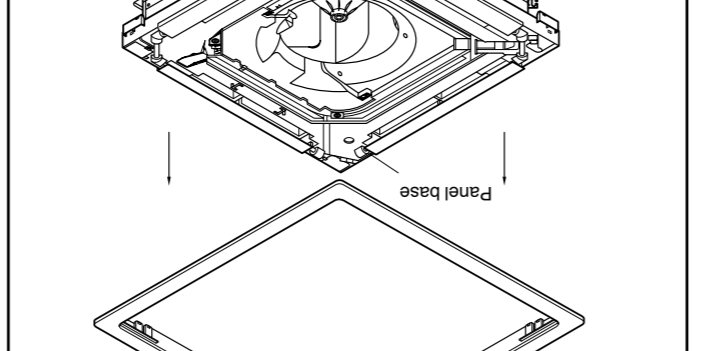

INSTALLING THE COUPLER

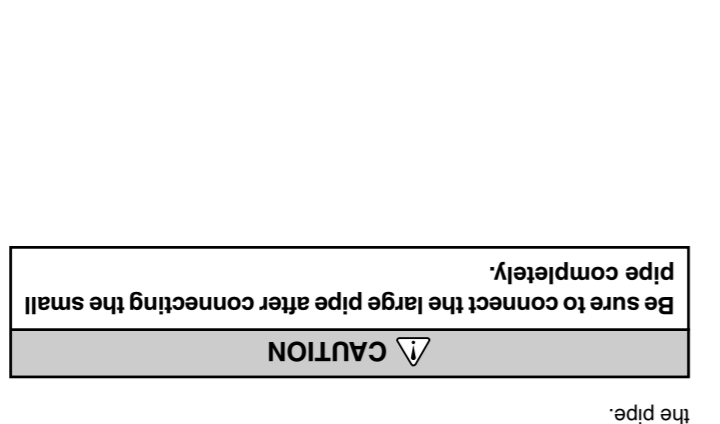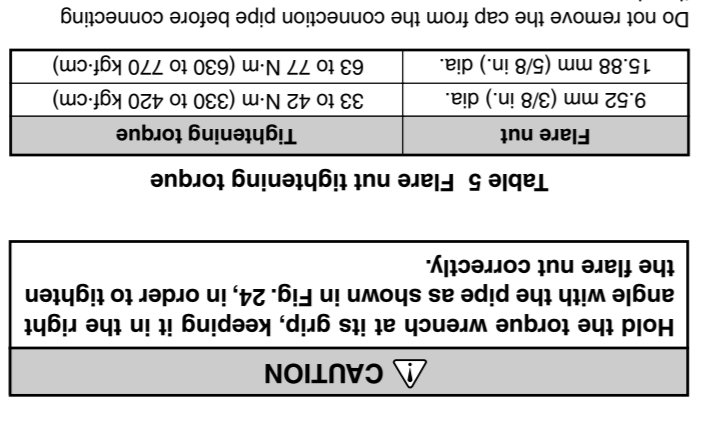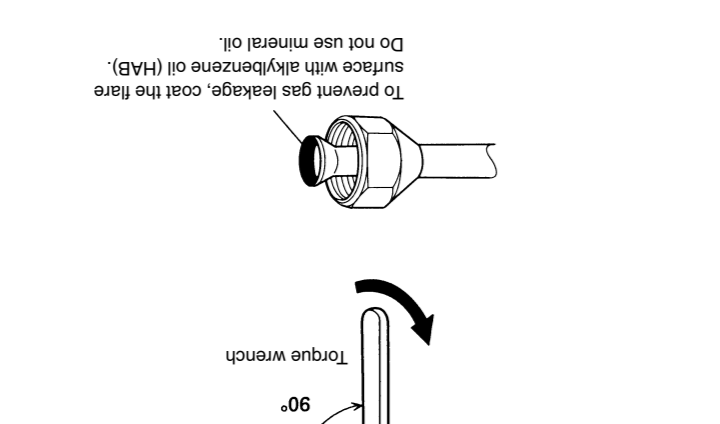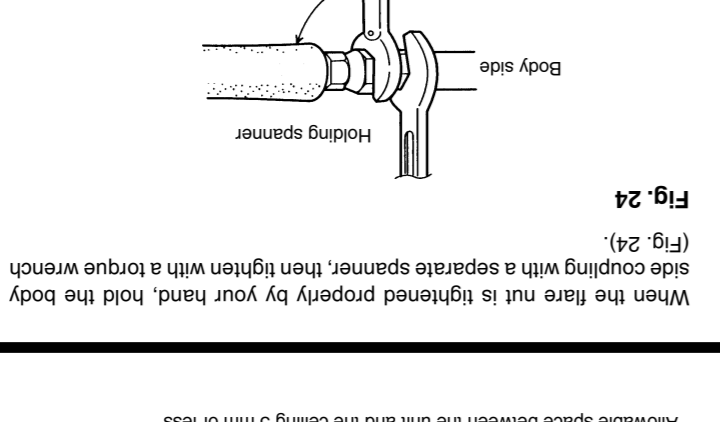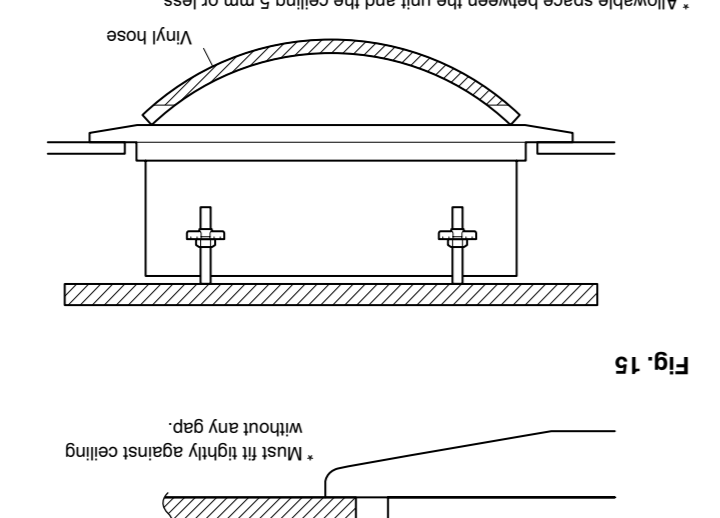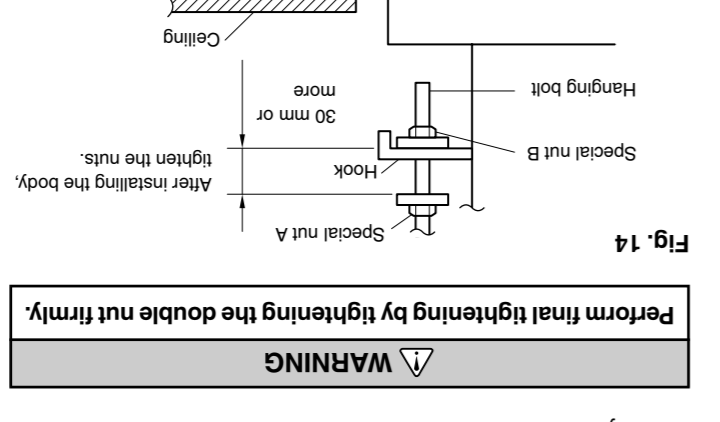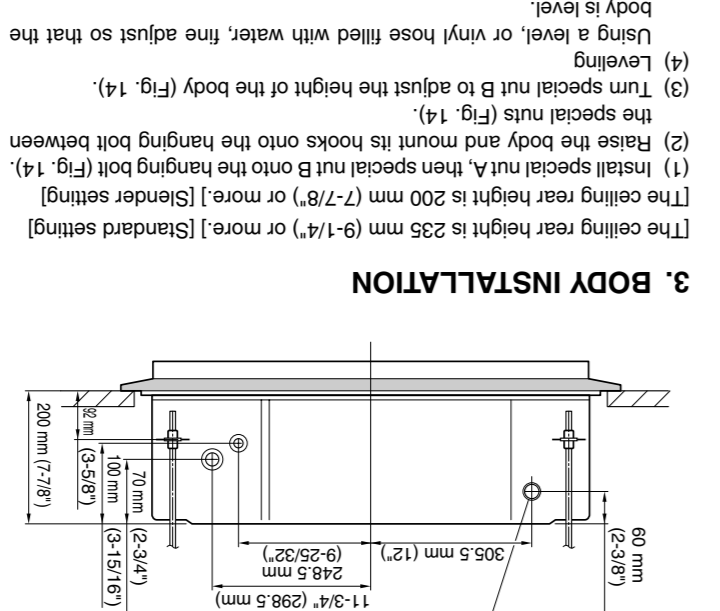
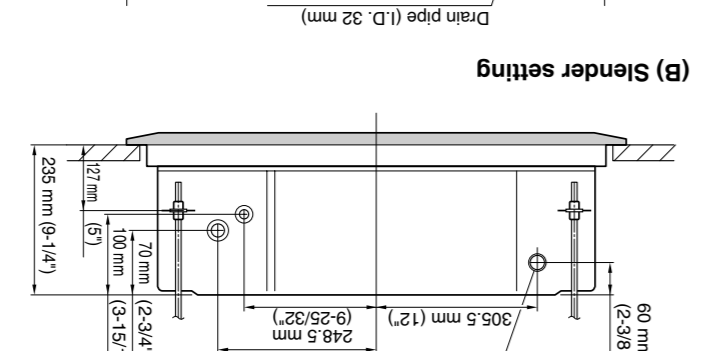


HEAT INSULATION

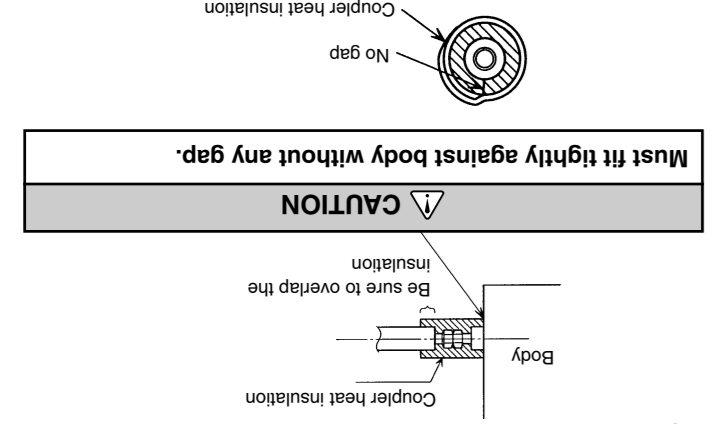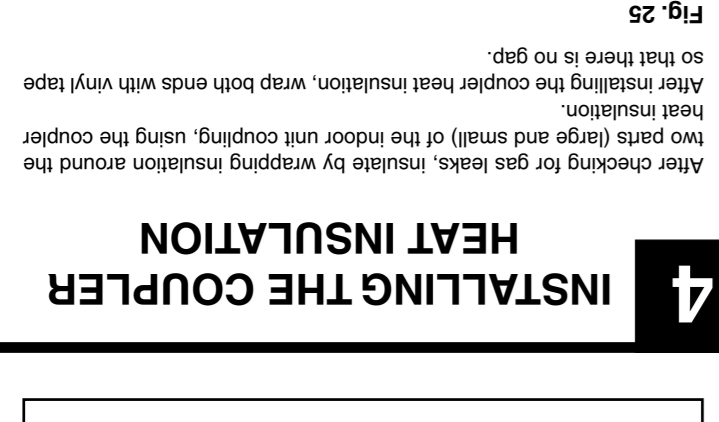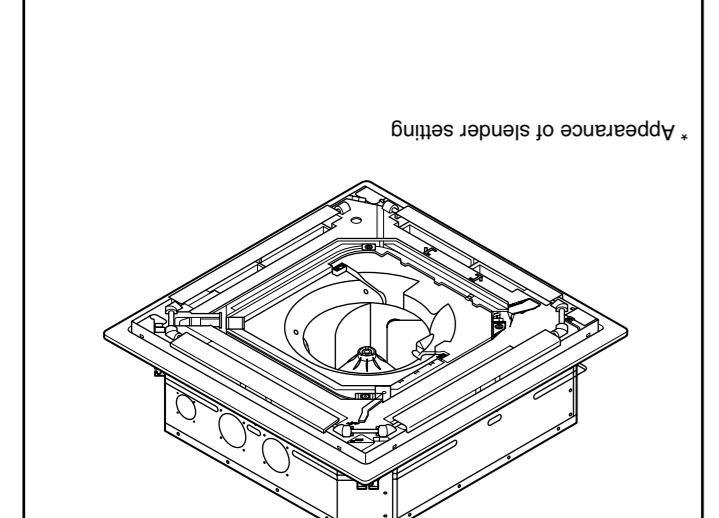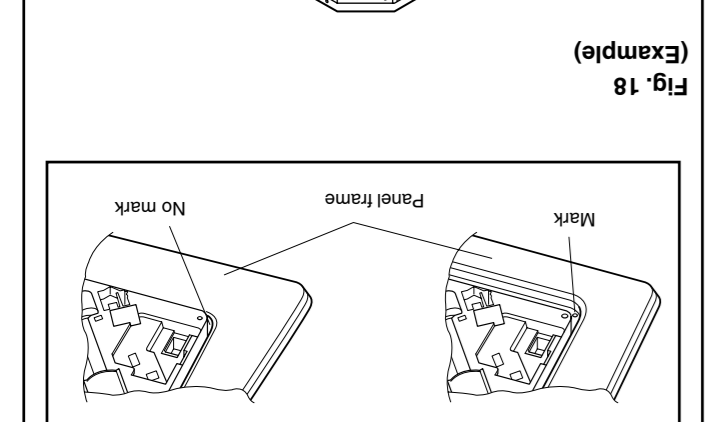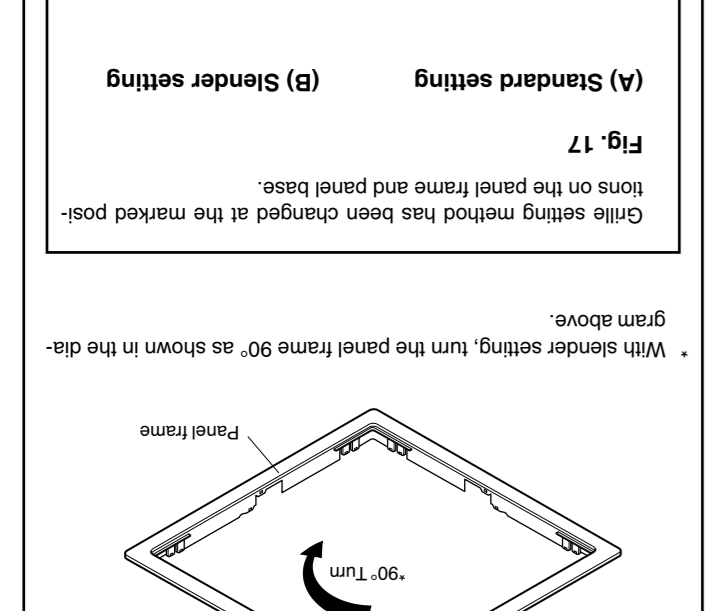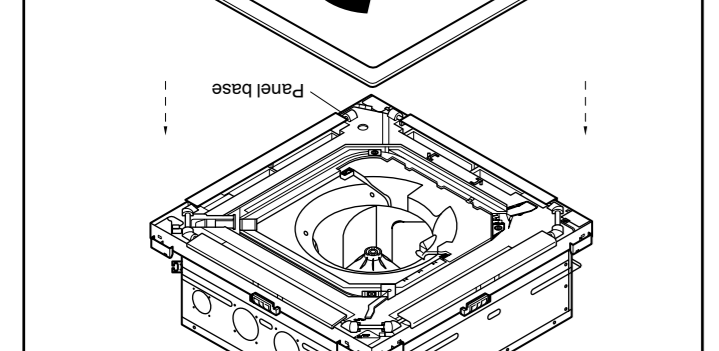





SELECTING THE MOUNTING POSITION

- For the air conditioner to operate satisfactorily, install it as outlined in this installation instruction sheet.
- Don't install indoor unit and outdoor unit with the air conditioner piping and cords available standard parts.
- Non instruction sheet describes the correct connections using the installation set available from our standard parts.
- Installation work must be performed in accordance with national wiring standards by authorized personnel only.
- Refrigerant leaks gas.
- Do not use an extension cord.
- Do not turn on the power until all installation work is complete.

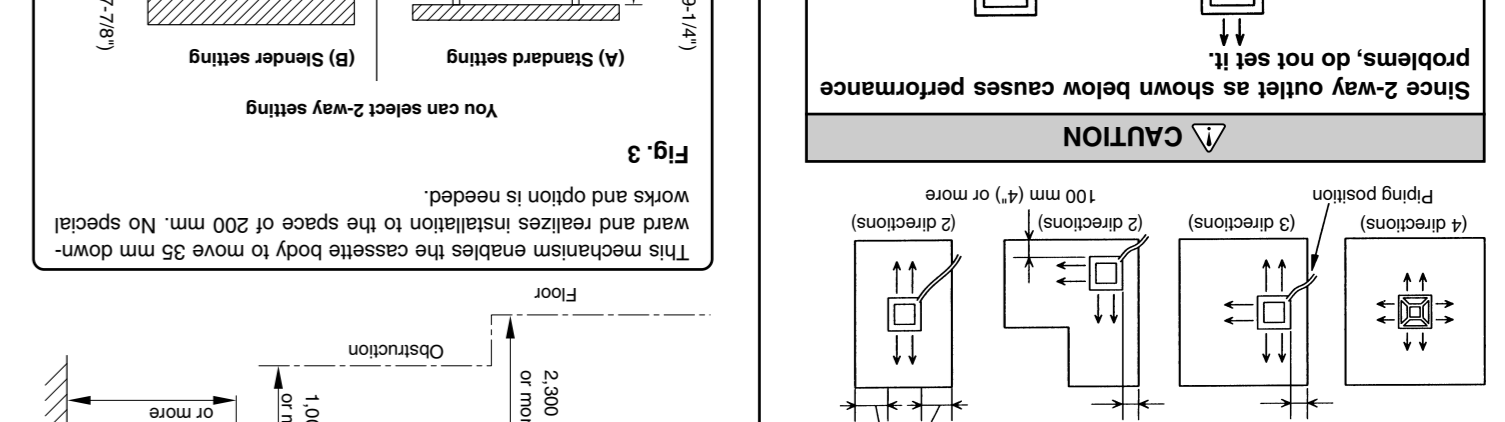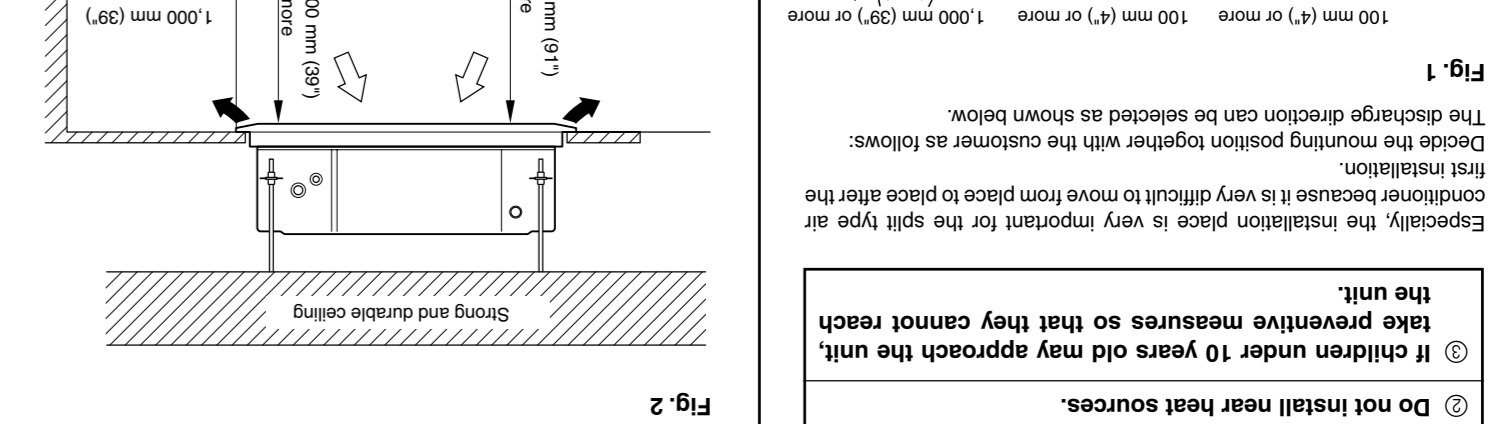





CONNECTING THE PIPING

- Do not use mineral oil on flare part.
- Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- While welding the pipes, be sure to blow dry nitrogen gas through them.

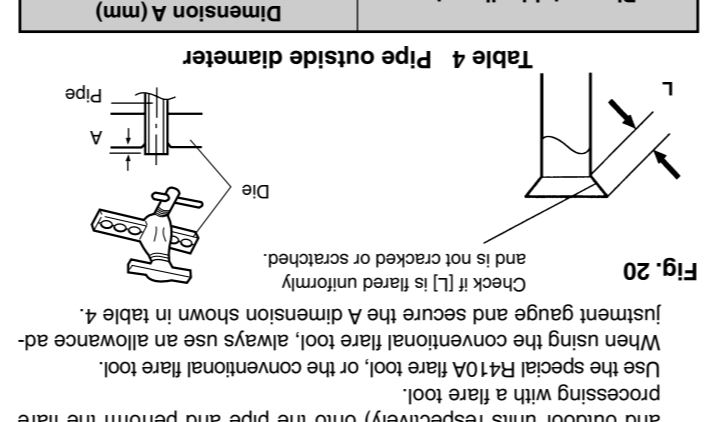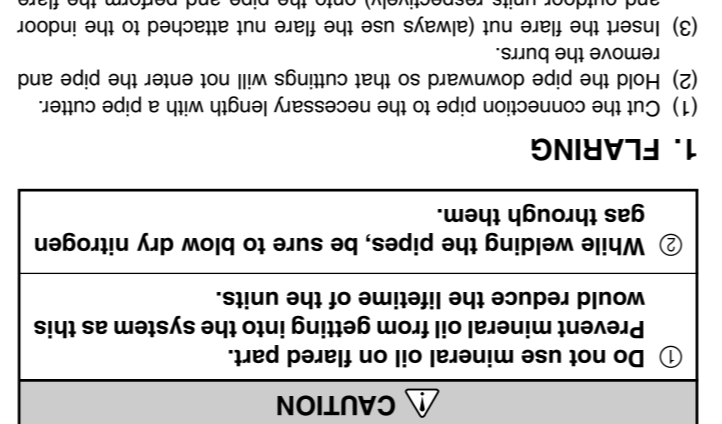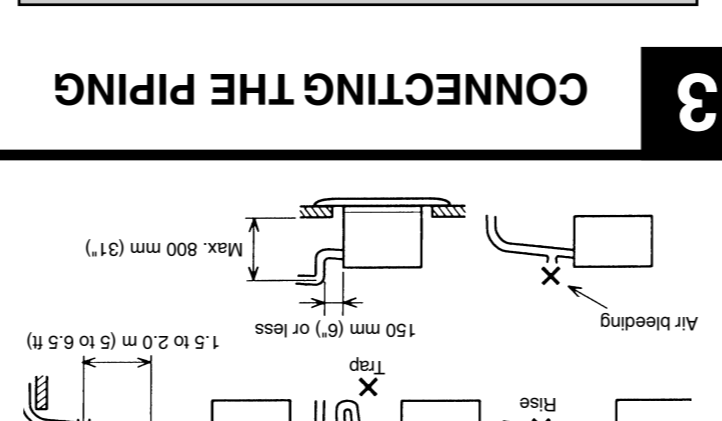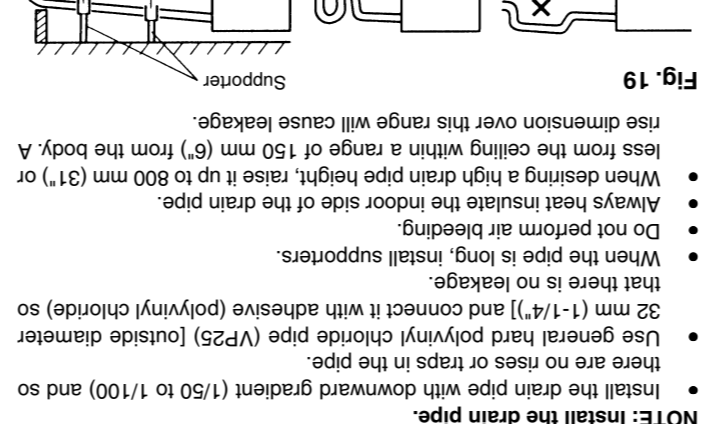




BENDING PIPES

- The pipes are shaped by your hands. Be careful not to collapse them.
- Do not bend the pipes in an angle more than 90° by unwinding it.
- Use general hand polyvinyl chloride (PVC) adhesive (polyvinyl chloride) so that there is no leakage.
- When pipes are repeated bent or stretched, the material will harden. There are no rips or traps in the pipe.
- Use general hand polyvinyl chloride (PVC) adhesive (polyvinyl chloride) so that there is no leakage.
- When the pipe is long, install supporters.
- Do not perform air bleeding.
- Always heat insulate the indoor side of the drain pipe.
- When draining a high drain pipe height, raise it up 800 mm (31.5 in.) or more from the ceiling with a range of 150 mm (6 in.) from the body. A 190 mm (7.5 in.) diameter pipe is used.
- When dimension over this range will cause leakage.

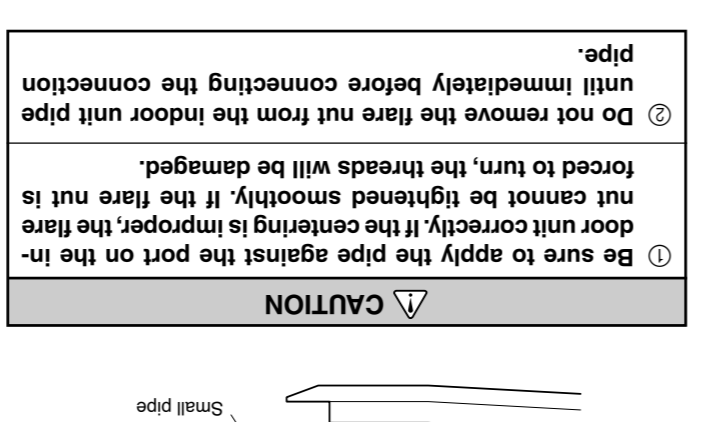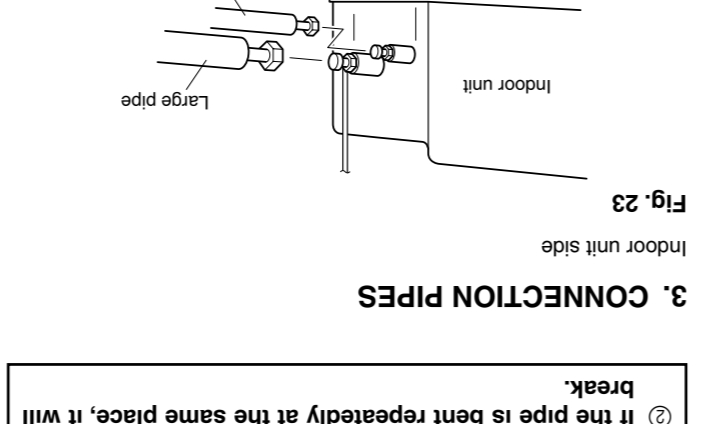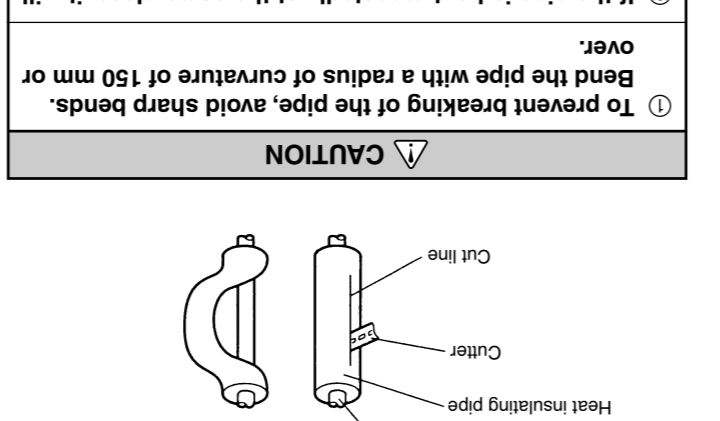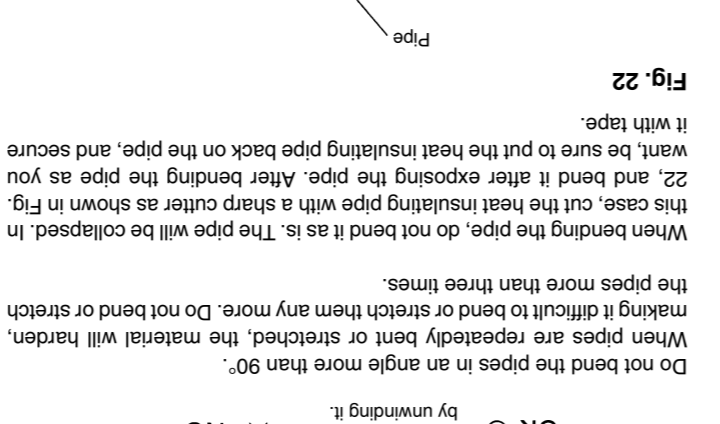



INSTALLING THE COUPLER

- After checking for gas leaks, insulate by wrapping insulation around the heat insulation.
- After installing the coupler heat insulation, wrap both ends with vinyl tape so that there is no gap.
- Be sure to overlap the coupler heat insulation.

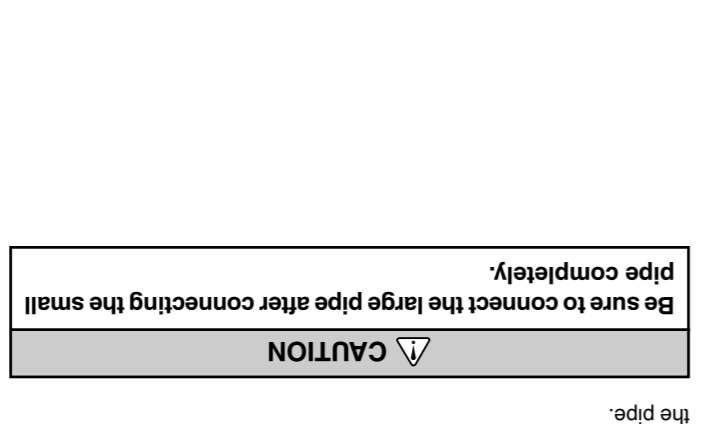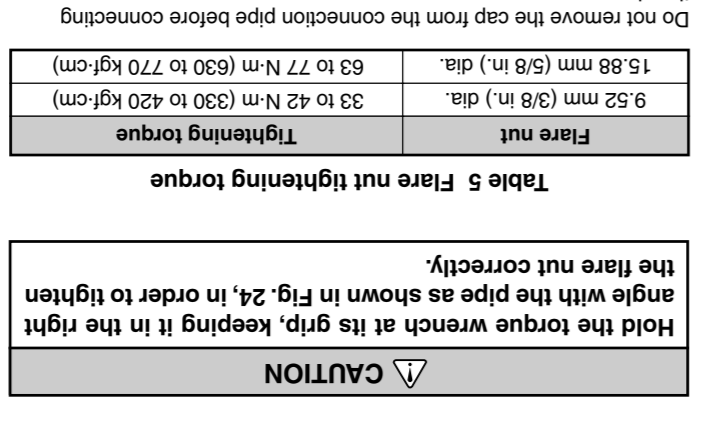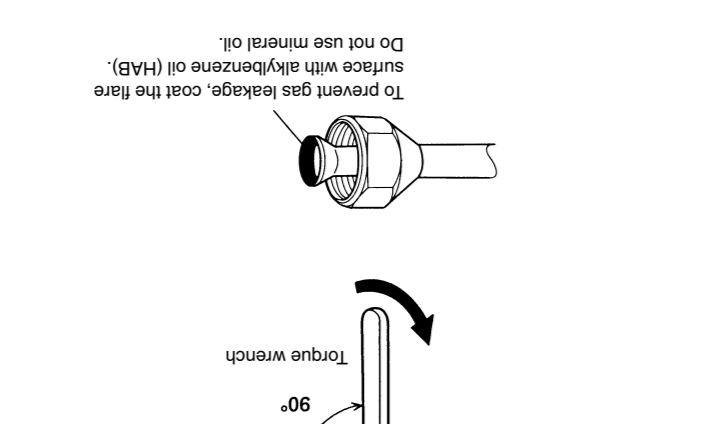

HEAT INSULATION

- Must fit tightly against body without any gap.
- Do not use mineral oil.
- To prevent gas leakage, coat the heat insulation surface with polyurethane oil (PUO).

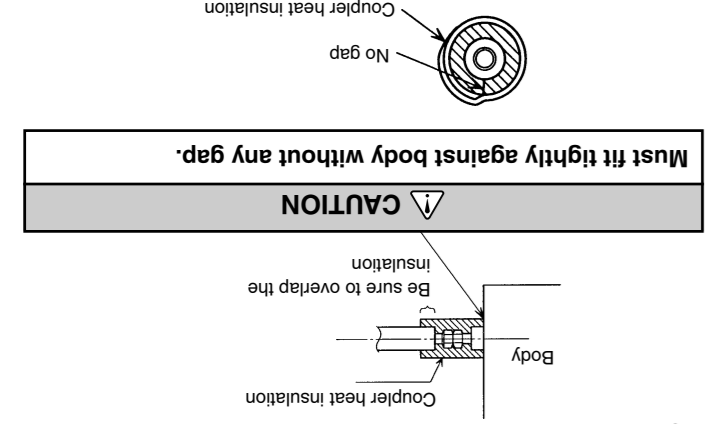

problems, do not set it. **CAUTION** Since 2-way outlet as shown below causes performance problems, do not set it.





























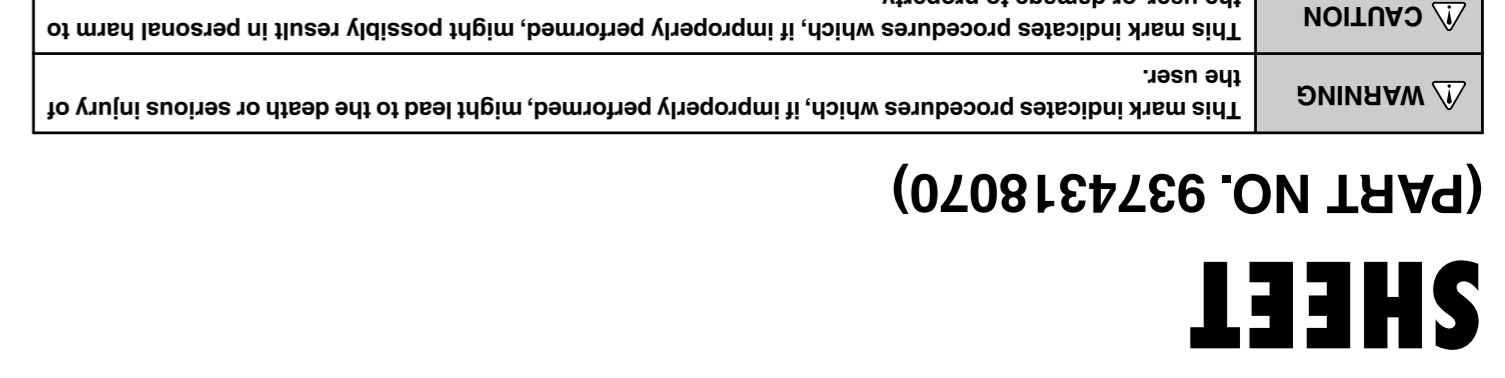


Table 3











Connection cord (mm)	MAX.	MIN.
2.5	1.5	0.5

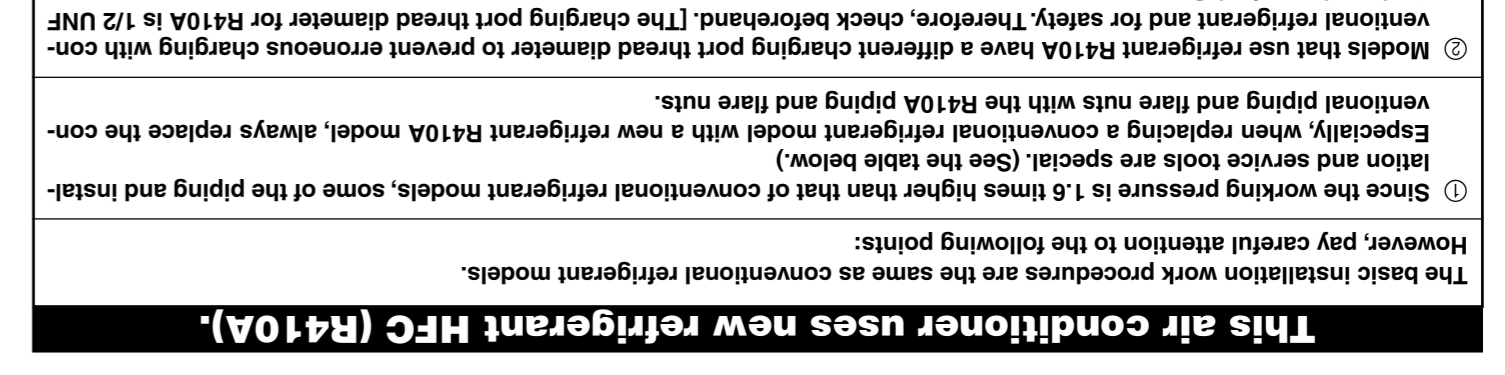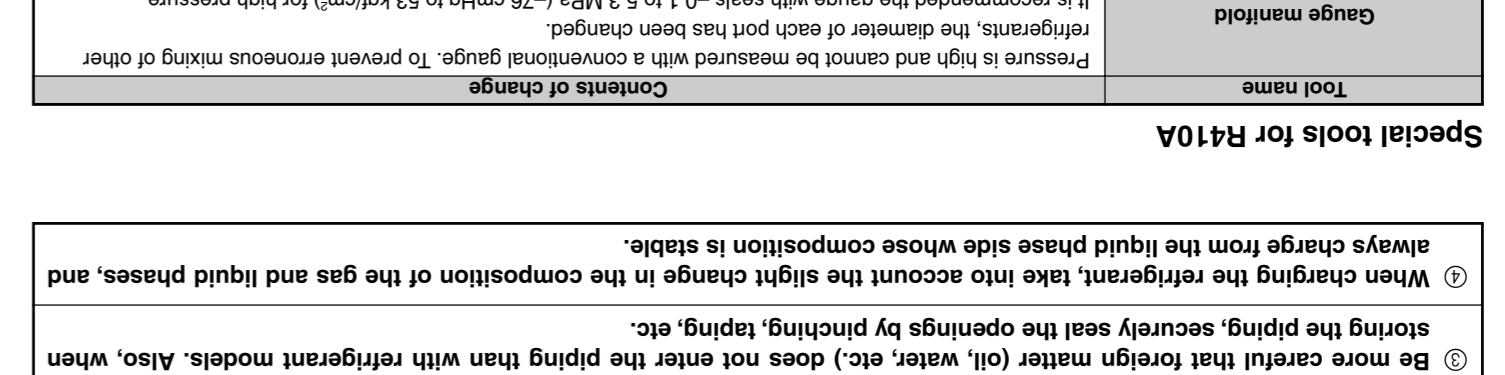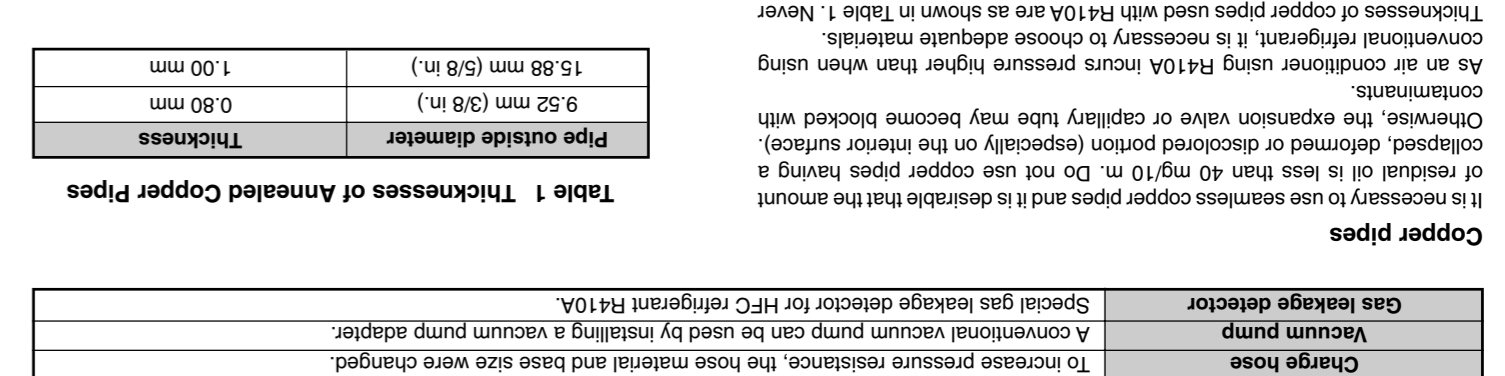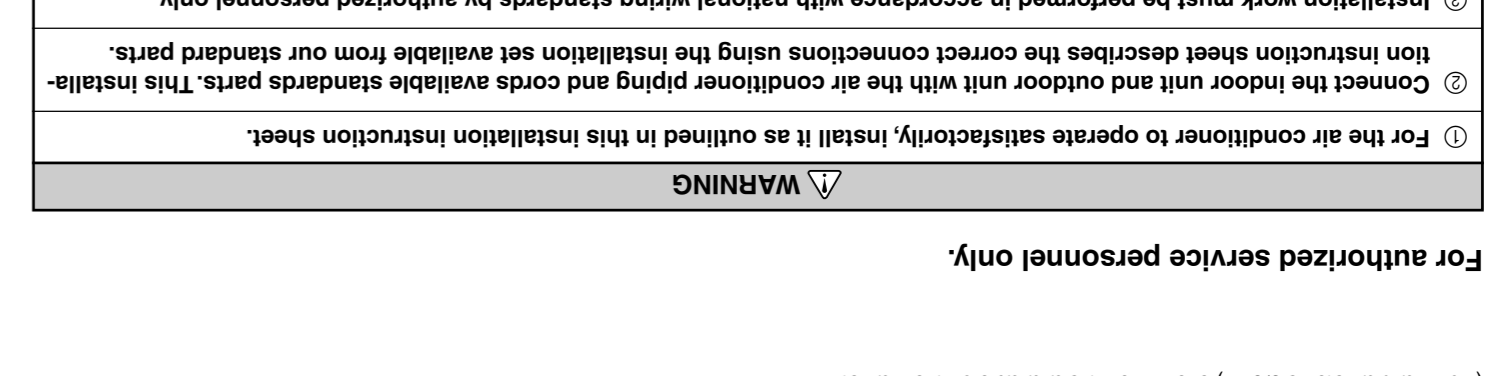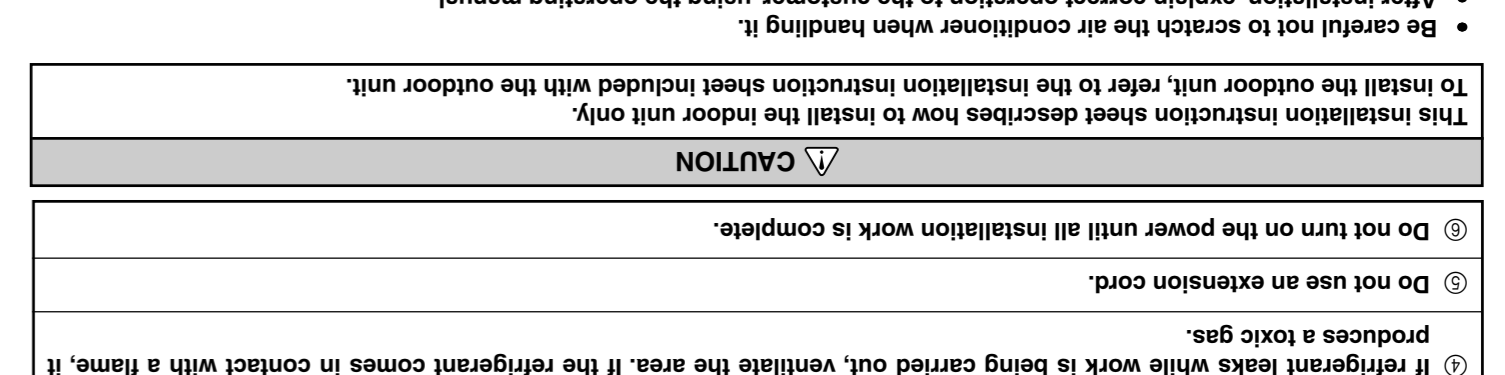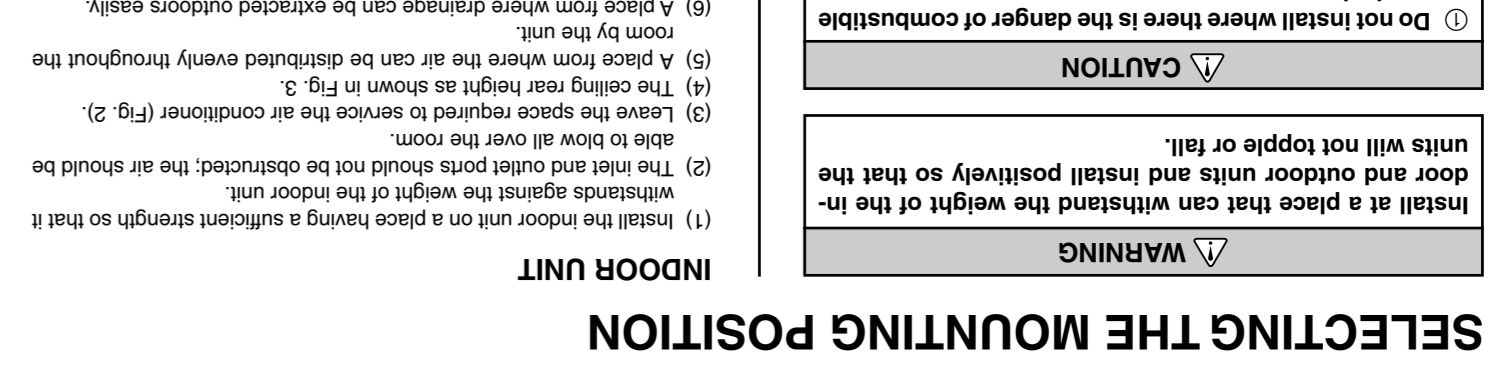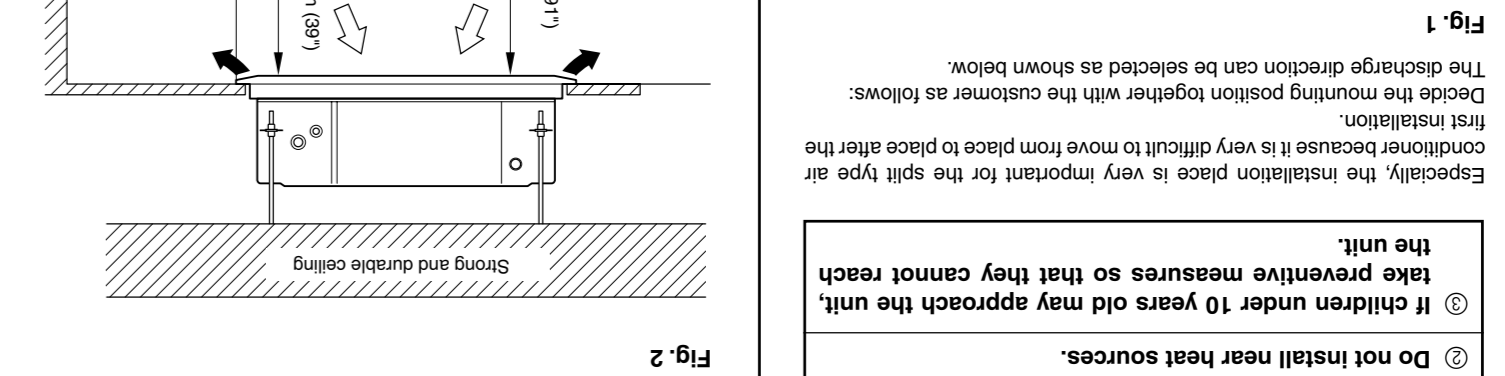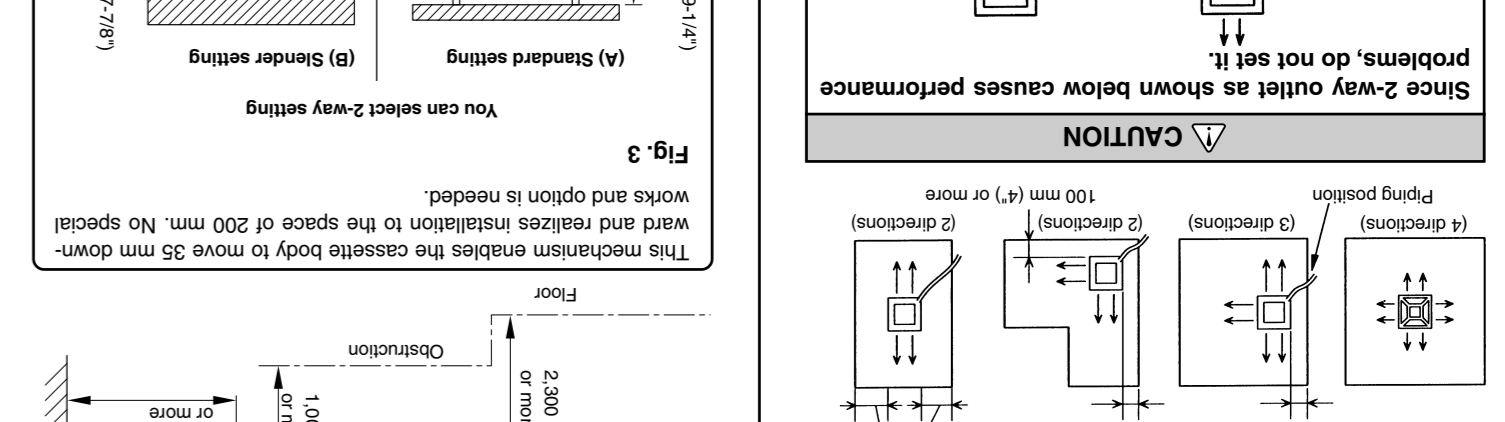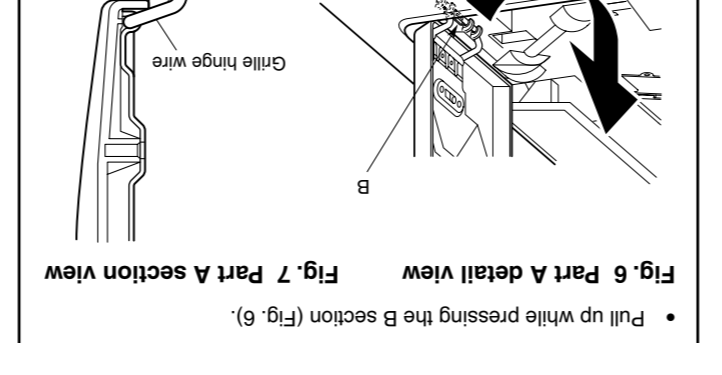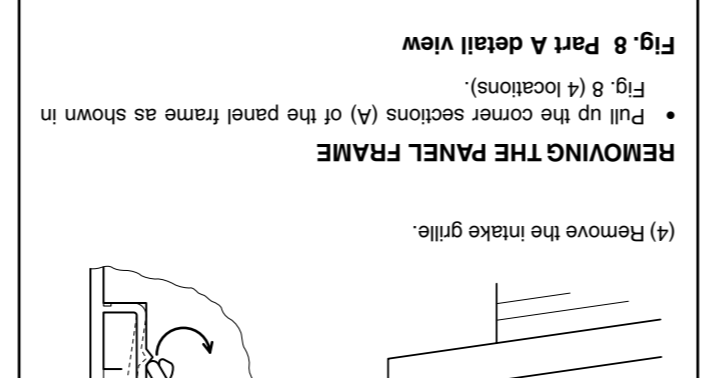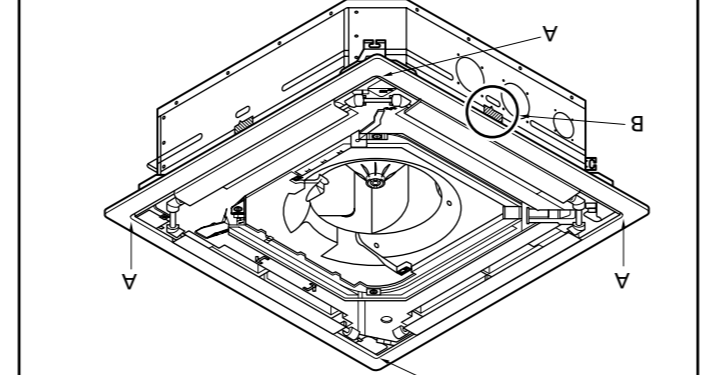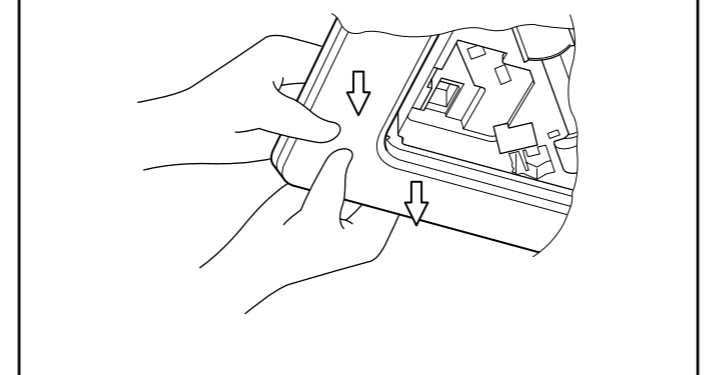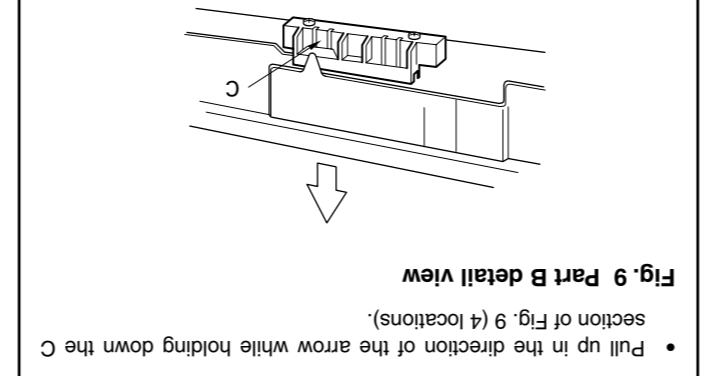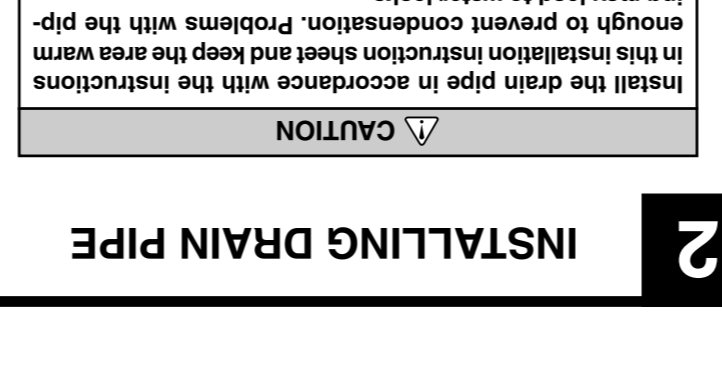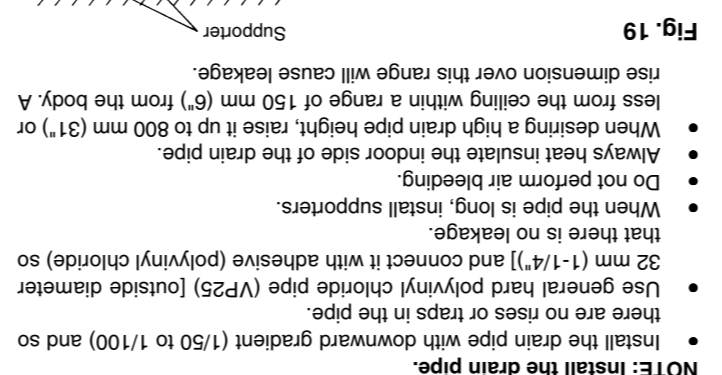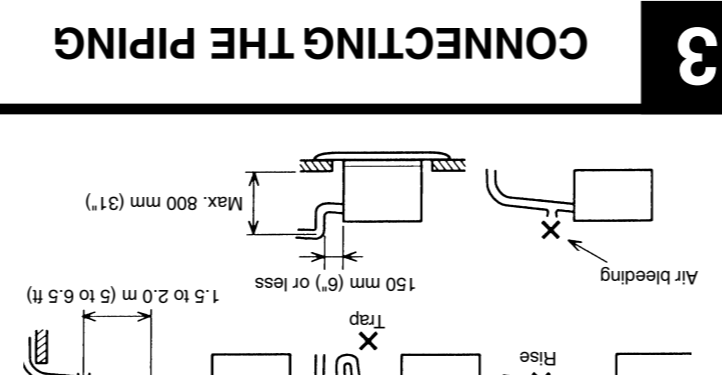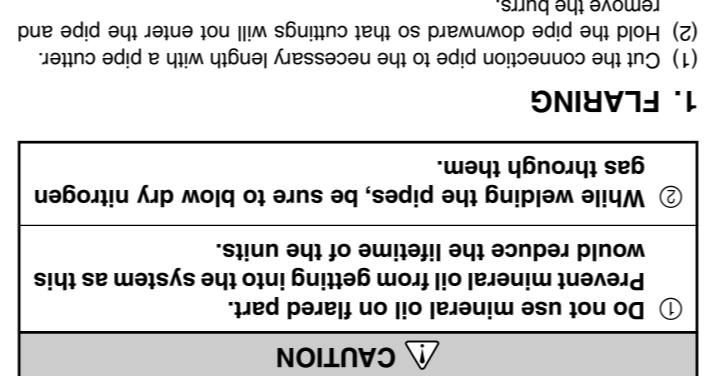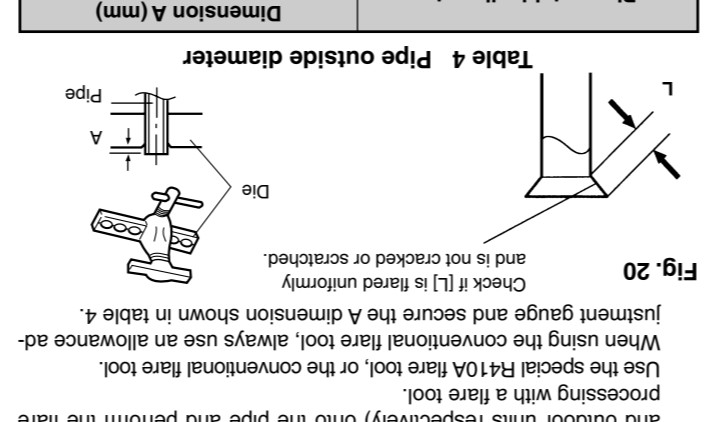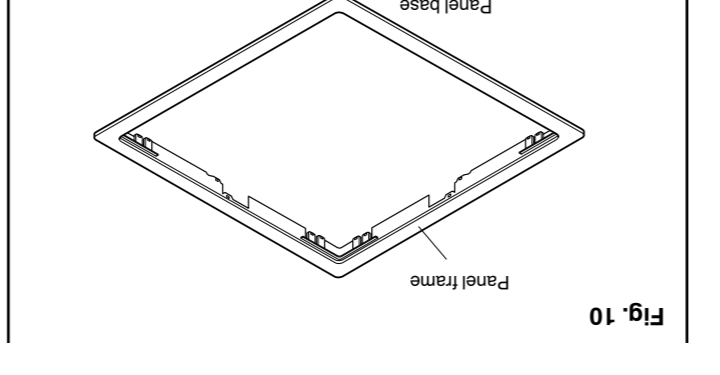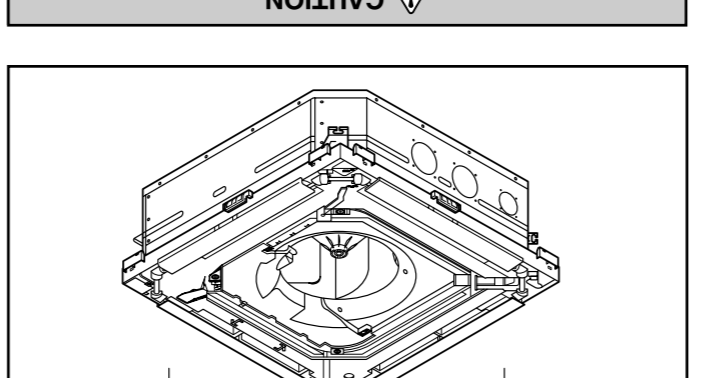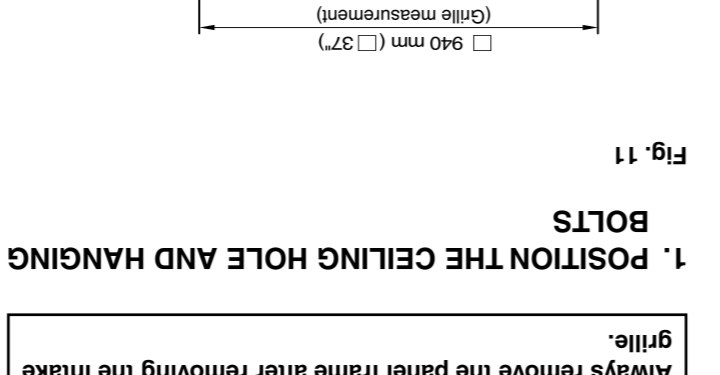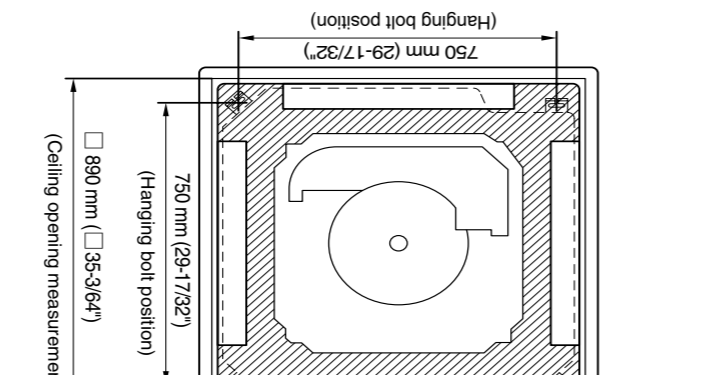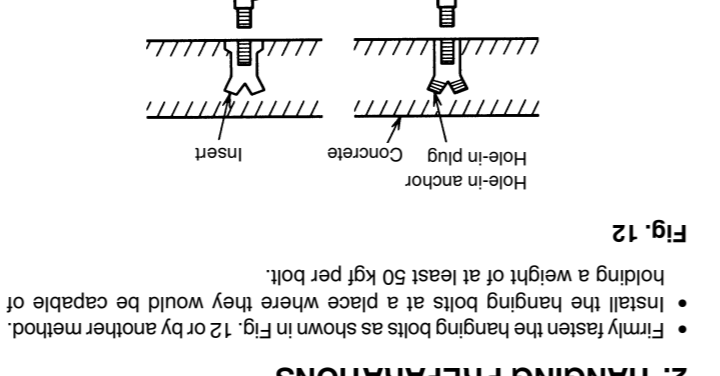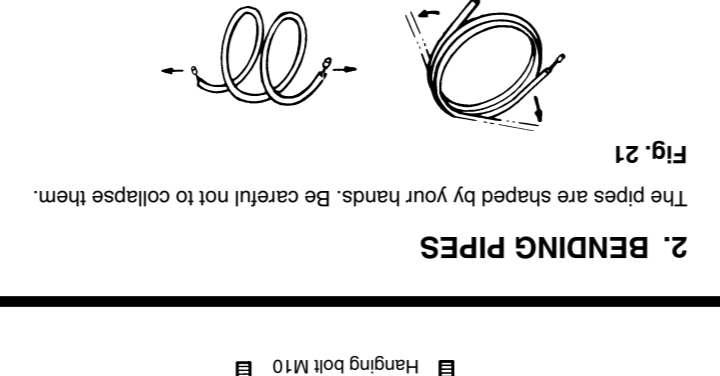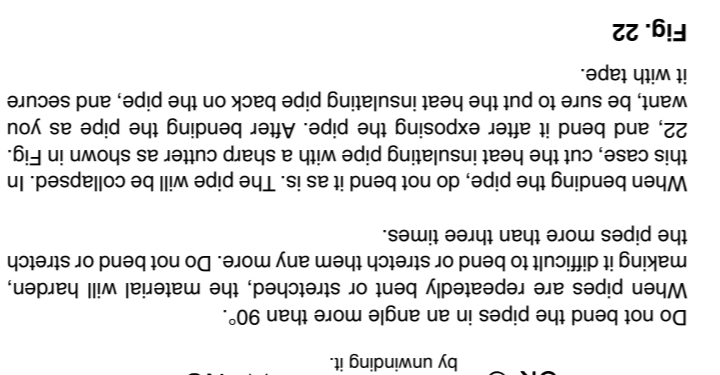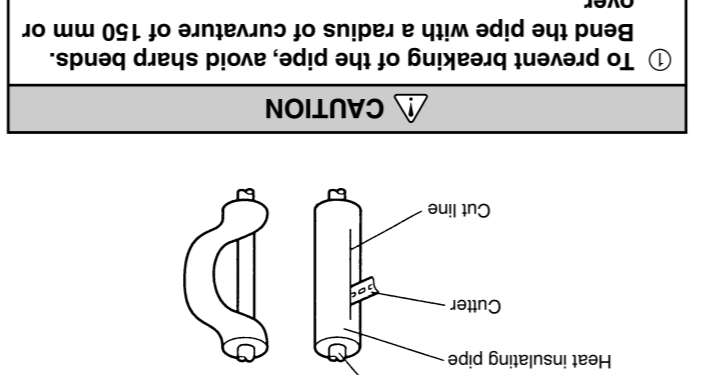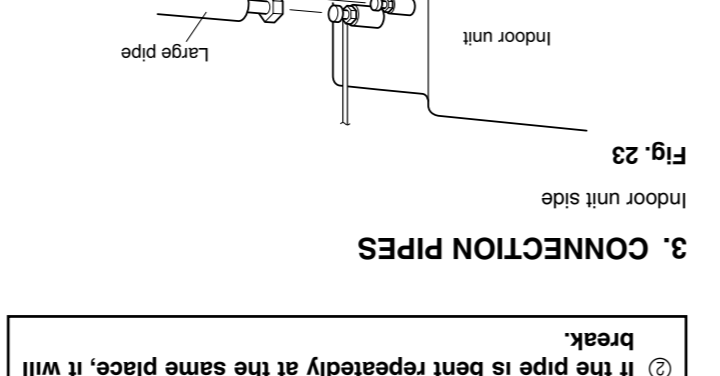









CAUTION Be sure to apply the pipe against the port on the indoor unit correctly. If the connection is improper, the flare nut is not secured. If the flare nut is not secured, the threads will be damaged.

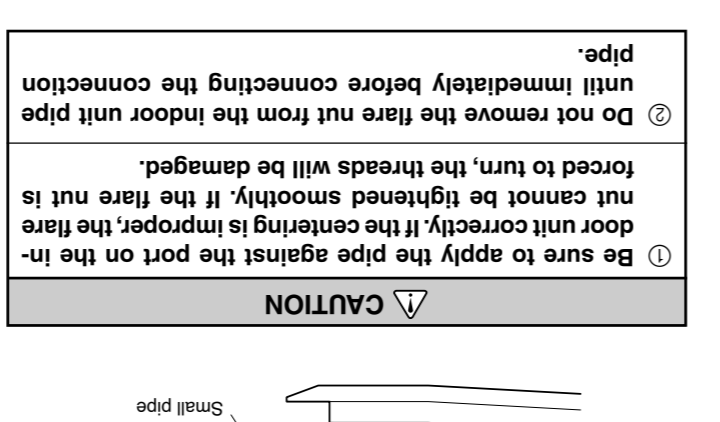

CAUTION Do not remove the cap from the connection pipe before connecting the pipe.

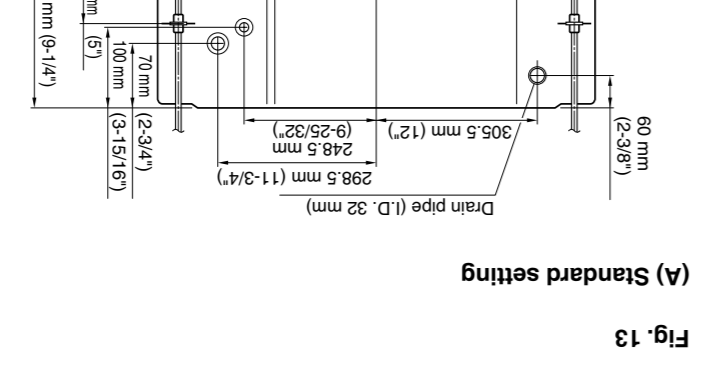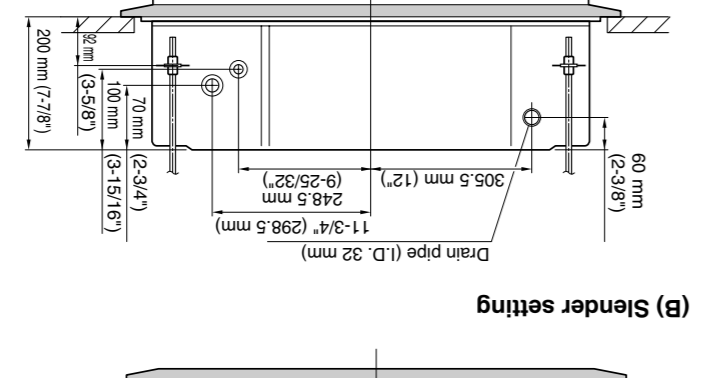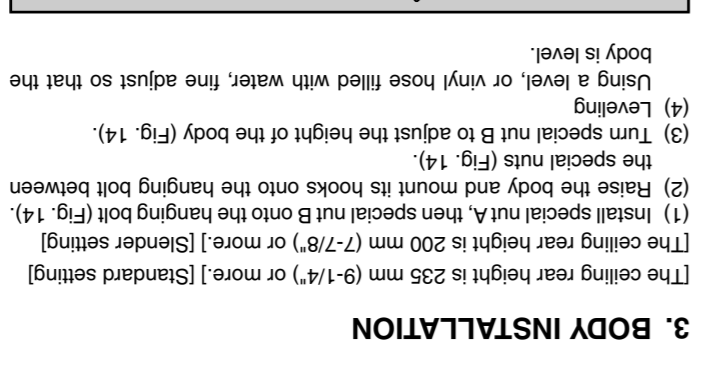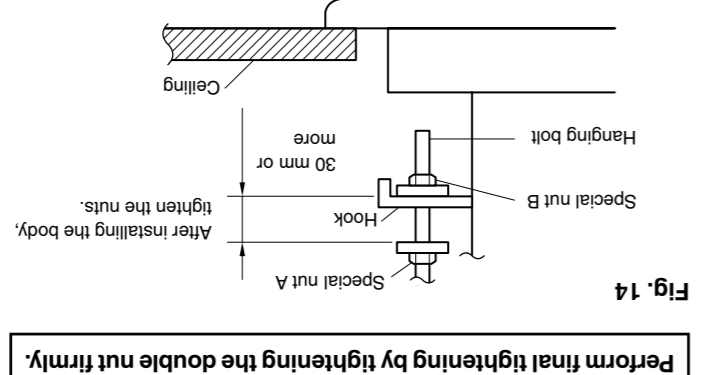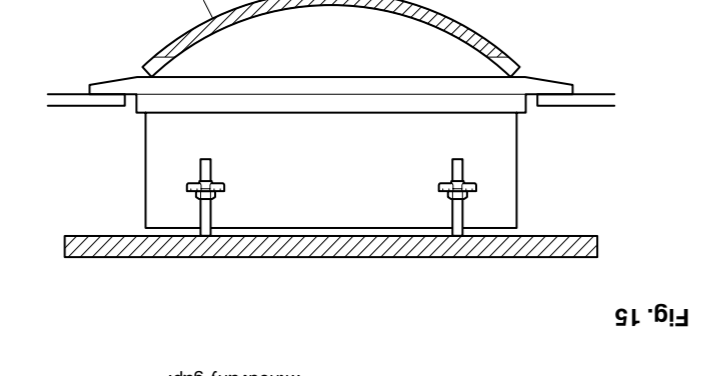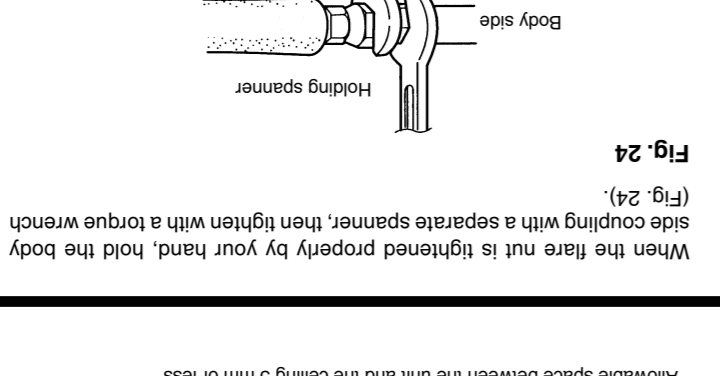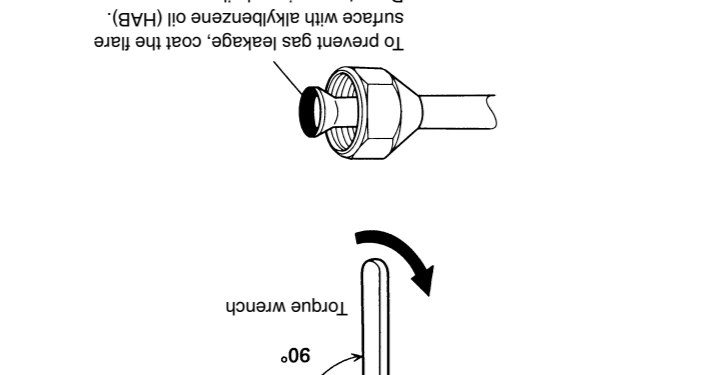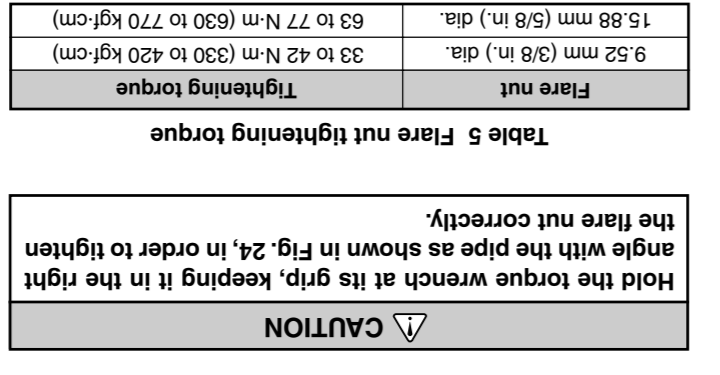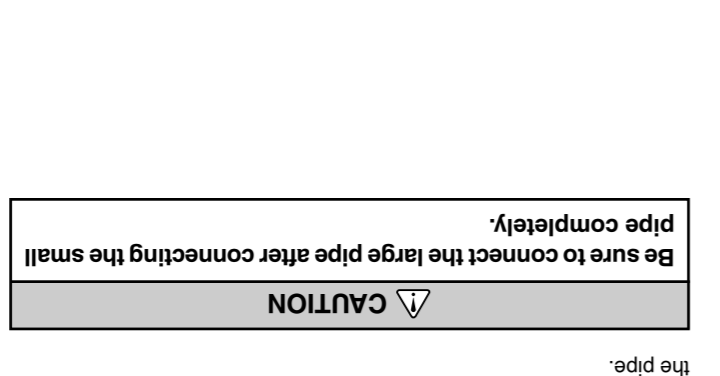

- Continued on back -

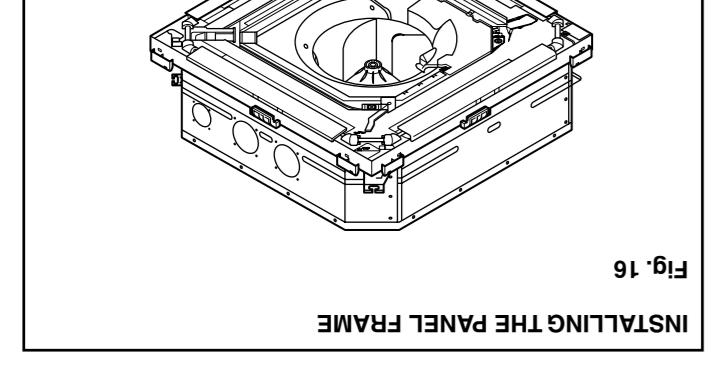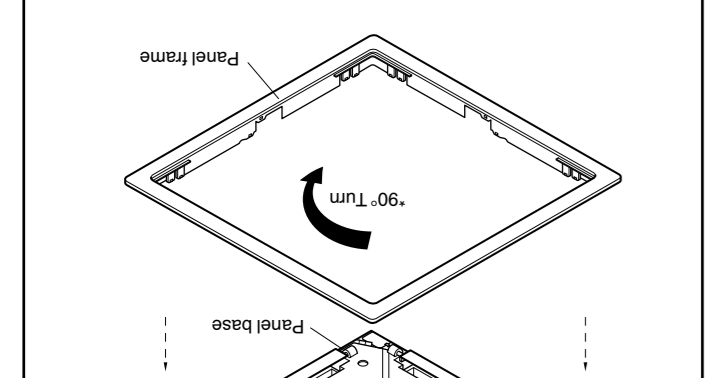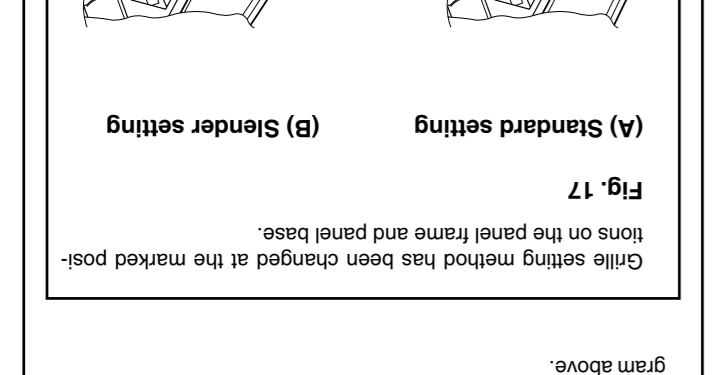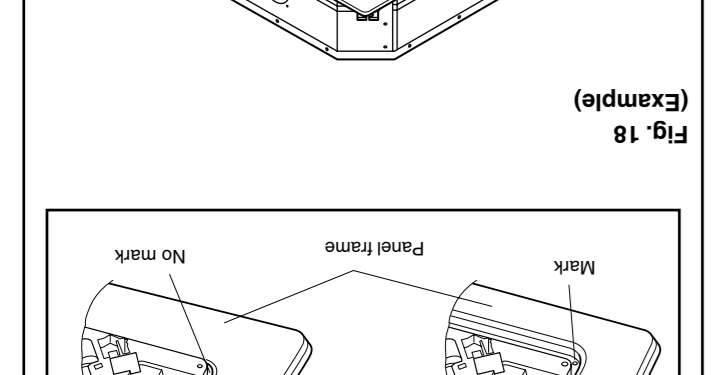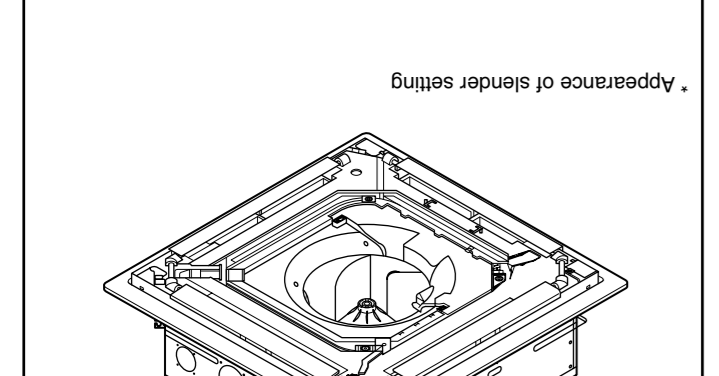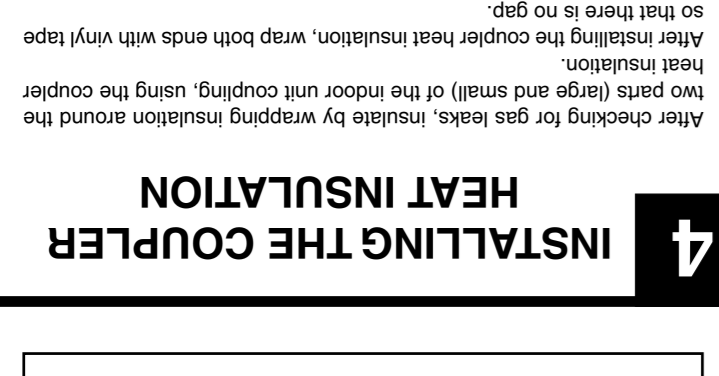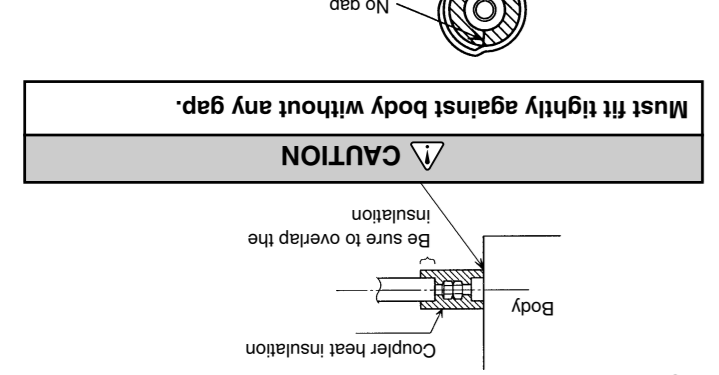

5 ELECTRICAL WIRING

HOW TO CONNECT WIRING TO THE TERMINALS

A. For solid core wiring (or F-cable)

- Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to about 25 mm (1.57") of exposed the strand wiring.
- Using a screwdriver, remove the terminal screw(s) on the terminal board.
- Using pliers, bend the solid wire to form a loop suitable for the terminal screw.
- Position the loop with the cord terminal wire, and replace and tighten the terminal screw, being the terminal screw using a screwdriver.

B. For strand wiring

- Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to about 10 mm (3/8") of exposed the strand wiring.
- Using a screwdriver, remove the terminal screw(s) on the terminal board.
- Using pliers, bend the solid wire to form a loop suitable for the terminal screw.
- Position the loop with the cord terminal wire, and replace and tighten the terminal screw, being the terminal screw using a screwdriver.

WARNING

- Before starting work, check that power is not being supplied to the indoor unit and outdoor unit.
- Match the terminal board numbers and connection cord colors with those of the outdoor unit.
- Erroneous wiring may cause burning of the electric parts.
- Connect the connection cord firmly to the terminal board. Incorrect installation may cause a fire.
- Always fasten the outside covering of the connection electric leakage may occur.)
- Always connect the ground wire.

HOW TO FIXED CONNECTION CORD AND POWER CORD AT THE CORD CLAMP

After passing the connection cord and power cord through the insulation tube, flatten it with the cord clamp.

Use VW-1, 0.5 to 1.0 mm thick, PVC tube as the insulation tube.

Fig. 27

1. CONNECTION DIAGRAMS

Fig. 28

Fig. 29

- Remove the control box cover and cover (wire) B and install the connection cord.

2. INDOOR UNIT SIDE

Fig. 30

- After wiring is complete, clamp the remote controller cord and connection cord with the cord clamp.
- Install the control box cover and cover (wire) B.

Fig. 31

Fig. 32

Set the DIP switch for the ceiling height according to the table below.

DIP-SW4		Ceiling height (m)	
ON	OFF	2.5 - 3.0	Normal
OFF	OFF	3.0 - 3.5	High ceiling 1
ON	OFF	3.5 - 4.0	High ceiling 2
ON	ON	More than 4.5	Low ceiling
ON	ON	Less than 2.5	

Fig. 32

Fig. 33

Fig. 34

Fig. 35 Part A detail view

Latch the grille hinge wire to the hook shaft, and fasten.

Fig. 36 Part A section view

Fig. 37

- Install the hook wire.
- Install the hook wire.

Fig. 38 Section view

Fig. 39

Fig. 40

Fig. 41

Fig. 42

Fig. 43

Fig. 44

Fig. 45

Fig. 46

Fig. 47

8 TEST RUN

CAUTION

Supply power to the condenser heater for at least 12 hours before the start of operation in winter.

- Press the master control button and the fan control button simultaneously for 2 seconds or more to start the test run.
- Press the startstop button to stop the test run.

[SELF-DIAGNOSIS]

When the error indication "E.EE" is displayed, follow the following items to perform the self-diagnosis. "E.EE" indicates an error has occurred.

1. REMOTE CONTROLLER DISPLAY

- Stop the air conditioner operation.
- Press the set temperature buttons / simultaneously for 5 seconds or more to start the self-diagnosis.
- Press the set temperature buttons / simultaneously for 5 seconds or more to stop the self-diagnosis.

Table 7

Error code	Error contents
00	(Indoor unit → remote controller)
01	(Indoor unit → outdoor unit)
02	Room temperature sensor open
03	Room temperature sensor short-circuited
04	Indoor heat exchanger temperature sensor open
05	Indoor heat exchanger temperature sensor short-circuited
06	Outdoor heat exchanger temperature sensor open
08	Power source connection error
09	Fault switch operated
0A	Outdoor temperature sensor
0C	Discharge pipe temperature sensor
11	Model abnormal
12	Indoor fan abnormal

Fig. 48

Fig. 49

Fig. 50

Fig. 51

Fig. 52

Fig. 53

Fig. 54

Fig. 55

9 SPECIAL INSTALLATION METHODS

1. GROUP CONTROL SYSTEM

A number of indoor units can be operated at the same time using a single remote controller.

(1) Wiring method (indoor unit to remote controller)

(2) Rotary switch setting (indoor unit)

Set the unit number of each indoor unit using the rotary switch on the indoor unit circuit board.

The rotary switch is normally set to 0.

(3) DIP switch setting (remote controller)

Change DIP switch No. 3 on the remote controller from OFF to ON.

Fig. 51

Fig. 52

Fig. 53

Fig. 54

Fig. 55

2. DUAL REMOTE CONTROLLERS (OPTIONAL)

Two separate remote controllers can be used to operate the indoor units.

(1) Wiring method (indoor unit to remote controller)

(2) DIP switch setting (remote controller)

Change DIP switch No. 1 and 2 according to the following table.

Table 8

Master unit		DIP-SW No. 1		DIP-SW No. 2	
1 (Normal)	ON	ON	ON	2 (Dual)	ON
1 (Normal)	OFF	OFF	OFF	2 (Dual)	ON

Table 9

Slave unit		DIP-SW No. 1		DIP-SW No. 2	
1 (Normal)	ON	ON	ON	2 (Dual)	ON
1 (Normal)	OFF	OFF	OFF	2 (Dual)	ON

Fig. 56

2. CHECKING DRAINAGE

The drain pump operates when operating in the cooling mode.

To check the drain, remove the water cover and fill with 2 to 3 of water as shown in Fig. 50.

Fig. 50

2. DISTRIBUTION DUCT AND FRESH AIR DUCT

Use the distribution duct and fresh air duct hole by removing the insulation material as shown below.

Fig. 57

Fig. 58

Fig. 59

Fig. 60

Fig. 61

Fig. 62

Fig. 63

Fig. 64

Fig. 65

Fig. 66

Fig. 67

Fig. 68

Fig. 69

Fig. 70

Fig. 71

Fig. 72

Fig. 73

Fig. 74

Fig. 75

Fig. 76

Fig. 77

Fig. 78

Fig. 79

Fig. 80

Fig. 81

Fig. 82

Fig. 83

Fig. 84

Fig. 85

Fig. 86

Fig. 87

Fig. 88

Fig. 89

Fig. 90

Fig. 91

Fig. 92

Fig. 93

Fig. 94

Fig. 95

Fig. 96

Fig. 97

Fig. 98

Fig. 99

Fig. 100

Fig. 101

Fig. 102

Fig. 103

Fig. 104

Fig. 105

Fig. 106

Fig. 107

Fig. 108

Fig. 109

Fig. 110

Fig. 111

Fig. 112

Fig. 113

Fig. 114

Fig. 115

Fig. 116

Fig. 117

Fig. 118

Fig. 119

Fig. 120

Fig. 121

Fig. 122

Fig. 123

Fig. 124

Fig. 125

Fig. 126

Fig. 127

Fig. 128

Fig. 129

Fig. 130

Fig. 131

Fig. 132

Fig. 133

Fig. 134

Fig. 135

Fig. 136

Fig. 137

Fig. 138

Fig. 139

Fig. 140

Fig. 141

Fig. 142

Fig. 143

Fig. 144

Fig. 145

Fig. 146

Fig. 147

Fig. 148

Fig. 149

Fig. 150

Fig. 151

Fig. 152

Fig. 153

Fig. 154

Fig. 155

Fig. 156

Fig. 157

Fig. 158

Fig. 159

Fig. 160

Fig. 161

Fig. 162

Fig. 163

Fig. 164

Fig. 165

Fig. 166

Fig. 167

Fig. 168

Fig. 169

Fig. 170

Fig. 171

Fig. 172

Fig. 173

Fig. 174

Fig. 175

Fig. 176

Fig. 177

Fig. 178

Fig. 179

Fig. 180

Fig. 181

Fig. 182

Fig. 183

Fig. 184

Fig. 185

Fig. 186

Fig. 187

Fig. 188

Fig. 189

Fig. 190

Fig. 191

Fig. 192

Fig. 193

Fig. 194

Fig. 195

Fig. 196

Fig. 197

Fig. 198

Fig. 199

Fig. 200

6 GRILLE INSTALLATION

BLOWER COVER INSULATION

Install the blower cover insulation only when the outlet direction is not specified.

Two tower cover insulations are packed with the indoor unit.

At this time, use the piping position as the criteria.

Fig. 33

INSTALLING THE INTAKE GRILLE

(1) Mount the grille hinge wire to the hook shaft as shown in Fig. 34.

(2) Loosen the screw, put the loop of the hook wire over it, and tighten the screw again.

(3) Mount the grille by pushing it up at an angle as shown in Fig. 35. If it falls, it may cause injuries.

(4) Bring up the intake grille by pushing it up at an angle as shown in Fig. 36, and fasten.

Fig. 34

Fig. 35

Fig. 36

Fig. 37

Fig. 38

Fig. 39

Fig. 40

Fig. 41

Fig. 42

Fig. 43

Fig. 44

Fig. 45

Fig. 46

Fig. 47

Fig. 48

Fig. 49

Fig. 50

Fig. 51

Fig. 52

Fig. 53

Fig. 54

Fig. 55

Fig. 56

Fig. 57

Fig. 58

Fig. 59

Fig. 60

Fig. 61

Fig. 62

Fig. 63

Fig. 64

Fig. 65

Fig. 66

Fig. 67

Fig. 68

Fig. 69

Fig. 70

Fig. 71

Fig. 72

Fig. 73

Fig. 74

Fig. 75

Fig. 76

Fig. 77

Fig. 78

Fig. 79

Fig. 80

Fig. 81

Fig. 82

Fig. 83

Fig. 84

Fig. 85

Fig. 86

Fig. 87

Fig. 88

Fig. 89

Fig. 90

Fig. 91

Fig. 92

Fig. 93

Fig. 94

Fig. 95

Fig. 96

Fig. 97

Fig. 98

Fig. 99

Fig. 100

Fig. 101

Fig. 102

Fig. 103

Fig. 104

Fig. 105

Fig. 106

Fig. 107

Fig. 108

Fig. 109

Fig. 110

Fig. 111

Fig. 112

Fig. 113

Fig. 114

Fig. 115

Fig. 116

Fig. 117

Fig. 118

Fig. 119

Fig. 120

Fig. 121

Fig. 122

Fig. 123

Fig. 124

Fig. 125

Fig. 126

Fig. 127

Fig. 128

Fig. 129

Fig. 130

Fig. 131

Fig. 132

Fig. 133

Fig. 134

Fig. 135

Fig. 136

Fig. 137

Fig. 138

Fig. 139

Fig. 140

Fig. 141

Fig. 142

Fig. 143

Fig. 144

Fig. 145

Fig. 146

Fig. 147

Fig. 148

Fig. 149

Fig. 150

Fig. 151

Fig. 152

Fig. 153

Fig. 154

Fig. 155

Fig. 156

Fig. 157

Fig. 158

Fig. 159

Fig. 160

Fig. 161

Fig. 162

Fig. 163

Fig. 164

Fig. 165

Fig. 166

Fig. 167

Fig. 168

Fig. 169

Fig. 170

Fig. 171

Fig. 172

Fig. 173

Fig. 174

Fig. 175

Fig. 176

Fig. 177

Fig. 178

Fig. 179

Fig. 180

Fig. 181

SPLIT TYPE AIR CONDITIONER INSTALLATION INSTRUCTION SHEET



(PART NO. 9374318049)

For authorized service personnel only.

⚠ DANGER	This mark indicates procedures which, if improperly performed, are most likely to result in the death of or serious injury to the user or service personnel.
⚠ WARNING	This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.
⚠ CAUTION	This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

This air conditioner uses new refrigerant HFC (R410A).

The basic installation work procedures are the same as conventional refrigerant models. However, pay careful attention to the following points:

- Since the working pressure is 1.6 times higher than that of conventional refrigerant models, some of the piping and installation and service tools are special. (See the table below.) Especially, when replacing a conventional refrigerant model with a new refrigerant R410A model, always replace the conventional piping and flare nuts with the R410A piping and flare nuts.
- Models that use refrigerant R410A have a different charging port thread diameter to prevent erroneous charging with conventional refrigerant and for safety. Therefore, check beforehand. [The charging port thread diameter for R410A is 1/2 UNF 20 threads per inch.]
- Be more careful that foreign matter (oil, water, etc.) does not enter the piping than with refrigerant models. Also, when storing the piping, securely seal the openings by pinching, taping, etc.
- When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.

Special tools for R410A

Tool name	Contents of change
Gauge manifold	Pressure is high and cannot be measured with a conventional gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port has been changed. It is recommended the gauge with seals -0.1 to 5.3 MPa (-76 cmHg to 53 kgf/cm ²) for high pressure, -0.1 to 3.8 MPa (-76 cmHg to 38 kgf/cm ²) for low pressure.
Charge hose	To increase pressure resistance, the hose material and base size were changed.
Vacuum pump	A conventional vacuum pump can be used by installing a vacuum pump adapter.
Gas leakage detector	Special gas leakage detector for HFC refrigerant R410A.

Copper pipes

It is necessary to use seamless copper pipes and it is desirable that the amount of residual oil is less than 40 mg/10 m. Do not use copper pipes having a collapsed, deformed or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants.

As an air conditioner using R410A incurs pressure higher than when using R22, it is necessary to choose adequate materials. Thicknesses of copper pipes used with R410A are as shown in Table 1. Never use copper pipes thinner than 0.8 mm (Nominal diameter is 1/4 in., 3/8 in., 1/2 in.), 1.0 mm (Nominal diameter is 3/8 in.) even when it is available on the market.

Table 1 Thicknesses of Annealed Copper Pipes

Nominal diameter (inch)	Outer diameter (mm)	Thickness (mm)	
		R410A	
1/4	6.35	0.80	
3/8	9.52	0.80	
1/2	12.70	0.80	
5/8	15.88	1.00	

For authorized service personnel only.

⚠ DANGER	Never touch electrical components immediately after the power supply has been turned off. Electrical shock may occur. After turning off the power, always wait 5 minutes or more before touching electrical components.
⚠ WARNING	
(1)	For the air conditioner to operate satisfactorily, install it as outlined in this installation instruction sheet.
(2)	Connect the indoor unit and outdoor unit with the air conditioner piping and cords available standards parts. This installation instruction sheet describes the correct connections using the installation set available from our standard parts.
(3)	Installation work must be performed in accordance with national wiring standards by authorized personnel only.
(4)	Do not use an extension cord.
(5)	Do not turn on the power until all installation work is complete.
(6)	Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation.
(7)	There is not extra refrigerant in the outdoor unit for air purging.
(8)	Use a vacuum pump for R410A exclusively.
(9)	Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.
(10)	Use a clean gauge manifold and charging hose for R410A exclusively.
(11)	If refrigerant leaks while work is being carried out, ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.

⚠ CAUTION

This installation instruction sheet describes how to install the outdoor unit only. To install the indoor unit, refer to the installation instruction sheet included with the indoor unit.

- Be careful not to scratch the air conditioner when handling it.
- After installation, explain correct operation to the customer, using the operating manual.
- Let the customer keep this installation instruction sheet because it is used when the air conditioner is serviced or moved.

STANDARD ACCESSORIES

The following accessories are supplied with the outdoor unit. Use them as required.

Name and Shape	Q'ty	Application
Drain pipe	1	For outdoor unit drain piping work
Drain cap	1	[Heat & Cool model (Reverse cycle) only]

CONNECTION PIPE REQUIREMENT

⚠ CAUTION

Install heat insulation around both the gas and liquid pipes. Failure to do so may cause water leaks. Use heat insulation with heat resistance above 120 °C. (Reverse cycle model only) In addition, if the humidity level at the installation location of the refrigerant piping is expected to exceed 70%, install heat insulation around the refrigerant piping. If the expected humidity level is 70-80%, use heat insulation that is 15 mm or thicker and if the expected humidity exceeds 80%, use heat insulation that is 20 mm or thicker. If heat insulation is used that is not as thick as specified, condensation may form on the surface of the insulation. In addition, use heat insulation with heat conductivity of 0.045 W/(m·K) or less (at 20 °C).

Connect the connection pipes according to "CONNECTING THE PIPING" in this installation instruction sheet.

Table 2

MODEL	18000 BTU/h model		24000 BTU/h model	
	Small	Large	Small	Large
Diameter	6.35 mm (1/4 in.)	12.70 mm (1/2 in.)	9.52 mm (3/8 in.)	15.88 mm (5/8 in.)
Maximum length (between indoor and outdoor)	25 m (82 ft)	25 m (82 ft)	25 m (82 ft)	15 m (49 ft)

- Use pipe with water-resistant heat insulation.
- Use pipe that can withstand a pressure of 4,150 kPa.

ELECTRICAL REQUIREMENT

- Electric wire size and fuse capacity:

Table 3

MODEL	18,000 BTU class		24,000 BTU class	
	MAX. MIN.	MAX. MIN.	MAX. MIN.	MAX. MIN.
Power supply cord (mm ²)	3.5	2.5	4.0	3.5
Connection cord (mm ²)	2.5	1.5	2.5	1.5
Fuse capacity (A)	20	25	25	25

- Install the disconnect device with a contact gap of at least 3 mm nearby the units.
- Always make the air conditioner power supply a special branch circuit and provide a special breaker.
- Always use H07RN-F or equivalent as the power supply cord and the connection cord.

INSTALLATION PROCEDURE

1 OUTDOOR UNIT INSTALLATION

⚠ WARNING


- Install the unit where it will not be tilted by more than 5°.
- When installing the outdoor unit where it may be exposed to strong wind, fasten it securely.

- Set the unit on a strong stand, such as one made of concrete blocks to minimize shock and vibration.
- Do not set the unit directly on the ground because it will cause trouble.
- Since the drain water flows out of the outdoor unit during heating operation, install the drain pipe and connect it to a commercial 16 mm hose. (Heat & Cool model (Reverse cycle) only)
- When installing the drain pipe, plug all the holes (• hole at one place) other than the drain pipe mounting hole in the bottom of the outdoor unit with putty so there is no water leakage. (Fig. 2) (Heat & Cool model (Reverse cycle) only)

⚠ CAUTION

Installation in cold regions. Do not use the accessory drain pipe and drain cap. (If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold weather.)


Fig. 2

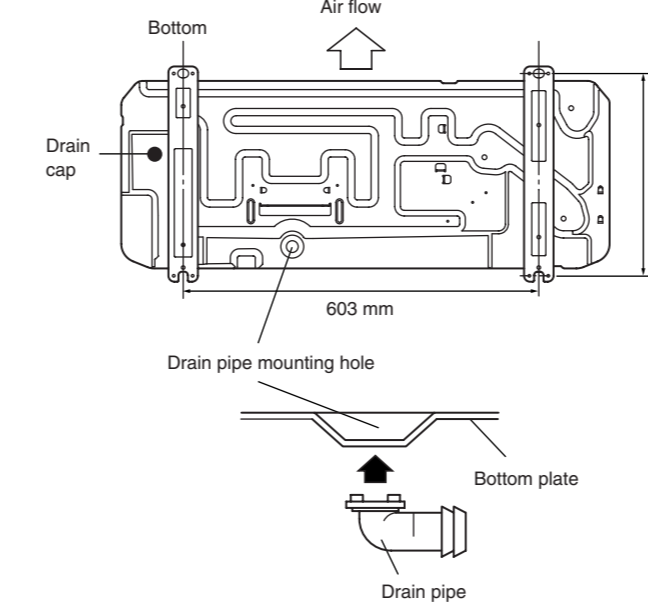

2. OUTDOOR UNIT CONNECTION CORD AND PIPE CONNECTION PREPARATIONS


Remove outdoor unit valve cover.

Fig. 3

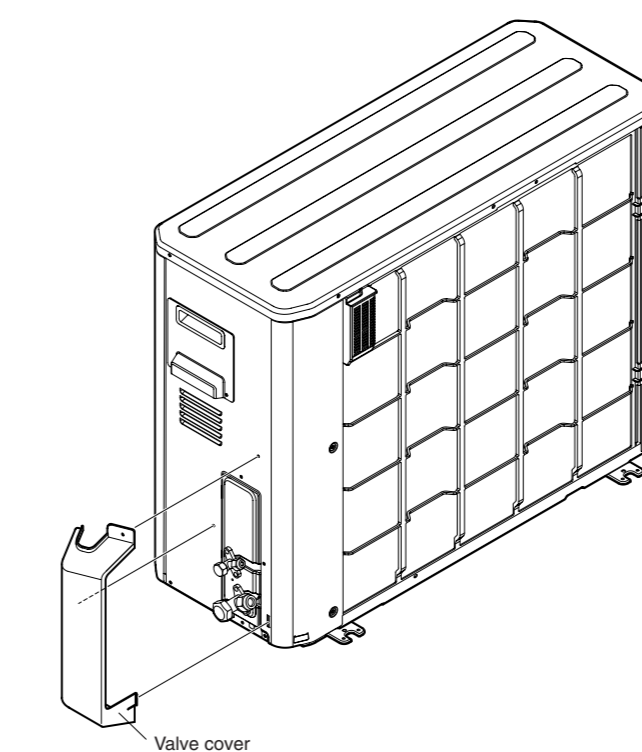

Remove outdoor unit terminal cover.

Fig. 4

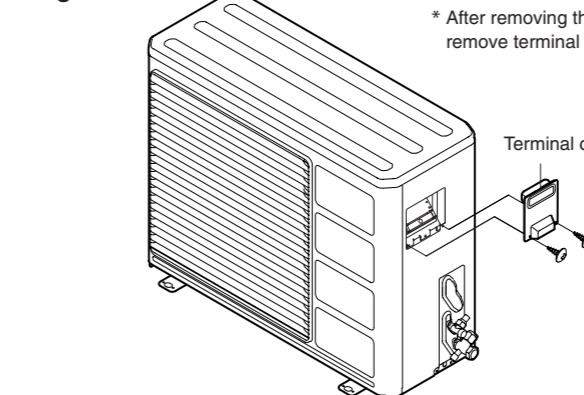

2 CONNECTING THE PIPING

⚠ WARNING

Do not use the existing piping and flare nuts. If the existing materials are used, the pressure inside the refrigerant cycle will rise and cause breakage, injury, etc. (Use the special R410A materials.)

⚠ CAUTION

- Do not use mineral oil on flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- While welding the pipes, be sure to blow dry nitrogen gas through them.
- The maximum lengths of this product are shown in table 2. If the units are further apart than this, correct operation can not be guaranteed.

1. FLARING

- Cut the connection pipe to the necessary length with a pipe cutter.
- Hold the pipe downward so that cuttings will not enter the pipe and remove the burrs.
- Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a flare tool. Use the special R410A flare tool, or the conventional flare tool. When using the conventional flare tool, always use an allowance adjustment gauge and secure the A dimension shown in table 4.

Fig. 5

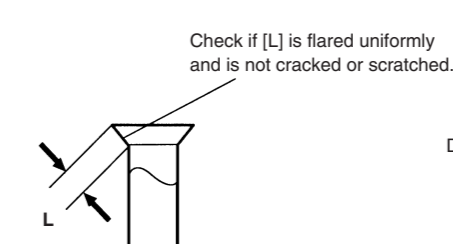


Table 4 Pipe outside diameter

Pipe outside diameter	A (mm)	
	Flare tool for R410A, clutch type	
6.35 mm (1/4 in.)	0 to 0.5	
9.52 mm (3/8 in.)	0 to 0.5	
12.70 mm (1/2 in.)	0 to 0.5	
15.88 mm (5/8 in.)	0 to 0.5	

2. BENDING PIPES

- When bending the pipe, be careful not to crush it.
- To prevent breaking of the pipe, avoid sharp bends. Bend the pipe with a radius of curvature of 150 mm or over.
- If the copper pipe is bent the pipe or pulled to often, it will become stiff. Do not bend the pipes more than three times at one place.

3. CONNECTION

- Install the outdoor unit wall cap (supplied with the optional installation set or procured at the site) to the wall hole pipe.
- Connect the outdoor unit and indoor unit piping.
- After matching the center of the flare surface and tightening the nut hand tight, tighten the nut to the specified tightening torque with a torque wrench.

Fig. 6

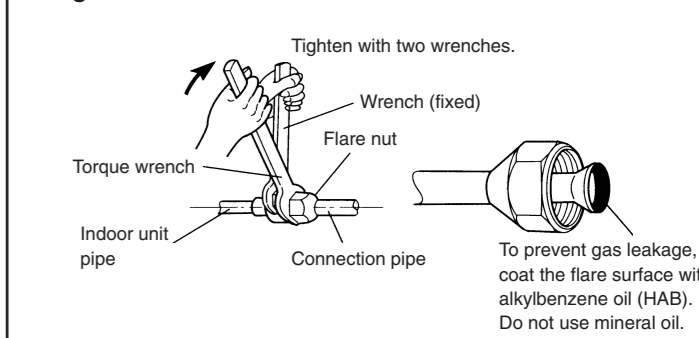


Table 5 Flare nut tightening torque

Flare nut	Tightening torque
6.35 mm (1/4 in.) dia.	14 to 18 N · m (140 to 180 kgf · cm)
9.52 mm (3/8 in.) dia.	33 to 42 N · m (330 to 420 kgf · cm)
12.70 mm (1/2 in.) dia.	50 to 62 N · m (500 to 620 kgf · cm)
15.88 mm (5/8 in.) dia.	63 to 77 N · m (630 to 770 kgf · cm)

Do not remove the cap from the connection pipe before connecting the pipe.

3 VACUUM PROCESS

⚠ CAUTION

- Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation. There is no extra refrigerant in the outdoor unit for air purging!
- Use a vacuum pump for R410A exclusively. Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.


1. VACUUM

- Remove the cap, and connect the gauge manifold and the vacuum pump to the charging valve by the service hoses.
- Vacuum the indoor unit and the connecting pipes until the pressure gauge indicates -0.1 MPa (-76 cmHg).
- When -0.1 MPa (-76 cmHg) is reached, operate the vacuum pump for at least 15 minutes.
- Disconnect the service hoses and fit the cap to the charging valve to the specified torque.
- Remove the blank caps, and fully open the spindles of the 2-way and 3-way valves with a hexagon wrench (Torque : 6 to 7 N · m (60 to 70 kgf · cm))
- Tighten the blank caps of the 2-way valve and 3-way valve to the specified torque.

Table 6

	Tightening torque
Blank cap (2-way valve)	20 to 25 N · m (200 to 250 kgf · cm)
Blank cap (3-way valve)	25 to 30 N · m (250 to 300 kgf · cm)
Charging port cap	10 to 12 N · m (100 to 120 kgf · cm)

Fig. 7

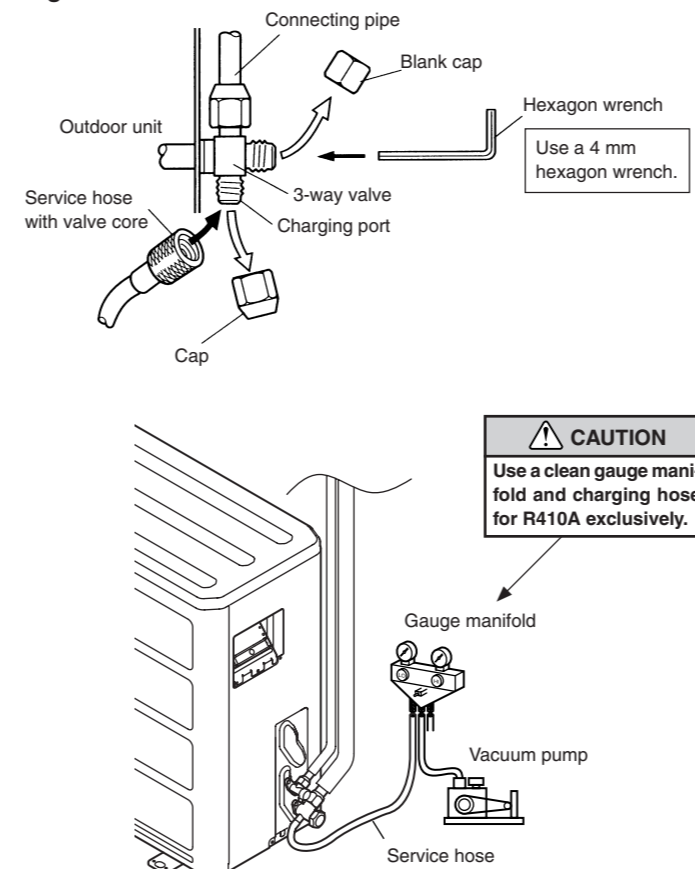

2. ADDITIONAL CHARGE

Refrigerant suitable for a piping length of 10 m is charged in the outdoor unit at the factory. When the piping is longer than 10 m, additional charging is necessary. For the additional amount, see the table below.

Table 7

Additional refrigerant	Pipe length				g/m (oz/ft)	
	10 m (33 ft)	15 m (49 ft)	20 m (66 ft)	25 m (82 ft)		
Heat & Cool model (Reverse cycle)	18,000 BTU/h class	None	100 g (3.5 oz)	200 g (7.1 oz)	300 g (10.6 oz)	20 g/m (0.71 oz/3.3 ft)
	24,000 BTU/h class	None	200 g (7.1 oz)	400 g (14.1 oz)	600 g (21.2 oz)	40 g/m (1.41 oz/3.3 ft)

⚠ CAUTION

- When moving and installing the air conditioner, do not mix gas other than the specified refrigerant (R410A) inside the refrigerant cycle.
- When charging the refrigerant R410A, always use an electronic balance for refrigerant charging (to measure the refrigerant by weight).
- When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.
- Add refrigerant from the charging valve after the completion of the work.
- If the units are further apart than the maximum pipe length, correct operation can not be guaranteed.

3. GAS LEAKAGE INSPECTION

⚠ CAUTION

After connecting the piping, check the joints for gas leakage with gas leak detector.

4

ELECTRICAL WIRING

⚠ WARNING

- Before starting work, check that power is not being supplied to indoor unit and the outdoor unit.
- Match the terminal block numbers and connection cord colors of the indoor unit and the outdoor unit. Erroneous wiring may cause burning of the electric parts.
- Connect the connection cords firmly to the terminal block. Imperfect installation may cause a fire.
- Always fasten the outside covering of the connection cord with the cord clamp. (If the insulator is chafed, electric leakage may occur.)
- Always connect the ground wire.

HOW TO CONNECT WIRING TO THE TERMINALS


A. For solid core wiring (or F-cable)

- Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to about 25 mm (1 5/16") to expose the solid wire.
- Using a screwdriver, remove the terminal screw(s) on the terminal board.
- Using pliers, bend the solid wire to form a loop suitable for the terminal screw.
- Shape the loop wire properly, place it on the terminal board and tighten securely with the terminal screw using a screwdriver.

B. For strand wiring


- Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to about 10 mm (3/8") to expose the strand wiring.
- Using a screwdriver, remove the terminal screw(s) on the terminal board.
- Using a round terminal fastener or pliers, securely clamp a round terminal to each stripped wire end.
- Position the round terminal wire, and replace and tighten the terminal screw using a screwdriver.

Fig. 8

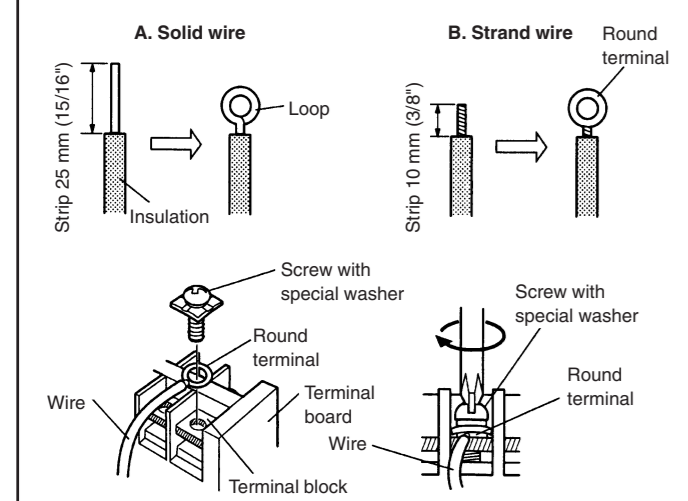

1. CONNECTION DIAGRAM

Fig. 9

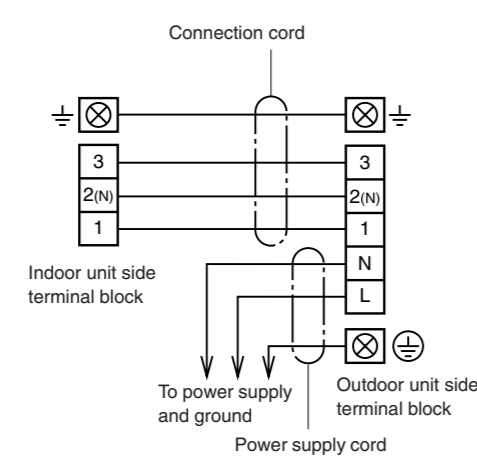

2. OUTDOOR UNIT SIDE

- Process the end of the connection cords to the dimensions shown in Fig. 8.
- Connect the end of the connection cord fully into the terminal block and fasten with the screws.
- Fasten the sheath with a cord clamp. (Fig. 10)
- Pass the connection cord and power cord through the hole of the 3-way valve bracket and run them to the outside of the cabinet. Do not block the ventilation slots in the cabinet when wiring the power cord and connection cords.
- Install the terminal cover and valve cover as shown in (Fig. 12, 13). Pass the power cord and connections cords through the valve cover when wiring them.

Fig. 10

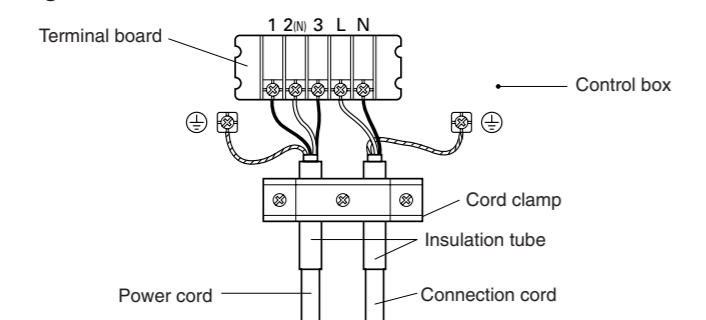


Fig. 11

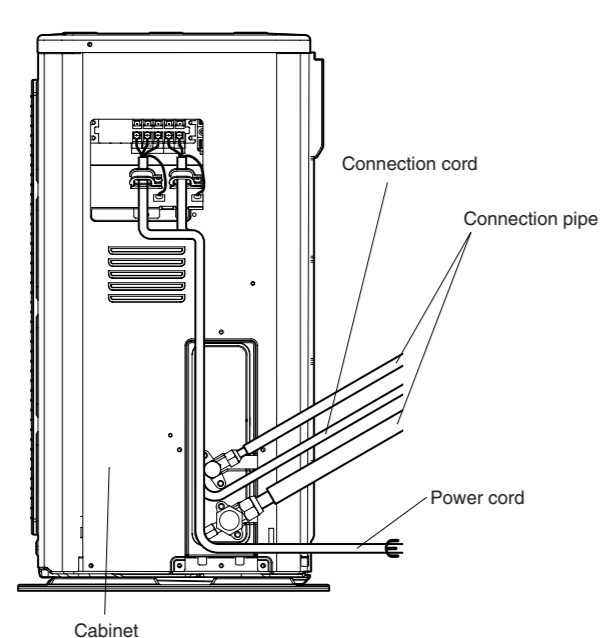


Fig. 12


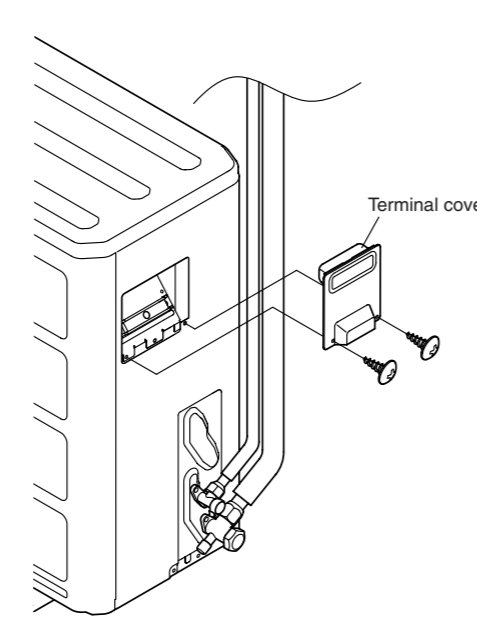


Fig. 13

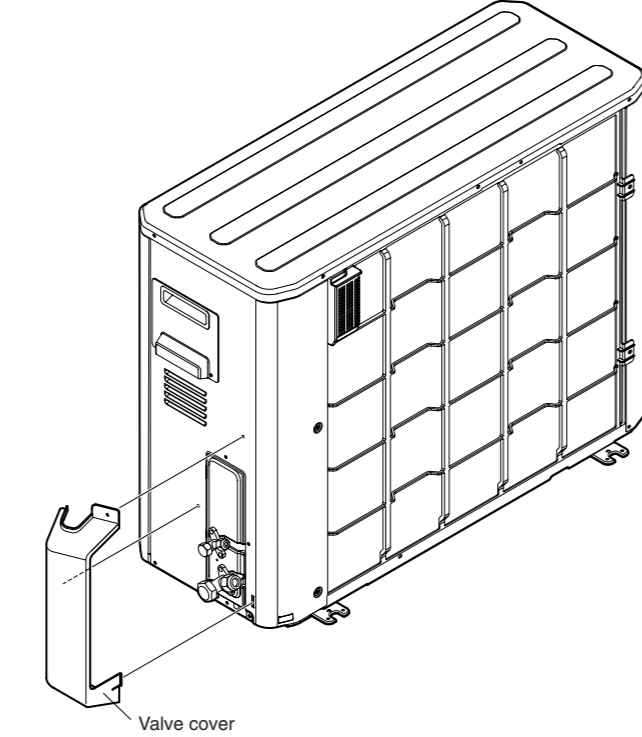

5

POWER

⚠ WARNING

- The rated voltage of this product is 220-240 V A.C. 50 Hz.
- Before turning on the verify that the voltage is within the 198 V to 264 V range.
- Always use a special branch circuit and install a special breaker to supply power to the air conditioner.
- Use a circuit breaker matched to the capacity of the air conditioner. (Install in accordance with standard)
- The circuit breaker is installed in the permanent wiring. Always use a circuit that can trip all the poles of the wiring and has an isolation distance of at least 3 mm between the contacts of each pole.
- Perform wiring work in accordance with standards so that the air conditioner can be operated safely and positively.
- Install a leakage circuit breaker in accordance with the related laws and regulations and electric company standards.

⚠ CAUTION

- The power source capacity must be the sum of the air conditioner current and the current of other electrical appliances. When the current contracted capacity is insufficient, change the contracted capacity.
- When the voltage is low and the air conditioner is difficult to start, contact the power company the voltage raised.

6

TEST RUNNING

⚠ CAUTION

Always turn on the power 4 hours prior to the start of the operation in order to ensure compressor protection.

- Perform test operation and check items (1) to (3) below.
- For the operation method, refer to the operating manual.
- The outdoor unit may not run, depending on the room temperature. In this case, the "TEST RUN" signal is received during air conditioner operation. (For information on the "TEST RUN", refer to the installation instruction sheet included with the indoor unit or the operating manual.)

Operation can be checked by lighting and flashing of the display section OPERATION and TIMER lamps. Perform judgement in accordance with the following.

- Test running

When the air conditioner is run by pressing the remote control unit TEST RUN button, the OPERATION and TIMER lamps flash slowly at the same time.

- Error

The LED lamp of an outdoor unit operates as follows (Table 8) according to the contents of an error.

Table 8

Error contents	LED (RED)
Serial signal error	1 time blink
Discharge pipe thermistor error	2 times blink
Heat exchanger thermistor error	3 times blink
Outdoor temperature thermistor error	4 times blink
2-way valve thermistor A, B error	5 times blink
3-way valve thermistor A, B error	6 times blink
Compressor thermistor error	7 times blink
Pressure switch error	8 times blink
Indoor unit connection error	9 times blink
Current trip error	10 times blink
CT error	11 times blink
Compressor position detection error	12 times blink
Compressor starting error	13 times blink
Timer error	14 times blink

CHECK ITEMS

OUTDOOR UNIT

- Is there any abnormal noise and vibration during operation?
- Will noise, wind, or drain water from the unit disturb the neighbors?
- Is there any gas leakage?

- Do not operate the air conditioner in the test running state for a long time.
- For the operation method, refer to the operating manual and perform operation check.

7

CUSTOMER GUIDANCE

Explain the following to the customer in accordance with the operating manual:

- Starting and stopping method, operation switching, temperature adjustment, timer, air flow switching, and other remote control unit operations.
- Air filter removal and cleaning, and how to use the air louvers.
- Give the operating manual and installation instruction sheet to the customer.

SPLIT TYPE AIR CONDITIONER INSTALLATION INSTRUCTION SHEET

(PART NO. 9374995011)

CAUTION
R410A
REFRIGERANT

This Air Conditioner contains and operates with refrigerant R410A and R410A equivalent.
THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL.
Refer to Commonwealth, State, Territory and local legislation, regulations, codes, installation & operation manuals, before the installation, maintenance and/or service of this product.

For authorized service personnel only.

This installation instruction sheet describes how to install the outdoor unit only. To install the indoor unit, refer to the installation instruction sheet included with the indoor unit.

DANGER	This mark indicates procedures which, if improperly performed, are most likely to result in the death or serious injury to the user or service personnel.
WARNING	This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.
CAUTION	This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

DANGER

Never touch electrical components immediately after the power supply has been turned off. Electrical shock may occur. After turning off the power, always wait 5 minutes or more before touching electrical components.

This air conditioner uses new refrigerant HFC (R410A).

The basic installation work procedures are the same as conventional refrigerant models. However, pay careful attention to the following points:

- Since the working pressure is 1.6 times higher than that of conventional refrigerant models, some of the piping and installation and service tools are special. (See the table below.) Especially, when replacing a conventional refrigerant model with a new refrigerant R410A model, always replace the conventional piping and flare nuts with the R410A piping and flare nuts.
- Models that use refrigerant R410A have a different charging port thread diameter to prevent erroneous charging with conventional refrigerant and for safety. Therefore, check beforehand. [The charging port thread diameter for R410A is 1/2 UNF 20 threads per inch.]
- Be more careful that foreign matter (oil, water, etc.) does not enter the piping than with refrigerant models. Also, when storing the piping, securely seal the openings by pinching, taping, etc.
- When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.

Special tools for R410A

Tool name	Contents of change
Gauge manifold	Pressure is high and cannot be measured with a conventional gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port has been changed. It is recommended the gauge with seals -0.1 to 5.3 MPa (-76 cmHg to 53 kgf/cm ²) for high pressure, -0.1 to 3.8 MPa (-76 cmHg to 38 kgf/cm ²) for low pressure.
Charge hose	To increase pressure resistance, the hose material and base size were changed.
Vacuum pump	A conventional vacuum pump can be used by installing a vacuum pump adapter.
Gas leakage detector	Special gas leakage detector for HFC refrigerant R410A.

Copper pipes

It is necessary to use seamless copper pipes and it is desirable that the amount of residual oil is less than 40 mg/10 m. Do not use copper pipes having a collapsed, deformed or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants. As an air conditioner using R410A incurs pressure higher than when using conventional refrigerant, it is necessary to choose adequate materials. Thicknesses of copper pipes used with R410A are as shown in the table. Never use copper pipes thinner than that in the table even when it is available on the market.

Thicknesses of Annealed Copper Pipes (R410A)

Pipe outside diameter	Thickness
6.35 mm (1/4 in.)	0.80 mm
9.52 mm (3/8 in.)	0.80 mm
12.70 mm (1/2 in.)	0.80 mm
15.88 mm (5/8 in.)	1.00 mm
19.05 mm (3/4 in.)	1.20 mm

WARNING

- For the air conditioner to operate satisfactorily, install it as outlined in this installation instruction sheet.
- Connect the indoor unit and outdoor unit with the room air conditioner piping and cords available standards parts. This installation instruction sheet describes the correct connections using the installation set available from our standard parts.
- Installation work must be performed in accordance with national wiring standards by authorized personnel only.
- Also, do not use an extension cord.
- Do not turn on the power until all installation work is complete.
- Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation.
- There is not extra refrigerant in the outdoor unit for air purging.
- Use a vacuum pump for R410A exclusively.
- Using the same vacuum pump for different refrigerants may damage the vacuum pump or the unit.
- Use a clean gauge manifold and charging hose for R410A exclusively.
- If refrigerant leaks while work is being carried out, ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.

- Be careful not to scratch the air conditioner when handling it.
- After installation, explain correct operation to the customer, using the operating manual.
- Let the customer keep this installation instruction sheet because it is used when the air conditioner is serviced or moved.

STANDARD PARTS

The following installation parts are furnished. Use them as required.

Name and Shape	Qty	Application
Drain pipe	1	For outdoor unit drain piping work (May not be supplied, depending on the model).
Drain cap	2	
Insulation (seal)	1	For filling in a gap at the entrance of connection cords

CONNECTION PIPE REQUIREMENT

CAUTION

The maximum lengths of this product are shown in the following table. If the units are further apart than this, correct operation can not be guaranteed.

Model Type	Diameter		Pipe length		Maximum height (between indoor and outdoor)
	Liquid	Gas	MAX.	MIN.	
30,000 BTU/h class	9.52 mm (3/8 in.)	15.88 mm (5/8 in.)	50 m	5 m	30 m
36,000 BTU/h class					
45,000 BTU/h class					
54,000 BTU/h class			70 m		

- Use pipe with water-resistant heat insulation.

CAUTION

Install heat insulation around both the gas and liquid pipes. Failure to do so may cause water leaks. Use heat insulation with heat resistance above 120 °C. (Reverse cycle model only) In addition, if the humidity level at the installation location of the refrigerant piping is expected to exceed 70%, install heat insulation around the refrigerant piping. If the expected humidity level is 70-80%, use heat insulation that is 15 mm or thicker and if the expected humidity exceeds 80%, use heat insulation that is 20 mm or thicker. If heat insulation is used that is not as thick as specified, condensation may form on the surface of the insulation. In addition, use heat insulation with heat conductivity of 0.045 W/(m·K) or less (at 20 °C).

ELECTRICAL REQUIREMENT

- Electric wire size and breaker capacity:

Model Type	Power supply cord (mm ²)		Connection cord (mm ²)		Breaker capacity (A)
	MAX.	MIN.	MAX.	MIN.	
30,000 BTU/h class	4.0	3.5	2.5	1.5	30
36,000 BTU/h class					
45,000 BTU/h class					
54,000 BTU/h class	6.0	5.3	3.5	2.5	30

- Always use H07RN-F or equivalent to the connection cord.
- Install all electrical works in accordance to the standard.
- Install the disconnect device with a contact gap of at least 3 mm in all poles nearby the units. (Both indoor unit and outdoor unit)
- Install the circuit breaker nearby the units.

SELECTING THE MOUNTING POSITION

Decide the mounting position with the customer as follows:

WARNING

Select installation locations that can properly support the weight of the indoor and outdoor units. Install the units securely so that they do not topple or fall.

CAUTION

- Do not install where there is the danger of combustible gas leakage.
- Do not install the unit near heat source of heat, steam, or flammable gas.
- If children under 10 years old may approach the unit, take preventive measures so that they cannot reach the unit.


WARNING

- Install the unit where it will not be tilted by more than 3°. However, do not install the unit with it tilted towards the side containing the compressor.
- When installing the outdoor unit where it may be exposed to strong wind, fasten it securely.


- Install the outdoor unit in a location which can withstand the weight of the unit and vibration, and which can install horizontally.
- Provide the indicated space to ensure good airflow.
- If possible, do not install the unit where it will be exposed to direct sunlight. (If necessary, install a blind that does not interfere with the airflow.)
- Do not install the unit near a source of heat, steam, or flammable gas.
- During heating operation, drain water flows from the outdoor unit. Therefore, install the outdoor unit in a place where the drain water flow will not be obstructed. (Reverse cycle model only)
- Do not install the unit where strong wind blows or where it is very dusty.
- Do not install the unit where people pass.
- Install the outdoor unit in a place where it will be free from being dirty or getting wet by rain as much as possible.
- Install the unit where connection to the indoor unit is easy.

- 30,000 BTU/h class
- 36,000 BTU/h class
- 45,000 BTU/h class
- 54,000 BTU/h class


When there are obstacles at the back side.

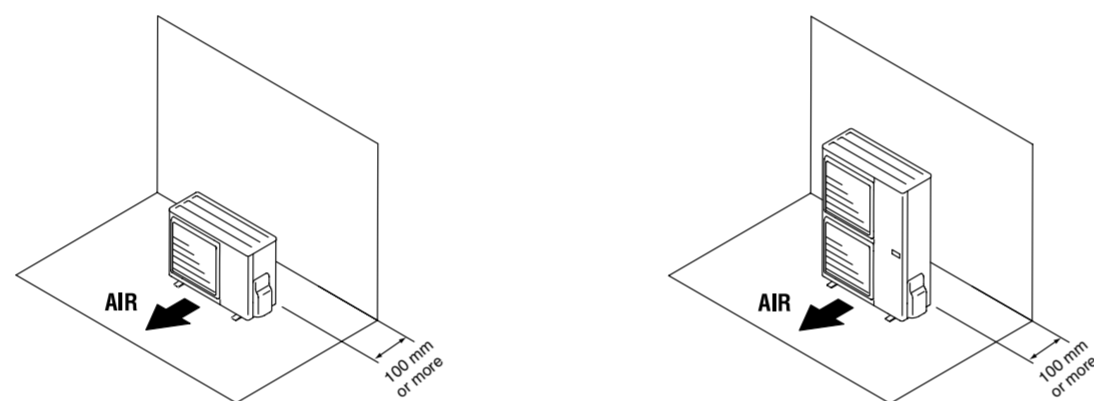


When there are obstacles at the back and front sides.

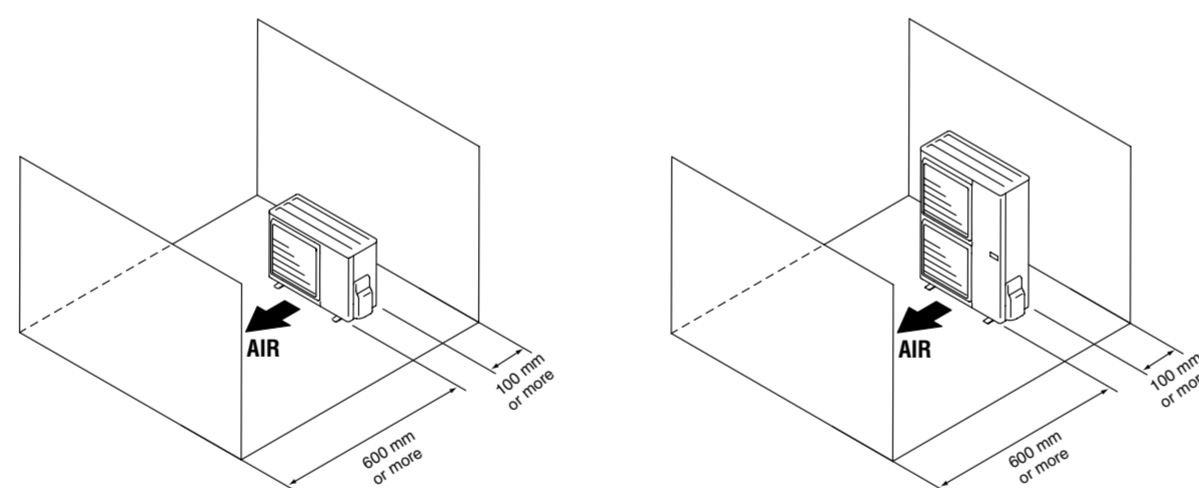

When there are obstacles at the back, side(s), and top.

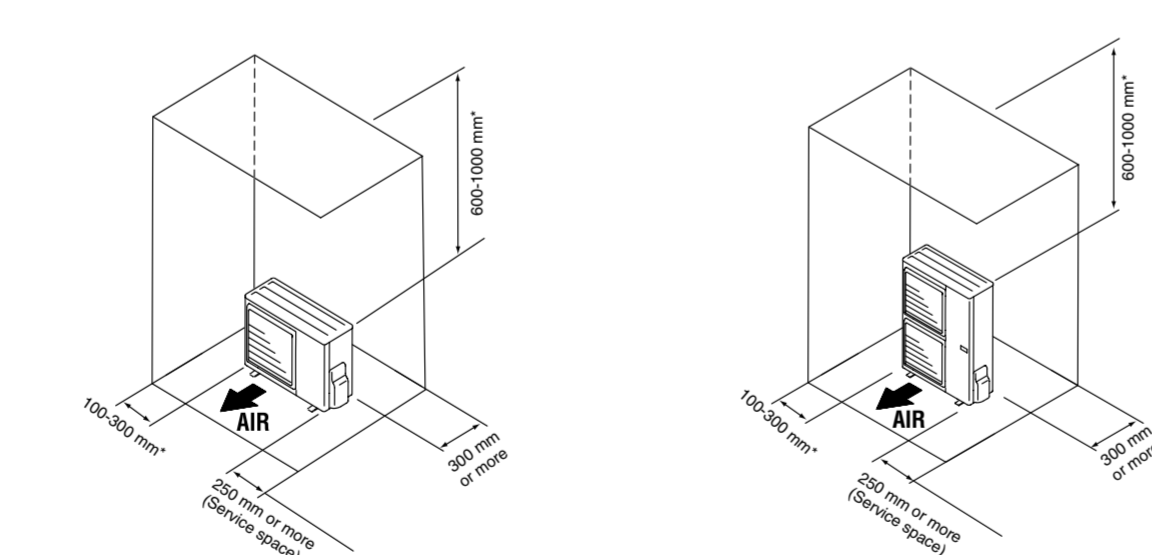

When there are obstacles at the back side with the installation of more than one unit.

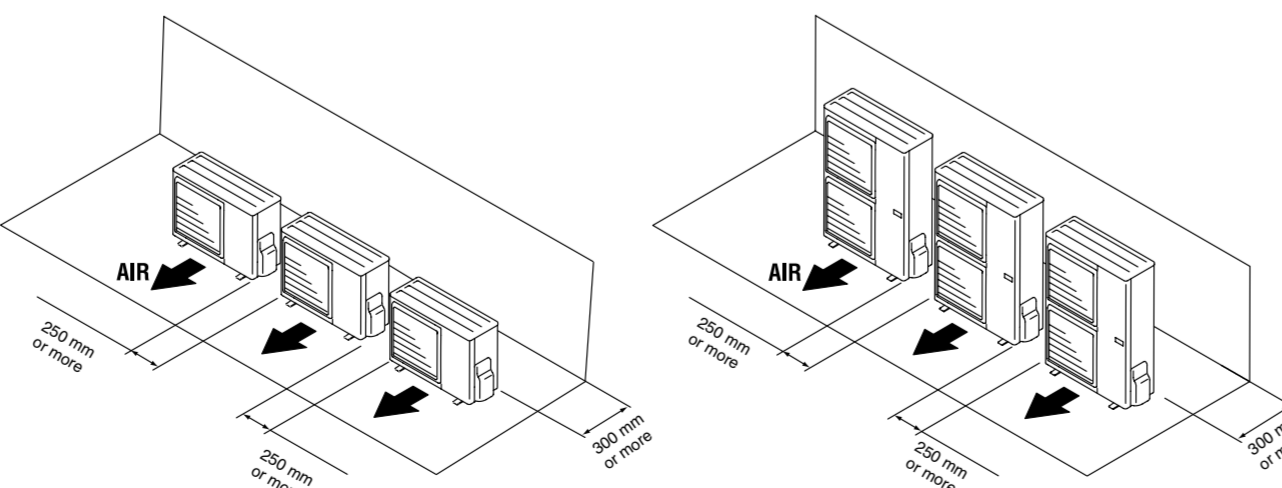

- If the space is larger than that that is stated, the condition will be the same as that there are no obstacles.


INSTALLATION PROCEDURE

1


OUTDOOR UNIT INSTALLATION

1. OUTDOOR UNIT PROCESSING

- Outdoor unit to be fastened with bolts at the four places indicated by the arrows without fail.

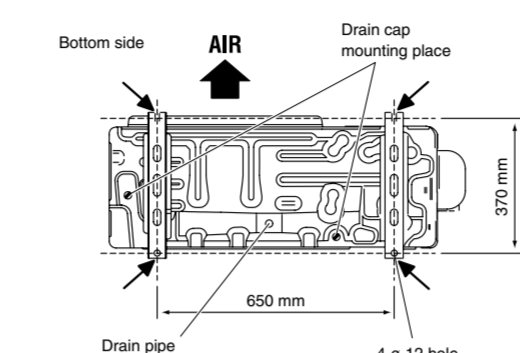


- Fix securely with bolts on a solid block. (Use 4 sets of commercially available M10 bolt, nut and washer.)

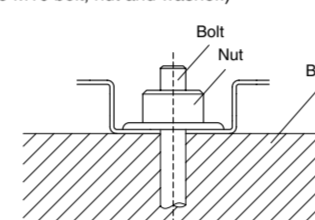

- Since the drain water flows out of the outdoor unit during heating operation, install the drain pipe and connect it to a commercial 16 mm hose. (Reverse cycle model only)
- When installing the drain pipe, plug all the holes other than the drain pipe mounting hole in the bottom of the outdoor unit with putty so there is no water leakage. (Reverse cycle model only)

CAUTION


When the outdoor temperature is 0 °C or less, do not use the accessory drain pipe and drain cap. If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold weather. (Reverse cycle model only)

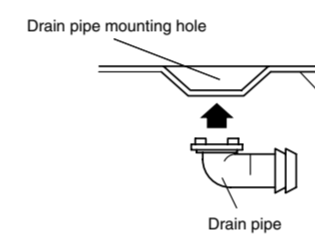

4. VACUUM

- Remove the cap, and connect the gauge manifold and the vacuum pump to the charging valve by the service hoses.
- Vacuum the indoor unit and the connecting pipes until the pressure gauge indicates -0.1 MPa (-76 cmHg).
- When -0.1 MPa (-76 cmHg) is reached, operate the vacuum pump for at least 60 minutes.
- Disconnect the service hoses and fit the cap to the charging valve to the specified torque.
- Remove the blank caps, and fully open the spindles of the 2-way and 3-way valves with a hexagon wrench [Torque: 6-7 N·m (60 to 70 kgf·cm)].
- Tighten the blank caps of the 2-way valve and 3-way valve to the specified torque.

Blank cap	Tightening torque	
	Pipe diameter	Torque
Charging port cap	6.35 mm (1/4 in.)	20 to 25 N·m (200 to 250 kgf·cm)
	9.52 mm (3/8 in.)	20 to 25 N·m (200 to 250 kgf·cm)
	12.70 mm (1/2 in.)	25 to 30 N·m (250 to 300 kgf·cm)
	15.88 mm (5/8 in.)	30 to 35 N·m (300 to 350 kgf·cm)
	19.05 mm (3/4 in.)	35 to 40 N·m (350 to 400 kgf·cm)
	10 to 12 N·m (100 to 120 kgf·cm)	

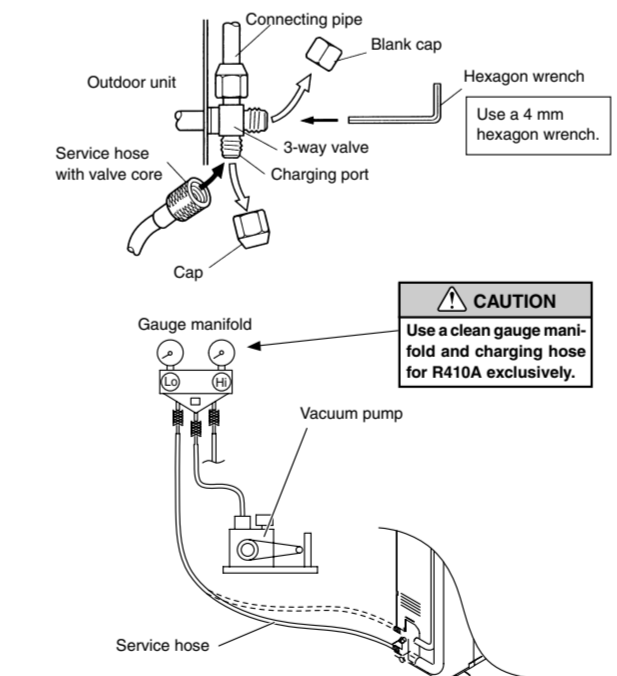

CAUTION

- Do not purge the air with refrigerants, but use a vacuum pump to vacuum the installation! There is no extra refrigerant in the outdoor unit for air purging!
- Use a vacuum pump and gauge manifold and charging hose for R410A exclusively. Using the same vacuum for different refrigerants may damage the vacuum pump or the unit.

2

CONNECTING THE PIPE


CAUTION

- Do not use mineral oil on flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- While welding the pipes, be sure to blow dry nitrogen gas through them.
- The maximum lengths of this product are shown in the table. If the units are further apart than this, correct operation can not be guaranteed.

1. FLARING

- Cut the connection pipe to the necessary length with a pipe cutter.
- Hold the pipe downward so that cuttings will not enter the pipe and remove the burrs.
- Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a flare tool.

Check if (L) is flared uniformly and is not cracked or scratched.

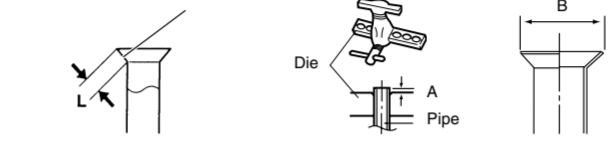

Pipe outside diameter	Dimension A (mm)	
	Flare tool for R410A, clutch type	Dimension A
6.35 mm (1/4 in.)	0 to 0.5	
9.52 mm (3/8 in.)		
12.70 mm (1/2 in.)		
15.88 mm (5/8 in.)		
19.05 mm (3/4 in.)		

Pipe outside diameter	Dimension B ± (mm)	
	Dimension B	Dimension B ±
6.35 mm (1/4 in.)	9.1	
9.52 mm (3/8 in.)	13.2	
12.70 mm (1/2 in.)	16.6	
15.88 mm (5/8 in.)	19.7	
19.05 mm (3/4 in.)	24.0	

When using conventional flare tools to flare R410A pipes, the dimension A should be approximately 0.5 mm more than indicated in the table (flaring with R410A flare tools) to achieve the specified flaring. Use a thickness gauge to measure the dimension A.

Pipe outside diameter	Width across flats of Flare nut	
	Width across flats	Width across flats
6.35 mm (1/4 in.)	17 mm	
9.52 mm (3/8 in.)	22 mm	
12.70 mm (1/2 in.)	26 mm	
15.88 mm (5/8 in.)	29 mm	
19.05 mm (3/4 in.)	36 mm	




2. BENDING PIPES

The pipes are shaped by your hands. Be careful not to collapse them. Do not bend the pipes in an angle more than 90°. When pipes are repeatedly bent or stretched, the material will harden, making it difficult to bend or stretch them any more. Do not bend or stretch the pipes more than three times.

CAUTION

- To prevent breaking of the pipe, avoid sharp bends. Bend the pipe with a radius of curvature of 150 mm or over.
- If the pipe is bent repeatedly at the same place, it will break.

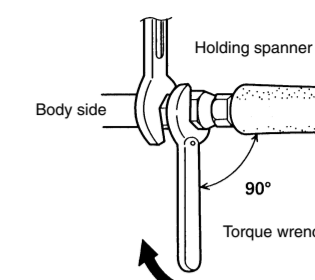

CAUTION

Hold the torque wrench at its grip, keeping it in the right angle with the pipe, in order to tighten the flare nut correctly.

Flare nut	Tightening torque
6.35 mm (1/4 in.) dia.	14 to 18 N·m (140 to 180 kgf·cm)
9.52 mm (3/8 in.) dia.	33 to 42 N·m (330 to 420 kgf·cm)
12.70 mm (1/2 in.) dia.	50 to 62 N·m (500 to 620 kgf·cm)
15.88 mm (5/8 in.) dia.	63 to 77 N·m (630 to 770 kgf·cm)
19.05 mm (3/4 in.) dia.	100 to 110 N·m (1000 to 1100 kgf·cm)

3. CONNECTION PIPES


Outdoor unit

- Detach the caps and plugs from the pipes.

CAUTION


- Be sure to apply the pipe against the port on the indoor unit and the outdoor unit correctly. If the centering is improper, the flare nut cannot be tightened smoothly. If the flare nut is forced to turn, the threads will be damaged.
- Do not remove the flare nut from the indoor unit pipe until immediately before connecting the connection pipe.

- Centering the pipe against port on the outdoor unit, turn the flare nut with your hand.

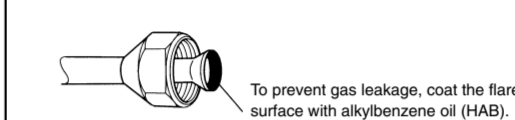

To prevent gas leakage, coat the flare surface with alkylbenzene oil (HAB). Do not use mineral oil.

- Tighten the flare nut of the connection pipe at the outdoor unit valve connector.

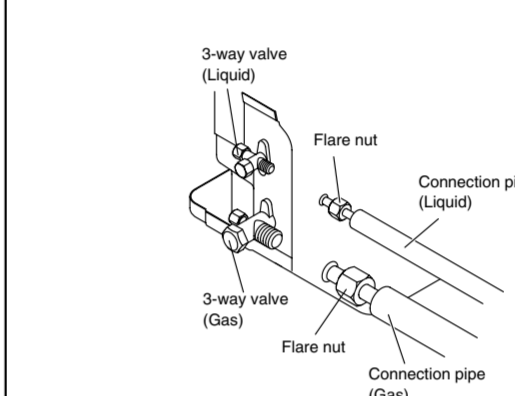

3

POWER

WARNING

- The rated voltage of this product is 230 V a.c. 50 Hz.
- Before turning on, verify that the voltage is within the 198 V to 264 V range.
- Always use a special branch circuit and install a special receptacle to supply power to the air conditioner.
- Use a special branch circuit breaker and receptacle matched to the capacity of the air conditioner. (Install in accordance with standard.)
- Perform wiring work in accordance with standards so that the air conditioner can be operated safely and positively.
- Install a leakage special branch circuit breaker in accordance with the related laws and regulations and electric company standards.
- The circuit breaker is installed in the permanent wiring. Always use a circuit that can trip all the poles of the wiring and has an isolation distance of at least 3 mm between the contacts of each pole.

CAUTION

- The power source capacity must be the sum of the air conditioner current and the current of other electrical appliances. When the current contracted capacity is insufficient, change the contracted capacity.
- When the voltage is low and the air conditioner is difficult to start, contact the power company the voltage raised.

CAUTION

- When moving and installing the air conditioner, do not mix gas other than the specified refrigerant R410A inside the refrigerant cycle.
- When charging the refrigerant R410A, always use an electronic balance for refrigerant charging (to measure the refrigerant by weight).

- When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.

- Add refrigerant from the charging valve after the completion of the work.
- If the units are further apart than the maximum pipe length, correct operation can not be guaranteed.

6. GAS LEAKAGE INSPECTION

CAUTION

- After connecting the piping, check the all joints for gas leakage with gas leak detector.
- When inspecting gas leakage, always use the vacuum pump for pressure. Do not use nitrogen gas.

(Continued to the next page)

WARNING



- ① Before starting work, check that power is not being supplied to the indoor unit and outdoor unit.
- ② Match the terminal board numbers and connection cord colors with those of the outdoor unit. Erroneous wiring may cause burning of the electric parts.
- ③ Connect the connection cords firmly to the terminal board. Imperfect installation may cause a fire.
- ④ Always fasten the outside covering of the connection cord with the cord clamp. (If the insulator is chafed, electric leakage may occur.)
- ⑤ Always connect the ground wire.

HOW TO CONNECT WIRING TO THE TERMINALS**A. For solid core wiring (or F-cable)**


- (1) Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to about 25 mm to expose the solid wire.
- (2) Using a screwdriver, remove the terminal screw(s) on the terminal board.
- (3) Using pliers, bend the solid wire to form a loop suitable for the terminal screw.
- (4) Shape the loop wire properly, place it on the terminal board and tighten securely with the terminal screw using a screwdriver.

B. For strand wiring

- (1) Cut the wire end with a wire cutter or wire-cutting pliers, then strip the insulation to about 10 mm to expose the strand wiring.
- (2) Using a screwdriver, remove the terminal screw(s) on the terminal board.
- (3) Using a round terminal fastener or pliers, securely clamp a round terminal to each stripped wire end.
- (4) Position the round terminal wire, and replace and tighten the terminal screw using a screwdriver.

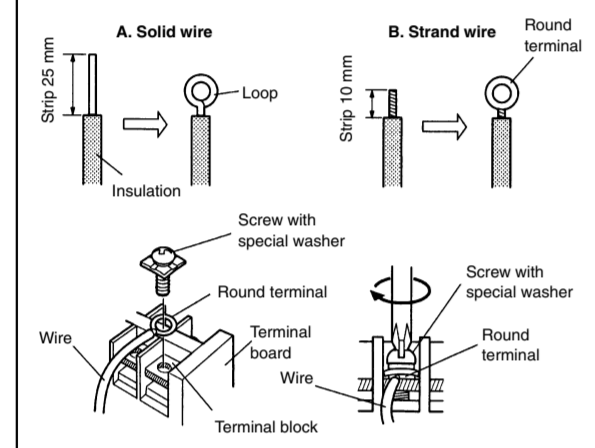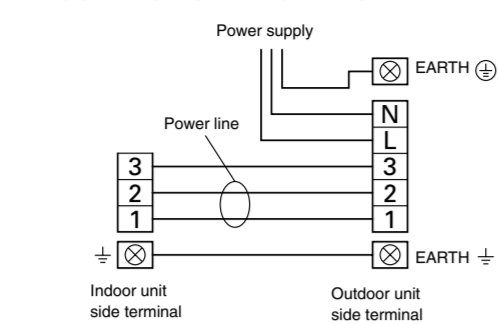**1. CONNECTION DIAGRAMS****2. CONNECTION CORD PREPARATION**


Keep the earth wire longer than the other wires.

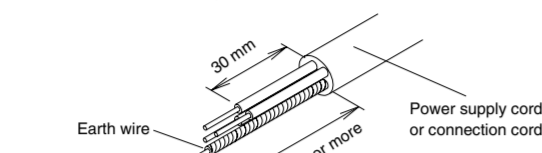**3. OUTDOOR UNIT****CAUTION**


When connecting the power supply cord, make sure that the phase of the power supply matches with the phase of the terminal board. If the phases do not match, the compressor will rotate in reverse and will not be able to compress.

- (1) Service cover removal
 - Remove the two mounting screws.
 - Remove the service cover by pushing downwards.


- 30,000 BTU/h class
- 36,000 BTU/h class

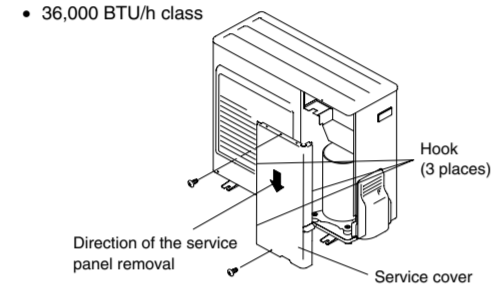



- 45,000 BTU/h class
- 54,000 BTU/h class

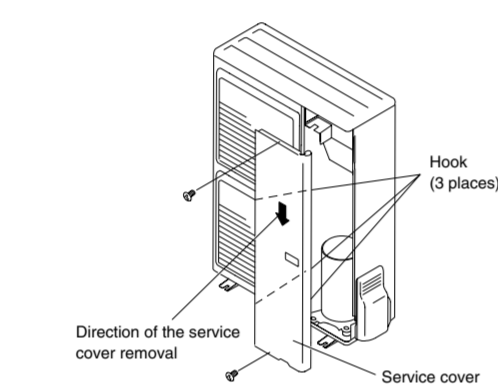

- (2) Valve cover removal.
 - Remove the one mounting screw.
 - Remove the valve cover by sliding upward.

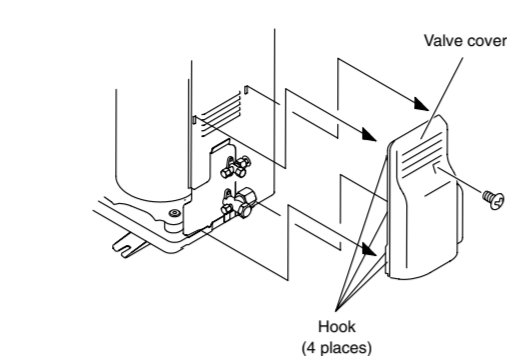


- (3) Connect the power supply cord and the connection cord to terminal.
- (4) Fasten the power supply cord and connection cord with cord clamp.

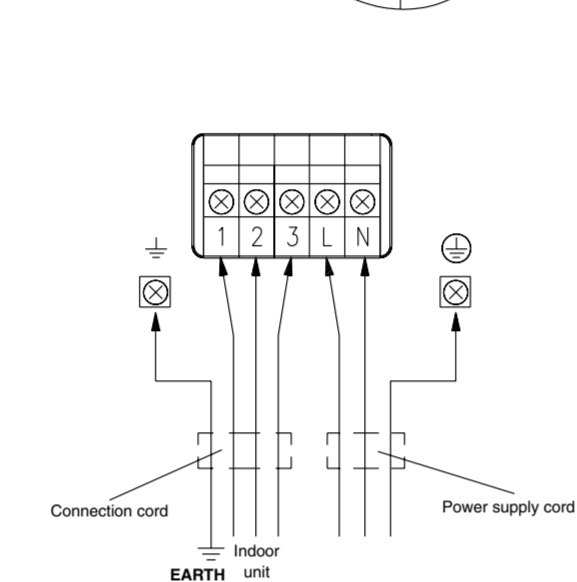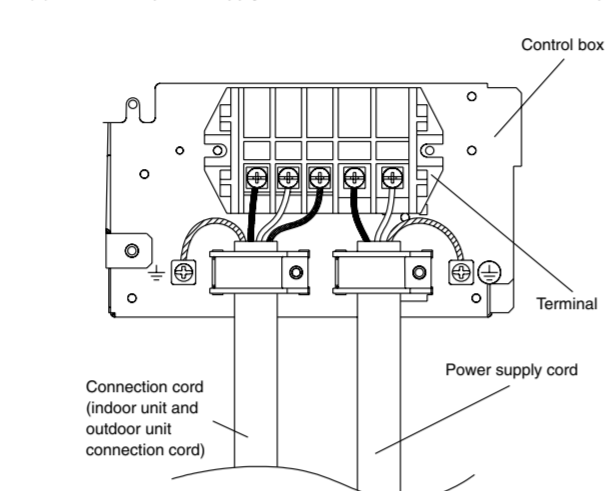


- (5) Power supply cord and connection cord should be fixed with cable clip as shown in the figure. Fill in a gap at the entrance of the cords with insulation (seal).


- 30,000 BTU/h class
- 36,000 BTU/h class

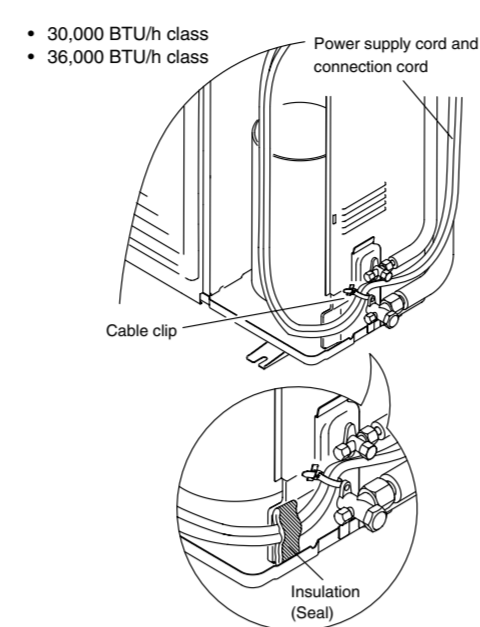

- 45,000 BTU/h class
- 54,000 BTU/h class

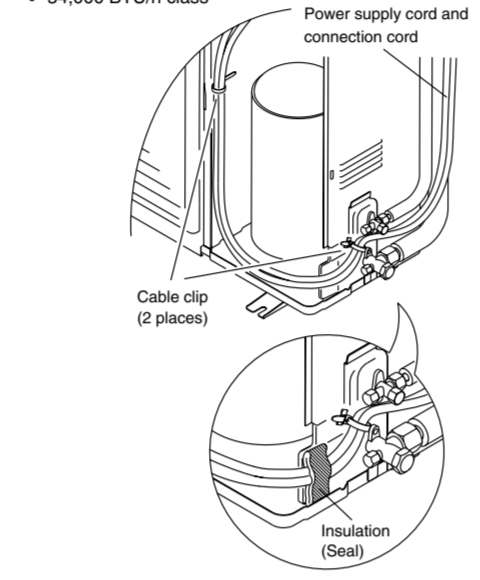**CAUTION**

Do not make power supply cord and connection cord come in contact with valve (Gas).

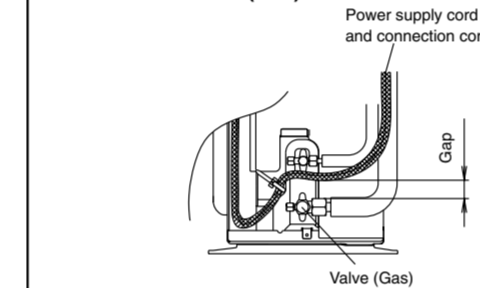

- (6) Put the service cover and valve cover back after completion of the work.

CAUTION

Always turn on the power 12 hours prior to the start of the operation in order to ensure compressor protection.

1. Make a TEST RUN in accordance with the installation instruction sheet for the indoor unit.

2. OUTDOOR UNIT LEDS


When a malfunction occurs in the outdoor unit, the LED on the circuit board lights to indicate the error. Refer to the following table for the description of each error according to the LED.

LED	Error contents
1 flash	Communication error (Indoor unit - Outdoor unit)
2 flash	Discharge pipe temperature sensor
3 flash	Outdoor heat exchanger temperature sensor
4 flash	Outdoor temperature sensor
7 flash	Compressor temperature sensor
8 flash	Heat sink temperature sensor
9 flash	Pressure switch abnormal
12 flash	iPM error
13 flash	Compressor rotor position cannot detect
14 flash	Compressor cannot operate
15 flash	Outdoor fan abnormal (upper fan)
16 flash	Outdoor fan abnormal (lower fan)
5 sec. ON / 1 sec. OFF repeated	Protect operation
lighting	No error

PUMP DOWN (Refrigerant collecting operation)

Perform the following procedures to collect the refrigerant when moving the indoor unit or the outdoor unit.

- (1) Press the push-button switch (SW2) on the circuit board once. The LED on the circuit board starts flashing (one second ON/one second OFF). This indicates the start of PUMP DOWN operation. When the switch is pressed while the compressor is in operation, PUMP DOWN operation starts automatically. When the switch is pressed while the compressor is in stop, the compressor starts to operate automatically, and then move on to PUMP DOWN operation.
- (2) PUMP DOWN operation continues for about 1 minute. When PUMP DOWN operation is completed, the compressor stops automatically. Then close the 2-way valve and 3-way valve immediately.
- (3) Turn the power off.

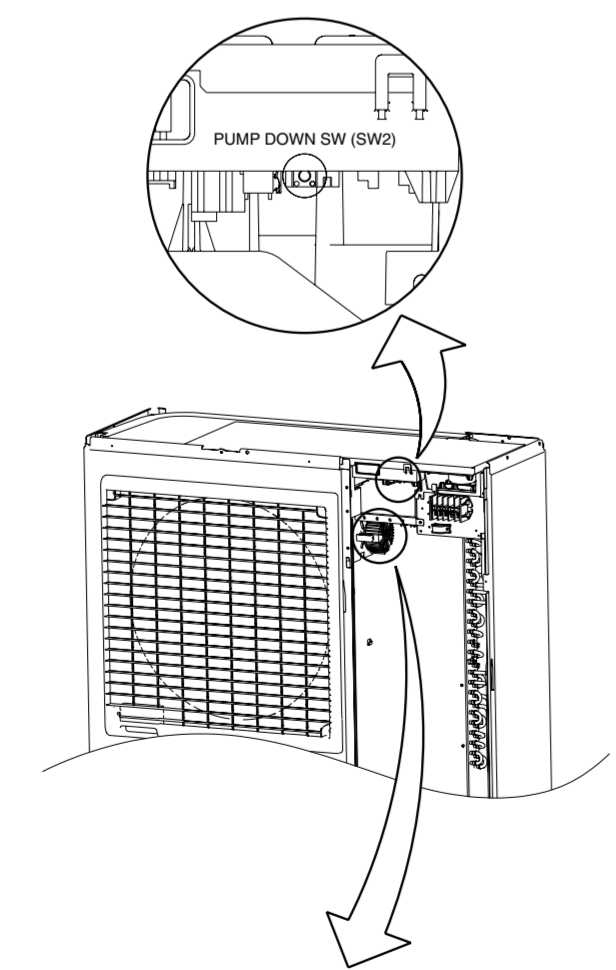**DANGER**

This part (Choke coil) generates high voltages. Never touch this part.


CASSETTE type INVERTER


10 . REPLACEMENT PARTS

1. REPLACEMENT PARTS (For OUTDOOR UNIT)


1-1 For AO*18/ 24LMAKL

1-1-1 PARTS LAYOUT DRAWING

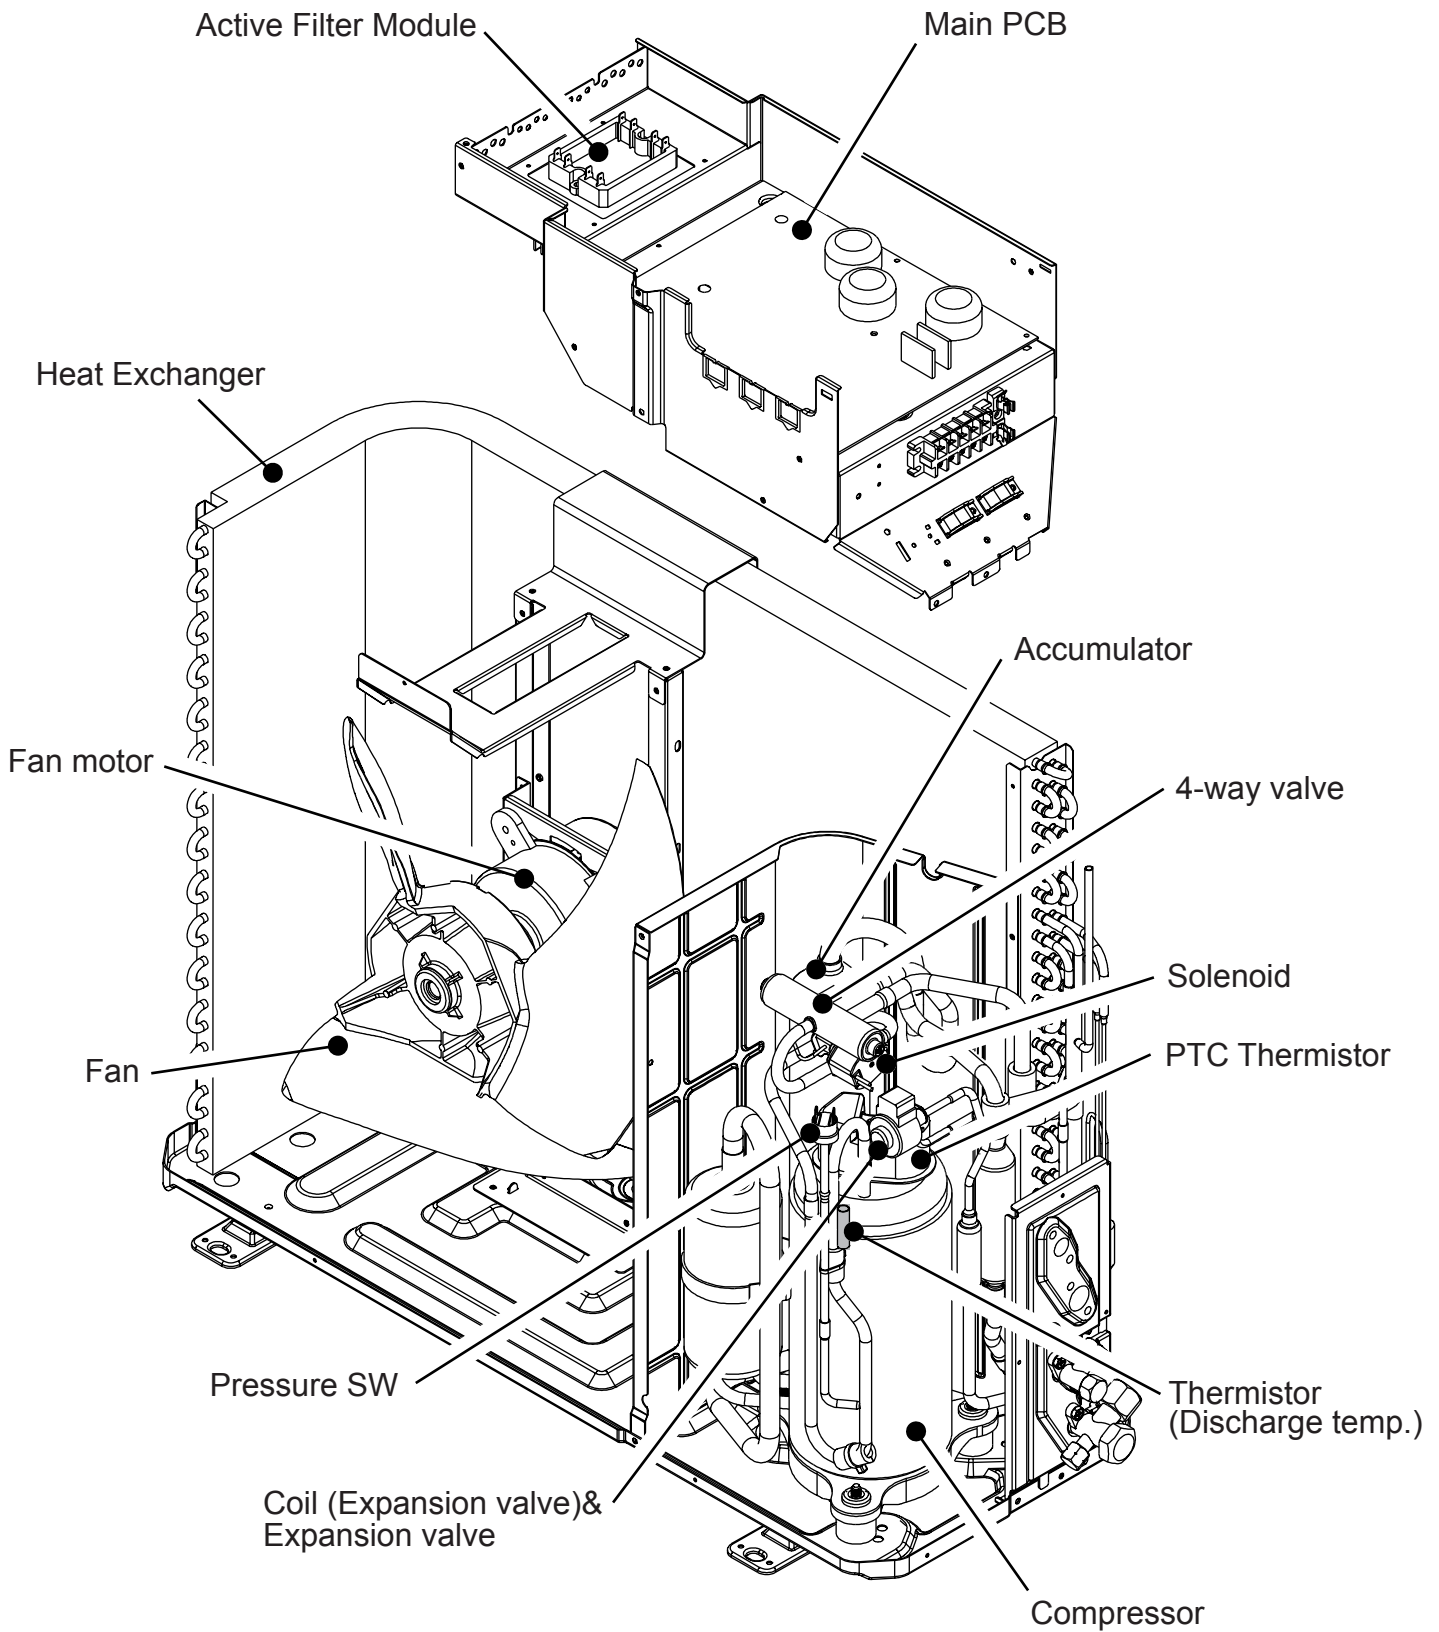


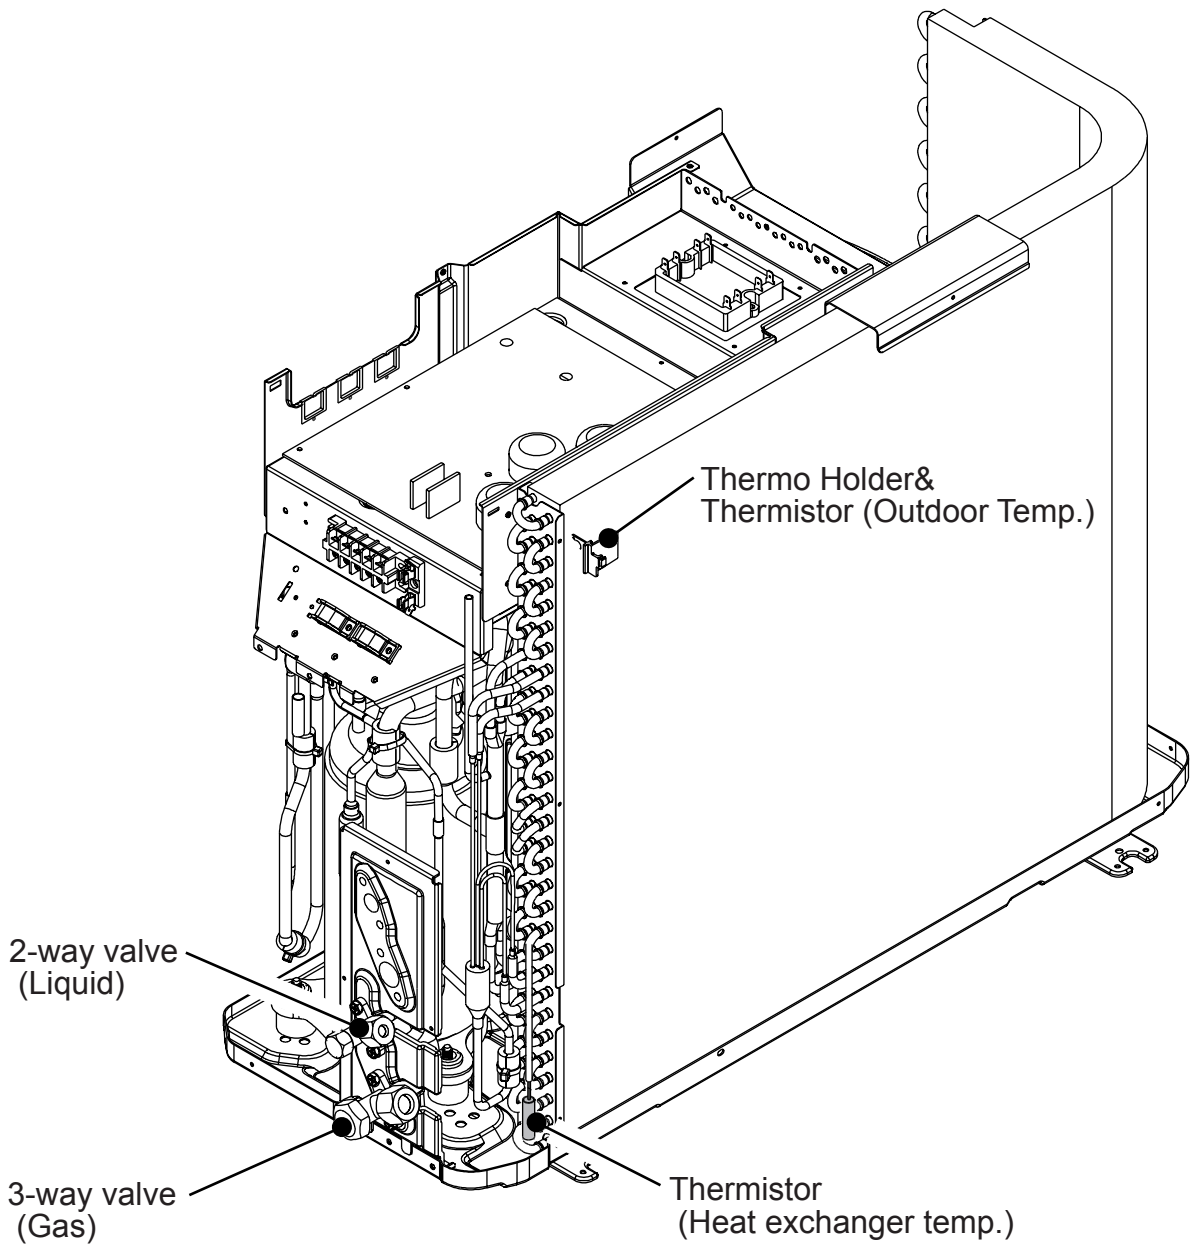

1-1-2 WIRING (For AO*18/ 24LMAKL)

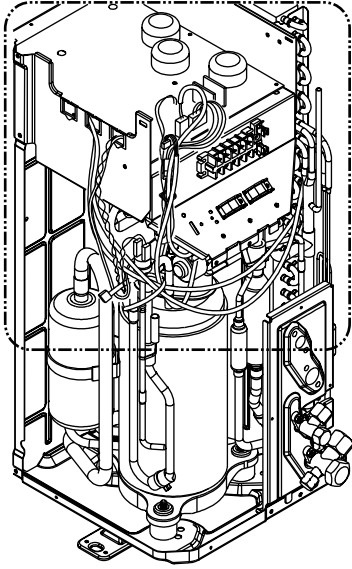


Compressor wire

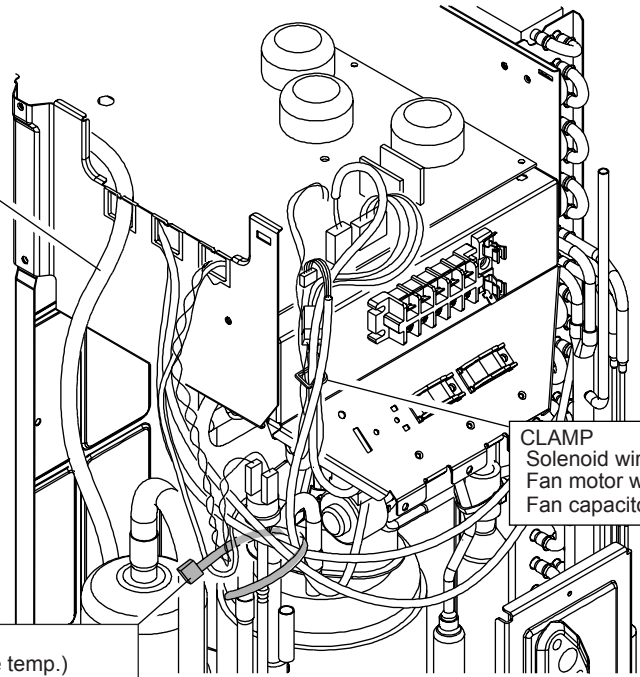

CLAMP
Solenoid wire
Fan motor wire
Fan capacitor wire

BIND
Thermistor (Discharge temp.)
Thermistor (Compressor temp.)
Thermistor (Heat exchanger temp.)
Thermistor (Outdoor temp.)
PTC Thermistor
Coil (Expansion valve)
Pressure SW

ENLARGED DETAIL

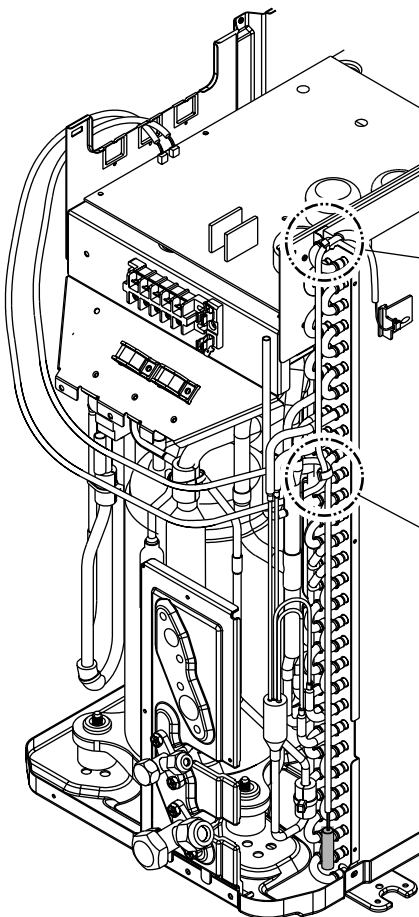


BIND
(Thermistor (Outdoor temp.))

BIND
(Thermistor (Heat exchanger temp.))
(Thermistor (Outdoor temp.))

1-1-3 DISASSEMBLY PROCESS (For AO*18/ 24LMAKL)

1. TOP PANEL removal


- Remove the 5 mounting screws.
- Remove the TOP PANEL upward.

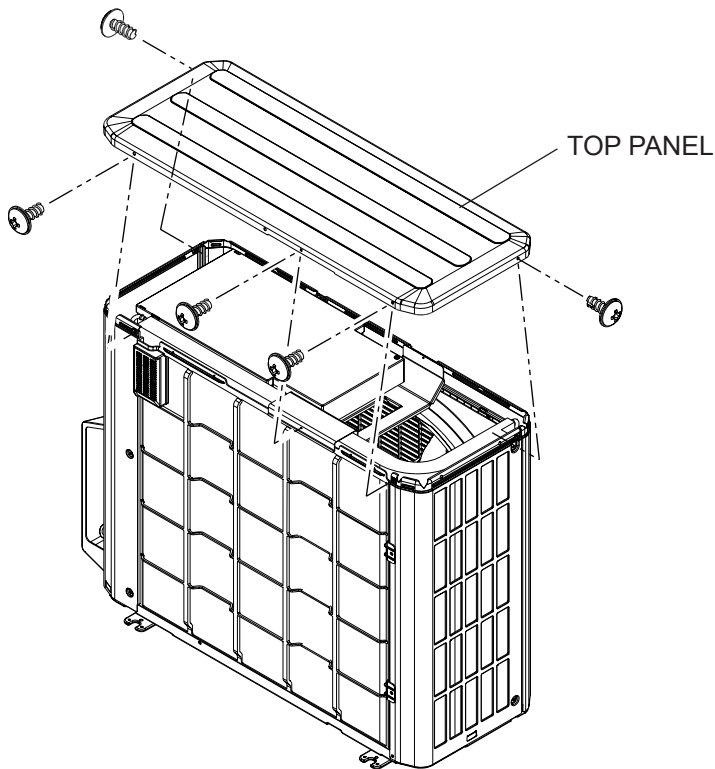

REAR VIEW



2. CONTROL BOX COVER removal

- Remove the 3 mounting screws.
- Remove the CONTROL BOX COVER and TERMINAL COVER.

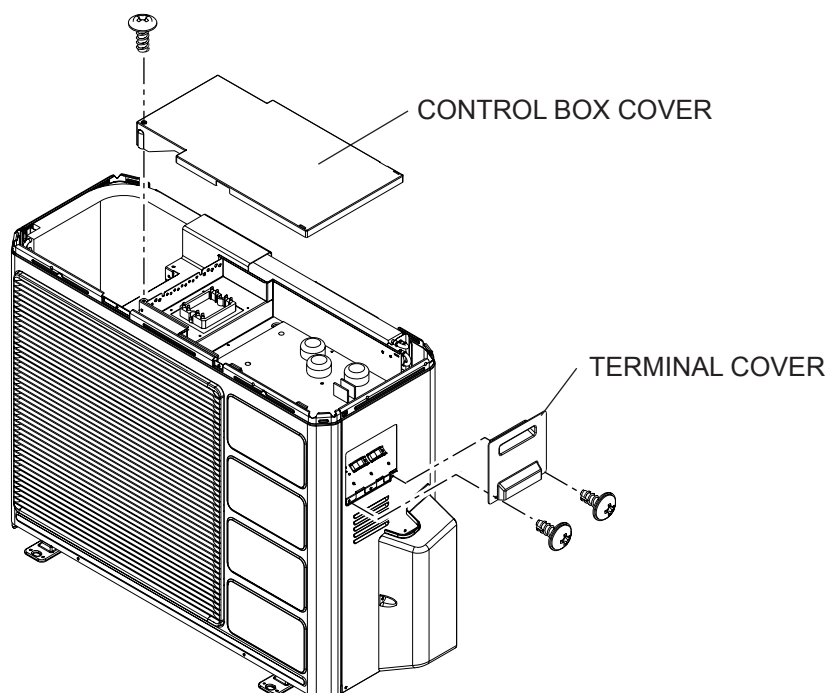


3. MAIN PCB removal


- Remove the 4 mounting screws.
- Remove the connectors and cords. (Refer to VIEW -A,-B)
- Remove the MAIN PCB.

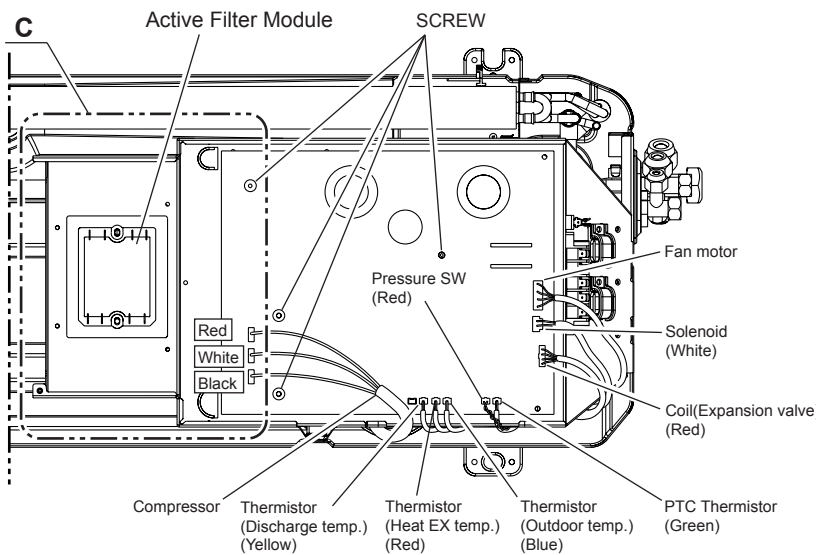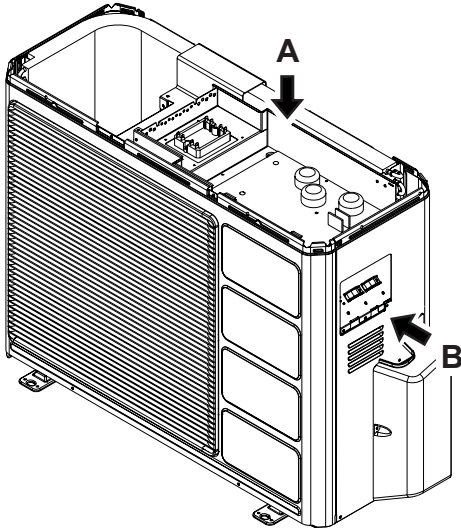

VIEW - A

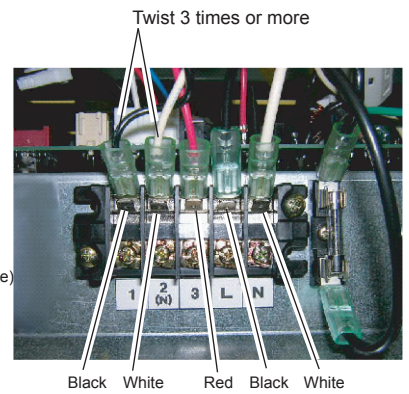


VIEW - B

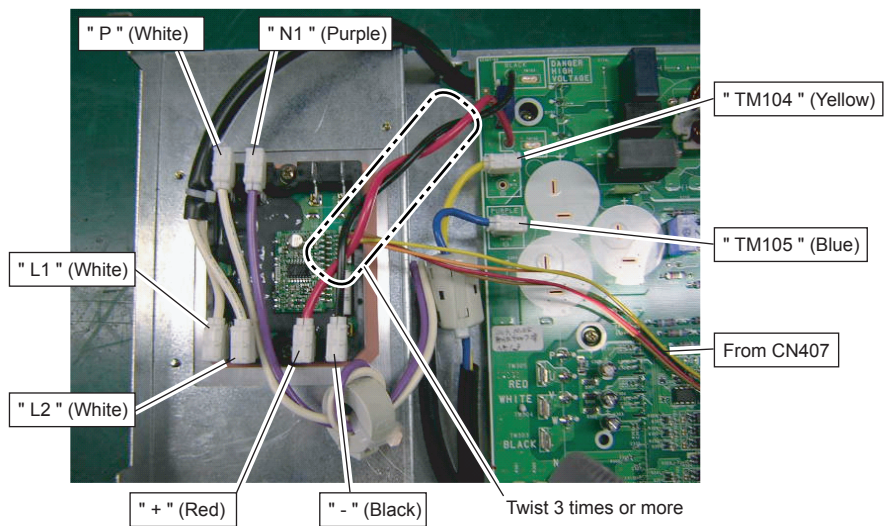

DETAIL C

4. FRONT PANEL removal

- Remove the 4 mounting screws.
- Remove the FRONT PANEL by sliding upward.

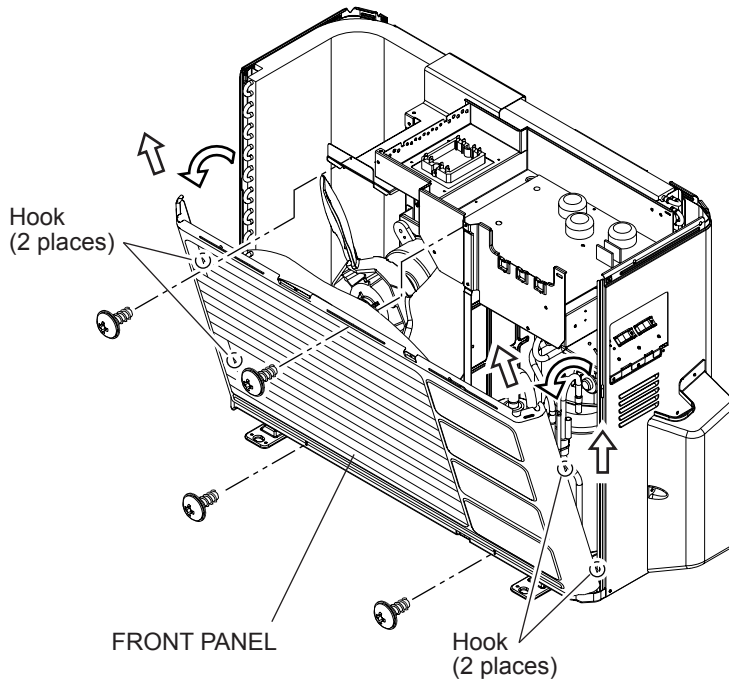


Replaceable Component

Compressor
Accumulator
Solenoid
Thermistor (Discharge temp.)
Thermistor (Outdoor temp.)
PTC Thermistor
Pressure SW
Coil (Expansion valve)
Fan motor & Fan


5. VALVE COVER removal

- Remove the VALVE COVER.

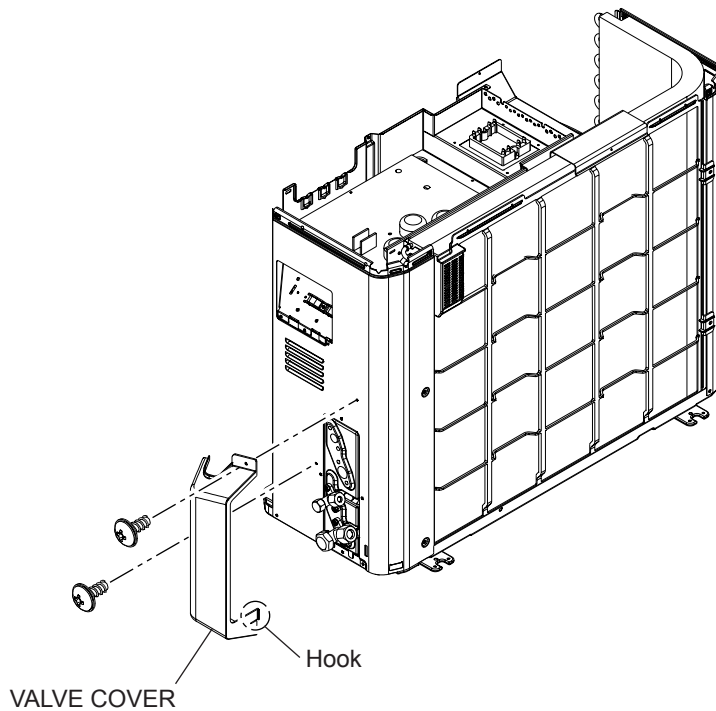


6. RIGHT PANEL removal

- Remove the 9 mounting screws.

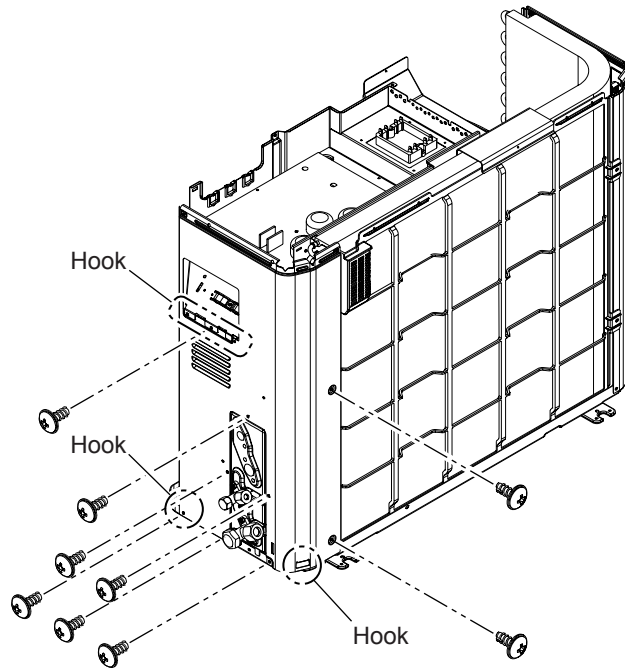

- Remove the RIGHT PANEL by sliding upward.

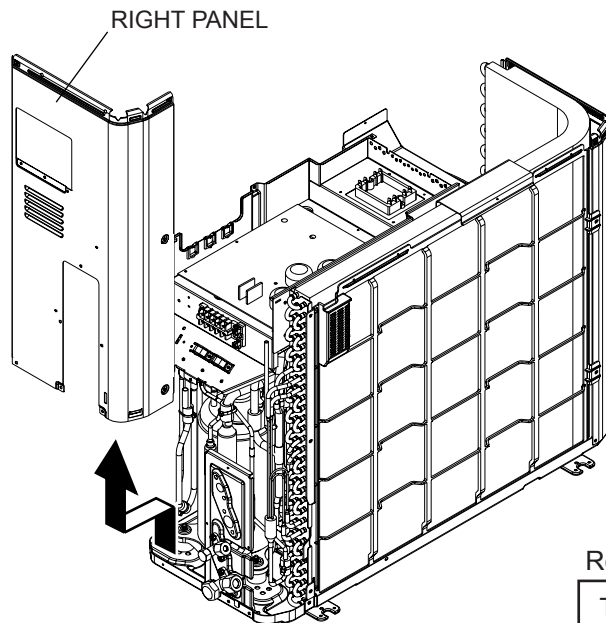



Replaceable Component

Thermistor (Heat exchanger temp.)


1-2 For AO*30/ 36LMAWL

1-2-1 PARTS LAYOUT DRAWING

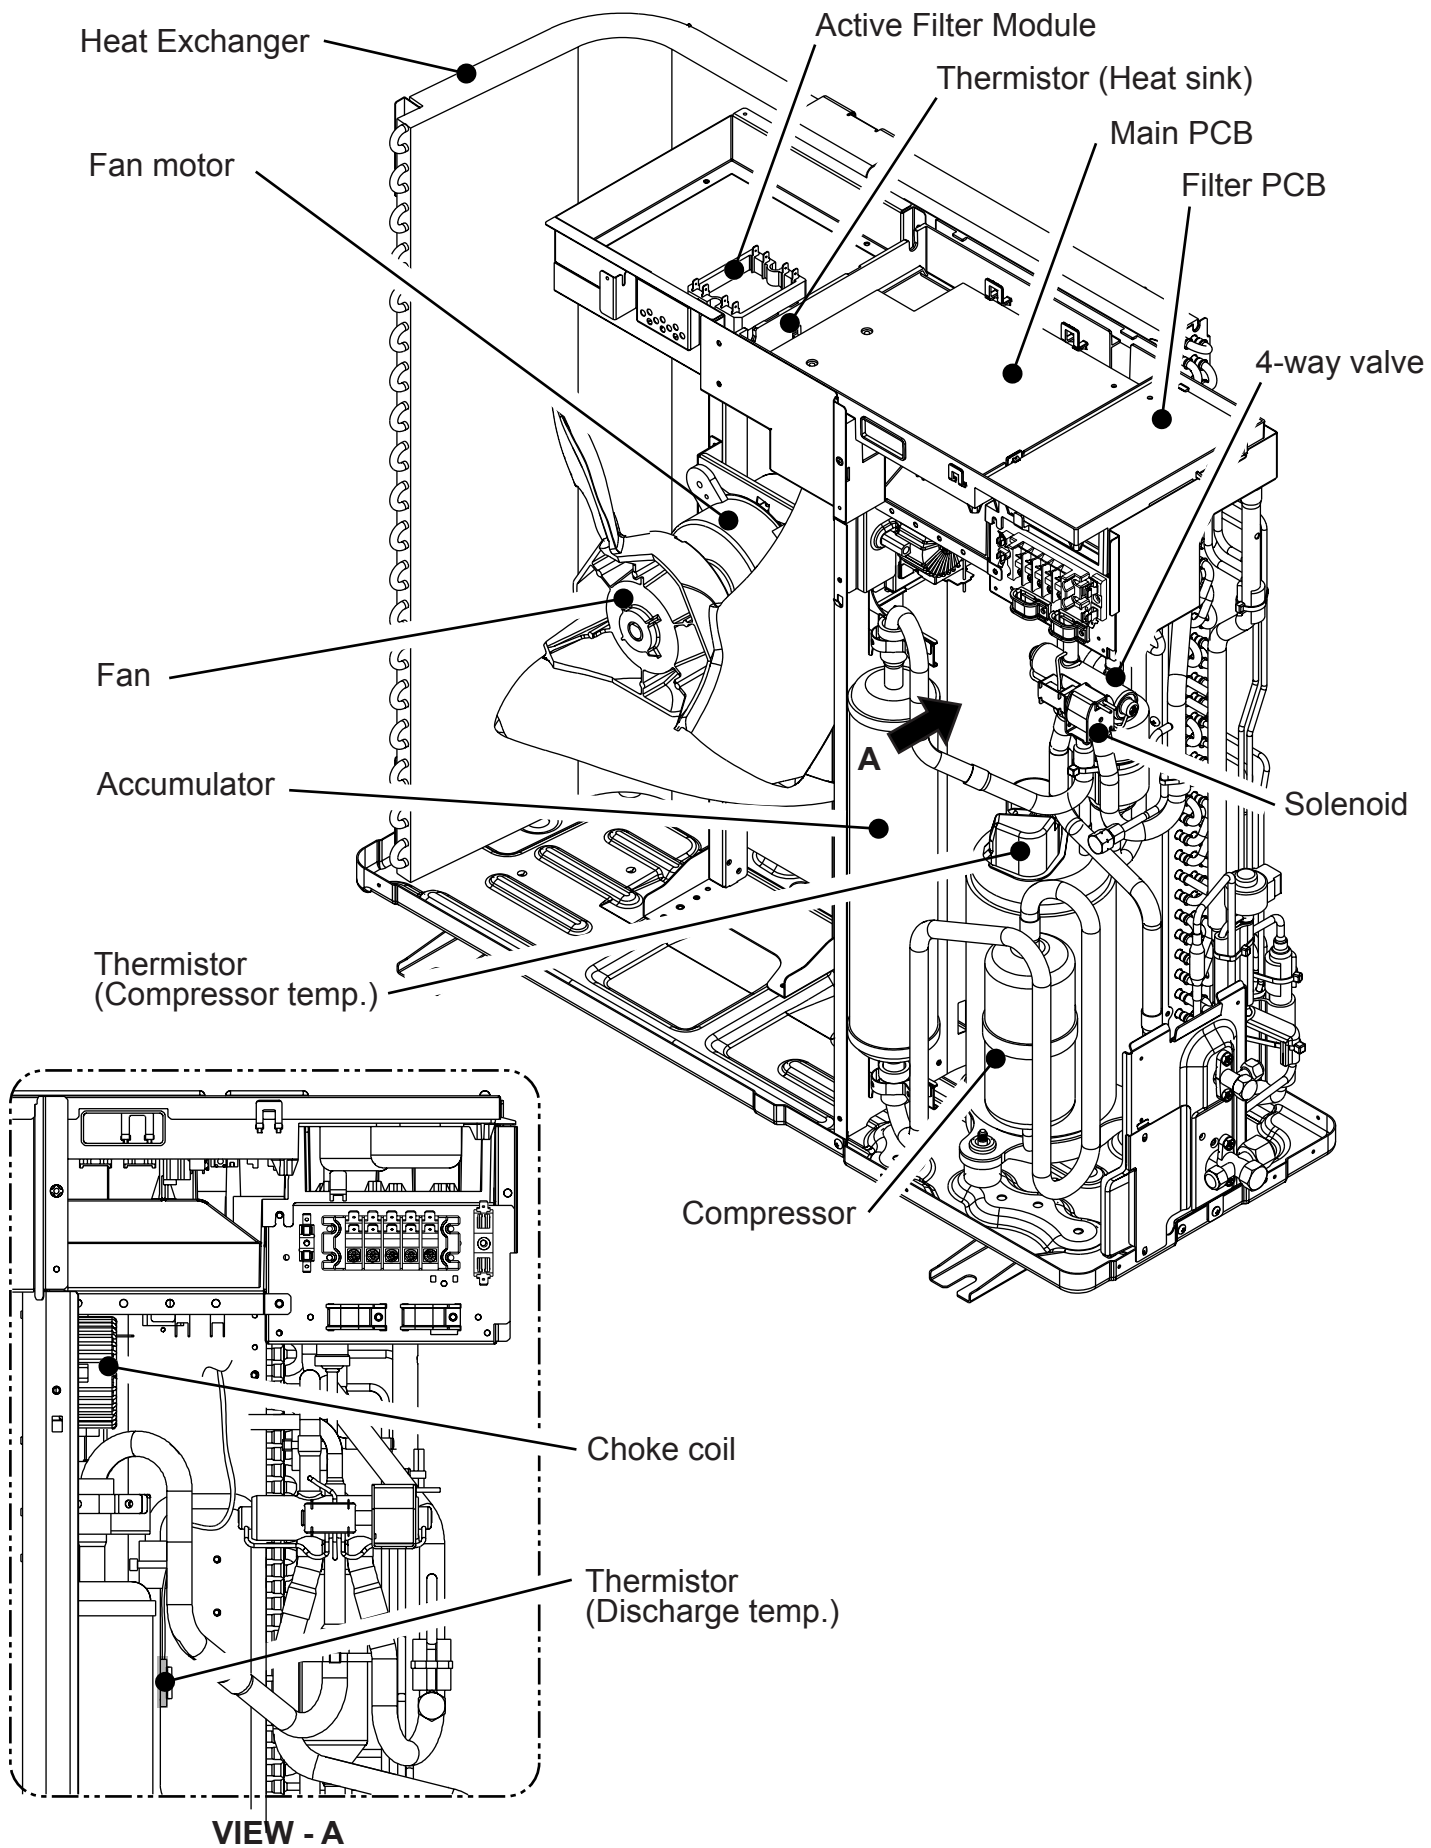

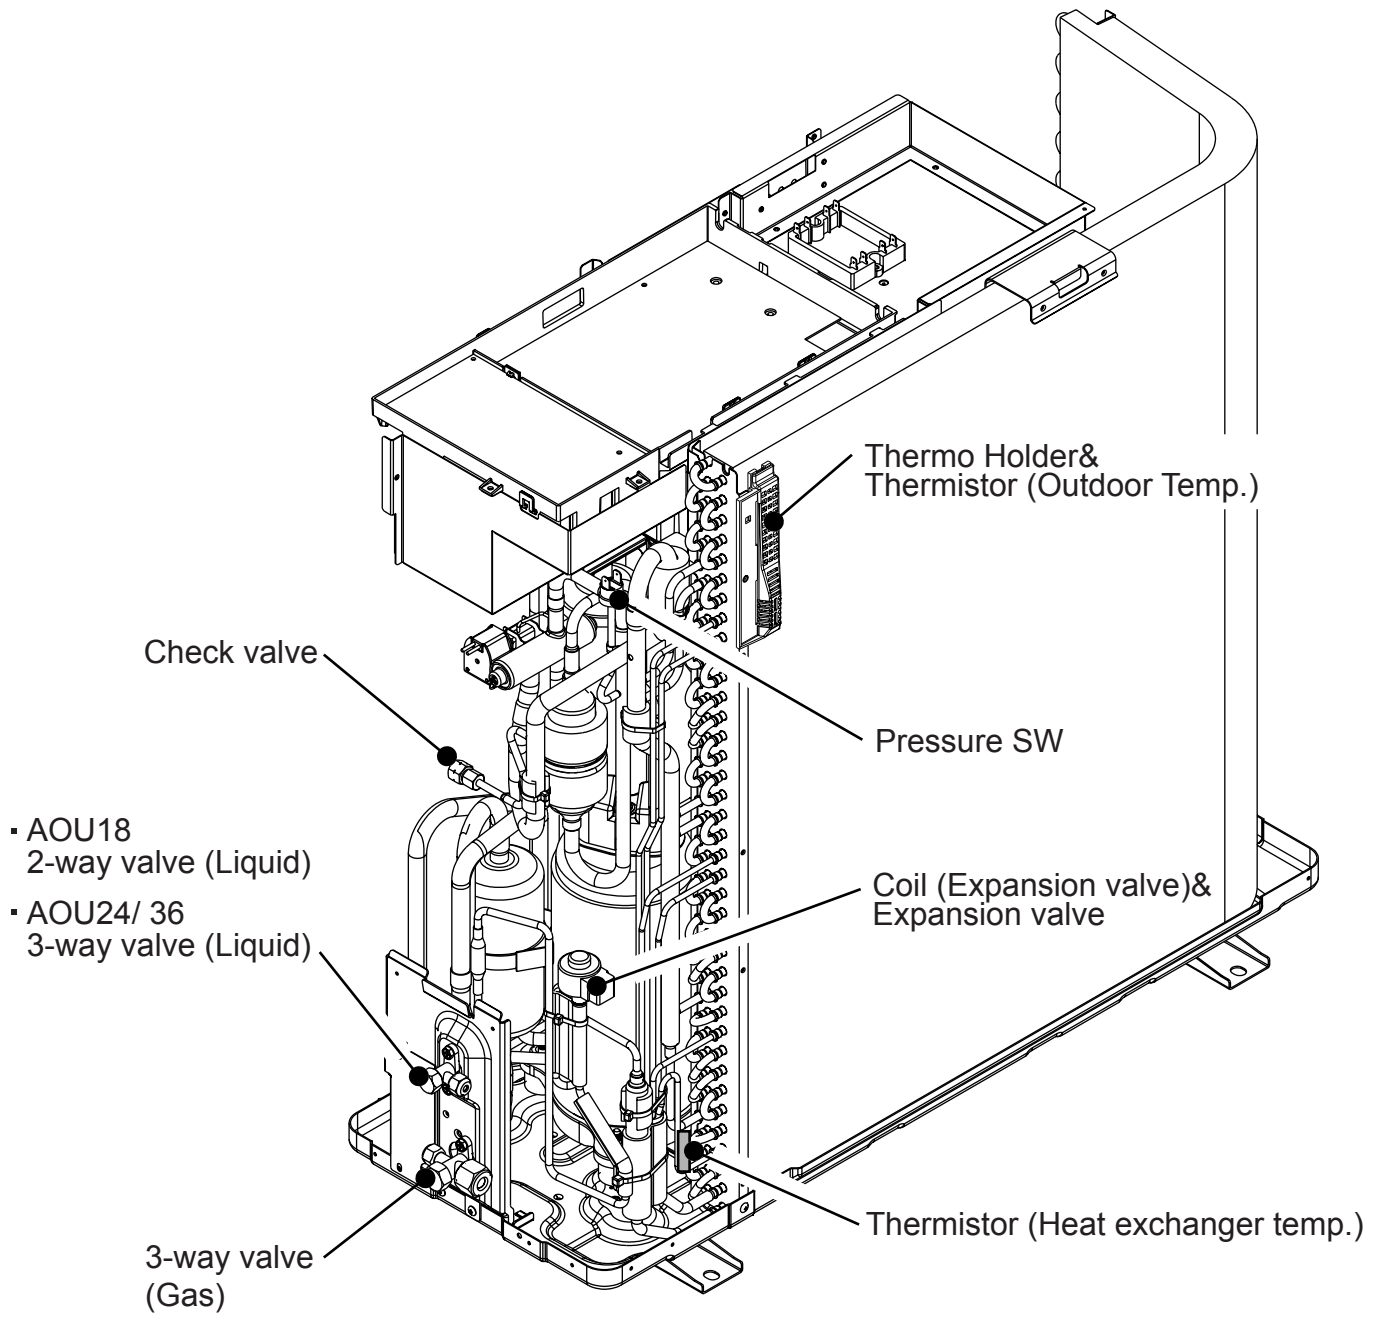

1-2-2 WIRING (For AO*30/ 36LMAWL)

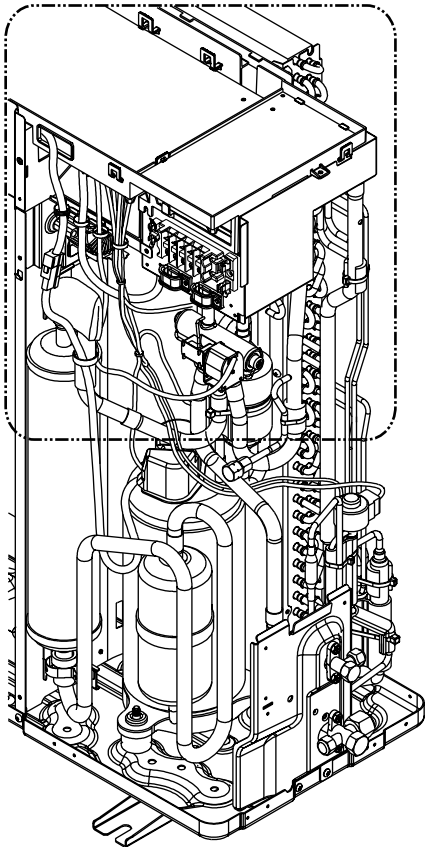


CLAMP & BIND
 Thermistor (Discharge temp.) wire
 Thermistor (Outdoor temp.) wire
 Thermistor (Compressor temp.) wire
 Thermistor (Heat exchanger temp.) wire
 Coil (Expansion valve) wire
 Pressure SW wire

CLAMP
 (Compressor wire)

CLAMP
 (Fan motor wire)

CLAMP
 (Solenoid wire)


BIND
 (Compressor wire
 & Solenoid wire)

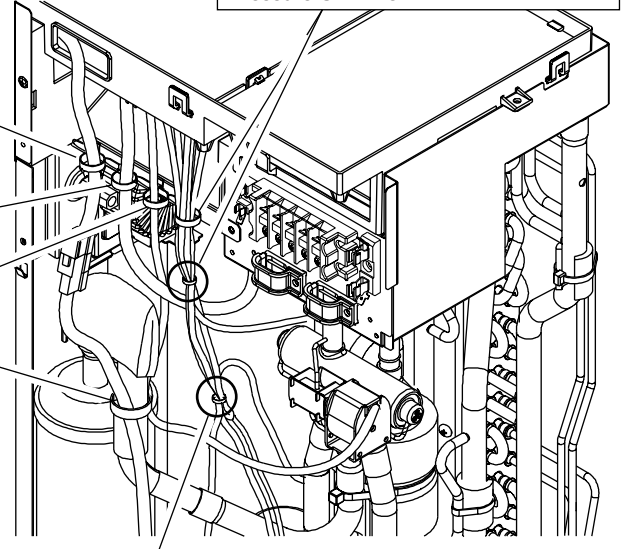

BIND
 (Thermistor (Discharge temp.))
 (Thermistor (Compressor temp.))
 (Thermistor (Heat exchanger temp.))
 (Coil (Expansion valve))


ENLARGED DETAIL

Thermistor(Outdoor temp.)

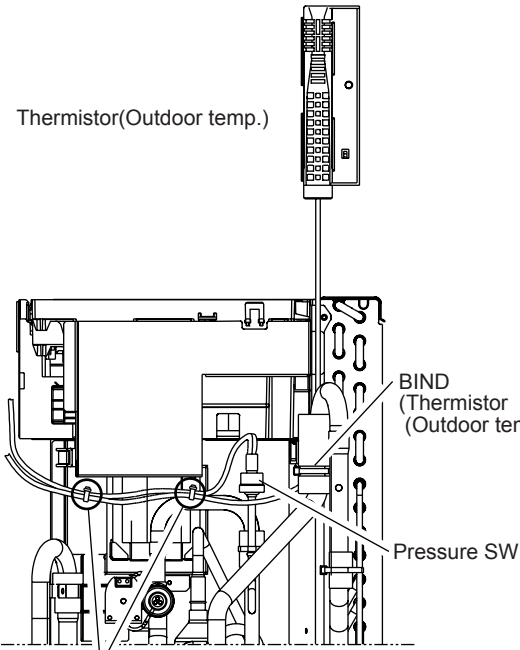


BIND
 (Pressure SW wire &
 Thermistor(Outdoor temp.))

VIEW - B

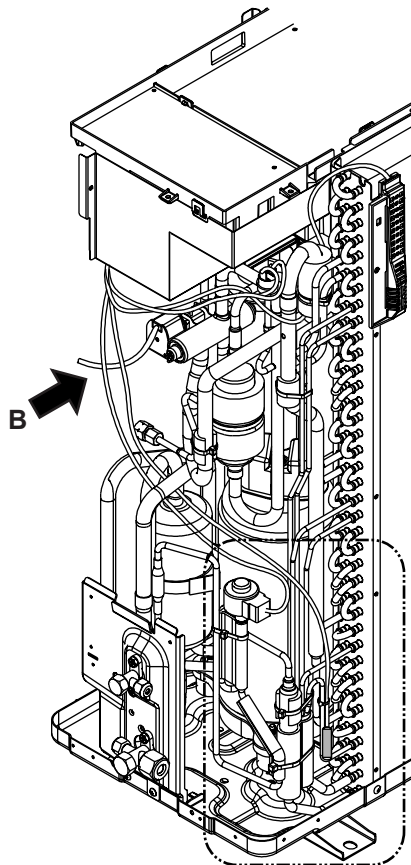

Coil (Expansion valve)

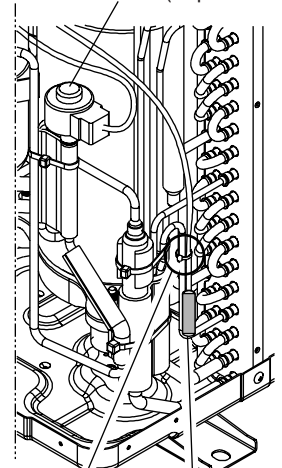


Thermistor
 (Heat exchanger temp.)
BIND
 (Thermistor
 (Heat exchanger temp.))

ENLARGED DETAIL

1-2-3 DISASSEMBLY PROCESS (For AO*30/ 36LMAWL)

1. SERVICE PANEL removal

- Remove the 2 mounting screws.
- Remove the SERVICE PANEL by sliding downward.

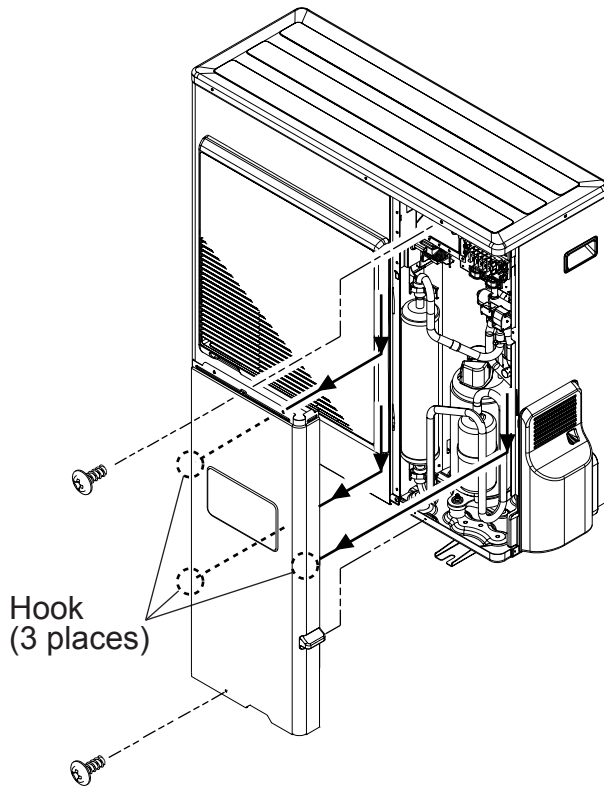


Replaceable Component


Compressor
Accumulator
4-way valve
Solenoid
Thermistor (Compressor temp.)
Thermistor (Discharge temp.)
Thermistor (Outdoor temp.)
Thermistor (Heat exchanger temp.)
Pressure SW
Coil (Expansion valve)

2. TOP PANEL removal

- Remove the 7 mounting screws.
- Remove the TOP PANEL upward.

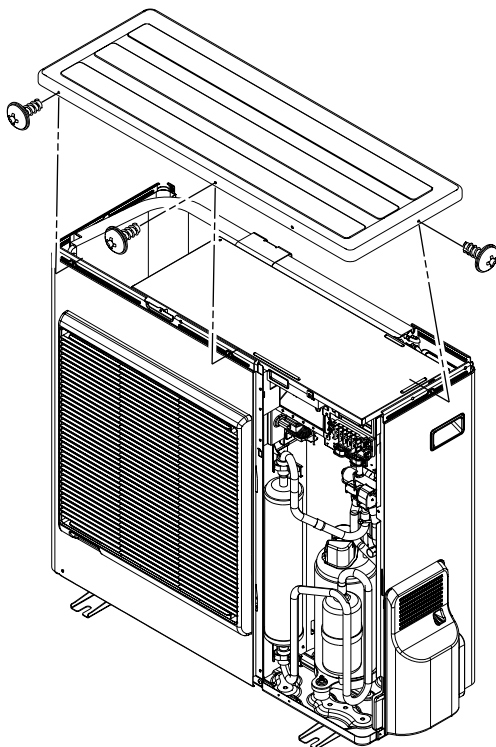




FRONT VIEW

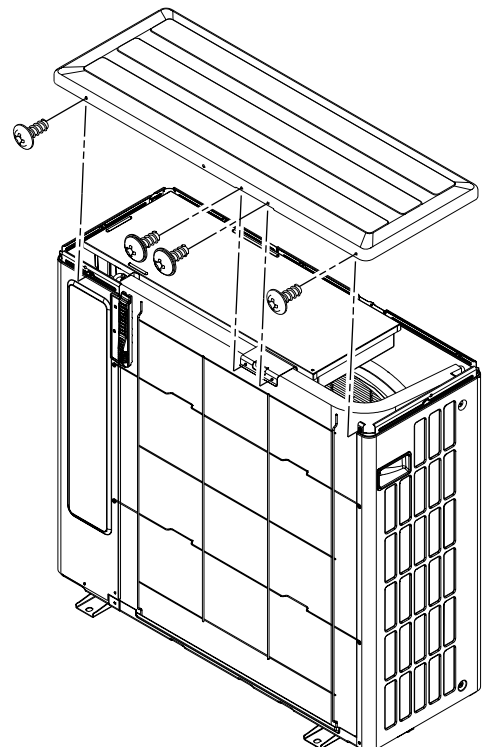


REAR VIEW

3. INVERTER BOX removal


- Remove the 4 mounting screws.
- Remove the connectors and cords. (Refer to VIEW -C,-D)
- Remove the INVERTER BOX upward.

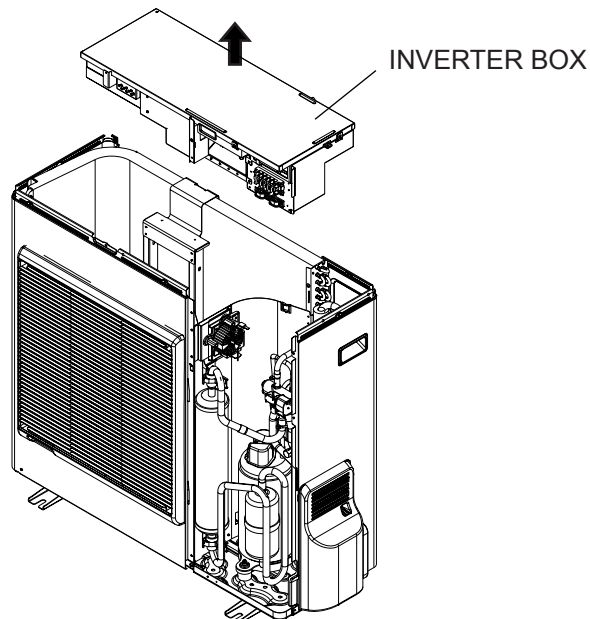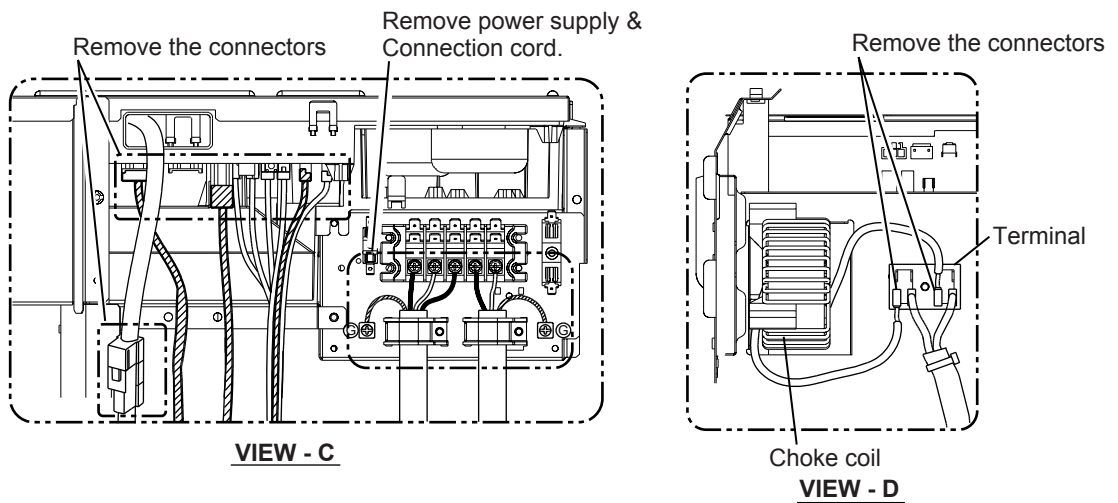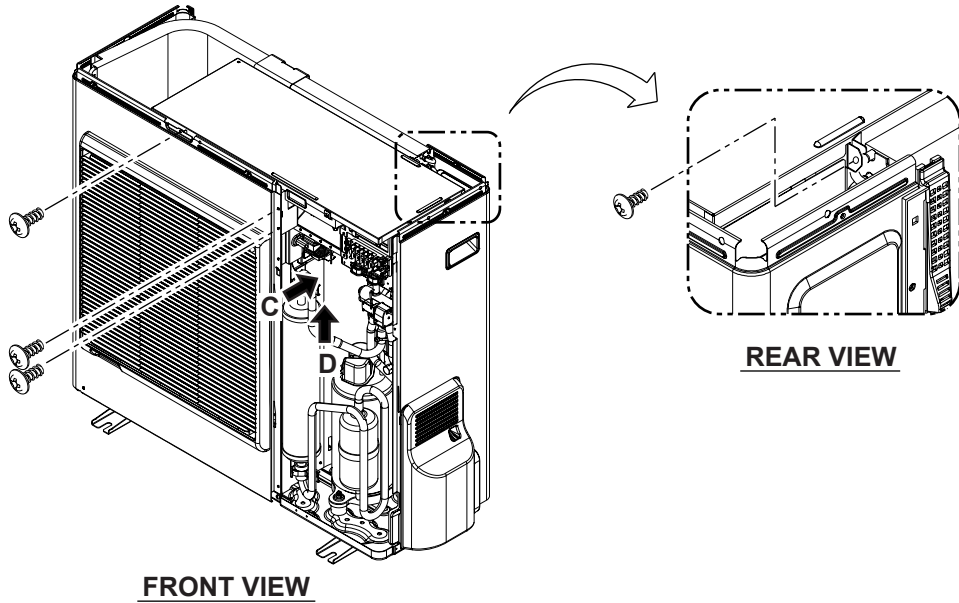

- Remove the 1 mounting screw.
- Remove the INVERTER BOX COVER upward.

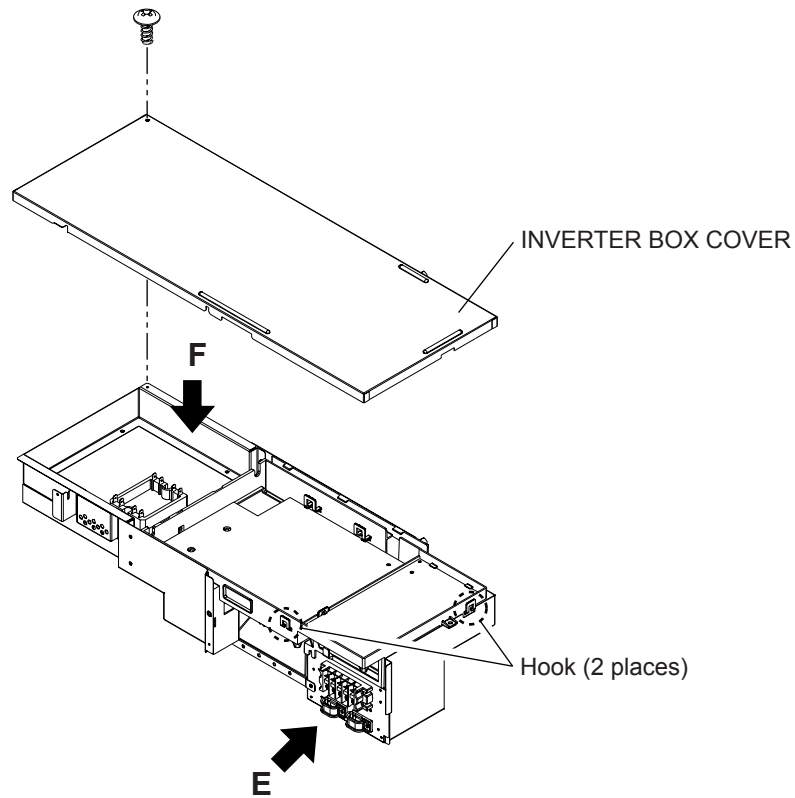


-
- Remove the connector and cords.

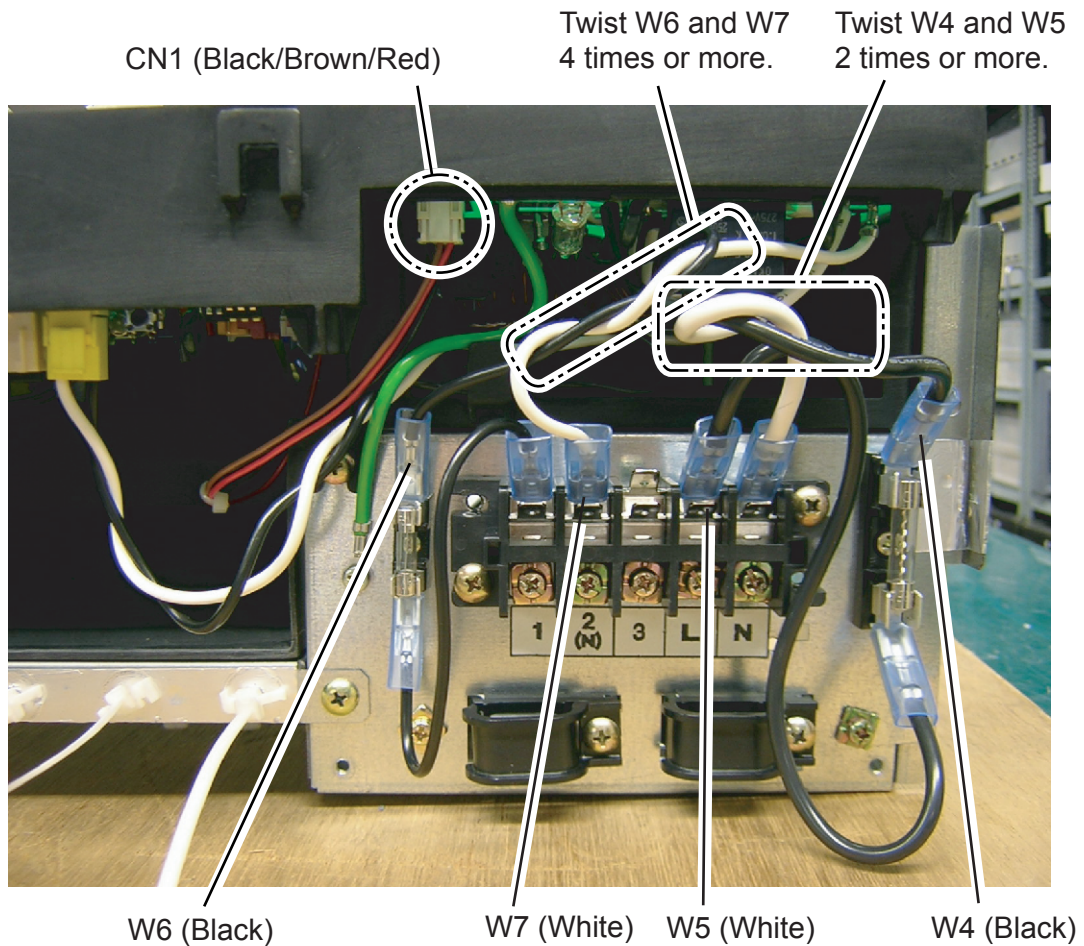


VIEW - E

Remove the connector and cords.


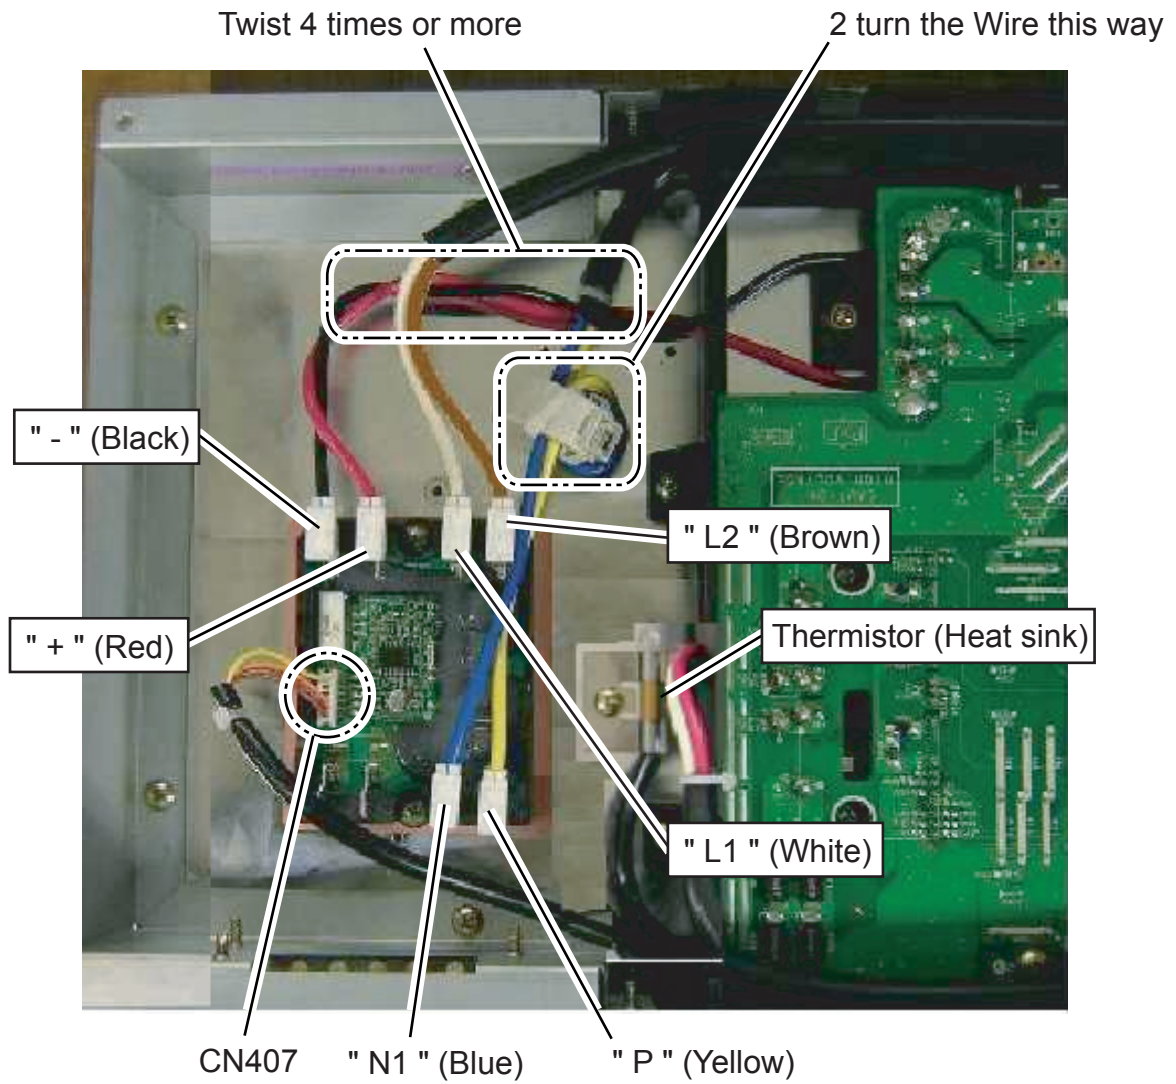


VIEW - F

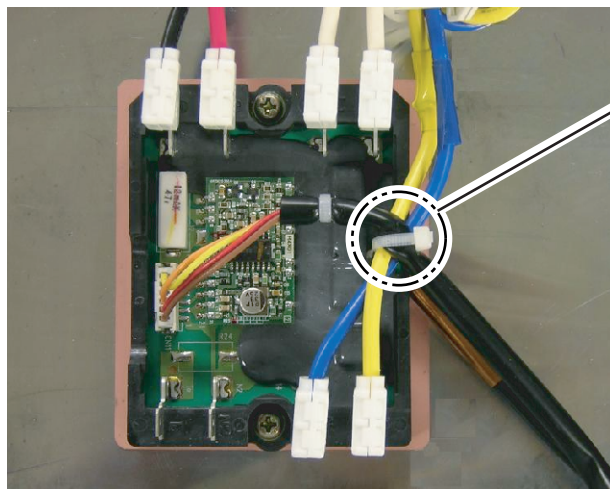


DETAIL

- Remove the 6 mounting screws.
- Remove the INVERTER BOX A upward.

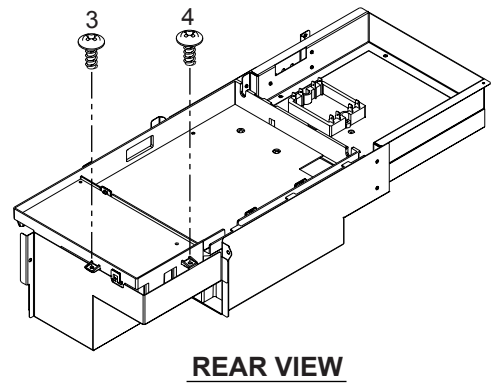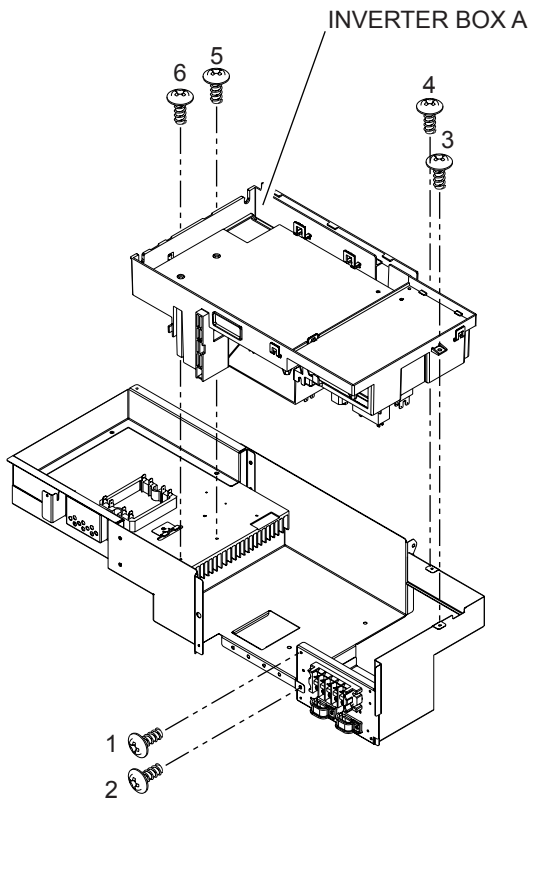

REAR VIEW

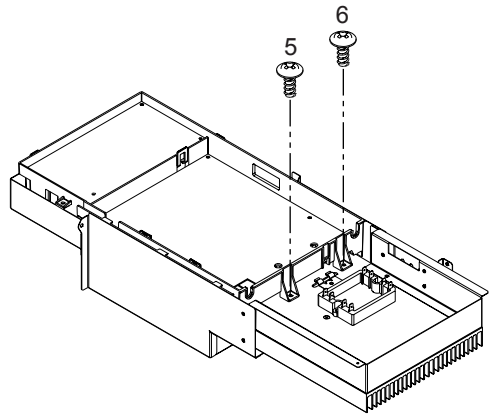


LEFT SIDE VIEW

Main PCB

- Remove the 1 mounting screw.
- Remove the Main PCB upward.

Filter PCB

- Remove the 2 mounting screws.
- Remove the Filter PCB upward.

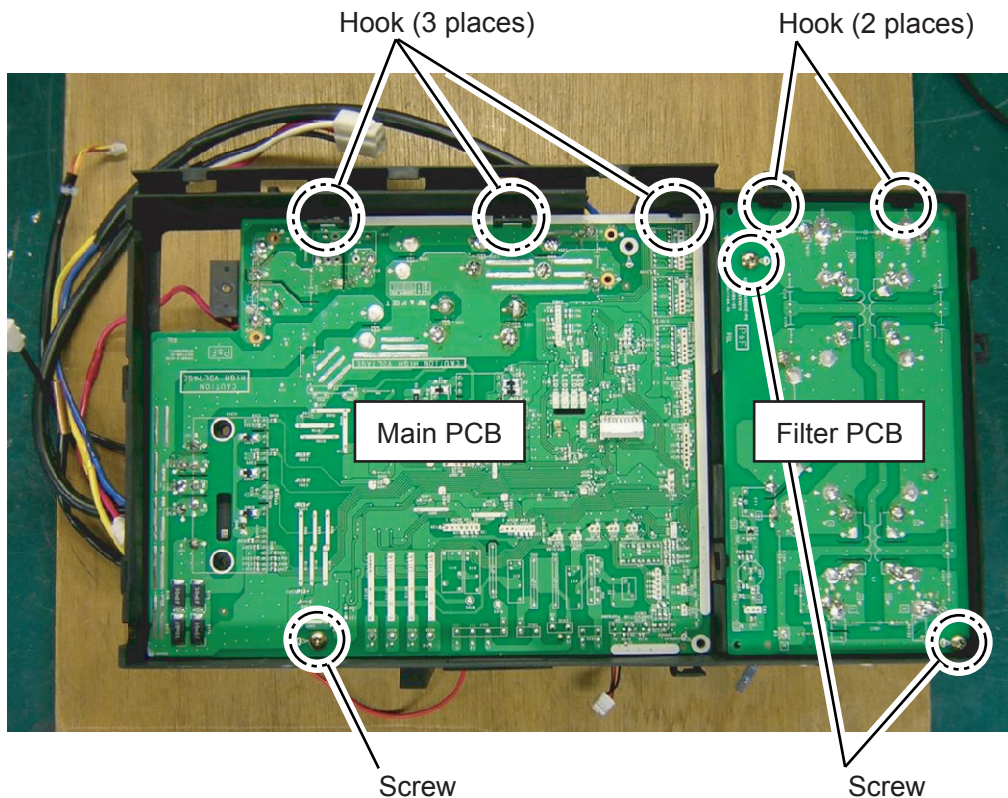

1-2-4 ASSEMBLY PROCESS of INVERTER UNIT (For AO*30/ 36LMAWL)

1. FILTER PCB

- As shown in Fig.1, assemble FILTER PCB to INVERTER BOX A.
- As shown in Fig.2, pull out the wires of FILTER PCB.

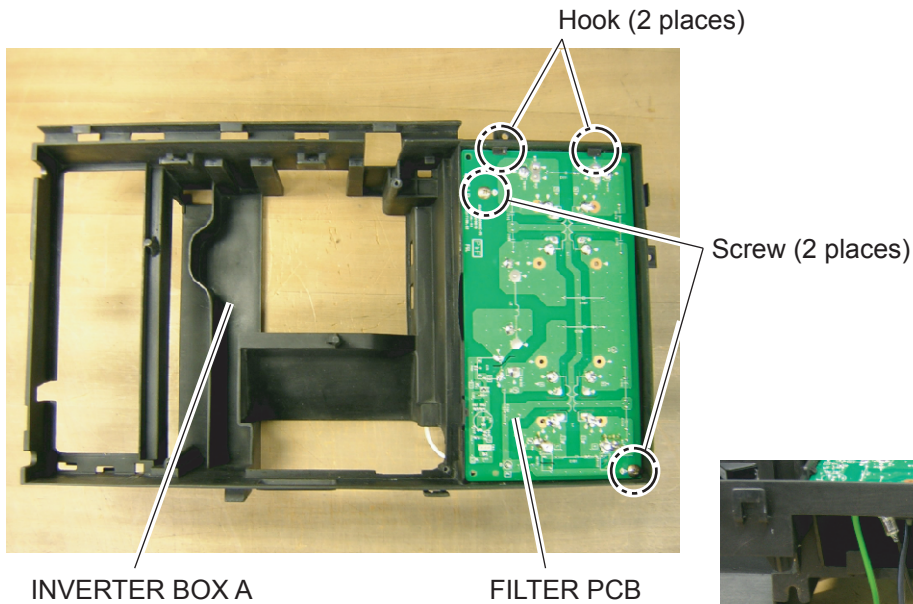


Fig.1


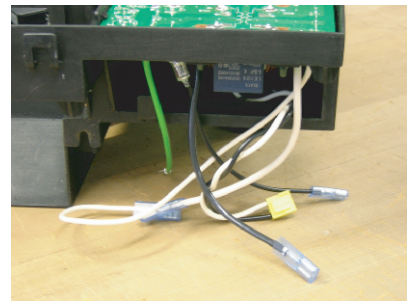


Fig.2

2. MAIN PCB

- As shown in Fig.3, temporarily fix MAIN PCB to INVERTER BOX A.
- After it is temporary fix of MAIN PCB, As shown in the Fig 4 - 7, pull out the wires of MAIN PCB.

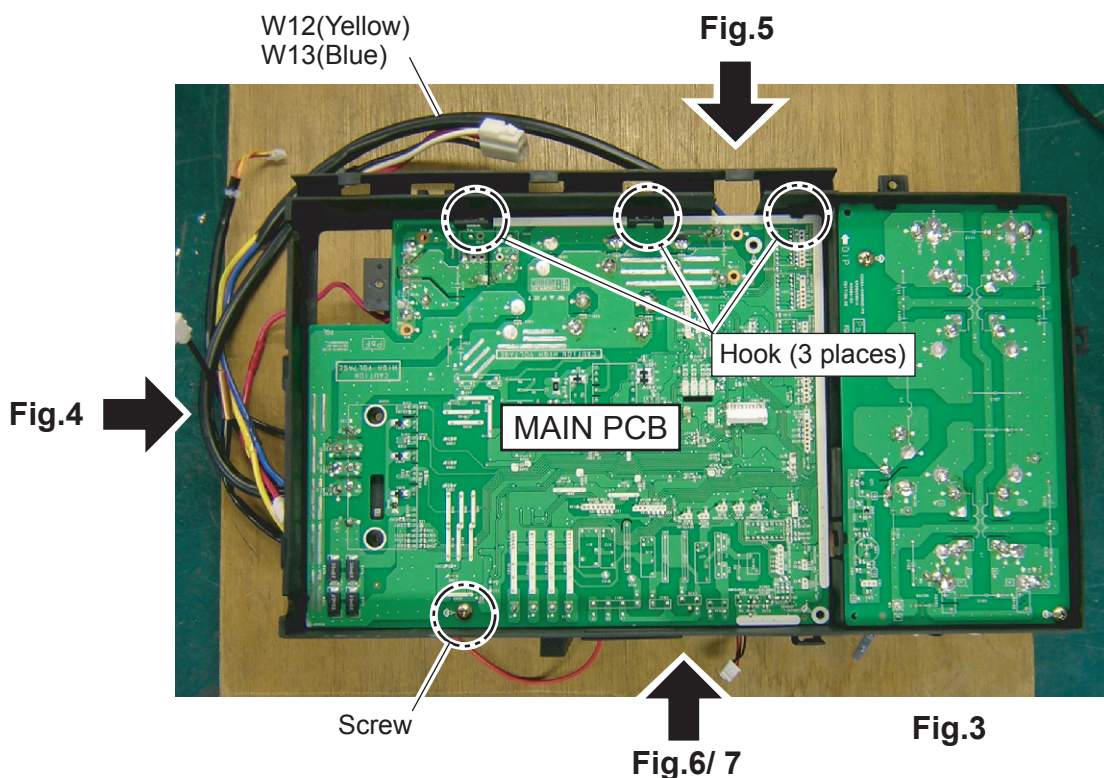

- As shown in Fig.4, pull out the wires.

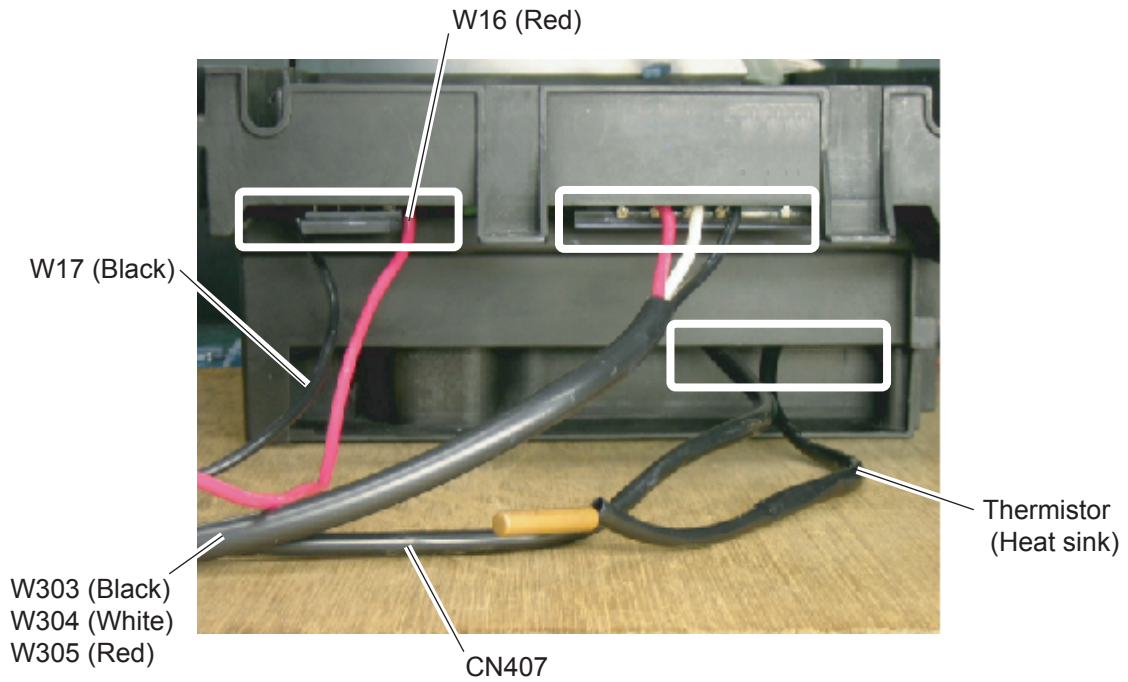


Fig. 4

- As shown in Fig.5, pull out the wires and fix them.

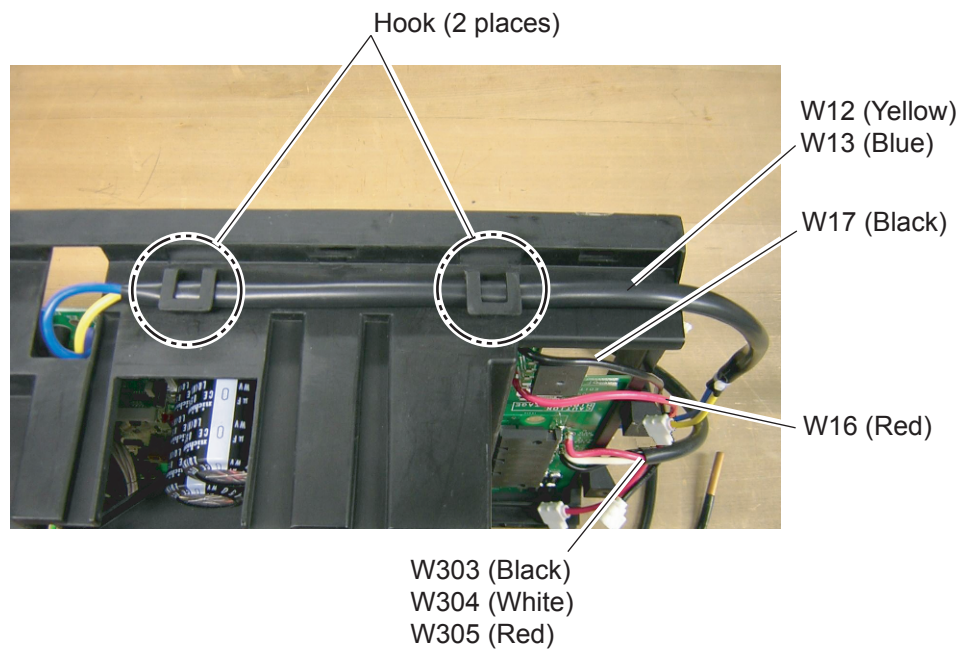


Fig. 5

- As shown in Fig.6, pull out the wires.

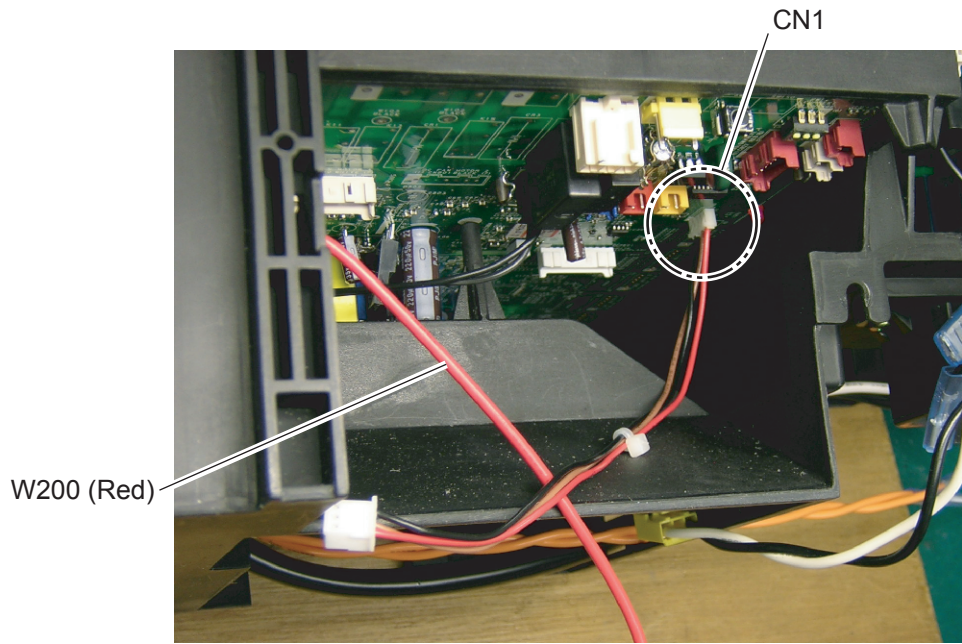


Fig. 6

- As shown in Fig.7, pull out the wires.


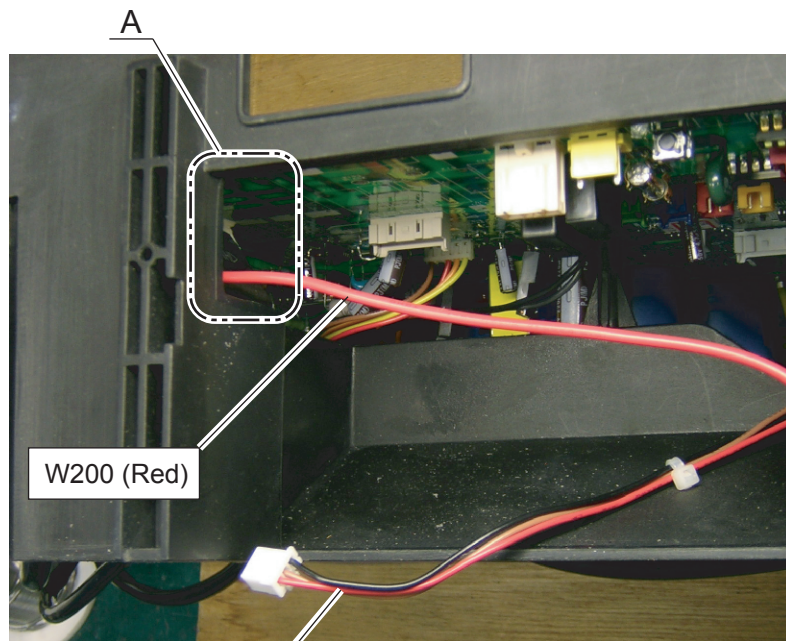


Fig. 7

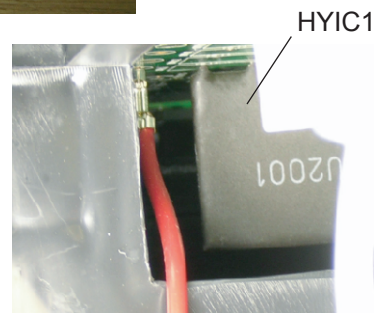

Don't come in contact with HYIC1.

DETAIL - A

- As shown in Fig.8, connect wires.

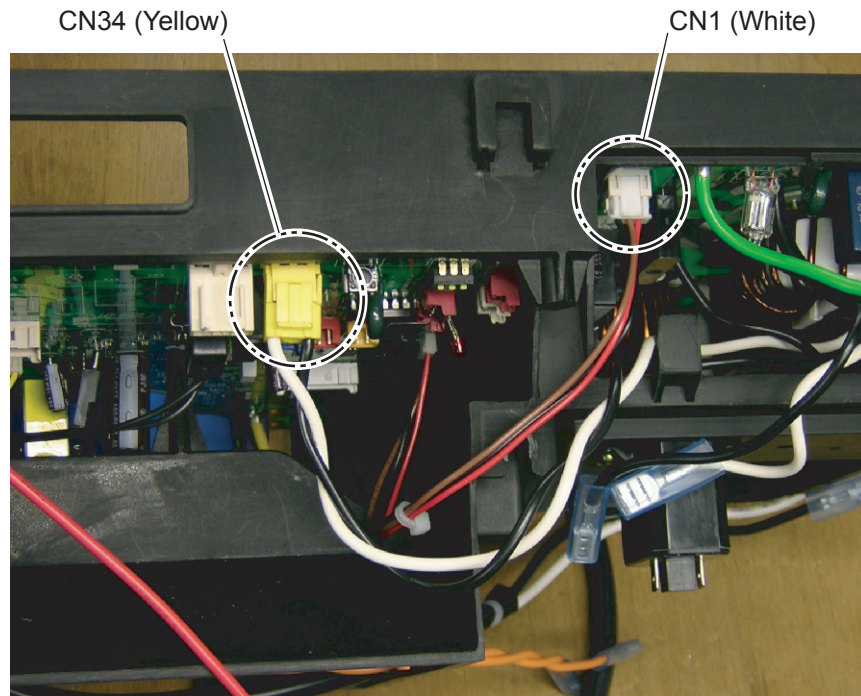


Fig. 8

-
- As shown in Fig.9, connect wires.

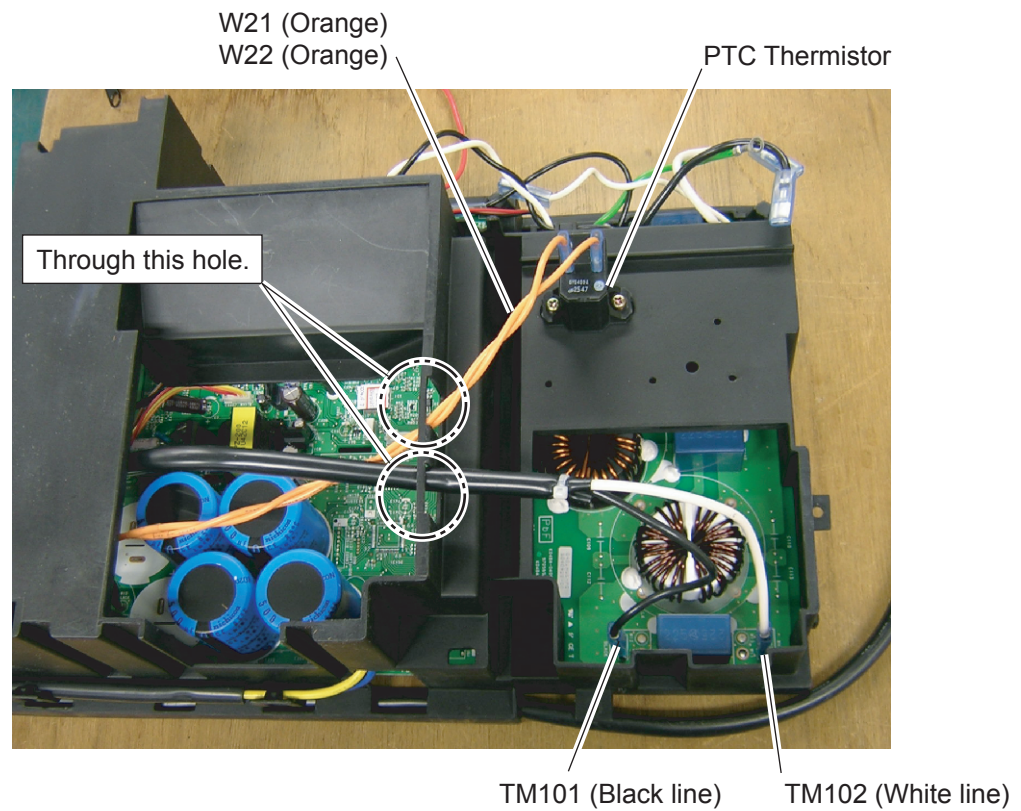


Fig. 9

▪ As shown in Fig.10, fix the wire to INVERTER BOX A.

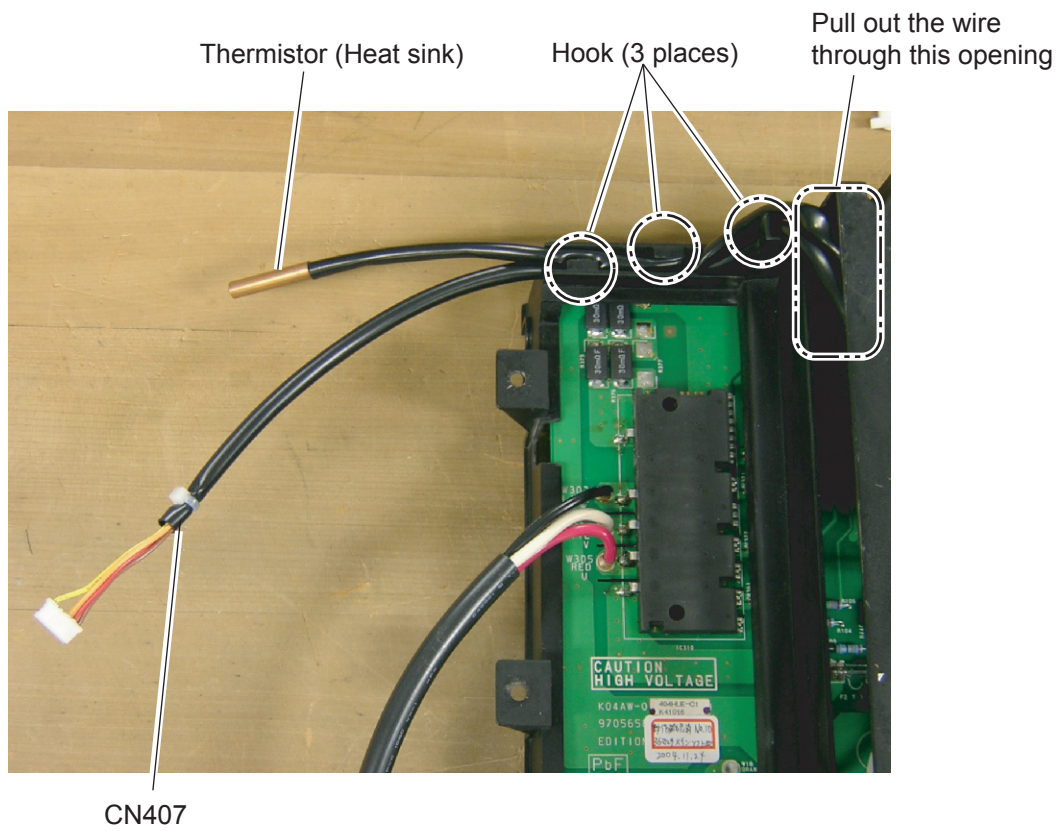


Fig. 10

▪ As shown in the figures, set wire with connector and bind it to INVERTER BOX A.



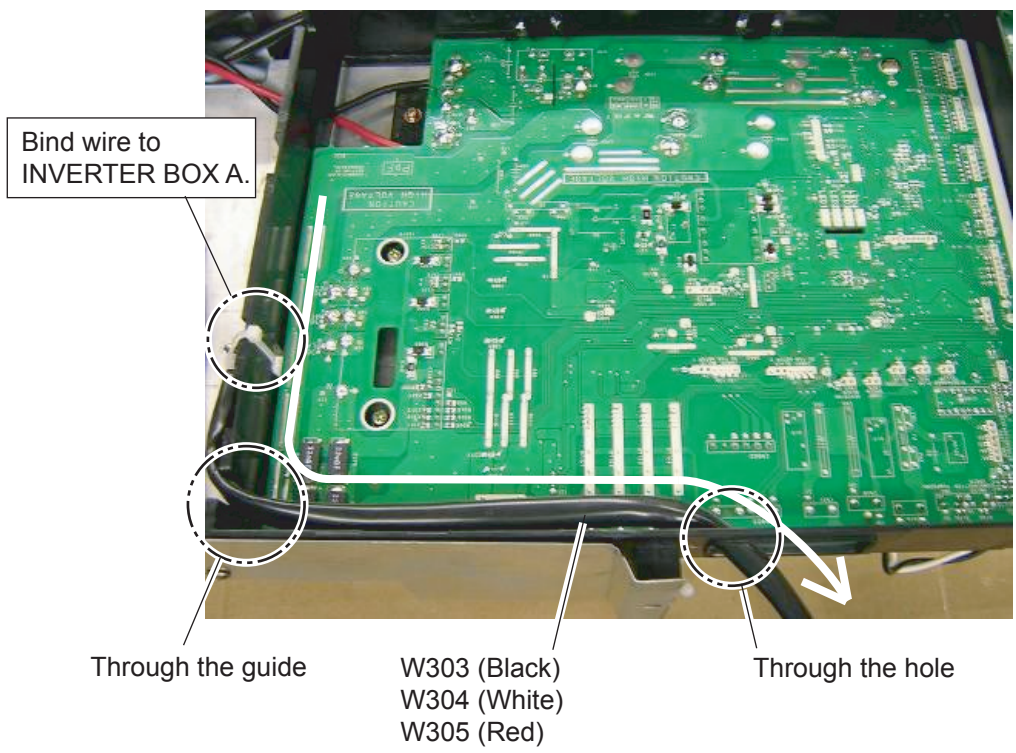


Fig. 11


1-3 For AO*45/ 54LJBYL

1-3-1 PARTS LAYOUT DRAWING


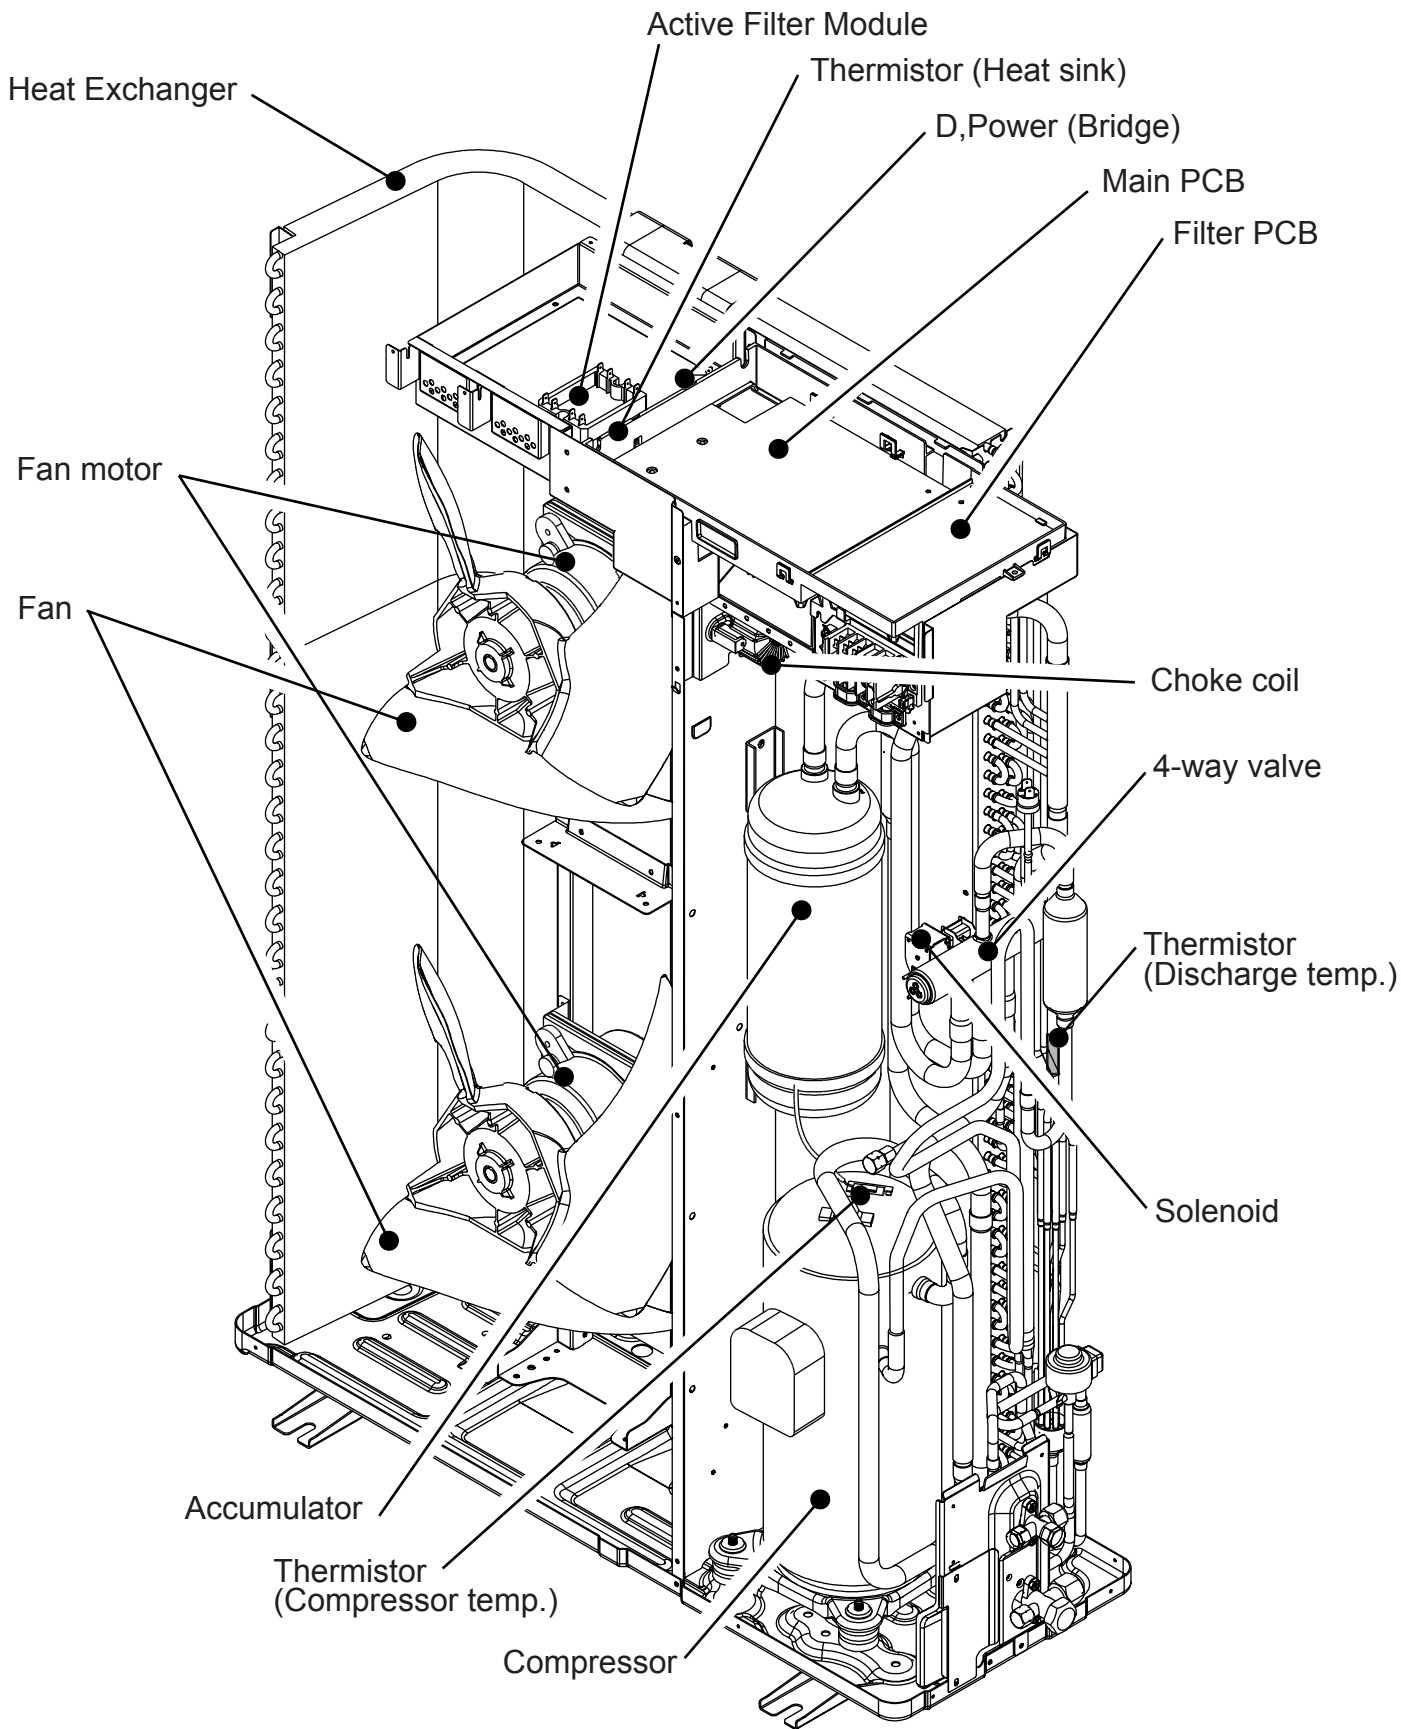


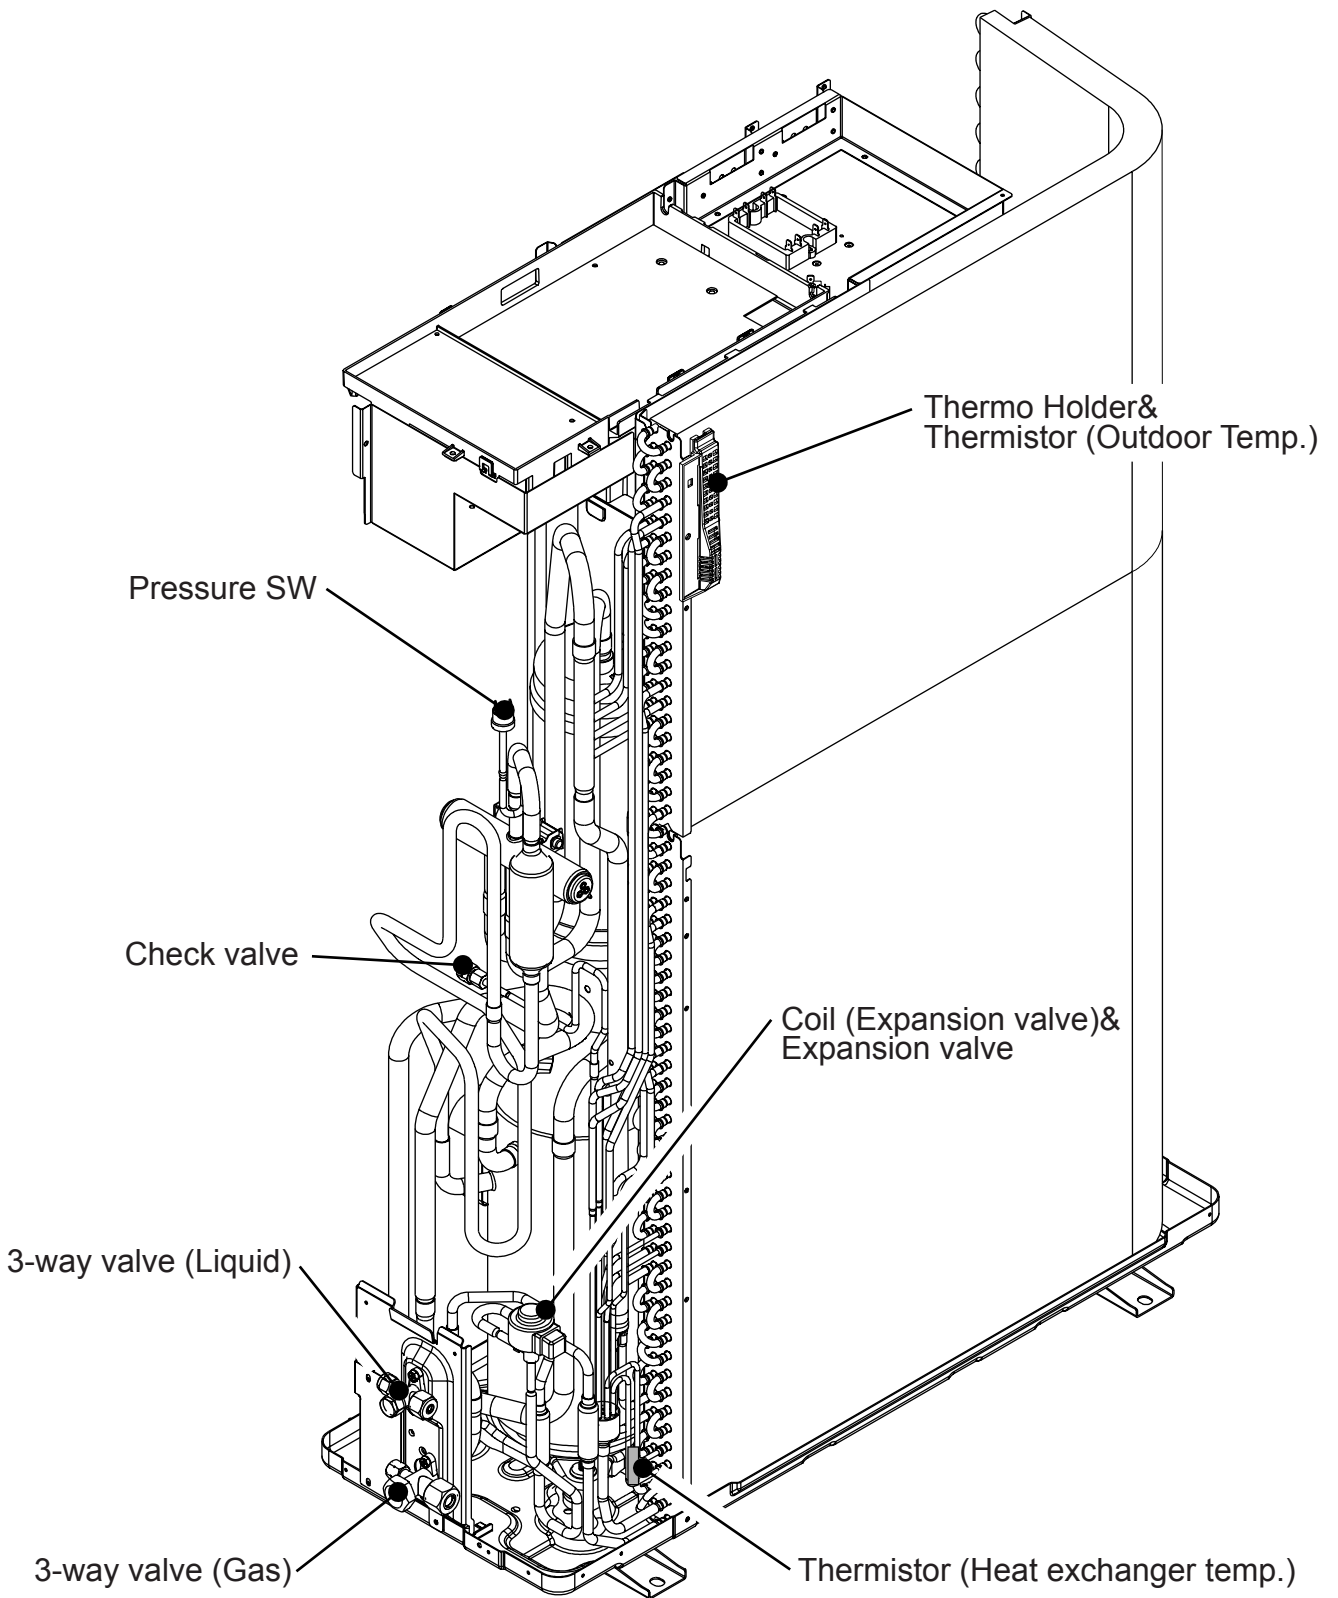

1-3-2 WIRING (For AO*45/ 54LJBYL)

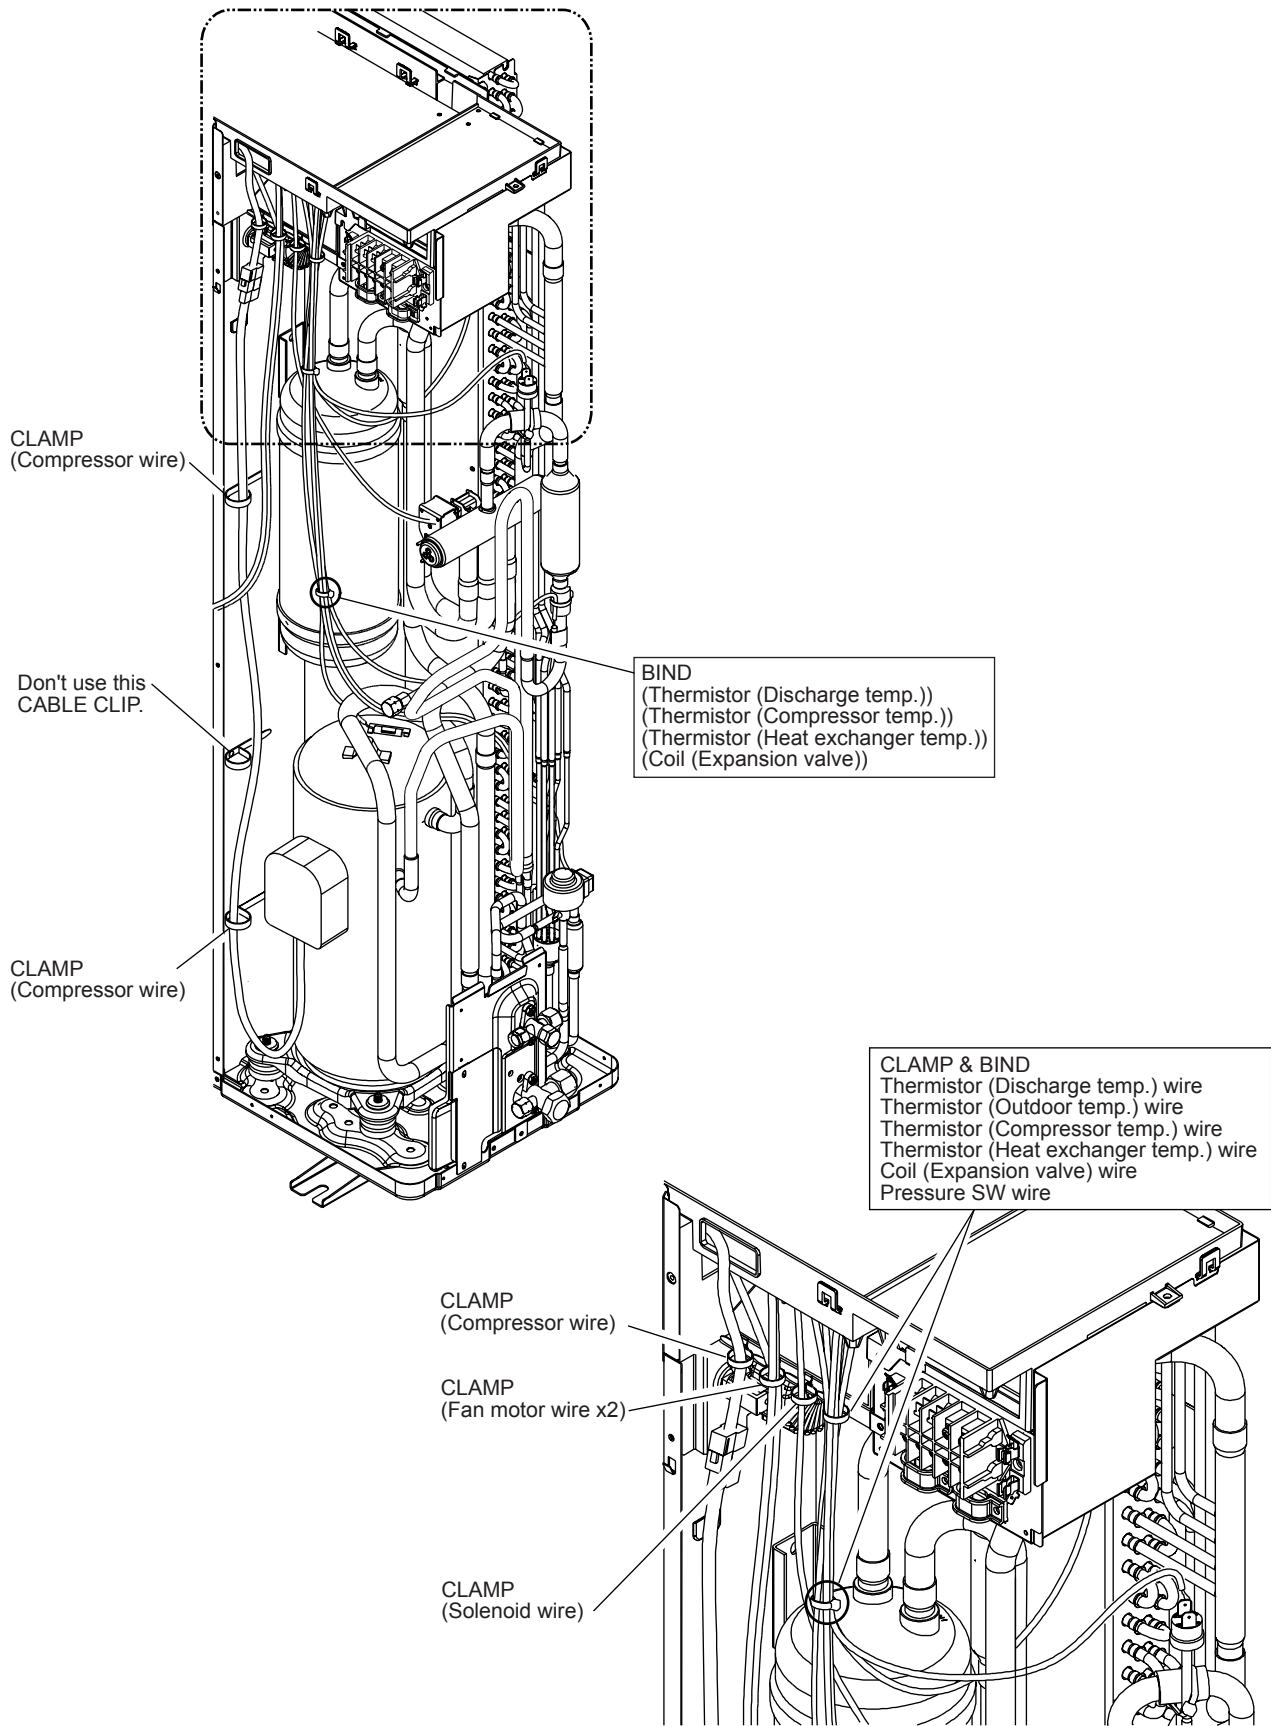

ENLARGED DETAIL

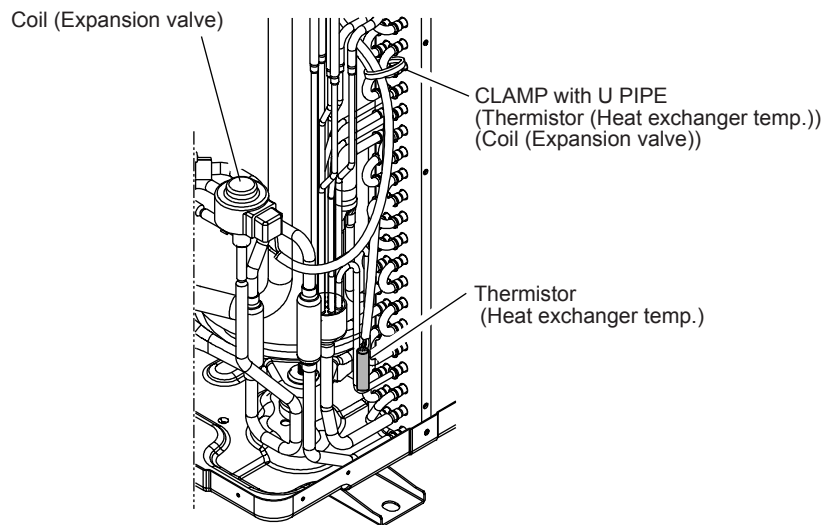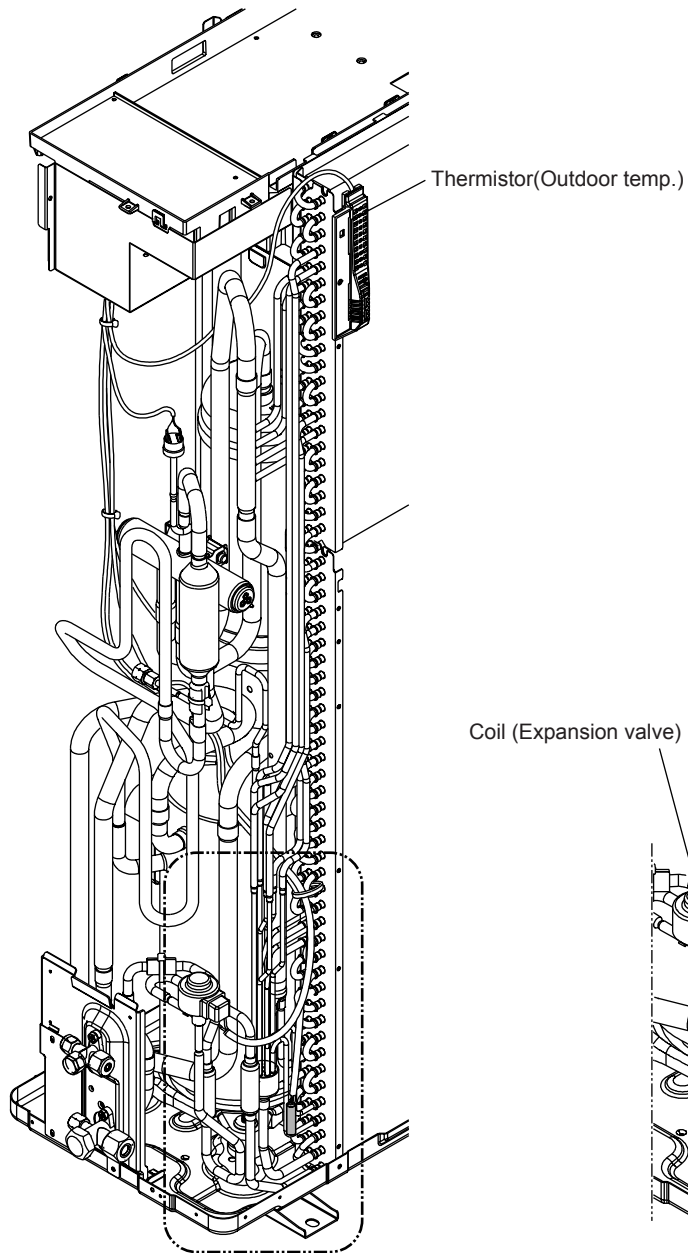


ENLARGED DETAIL

1-3-3 DISASSEMBLY PROCESS (AO*45/ 54LJBYL)

1. SERVICE PANEL removal

- Remove the 2 mounting screws.
- Remove the SERVICE PANEL by sliding downward.

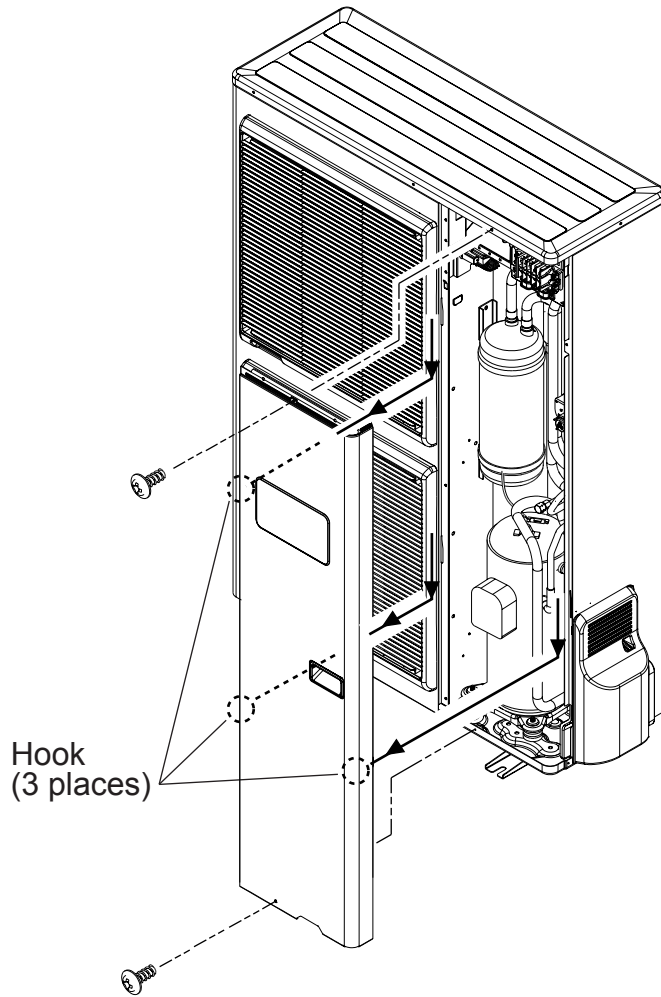


Hook
(3 places)

Replaceable Component


Compressor
Accumulator
4-way valve
Solenoid
Thermistor (Compressor temp.)
Thermistor (Discharge temp.)
Thermistor (Outdoor temp.)
Thermistor (Heat exchanger temp.)
Pressure SW
Coil (Expansion valve)

2. TOP PANEL removal

- Remove the 7 mounting screws.
- Remove the TOP PANEL upward.

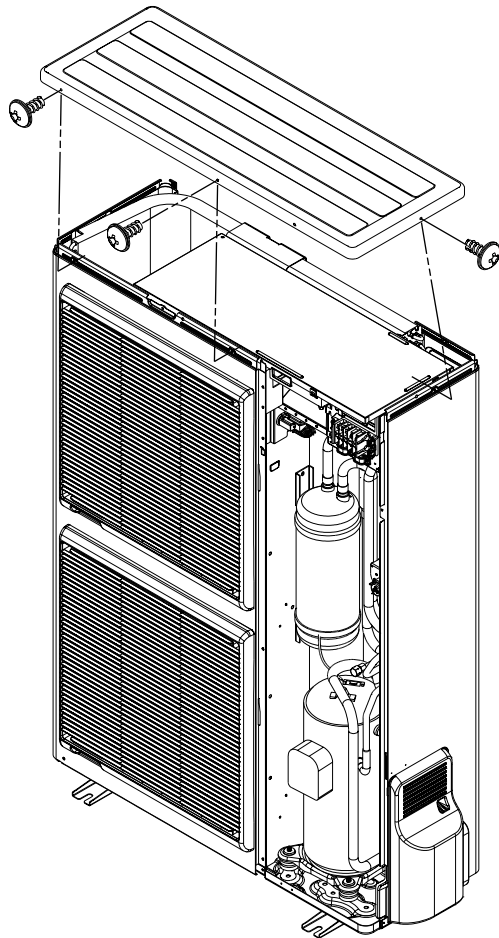


FRONT VIEW

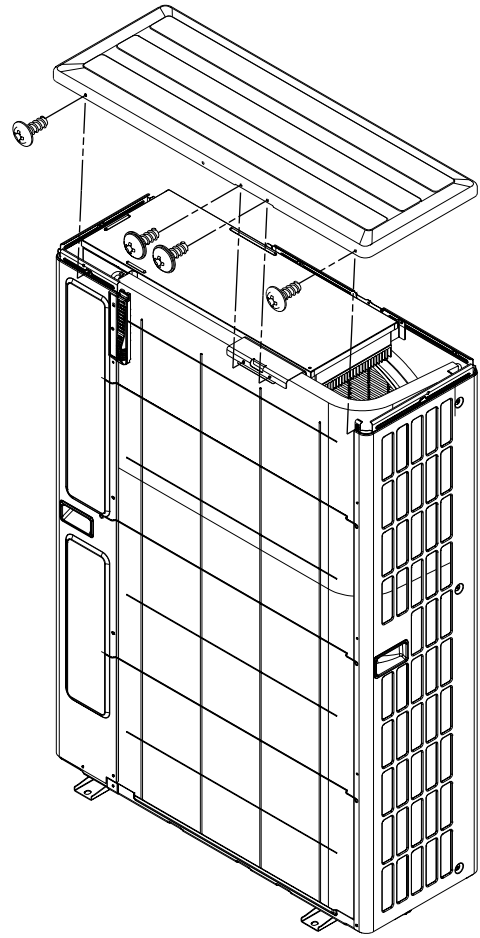

REAR VIEW


3. INVERTER BOX removal

- Remove the 4 mounting screws.
- Remove the connectors and cords. (Refer to VIEW -C,-D)
- Remove the INVERTER BOX upward.

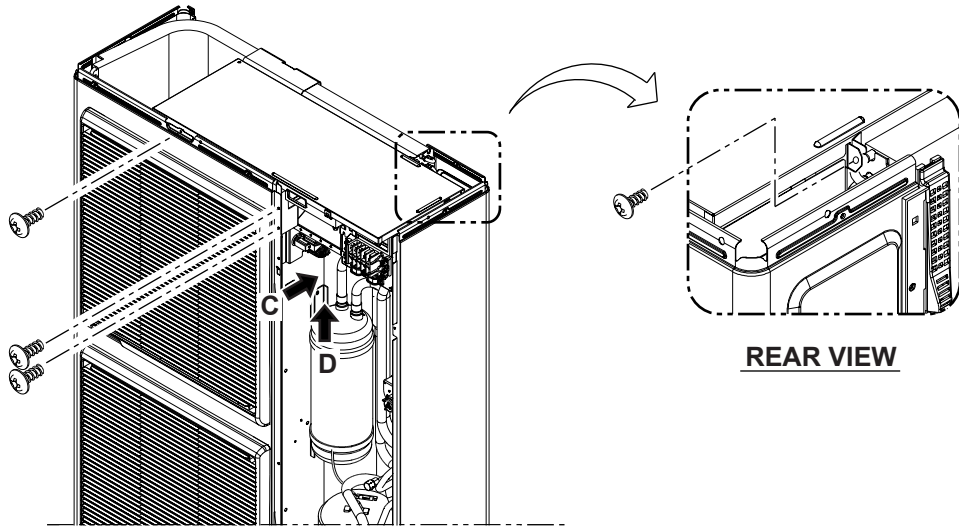

FRONT VIEW


REAR VIEW

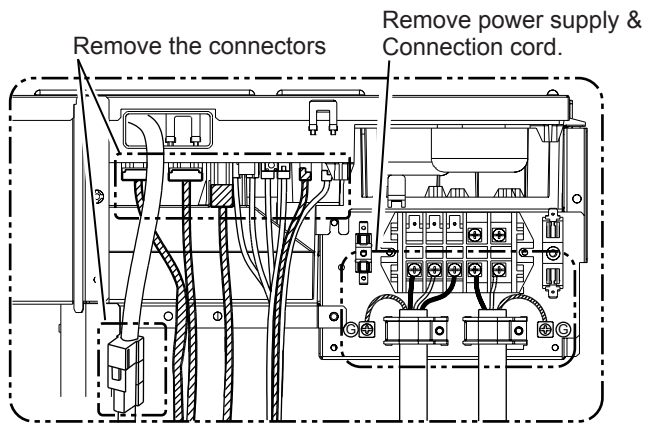

Remove the connectors

Remove power supply & Connection cord.

VIEW - C

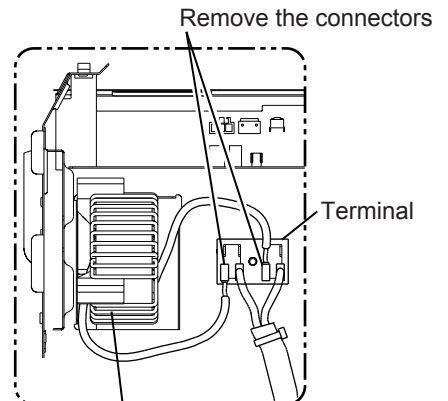


Remove the connectors

Terminal


Choke coil

VIEW - D

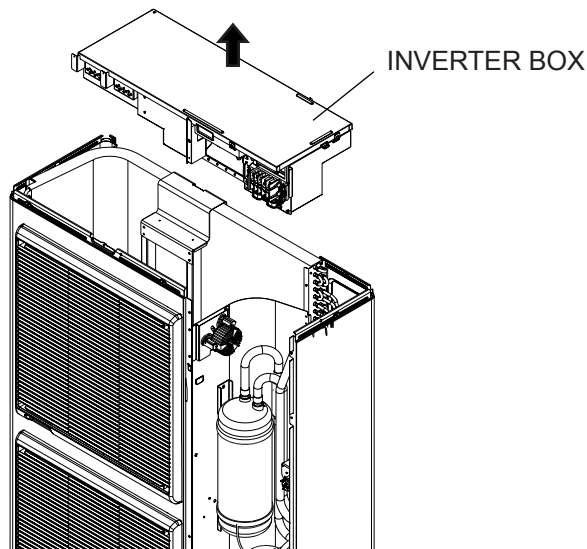


INVERTER BOX

- Remove the 1 mounting screw.
- Remove the INVERTER BOX COVER upward.

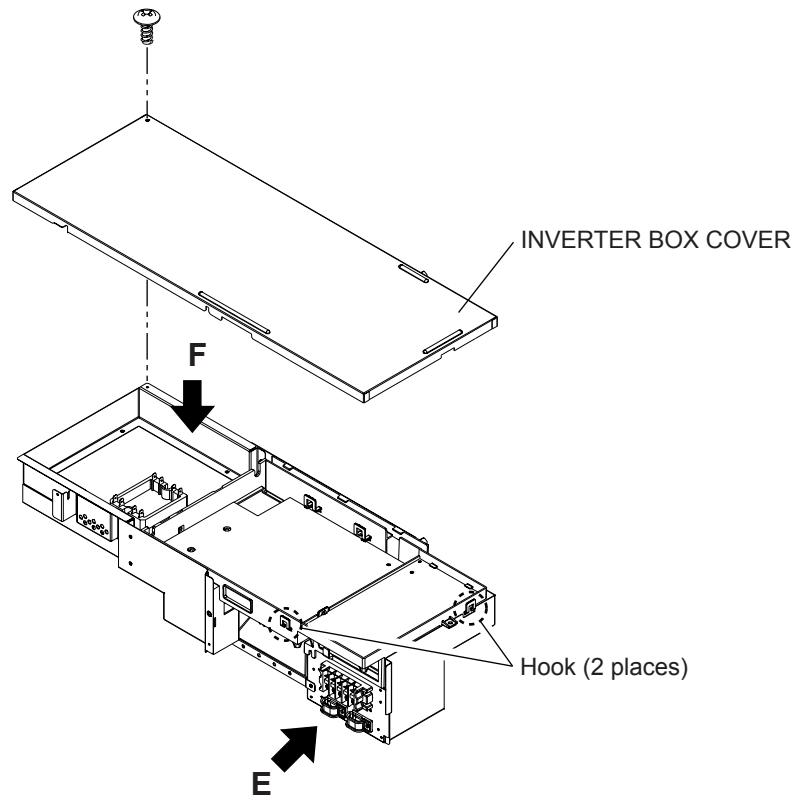

-
- Remove the connector and cords.


Twist W6 and W7
2 times or more.

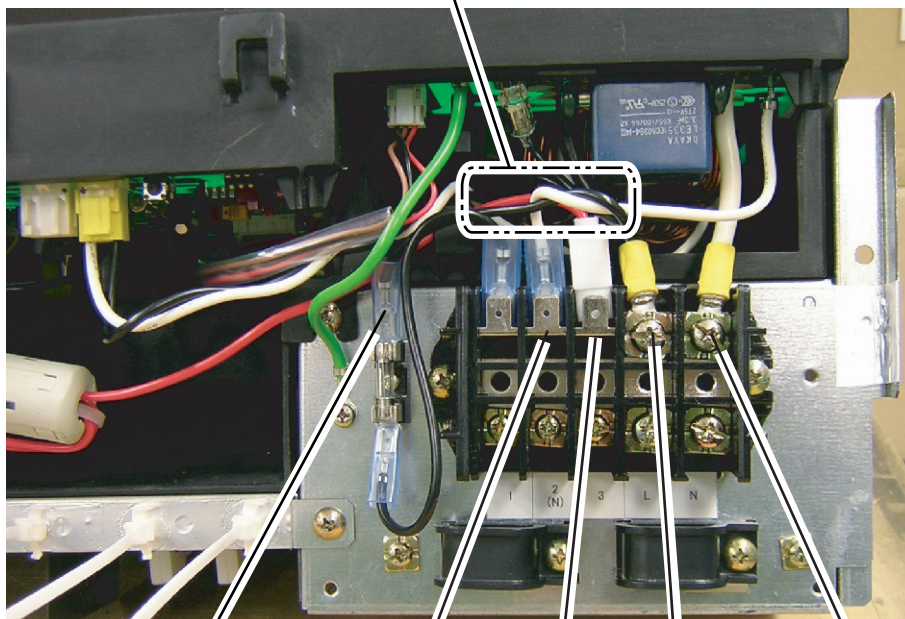

W6 (Black) W7 (White) W200 (Red) W1 (Black) W2 (White)



VIEW - E

- Remove the connector and cords.

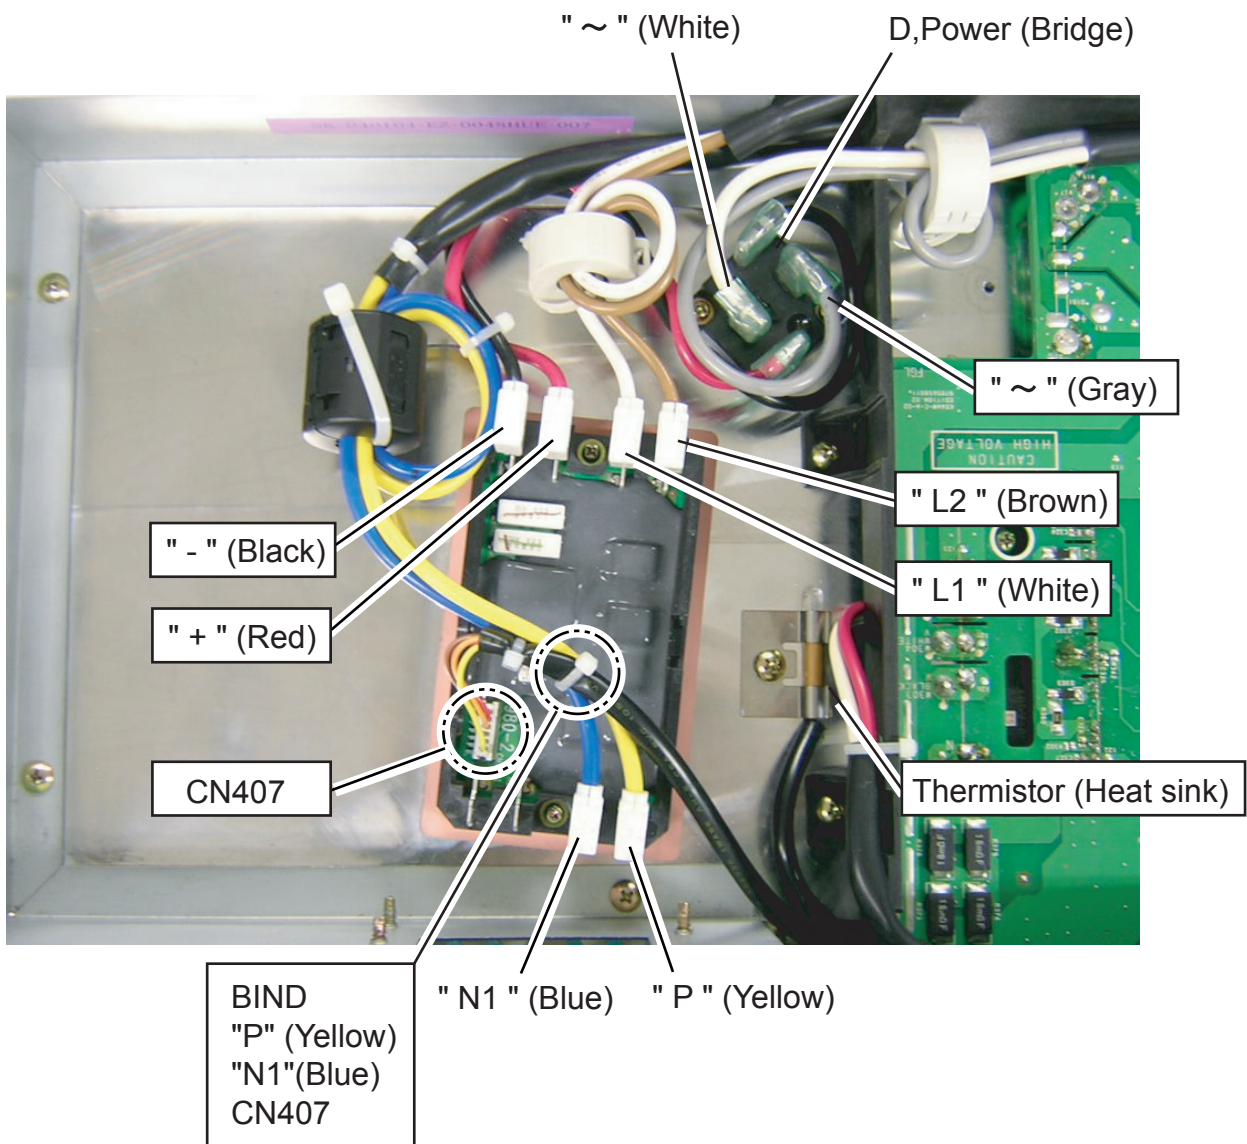


VIEW - F

- Remove the 6 mounting screws.
- Remove the INVERTER BOX A upward.

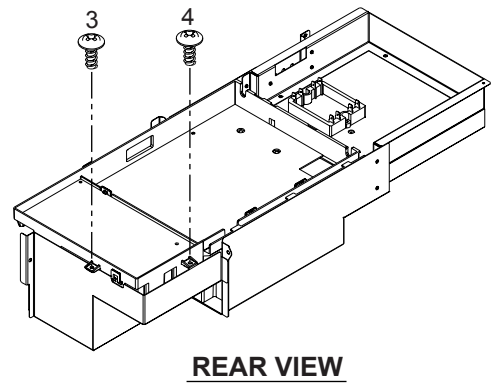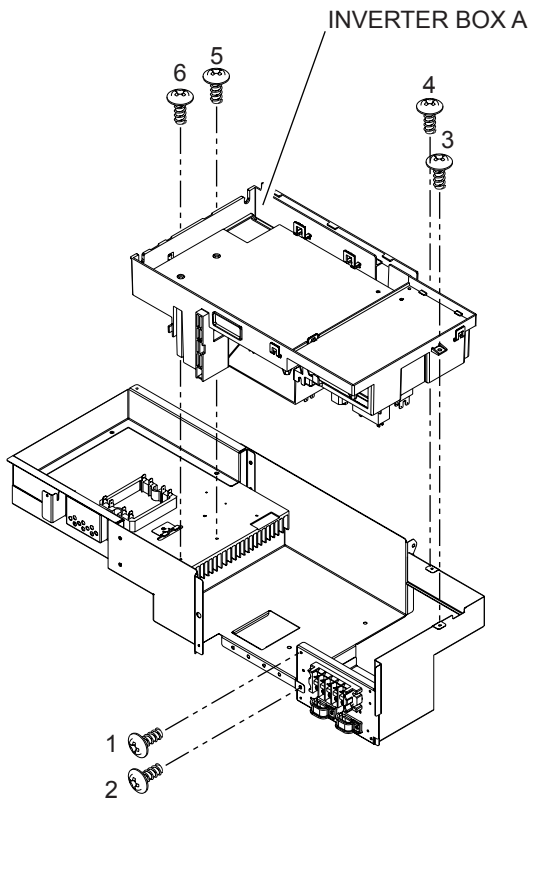

REAR VIEW

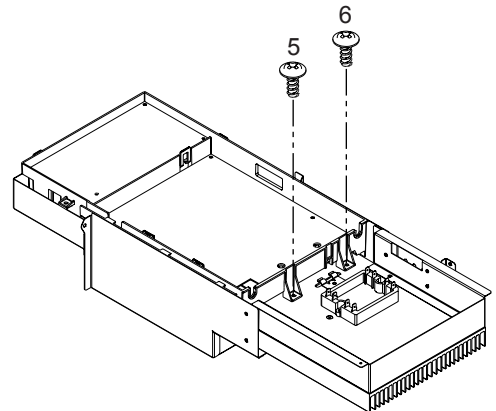


LEFT SIDE VIEW

Main PCB

- Remove the 1 mounting screw.
- Remove the Main PCB upward.

Filter PCB

- Remove the 2 mounting screws.
- Remove the Filter PCB upward.

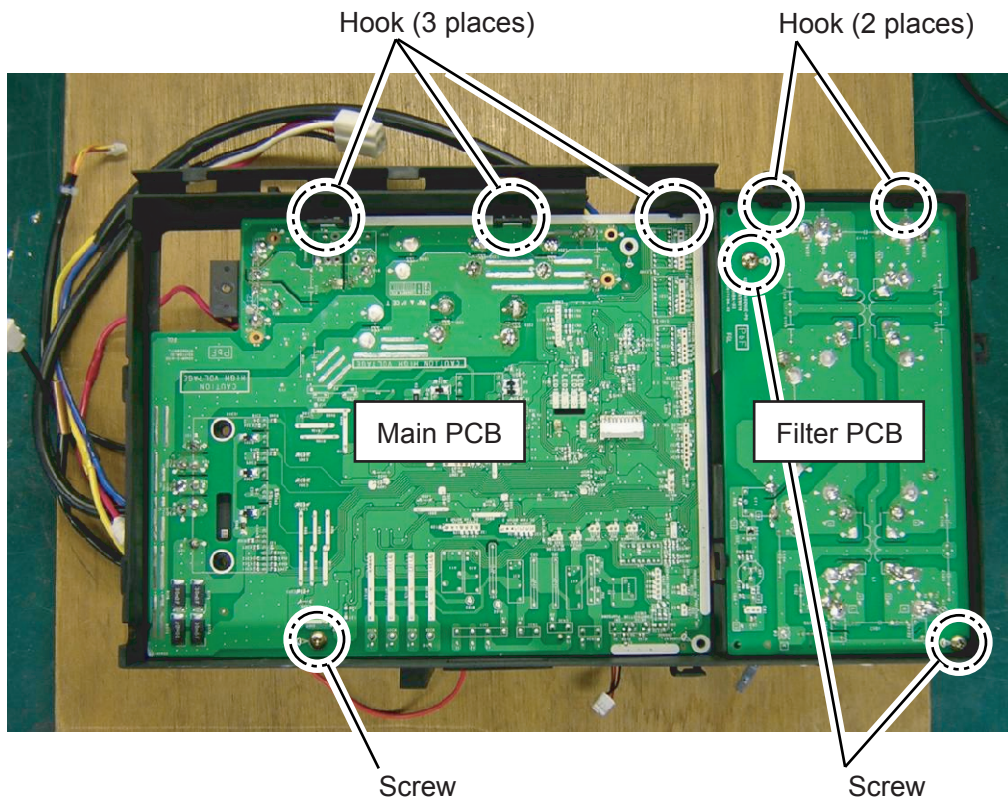

1-3-4 ASSEMBLY PROCESS of INVERTER UNIT (For AO*45/ 54LJBYL)

1. FILTER PCB

- As shown in Fig.1, assemble FILTER PCB to INVERTER BOX A.
- As shown in Fig.2, pull out the wires of FILTER PCB.

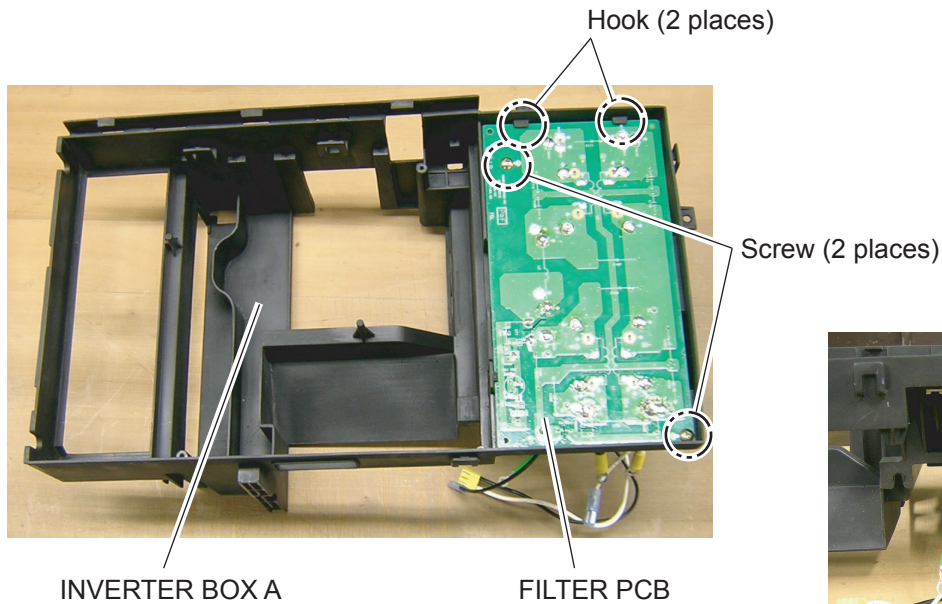


Fig.1


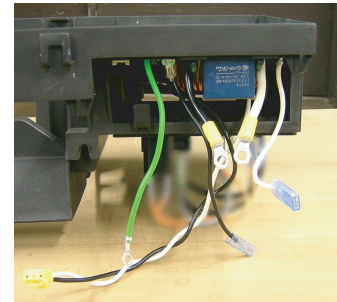


Fig.2

2. MAIN PCB

- As shown in Fig.3, temporarily fix MAIN PCB to INVERTER BOX A.
- After it is temporary fix of MAIN PCB, As shown in the Fig 4 - 6, pull out the wires of MAIN PCB.

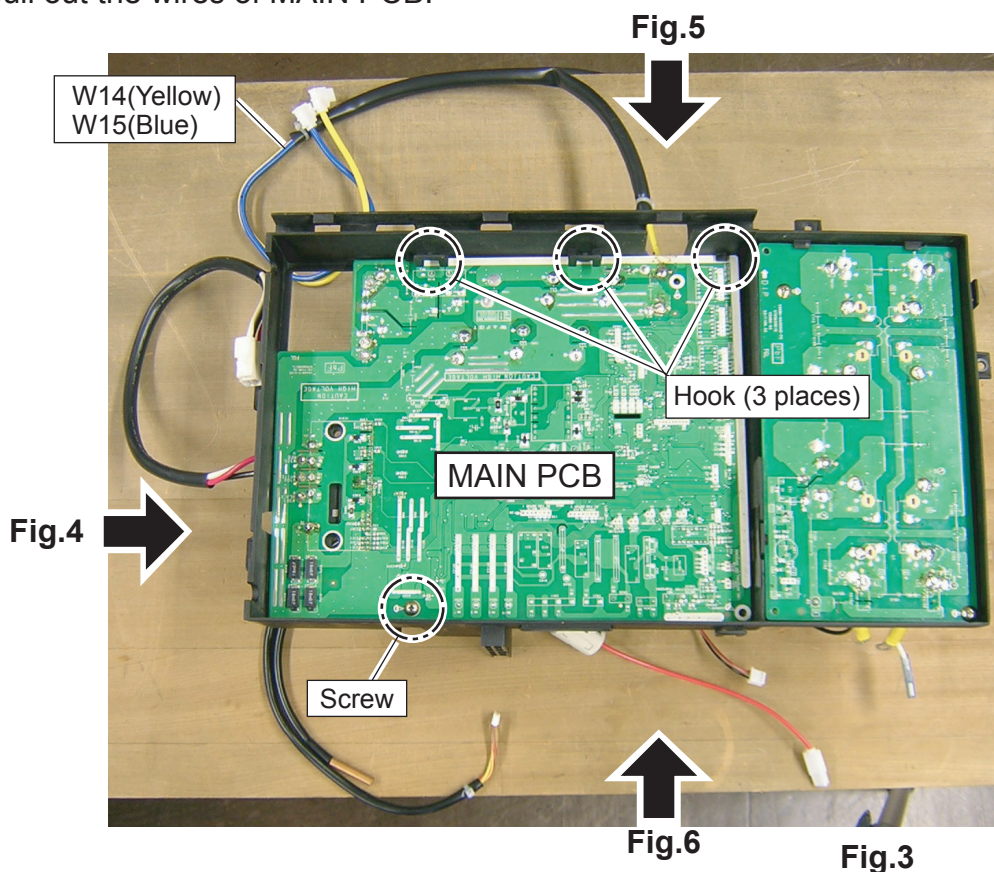

- As shown in Fig.4, pull out the wires.

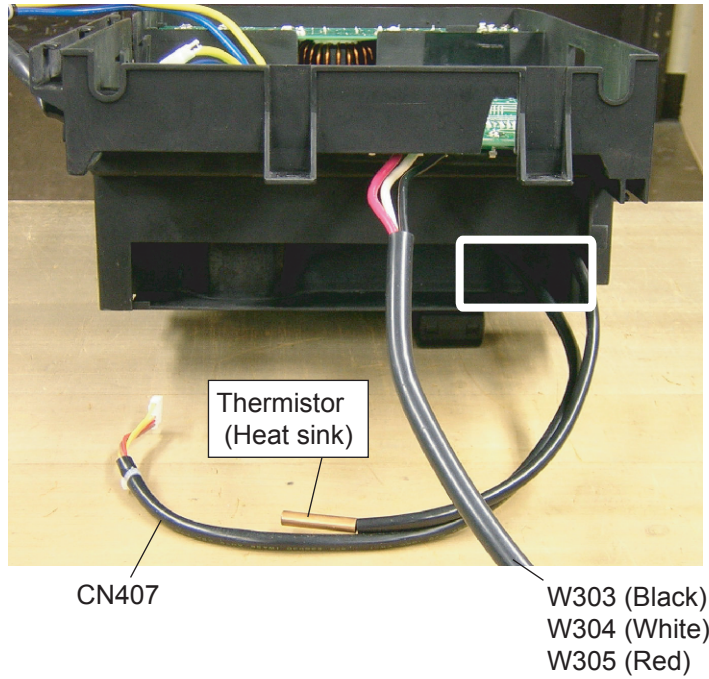


Fig. 4

- As shown in Fig.5, pull out the wires and fix them.


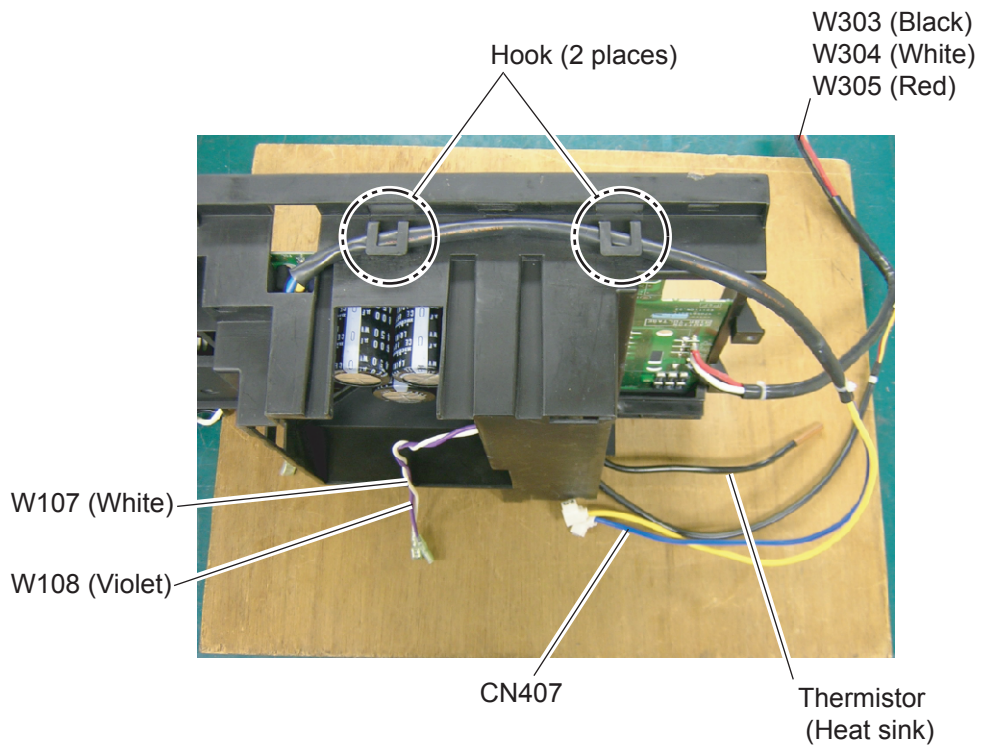


Fig. 5


▪ As shown in Fig.6, pull out the wires.

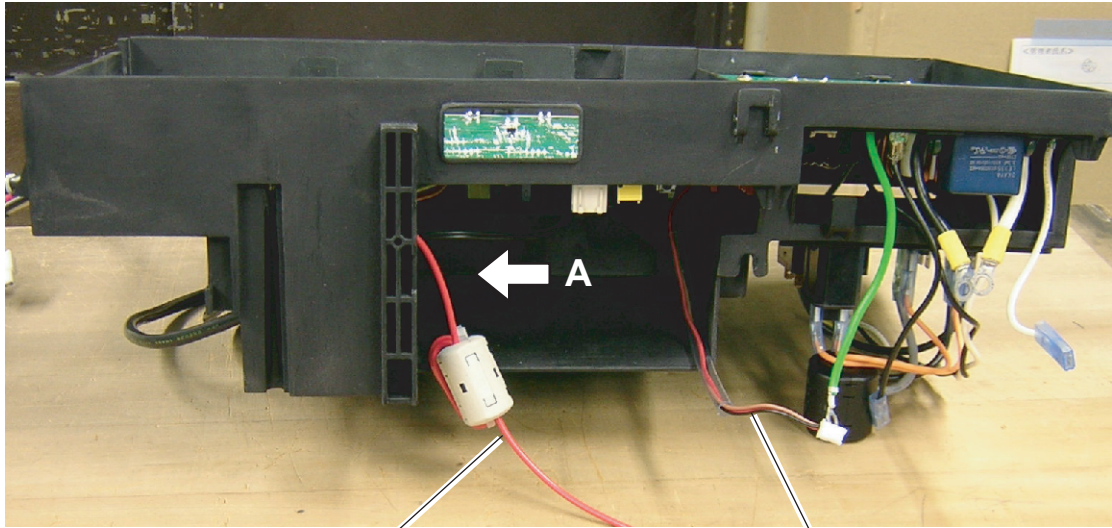

W200 (Red)

CN1 wire with connector


Fig. 6

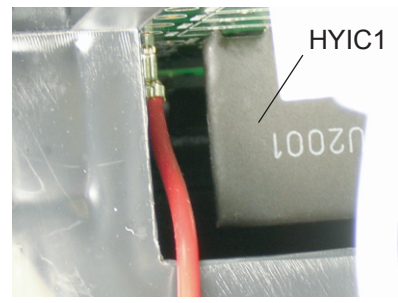

Don't come in contact with HYIC1.

VIEW - A

▪ As shown in Fig.7, connect wires.

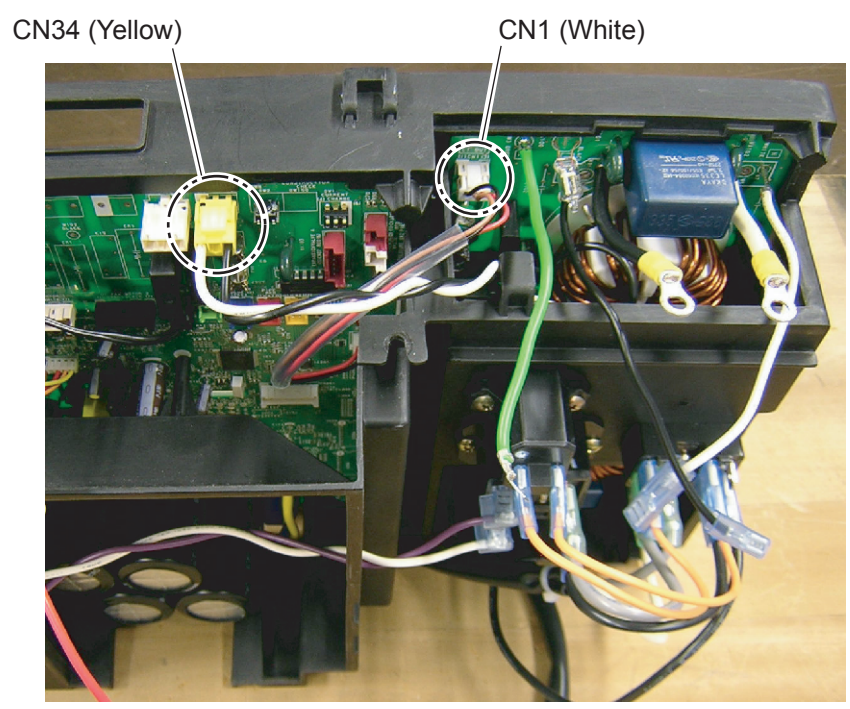

CN34 (Yellow)

CN1 (White)

Fig. 7

▪ As shown in Fig.8, connect wires.

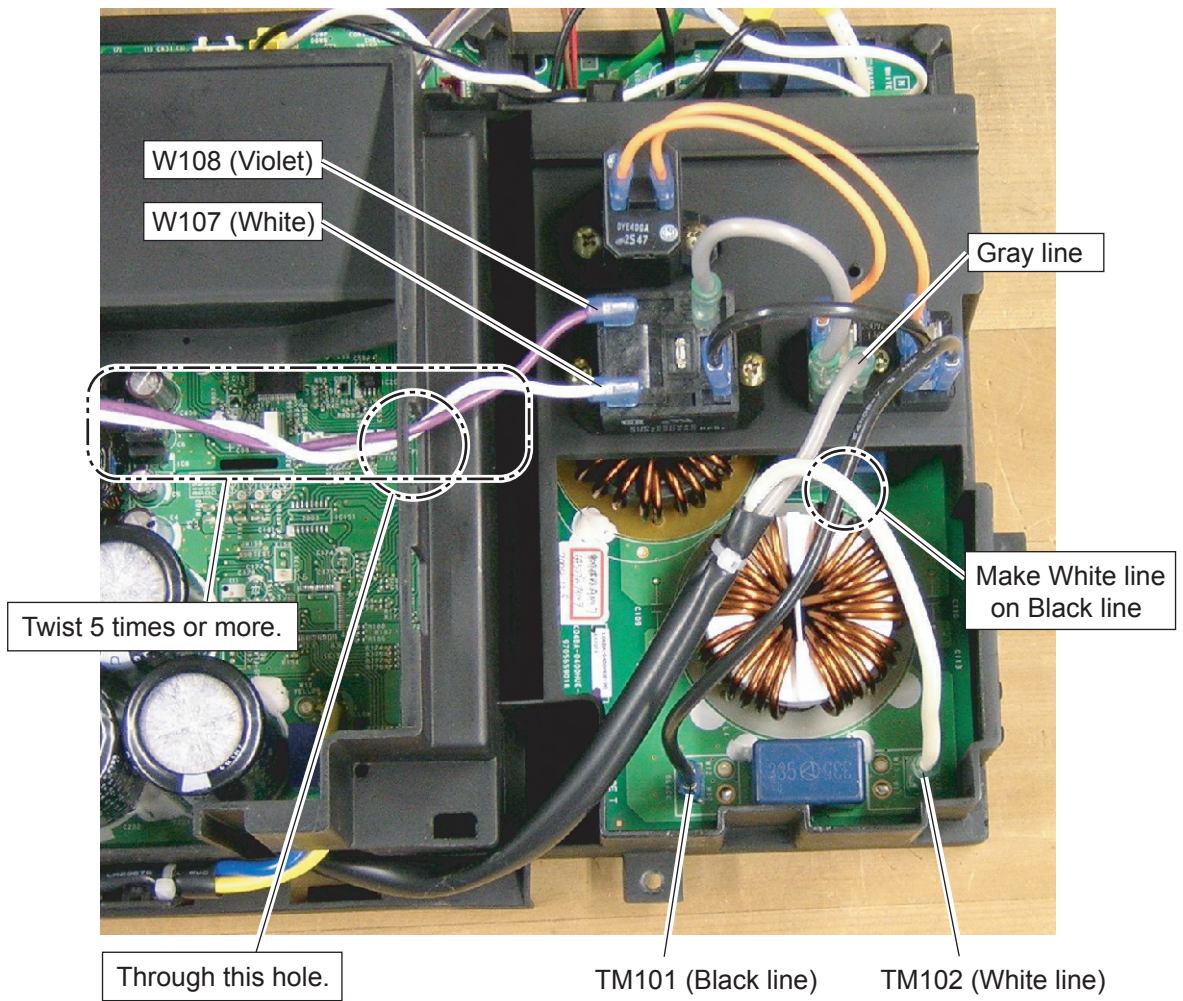


Fig. 8

- As shown in Fig.9, fix the wire to INVERTER BOX A.

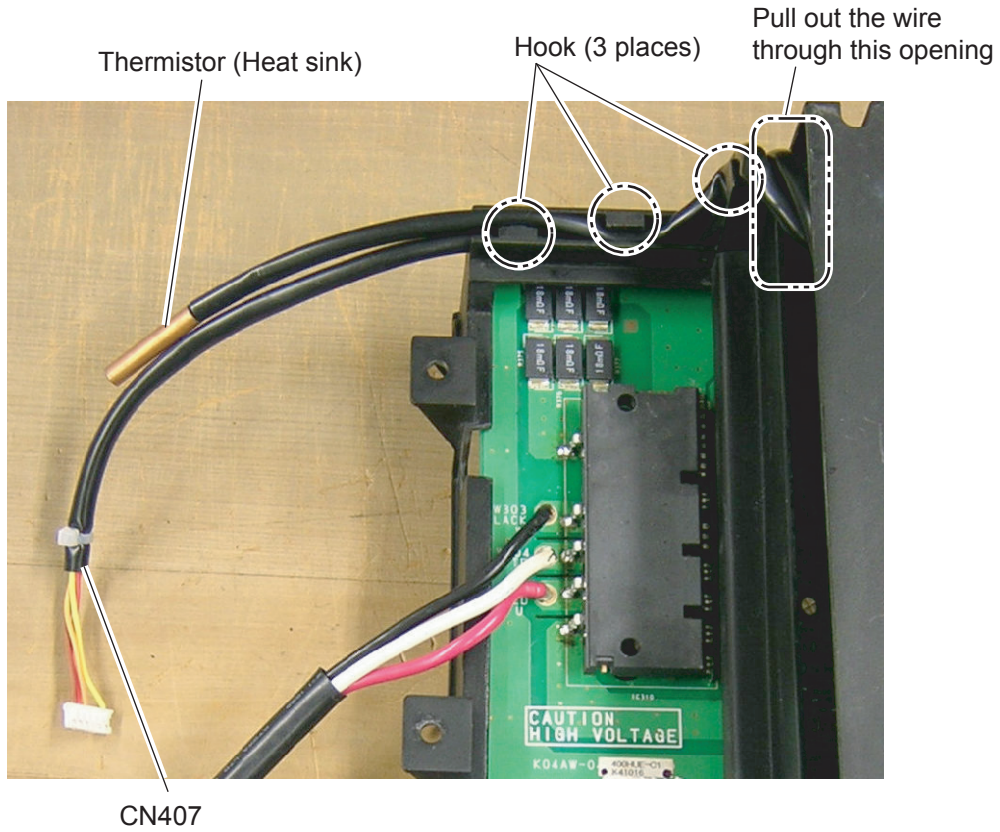


Fig. 9

- As shown in the figures, set wire with connector and bind it to INVERTER BOX A.

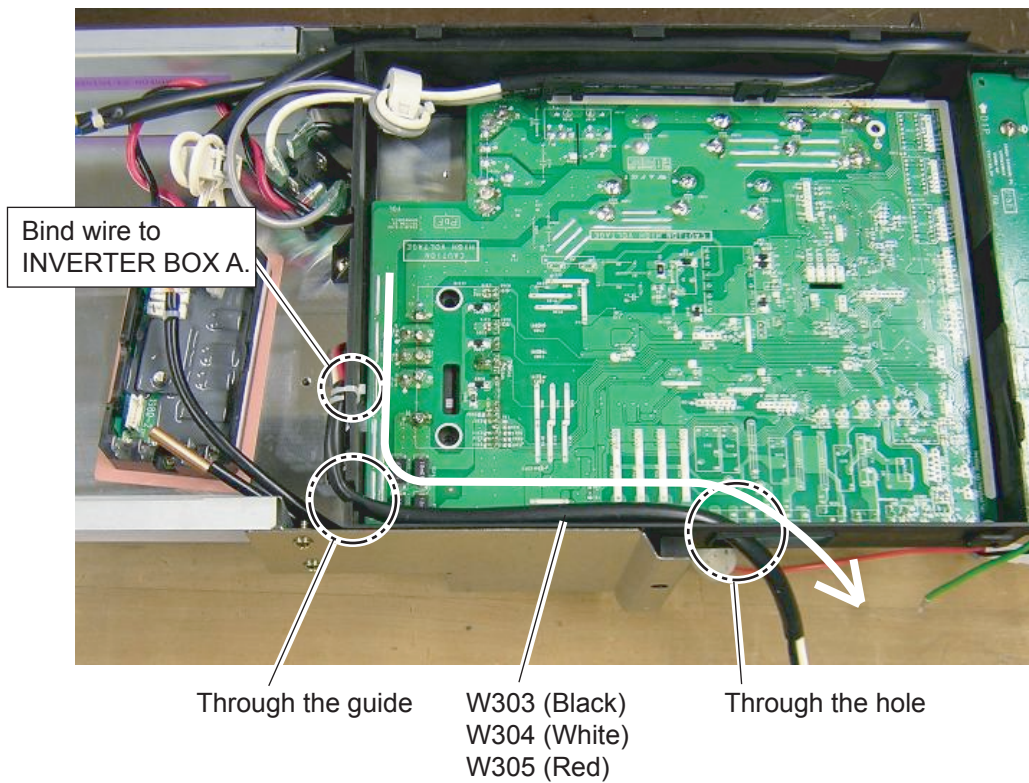



Fig. 10

2. REPLACEMENT PARTS (For INDOOR UNIT)


2-1 PARTS LAYOUT DRAWING

1. INTAKE GRILLE removal

- Push the INTAKE GRILLE pushbuttons (2 places).
- Open the INTAKE GRILLE

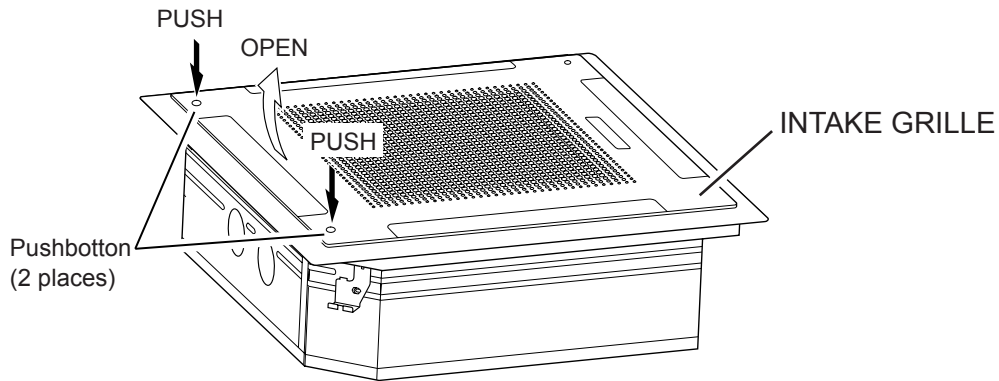


- Remove the GRILLE hinge wire.

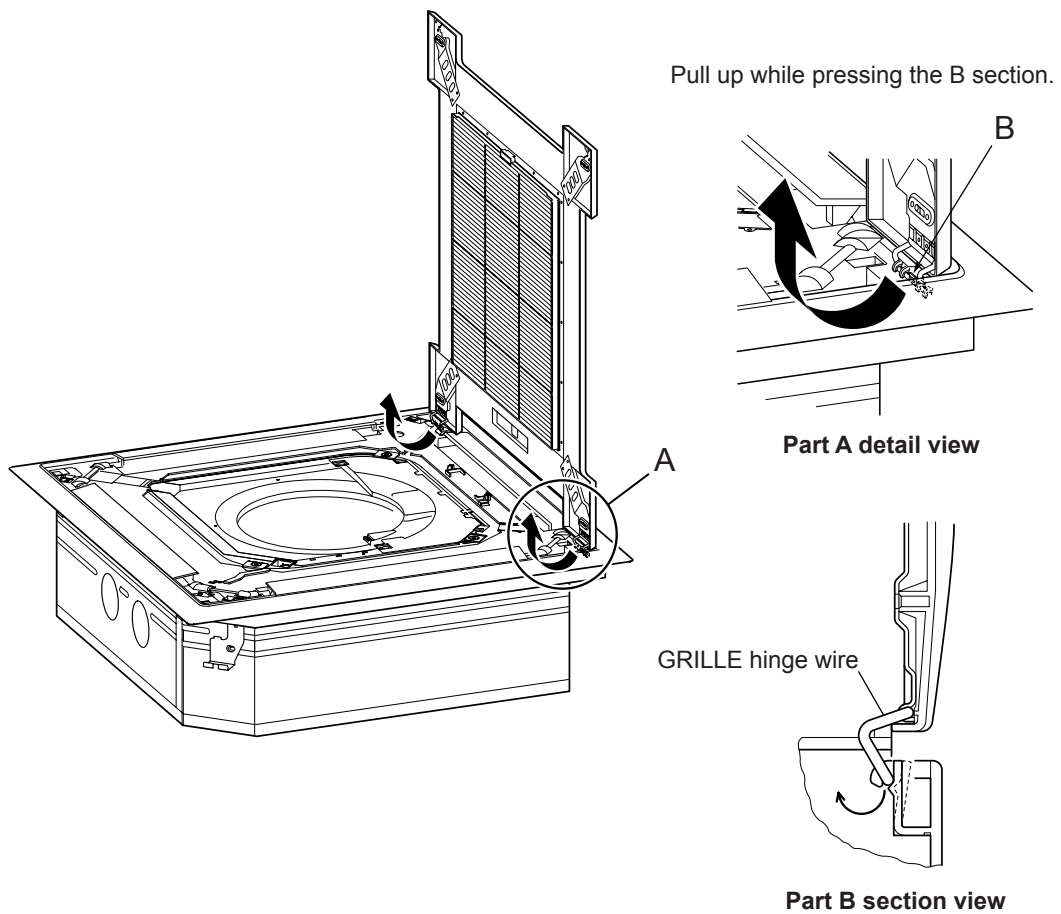


- Remove the INTAKE GRILLE.


2. FILTER removal

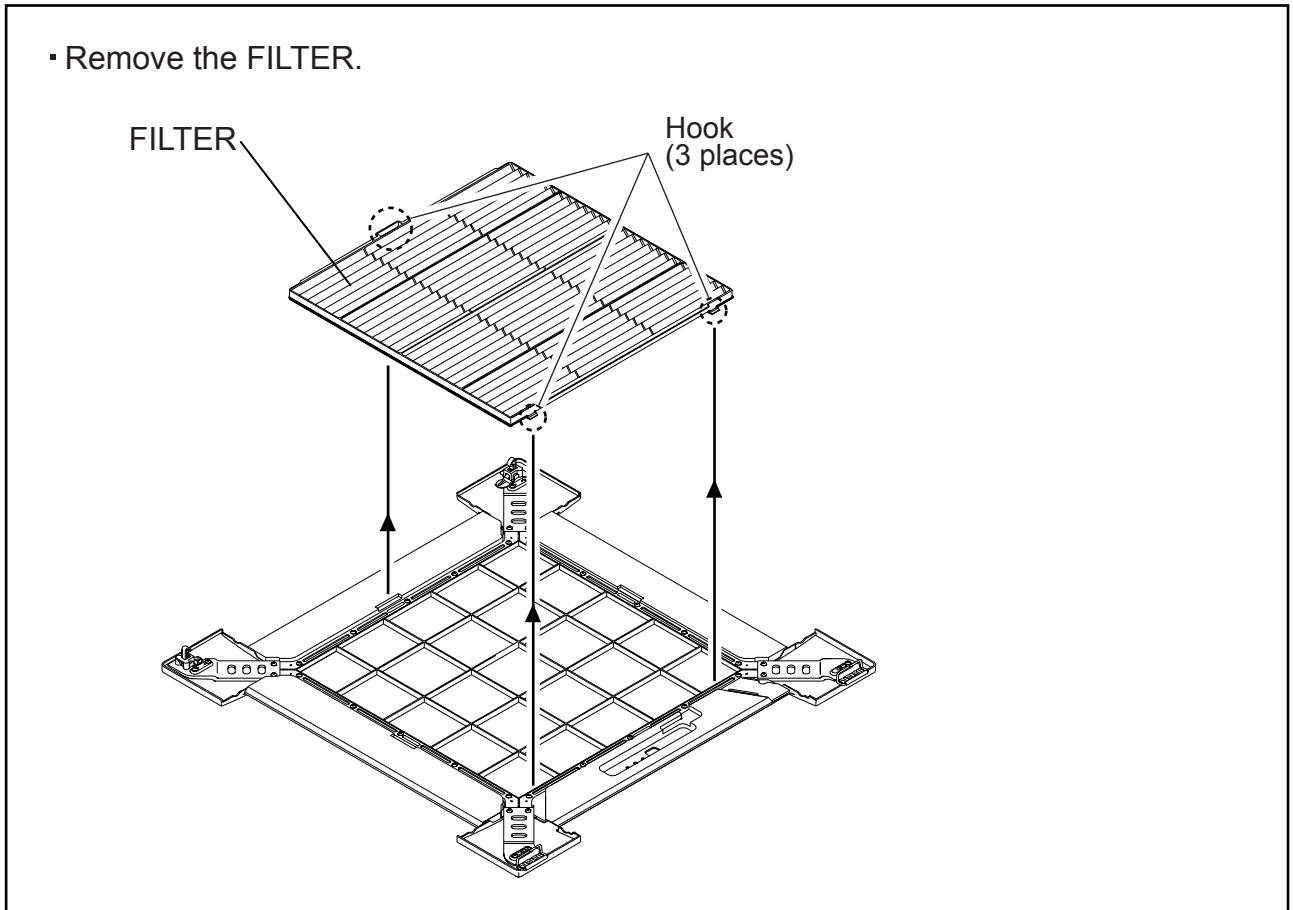

3. CONTROL BOX COVER removal


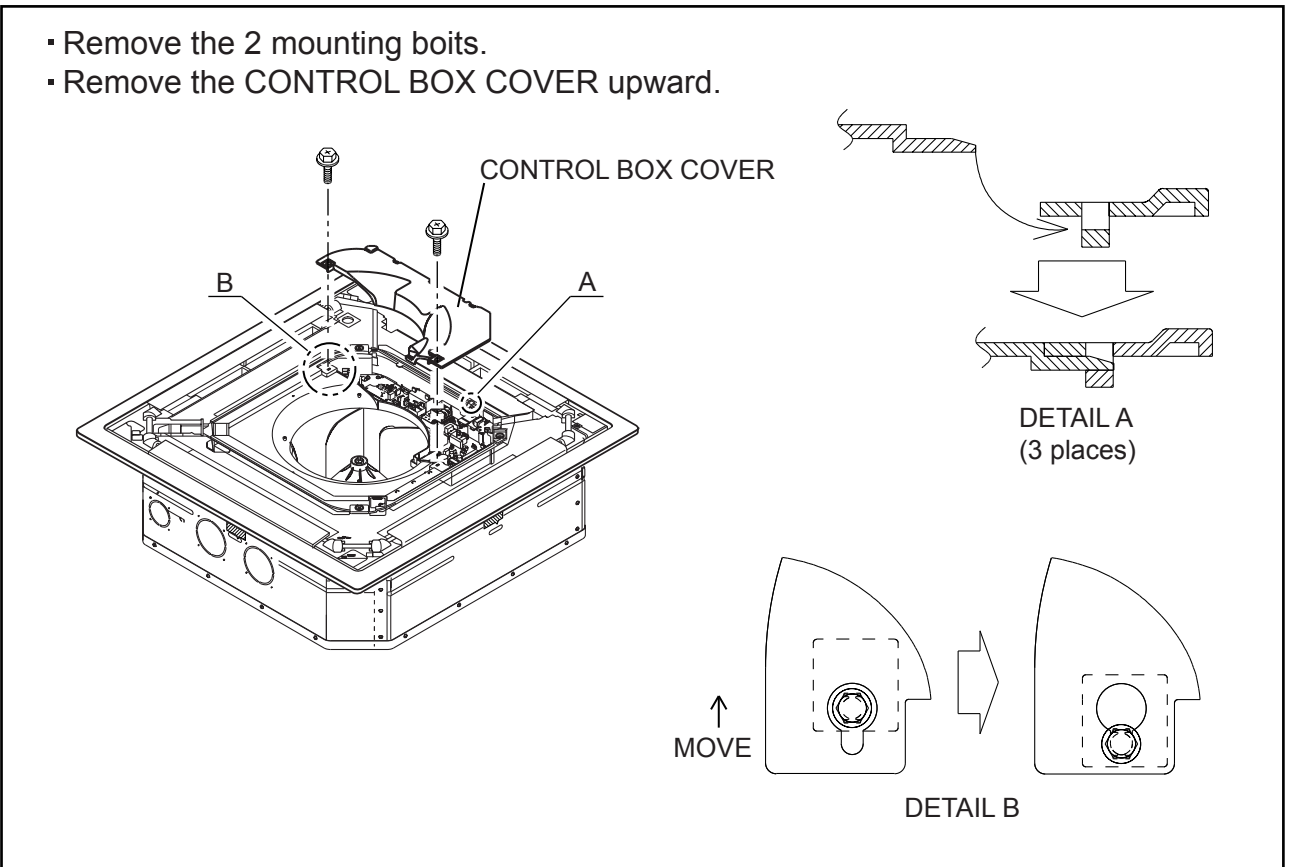


4. Wiring and Parts layout

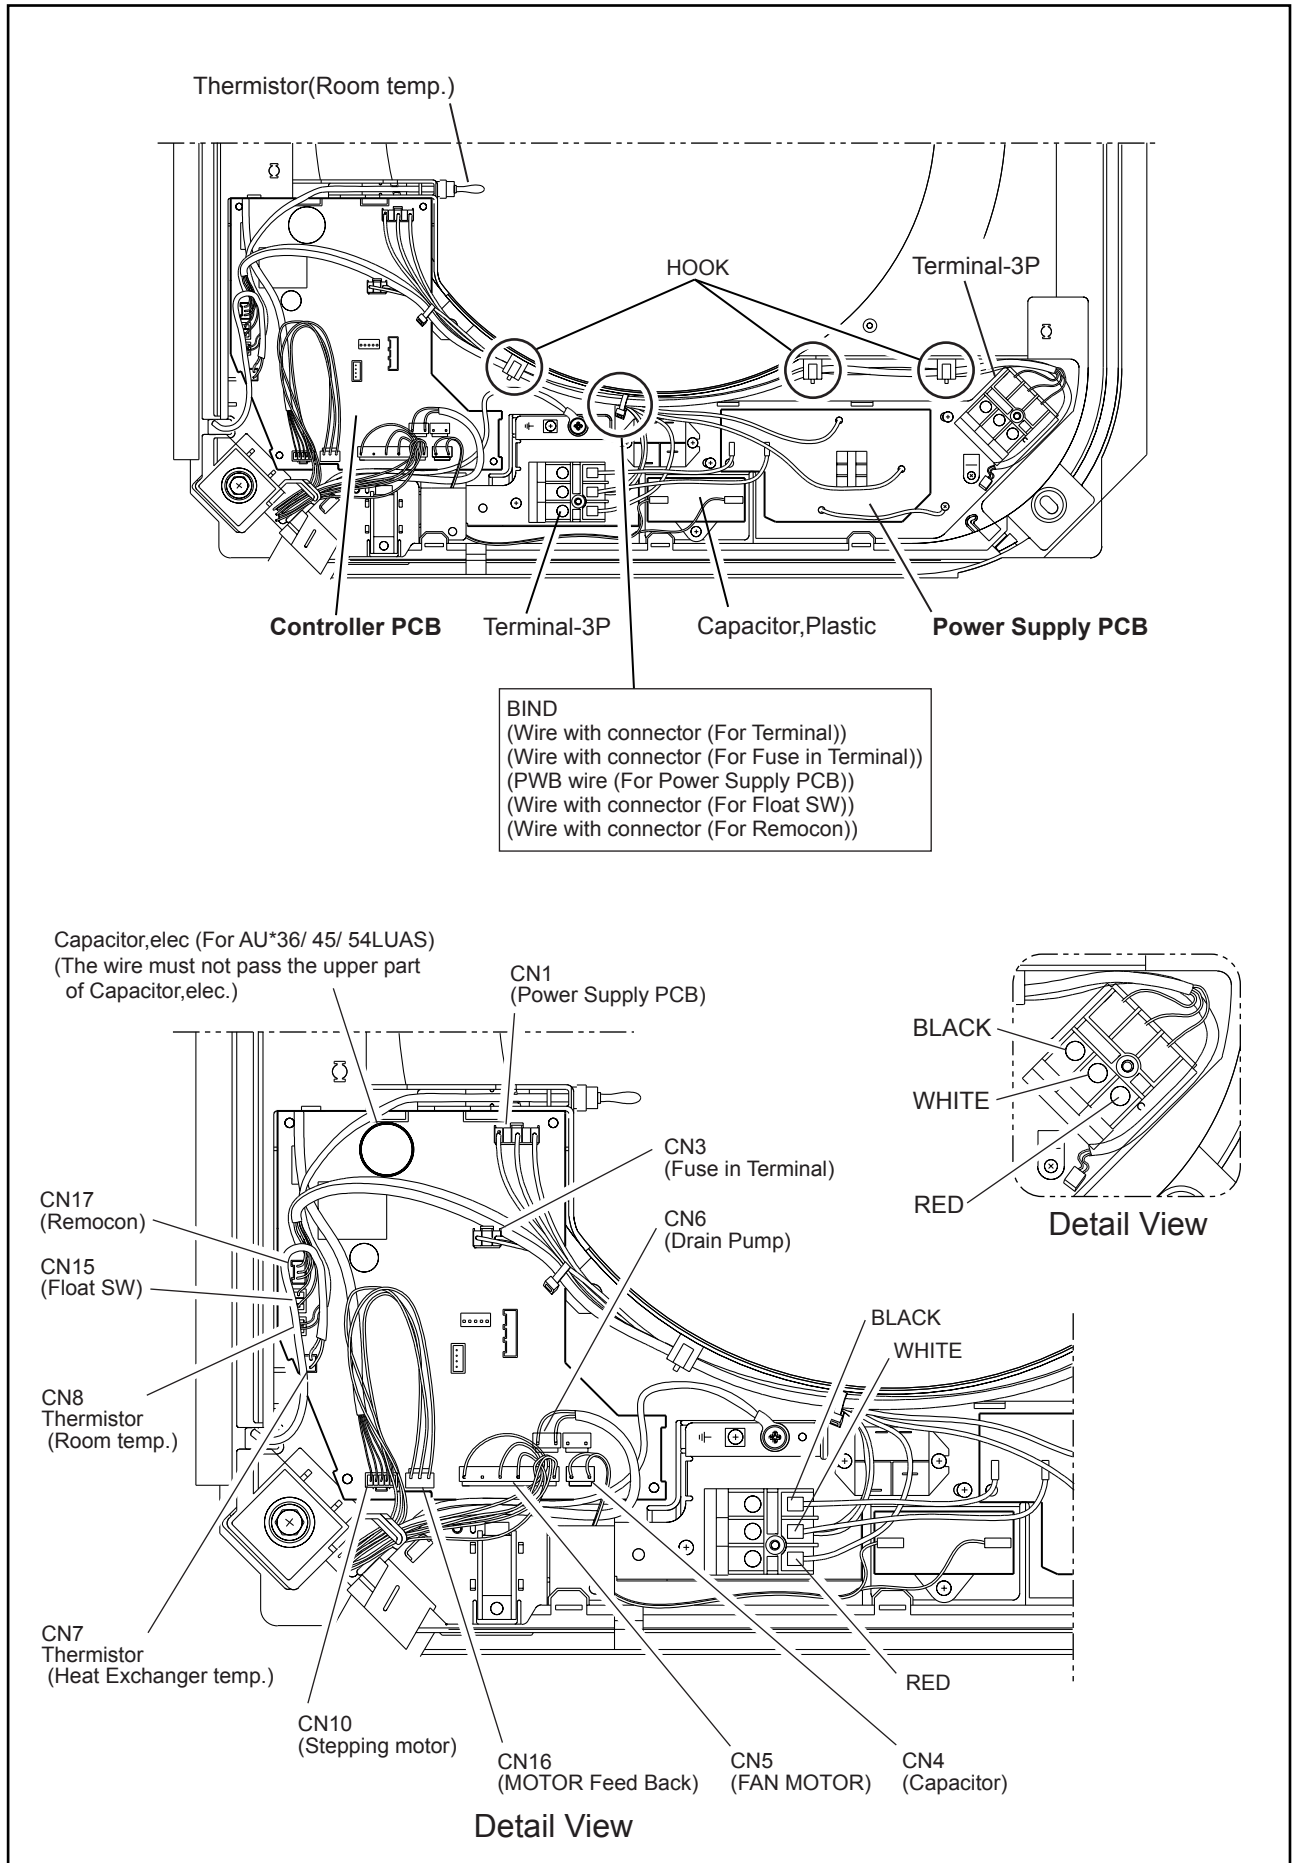


5. PANEL FRAME removal

- Pull up the corner section (A) of the PANEL FRAME as shown in figure (4 locations).

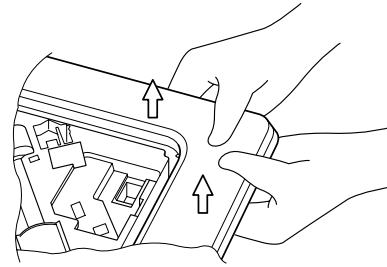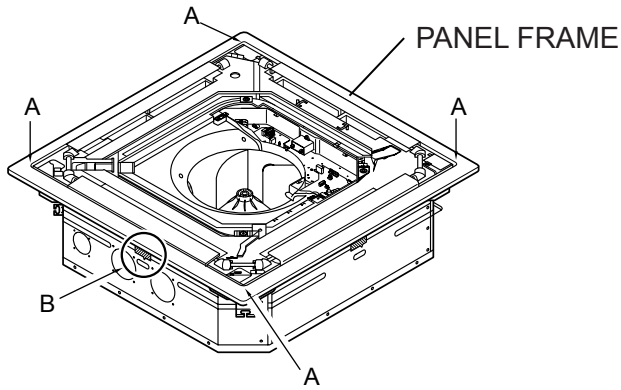


Part A detail view

-
- Pull up in the direction of the arrow while holding down the C section of figure (4 locations).

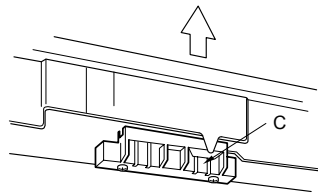


Part B detail view

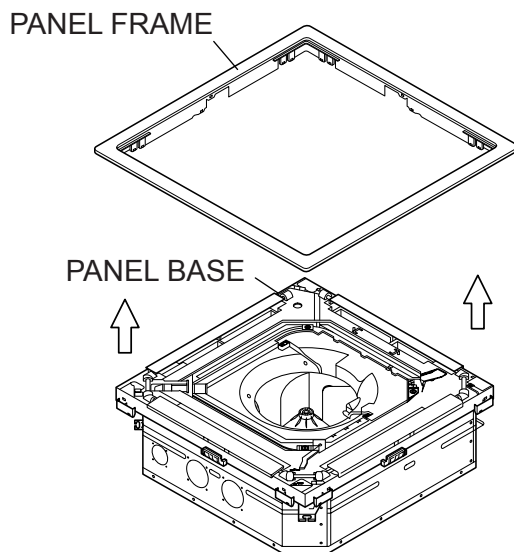


6. PANEL BASE removal

- Remove the 4 mounting bolts.
- Remove the PANEL BASE upward.

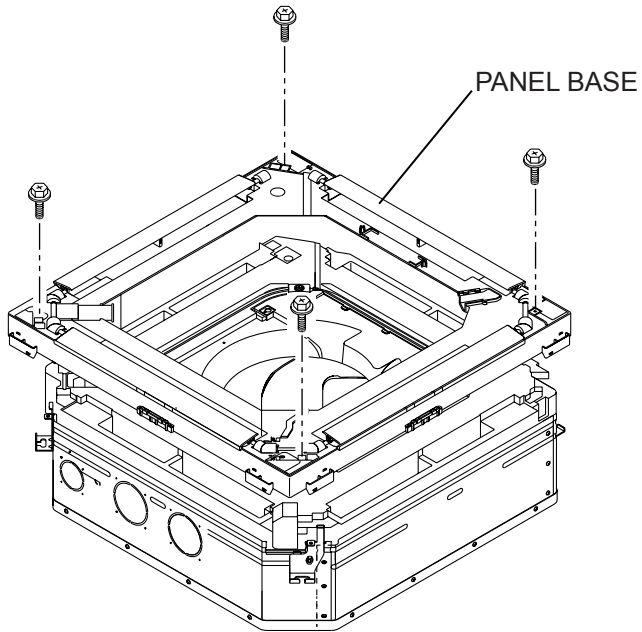


7. CONTROL UNIT removal

- Remove the 3 mounting bolts and 1 mounting screw.
- Remove the CONTROL UNIT upward.

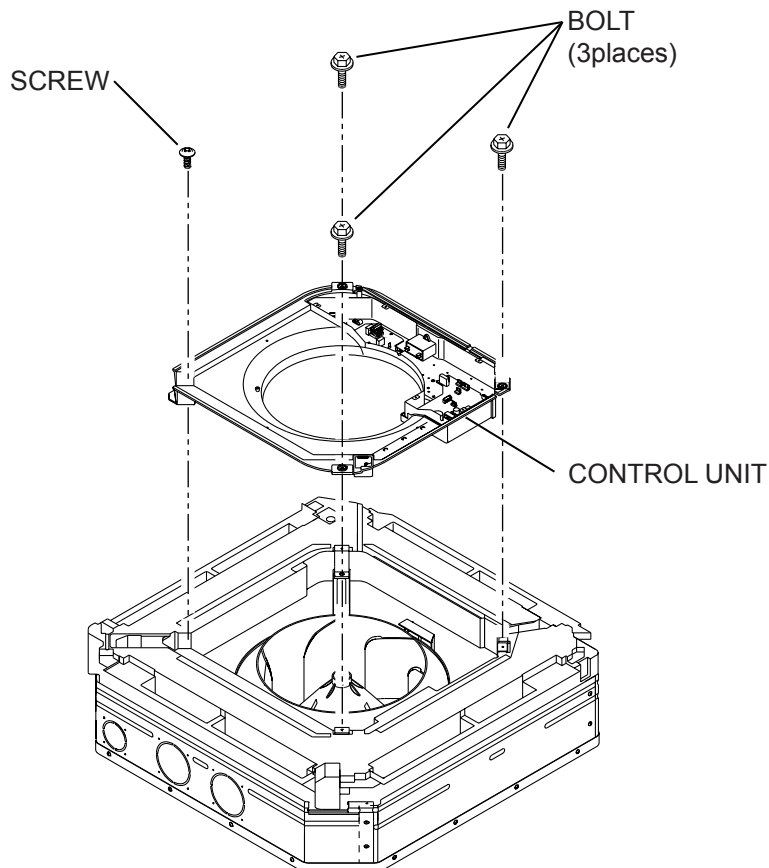

8. DRAIN PAN removal


- Remove the DRAIN PAN ASSY.

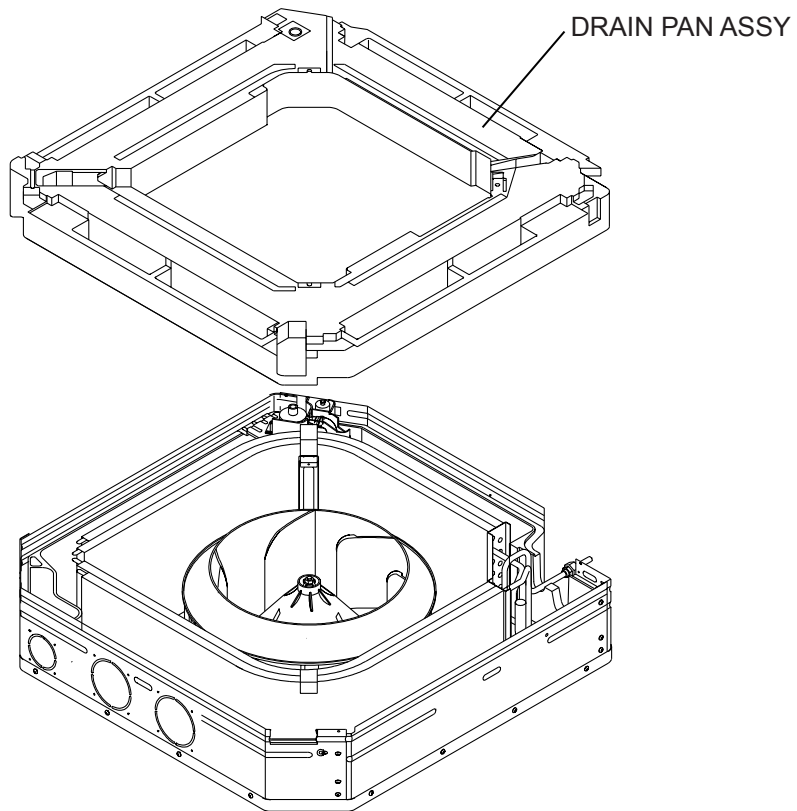

9. TURBO FAN removal


- Remove the M8 NUT and Washer(TURBO FAN).
Remove the TURBO FAN ASSY.

- For AU*24LUAR

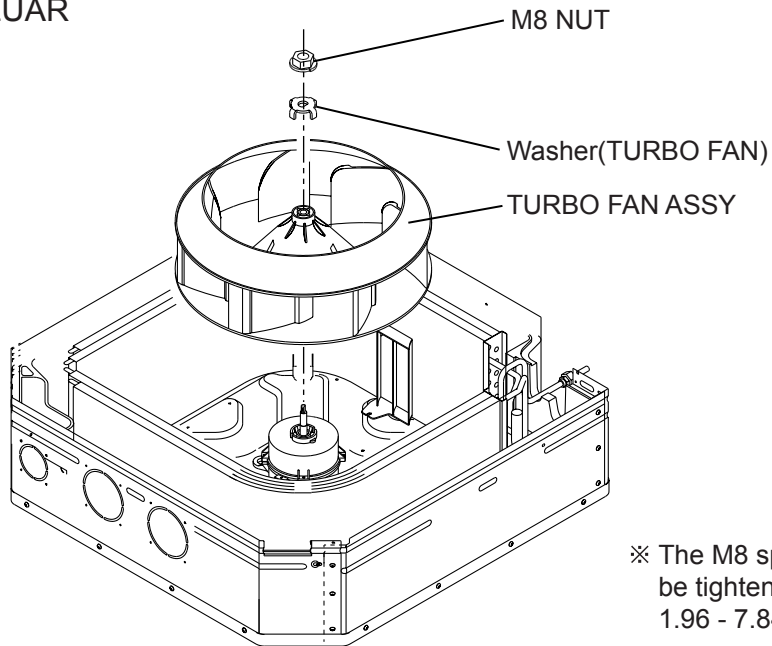

※ The M8 special NUT should be tightened with a torque of 1.96 - 7.84 N m. ▪


-
- For AU*30/ 36/ 45/ 54LUAS

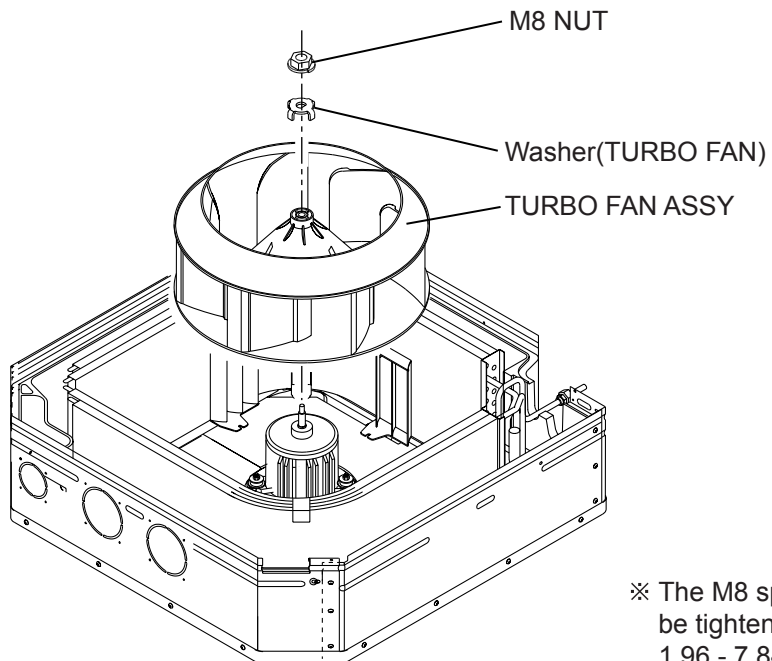


※ The M8 special NUT should be tightened with a torque of 1.96 - 7.84 N m.

10. FAN MOTOR removal

- For AU*24LUAR
- Remove the 3 mounting nuts.
- Remove the FAN MOTOR ASSY.

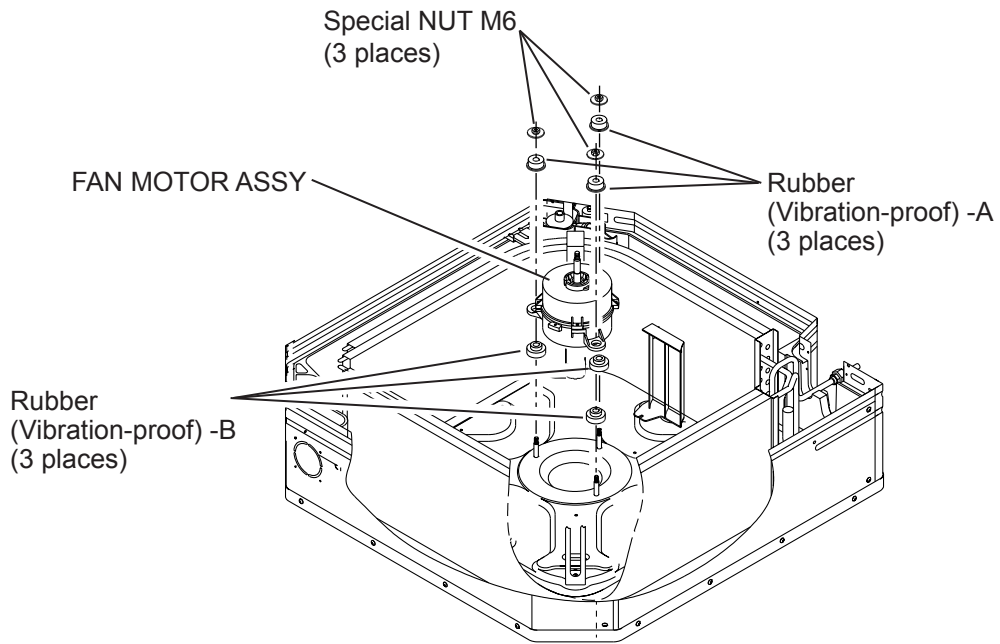



-
- For AU*36/ 36/ 45/ 54LUAS
 - Remove the 4 mounting nuts.
 - Remove the FAN MOTOR ASSY.

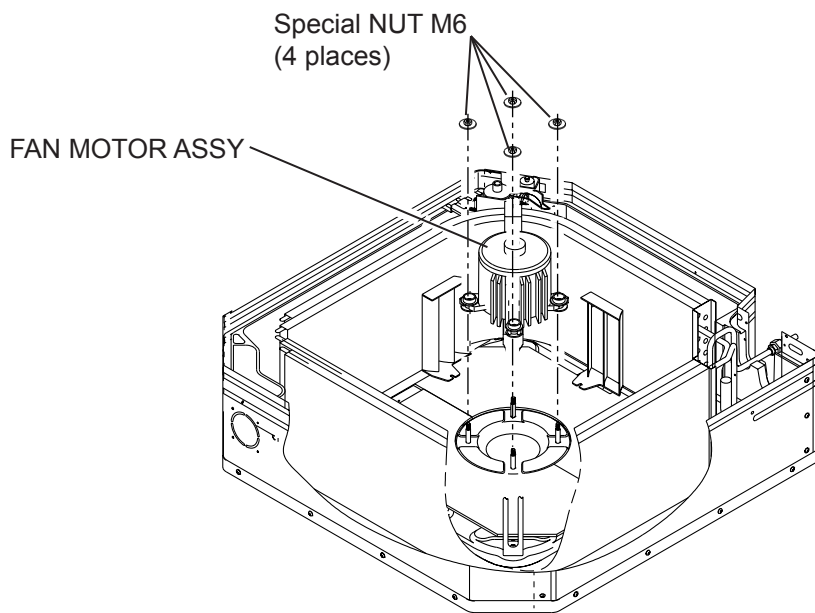

11. DRAIN PUMP removal

- Remove the 2 mounting screws.
- Remove the DRAIN PUMP UNIT.

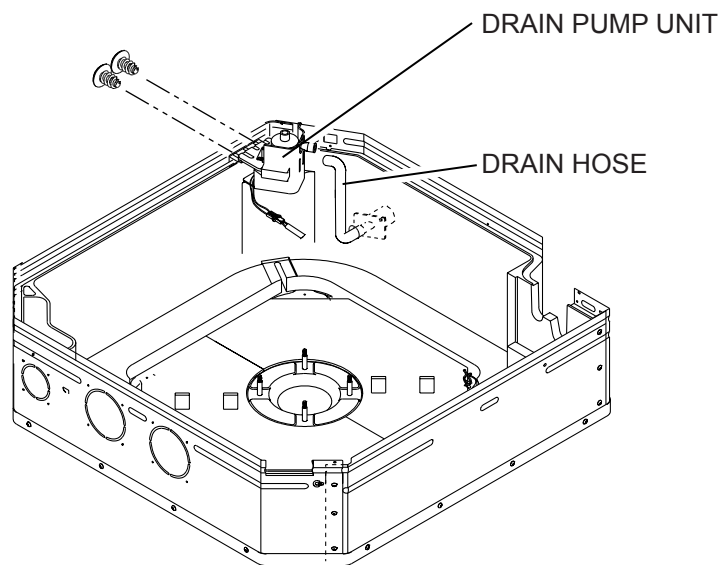

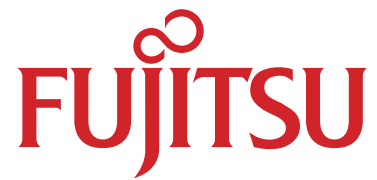

FUJITSU GENERAL LIMITED

1116, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan