


AIRSTAGE™ J-III

SERVICE MANUAL

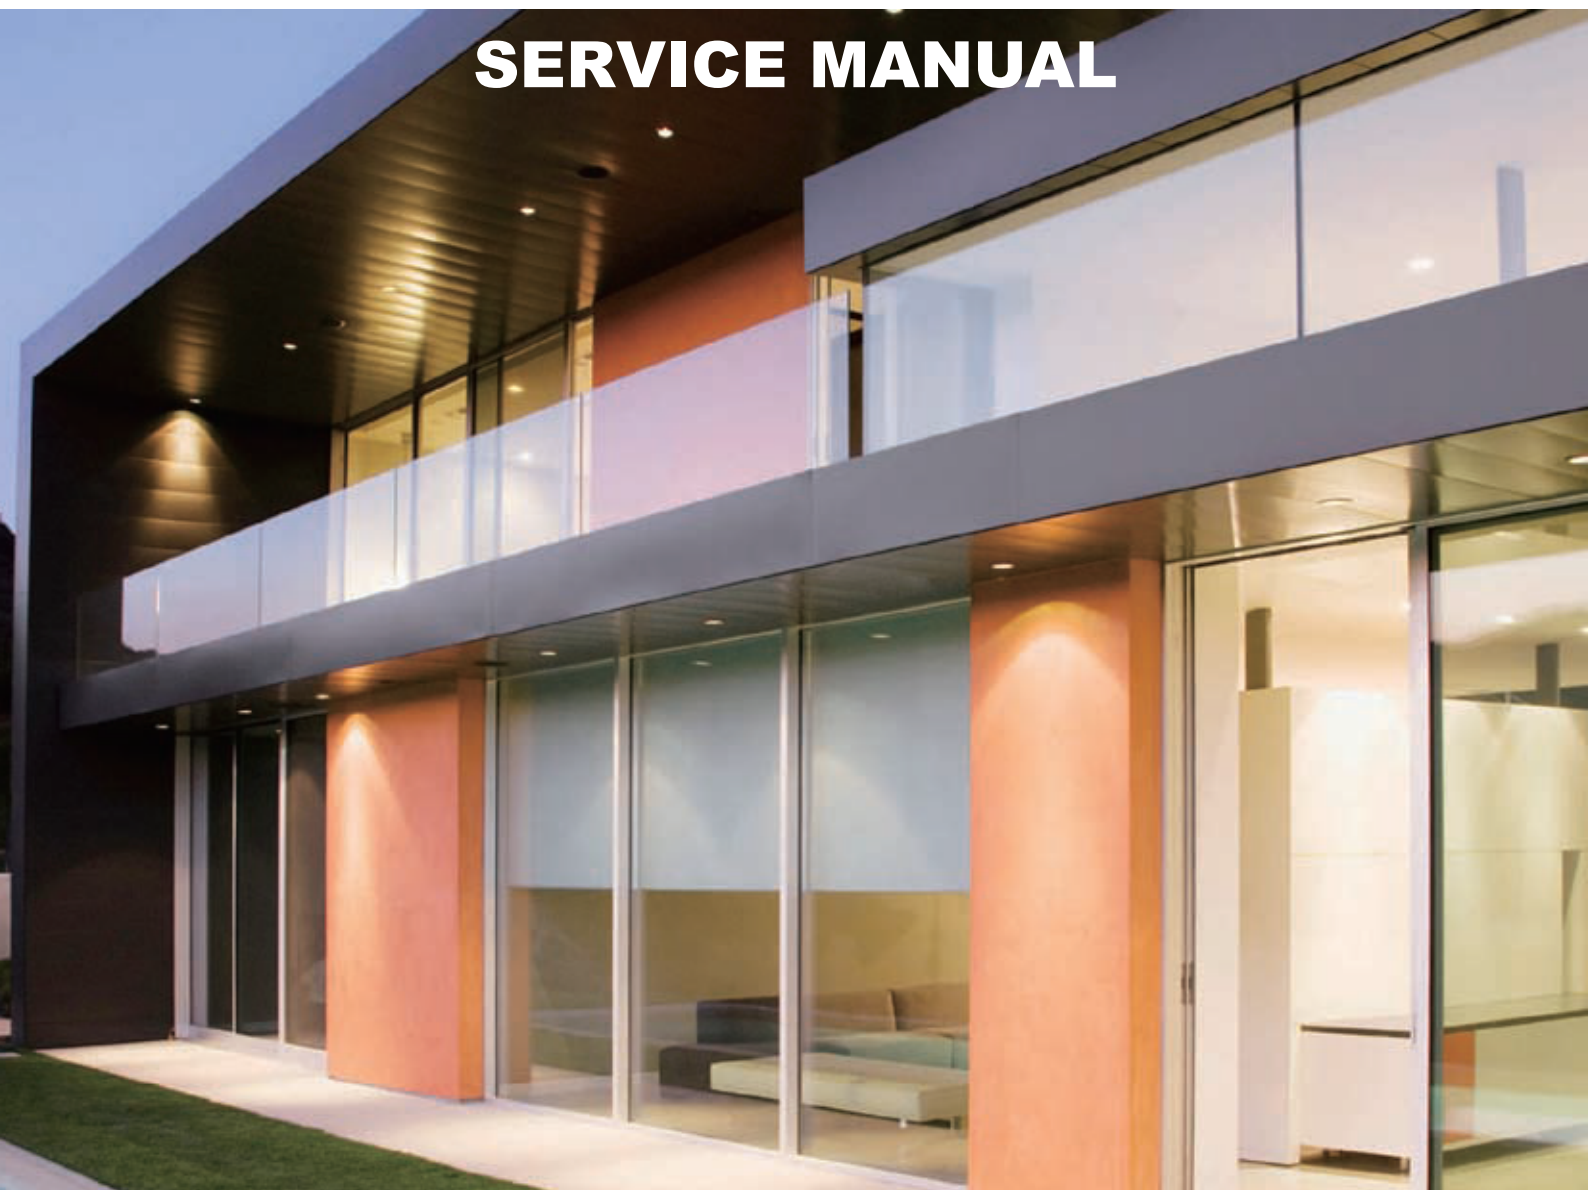

FUJITSU GENERAL LIMITED

CONTENTS

1. TEST RUN

1-1 EXECUTION PROCEDURE AND EXECUTION PRECAUTIONS.....	01-01
1-2 TEST RUN METHOD.....	01-03
1-2-1 Check Items Before Power ON.....	01-03
1-2-2 Check Items After Power ON.....	01-04
1-2-3 Automatic address setting procedure for Signal amplifiers.....	01-06
1-2-4 Automatic address setting procedure for indoor units.....	01-07
1-2-5 Indoor unit connection check procedure	01-08
1-2-6 Test run from the outdoor unit	01-09
1-2-7 Test run from the Remote controller	01-10
1-3 TEST RUN CONTROL.....	01-15
1-4 FIELD SETING AND MONITOR MODE LIST FOR OUTDOOR UNIT.....	01-16
1-5 FIELD SRTTING / FUNCTION SETTING FOR INDOOR UNIT.....	01-19
1-6 FIELD SRTTING / FUNCTION SETTING FOR OUTDOOR AIR UNIT.....	01-20

2. OUTDOOR UNIT OPERATION CONTROL

2-1 INPUT / OUTPUT LIST.....	02-01
2-2 COMPRESSOR OPERATION.....	02-02
2-2-1 Operation / Stop Condition.....	02-02
2-2-2 Capacity Control.....	02-02
2-2-3 Speed Range of Start,Stop,and Operation.....	02-03
2-3 FAN CONTROL.....	02-05
2-3-1 Cooling Operation.....	02-05
2-3-2 Heating Operation.....	02-06
2-3-3 Low noise mode.....	02-07
2-3-4 Other Control.....	02-08
2-4 EXPANSION VALVE CONTROL.....	02-08
2-5 SPECIAL OPERATION.....	02-09
2-5-1 Oil Recovery Operation.....	02-09
2-5-2 Pre-Heat Operation.....	02-10
2-5-3 Defrost Operation Control.....	02-10
2-6 PROTECTIVE FUNCTION.....	02-11
2-6-1 Protective Function List.....	02-11

CONTENTS

3. INDOOR UNIT OPERATION

3-1 FAN CONTROL	03-01
3-1-1 Fan Speed Setting.....	03-01
3-1-2 "AUTO" Position.....	03-01
3-2 MASTER CONTROL	03-02
3-2-1 Operation Mode Control.....	03-02
3-2-2 Auto Changeover.....	03-05
3-2-3 "COOL" Position.....	03-08
3-2-4 "HEAT" Position.....	03-08
3-3 LOUVER CONTROL	03-10
3-4 ELECTRONIC EXPANSION VALVE CONTROL	03-13
3-5 DRAIN PUMP OPERATION	03-13
3-6 FUNCTION	03-15
3-6-1 Auto Restart.....	03-15
3-6-2 Icing Protection Control.....	03-15
3-6-3 Oil Recovery Operation.....	03-15
3-7 TIMER CONTROL	03-17
3-7-1 Wireless Remote Controller.....	03-17
3-7-2 Group Remote Controller.....	03-19
3-7-3 Wired Remote Controller.....	03-21
3-8 DX-KIT	03-25
3-8-1 System configuration	03-25
3-8-2,3 Fundamental functions	03-26
3-8-4 Electrical expansion valve control for DX-KIT.....	03-28
3-8-5 Drain pump operation for DX-KIT	03-28
3-8-6 Function	03-29

CONTENTS

4. TROUBLE SHOOTING

4-1 NORMAL OPERATION	04-01
4-1-1 Indoor Unit Display.....	04-01
4-1-2 Outdoor Unit Display.....	04-02
4-2 ABNORMAL OPERATION	04-03
4-2-1 Indoor Unit Display.....	04-03
4-2-2 Outdoor Unit Display.....	04-04
4-2-3 Error Code List for Outdoor Unit.....	04-05
4-2-4 Remote Controller Display.....	04-06
4-2-5 Error Code List for Simple and Wired Remote Controller.....	04-07
4-2-6 Error Code List for Group Remote Controller.....	04-07
4-2-7 Troubleshooting - No Error code -	04-08
4-2-8 Error Code List for External Switch Controller.....	04-08
4-2-9 Error Code List for Signal Amplifier.....	04-08
4-2-10 Error Code List for Network Convertor	04-08
4-3 TROUBLE SHOOTING	04-09
4-3-1 Trouble Shooting With Error Code (Indoor unit)	04-09
4-3-2 Trouble Shooting With Error Code (Outdoor unit)	04-39
4-3-3 Trouble Shooting With No Error Code	04-76
4-3-4 Trouble Shooting for Option Parts	04-82
4-4 SERVICE PARTS INFORMATION	04-106

5. APPENDING DATA

5-1 REFRIGERANT CIRCUIT	05-01
5-2 WIRING DIAGRAM	05-03
5-2-1 Indoor Unit.....	05-03
5-2-2 Outdoor Unit.....	05-18
5-2-3 DX-KIT	05-21
5-3 CHARACTERISTICS OF SENSORS	05-23
5-3-1 Pressure sensor.....	05-23
5-3-2 Thermistor resistance.....	05-24
5-3-3 Saturation temperature and saturation pressure tables (R410A).....	05-25
5-3-4 Temperature and pressure of refrigerant (Graph).....	05-26

6. DISASSEMBLY PROCESS

AIRSTAGE™ J-III

Variable Refrigerant Flow System

1. TEST RUN

1. TEST RUN

1-1 EXECUTION PROCEDURE AND EXECUTION PRECAUTIONS

Before execution

	Execution procedure and precautions	Reason
Location decision	Do not install the units in the place not recommended in the installation manual.	• The performance may drop significantly due to the protection controlling
Confirmation of Refrigerant used	Check the characteristics of the refrigerant used and grasp the special features of the refrigerant. If refrigerant must be charged, always charge the refrigerant specified for the product. *Confirm the product design pressure. < R410A 597psi (4.12MPa) >	• Use of a refrigerant other than the specified refrigerant will invite equipment trouble
Preparation of execution drawings	Prepare the design for the system	
Confirmation of installation site	① Use new refrigerant piping of the thickness specified by the D&T manual. ② Since R410A dedicated tools are necessary, prepare them in advance.	• Secure the necessary pressure resistance.
Preparation before execution	③ Absolutely avoid use of existing piping. If use of existing piping is unavoidable, the piping must be cleaned.	

Execution 1/2

Sleeve and insert work	Always use a level and keep the indoor unit level. If the equipment is tilted toward the drain port, install it so that the tilt is within 13/32in.(10mm). Excessive tilt will cause water leakage.	• Prevention of water leakage
Indoor unit installation	When performing piping work, observe the following items so that the inside of the piping is clean and air tight.	• Foreign matter, water, etc. in the piping will cause faulty cooling and compressor trouble.
Refrigerant piping work	① Use pipe that is not dirty inside. ② Confirm the design for the piping (Diameter, Thickness) ③ When the pipe is left standing, protect it. ④ Confirm the angle of separation tube and header correctly. ⑤ Finish flaring exactly.	• Incorrect pipe diameter will cause faulty cooling • Incorrect angle of separation tube or header will be cause poor cooling or refrigerant noise problem
Drain piping work	⑥ Confirm the width across flats dimension and shape of flare nuts. ⑦ Always blow nitrogen while brazing. ⑧ Perform flushing before connecting the equipment.	• Refrigerant leakage will cause low performance and abnormal stopping
Duct work	① Always make the downward slope of the drain pipe 1/100 or greater and make the horizontal length within 20m. ② Use hard polyvinyl chloride pipe as the drain pipe. ③ Support the drain pipe between 1.5m to 2.0m. ④ Use pipe of 1 rank up (VP30 or greater) as central piping.	• Prevention of water leakage
Heat insulation work	Select the size of the heat insulating material according to the ambient temperature and relative humidity of the refrigerant. Use a heat insulating material having a heat conductivity of 0.043W/(m.k) or less.	• Prevention of water leakage
Electrical work		
Outdoor unit foundation work		
Outdoor unit installation	When making flare connections always use a torque wrench and tighten the flare nut positively to the specified torque.	• Refrigerant leakage will cause low performance and abnormal stopping.
Refrigerant piping connection work	Pressurize the product with nitrogen gas up to the design pressure and conduct a 24Hr air tightness test.	• Refrigerant leakage will cause low performance and abnormal stopping.
Air tightness test	① Install a vacuum pump with reverse flow check mechanism or a reverse flow check adapter to a conventional vacuum pump and use. ② Pump down sufficiently. Approximately 1 hour or longer after -14.5psi (-0.10MPa) reached. Allow to stand for approximately 1 hour after stopping the vacuum pump and confirm that the needle does not return.	• Mixing in of vacuum pump oil by reverse flow will cause equipment trouble. • recommend the vacuuming mode
Vacuum drying	③ Air purging using refrigerant is strictly prohibited.	

*Vacuuming mode

This function is used for vacuuming the indoor unit and the connection piping.
Note: For starting Vacuuming mode, the refrigerant address setting has to be finished.

When the [vacuuming mode] is set, <Push switch setting, F3:21>
EEV of connected all indoor units opens.
So, the vacuuming indoor unit and piping becomes easier.

When the vacuuming ends, please turn off the power supply for all of the indoor units and the outdoor unit, [vacuuming mode] is released.

Execution 2/2

	Execution procedure and precautions	Reason
Addition refrigerant charging	<ol style="list-style-type: none"> ① Confirm the additional refrigerant amount with the installation manual, etc. ② Always take the R410A refrigerant from the cylinder liquid phase and charge it using the gas phase. (Do not lay a cylinder with siphon pipe on its side.) ③ Use an R410A dedicated gauge manifold and charging hose. ④ Charge refrigerant using the liquid pipe. ⑤ When the defined amount of refrigerant cannot charge using the liquid pipe, charge refrigerant using the gas pipe while operating the cooling test run. Charge refrigerant bit by bit with cautious operation of valve for the liquid refrigerant back prevention. 	<ul style="list-style-type: none"> • If taken from the air phase, since the composition of the refrigerant which is charged will change, low performance and abnormal stop will occur easily. • Prevent erroneous sealing in of refrigerant.
Gas leak test	Use an R410A dedicated leak tester to check for gas leaks.	• A leak tester for other than R410A cannot detect leaks.
Initial setting	<ol style="list-style-type: none"> ① Set the refrigerant circuit address. ROTARY SW: REF ADX10, X1 ② Confirm the DIP SW setting SET 1: Factory setting, SET 2: All OFF, SET 3: All OFF, SET 4: Factory setting ③ Confirm the Terminal resistor setting SET 5-4 OFF: Disable, ON: Enable <p>[Note] Perform in the power OFF state.</p>	<ul style="list-style-type: none"> • Dual address setting No. is not allowed in one network. • If the DIP SW setting is wrong, the system may not work correctly • If the Terminal resistor setting is wrong, the system may detect transmission error
Piping length setting	<p>Set according to the length of the connection piping. Set to "Standard 40 to 65m" at the factory. Set using the push button SW on the outdoor unit main PCB. < Refer to the Page 01-17 Setting mode F2-00 > Set the pipe length to be the nearest indoor unit from the outdoor unit</p> <p>[Note] Perform in the power ON state after all indoor units have stopped operation</p>	<ul style="list-style-type: none"> • When the setting is not same as the real piping length, the system may not work correctly. • If the pipe length is set as the farthest indoor unit, the nearest operating indoor unit may be stopped the operation by the icing up protection as by over cooling.
Address setting for Signal Amp - When using signal Amps -	<p>When setting the address of Signal amplifier, please refer to the installation manual of the signal amplifier.</p> <p>The address setting can be set by automatically from 1 outdoor unit on the network. < Refer to the Page 01-06 Setting mode F3-10 ></p> <p>[Note] Manual setting: Set the rotary SW on the PCB in the power OFF state. Automatic address setting: Perform setting by push button SW on the outdoor unit Main PCB in the power ON state after all indoor units have stopped operation.</p>	<ul style="list-style-type: none"> • Dual address setting No. is not allowed in one network.
Address setting for Indoor unit	<p>Set the refrigerant circuit address and indoor unit address. Can be set by rotary SW on the indoor unit PCB (Main PCB or Switch PCB) or from a remote controller or from a push button SW on the outdoor unit Main PCB < Automatic address setting, Refer to the Page 01-07 Setting mode F3-11></p> <p>[Note] Manual setting: Set the rotary SW on the PCB in the power OFF state. Automatic address setting: Perform setting by push button SW on the outdoor unit Main PCB in the power ON state after all indoor units have stopped operation.</p>	<ul style="list-style-type: none"> • Dual address setting No. is not allowed in one network.
Indoor unit connection check	<p>Before starting the system, check on the number of indoor units and the total capacity. < Refer to the Page 01-08 Setting mode F3-12 ></p> <p>[Note] Perform setting by push button SW on the outdoor unit Main PCB in the power ON state after all indoor units have stopped operation.</p>	<ul style="list-style-type: none"> • Normal operation will not be possible without performing the indoor unit connection check.
Test run & adjustment		
Turnover & explanation of operation		

1-2 TEST RUN METHOD

1-2-1 Check Items Before Power ON

Procedure	Check contents	Judgement standard	Check
Power source	Circuit breaker capacity	Outdoor unit: 040,045LBLAH: 32A / 054LBLAH: 40A / LELAH: 16A	
		Indoor unit: 20A	
		Leakage current: 30mA 0.1sec or less	
		Install a breaker (Included with Earth Leakage Circuit Breaker) in accordance with the related laws and regulations.	
	Type of power source wiring	Outdoor unit: LBLAH: 6.0mm ² 2 wires + Ground(4.0mm ²) LELAH: 2.5mm ² 3 wires + Ground(2.5mm ²)	
		Indoor unit: 2.5mm ² 2 wires + Ground	
	Supply power source	Outdoor unit side: LBLAH: AC 230V~ 50Hz / LELAH: 3N 400V~ 50Hz	
		Indoor unit side: AC 230V (220-240V)	
	Wiring on terminal blocks	Use crimp-type terminals with insulating sleeves for stranded conductor cable	

Outdoor unit	Appearance	Shall be no scratches, deformation, etc. (Be careful of deformation of the front panel)	
	Serial No.	Shall be checked and entered in the check sheet.	
	Outside air temperature	Shall be checked and entered in the check sheet.	
	Power source wiring connection	Connection points check & loose terminal block screws check	
	Type of communication line	0.33mm ² , shielded wire used (22AWG)	
	Communication line connection	Connection points check & loose terminal panel screws check	
	Connection piping	Check whether or not the heat insulation material is installed without a gap.	
	DIP-SW setting	DIP SW SET1, SET4 : Factory setting, SET2,SET3, SET5-1,2,3: ALL OFF	
		Terminal resistor setting SET5 - 4 OFF: Disable, ON: Enable	
		Check the resistance value for each network segment Refer to the installation manual 7.7	
	Rotary SW setting	Refrigerant circuit address setting (SET : REF AD x10 and REF AD x1)	
	Additional refrigerant amount	Comparison of calculated value and value written on electrics box. Entered in check sheet. Refer to the installation manual 8.3.2	
	3-way valve	Gas pipe: fully open	
		Liquid pipe: fully open	

[Note] If operated with the 3-way valve closed, the oil discharged from the compressor will not be returned and will lead to trouble.

Indoor unit	Appearance	There shall be no scratches, deformation, tilting, etc.	
	Serial No.	Shall be checked and entered in the check sheet.	
	Drain cap installation	Shall be installed positively.	
	Power source wiring connection	Connection points check & loose terminal panel screws check	
	Type of communication line	0.33mm ² , shielded wire used (22AWG)	
	Communication line connection	Connection points check & loose terminal panel screws check	
	Type of remote controller wiring	2 wire type : 16 to 22AWG (0.33 to 1.25mm ²) 3 wire type : 22AWG (0.33mm ²)	
	Remote controller wiring connection	Connection points check & loose terminal panel screws check	
	Connection piping	Check whether or not the heat insulation material is installed without a gap.	
	Rotary SW setting	Refrigerant circuit address (REF AD)	
		Indoor unit address (IU AD)	
		At automatic address setting, IU AD/REF AD shall be [0].	
		Remote controller address (RC AD)	
	DIP-SW setting	Function setting (Remote controller custom code/ external input switching/ auxiliary heater ON-OFF)	

1-2-2 Check Items After Power ON

[Note]

Cooling test run for each refrigerant circuit.

If multiple refrigerant circuits are test run at the same time, refrigerant circuit address setting errors cannot be detected.

Procedure	Check contents	Judgement standard	Check
Power ON	Outdoor unit circuit breaker ON	Check lighting of Main PCB LED101 and 7-segment display.	
	Indoor unit circuit breaker ON	Check whether or not indoor unit OPERATION and TIMER lamps flash alternately.	

[Note] Turn on all indoor units power in the same refrigerant circuit address.

When the system operates with the indoor units remaining no power, it is cause of malfunction.

Outdoor unit Main PCB push button SW setting/check	Function setting	Are the necessary functions set ? < For the setting, Refer to the page 01-16 ~ 19 >	
--	------------------	--	--

Address setting/ check	Automatic address setting	Addresses shall be assigned to all indoor units / Signal amps. Check for unset or duplicated addresses. < For the setting, Refer to the page 01-06, 07 >	
	Address read	All the indoor units and outdoor units of the same refrigerant circuit can be checked on the service tool.	
	Address record	Enter the set addresses in the check sheet.	
	Address hold check	Check whether or not the address setting is held by the service tool after indoor/outdoor circuit breakers were turned OFF to ON.	
Indoor unit connection check	Indoor unit connection check	Are the number of connecting indoor units correct ? Is the total capacity of indoor units correct ? < For the checking, Refer to the page 01-08 >	

[Note] Before connecting service tool, the address setting has to be completed.

Cooling test run	Outdoor unit push button SW operation	All the indoor units in the same refrigerant circuit shall enter the cooling test run state. The outdoor units corresponding to the operation capacity of the indoor units shall operate. < Test operation procedure, Refer to the page 01-09,10 >	
All of the indoor units operation (after 30 mins)	<On service tool>		
	High pressure	HPS: 391.5psi (2.7 MPa) *	
	Low pressure	LPS: 130.5psi (0.9 MPa) *	
	Discharge pipe temperature (outdoor unit)	TH1: 81°C *	
	Suction pipe temperature (outdoor unit)	TH4: 15°C *	
	Inlet air temperature (indoor unit)	TH21: 27°C *	
	Heat exchange inlet temperature (indoor unit)	TH22: 11°C *	
	Heat exchange outlet temperature (indoor unit)	TH24: 13°C *	
	Compressor operation	Shall operate corresponding to the operation capacity of the indoor units.	
	Data output	Service tool used, output (CSV ⇒ Excel)	
	<Outdoor unit>		
	Outdoor Main PCB 7-seg. display	There shall be no Error information on the 7-segment display on the Main PCB.	
	Operation voltage	1 Phase: 198 to 264V / 3 Phase: 342 to 456V	
	Abnormal sound/ abnormal vibration	These shall be no abnormal sound or abnormal vibration.	
		The outdoor fan shall not make a moaning sound.	
		There shall be no discharge air leaking from the outdoor duct.	
		There shall be no pipe chattering sound or flute sound generated.	
	<Indoor unit service tool + actual measurement>		
	Outlet air temperature	Inlet air temperature and outlet air temperature difference shall be 10°C or greater.	
	Abnormal sound/abnormal vibration	There shall be no abnormal sound or abnormal vibration.	
	Water leakage check	There shall be no water leakage. There shall be no condensation on the drain, cabinet, piping, and discharge port.	
	Remote controller operation	Shall operate according to the settings. (ON-OFF, set temperature change)	

Procedure	Check contents	Judgement standard	Check
Indoor unit individual operation	<Indoor unit service tool + actual measurement>		
	Fan operation	Shall be switched to all fan speeds in the cooling mode.	
	Louver operation (except duct)	Louver shall be switched to all positions. Shall also swing.	
	Outlet air temperature	Inlet air temperature and outlet air temperature difference shall be 10°C or greater.	
	Abnormal sound/abnormal vibration	There shall be no abnormal sound or abnormal vibration.	
	Water leakage check	There shall be no water leakage. There shall be no condensation on the drain, cabinet, piping, and discharge port.	
	Remote controller operation	Shall operate according to the settings. (ON-OFF, set temperature change)	

*
 These are representative figures of AJ*054LELAH at the standard condition. (Indoor : 27°C),
 Outdoor : 35°C)
 If conditions are different from those above mentioned, the figures will be changed slightly.
 It depends on following conditions.

- Outdoor unit capacity
- Indoor and outdoor temperature
- Indoor unit capacity
- Pipe length
- etc

Trouble shooting on Test run operation

1. Error occurred

- Check on the Error code on the Remote controller or Indoor unit or Outdoor unit or Service tool and check the description of the Error code.
 < Refer to the Trouble shooting in the Service manual.>
 < Refer to the Execution of precautions 1-1 and Check item Before power ON 1-2-1>

2. No good performance without error code

- Check if the protection controlling is operating or not
 Evaporator Icing up protection, High discharge temperature protection, etc.
 < Refer to the part of protection controlling in the Service manual >
- Check on the refrigerant circuit
 Refrigerant amount, Pipe blockage, Wrong position of separation pipes etc.
 < Refer to the Execution of precautions 1-1 and Check item Before power ON 1-2-1>
 < Refer to the regulation of installation in the Installation manual>

1-2-3 Automatic address setting for signal amplifiers when using signal amplifiers




When setting the address of the signal amplifier, please use the factory setting.
(See the installation manual of the signal amplifier)

When the system is normal, nothing will be displayed on the 7 segment display.

When ERROR is displayed, inspect the units.

Use the "MODE/EXIT", "SELECT", and "ENTER" buttons on the outdoor unit Main PCB to configure settings according to the procedures below.

● SWITCH POSITION

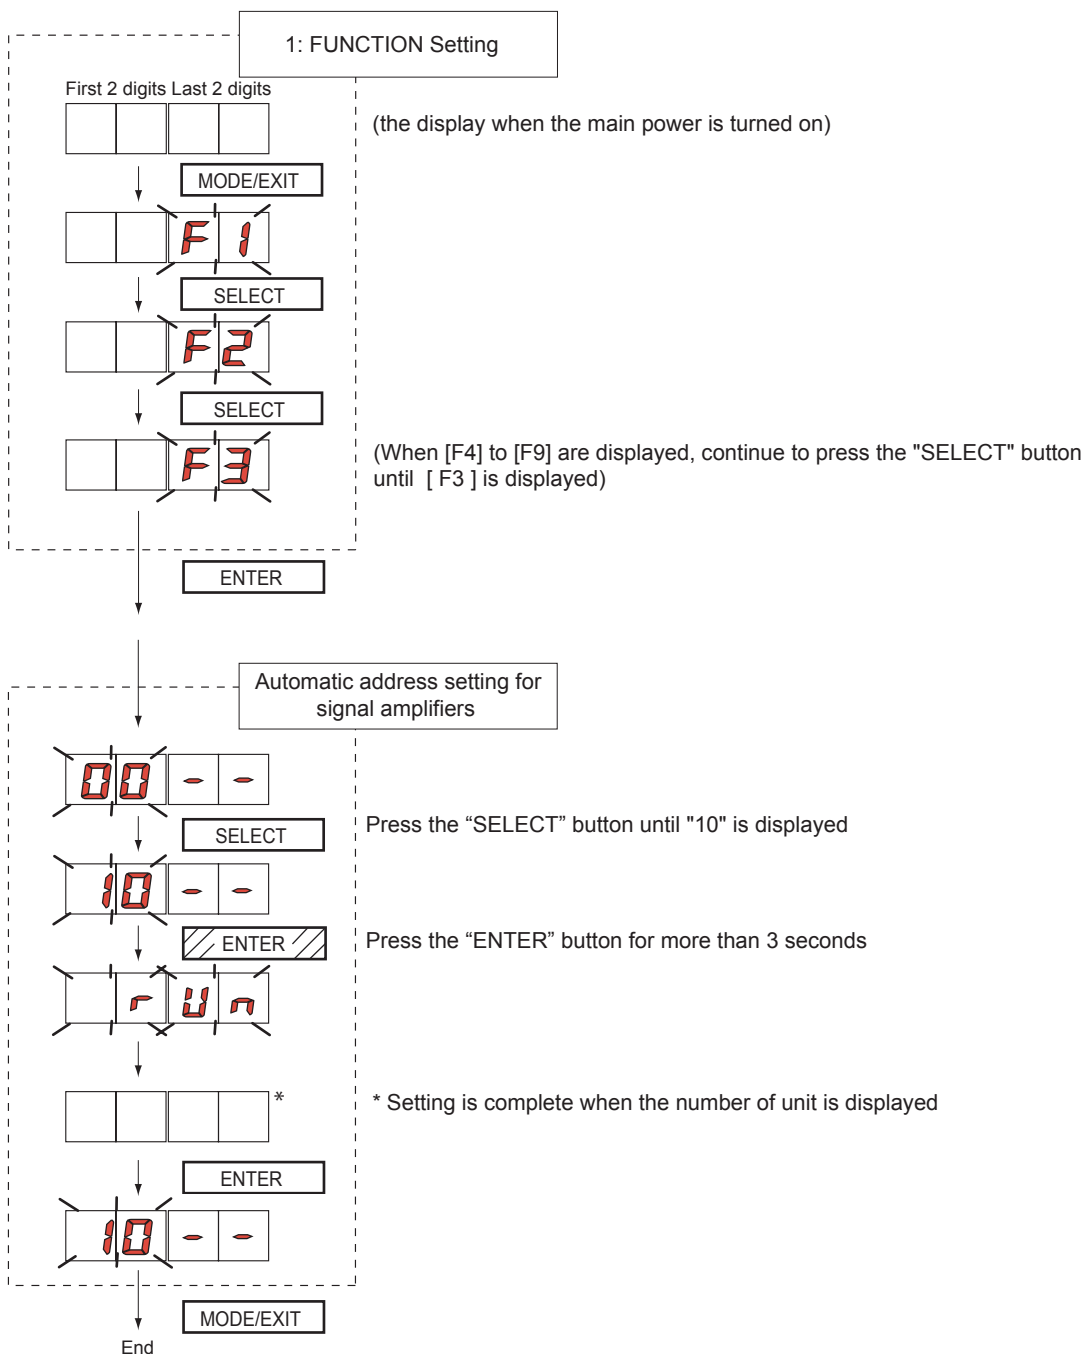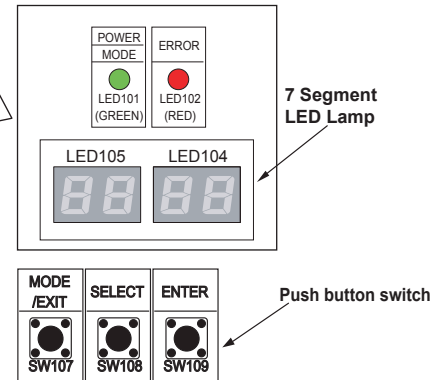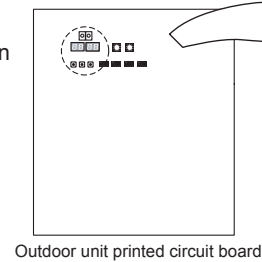

1-2-4 Automatic address setting for Indoor units

Check that the rotary switch IU AD on the indoor unit Main PCB is set to "00". If it is not set to "00", it means the address of that device is not set. (Factory default is "00").




Turn on the power of the indoor and outdoor units.

When the system is normal, nothing will be displayed on the 7 segment display.

When ERROR is displayed, inspect the units.


Use the "MODE/EXIT", "SELECT", and "ENTER" buttons on the outdoor unit Main PCB to configure settings according to the procedures below.

● SWITCH POSITION

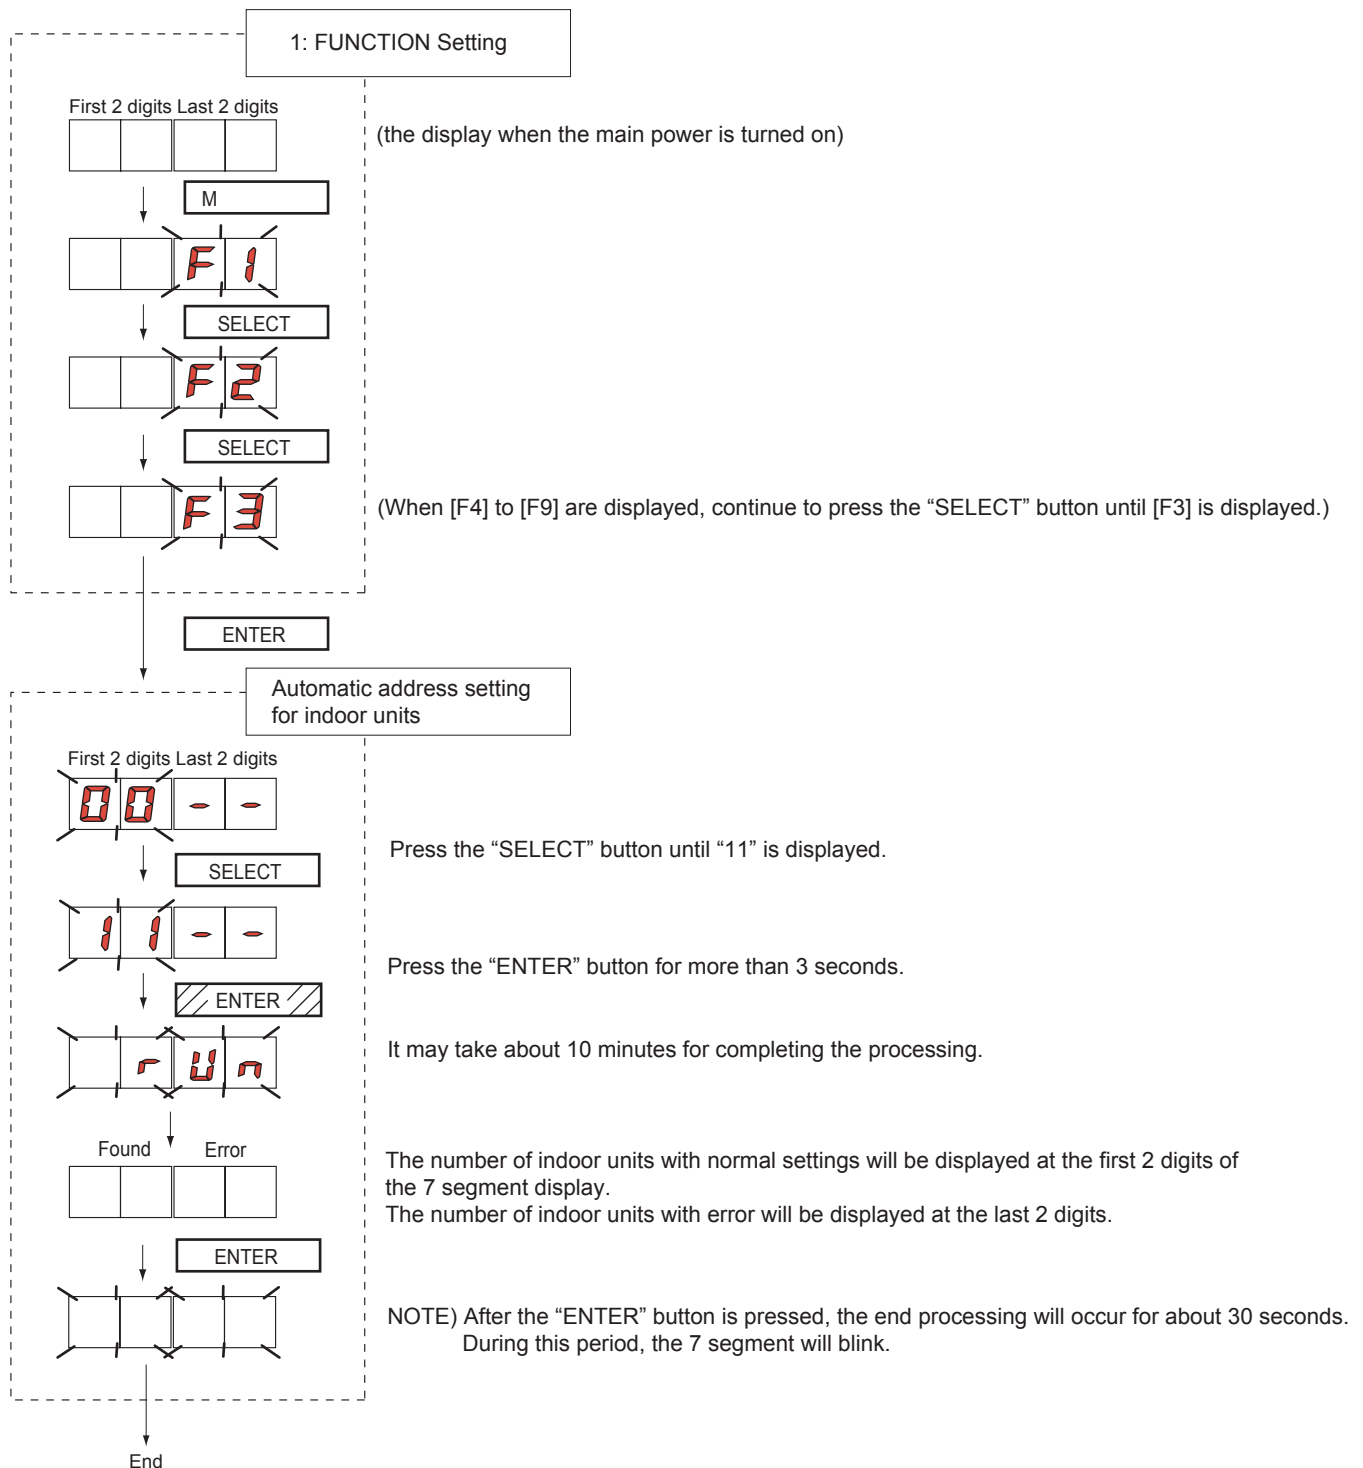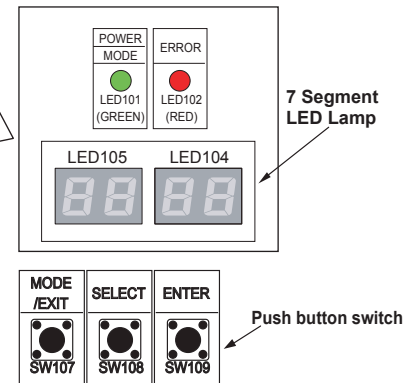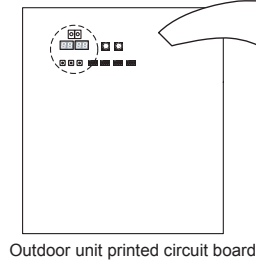


1-2-5 Indoor unit connection check

● SWITCH POSITION

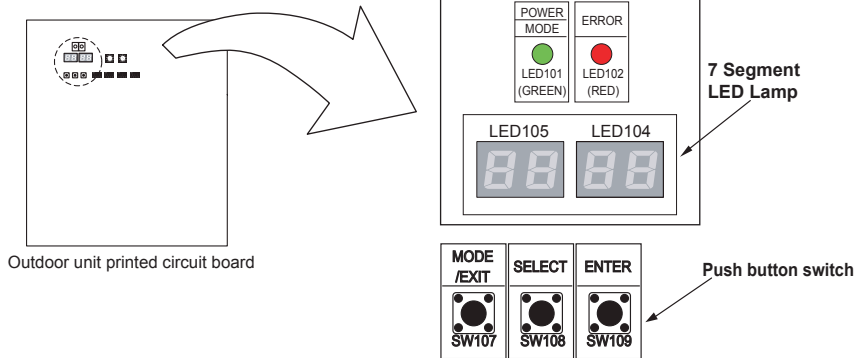

Please perform the indoor unit connection check according to following procedures.



- Turn on the power of indoor unit and outdoor unit.

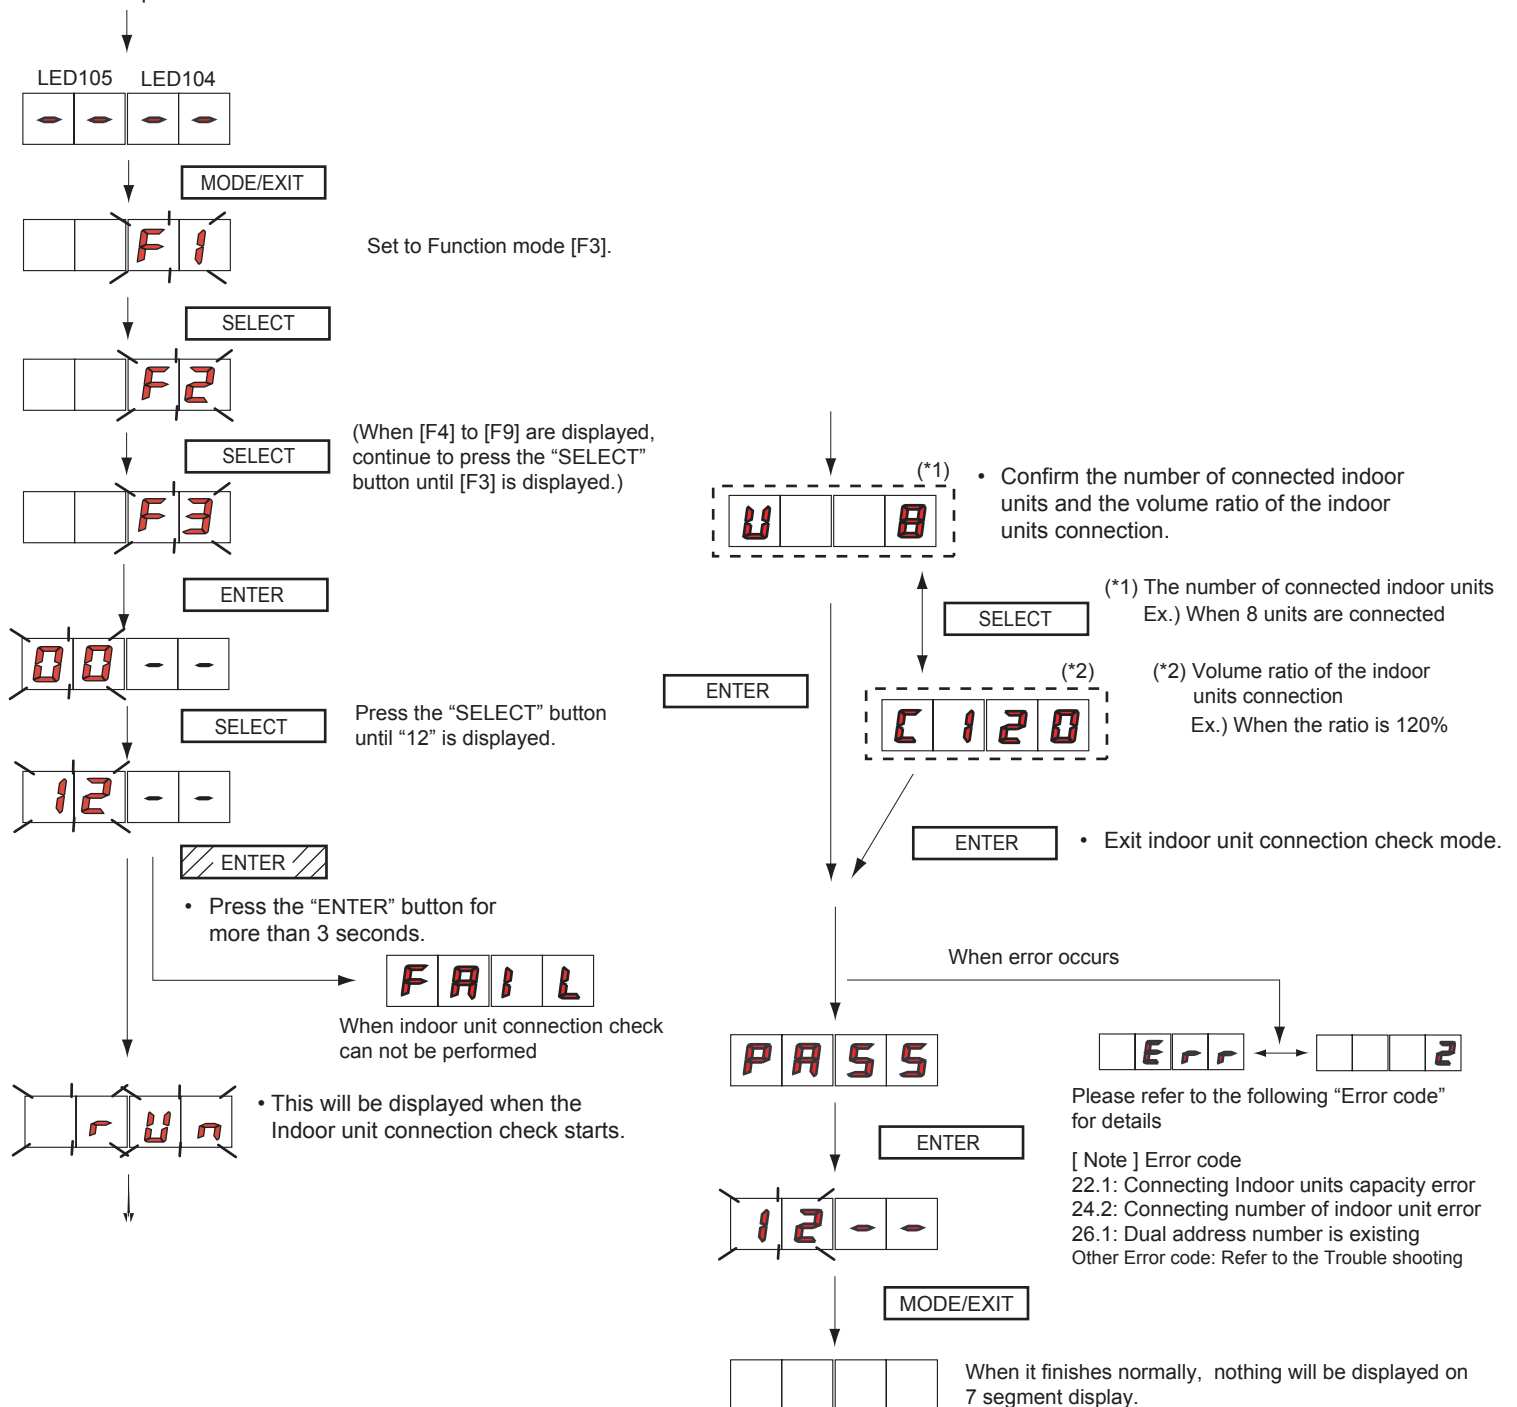

1-2-6 Test Run From Outdoor Main PCB

All the indoor units connected to the outdoor unit can be test-operated by push button setting.


● SWITCH POSITION

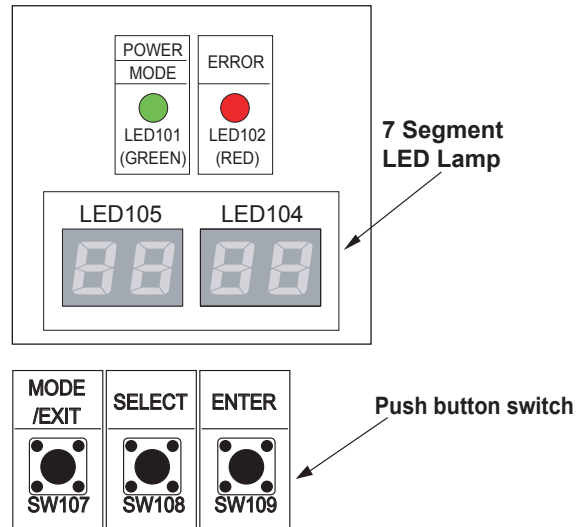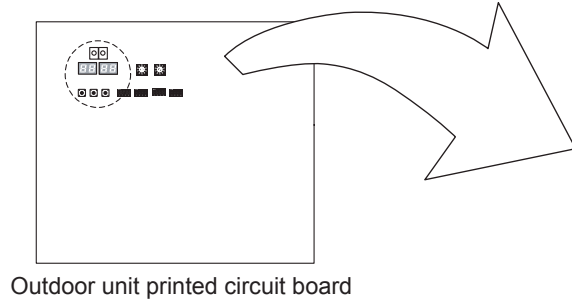


● TEST RUN SETTING

For a detailed description of push button operation, refer to the [D&T manual Chapter 6. SYSTEM DESIGN]


< Monitoring condition >




< Mode select condition >

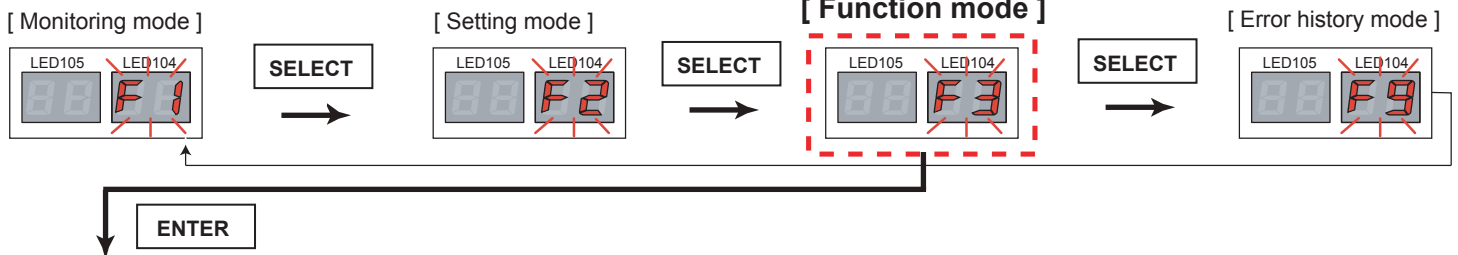

< Function select condition >

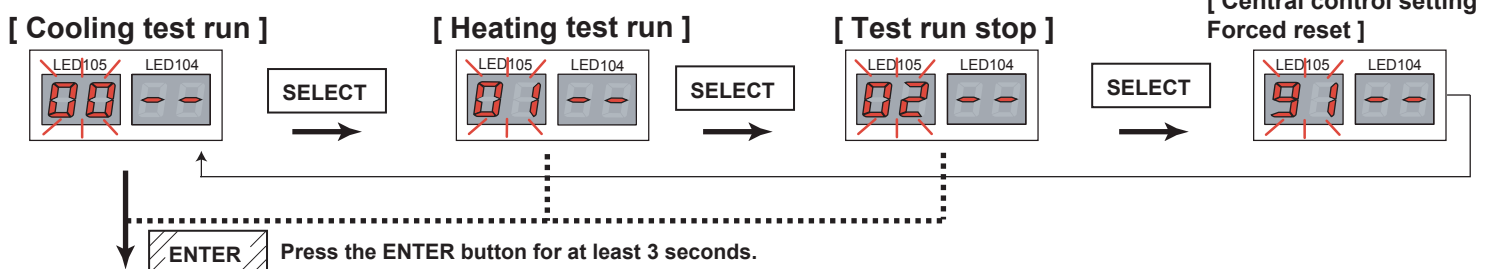


< Pursuance completion >

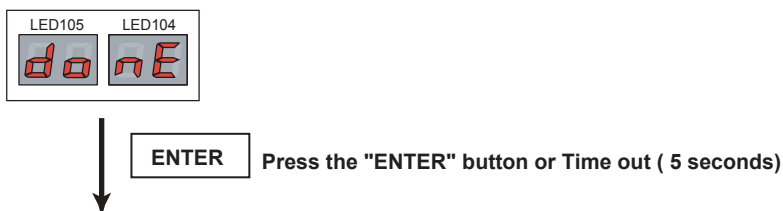

< Return to mode select condition >



< Return to monitoring condition >







Note

There are the following 2 methods of resetting test operation.


- (1) Automatic reset when 60 minutes has elapsed.
- (2) Reset when operation stop was performed.

1-2-7 Test Run From Remote Controller

1. Standard wired remote controller

Stop the indoor unit. Push the  button and  button simultaneously for more than two seconds. The air conditioner will start to conduct a test run and "a i" will display on the remote controller display. However, the ,  setting button does not have function, but all other buttons, displays, and protection functions will operate.


- Perform the test operation for 60 minutes.
- To stop test run, push the START / STOP button of the standard wired remote controller.
- For the operation method, refer to the operating manual and perform operation check.
- Check that there are no abnormal sounds or vibration sounds during test run operation.

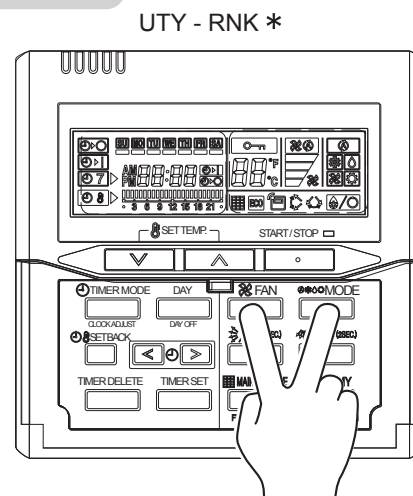





2. Standard wireless remote controller

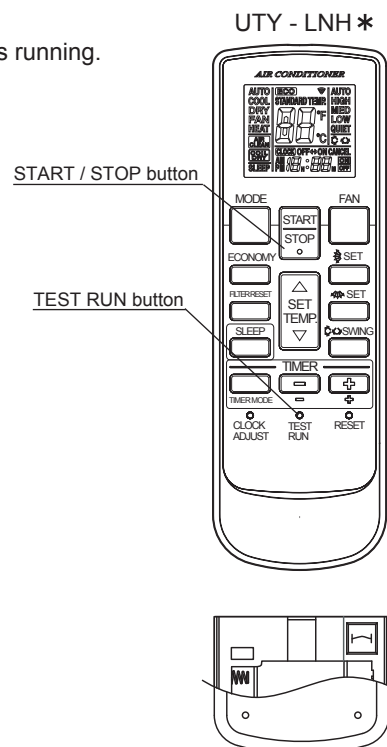
- Press the TEST RUN button on the remote controller, while the air conditioner is running.
- To end test run operation, press the remote controller START / STOP button.


When the air conditioner is being test run, the OPERATION and TIMER lamps of indoor unit flash slowly at the same time.



3. Simple remote controller

Stop the indoor and outdoor units. Push the remote controller  button and  button simultaneously for more than three seconds. The air conditioner will start to conduct a test run and "a i" will display on the temperature display. However the ,  setting button does not have function but all other buttons, displays and protection functions will operate.


- To stop test running press the  button of the simple remote controller.
- For the operation method refer to the operating manual and perform operation check.
- Check that there are no abnormal sounds or vibration sounds during test run operation.

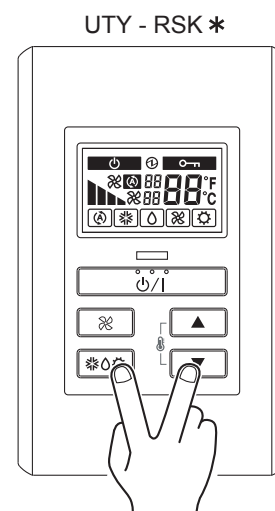


4. Central remote controller


Test run operating procedure

< Monitor screen : 9 units display >

- 1) Press  Button
- 2) Press the [Setup Menu (F2)] button

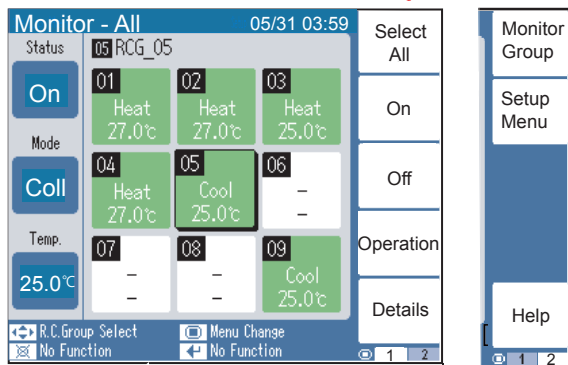



UTY-DCG *

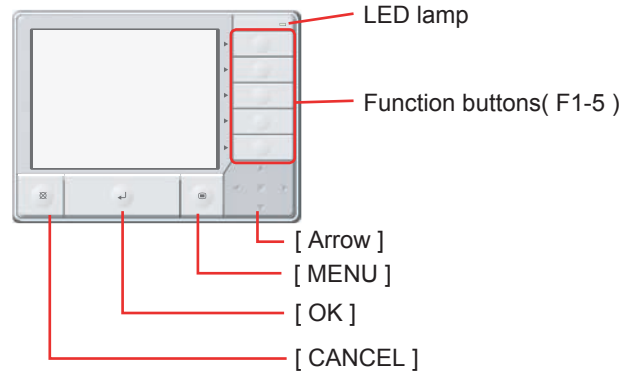


< Password verification >


- 3) Shift Indoor unit special setting by pressing the [] button and [] button

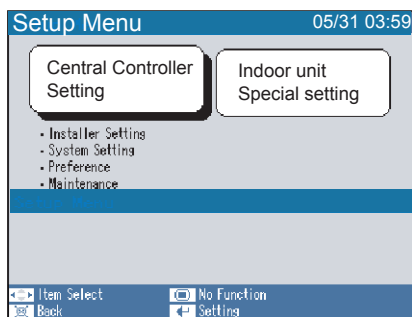

- 4) Shift the Test Operation by pressing the [] button and [] button

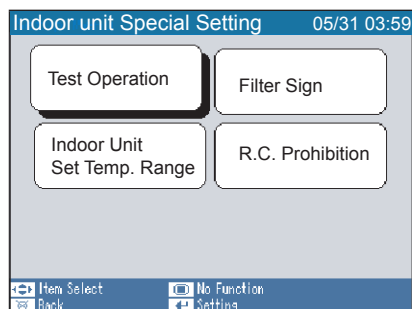

- 5) Press the [Select All (F2)] button or [Identify Unit (F3)] button

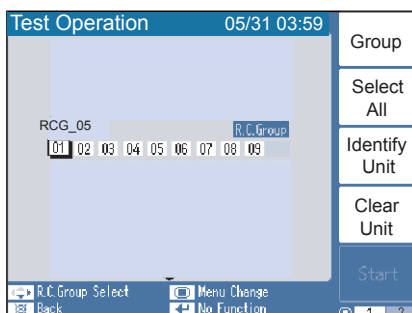


[Select All (F2)] : All of R.C.Group (Indoor units)
[Identify Unit (F3)] : Specific R.C.Group (Indoor unit)

- 6) Press the [Start (F5)] button

5. Touch panel controller

Test run operating procedure

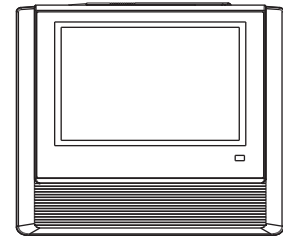

<Monitor screen (icon)>

Monitor Mode 10/11.2008.Mar. 02:20 PM **Status: On**

Top Up Down List

Office A On Cool 21.5 °C	Office B On Heat 21.0 °C	PC Room On Cool 26.0 °C
Room 101 Off	Restrant On Auto 24.0 °C	Entrance On Auto 24.0 °C
Meeting 1 On Heat 21.5 °C	Meeting 2 Off	Meeting 3 On Heat 21.0 °C
Conference A On Heat 21.5 °C	Conference B On Auto 22.0 °C	Parking lot Off

Setting
Schedule
Select All
Clear All
Operation
On
Off

(1)
(1)
(2)
(*)

<Monitor screen (list)>

Monitor Mode 10/11.2008.Mar. 02:20 PM **Status: On**

Top Up Down List


Name	Expand	Status	Mode	Set Temp	Fan	R/C Prohibit
Office A		On	Heat	21.5 °C	High	
Office B		Mixed	Mixed	Mixed	Mixed	Mixed
PC Room		On	Auto	24.0 °C	Low	
Room 101		Off				
Restrant		On	Cool	26.0 °C	Auto	
Entrance		Off				
Meeting 1		Off				

Setting
Schedule
Select All
Clear All
Operation
On
Off

(1)
(1)
(2)
(*)


- (1) Select the objective you want to test run.
Select the objective icon or list at the monitor screen. (Multiple selections is possible)
Select all the devices registered as objectives by pressing "Select All" on the monitor screen.
- (2) After objective selection at (1), switch to the <Setting screen> by pressing "Operation".

<Setting screen>

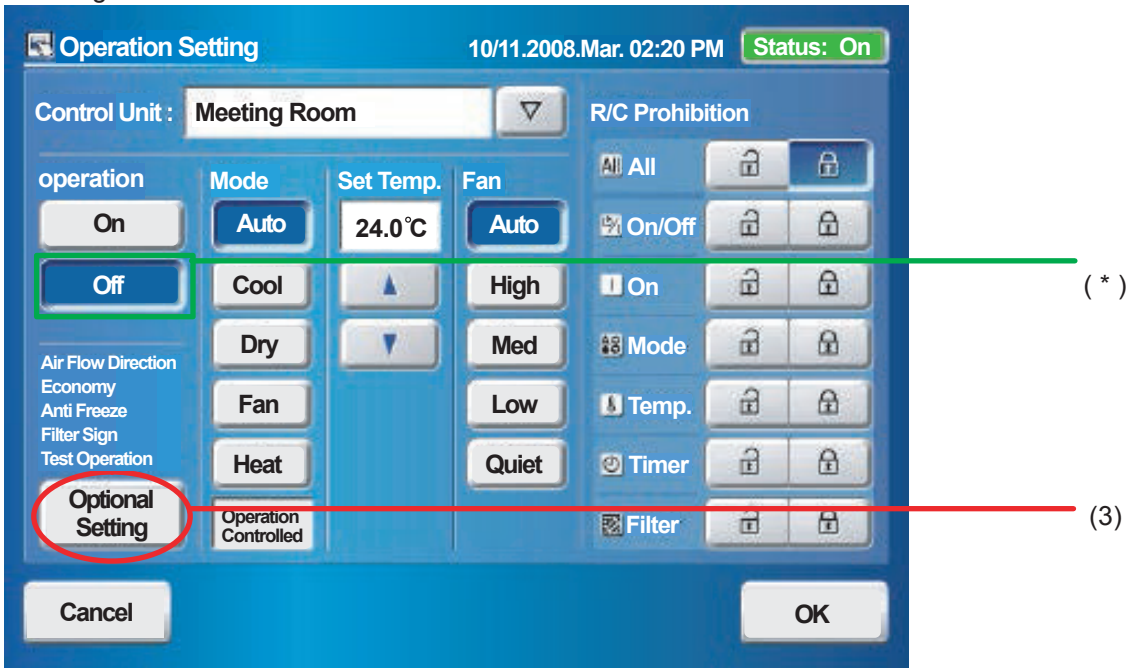

(3) Switch to the <Details setting screen> by pressing "Optional Setting" on the setting screen.


<Details setting screen>

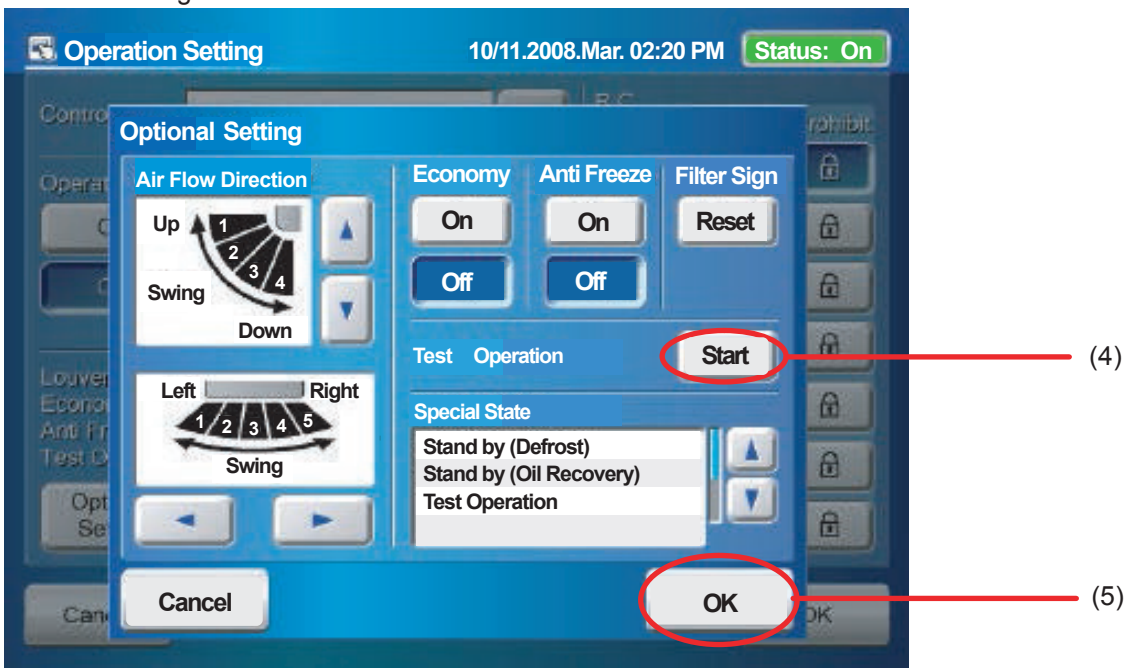

(4) Send (start) test run by pressing "Start" and then pressing "OK" on the details setting screen.

Test run continues for 60 minutes.

During sending, the slave screen shown below is displayed. When sending is completed, the sending slave screen and details setting screen are closed.

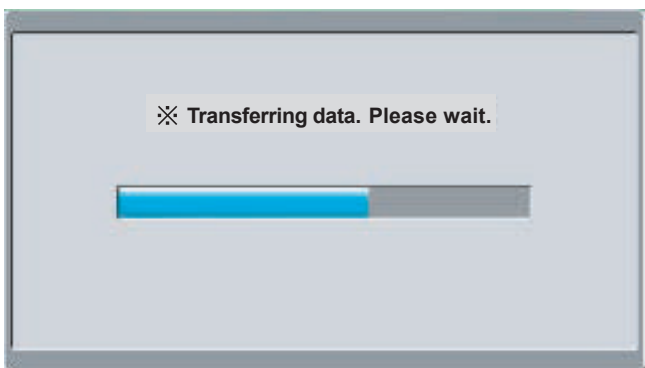

To interrupt test run, select the device being test run and execute an operation stop command.

(*) At the monitor screen, test run is reset by stopping operation of the objective devices by pressing "OFF".


(*) Or test operation is reset by stopping operation of the objective devices by pressing "Off" of Operation and then pressing "OK" on the setting screen.

6. 2-Wire type wired remote controller

- (1) Press "Menu" on the monitor screen. the < Main Menu screen > is displayed.
- (2) Press "Next Page" and press "Maintenance"
- (3) Press "Next Page" and press "Test Run". the <Test run screen > is displayed.
- (4) Press "OK"

The test run continues for 60 minutes.
To interrupt test run before it is complet, return to the "Monitor Mode Screen",
and press ON/ OFF.

UTY - RNR*

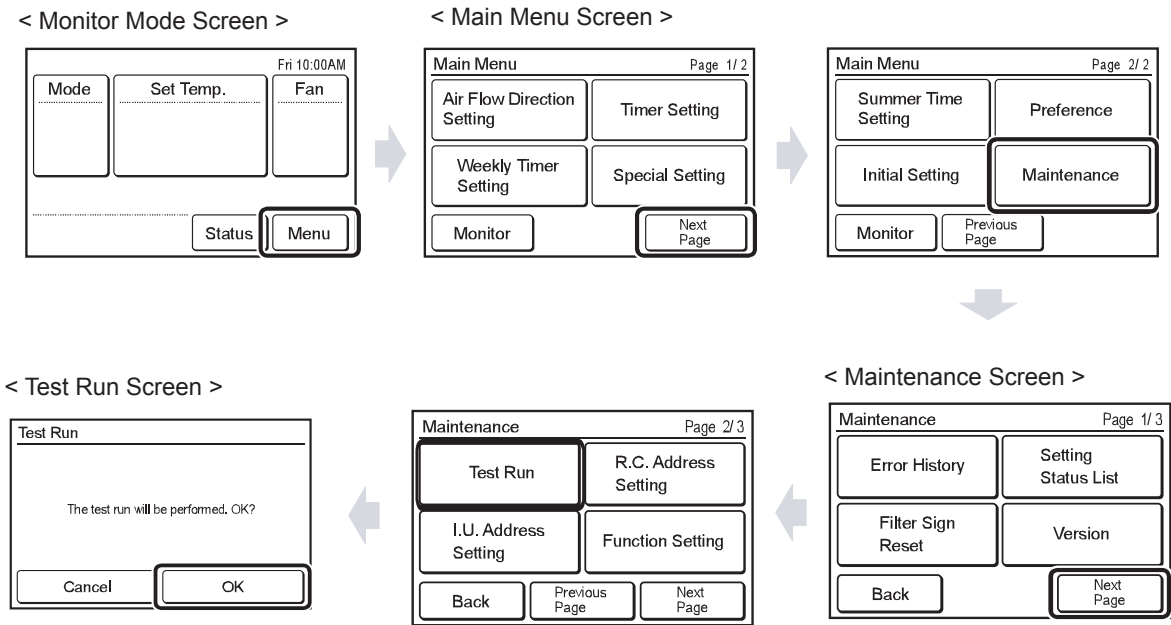

1-3 TEST RUN CONTROL

1. When the test run signal is transmitted from standard wired, wireless remote controller, simple remote controller, transmitted network, and outdoor unit.


- (1) The test run operation starts and the electric expansion valve is controlled to a maximum flow, regardless of the temperature condition.
- (2) Frost prevention operation has priority over item(1).
- (3) Whether state of the indoor unit operates or stops, All units in the same refrigerant circuit will start to conduct a test run in accordance with the operation mode set by push switch of outdoor unit (see 1 - 2 - 3).
- (4) After 60 minutes passes, the test run stops.
- (5) Test running initialization is shown below.

Operating Mode	EXCEPT FOR THE DUCT MODEL		DUCT TYPE	
	Cooling	Heating	Cooling	Heating
Fan speed	Hi	Hi	Hi	Hi
Room Temperature Indication	18	30	18	30
Vertical Air Direction Panel	Position ①	Position ④	_____	_____
Swing	OFF	OFF	_____	_____


*Example




■ COMPACT CASSETTE TYPE

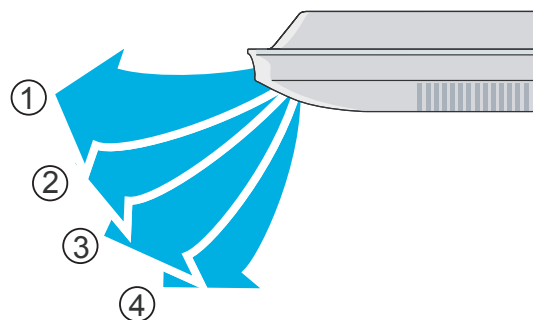



■ CEILING TYPE

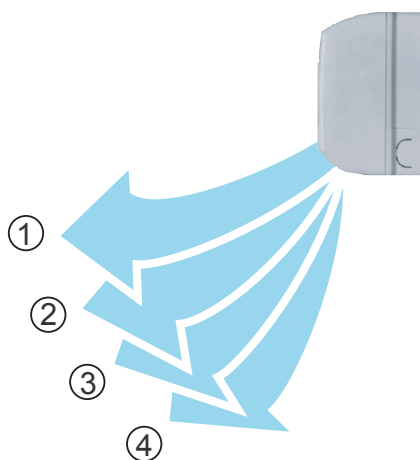


■ COMPACT WALL MOUNTED TYPE

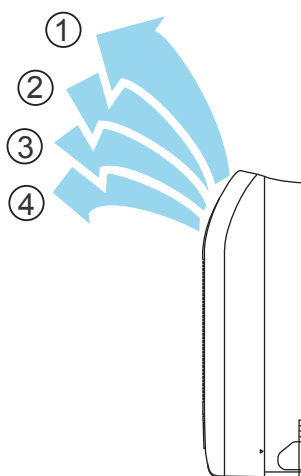

Set the air outlet selection switch to

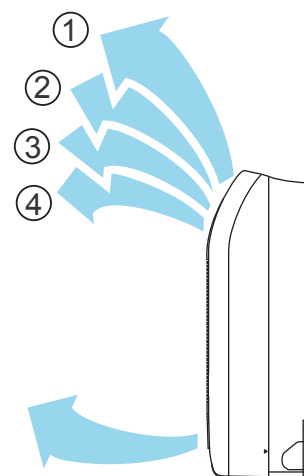

Set the air outlet selection switch to



■ COMPACT FLOOR

1-4 FIELD SETTING AND MONITOR MODE LIST FOR OUTDOOR UNIT

	Classification	ITEM CODE No.	Setting Mode	Information contents
Push switch on outdoor unit PCB Monitor mode [F1]	Device and system	00	Connected number of indoor unit	The number of the communicating unit is displayed
		01	Software version of outdoor unit	Software version : E●●●VO○☆■□L△△-◎
		02	Software version of INV PCB	[E●●●][VO○][☆■□][L△△][-◎] displays by five items
		03	Software version of communication PCB	It skips when there is no suffix「-◎」
	Operation of each part	10	Rotational speed of outdoor unit fan motor	The rotational speed of the outdoor unit fan motor is displayed [rpm]
		11	Rotational speed of INV compressor	The rotational speed of the compressor is displayed [rps]
		12	Current value of INV compressor	Current value of INV compressor is displayed [A]
		13	Forbidden	
		14	Pulse of EEV1	Pulse of EEV1 is displayed [pls]
		15	Pulse of EEV2	Pulse of EEV2 is displayed [pls]
	Time guard	20	Accumulated current time	Accumulated current time is displayed [×10 hour]
		21	INV compressor accumulated time [Cooling]	Accumulated time is displayed in the cooling operation of the INV compressor [×10 hour]
		22	INV compressor accumulated time [Heating]	Accumulated time is displayed in the heating operation of the INV compressor [×10 hour]
		23	Forbidden	
	Refrigerant cycle data 1	30	Information on Thermistor 1 (INV compressor discharge temperature sensor)	The value of the Thermistor 1 is displayed [°C] or [°F]
		31	Forbidden	
		32	Information on Thermistor 3 (Outdoor temperature sensor)	The value of the Thermistor 3 is displayed [°C] or [°F]
		33	Information on Thermistor 4 (Suction temperature sensor)	The value of the Thermistor 4 is displayed [°C] or [°F]
		34	Information on Thermistor 5 (Heat-exchanger (outlet) temperature sensor)	The value of the Thermistor 5 is displayed [°C] or [°F]
		35	Forbidden	
	Refrigerant cycle data 2	36	Information on Thermistor 7 (Liquid temperature sensor 2)	The value of the Thermistor 7 is displayed [°C] or [°F]
		37	Information on Thermistor 8 (Sub-cool heat-exchanger (inlet) temperature sensor)	The value of the Thermistor 8 is displayed [°C] or [°F]
		38	Information on Thermistor 9 (Sub-cool heat-exchanger (outlet) temperature sensor)	The value of the Thermistor 9 is displayed [°C] or [°F]
		39	Information on Thermistor 10 (INV compressor temperature sensor)	The value of the Thermistor 10 is displayed [°C] or [°F]
	Refrigerant cycle data 3	40	Forbidden	
	Refrigerant cycle data 4	50	Information on pressure sensor 1 (High pressure sensor)	The value of the pressure sensor 1 is displayed [MPa] or [psi]
		51	Information on pressure sensor 2 (Low pressure sensor)	The value of the pressure sensor 2 is displayed [MPa] or [psi]

	Classification	ITEM CODE No.	Setting Mode	ITEM CODE No.	Information contents	Default
Push switch on outdoor unit PCB Monitor mode [F2]	Install	00	Pipe length setting	00	40-65m	○
				01	0-40m	
				02	65-90m	
				03	90-120m	
	Correction	10	Forbidden	00	Factory default	○
				00	Normal mode	○
		11	Cooling capacity shift	01	Save energy mode +2°C	
				02	High power mode 1 -2°C	
				03	High power mode 2 -4°C	
				04	Forbidden	
				00	Normal mode	○
				01	Save energy mode -2°C	
				02	High power mode 1 +2°C	
				03	High power mode 2 +4°C	
		12	Heating capacity shift	00	Factory default	○
				00	Factory default	○
		13,14 16,17	Forbidden	00	Factory default	○
				00	Factory default	○
	Change of function 1	20	Switching between forced stop or emergency stop	00	Forced stop	○
				01	Emergency stop	
		21	Operation mode selecting method	00	Priority given to the first command	○
				01	Priority given to the external input of outdoor unit	
				02	Priority given to the master indoor unit	
		22,23,24 25,26,27	Forbidden	00	Factory default	○
				00	Factory default	○
		28	Change of unit (Temperature)	00	Celsius (°C)	○
				01	Disable (°F)	
		29	Change of unit (Pressure)	00	MPa	○
				01	psi	
	Change of function 2	30	Energy saving level setting	00	Level 1 (stop)	○
				01	Level 2 (operated at 40% capacity)	
				02	Level 3 (operated at 60% capacity)	
				03	Level 4 (operated at 80% capacity)	
				04	Level 5 (operated at 100% capacity)	
		31,34	Forbidden	00	Factory default	○
				00	Invalid	○
		35	Presence of heater selection control using outdoor temperature*1	01	Valid	
				00	-20°C	○
		36	Outdoor temperature zone boundary temperature A*1	01	-18°C	
				02	-16°C	
				03	-14°C	
				04	-12°C	
				05	-10°C	
				06	-8°C	
				07	-6°C	
				08	-4°C	
		37	Outdoor temperature zone boundary temperature B*1	00	6°C	○
				01	-10°C	
				02	-8°C	
				03	-6°C	
				04	-4°C	
				05	-2°C	
				06	0°C	
				07	2°C	
				08	4°C	
				09	6°C	
				10	8°C	
				11	10°C	
				12	12°C	
				13	14°C	
				14	16°C	
				15	18°C	
	Low noise setting 1	40	Capacity priority setting	00	Off (quiet priority)	○
				01	On (capacity priority)	
		41	Low noise mode setting	00	Off (Normal)	○
				01	On (Low noise mode operation is always done)	
	Change of function 3	42	Forbidden	00	Factory default	○
				00	Factory default	○
	Change of function 4	70	Electricity meter No. setting 1 (Set the ones digit and tens digit of the No. of the electricity meter connected to CN135)*2	00~99	Setting number x00~x99 (Refer to Design & Technical Manual for details.)	00
				00~02	Setting number 0xx~2xx (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number xx00~xx99 (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number 00xx~99xx (Refer to Design & Technical Manual for details.)	00
	Change of function 4	71	Electricity meter No. setting 2 (Set the ones digit and tens digit of the No. of the electricity meter connected to CN135)*2	00~99	Setting number xx00~xx99 (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number 00xx~99xx (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number xx00~xx99 (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number 00xx~99xx (Refer to Design & Technical Manual for details.)	00
	Change of function 4	72	Electricity meter pulse setting 1 (Set the ones digit and tens digit of the No. of the electricity meter pulse setting connected to CN135)*3	00~99	Setting number xx00~xx99 (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number 00xx~99xx (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number xx00~xx99 (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number 00xx~99xx (Refer to Design & Technical Manual for details.)	00
	Change of function 4	73	Electricity meter pulse setting 2 (Set the ones digit and tens digit of the No. of the electricity meter pulse setting connected to CN135)*3	00~99	Setting number xx00~xx99 (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number 00xx~99xx (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number xx00~xx99 (Refer to Design & Technical Manual for details.)	00
				00~99	Setting number 00xx~99xx (Refer to Design & Technical Manual for details.)	00

*1 : Do not set this for outdoor units with Slave setting.

*2 : When electricity meter No. is set to "000" and "201 to 299", the pulses input to CN135 become ineffective.
Available setting number is "001" to "200"

*3 : When the electricity meter pulse setting is set to "0000", the pulses input to CN135 become ineffective.
Available setting number is "0001" to "9999"

	Classification	ITEM CODE No.	Setting Mode	Setting Function
Push switch on outdoor unit PCB Monitor mode [F3]	Forced operation	00	Cooling test run	Forced thermostat-ON in Cooling.
		01	Heating test run	Forced thermostat-ON in Heating.
		02	Test run stop	Test run is stopped.
		03.04	Forbidden	
	Install and maintenance 1	10	Signal amplifier automatic address	Automatic address setting operates for signal amplifier.
		11	Indoor unit automatic address	Automatic address setting operates for indoor unit of same refrigerant circuit.
		12	Indoor unit connection check	The number of indoor units and the total capacity of indoor units of same refrigerant circuit.
	Install and maintenance 2	21	Vacuuming mode	Vacuuming mode operates Refer to page 01-01 for the function.
	Clear	30	Error history clear	All the abnormal code histories are cleared.
		31	Forbidden	
		32	Current time clear	Accumulated current time becomes [0]
		33	INV compressor accumulated time clear	Accumulated time of the INV compressor becomes [0]
		35	Field setting all clear	Return to default the all set items.
		36	Clear memorized information of "F3 - 12" (Indoor unit connection check)	The information of the number of indoor units and the total capacity of indoor units are cleared.
		40	Abnormal reset	It was displayed when abnormality occurs, and the total code is reset. This is a function that uses to clear abnormal display after the repair is completed. Please operate the switch after power off or power on the outdoor unit.
	Reset	41	Maximum memorized indoor unit number reset	Maximum memorized indoor unit number is reset "E14.5 : Indoor unit number shortage " error is cleared.
	Specialty function	91	Forced Central control function release	When the centralized control device failure, and the centralized control setting cannot be released, this function is used. All the limitations set with the centralized control device are released.

	Classification	ITEM CODE No.	Meaning of Error History Number	Information contents
Push switch on outdoor unit PCB Monitor mode [F9]	Error history	00	1 time ago (Newest)	When the error occurred, the error code is memorized up to 10 on Main PCB.
		01	2 time ago	
		02	3 time ago	If the memorized error code becomes over 10, the oldest one will be erased.
		03	4 time ago	
		04	5 time ago	
		05	6 time ago	
		06	7 time ago	
		07	8 time ago	
		08	9 time ago	
		09	10 time ago	

Refer to Chapter 4.TROUBLE SHOOTING
4-3-2 Error Code List for Outdoor unit

* < Reset Error Item List By Abnormal Reset Setting >

- Compressor Motor Loss of Synchronization
- Compressor 1 Temperature Abnormal
- Inverter Compressor Start Up Error
- Discharge Temperature 1 Abnormal
- Low Pressure Abnormal
- Current Sensor 1 Error
- Trip Detection
- Rush Current Limiting Resistor Temp Rise Protection
- Outdoor Unit FAN motor 1 Lock Error
- Outdoor Unit FAN motor 2 Lock Error

1-5 FIELD SETTING / FUNCTION SETTING FOR INDOOR UNIT

	Classification	ITEM CODE No.	Setting Mode	ITEM CODE No.	Information contents	Default
Indoor unit field setting setting by remote controller	Address	01	Indoor unit address	00~63	00~63	00
		02	Refrigerant circuit address	00~99	00~99	00
	Filter	11	Filter indicator Interval	00	Default	○
				01	Longer	
				02	Shorter	
		13	Filter sign display	00	Enable	○
				01	Disable	
				02	Display only on central remote control	
	Airflow	20	Ceiling airflow (Cassette type only)	00	Default	○
				01	High ceiling	
		23	Vertical airflow direction (Cassette type only)	00	Default	○
				01	Raise	
		24	Horizontal swing airflow direction (For horizontal swing equipped models)	00	Default	○
				01	Left half	
				02	Right half	
		26 *1	Static Pressure setting - Slim Duct type - The Range of static pressure is different from one model to other.	00	SP mode 00 0 Pa	
				01	SP mode 01 10 Pa	
				02	SP mode 02 20 Pa	
				03	SP mode 03 30 Pa	
				04	SP mode 04 40 Pa	
				05	SP mode 05 50 Pa	
				06	SP mode 06 60 Pa	
				07	SP mode 07 70 Pa	
				08	SP mode 08 80 Pa	
				09	SP mode 09 90 Pa	
				31	Normal SP 25 Pa	○
				00	SP mode 00 0 Pa	
				01	SP mode 01 10 Pa	
				02	SP mode 02 20 Pa	
				03	SP mode 03 30 Pa	
				04	SP mode 04 40 Pa	
				05	SP mode 05 50 Pa	
				06	SP mode 06 60 Pa	
				07	SP mode 07 70 Pa	
				08	SP mode 08 80 Pa	
				09	SP mode 09 90 Pa	
				10	SP mode 10 100 Pa	
				11	SP mode 11 110 Pa	
				12	SP mode 12 120 Pa	
				13	SP mode 13 130 Pa	
				14	SP mode 14 140 Pa	
				31	Normal SP 40 Pa	○
	Correction	30	Cool air temperature trigger	00	Default 0°F(0°C)	○
				01	Temperature overshoot setting +2°C	
				02	Temperature undershoot setting -2°C	
		31	Heat air temperature trigger	00	Default 0°F(0°C)	○
				01	Temperature undershoot setting -6°C	
				02	Temperature slightly undershoot setting -4°C	
				03	Temperature overshoot setting +4°C	
	Change of function 1	40	Auto restart *4	00	Enable	
		43	Cool air prevention	01	Disable	○
				00	Super low	○
		46	External control	01	Follow the setting on the remote controller	
				00	Start / Stop	○
				01	Emergency stop	
				02	Forced stop (Start/Stop by RC is restricted)	
		47	Error report target	00	All	○
				01	Display only for central remote control	
		49	FAN Setting when cooling thermostat OFF *5	00	Follow the setting on the remote controller	○
				01	Forced stop	
	Change of function 2	60	Switching functions for external inputs and external outputs terminals	00	Mode 0	○
				01	Mode 1	
				02	Mode 2	
				03	Mode 3	
				04	Mode 4	
				05	Mode 5	
				06	Mode 6	
				07	Mode 7	
		61	Control switching of external heaters (Except Compact wall mounted and Wall mounted)	08	Mode 8	
				00	Auxiliary heater control 1	○
				01	Auxiliary heater control 2	
				02	Heat pump prohibition control	
		62	Operating temperature switching of external heaters (Except Compact wall mounted and Wall mounted)	03	Heater selection control using outdoor temperature 1	
				04	Heater selection control using outdoor temperature 2	
				00	Setting 0	○
				01	Setting 1	
				02	Setting 2	
				03	Setting 3	
				04	Setting 4	
				05	Setting 5	

*1: Please refer to FAN PERFORMANCE CURVE within Design and Technical manual for the features of each setting.

*2: If the Setting Number in ARUM30TLAV is configured to "12 to 14", the operation is the same as that in "11 (SP mode 11)".

*3: If the Setting Number in ARUM36TLAV is configured to "10 to 14", the operation is the same as that in "09 (SP mode 09)".

*4: Auto restart is an emergency function such as for power failure etc.

Do not start and stop the indoor unit by this function in normal operation.

Be sure to operate by the control unit, converter or external input device.

*5: Fan Setting when cooling thermostat OFF, Connection of the wired remote controller (2-wire type or 3-wire type) and switching its thermistor are necessary.

1-6 FIELD SETTING / FUNCTION SETTING FOR OUTDOOR AIR UNIT

	Classification	ITEM CODE No.	Setting Mode	ITEM CODE No.	Setting Function	Default
Indoor unit field setting setting by remote controller Monitor mode [F1]	Address	00	Indoor unit address	00~63	00~63	00
		02	Refrigerant circuit address	00~99	00~99	00
	Filter	11	Filter indicator Interval	00	Default	○
				01	Longer	
				02	Shorter	
		13	Filter sign display	00	Enable	
				01	Disable	○
				02	Display only on central remote control	
	Airflow	26	Static Pressure setting - Outdoor air unit Only - The Range of static pressure is different from one model to other.	05	SP mode 05 50 Pa	
				06	SP mode 06 60 Pa	
				07	SP mode 07 70 Pa	
				08	SP mode 08 80 Pa	
				09	SP mode 09 90 Pa	
				10	SP mode 10 100 Pa	
				11	SP mode 11 110 Pa	
				12	SP mode 12 120 Pa	
				13	SP mode 13 130 Pa	
				14	SP mode 14 140 Pa	
				15	SP mode 15 150 Pa	
				16	SP mode 16 160 Pa	
				17	SP mode 17 170 Pa	
				18	SP mode 18 180 Pa	
				19	SP mode 19 185 Pa	
				31	Normal SP 185 Pa	○
	Change of function 1	40	Auto restart *1	00	Enable	
				01	Disable	○
		43	Cool air prevention	00	Super low	
				01	Follow the setting on the remote controller	○
		46	External control	00	Start / Stop	○
				01	Emergency stop	
		47	Error report target	02	Forced stop (Start/Stop by RC is restricted)	
				00	All	○
	Change of function 2	60,61,62	Forbidden	01	Display only for central remote control	
				00		○
		63	Humidifier control *2	00	mode 00	○
				01	mode 01	
				02	mode 02	
		65	Threshold temperature setting for cool / heat switch over*3	00	mode 0 ±5°C	○
				01	mode 1 ±2°C	
				02	mode 2 ±3°C	
				03	mode 3 ±4°C	
				04	mode 4 ±5°C	
				05	mode 5 ±6°C	
				06	mode 6 ±7°C	

*1: Auto restart is an emergency function such as for power failure etc.

Do not start and stop the indoor unit by this function in normal operation.

Be sure to operate by the control unit, converter or external input device.

*2: Select control conditions of external output.

"Mode 00" is output when heating thermostat is ON, "Mode 01" is output in heating operation, "Mode 02" is output in heating operation and in fan operation.

*3: Threshold temperature setting for cool / heat mode under auto operation ; Set temperature ±2°C to ±7°C.

*Cool / heat mode tends to be switched as the threshold temperature range gets smaller, and cool / heat mode becomes difficult to be switched as the threshold temperature range gets larger.

Set the proper value according to use conditions.

AIRSTAGE™ J-III

Variable Refrigerant Flow System

2. OUTDOOR UNIT OPERATION CONTROL

2. OUTDOOR UNIT

2-1 INPUT / OUTPUT LIST

		Input / output or kind of detail	Control range
INPUT	Discharge pressure sensor <HIGH> Suction pressure sensor <LOW> Discharge temperature sensor <TH1> Outdoor temperature sensor <TH3> Suction temperature sensor <TH4> Heat exchanger temperature sensor <TH5> Liquid temperature sensor <TH7> Sub-cool heat exchanger (inlet) sensor <TH8> Sub-cool heat exchanger (outlet) sensor <TH9> Compressor temperature sensor <TH10> Operation current sensor Pressure switch	Pressure sensor Pressure sensor Themistor <Blue> Themistor <- - > Themistor <Red> Themistor <Pink> Themistor <Green> Themistor <White> Themistor <Brown> Themistor <- - > Current sensor Pressure switch	Measure range 0.0 to 5.0MPa Measure range 0.0 to 1.7MPa Measure range 10 to 130°C Measure range -25 to 58°C Measure range -35 to 70°C Measure range -35 to 70°C Measure range -35 to 70°C Measure range -35 to 70°C Measure range -35 to 70°C Measure range -35 to 70°C Measure range 10 to 130°C Open 4.2MPa Short 3.2MPa
	Rotary SW & DIP-SW & Push SW	Address and function setting	
OUTPUT	Compressor Electronic expansion valve 1 (Main) Electronic expansion valve 2 (SC-Hex) Fan motor 1 (Upper) Fan motor 2 (Lower) 4-way valve Solenoid valve Crank case heater Base heater	DC Inverter compressor EEV coil EEV coil DC Brushless motor DC Brushless motor 4-way valve coil Comp pressure equalizing valve For Inverter Compressor Field supply	Operating voltage DC12V Operating voltage DC12V AC220-240V, 50/60Hz 6/5 W AC220-240V, 50Hz, 6W AC240V, 25W AC220-240V, 35W
Communication Input / Output	LON WORKS Inverter communication	Indoor unit ↔ Outdoor unit	
External Input / Output	External input 1 (CN131) (Low noise mode operation) External input 2 (CN132) (Cooling / Heating priority) External input 3 (CN133) (Outdoor unit operation peak control) External input 4 (CN134) (Emergency stop operation)	Dry contact input	
	External output 1 (CN136) (Error display) External output 2 (CN137) (Operation display)	ON (Error) / OFF (Normal) ON (Operation) / OFF (Stop)	Control output: DC 0/12-24V, Max.30mA Control output: DC 0/12-24V, Max.30mA
LED display	Single LED 101 Single LED 102 7 Segment LED	Display the information on operation, error and setting with single LED and 7 segment LED.	

2-2 COMPRESSOR OPERATION

2-2-1 Operation / Stop Condition

When cooling requirement capacity or heating requirement capacity from either of the indoor units in the same refrigerant circuit is input, the compressor operates.

When all the indoor units in no "cooling requirement capacity" or "heating requirement capacity", the compressor is stopped.

But in the following case, the compressor operates in accordance with operation of each mode.


- During 3 minute restart prevention operation
- Icing protection
- Failure (Refer to chapter 4, TROUBLE SHOOTING)
- Oil recovery
- Under expansion valve initialization
- At protective operation
- Emergency stop
- Defrost operation
- Peak cut stop operation

2-2-2 Capacity Control

(1) Capacity of compressor operation

By the operation of DC inverter rotary compressor, the amount of required refrigerant circulation according to cooling and heating load can be supplied from compressor efficiently.

DC inverter rotary compressor is able to control the amount of required refrigerant circulation in details.

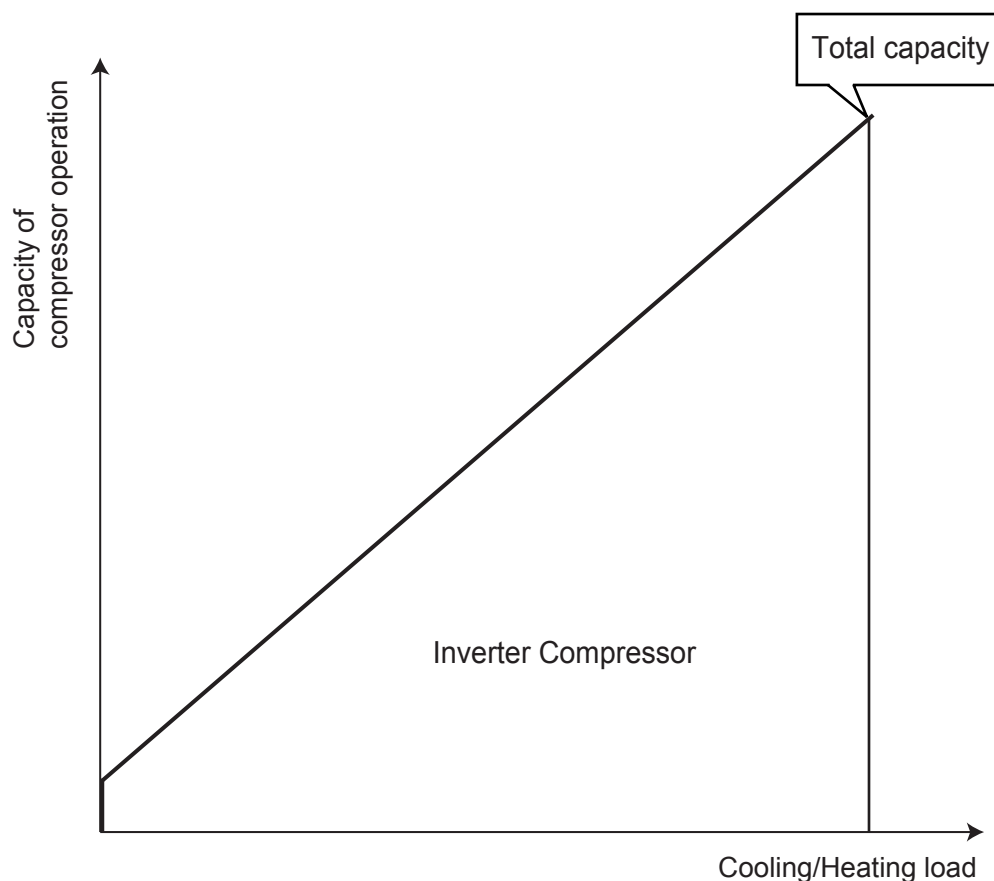

(2) Target low-pressure and high-pressure control

<Cooling>

In order to make the evaporation pressure of the indoor unit at the proper pressure on a variety of operations, capacity of the compressor will be controlled by low-pressure sensor of the outdoor unit.

<Heating>

In order to make the condensation pressure of the indoor unit at the proper pressure on a variety of operations, capacity of the compressor will be controlled by high-pressure sensor of the outdoor unit.


Target low-pressure and high pressure temperature depends on system capacity, capacity of compressor operation, pipe length, and capacity shift switch settings.

2-2-3 Speed Range of Start, Stop, And Operation

- On stop mode : 0 rps
- On operating mode : 20 - 100 rps

(1) Cooling starting process


- For cooling operation only, the upper limit speed at starting is made 50rps and is raised in +10rps increments every 60 seconds.
- The compressor operates at the upper limit speed if the target speed is higher than the upper limit speed.
- The compressor operates at the target speed if the target speed is lower than the upper limit speed.

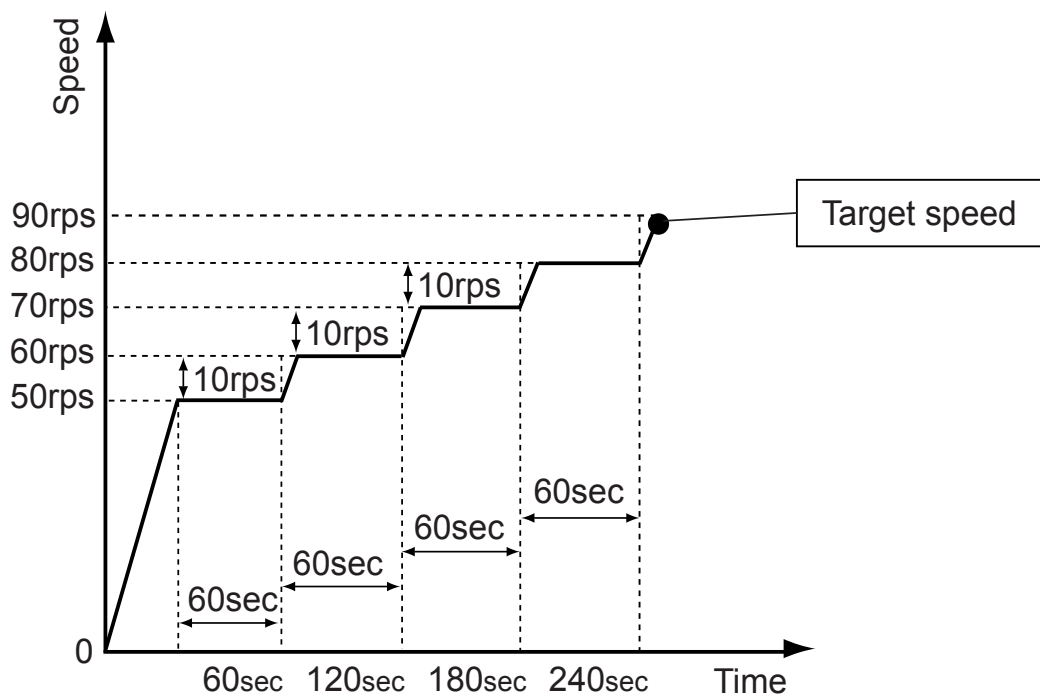

(2) Heating starting process

At the start of heating, the compressor is started by the following process. Compressor start-up to change the 4 way valve. Capacity control returns to normal control after the end of the starting process.
(target high-pressure control)

< Starting process >

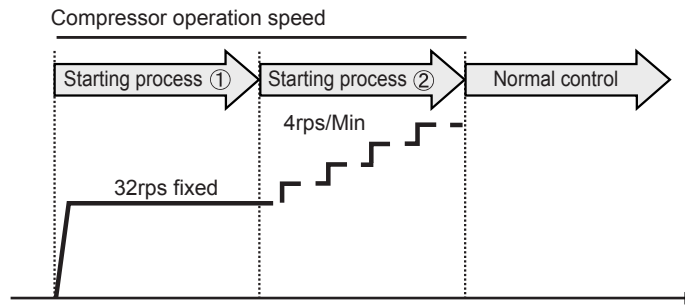

	Cancel conditions
Starting process ①	3 minutes elapsed from start of process ① or High-pressure > 2.63MPa
Starting process ②	20 minutes elapsed from start of process ② or High-pressure \geq 2.63MPa or Discharge SH \geq 10 °C and Discharge temperature > 10°C

*However, when the following condition (A) or (B) are satisfied, starting process is not performed.


< Conditions under which starting process is not performed >

- (A) The compressor temperature \geq 32 °C, when the room temperature reached to the setting temperature (Thermostat - OFF controlling)
- (B) The compressor temperature \geq 32 °C, when the system keeps heating mode with stop condition

< Operation >

Compressor operates based on the required capacity at the start up, after that the target high-pressure control begins.

(3) Limits the upper limit speed of the INV compressor according to the present high-pressure value.

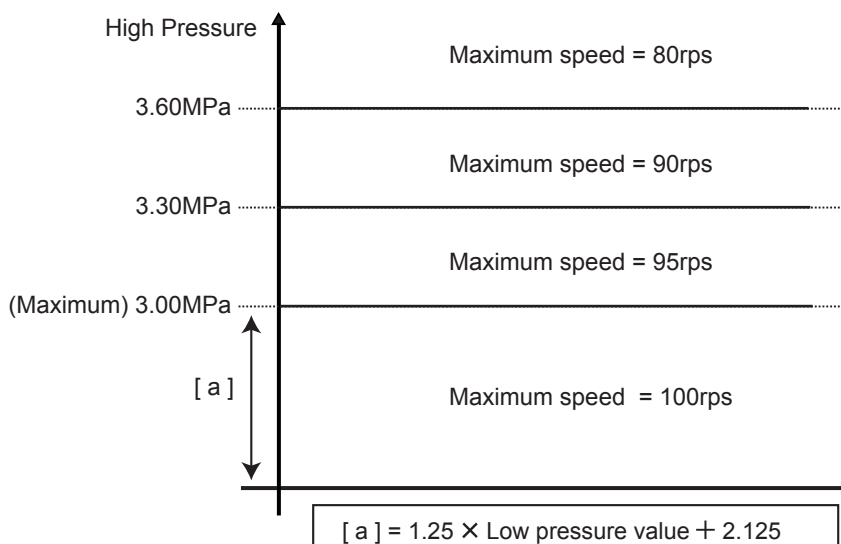

2-3 FAN CONTROL

2-3-1 Cooling Operation

Fan step	Fan speed (rpm)		
	AJ*040L*LAH	AJ*045L*LAH	AJ*054L*LAH
11	780	780	780
	700	700	700
10	660	660	700
	660	660	700
9	670	670	670
	590	590	590
8	540	540	540
	540	540	540
7	450	450	450
	410	410	410
6	340	340	340
	340	340	340
5	270	270	270
	250	250	250
4	390	390	390
	0	0	0
3	340	340	340
	0	0	0
2	290	290	290
	0	0	0
1	250	250	250
	0	0	0
0	0	0	0
	0	0	0


Step	Upper FAN
	Lower FAN

● Switching conditions of step

The initial speed of the outdoor unit is detected by out door temperature sensor.

Outside air temperature sensor detected value	Fan step
$TAOUT > 30^{\circ}\text{C}$	7
$30^{\circ}\text{C} \geq TAOUT > 20^{\circ}\text{C}$	5
$20^{\circ}\text{C} \geq TAOUT > 10^{\circ}\text{C}$	2
$10^{\circ}\text{C} \geq TAOUT$	0

The fan is controlled to keep high puressure saturation temperature within the target range as follows

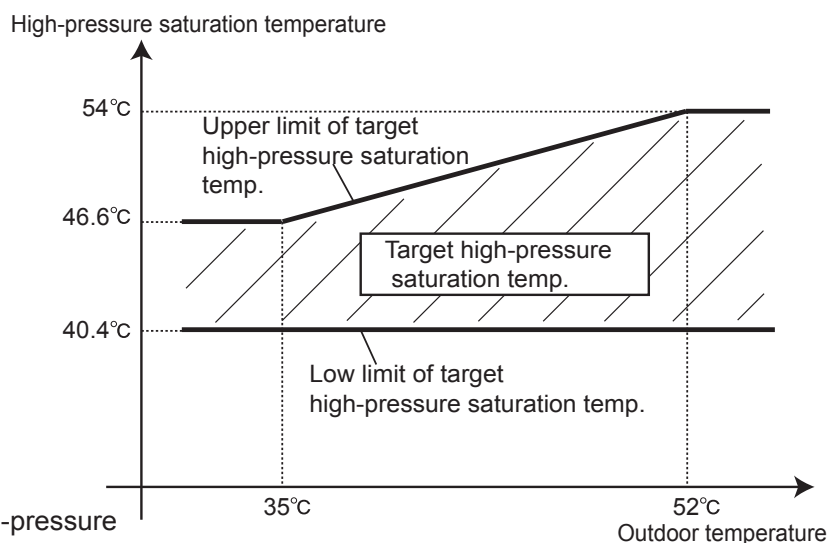

Thereafter, the high-pressure is monitoring at a set time interval and the fan speed is changed by the following conditions.

(Conditions which lower the fan speed)

High-pressure saturation < low limit of target high-pressure saturation range and heat sink temperature $\leq 75^{\circ}\text{C}$

(Conditions which raise the fan speed)

High-pressure saturation > upper limit of target high-pressure saturation or heat sink temperature $\geq 80^{\circ}\text{C}$

2-3-2 Heating Operation

Fan step	Fan speed (rpm)		
	AJ*040L*LAH	AJ*045L*LAH	AJ*054L*LAH
11	800	800	800
	700	700	700
10	660	660	700
	660	660	700
9	670	670	670
	590	590	590
8	540	540	540
	540	540	540
7	450	450	450
	410	410	410
6	340	340	340
	340	340	340
5	270	270	270
	250	250	250
4	0	0	0
	0	0	0
3	0	0	0
	0	0	0
2	0	0	0
	0	0	0
1	0	0	0
	0	0	0
0	0	0	0
	0	0	0

● Switching conditions of step

The initial speed of the first boot outdoor unit is detected by outdoor air temperature sensor value (TAOUT).

Outside air temperature sensor detected value	Fan step
$TAOUT < 10^{\circ}\text{C}$	11
$10^{\circ}\text{C} \leq TAOUT < 15^{\circ}\text{C}$	8
$15^{\circ}\text{C} \leq TAOUT < 20^{\circ}\text{C}$	5
$20^{\circ}\text{C} \leq TAOUT$	5

Thereafter, the high-pressure is monitoring at a set time interval and the fan speed is changed by the following conditions.

(Condition which lowers the fan speed)

High-pressure $\geq 3.30\text{MPa}$ and heat sink temperature $\leq 80^{\circ}\text{C}$

(Condition which raises the fan speed)

High-pressure saturation $\leq 3.20\text{MPa}$ or heat sink temperature $\geq 85^{\circ}\text{C}$

2-3-3 Low noise mode

When the low noise mode setting ON from PUSH SW or EXTERNAL INPUT, the outdoor unit operates in the low noise mode as follows.

«Settings and corresponding operations»

Capacity priority setting (PUSH SW)	Low noise level setting (PUSH SW)	Operation mode
OFF	ON	LOW NOISE MODE
ON	ON	* Automatic switching


«Low noise mode and operation contents»

			AJ*040L*LAH	AJ*045L*LAH	AJ*054L*LAH
Low Noise Mode	COOL	Max FAN Step	7	7	7
		Upper FAN Lower FAN	450 410	450 410	450 410
		Max Compressor Speed	40	45	52
	HEAT	Max FAN Step	7	7	7
		Upper FAN Lower FAN	450 410	450 410	450 410
		Max Compressor Speed	60	60	60

The operating noise is reduced by limiting the rotational speed of the compressor and fan motor

LOW NOISE MODE ▪ ▪ ▪ The operating sound lowers from about 3 to 5 dB more than the rated value

* Automatic switching

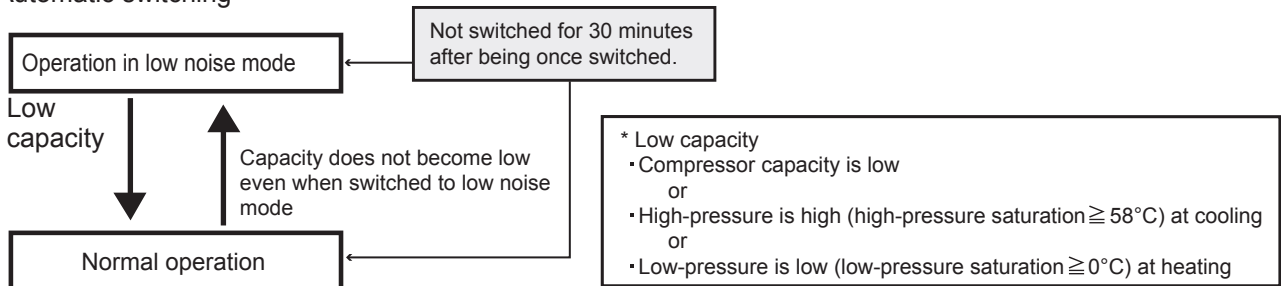

2-3-4 Other Control

To accurately detect the outside air temperature, the fan is operated while the outdoor unit is stopped.

2-4 EXPANSION VALVE CONTROL

	Initialization conditions	Operation mode	Control range	
			operation	stop
EEV 1	① When power turned on ② When operation stopped	Cooling	500 pulses	0 pulses
		Heating	40 - 500 pulses	
EEV 2		Cooling	55 - 500 pulses	0 pulses
		Heating		

< Cooling mode >
500 pulses basically.

< Heating mode >
EEV is controlled so that the system reaches closer to the target discharge temperature that is calculated from high and low pressure.

2-5 SPECIAL OPERATION

2-5-1 Oil Recovery Operation

Purpose of the operation

The amount of refrigerant lubricant oil which has been transported to the indoor units and the connection pipe with the refrigerant will become large as the operation time of compressor increases. It is necessary to recover the oil back into the outdoor unit for a certain time interval in order to prevent compressors from damaging due to lack of lubrication oil.

1. Oil Recovery in Cooling operation

< Start condition >

Compressor accumulated operation time since last cooling oil recovery operation exceeds 3 hours (first time : 1hour)

< End condition >

30 seconds have elapsed since the start and "suction temperature - low pressure saturation temperature $\leq 5\text{deg}$ " or 6 minutes have elapsed since the start.

< Operation >

COMPRESSOR: The rotation speed varies depending on the operation state.

EEV Opening (Indoor/Outdoor unit): Controlled pulse (as normal operation mode).

FAN speed (Indoor/Outdoor unit) : Controlled fan speed (as normal operation mode).

2. Oil Recovery in Heating operation

< Start condition >

Compressor accumulated operation time since the last heating oil recovery exceeds 8 hours (first time : 1hour)

< End condition >

After 4 minutes have elapsed



< Operation >

COMPRESSOR: The rotation speed varies depending on the operation state.

EEV Opening (Indoor/Outdoor unit) : Controlled pulse (as normal operation mode)

FAN speed (Indoor/Outdoor unit) : Controlled fan speed (as normal operation mode)

Others

During the oil recovery operation,  appears on the display of wired and central remote controller, and  appears on the simple remote controller.

The operation indicators (LED) of the indoor units flash slowly.

2-5-2 Pre-heat Operation

This pre-heat operation protects the start up failure by preventing the refrigerant from soaking into the oil in compressor.

Crankcase heater ON: 30 minutes elapsed since installed compressors stopped (However, ON when power turned on)

OFF: Compressor starts

*It doesn't control according to the temperature.

2-5-3 Defrost Operation Control

Defrost Operation Start Condition 1

Outdoor temperature $< 2^{\circ}\text{C}$ and Compressor stop count exceed 20 times at less than 10 minutes of accumulated heating operation time

Defrost Operation Start Condition 2

Accumulated heating operation time is 40 minutes or longer

[Accumulated heating operation time is reset at the end of cooling operation or defrosting operation.]

and

an outdoor unit satisfies condition ① or ② below

Condition ①: "Heat exchange temperature $\leq -2^{\circ}\text{C}$ " accumulated operating time is 180 minutes or longer

Condition ②: After the following all condition satisfied, "heat exchange temperature \leq defrosting start judgment temperature and during heat exchange liquid temperature drop" accumulated time: 10 minutes

(a) accumulated heating operation time ≥ 30 minutes

(b) 10 minutes have elapsed after outdoor unit starting

(c) 5 minutes have elapsed since oil recovery

* Defrosting start and end judgment temperature are determined by the outdoor temperature.

⇒ **Defrosting start judgment temperature = $0.8 \times \text{outdoor temperature} - 11.6$ (However, -27.6°C to -6°C)**

If the calculated result is lower than -27.6°C , the judgment temperature is defined as -27.6°C

If the calculated result is higher than -6°C , the judgment temperature is defined as -6°C

Defrost Operation End Condition

① At all outdoor units, heat exchange liquid temperature \geq end judgment temperature
or

② when 10 minutes have elapsed from the start

(When the indoor unit connection capacity is 90% or less, after 15 minutes have elapsed.)

⇒ **Defrosting end judgment temperature = $0.39 \times \text{outdoor temperature} + 12.7$ (However, 5 to 12°C range)**

If the calculated result is lower than 5°C , the judgment temperature is defined as 5°C

If the calculated result is higher than 12°C , the judgment temperature is defined as 12°C

2-6 PROTECTIVE FUNCTION

2-6-1 Protective Function List

Protective Function	Detect Parts	COOL	HEAT	DISPLAY	Operating Condition	Operation
Discharge Temp Protection 1	Discharge Temp Thermistor	○		—	<p><Starting conditions> 3 minutes have elapsed since the start of operation and (discharge temperature $\geq 100^{\circ}\text{C}$ or suction SH $\geq 10^{\circ}\text{C}$ accumulated time 30 minutes)</p> <p><Reset conditions> Discharge temperature $\leq 95^{\circ}\text{C}$ and suction SH $\leq 7^{\circ}\text{C}$</p>	EEV of operating indoor unit gradually opened
Discharge Temp Protection 2	Discharge Temp Thermistor	○	○	—	<p><Starting conditions> Cooling: Discharge temperature $\geq 95^{\circ}\text{C}$ Heating: Discharge temperature $\geq 102^{\circ}\text{C}$</p> <p><Reset conditions> Discharge temperature $< 90^{\circ}\text{C}$ Discharge temperature $< 97^{\circ}\text{C}$</p>	EEV2 + 30pls/30 secs
Discharge Temp Protection 4	Discharge Temp Thermistor	○	○	—	<p>< starting condition> Discharge temperature $\geq 105^{\circ}\text{C}$</p> <p><Pattern reset condition> Discharge temperature $\leq 100^{\circ}\text{C}$</p>	Compressor speed -6rps every 30 secs Speed rise prohibited, when discharge temperature becomes lower than 105°C , prohibit the rotational speed rise of the compressor.
Discharge Temp Protection 5	Discharge Temp Thermistor		○	—	<p><Starting conditions> Discharge temperature $\geq 95^{\circ}\text{C}$ and EEV1=500pls</p> <p><Reset conditions> 2 minutes have elapsed and (discharge temperature $\leq 90^{\circ}\text{C}$ or EEV1 ≤ 400pls)</p>	Expansion valve of stopped indoor unit gradually opened (upper limit 200pls)
Discharge Temp Protection Stop	Discharge Temp Thermistor	○	○	P1	<p><Pattern ① starting condition> Discharge temperature \geq fixed value (115°C)</p> <p><Pattern ① reset condition> 3 minutes have elapsed and discharge temperature $\leq 80^{\circ}\text{C}$</p>	Compressor stopped
				EA11	<p><Pattern ② starting condition> Pattern ① generated 2 times within 40 minutes</p> <p><Pattern ② reset condition> Error reset (push button SW) executed after power turned on again</p>	Compressor stopped (permanent stop) Error display
High Pressure Protection 1	High Pressure Sensor	○		—	<p><Starting conditions> COMP < 25 rps ---- HP ≥ 3.3 MPa 25 rps \leq COMP < 30 rps ---- HP ≥ 3.5 MPa 30 rps \leq COMP ---- HP ≥ 3.8 MPa</p> <p><Reset conditions> Fixed time has elapsed and Fixed time when SV2: ON 30 secs COMP < 25 rps ---- HP ≤ 3.0 MPa 25 rps \leq COMP < 30 rps ---- HP ≤ 3.2 MPa 30 rps \leq COMP ---- HP ≤ 3.5 MPa</p>	SV2 ON
High Pressure Protection 2	High Pressure Sensor		○	—	<p><Starting conditions> COMP ≥ 25 rps ---- HP ≥ 3.5 MPa COMP < 25 rps ---- HP ≥ 3.3 MPa</p> <p><Reset conditions> 3 minutes have elapsed and high-pressure $\leq 2.80\text{MPa}$</p>	SV2 ON
High Pressure Protection 3	High Pressure Sensor	○		—	<p><Starting conditions> Fixed time has elapsed and high-pressure $\geq 3.50\text{MPa}$ (* Fixed time at start of operation: 10 secs, after operation execution: 20 secs)</p> <p><Reset conditions> Operation (fan speed 1 step increase) complete</p>	Fan speed 1 step increase
High Pressure Protection 4	High Pressure Sensor		○	—	<p><Pattern ① starting condition> High-pressure $\geq 3.30\text{MPa}$</p> <p><Pattern ① reset condition> High-pressure $\leq 3.2\text{MPa}$</p>	Fan speed lowered/every 30 secs
				—	<p><Pattern ② starting condition> High-pressure $\geq 3.50\text{MPa}$</p> <p><Pattern ② reset condition> High-pressure $< 3.5\text{MPa}$</p>	Fan lowest speed Upper 270 rpm Lower 250 rpm
High Pressure Protection 5	High Pressure Sensor		○	—	<p><Starting conditions> High-pressure $\geq 3.20\text{MPa}$</p> <p><Reset conditions> High-pressure $< 3.20\text{MPa}$</p>	Compressor capacity lowered/every 15 secs
Abnormal High Pressure Protection Control	High Pressure Sensor	○		—	<p><Pattern ① starting condition> COMP < 30 rps ---- HP ≥ 3.18 MPa COMP ≥ 30 rps ---- HP ≥ 3.68 MPa</p> <p><Pattern ① reset condition> After 25 seconds have elapsed and, COMP < 30 rps ---- HP < 3.1 MPa COMP ≥ 30 rps ---- HP < 3.6 MPa</p>	Compressor capacity rise prohibited
				—	<p><Pattern ② starting condition> COMP < 30 rps ---- HP ≥ 3.3 MPa COMP ≥ 30 rps ---- HP ≥ 3.8 MPa</p> <p><Pattern ② reset condition> After 25 seconds have elapsed and, COMP < 30 rps ---- HP < 3.18 MPa COMP ≥ 30 rps ---- HP < 3.68 MPa</p>	Compressor capacity lowered every 30 secs

Protective Function	Detect Parts	COOL	HEAT	DISPLAY	Operating Condition	Operation
High Pressure Protection Stop 1	High Pressure Sensor	○	○	P2	<Pattern ① starting condition> High-pressure $\geq 4.00\text{MPa}$ <Pattern ① reset condition> 5 minutes have elapsed and high-pressure $\leq 3.50\text{MPa}$	Compressor stopped
				EA41	<Pattern ② starting condition> Pattern ① generated 3 times within 60 minutes. <Pattern ② reset condition> 10 minutes have elapsed and high-pressure $\leq 3.50\text{MPa}$	Compressor stopped
High Pressure Protection Stop 2	Pressure Switch	○	○	P2	<Pattern ① starting condition> Pressure SW operated (Operated by high-pressure $\geq 4.20\text{MPa}$) <Pattern ① reset condition> 5 minutes have elapsed and pressure SW operation reset (Reset by high-pressure $\leq 3.2\text{MPa}$)	Compressor stopped
				EA42	<Pattern ② starting condition> Pattern ① generated 3 times within 60 minutes. <Pattern ② reset condition> 10 minutes have elapsed and pressure SW operation reset (Reset by high-pressure $\leq 3.2\text{MPa}$)	Compressor stopped Error display
Low Pressure Protection 1	Low Pressure Sensor	○		—	<Starting conditions> Low-pressure $\leq 0.20\text{MPa}$ <Reset conditions> 5 minutes have elapsed and low-pressure $\geq 0.30\text{MPa}$	SV2 ON
Low Pressure Protection 2	Low Pressure Sensor		○	—	<Starting conditions> Low-pressure $\leq 0.10\text{MPa}$ <Reset conditions> 3 minutes have elapsed and low-pressure $\geq 0.17\text{MPa}$	SV2 ON
Low Pressure Protection 4	Low Pressure Sensor		○	—	<Starting conditions> 3 minutes have elapsed and low-pressure $\leq 0.18\text{MPa}$ <Reset conditions> 3 minutes have elapsed and low-pressure $\geq 0.22\text{MPa}$	EEV of stopped indoor unit opened quickly (450pls)
Abnormal Low Pressure Protection Control	Low Pressure Sensor		○	—	<starting condition> Low-pressure $\leq 0.16\text{MPa}$ <reset condition> 3 minutes have elapsed and low-pressure $\geq 0.18\text{MPa}$	Compressor capacity lowered every 180 secs, when the Low-pressure becomes more than 0.17MPa, prohibit compressor capacity rise.
Low Pressure Protection Stop	Low Pressure Sensor	○	○	P3	<Pattern ① starting condition> Low-pressure $\leq 0.05\text{MPa}$ or low-pressure $\leq 0.10\text{MPa}$ continues for 10 mins <Pattern ① reset condition> 3 minutes have elapsed and low-pressure $\geq 0.17\text{MPa}$	Compressor stopped
				EA51	<Pattern ② starting condition> Pattern ① generated 5 times within 180 minutes. <Pattern ② reset condition> Error reset (push button SW) executed after power turned on again.	Compressor stopped (permanent stop) Error display
Compressor Temp Protection Stop	Compressor Temp Thermistor	○	○	P4	<Pattern ① starting condition> Compressor temperature \geq fixed value (110°C) <Pattern ① reset condition> 3 minutes have elapsed and discharge temperature $\leq 80^\circ\text{C}$	Compressor stopped
				EA31	<Pattern ② starting condition> Pattern ① generated 2 times within 40 minutes <Pattern ② reset condition> Error reset (push button SW) executed after power turned on again	Compressor stopped (permanent stop) Error display

Protective Function	Detect Parts	COOL	HEAT	DISPLAY	Operating Condition	Operation
Overcurrent Break Stop (Compressor)	Overcurrent Protection Circuit	○	○	E941 (permanent stop)	Compressor is stopped when the over current protection circuit in the inverter PCB board detects an abnormal current during the operation. If it repeated 5 times, the compressor becomes permanent stop.	Compressor stopped
				E931 (permanent stop)	Compressor is stopped when the over current protection circuit in the inverter PC Board detects an abnormal current at the time of start up. Compressor becomes permanent stop if it repeated over the number of set time.	
				—	<Reset condition> Error reset (push button SW) executed after power turned on again.	
Heatsink Temp Protection Stop	Heatsink Temp Thermistor	○	○	—	<Pattern ① starting condition> Heat sink temperature \geq 100°C (LBLAH) 105°C (LELAH) <Pattern ① reset condition> 3 minutes have elapsed and heat sink temperature \leq 85°C (LBLAH) 90°C (LELAH)	Compressor stopped
				EAC4	<Pattern ② starting condition> Pattern ① generated 3 times within 60 minutes. <Pattern ② reset condition> 10 minutes have elapsed and heat sink temperature \leq 85°C (LBLAH) 90°C (LELAH)	Compressor stopped Error display
Frequency Maximum Setting Protection (Compressor)	Current Detector Circuit	○	○	—	<Pattern ① starting condition> Current value \geq Cooling: 22.5A / Heating: 23.5A <Pattern ① reset condition> Current value < Cooling: 22.5A / Heating: 23.5A	Compressor speed rise prohibited
				—	<Pattern ② starting condition> Current value \geq Cooling: 23.0A / Heating: 24.0A <Pattern ② reset condition> Current value < Cooling: 23.0A / Heating: 24.0A • Pattern ① and ② start current value changed by outside temperature	Compressor speed lowered
		○	○	—	<Pattern ① starting condition> Current value \geq Cooling: 25.5A / Heating: 25.5A <Pattern ① reset condition> Current value < Cooling: 25.5A / Heating: 25.5A	Compressor speed rise prohibited
				—	<Pattern ② starting condition> Current value \geq Cooling: 26.0A / Heating: 26.0A <Pattern ② reset condition> Current value < Cooling: 26.0A / Heating: 26.0A • Pattern ① and ② start current value changed by outside temperature	Compressor speed lowered
		○	○	—	<Pattern ① starting condition> Current value \geq Cooling: 9.5A / Heating: 9.5A <Pattern ① reset condition> Current value < Cooling: 9.5A / Heating: 9.5A	Compressor speed rise prohibited
				—	<Pattern ② starting condition> Current value \geq Cooling: 10.0A / Heating: 10.0A <Pattern ② reset condition> Current value < Cooling: 10.0A / Heating: 10.0A • Pattern ① and ② start current value changed by outside temperature	Compressor speed lowered

Protective function	Detect device	Cool	Heat	Display	Operating condition	Operation
Outdoor Unit Reverse phase, Missing phase Wire Error	Main PCB Reverse phase prevention circuit	○	○	E615	< Starting condition> 1 Reverse phase prevention circuit detected reversed phase input or input was not normal at the time of power ON. 2 Reverse phase prevention circuit detected open-phase after power ON. < Reset condition> Reverse phase prevention circuit detects normal condition	System Stop Error indication




3. INDOOR UNIT OPERATION

3. INDOOR UNIT OPERATION

3-1 FAN CONTROL

3-1-1 Fan Speed Setting

Fan speed setting



Press the FAN CONTROL button to set the fan speed.




3-1-2 "AUTO" Position

1. COOLING OPERATION


The fan speed is determined automatically in accordance with the condition " T_R (corrected room temperature) - T_s (corrected set temperature)" as shown on the right. However, the fan speed zone is determined in the manner as the room temperature increases for the following cases.

- (1) When the T_s is changed.
- (2) When the operation mode is changed from other mode to "COOL".
- (3) When the fan control is changed from other position to "AUTO".

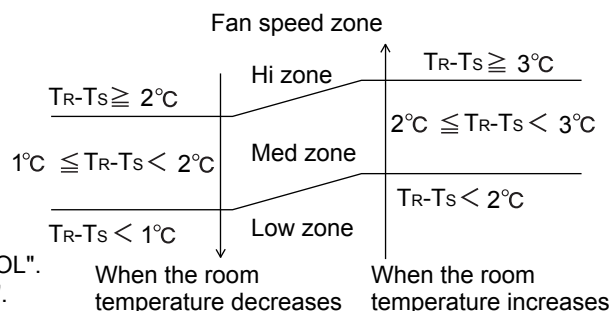

2. HEAT OPERATION

Same as Cooling operation, fan speed is decided by the difference between the room temperature and the set temperature.

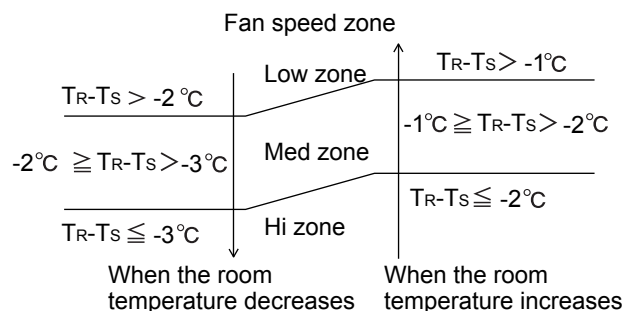

3. DRY OPERATION

The indoor fan always rotates at "Lo" speed.



- (1) The indoor fan starts operation 5 seconds after the electric expansion valve opens. However, when the indoor unit just starts its operation or the operation mode is changed from other to "DRY" and the refrigerant circulation is not stopped, the fan will rotate immediately without a delay time of 5 seconds.
- (2) The indoor fan will stop in 30 seconds when the refrigerant circulation stops.
- (3) The indoor fan will stop immediately when the indoor unit is stopped by pushing the stop button or by a setting of ON timer.
- (4) When the refrigerant circulation is stopped due to a lower room temperature for more than 3 minutes, the fan will rotate 2 minutes at intervals of 3 minutes.
- (5) When the indoor unit just starts its operation or the operation mode is changed from other to "DRY" and the refrigerant circulation is stopped, the fan will rotate for 1 minute and then it will operate according to the statement (4).

3-2 MASTER CONTROL

3-2-1 Operation Mode Control

Each operation mode is controlled as below.

(1) Stop mode

Indoor fan motor	: OFF
Electric expansion valve	: Stop pulse
Drain pump	: Turns ON-OFF by the drain pump control function

(2) Cool, Dry and Heat Mode

	Cool	Dry	Heat
Indoor fan motor	Operates according to the AIR FLOW-MODE setting.	See the fan control page.	Operates according to the AIR FLOW-MODE setting, and besides cold air prevention operation
Drain pump	Turns ON-OFF by the drain pump control function		
Electrical expansion valve	Pulse controlled by the temperature difference calculation and frost prevent fuction	Pulse controlled by the temperature difference calculation and frost prevent function	Pulse controlled by the temperature difference.

(3) Priority mode


The purpose of the priority mode is to restrict operation commands (heating, cooling, dry) from the connected indoor units. There are 3 priority modes of Neutral, Cooling Priority, and Heating Priority. The operation modes restricted by each of these modes are as follows:

Priority mode	Restricted operation mode
Neutral	No restrictions
Cooling priority	Heating
Heating priority	Cooling, dry

1. Priority mode decision methods

Method 1. (Default value)


The initial priority mode is made Neutral and is shifted to Cooling Priority when cooling and to Heating Priority when heating depending on which operation mode (cooling, heating) was input first. After shifting to Cooling Priority or Heating Priority, the priority mode shifts to Neutral only when there was a Stop input from all the indoor units.

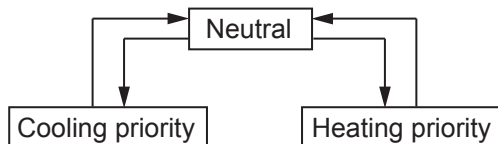

Method 2. (Management by outdoor unit)

Operation mode management is made "Management by outdoor unit" by outdoor unit PUSH-SW (field setting).

The priority mode shifts to Cooling Priority or Heating Priority in accordance with input from the outdoor unit regardless of the current mode.



Method 3. (Management by indoor unit)


Operation mode management is made "Management by indoor unit" by outdoor unit PUSH-SW (field setting).

Then the master indoor unit is set by wired remote controller.

Thereupon the priority mode shifts to Cooling Priority or Heating Priority in accordance with input from the master indoor unit regardless of the current priority mode.

The priority mode is fixed at either cooling or heating even if the master indoor unit stops

Cooling/heating switching can be performed by the master indoor unit only.



(4) Opposite operation mode

When the operation mode commanded from an indoor unit (remote controller) and the operation mode allowed by the system (cooling and dry operation for cooling only type and operation mode allowed by priority mode for heat pump type) do not match, it is indicated by blinking of an LED.

Timer lamp: 3 secs ON/1 sec OFF repeated

3-2-1 Operation Mode Control for Outdoor air unit

Each operation mode is controlled as below.

(1) Stop mode

Outdoor air unit fan motor : OFF
Electric expansion valve : Stop pulse
Drain pump : Turns ON-OFF by the drain pump control function
Solenoid valve : Closed

(2) Cool and Heat Mode

Each operation mode is controlled as below.

	Cool	Heat	Fan
Outdoor air unit fan motor	Operates according to the HIGH MODE setting.	Operates according to the HIGH MODE setting.	Operates according to the HIGH MODE setting.
Drain pump	Turns ON-OFF by the drain pump control function		
Electrical expansion valve	Pulse controlled by the temperature difference calculation and freeze prevention control	Pulse controlled by the temperature difference.	Stop pulse
Solenoid valve	Closed at all times	Opened at thermostat off and compressor on. Closed at other operation.	Closed at all times

(3) Priority mode


The purpose of the priority mode is to restrict operation commands (heating, cooling) from the connected outdoor air units. There are 3 priority modes of Neutral, Cooling Priority, and Heating Priority. The operation modes restricted by each of these modes are as follows:

Priority mode	Restricted operation mode
Neutral	No restrictions
Cooling priority	Heating
Heating priority	Cooling

1. Priority mode decision methods

Method 1. (Default value)


The initial priority mode is made Neutral and is shifted to Cooling Priority when cooling and to Heating Priority when heating depending on which operation mode (cooling, heating) was input first. After shifting to Cooling Priority or Heating Priority, the priority mode shifts to Neutral only when there was a Stop input from all the indoor units.

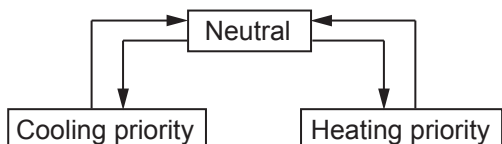

Method 2. (Management by Outdoor unit)

Operation mode management is made "Management by Outdoor unit" by Outdoor unit PUSH-SW (field setting).

The priority mode shifts to Cooling Priority or Heating Priority in accordance with input from the Outdoor unit regardless of the current mode.




Method 3. (Management by indoor unit)

Operation mode management is made "Management by indoor unit" by Outdoor unit PUSH-SW (field setting).

Then the master indoor unit is set by wired remote controller.

Thereupon the priority mode shifts to Cooling Priority or Heating Priority in accordance with input from the master indoor unit regardless of the current priority mode.

The priority mode is fixed at either cooling or heating even if the master indoor unit stops Cooling/Heating switching can be performed by the master indoor unit only.



(4) Opposite operation mode

When the operation mode commanded from an indoor unit (remote controller) and the operation mode allowed by the system (cooling and dry operation for cooling only type and operation mode allowed by priority mode for heat pump type) do not match, it is indicated by blinking of an LED.

Timer lamp: 3 secs ON/1 sec OFF repeated


3-2-2 Auto Changeover

[Method]

1. Switch operation mode management to "Management by indoor unit" by outdoor unit DIP-SW.
2. Set the master indoor unit by wired remote controller.
3. Judge cooling/heating by the difference between the master indoor unit's setting temperature and the room temperature.

■ AUTO CHANGEOVER operation

Operation flow chart

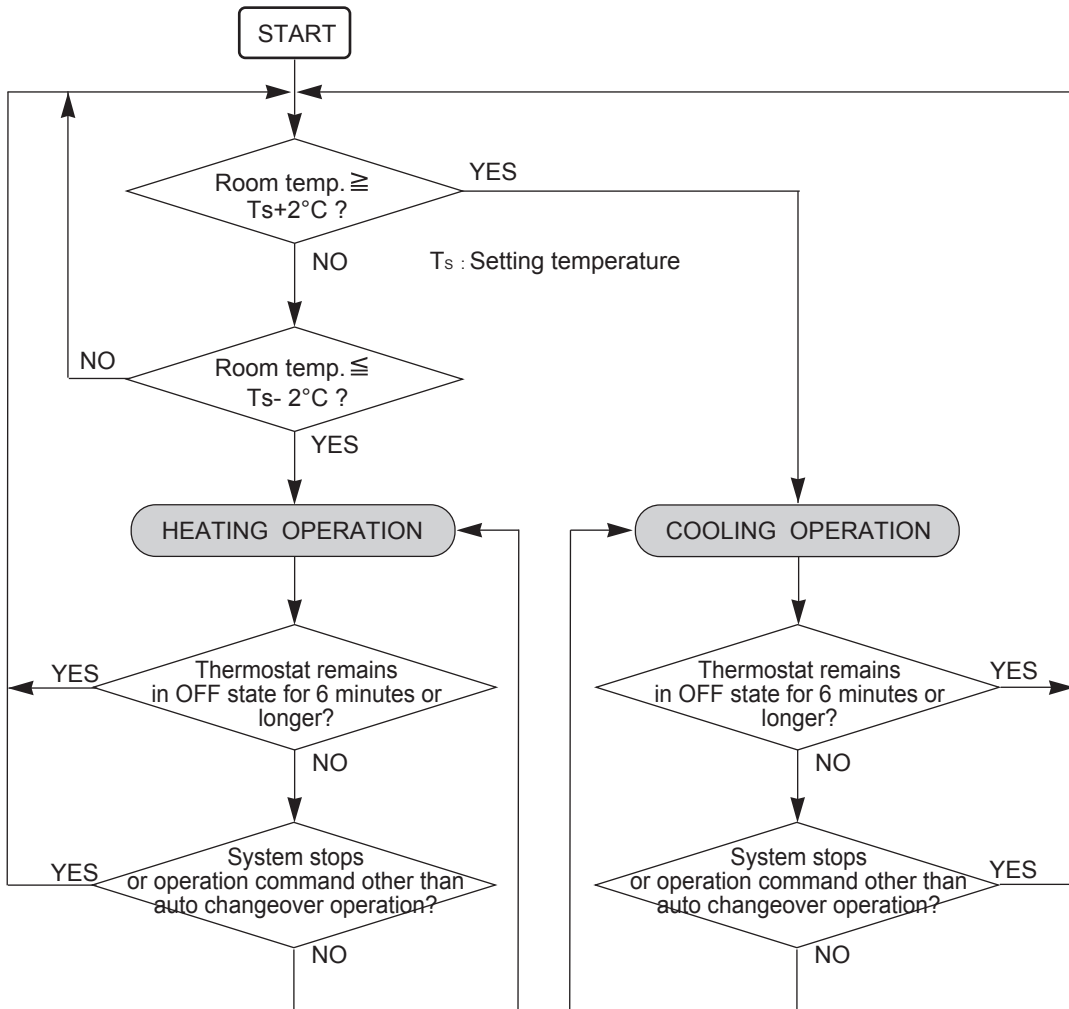

3-2-2 Auto Changeover Heating / Cooling Operation for Outdoor air unit


Function is available when an outdoor air unit set as the administrative indoor unit (Management Outdoor air unit).
Refer to the setting Method

Setting Method

1. Switch operation mode management to "Management by outdoor air unit" by Outdoor unit PUSH-SW.
2. Set the master outdoor air unit by wired remote controller.
3. Judge cooling/heating by the difference between the master outdoor air unit's setting temperature and the suction airflow temperature

■ AUTO CHANGEOVER operation


Operation flow chart

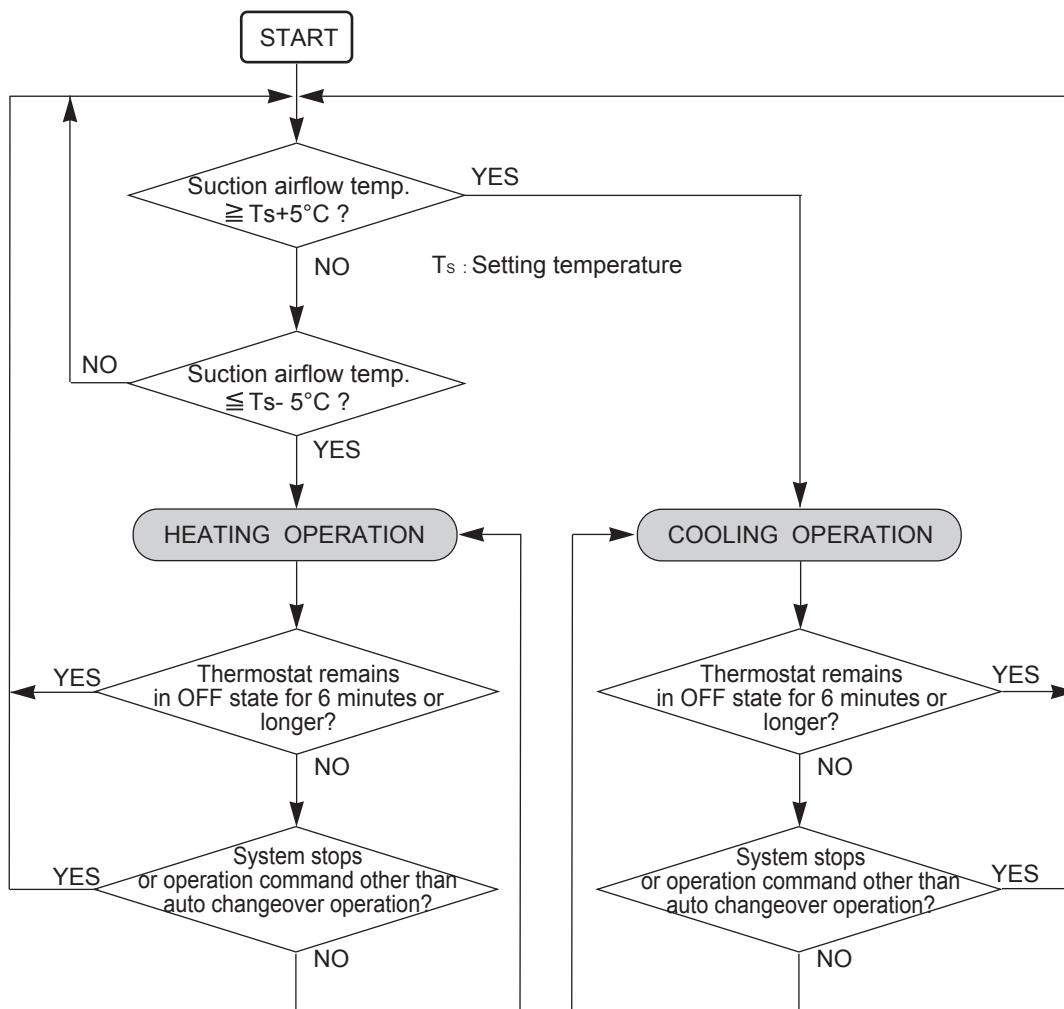

3-2-3 "COOL" Position

When using the cooling mode, set the temperature to a value lower than the current room temperature, otherwise the indoor unit will not start the cooling operation and only the fan will rotate.


An example for COOLING TEMPERATURE CONTROL time chart (Manual setting)

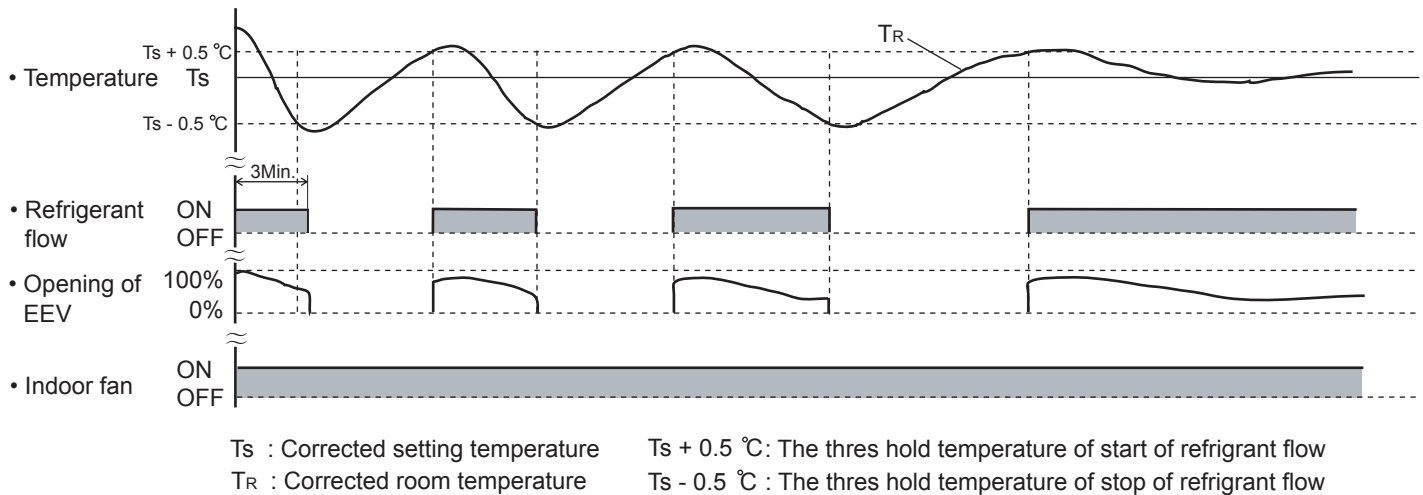

3-2-4 "HEAT" Position

- (1) When using the heating mode, set the temperature to a value higher than the current room temperature, otherwise the indoor unit will not start the heating operation.
- (2) After the start of heating operation, the fan of indoor unit will not rotate until the heater exchange is warmed up to blow out warm air.
- (3) During defrosting, the OPERATION indicator lamp flashes 6 sec. ON and 2 sec. OFF, and repeat. The heating operation will be temporarily interrupted.


An example for HEATING TEMPERATURE CONTROL time chart (Manual setting)

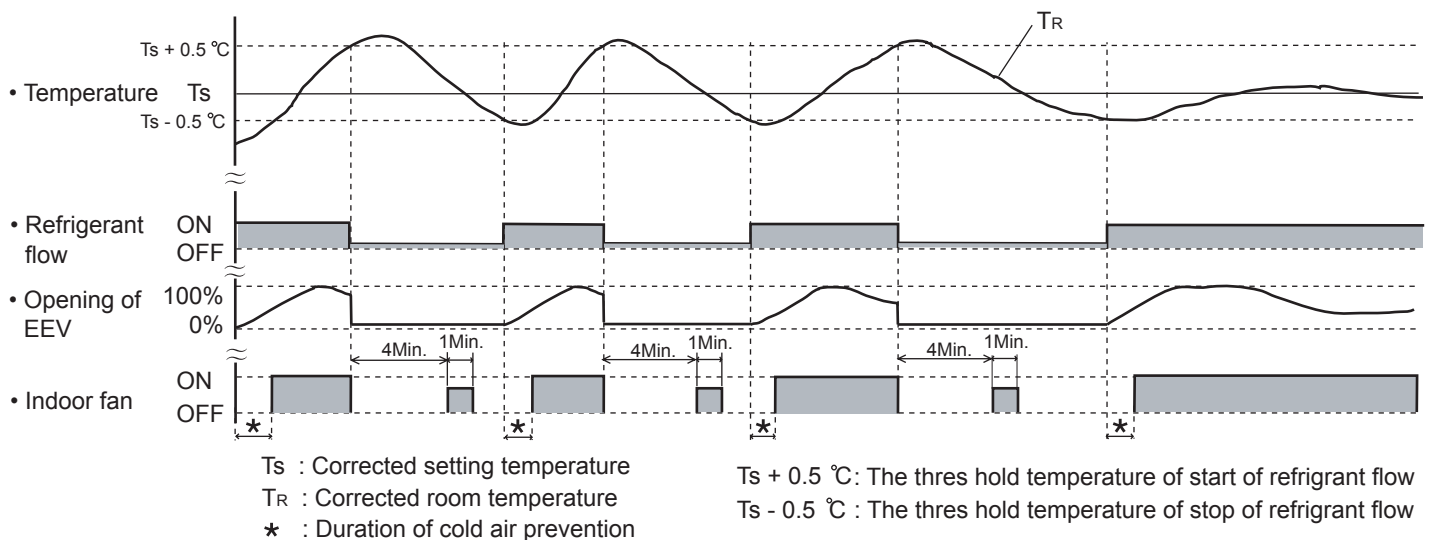

3-2-4 "COOL" Position for Outdoor air unit

When using the cooling mode, set the temperature to a value lower than the discharge airflow temperature, otherwise the outdoor air unit will not start the cooling operation and only the fan will rotate.


An example for COOLING TEMPERATURE CONTROL time chart (Manual setting)

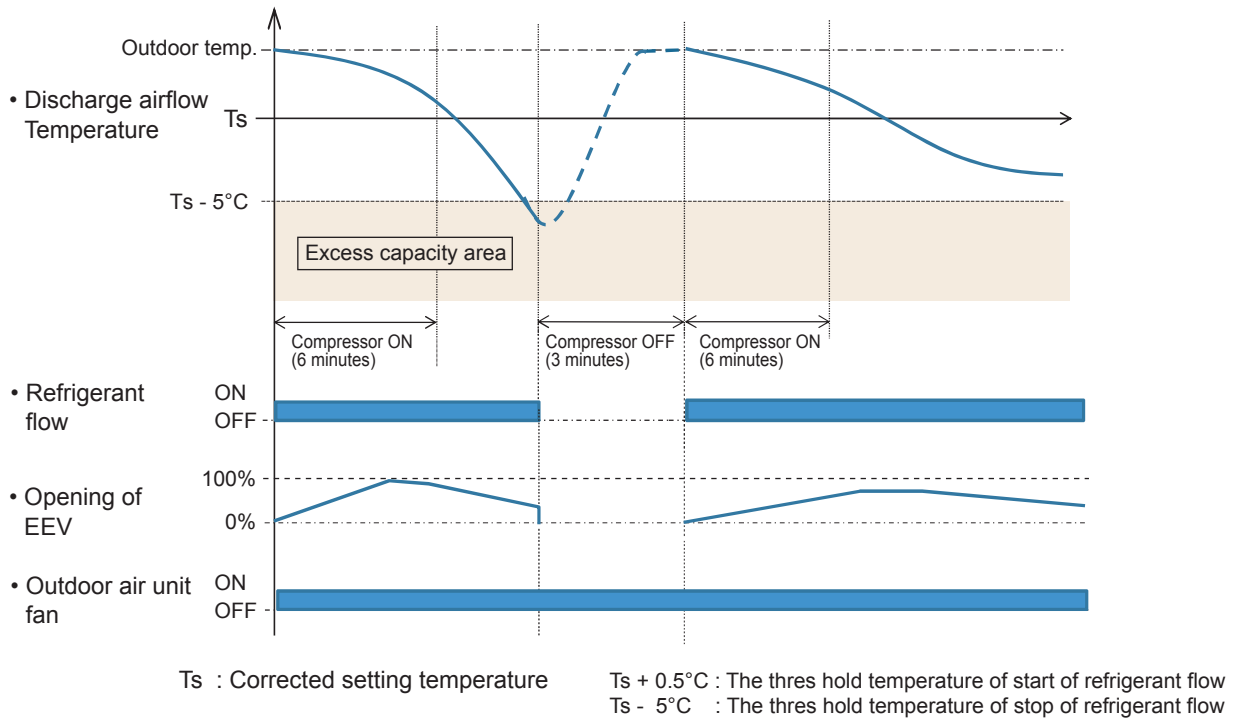

3-2-5 "HEAT" Position for Outdoor air unit

- (1) When using the heating mode, set the temperature to a value higher than the discharge airflow temperature, otherwise the outdoor air unit will not start the heating operation.
- (2) During defrosting, the OPERATION indicator lamp flashes 6 sec. ON and 2 sec. OFF, and repeat. The heating operation will be temporarily interrupted.

An example for HEATING TEMPERATURE CONTROL time chart (Manual setting)

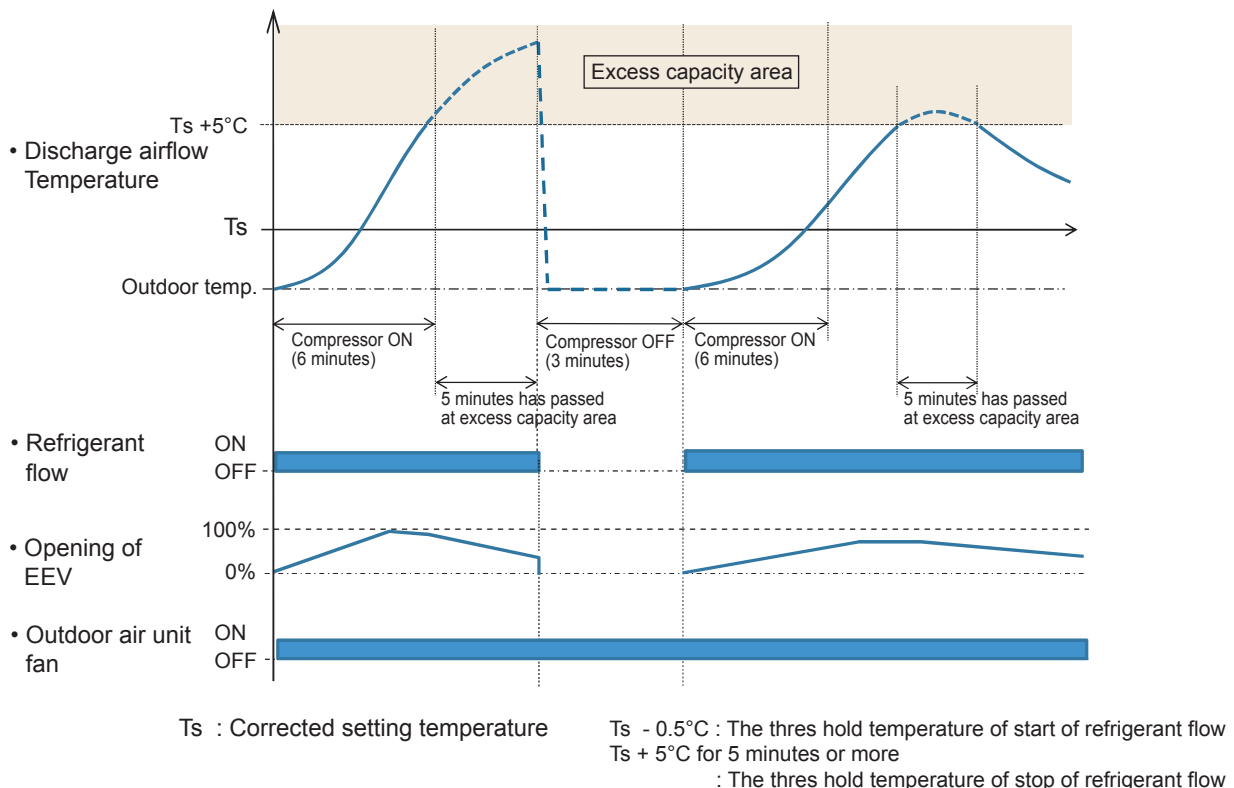


3-3 LOUVER CONTROL

(1) ADJUSTING THE DIRECTION OF AIR CIRCULATION

Instructions relating to heating (*) are applicable only to heat pump type outdoor unit.
Begin air conditioner operation before performing this procedure.

Vertical Air Direction Adjustment

This instructions are applicable to "LARGE CEILING TYPE", "UNIVERSAL FLOOR/CEILING TYPE", "CASSETTE TYPE", "WALL MOUNTED TYPE", "COMPACT WALL MOUNTED TYPE" and "COMPACT FLOOR TYPE".

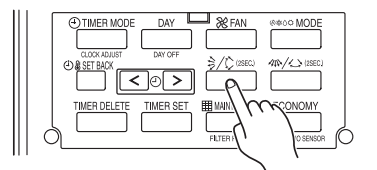

Press the **VERTICAL AIR FLOW DIRECTION SET** button.

Example : When set to vertical air direction.

- Press the VERTICAL AIRFLOW DIRECTION button.


The temperature display will change to the vertical airflow direction setting display.

- Press the VERTICAL AIRFLOW DIRECTION button to change the vertical louvre position.
The position number will appear on the display.


Cooling & Dry : ①, ②, ③, ④

Heating : ①, ②, ③, ④


■ LARGE CEILING TYPE

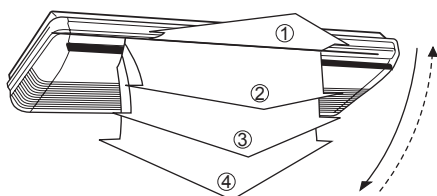


■ UNIVERSAL FLOOR/CEILING TYPE

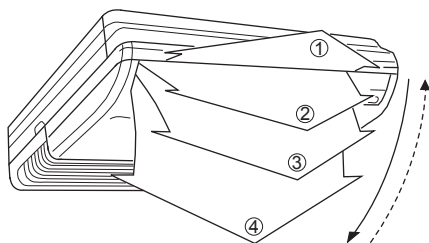


■ CASSETTE TYPE

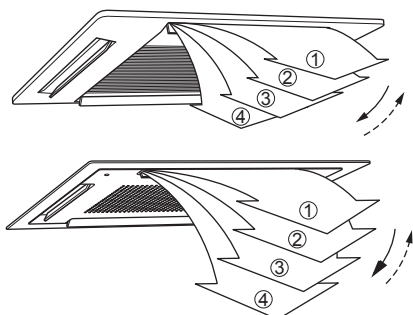


■ WALL MOUNTED TYPE

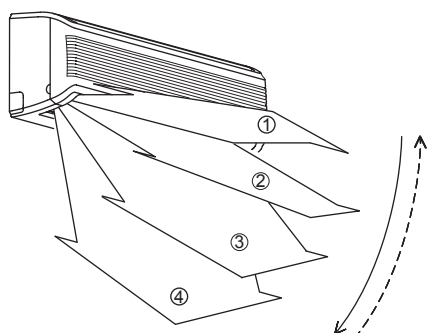

■ COMPACT WALL MOUNTED TYPE

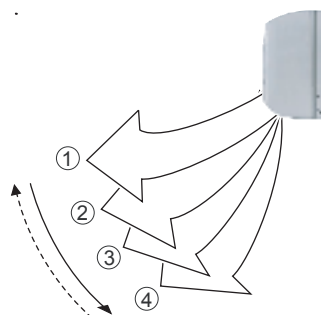

■ COMPACT FLOOR TYPE

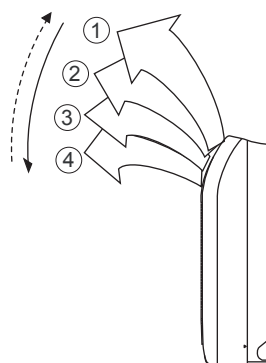

⚠ DANGER!

Never place fingers or foreign objects inside the outlet ports, since the internal fan operates at high speed and could cause personal injury.

- Always use the remote control unit's AIR FLOW DIRECTION button to adjust the UP/DOWN air direction flaps or RIGHT/LEFT air direction louvers. At tempting to move them manually could result in improper operation; in this case, stop operation and restart.
The louvers should begin to operate properly again.
- When used in a room with infants, children, elderly or sick persons, the air direction and room temperature should be considered carefully when making settings.

- Use the air direction adjustments within the ranges shown above.
- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.
During Cooling mode : Horizontal flow ①
* During Heating mode : Downward flow ④
- During AUTO mode operation, for the first minute after beginning operation, airflow will be horizontal ①, the air direction cannot be adjusted during this period.

Horizontal Air Direction Adjustment


This instructions are applicable to "LARGE CEILING TYPE", "UNIVERSAL FLOOR/CEILING TYPE" and "WALL MOUNTED TYPE".

Press the HORIZONTAL AIR FLOW DIRECTION SET button.

- Press the HORIZONTAL AIRFLOW DIRECTION button. The temperature display will change to the horizontal airflow direction setting display.
- Press the HORIZONTAL AIRFLOW DIRECTION button to change the horizontal louvre position. The position number will appear on the display.


Cooling & Dry : ①, ②, ③, ④, ⑤

Heating : ①, ②, ③, ④, ⑤

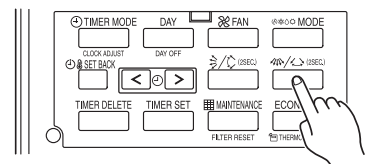


Example : When set to horizontal air direction.


■ LARGE CEILING TYPE

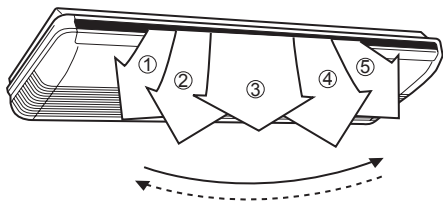

■ WALL MOUNTED TYPE

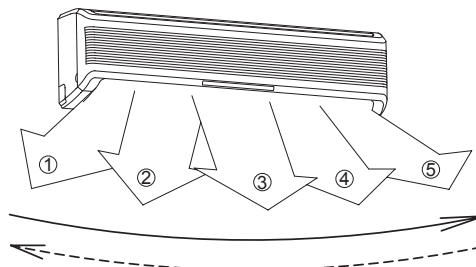

■ UNIVERSAL FLOOR/CEILING TYPE

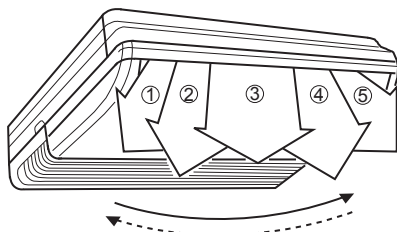

(2) SWING OPERATION

Instructions are applicable to "LARGE CEILING TYPE", "UNIVERSAL FLOOR / CEILING TYPE", "CASSETTE TYPE", "WALL MOUNTED TYPE", "COMPACT WALL MOUNTED TYPE" and "COMPACT FLOOR TYPE".


Begin air conditioner operation before performing this procedure.

To select Vertical airflow SWING Operation

This instructions are applicable to "LARGE CEILING TYPE", "UNIVERSAL FLOOR/CEILING TYPE", "CASSETTE TYPE", "WALL MOUNTED TYPE", "COMPACT WALL MOUNTED TYPE" and "COMPACT FLOOR TYPE".

Press the VERTICAL SWING button for more than two seconds.

The remote controller's Vertical Swing Display will light up.
In this mode, the UP/DOWN air direction flaps will swing automatically to direct the air flow both up and down.

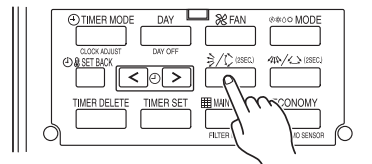

Example : When set to vertical swing.

To Stop Vertical airflow SWING Operation

Press the VERTICAL SWING button for more than two seconds once and again.

The remote controller's Vertical Swing Display will go out.
Airflow direction will return to the setting before swing was begun.

Instructions are applicable to "LARGE CEILING TYPE", "UNIVERSAL FLOOR / CEILING TYPE", "CASSETTE TYPE", "WALL MOUNTED TYPE", "COMPACT WALL MOUNTED TYPE", and "COMPACT FLOOR TYPE".

About Vertical Airflow SWING Operation

- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.
- The swing operation is not available depending on the model. Please refer to the operating manual for the indoor unit.

Air swing range


Air flow direction set	Range of swing
①	① to ④ (All range)
②	
③	
④	

To select Horizontal Airflow SWING Operation

This instructions are applicable to "LARGE CEILING TYPE", "UNIVERSAL FLOOR / CEILING TYPE", "WALL MOUNTED TYPE".

Press the HORIZONTAL SWING button for more than two seconds.

The remote controller's Horizontal Swing Display will light up. In this mode, the RIGHT/LEFT air direction louvers will swing automatically to direct the airflow both right and left.

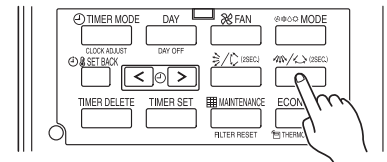

Example : When set to horizontal swing.

To stop Horizontal airflow SWING Operation

Press the HORIZONTAL SWING button for more than two seconds once and again.

The remote controller's Horizontal Swing Display will go out. Airflow direction will return to the setting before swing was begun.

About Horizontal Airflow Swing Operation

- Left and right swing range can be changed in 3 steps by field setting.
- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.
- The swing operation is not available depending on the model. Please refer to the operating manual for the indoor unit.

Left and right swing range (◆ ... Factory setting)

Range of swing	Function Number	Setting Value
◆ ① to ⑤ (All range)	24	00
① to ③		01
③ to ⑤		02

3-4 ELECTRONIC EXPANSION VALVE CONTROL

1. Initialization

- When the power is turned ON.
- When it has passed the limited time since the last initialization.

2. Operation Control

- When indoor unit stopping

Outdoor unit Condition	EEV Condition
OFF	Fully closed
Cooling	Fully closed
Heating	Slightly open

- When starting up
(Cooling) Move to the cooling control base pulse in steps.
(Heating) Move to the heating control base pulse in steps.
- Automatic operatic control
Automatic PI control is performed based on the indoor unit heat exchanger outlet temp and inlet temp.
- Room temperature control
The room temperature is controlled so that it reaches to the set-up temperature based on the difference between the room temperature and the set-up temperature, and the change of indoor unit temperature. if the room temperature becomes 0.5°C lower than the set-up temperature, EEV is fully closed.

3. Special Control

- Oil recovery operation : Controlled pulse.
- Test run operation : Controlled pulse.
- Icing protection control : Fully closed.
- Pump down operation : Fully open.
- Defrost operation : Controlled pulse

3-5 DRAIN PUMP OPERATION

- (1) When cooling and refrigerant circulation starts, the drain pump starts simultaneously.
- (2) The drain pump operates continuously for 3 minutes after the refrigerant circulation stopped.
- (3) When the refrigent circulation is stopped by a start of indoor heat exchanger frost prevention operation, the drain pump will turn off in 1 hour after the end of indoor heat exchanger frost prevention operation.
- (4) When the water level in the drain pan rises up and then the float switch functions:
 - ① Microcomputer stops the refrigerant circulation and indoor fan motor operation.
 - ② Drain pump operates continuously for 3 minutes after the float switch is turned off.
(Almost condensing water may be drained)
- (5) When the float switch turns ON continuously for 3 minutes, 'FAILURE INDICATION' operates.
- (6) When the float switch turns OFF within 3 minutes, the unit starts cooling operation.

3-4 ELECTRONIC EXPANSION VALVE CONTROL for Outdoor air unit

1. Initialization

- When the power is turned ON.
- When it has passed the limited time since the last initialization.

2. Operation Control

- When indoor unit stopping by Thermo-OFF condition.

Outdoor unit Condition	EEV Condition
OFF	Fully closed
Cooling	Fully closed
Heating	Fully closed

- When starting up
(Cooling) Move to the cooling control base pulse in steps.
(Heating) Move to the heating control base pulse in steps.
- Automatic operatic control
Automatic PI control is performed based on the indoor unit heat exchanger outlet temp and inlet temp.
- Discharge airflow temperature control
The discharge airflow temperature is controlled so that it reaches to the set-up temperature based on the difference between the discharge airflow temperature and the set-up temperature.
Cooling operation: 1) If the discharge airflow temperature becomes 5°C lower than the set-up temperature, EEV is fully closed.
2) If the suction airflow temperature becomes 0.5°C lower than the set-up temperature, EEV is fully closed.
Heating operation: 1) If the discharge airflow temperature becomes 5°C higher than the set-up temperature for 5 minutes or more, EEV is fully closed.
2) If the suction airflow temperature becomes 0.5°C higher than the set-up temperature, EEV is fully closed.

3. Special Control

- Oil recovery operation : Controlled pulse(Maximum 1400 puls)
- Test run operation : Controlled pulse.
- Freeze prevention control : Fully closed.
- Vacuuming operation : Fully open.
- Defrost operation : Controlled pulse(Maximum 1400 puls)

3-5 DRAIN PUMP OPERATION for Outdoor air unit

- (1) When cooling and refrigerant circulation starts, the drain pump starts simultaneously.
- (2) The drain pump operates continuously for 3 minutes after the refrigerant circulation stopped.
- (3) When the refrigent circulation is stopped by a start of indoor heat exchanger frost prevention operation, the drain pump will turn off in 1 hour after the end of indoor heat exchanger frost prevention operation.
- (4) When the water level in the drain pan rises up and then the float switch functions:
 - ① Microcomputer stops the refrigerant circulation and indoor fan motor operation.
 - ② Drain pump operates continuously for 3 minutes after the float switch is turned off.
(Almost condensing water may be drained)
- (5) When the float switch turns ON continuously for 3 minutes, 'FAILURE INDICATION' operates.
- (6) When the float switch turns OFF within 3 minutes, the unit starts cooling operation.

3-6 FUNCTION

3-6-1 Auto Restart

The air conditioner restarts with the previous setting operation.

3-6-2 Icing Protection Control

The icing of the indoor heat exchanger is prevented during the cooling and dry mode operation.

(1) Starting Condition

- Compressor is operation more than 3 minutes.
When "Heat exchanger inlet temperature $\leq T_A$ " continues *4 minutes or more.
- Compressor is operation more than 3 minutes.
When "Heat exchanger outlet temperature $\leq T_A$ " continues 4 minutes or more.

(2) Operation

EEV is closed.
Fan is at the setting amount.

(3) Completing Condition

Heat exchanger inlet and middle temperature $\geq T_B$
After more than 5 minutes


* Drain pump turns off at 60 minutes past the completion of the icing protection operation.

T_A	T_B
1°C	7°C

3-6-3 Oil Recovery Operation

[Oil recovery operation] : It periodically returns the residual refrigerant ion oil in the indoor unit and the connection piping back to the outdoor unit , and prevents the compressor oil level from decreasing.

Indoor unit LED : Operation LED

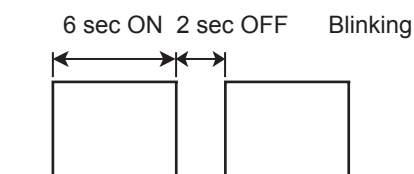

Indoor fan : Same operation before oil recovery operation.

Indoor EEV : Control pulse


* During the above operation, a refrigerant noise may be from the indoor unit.

3-6-4 Outdoor temperature protected operation for Outdoor air unit


1. COOL OPERATION

The contents of operation is controlled as following based on the suction airflow temperature.

- a) Operation mode management is made
"Management by indoor unit", and
outdoor air unit is master indoor unit.

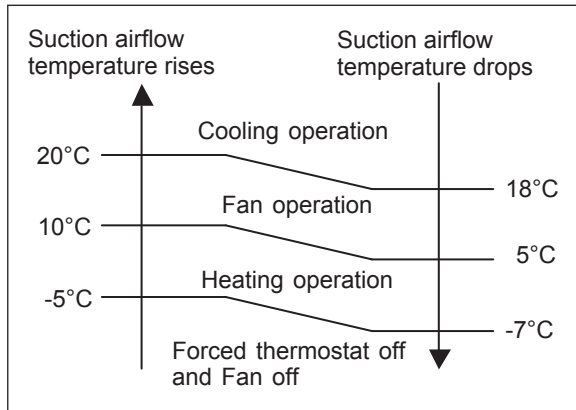


- b) Cases Other than (a)

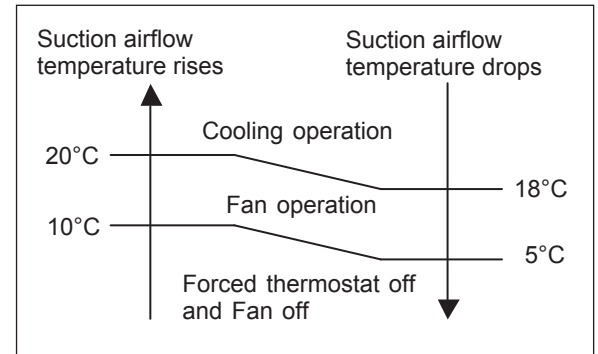

2. HEAT OPERATION


The contents of operation is controlled as following based on the suction airflow temperature.

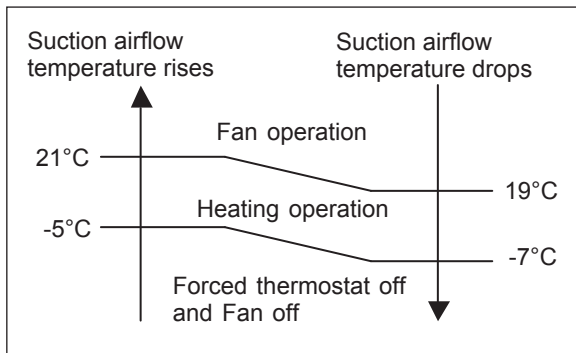


3. FAN OPERATION

The contents of operation is controlled as following based on the suction airflow temperature.

- a) Operation mode management is made
"Management by indoor unit", and
outdoor air unit is master indoor unit.

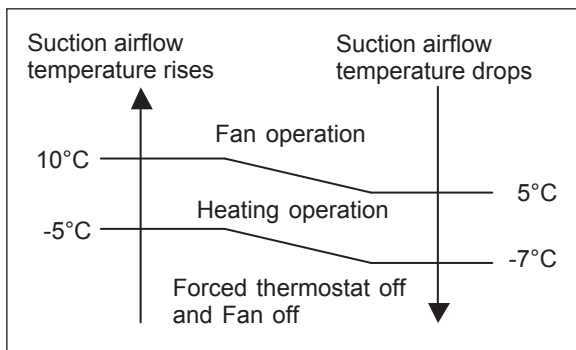

- b) Cases Other than (a)

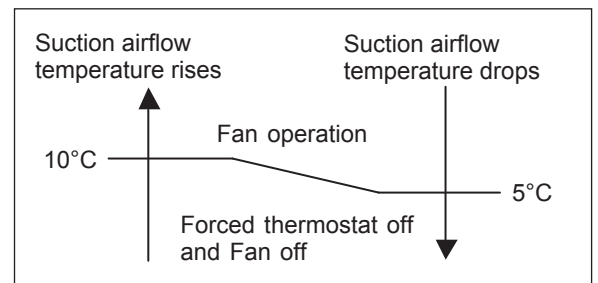

3-7 TIMER CONTROL

3-7-1 Wireless Remote Controller

UTY - LNH*

There are following 4 kinds of timer modes are available.



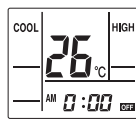
- ON Timer
- OFF Timer
- PROGRAM Timer
- SLEEP Timer

1. ON / OFF TIMER

The timer functions cannot be used when this controller is used together with the remote controller (Wired type).
A beeping sound is made when a signal is received.

To set the ON / OFF timer





Press the START/ STOP button to start the air conditioner, and then proceed as follows.

<p>1  Press the TIMER MODE button to select "OFF TIMER" or "ON TIMER"</p> <p>→ CANCEL → OFF TIMER → ON TIMER → PROGRAM TIMER (OFF ← ON, OFF → ON) →</p>	<p>2   Adjust the OFF or ON time. (About 5 seconds later, the entire display will reappear.)</p>
--	---

2. PROGRAM TIMER

To set the PROGRAM timer

Press the START/ STOP button to start the air conditioner, and then proceed as follows.

<p>1  Select "OFF TIMER"</p>	<p>2  Adjust the OFF time.</p>	<p>3  Select "ON TIMER"</p>
<p>4 Adjust the ON time. (About 5 seconds later, the entire display will reappear.)</p> <p></p>	<p>5   Select "PROGRAM TIMER" (Either OFF → ON or OFF ← ON will display.) (If the ON timer has been selected to operate first, the unit will stop operating at this point.)</p>	

To cancel the TIMER

 Select "**CANCEL**".
The air conditioner will return to normal operation.

*To change operating conditions

If you wish to change the operating conditions (ON/OFF, Mode, Fan Speed, Temperature Setting), after making the time setting, wait until the entire display reappears, then press the appropriate buttons to change to the desired operating condition.

* Even ON/OFF and Sleep timer are valid.

3. SLEEP TIMER

To set the SLEEP timer


Unlike other timer functions, the **SLEEP** timer is designed to set the duration of time in which the unit does not operate. The **SLEEP** timer can be set regardless of whether the indoor unit is operating or stopped.

<p>1  (Both the indoor unit's OPERATION indicator lamp (green) and the TIMER indicator lamp (orange) will light.)</p>	<p>2   Adjust the OFF time. (About 5 seconds later, the entire display will reappear.)</p>
---	--

To change the timer settings

<p>1  Press the SLEEP button once again.</p>	<p>2  Set the time using the TIMER SET buttons.</p>
---	--

*To cancel the TIMER

 Select "**CANCEL**".
The air conditioner will return to normal operation.

*To stop air conditioner operation during timer operating




* Even ON/OFF and Program timer are valid.

- Sleep timer

The sleep timer function automatically corrects the temperature thermostat setting according to the time setting to prevent excessive cooling and heating while sleeping.


Cooling operation / dry operation

When the sleep timer is set, the set temperature automatically rises 1°C every hour. The set temperature can rise up to a maximum of 2°C

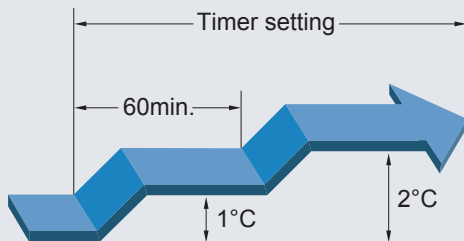

Heating operation

When the sleep timer is set, the set temperature automatically drops 1°C every 30 minutes. The set temperature can drop to a maximum of 4°C

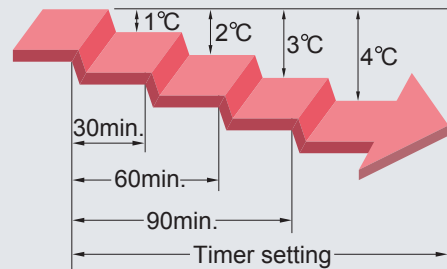

3-7-2 Group Remote Controller

UTY - CGG *

Different schedules can be set for each day of the week.

• WEEKLY TIMER

Four timers can be set for each day

1. WEEKLY TIMER

The timer function is not available depending on the initial setting.



- Different schedules can be set for each day of the week.
- Four timers can be set for each day.
- Operation on/off time, operation mode, and temperature can be specified for each timer.

To start / cancel the WEEKLY timer operation


The timer does not start if the time is not set.

ALL


Press the ALL TIMER button to start or cancel the WEEKLY timers for all indoor units.





- If any of the indoor units are in the timer mode, pressing this button cancels the timers for all indoor units.
- If none of the indoor units are in the timer mode, pressing this button starts the timers for all indoor units.

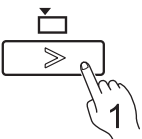

Press the Select button to select the indoor unit.

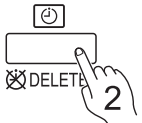


Press the Timer Mode (DELETE) button to start or cancel the WEEKLY timers.

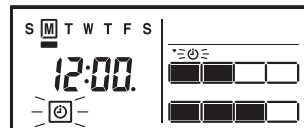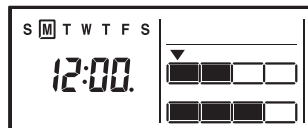


Note: When a time is not set, the weekly timer cannot be started.

To set the WEEKLY timer

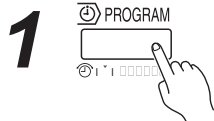


Press the PROGRAM (CLOCK ADJUST) button.

* Do not press this button for two seconds or more, otherwise you will enter the time setting mode.

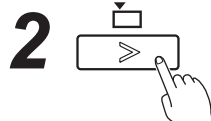

Press the Select button to select the indoor unit.

* If all indoor units are selected, the times for all of the registered indoor unit timers are set at once.





3 ● Day of the week setting




Press the DAY button to select the day of the week.

* For ALL, all of the days can be set together when a appears around each day.

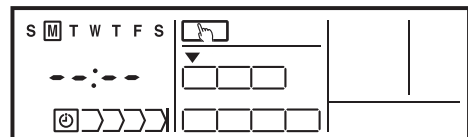

4 ● Timer setting

Decrement Increment






Press the Set Time buttons to set the time in 10-minute increments.

* Hold down a Set Time button to adjust the time quickly.

* The time already set at another timer is skipped at the relevant indoor unit.

5


● Operating setting

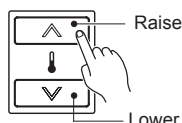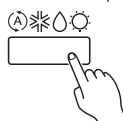

Press the Start/Stop button or the Mode button or the Set Temperature button to set the operation.

* For the operations that can be set, refer to "Operation mode setting", "Room temperature setting", and "To start /stop operation", in "OPERATION".


* Only the current operation settings are displayed.

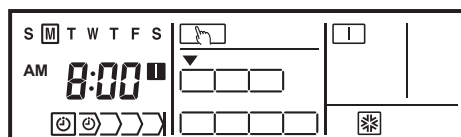

ex. TIMER-1 will start operation at 8:00 on COOL.

6

● Setting the next timer for the same day:



Then press the ENTER button to proceed to the time setting, and repeat steps from **4** to **5**.

● Repeat steps **3** to **5** to set the timer for another day of the week.

※ Be careful for pressing the ENTER button without any operation setting because the time that is set will be cancelled.

7

● Setting the timer for the other indoor units:



Before setting the timer for other indoor units, press the ENTER button to confirm the settings.

* The display switches to the next timer.

● Repeat steps **2** to **6** to set the timer for other indoor units.


8



1. Press the ENTER button to confirm the set timer.
2. Press again the PROGRAM (CLOCK ADJUST) button to complete the weekly timer setting.



* flashes for two seconds.

When the operating time is set, the mark appears.

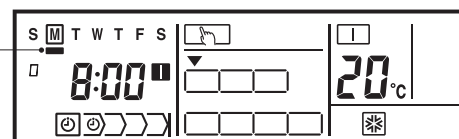

ex. TIMER-1 will start operation at 8:00 on COOL with a setting of 20°C

● To delete the operating time

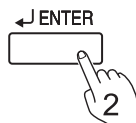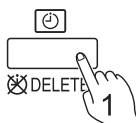

1. If the Timer Mode (DELETE) button is pressed during steps **3** to **7**, the operating time for the selected day will be deleted.

* If all the days are selected, the operating times for all of the days of the selected timer will be deleted.

2. Press the ENTER button to confirm the deletion.

1 NOTES

- (1) The WEEKLY timer does not operate when the HEAT timer is set if a HEAT PUMP MODEL in the air conditioning system is operating in the cooling mode. In addition, the WEEKLY timer does not operate when the COOL or DRY timer is set if a HEAT PUMP MODEL in the air conditioning system is operating in the heating mode.
- (2) Even if the timer operation is set, the timer lamp of the indoor unit does not light up. (The timer lamp is used for wireless remote controller only.)
- (3) If the same time is set in Timer-1 to Timer-4 of an indoor unit, the timer setting of the smallest number will be effective.

3-7-3 Wired Remote Controller


UTY - RNK *

- ON / OFF TIMER
- WEEKLY TIMER
- TEMPERATURE SET BACK TIMER




1. ON / OFF TIMER

The timer function is not available depending on the model.




To set the ON/OFF timer


1  **TIMER MODE**
CLOCK ADJUS

Press the timer mode button to select the ON timer or OFF timer. It is switched every time as shown in the below diagram when the button is pressed.

No display →  →  → 

NON STOP OFF TIMER ON TIMER WEEKLY TIMER

2   




From 1 to 24 hours ex. OFF timer set for 6 hours

Press the set time buttons to set the time.
After the time is set, the timer will start automatically.
The amount of time until the OFF timer operates that is displayed on the timer display decreases as time passes.

● To cancel

TIMER DELETE




- Press the DELETE button to cancel the timer mode.
- The timer mode can also be canceled by changing the timer mode using the timer mode button.



2. WEEKLY TIMER

The timer function is not available depending on the model.

Weekly timer setting

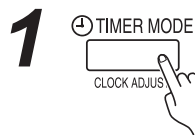


Press the timer mode button to select the weekly timer.

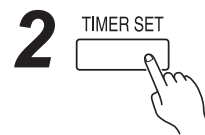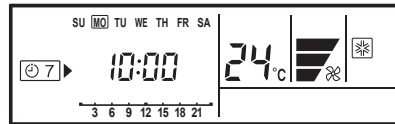


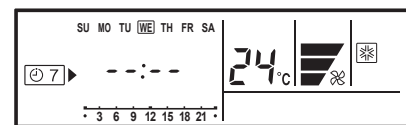

Press the SET button for 2 seconds or more.

3 • Day of the week setting

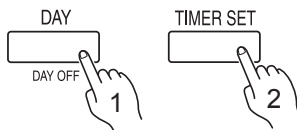



Press the DAY button to select the day of the week, and then press the TIMER SET button to confirm the setting.


* For ALL, all of the days can be set together when a  appears around each day.



4 • Time setting (ON / OFF timer)

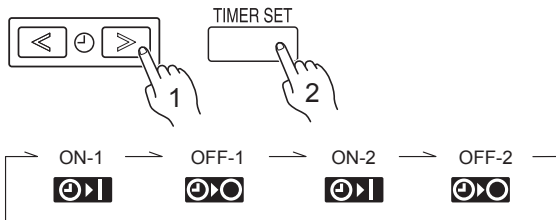

When the operating time is set, the  mark appears.

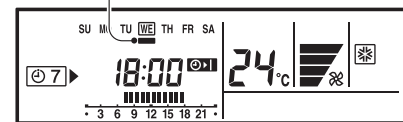


ex. The timer is set for 7:00-18:00.

Press the SET TIME buttons to set the ON time in 30-minute increments, then press the TIMER SET button to proceed to the OFF time setting. Set the OFF time in the same way.



If necessary, set the second weekly timer settings in the same way.

• Time setting (Independent OFF timer)

Switching from ON/OFF timer to independent OFF timer

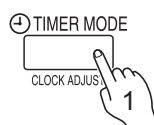

The independent timer will flash on the display.

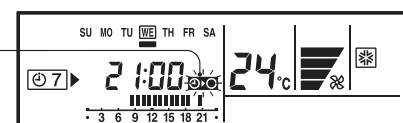

Press the TIMER MODE button to change to the independent OFF timer setting.


* The time setting process is the same as the ON/OFF timer.

Press the TIMER MODE button to return to the ON/OFF timer setting.

5

Repeat steps **3** and **4** to set the weekly timer for another day of the week.

6

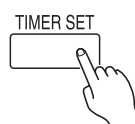

Press the TIMER SET button for 2 seconds or more to complete the weekly timer settings.

• To delete the operating time



If the TIMER DELETE button is pressed during steps **3** or **4**, the operating time for the selected day will be deleted. If all the days are selected, the operating times for all of the days will be deleted.


To start /cancel the WEEKLY timer operation

● To start

⊖ TIMER MODE

CLOCK ADJUST

The independent timer will flash on the display.



ex. Operating time 7:00-18:00
Indpnd. OFF time 21:00

When the weekly timer is selected, the timer starts automatically.

The operating time for the current day is displayed.

● To cancel

TIMER DELETE

- Press the TIMER DELETE button to cancel the timer mode.
- The timer mode can also be canceled by changing the timer mode using the TIMER MODE button.

i NOTES

(1) PRECAUTIONS DURING WEEKLY TIMER SETUP

Setup is not possible in the following cases, so amend the time.

- Be sure to set the ON time first, then the OFF time. If either the ON time or the OFF time is not set correctly, the timer will not operate properly.
- The WEEKLY 2 settings cannot be set earlier than the WEEKLY 1 settings.
- The WEEKLY 1 and WEEKLY 2 time spans cannot overlap.

(2) The earliest OFF time you can set is 30 minutes after the ON time.

(3) The OFF time can be carried over to the next day.

(4) The earliest independent OFF time you can set is 30 minutes after the last OFF time.

(5) An independent OFF time can be set up to 0:00 hours of the next day.

(6) Even if the timer operation is set, the timer indicator lamp of the indoor unit does not light up. (The timer indicator lamp is used for wireless remote controllers only.)

To set the DAY OFF (for a holiday)

1

TIMER SET

During the weekly timer, press the TIMER SET button for 2 seconds or more to set the day.

2

DAY

DAY OFF

Select the day to set the DAY OFF.

3

DAY



DAY OFF

Press the DAY (DAY OFF) button for 2 seconds or more to set the DAY OFF.

4

TIMER SET

Press the TIMER SET button for 2 seconds or more to complete the DAY OFF setting.

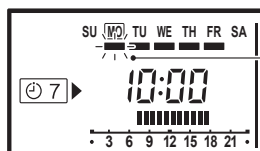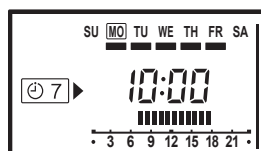

■ Flashing mark:
indicates the DAY OFF.

ex. The DAY OFF is set for Monday.


● To cancel

Follow the same procedures as those for setup.


i NOTES

- The DAY OFF setting is only available for days for which weekly settings already exist.
- If the operating time carries over to the next day (during a next day setting), the effective DAY OFF range will be set as shown below.

● Normal

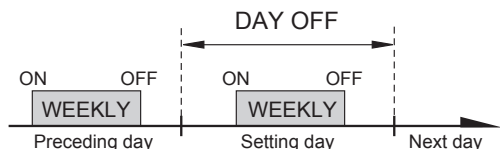

● Next day setting

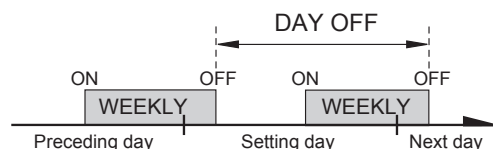


- The DAY OFF setting can only be set one time.
The DAY OFF setting is cancelled automatically after the set day has passed.

3. TEMPERATURE SET BACK TIMER

The timer function is not available depending on the model.

Temperature SET BACK timer setting

1  SET BACK

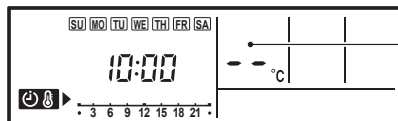

If there is no existing SET BACK temperature setting, " - - " will be displayed for the temperature.

2 TIMER SET



Press the SET BACK button to change to the SET BACK confirmation display.

The SET BACK operating time and the set temperature will be displayed.

Press the SET button for 2 seconds or more.


3 • Day setting



DAY OFF

1


• Operating time setting



3




4

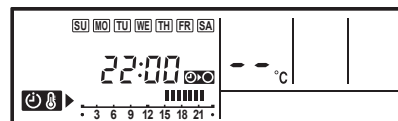


ex. When setting all days together

Follow step **3** and **4** in "To set the WEEKLY timer". The DELETE button is also used as described in the procedures for the weekly timer.


4 • Temperature setting

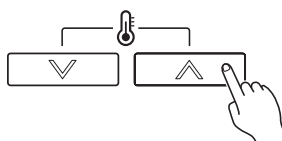

Press the set temperature buttons to set the temperature. (The temperature setting range is the same as the range for the operation mode.)

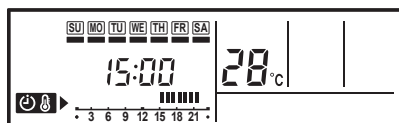

ex. Operating time 15:00 - 22:00

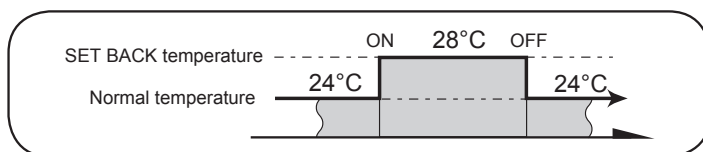

5 TIMER SET




Repeat steps **3** and **4**. Press the SET button for 2 seconds or more to complete the temperature SET BACK timer settings.

To start /cancel the temperature SET BACK timer operation

• To start

 SET BACK

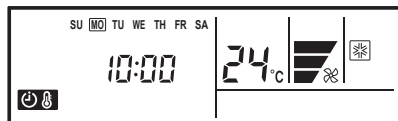


ex. Display during SET BACK timer operation
(The operating time will not be displayed.)

Press the SET BACK button. The SET BACK confirmation display appears for 5 seconds, and then the timer starts automatically.

• To cancel

 SET BACK

TIMER DELETE



Press the SET BACK button, and then press the DELETE button while the SET BACK confirmation display is displayed. Even if the SET BACK button is pressed again, the SET BACK timer will be cancelled.

i NOTES

- The SET BACK timer only changes the set temperature, it cannot be used to start or stop air conditioner operation.
- The SET BACK timer can be set to operate up to two times per day but only one temperature setting can be used.
- The SET BACK timer can be used together with the ON, OFF, and weekly timer functions.
- The SET BACK operating time is displayed only in the SET BACK confirmation display.
(Refer to step 1 for the SET BACK confirmation display.)
- During the COOL/DRY mode, the air conditioner will operate at a minimum of 18°C even if the SET BACK temperature is set to 17°C or lower.
- Room temperatures as low as 10, 12, and 14°C cannot be set depending on the model.


3-8 DX-KIT

3-8-1 SYSTEM CONFIGURATION

1. FGL remote/controller connection

The DX kit is controlled by a VRF operation device and use the external output of the DX kit to perform the AHU operation indirectly.

Control devices can be unified with FGL devices.

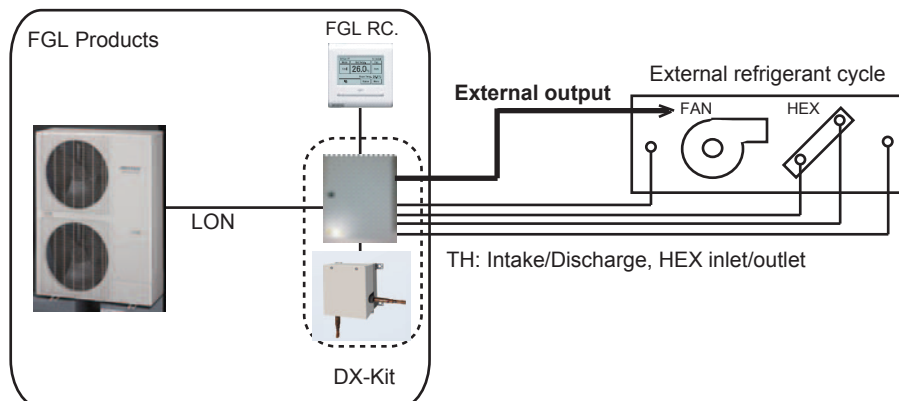


Interface	Contents
External input	Fan abnormal input
External output	Fan ON/OFF
	Thermostat ON/OFF

2. External controller connection

Air conditioning control (thermostat-control) can be designed on-site.

(Air conditioning control by DX is also possible.)

Control equipment suited to the application can be connected.

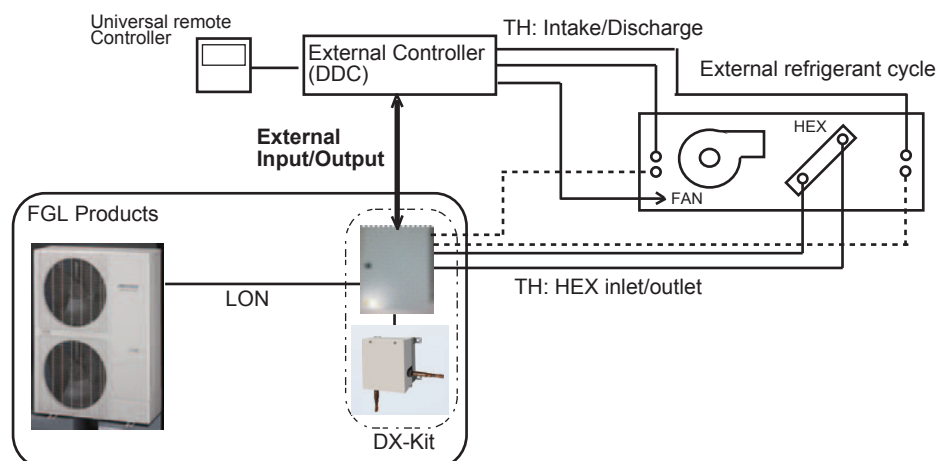

Interface	Contents	Remarks
External input	Operation ON/OFF	
	Operation mode Cool/Heat	Typical indoor unit is required for mode changing.
	Set temperature or capacity request (Analog input)	Temperature setting: When thermo-control is performed by DX kit. Capacity request: When the thermo-control is performed by external controller.
	Error	Information on error occurred at external controller
External output	Operation ON/OFF	
	Error	Information on error occurred at VRF system
	Special operation (defrost)	The Fan operation can be stopped with the communication signal of special operation

3-8-2 FUNDAMENTAL FUNCTIONS

1. FGL remote/controller connection

Air conditioning control system (SET3-3)	Intake temperature control	Discharge temperature control
Set temperature objective	Intake temperature (Room temperature) Cooling: 18 to 30°C Heating: 10 to 30°C	Discharge temperature Cooling: 14 to 25°C Heating: 17 to 28°C
Thermostat OFF conditions	Cooling Intake temperature < Setting temperature -0.5°C Heating Intake temperature > Setting temperature +0.5°C	Cooling Discharge temperature < Setting temperature -5.0°C Heating Discharge temperature > Setting temperature +5.0°C for 5 minutes
Operation (ON/OFF/Mode/ Set temperature)	FGL controller	
Fan control	Fan control commands are output from the DX kit external output terminal	

2. External controller connection


Air conditioning control system (SET3-3)	Intake temperature control	Outlet temperature control	
Analog input system (SET3-2)	Set temperature input / Capacity input Selection	Set temperature input / Capacity input Selection	
Temperature setting	Temperature Setting range	Intake temperature (Room temperature) Cooling: 18 to 30 °C Heating: 10 to 30°C	Discharge temperature Cooling: 14 to 25°C Heating: 17 to 28°C
	Thermostat OFF conditions	Cooling Intake temperature < Setting temperature -0.5 °C Heating Intake temperature > Setting temperature +0.5°C	Cooling Discharge temperature < Setting temperature -5.0°C Heating Discharge temperature > Setting temperature +5.0 °C for 5 minutes
Capacity input	Capacity input range	0%, 5 % to 100%	
	Thermostat OFF conditions	Controlled by external controller and EEV closed by making the capacity input 0% in cooling mode. EEV slightly opened when the Compressor operating in heating mode	
Operation (ON/OFFMode/ Set temperature)	Controlled by external controller, input to DX Kit external input terminal *Operation from FGL controller is disabled. (Only monitoring is possible)		
When error generated at external equipment	When fanmotor locked or another error was generated at the external equipment, the refrigerant cycle is stopped by inputting an error signal to the DX Kit external input terminal. (EEV is Closed)		
Fan control	Control is performed by external equipment, but when you want to stop the fan during defrosting, use the defrost signal that is output from the DX Kit external output terminal.		

3-8-3 FUNDAMENTAL FUNCTIONS

Cooling operation

When using the cooling mode, set the temperature to a value lower than the target controlling temperature, otherwise the External refrigeration cycle equipment will not start the cooling operation.

An example for COOLING TEMPERATURE CONTROL time chart

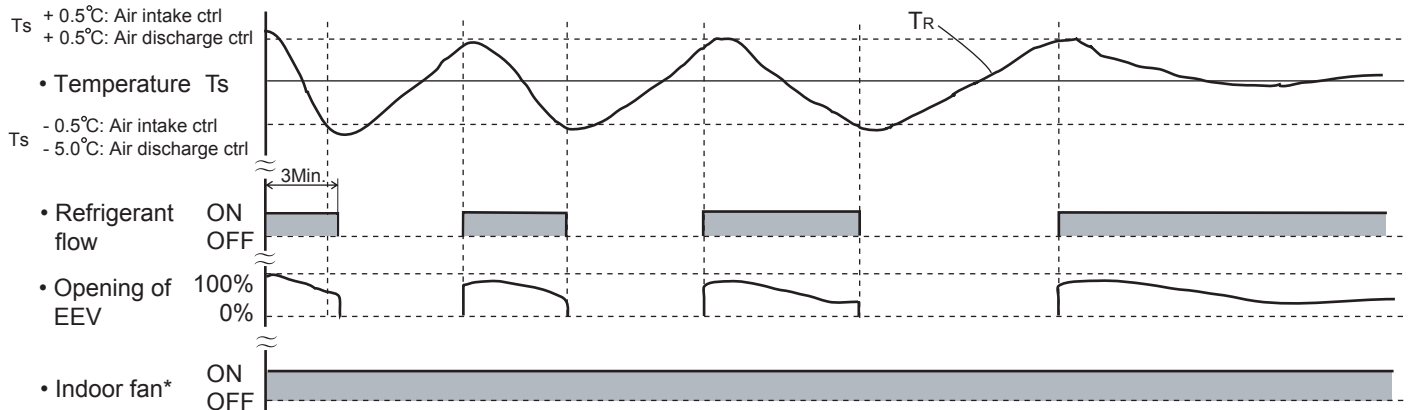

T_R : Target controlling temperature (Air intake temperature or Air discharge temperature)

T_s : Corrected Setting temperature

Air intake temp controlling

$T_s + 0.5^\circ\text{C}$: The threshold temperature of start of refrigerant flow

$T_s - 0.5^\circ\text{C}$: The threshold temperature of stop of refrigerant flow

Air discharge temp controlling


$T_s + 0.5^\circ\text{C}$: The threshold temperature of start of refrigerant flow

$T_s - 5.0^\circ\text{C}$: The threshold temperature of stop of refrigerant flow

Heating operation

- (1) When using the heating mode, set the temperature to a value higher than the current room temperature, otherwise the indoor unit will not start the heating operation.
- (2) After the start of heating operation, the fan of indoor unit will not rotate until the heater exchange is warmed up to blow out warm air.
- (3) During defrosting, the OPERATION indicator lamp flashes 6 sec. ON and 2 sec. OFF, and repeat. The heating operation will be temporarily interrupted.

An example for HEATING TEMPERATURE CONTROL time chart

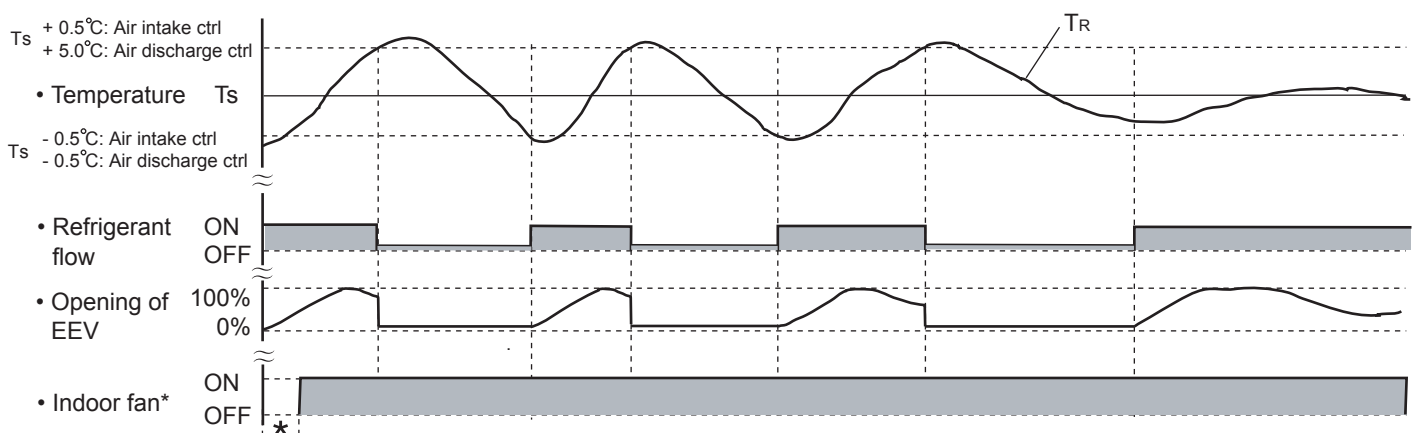

T_s : Corrected Setting temperature ★: Duration of cold air prevention

T_R : Target controlling temperature (Air intake temperature or Air discharge temperature)

Air intake temp controlling

$T_s - 0.5^\circ\text{C}$: The threshold temperature of start of refrigerant flow

$T_s + 0.5^\circ\text{C}$: The threshold temperature of stop of refrigerant flow

Air discharge temp controlling

$T_s - 0.5^\circ\text{C}$: The threshold temperature of start of refrigerant flow

$T_s + 5.0^\circ\text{C}$: The threshold temperature of stop of refrigerant flow

*When the EEV operates with the minimum pulse, and it keeps for 5 minutes.

3-8-4 ELECTRICAL EXPANSION VALVE CONTROL for DX-KIT

1. Initialization

- When the power is turned ON.
- When it has passed the limited time since the last initialization.

2. Operation Control

- When indoor unit stopping by Thermo-OFF condition.

Outdoor unit Condition	EEV Condition
OFF	Fully closed
Cooling	Fully closed
Heating	Fully closed

- When starting up
(Cooling) Move to the cooling control base pulse in steps.
(Heating) Move to the heating control base pulse in steps.
- Automatic operatic control
Automatic PI control is performed based on the indoor unit heat exchanger outlet temp and inlet temp.
- Discharge airflow temperature control
The discharge airflow temperature is controlled so that it reaches to the set-up temperature based on the difference between the discharge airflow temperature and the set-up temperature.
Cooling operation: 1) If the discharge airflow temperature becomes 5°C lower than the set-up temperature, EEV is fully closed.
2) If the suction airflow temperature becomes 0.5°C lower than the set-up temperature, EEV is fully closed.
Heating operation: If the suction airflow temperature becomes 0.5°C higher than the set-up temperature, EEV is fully closed.

3. Special Control

- Oil recovery operation : Controlled pulse(Maximum 1400 puls)
- Test run operation : Controlled pulse.
- Freeze prevention control : Fully closed.
- Vacuuming operation : Fully open.
- Defrost operation : Controlled pulse(Maximum 1400 puls)

3-8-5 DARIN PUMP OPERATION for DX-KIT

- (1) When cooling and refrigerant circulation starts, the drain pump starts simultaneously.
- (2) The drain pump operates continuously for 3 minutes after the refrigerant circulation stopped.
- (3) When the refrigent circulation is stopped by a start of indoor heat exchanger frost prevention operation, the drain pump will turn off in 1 hour after the end of indoor heat exchanger frost prevention operation.
- (4) When the water level in the drain pan rises up and then the float switch functions:
 - ① Microcomputer stops the refrigerant circulation and indoor fan motor operation.
 - ② Drain pump operates continuously for 3 minutes after the float switch is turned off.
(Almost condensing water may be drained)
- (5) When the float switch turns ON continuously for 3 minutes, 'FAILURE INDICATION' operates.
- (6) When the float switch turns OFF within 3 minutes, the unit starts cooling operation.

3-8-6 FUNCTION

Auto Restart

The air conditioner restarts with the previous setting operation.

Freeze Prevention Control

The icing of the indoor heat exchanger is prevented during the cooling and dry mode operation.

(1) Starting Condition

- Compressor is operation more than 3 minutes.
When "Heat exchanger inlet temperature $\leq T_A$ " continues *4 minutes or more.
- Compressor is operation more than 3 minutes.
When "Heat exchanger outlet temperature $\leq T_A$ " continues 4 minutes or more.

(2) Operation

EEV is closed.
Fan is at the setting amount.

(3) Completing Condition

Heat exchanger inlet and middle temperature $\geq T_B$
After more than 5 minutes

* Drain pump turns off at 60 minutes past the completion of the icing protection operation.


T_A	T_B
1°C	7°C

Oil Recovery Operation / Defrost Operation

[Oil recovery operation / Defrost operation] :

It periodically returns the residual refrigeration oil in the indoor unit and the connection piping back to the outdoor unit, and prevents the compressor oil level from decreasing.

IR Receiver Unit LED: Operation LED

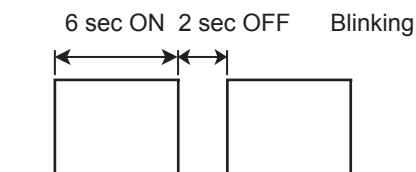

FAN output: Same operation before oil recovery operation in cooling operation or dry operation. (Heating operation: Stop)

DX-KIT EEV: Control pulse

* During the above operation, a refrigerant noise might hear from the EEV Kit.










4. TROUBLE SHOOTING















4. TROUBLESHOOTING



4-1 NORMAL OPERATION

4-1-1 Indoor Unit Display

Indication type	Indication Lamp	Flashing Pattern
Operation	Operation LED	Continuous lighting
Anti Freeze		Continuous lighting(lowered light)
Timer	Timer LED	Continuous lighting(lowered light)
Filter	Filter LED	Continuous lighting
Power Failure	Operation LED	ON  OFF
	Timer LED	ON  OFF
Test Operation	Operation LED	ON  OFF
	Timer LED	ON  OFF
Defrosting	Operation LED	ON  OFF
Oil Recovery		
Opposite Operation Mode	Timer LED	ON  OFF
Maintenance Mode	Operation LED	ON  OFF
	Timer LED	
	Filter LED	

4-1-2 OUTDOOR UNIT DISPLAY

Indication type	7 Segment LED Pattern	Description
Idling(stop)	 Blank	
Cooling Mode	 "C" OO "L"	
Heating Mode	 "H" EA "T"	
Oil Recovery Operation	 "O" IL "R" ECOVERY	Refer to 02-09 page for operation.
Defrost Operation	 "D" E "F" ROST	Refer to 02-10 page for operation.
Discharge Temp. Protection is stopped	 "P" ROTECT "1"	<Starting condition> Discharge temp \geq fixed value 115°C <Release condition> 3 minutes have elapsed and discharge temperature \leq 80°C
High Pressure Protection is stopped	 "P" ROTECT "2"	<Starting condition> High pressure \geq 580psi (4.00MPa) <Release condition> 5 minutes have elapsed and high pressure \leq 508psi (3.50MPa)
Low Pressure Protection is stopped	 "P" ROTECT "3"	<Starting condition> Low pressure \leq 7psi (0.05MPa) or low pressure \leq 15psi (0.10MPa) continues for 10 mins <Release condition> 3 minutes have elapsed and low pressure \geq 25psi (0.17MPa)
Compressor Temperature Protection is stopped	 "P" ROTECT "4"	<Starting condition> Compressor temp \geq fixed value 110°C <Release condition> 3 minutes have elapsed and discharge temperature \leq 80°C
Peak Cut Mode	 "P" eak "C" ut	
Low Noise Mode	 "L" OW "N" OISE	Refer to 02-07 page for operation.
Inverter Compressor Operation Indication	 Blinking	ON  OFF 

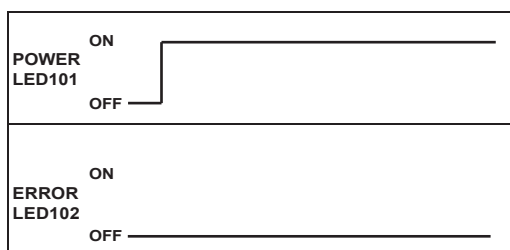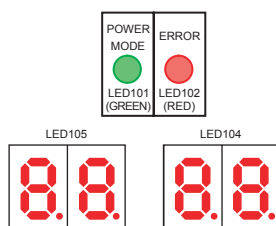


4-2 ABNORMAL OPERATION

4-2-1 Indoor Unit Display

Please refer the flashing pattern as follows.

Error Contents	Operation LED	Timer LED	Filter LED	Trouble shooting
Wired Remote Controller Communication Error	1 times flash	2 times flash	Continuous flash	1, 2, 3
Network Communication Error	1 times flash	4 times flash	Continuous flash	4, 5, 6, 7
Peripheral device Communication Error	1 times flash	6 times flash	Continuous flash	8, 9
Address setting Error	2 times flash	6 times flash	Continuous flash	10, 11
Connection Unit Number Error in Wired Remote Controller System	2 times flash	9 times flash	Continuous flash	12, 13
Indoor Unit Power Frequency Abnormal	3 times flash	1 times flash	Continuous flash	14
Indoor Unit Main PCB Error	3 times flash	2 times flash	Continuous flash	15, 16, 17
Indoor Unit Power Supply Error For Fan Motor 1(2)	3 times flash	9 times flash	Continuous flash	18, 19, 20
Indoor Unit Communication circuit (Wired Remote Controller) Error	3 times flash	10 times flash	Continuous flash	21
Room Temperature Sensor Error	4 times flash	1 times flash	Continuous flash	22
Indoor Unit Heat Ex. Sensor Error	4 times flash	2 times flash	Continuous flash	23, 24
Outdoor Air Unit Temperature Sensor Error	4 times flash	10 times flash	Continuous flash	25, 26
Indoor Unit Fan Motor 1 Error	5 times flash	1 times flash	Continuous flash	27
Indoor Unit EEV coil 1 Error	5 times flash	2 times flash	Continuous flash	28
Indoor Unit Water Drain Abnormal	5 times flash	3 times flash	Continuous flash	29
Indoor Unit Fan Motor 2 Error	5 times flash	9 times flash	Continuous flash	30
Outdoor Unit Error	9 times flash	15 times flash	Continuous flash	4, 5, 7, 31 ~70


Depending on contents of Outdoor unit, it may not indicate. (Refer to "TROUBLE LEVEL OF SYSTEM")

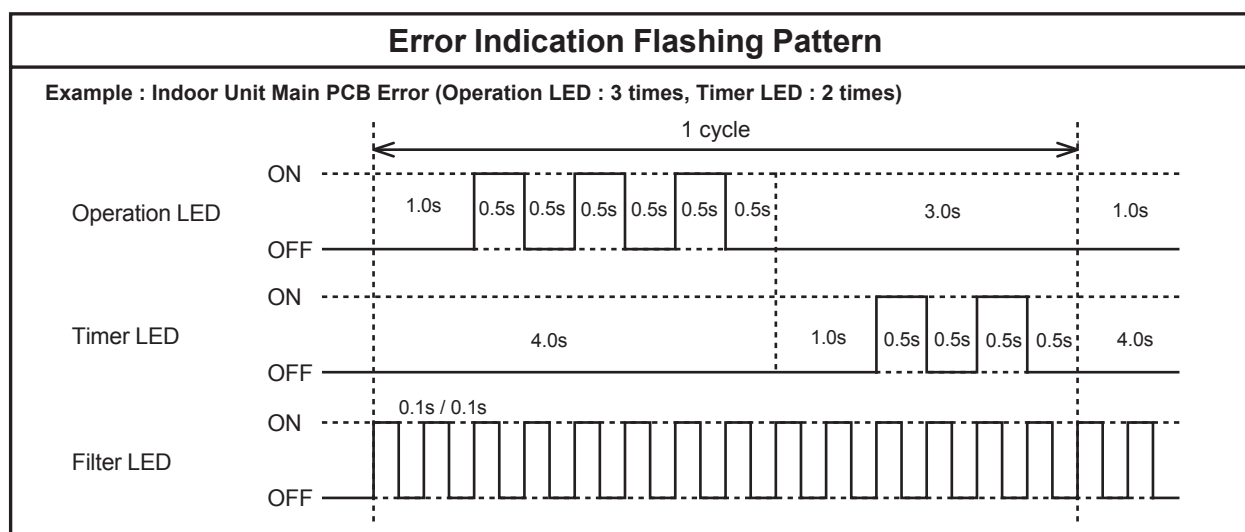


* LED Display when Option receiver unit installed.

4-2-2 Outdoor Unit Display


LED display

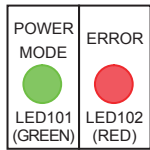

POWER MODE LED : on
ERROR LED : blink

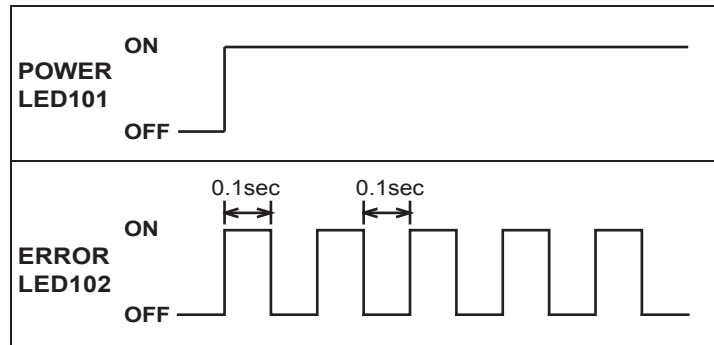


Operation button

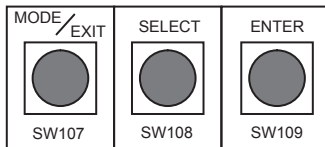

ERROR transition

Short press : less than 3 seconds
Long press : more than 3 seconds

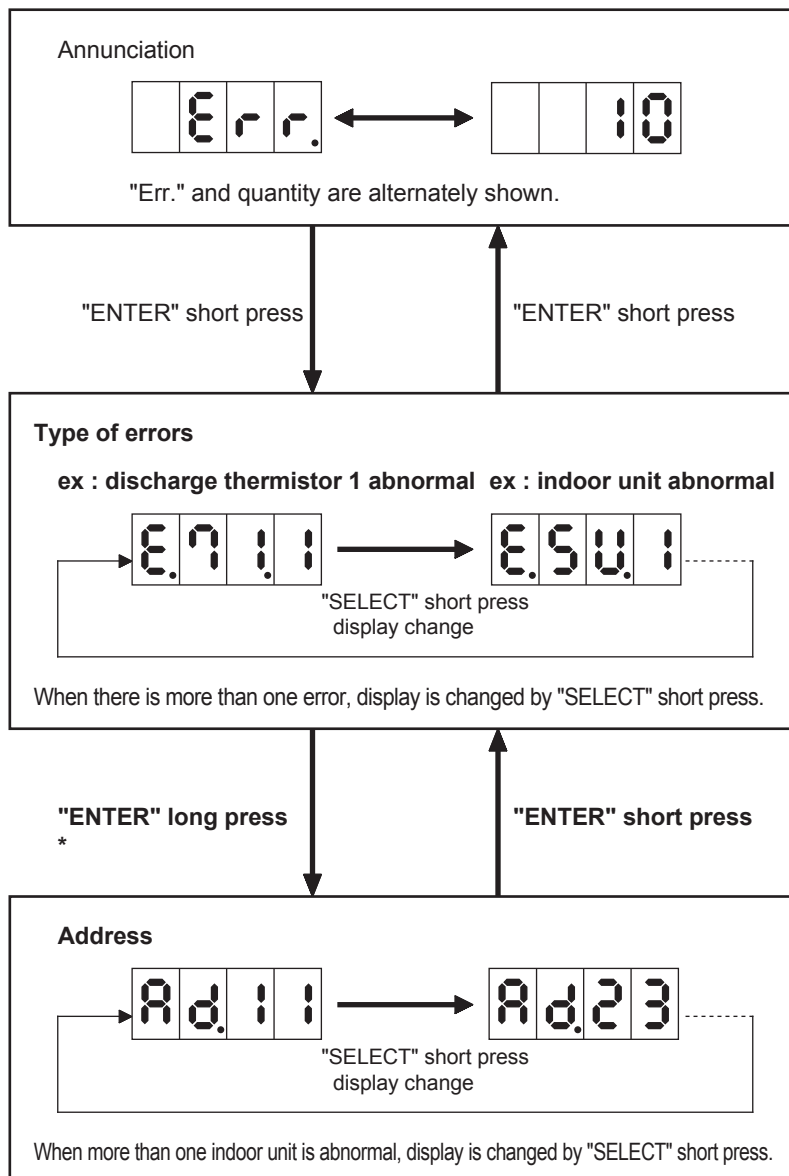

If some error is newly occurred or resolved during transition, it is reflected after going back to "Annunciation".

* Only in the case of "indoor unit abnormal (E.5U.1)", indoor unit address is shown by ENTER long press.

4-2-3 Error Code List for Outdoor Unit

Error Code	Error Contents	Trouble shooting
- - - -	Initial Setting Error	31
1 4 . 1	Outdoor unit Network communication 1 Error	4
1 4 . 2	Outdoor unit Network communication abnormal 2	5
1 4 . 5	The number of Indoor unit shortage	7
2 8 . 1	Auto Address Setting Error	32
2 8 . 4	Signal Amplifier Auto Address Setting Error	33
5 U . 1	Indoor Unit Error	1 ~ 30
6 1 . 5	Outdoor Unit Reverse phase missing, phase wire Error	34
6 2 . 3	Outdoor Unit EEPROM Access Error	35
6 2 . 6	Inverter Communication Error	36
6 2 . 8	EEPROM Data corrupted Error	37
6 3 . 1	Inverter Error	38
6 7 . 2	Inverter PCB short interruption detection	39
6 8 . 2	Rush current limiting resistor temp rise protection	40
6 9 . 1	Outdoor Unit transmission PCB Parallel Communication Error	41
7 1 . 1	Discharge Temp. Sensor Error < TH1 >	42
7 2 . 1	Compressor Temp. Sensor Error < TH10 >	43
7 3 . 3	Heat Ex. Liquid pipe Temp. Sensor Error < TH5 >	44
7 4 . 1	Outdoor Temp. Sensor Error < TH3 >	45
7 5 . 1	Suction Gas Temp. Sensor Error < TH4 >	46
7 7 . 1	Heat Sink Temp. Sensor Error < IPM built in >	47
8 2 . 1	SC HE. Gas Inlet Temp. Sensor Error < TH8 >	48
8 2 . 2	SC HE. Gas Outlet Temp. Sensor Error < TH9 >	49
8 3 . 2	SC HE. Liquid Outlet Temp Sensor Error < TH7 >	50
8 4 . 1	Current Sensor Error	51
8 6 . 1	Discharge Pressure Sensor Error	52


Error Code	Error Contents	Trouble shooting
8 6 . 3	Suction Pressure Sensor Error	53
8 6 . 4	High Pressure Switch Error	54
9 3 . 1	Inverter Compressor Start Up Error	55
9 4 . 1	Trip Detection	56
9 5 . 5	Compressor Motor Loss of Synchronization	57
9 7 . 1	Outdoor Unit Fan Motor 1 Lock Error (Start up Error)	58
9 7 . 4	Outdoor unit FAN Motor 1 Under voltage	59
9 7 . 5	Outdoor Unit Fan Motor 1 Temperature Abnormal	60
9 8 . 1	Outdoor Unit Fan Motor 2 Lock Error (Start up Error)	58
9 8 . 4	Outdoor unit FAN Motor 2 Under voltage	59
9 8 . 5	Outdoor Unit Fan Motor 2 Temperature Abnormal	60
9 A . 1	Coil (Expansion Valve 1) Error	61
9 A . 2	Coil (Expansion Valve 2) Error	61
A 1 . 1	Discharge Temperature Abnormal	62
A 3 . 1	Compressor Temperature Abnormal	63
A 4 . 1	High Pressure Abnormal	64
A 4 . 2	High Pressure Protection 1	65
A 5 . 1	Low Pressure Abnormal	66
A C . 4	Outdoor unit Heat Sink temp. Abnormal	67

4-2-4 Remote Controller Display

<< SIMPLE REMOTE CONTROLLER >> UTY-RSKU , UTY-RHKU

ERROR CODE DISPLAY

If an error occurs, the following display will be shown.
("Er" will appear in the set room temperature display.)
If "Er" is displayed, immediately contact authorized service personnel.

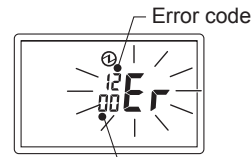


Faulty unit No.
(Remote controller address)
Ex. Error code display

<< WIRED REMOTE CONTROLLER 3 wire type >> UTY-RNKU

ERROR CODE DISPLAY

If an error occurs, the following display will be shown.
("Er" will appear in the set room temperature display.)
If "Er" is displayed, immediately contact authorized service personnel.


Unit number (usually 0) Error code




Ex. Error code display

<< WIRED REMOTE CONTROLLER 2 wire type >> UTY-RNRU


If an error occurred, an error icon appears on the Monitor mode screen.

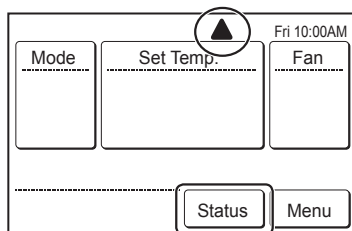

1. Touch the [Status] on the Monitor mode screen.

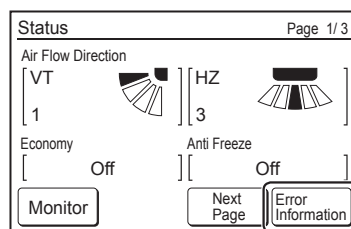

2. Touch the [Error Information] on the Status screen.

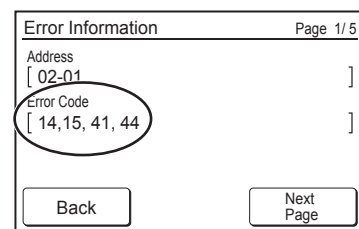


2-digit numbers are corresponding to the error code

<< WIRED REMOTE CONTROLLER 2 wire type >> UTY-RNRU

This appears automatically on the display if an error occurs.

If an error occurs, the following display will be shown. ("⚠" will appear in the "Monitor Mode Screen")

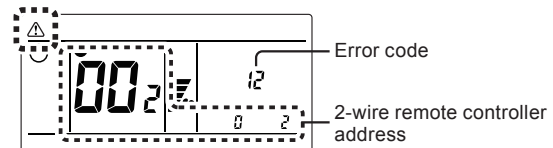


Ex. Error code display

<< GROUP REMOTE CONTROLLER >> UTY-CGGY

ERROR CODE DISPLAY

The air conditioning system must be inspected if "E" : " (error code) appears on the timer and Clock Display, or the operation lamp is flashing.

*1 ; Model code
 O : Outdoor unit
 I : Indoor unit
 G : Group remote controller
 R : Convertor

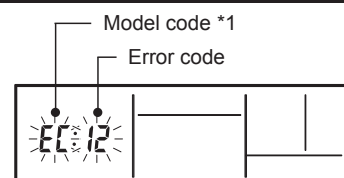

Ex. Error code display

4-2-5 Error Code List for Simple and Wired Remote Controller

Error Code	Error Contents	Trouble shooting	Error Code	Error Contents	Trouble shooting
1 2	Remote Controller Communication Error	1, 2, 3	3 A	Indoor unit Communication circuit (WRC) Error	21
1 4	Network Communication Error	4, 5, 6, 7	4 1	Room Temperature Sensor Error	22
1 5	Incompatible Indoor units connected	96	4 2	Indoor Unit Heat Ex. Sensor Error	23, 24
1 6	Peripheral device Communication Error	8, 9	4 A	Outdoor Air Unit Temperature sensor Error	25, 26
2 6	Address Setting Error	10, 11	5 1	Indoor Unit Fan Motor Error	27
2 9	Connection Unit Number Error in Wired Remote Controller System	12, 13	5 2	Indoor Unit EEV Coil 1 (2) Error	28
3 1	Indoor Unit Power Frequency Abnormal	14	5 3	Water Drain Abnormal	29
3 2	Indoor Unit Main PCB Error	15, 16, 17	5 9	Indoor Unit Fan Motor 2 Error	30
3 9	Indoor Unit Power Supply Error for Fan Motor 1(2)	18, 19, 20	9 U	Outdoor Unit Error	4, 5, 7, 30~ 67

Thermo sensor Icon on the display is brinking: The integrated room temperature sensor Error --> Refer to the Trouble shooting No. 97

4-2-6 Error Code List for Group Remote Controller

Error Code	Error Contents	Trouble shooting	Error Code	Error Contents	Trouble shooting
- -	Initial Setting Error	31	7 1	Discharge Temperature Sensor Error	42
1 2	Remote Controller Communication Error	1, 2, 3, 92	7 2	Compressor Temperature Sensor Error	43
1 4	Network Communication Error	4, 5, 6, 7, 95	7 3	Heat Ex. liquid pipe Temperature Sensor Error	44
1 5	Scan Error	94	7 4	Outdoor Temperature Sensor Error	45
1 6	Peripheral device Communication Error	8, 9, 88	7 5	Suction Gas Temperature Sensor Error	46
2 6	Address Setting Error	10, 11, 93	7 7	Heat Sink Temperature Sensor Error	47
2 9	Connection Unit Number Error in Wired Remote Controller System	12, 13	8 2	Sub-cool Heat Ex. Gas Temperature Sensor Error	48, 49
3 1	Indoor Unit Power Frequency Abnormal	14	8 3	Liquid Pipe Temperature Sensor Error	50
3 2	Indoor Unit Main PCB Error	15, 16, 17	8 4	Current Sensor Error	51
3 9	Indoor Unit Power Supply Error for Fan Motor 1(2)	18, 19, 20	8 6	Pressure Sensor Error	52, 53, 54
3 A	Indoor Unit Communication circuit (WRC) Error	21	9 3	Inverter Compressor Start Up Error	55
4 1	Room Temperature Sensor Error	22	9 4	Trip Detection	56
4 2	Indoor Unit Heat Ex. Sensor Error	23, 24	9 5	Compressor Motor loss of Synchronization	57
4 A	Outdoor Air Unit Temperature Sensor Error	25, 26	9 7	Outdoor Unit Fan Motor 1 Error	58, 59, 60
5 1	Indoor Unit Fan Motor Error	27	9 8	Outdoor Unit Fan Motor 2 Error	58, 59, 60
5 2	Indoor Unit EEV coil 1 (2) Error	28	9 A	Coil (Expansion Valve) Error	61
5 3	Water Drain Abnormal	29	A 1	Discharge Temperature Abnormal	62
5 9	Indoor Unit Fan Motor 2 Error	30	A 3	Compressor Temperature Abnormal	63
6 1	Outdoor Unit Reverse phase missing, phase wire Error	35	A 4	High Pressure Abnormal	64, 65
6 2	Outdoor Unit Main PCB Error	36, 37	A 5	Low Pressure Abnormal	66
6 3	Inverter Error	38	A C	Outdoor unit Heat Sink temp. Abnormal	67
6 7	Inverter PCB short interruption detection	39	C 1	Main PCB Error	81, 85
6 8	Rush current limiting resistor temp rise protection	40	C 4	Group Remote controller Hardware Error	91
6 9	Outdoor Unit transmission PCB Parallel Communication Error	41	C A	Software Error	89

4-2-7 Trouble shooting - No Error code -

No Error Code	Error condition	Trouble shooting
System Abnormal	Indoor Unit - No Power	68
	Outdoor unit - No Power	69
	No operation (Power is ON)	70
	No Cooling	71
	Abnormal Noise	72
	Indoor Unit - No Power(Outdoor air unit)	73

4-2-8 Error Code List for External Switch Controller (UTY-TEKX)

Error indication LED1	Error Contents	Trouble shooting
OFF	Power Supply Error	74
0.5sec ON / 0.5sec OFF	The abnormality in connection of remote controller cable	75
0.5sec ON / 1.0sec OFF	Transmission Error	76
ON, but SW1 or SW2 not operate	Switch Operation Error	77

4-2-9 Error Code List for Signal Amplifier (UTY-VSGXZ1)

Error indication of converter	Error Contents	Trouble shooting
- -	Power Supply Error	78
- -	Communication Error	79
2 6	Address Setting Error	80
C 1	Main PCB Error	81
LED "D9" Flashing or Lighting	Communication Error B	82
LED "D14" Flashing or Lighting	Communication Error A	83

4-2-10 Error Code List for Network Converter (UTY-VGGXZ1)

Error indication of converter	Error Contents	Trouble shooting
- -	Power Supply Error	84
C 1	Main PCB Error	85
1 2	Communication Error with Remote Controller	86, 87
1 6	Peripheral device Communication abnormal	88
C A	Software Error	89
2 6	Refrigerant circuit address setting error	90

4-2-9 TROUBLE SHOOTING WITH ERROR CODE


Trouble shooting 1 INDOOR UNIT Error Method: Wired Remote Controller Communication Error	E12.1 Indicate or Display: Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 1 times Flash, Timer LED 2 Times Flash, Filter LED Continuous Flash. < 1 2 > Error Code : 1 2
---	--

Detective Actuators: Indoor unit controller PCB circuit Wired Remote Control (3 wire / 2 Wire type)	Detective details: Upon receiving the signal more than 1 time from Wired Remote or other Indoor unit, but the same signal has not been received more than 1 minute (3 Wire type). 2.5 minute (2 Wire type)
--	--

Forecast of Cause : 1. Terminal connection abnormal 2. Wired Remote Control failure 3. Controller PCB failure

Check Point 1 : Check the connection of terminal <u>After turning off the power, check & correct the followings.</u> <input type="checkbox"/> Indoor Unit - Check the connection of terminal between remote control and Indoor unit, or between Indoor units, and check if there is a disconnection or short of the cable.



Check Point 2 : Check Remote and Controller PCB <input type="checkbox"/> Check terminal voltage of controller PCB Connector CNC01. (Power supply for Remote) If DC12V, Remote Control failure (Controller PCB is OK) >>> Replace Remote controller If DC0V, Controller PCB failure (Remote is OK) >>> Replace Controller PCB ▶ In case of re-installation is done due to removed connector or incorrect wiring, turn on the power again.	
--	--

Trouble shooting 2 E12.2 INDOOR UNIT Error Method: Wired Remote Controller signal Error	Indicate or Display: Outdoor Unit : E.5 U.1, Indoor Unit : Operation LED 1 times Flash, Timer LED 2 Times Flash, Filter LED Continuous Flash. Remote Controller : 1 2
--	--

Detective Actuators: Indoor unit Controller PCB circuit Wired Remote Control (3 wire type)	Detective details: More than 1 time of Token (Communication between wired remote controllers) is received, but it was not received more than 1 minute.
---	--

Forecast of Cause : 1. Terminal connection abnormal 2. Mis-setting 3. Wired Remote Control failure 4. Controller PCB failure

Check Point 1 : Check the connection of terminal
<u>After turning off the power, check & correct the followings.</u> <input type="checkbox"/> Indoor Unit - Check the connection of terminal between remote control and Indoor unit, or between Indoor units, and check if there is a disconnection or short of the cable.



Check Point 2 : Check Remote and Controller PCB
<input type="checkbox"/> Check terminal voltage of Controller PCB Connector CNC01. (Power supply for Remote) If DC12V, Remote Control failure (Controller PCB is OK) >>> Replace Remote If DC0V, Controller PCB failure (Remote is OK) >>> Replace Controller PCB ► In case of re-installation is done due to removed connector or incorrect wiring, turn on the power again.



Trouble shooting 3 E12.3 <u>INDOOR UNIT Error Method:</u> Number excess of device in Wired remote controller system (2 Wires RC)	<u>Indicate or Display:</u> Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 1 times Flash, Timer LED 2 Times Flash, Filter LED Continuous Flash. Error Code : 1 2
--	---

<u>Detective Actuators:</u> Wired remote controller (2-Wire) Indoor unit Controller PCB circuit	<u>Detective details:</u> When the number of connecting Indoor unit and Remote controller in one RCgroup exceeds more than 32 units.
--	--

Forecast of Cause : 1. Wrong wiring of RCgroup 2. Indoor unit controller PCB failure

Check Point 1 : Wire installation Wrong RCgroup setting
<input type="checkbox"/> Wrong wire connection in RCgroup (Please refer to the installation manual) <input type="checkbox"/> The number of connecting indoor unit and Remote controller in one RCgroup were less than 32 units.




Check Point 2 : Check Indoor unit controller PCB
<input type="checkbox"/> Check if controller PCB damage <input type="checkbox"/> Change controller PCB and check the Error after setting remote controller address

Trouble shooting 4 E14.1 <u>OUTDOOR UNIT Error Method:</u> Outdoor Unit Network Communication 1 Error	<u>Indicate or Display:</u> Outdoor Unit : E. 1 4. 1 Indoor Unit : No display / Operation LED 1 times Flash, Timer LED 4 Times Flash, Filter LED Continuous Flash. Error Code : 1 4 / 1 6 / 1 4. 1 / 1 4. 3 *
---	--

* Indoor unit indicates No display or 1 4
Peripheral device indicates 1 4 or 16.

<u>Detective Actuators:</u> Outdoor unit Main PCB	<u>Detective details:</u> •DIP-SW SET4-1 is OFF. •No communication for 180 seconds or more from an indoor unit which received communication once and no Outdoor unit network communication 2 error.
---	--

<u>Forecast of Cause :</u>	1. Noise, momentary open, voltage drop 2. Indoor unit power off 3. Communication line connection defective 4. Terminal resistor setting mistake 5. Communication PCB mounting defective, Communication PCB defective 6. Controller PCB defective
-----------------------------------	---

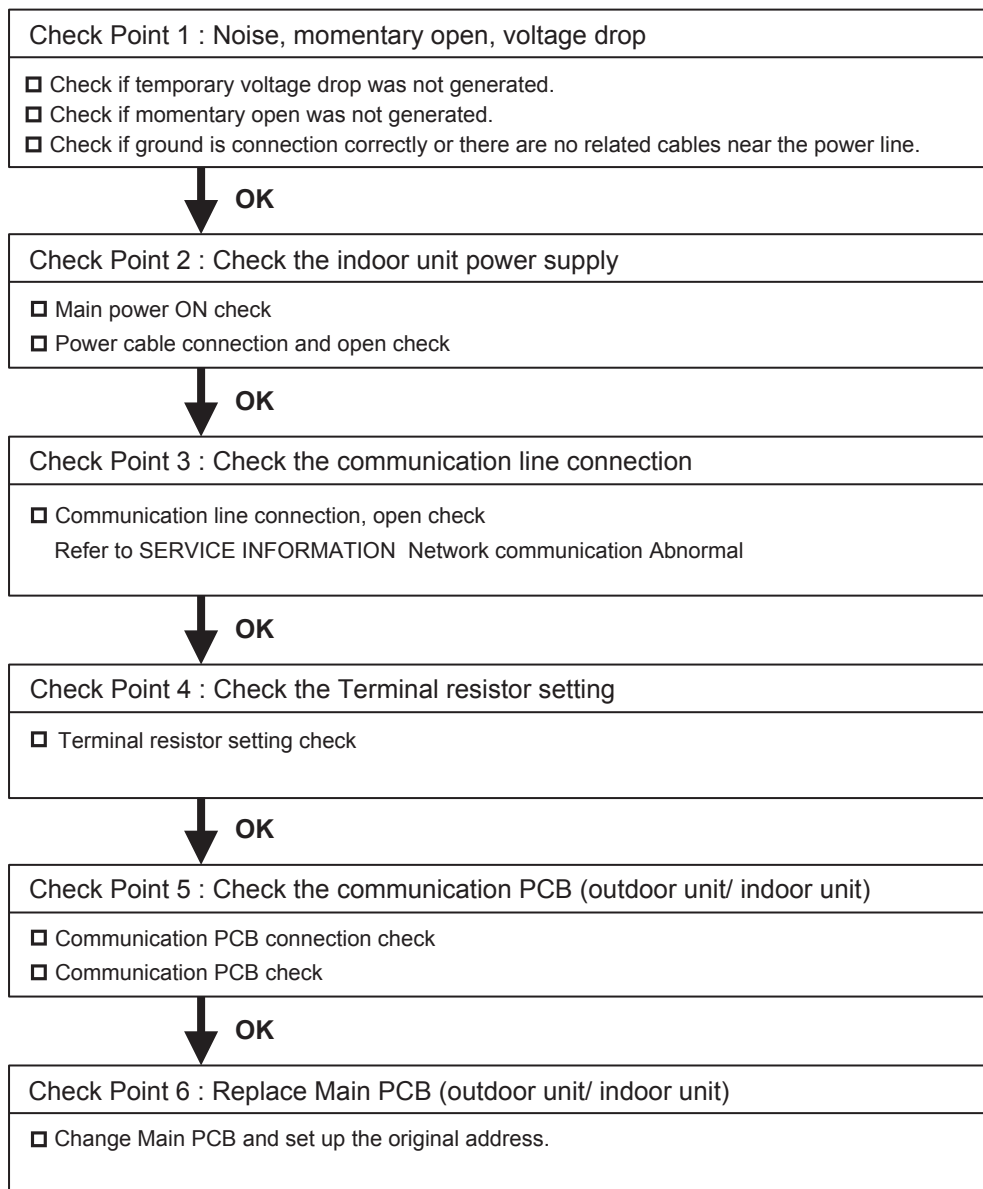


Trouble shooting 5 OUTDOOR UNIT Error Method : Outdoor Unit Network Communication 2 Error	E14. 2 Indicate or Display: Outdoor Unit : E. 1 4. 2 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. / Operation LED 1 times Flash, Timer LED 4 Times Flash, Filter LED Continuous Flash. * Error Code : 9 U / 1 4 / 1 6 / 1 4. 1 / 1 4. 2 / 1 4. 3 *
--	--

* Indoor unit indicates 9 U or 1 4
Peripheral device indicates 1 4 or 1 6

Detective Actuators: Outdoor unit Main PCB	Detective details: [DIP-SW SET4-1 : ON] (Factory setting) •No communication for 180 seconds or more from an indoor unit which received communication once. [DIP-SW SET4-1 : OFF] •No communication for 180 seconds or more from all indoor units that once received communication.
--	---

Forecast of Cause :	1. Noise, momentary open, voltage drop 2. Indoor unit power off 3. Communication line connection defective 4. Terminal resistor setting mistake 5. Communication PCB mounting defective, Communication PCB defective 6. Control PCB defective
----------------------------	--

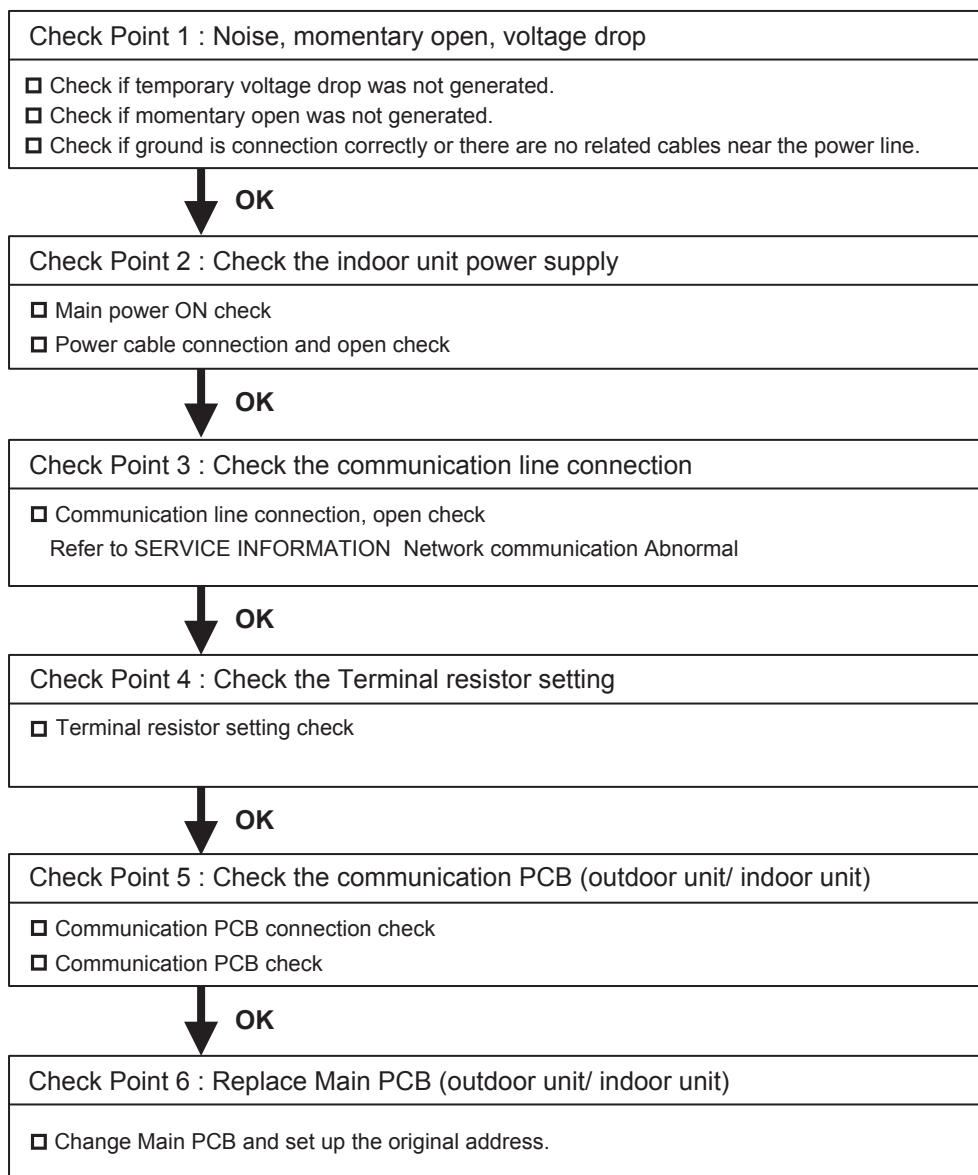

Trouble shooting 6 E14. 3 INDOOR UNIT Error Method: Indoor unit Network communication Error	Indicate or Display: Outdoor Unit : E.1 4. 1 / 1 4. 2 * Indoor Unit : Operation LED 1 times Flash, Timer LED 4 Times Flash, Filter LED Continuous Flash. Error Code : 1 4 / 1 6 / 9 U / 14.1 / 14.2 / 14.3 *
---	---

* Outdoor unit indicates 1 4.1 or 1 4.2 (No communication from 14.3 Error Indoor unit)
Peripheral device indicates 1 4 or 1 6

Detective Actuators: Indoor unit Controller PCB circuit Indoor unit Communication PCB	Detective details: When the cut-off of network communication is detected (more than 90 seconds passed since the last receipt of Outdoor unit signal).
--	---

Forecast of Cause :

1. Outside cause 2.Connection failure 3. Communication PCB failure 4. Controller PCB failure

Check Point 1 : Check if any outside cause such as voltage drop or noise

- ⚙ Instant voltage drop ----- Check if there is any electric equipment with a large load within the same circuit.
- ⚙ Momentary power failure ----- Check contact failure or leak current in power supply circuit
>>Check power supply for Outdoor Unit as well.
- ⚙ Check if there is any equipment that causes harmonic wave near the power cable
(Neon light bulb or any electronic equipment which causes harmonic wave). And check the complete insulation of grounding.
>>If the same symptom does not reappear after resetting the power, possibility of noise is high.



Check Point 2 : Check the connection

After turning off the power, check and correct followings.

- ☐ Is Indoor Communication PCB loose?
- ☐ Check loose or removed connection of communication line Indoor unit => Outdoor unit.
Refer to SERVICE INFORMATION Network communication Abnormal
- ☐ When the signal amplifier is connected , Check the error indication of signal amplifier. (Refer to the installation manual)



Check Point 3 : Check Communication PCB

- ☐ Replace Communication PCB of the Indoor units that have the error.



Check Point 4 : Check Controller PCB

- ☐ Replace controller PCB of the Indoor units that have the error.

Trouble shooting 7 E14. 5 OUTDOOR UNIT Error Method: The number of Indoor unit shortage Error	Indicate or Display: Outdoor Unit : E.1 4. 5 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. / No display (When DIP-SW4-1 is OFF.) Error Code : 9 U / 1 4 / 1 6 / 1 4. 5 / 1 4. 3 *
---	--

***Peripheral device indicates 14,16**

Detective Actuators: Outdoor unit Main PCB	Detective details: When the indoor unit number decreases for 180 seconds from the memorized maximum indoor units number after power(Breaker) ON.
--	--

Forecast of Cause :	1. Indoor unit power off 2. Noise, momentary open, voltage drop 3. Communication line connection defective 4. Terminal resistor setting mistake 5. Communication PCB mounting defective, Communication PCB defective 6. Controller PCB defective
----------------------------	---

Check Point 1 : Find the indoor unit that the communication is lost.
<input type="checkbox"/> Check system drawing and service tool.



Check Point 2 : Check the indoor unit power supply
<input type="checkbox"/> Main power ON check <input type="checkbox"/> Power cable connection and open check



Check Point 2 : Noise, momentary open, voltage drop
<input type="checkbox"/> Check if temporary voltage drop was not generated. <input type="checkbox"/> Check if momentary open was not generated. <input type="checkbox"/> Check if ground is connection correctly or there are no related cables near the power line.



Check Point 3 : Check the communication line connection
<input type="checkbox"/> Communication line connection, open check Refer to SERVICE INFORMATION Network communication Abnormal



Check Point 4 : Check the Terminal resistor setting
<input type="checkbox"/> Terminal resistor setting check



Check Point 5 : Check the communication PCB (indoor unit/ outdoor unit)
<input type="checkbox"/> Communication PCB connection check <input type="checkbox"/> Communication PCB check



Check Point 6 : Replace Main PCB and Communication PCB (indoor unit/ outdoor unit)
<input type="checkbox"/> Change Main PCB and Communication PCB, and set up the original address.

Attention!!

In case of DIP-SW SET4-1 is ON(factory setting), If this error occurs, system stops. In case of DIP-SW SET4-1 is OFF, If this error occurs, system does not stop.

If the failure indoor unit is pinpointed and it needs to erase the error indication, it can be reset by function setting (F3-41: Maximum memorized indoor unit number reset).

Caution!!

Even if normal, this error occurs temporarily by the timing of the power ON of outdoor unit, indoor unit, and signal amplifier.


In this case, please wait for 5 minutes after turning on all the equipments.

Trouble shooting 8 E16. 1 <u>INDOOR UNIT Error Method:</u> Transmission PCB Connection Error	<u>Indicate or Display:</u> Outdoor Unit : E.1 4.1, 1 4.2 * Indoor Unit : Operation LED 1 times Flash, Timer LED 6 Times Flash, Filter LED Continuous Flash. Error Code : 1 6 *
--	--


* Outdoor unit indicates 1 4.1 or 14.2 (No communication from Indoor unit)
Peripheral device indicates 1 6 (1 6.4 Error)
Service Tool indicates 14.3 (Missing Error Indoor unit)

<u>Detective Actuators:</u> Indoor unit Controller PCB circuit Indoor unit Communication PCB	<u>Detective details:</u> When Parallel communication error (Communication reset occurs continuously more than specified times) is detected.
---	--


<u>Forecast of Cause :</u> 1. Connection failure 2. Outside cause 3. Communication PCB failure 4. Controller PCB failure

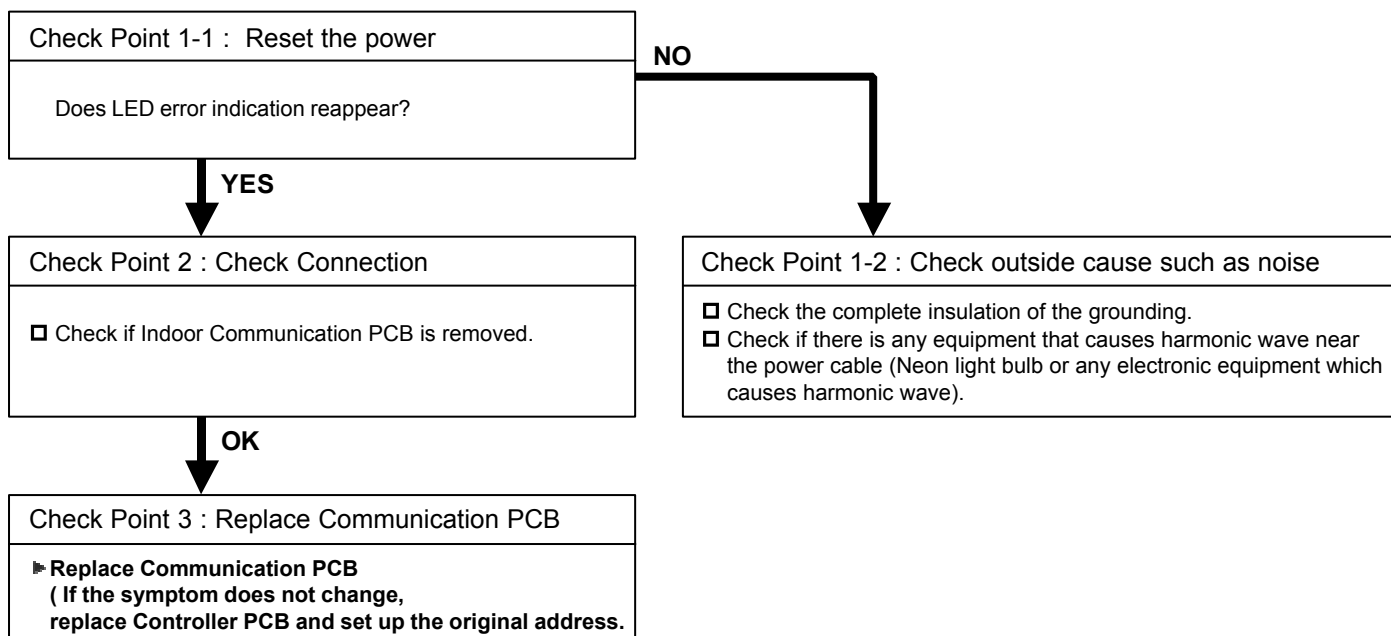

Trouble shooting 9 E16. 4 INDOOR UNIT Error Method: Communication Error Between Controller and Indoor unit	Indicate or Display: Outdoor Unit : No Display Indoor Unit : No Display Error Code : 1 6 (Peripheral Unit)
Detective Actuators: Indoor unit Controller PCB circuit Indoor unit Communication PCB	Detective details: When the cut-off of network communication is detected (more than 90 seconds passed since the last receipt of Outdoor unit signal).
Forecast of Cause : 1. Outside cause 2. Connection failure 3. Communication PCB failure 4. Controller PCB failure	

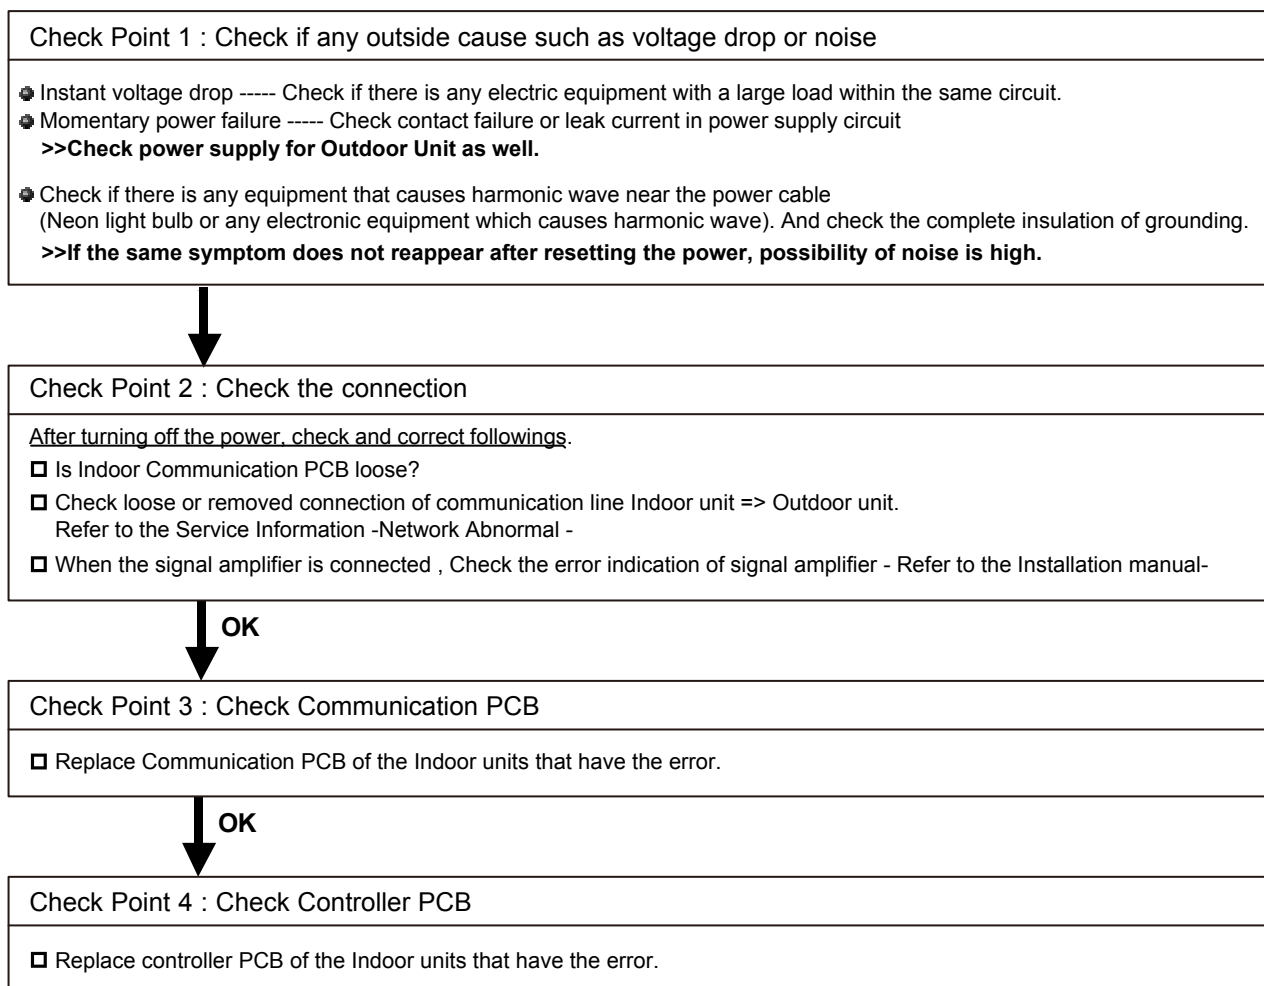

Trouble shooting 10 E26. 4 INDOOR UNIT Error Method: Address Duplication in Wired remote contorller system	Indicate or Display: Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 2 times Flash, Timer LED 6 Times Flash, Filter LED Continuous Flash. Error Code : 2 6
Detective Actuators: Wired remote controller (2-Wire) Indoor unit Controller PCB circuit	Detective details: When the duplicated address number exists in one RCgroup
Forecast of Cause : 1. Wrong wiring of RCgroup 2. Wrong remote address setting 3. Indoor unit controller PCB failure 4. Remote controller failure	

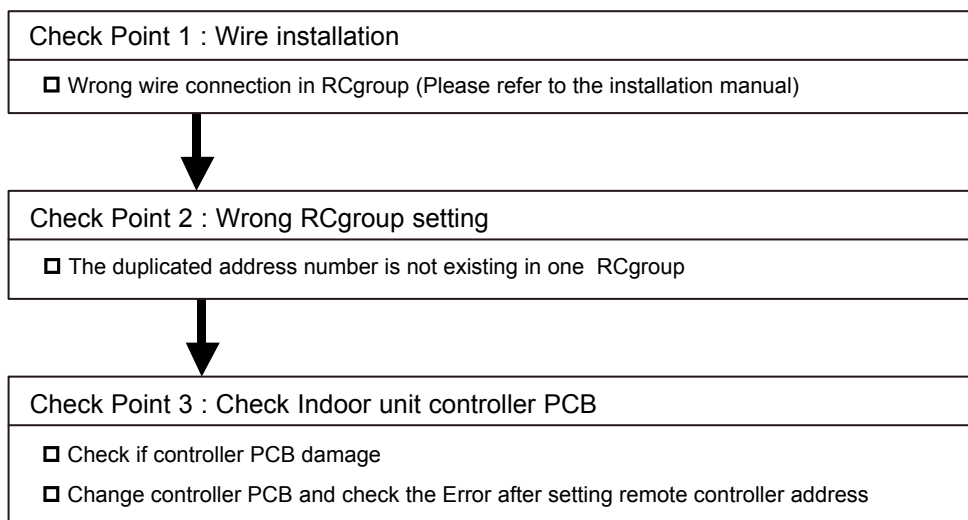

Trouble shooting 11 INDOOR UNIT Error Method: Address setting Error in Wired remote controller system	E26. 5 Indicate or Display: Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 2 times Flash, Timer LED 6 Times Flash, Filter LED Continuous Flash. Error Code : 2 6
--	---

Detective Actuators: Wired remote controller (2-Wire) Indoor unit Controller PCB circuit	Detective details: When the address number set by auto setting and manual setting are mixed in one RC group
---	---

Forecast of Cause : 1. Wrong wiring of RCgroup 2. Wrong remote address setting 3. Indoor unit controller PCB failure 4. Remote controller failure

Check Point 1 : Wire installation
<input type="checkbox"/> Wrong wire connection in RCgroup (Please refer to the installation manual)



Check Point 2 : Wrong RCgroup setting
<input type="checkbox"/> The given address number by auto setting (00) and the manual set number (Except 00) were not existing in one RCG. <input type="checkbox"/> The remote controller address setting by U.I. were not existing same address.



Check Point 3 : Check Indoor unit controller PCB
<input type="checkbox"/> Check if controller PCB damage <input type="checkbox"/> Change controller PCB and check the Error after setting remote controller address

Trouble shooting 12 E29. 1 <u>INDOOR UNIT Error Method:</u> Connection unit number error (Indoor unit in Wired remote controller system)	Indicate or Display: Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 2 times Flash, Timer LED 9 Times Flash, Filter LED Continuous Flash. Error Code : 2 9
--	--

Detective Actuators: Wired remote controller (2-Wire) Indoor unit Controller PCB circuit	Detective details: When the number of connecting indoor units are out of specified rule.
---	--

Forecast of Cause : 1. Wrong wiring/ Number of I.U, RC in RCgroup 2. Indoor unit controller PCB defective
--

Check Point 1 : Wire installation
<input type="checkbox"/> Wrong number of connecting indoor unit



Check Point 2 : Check Indoor unit controller PCB
<input type="checkbox"/> Check if controller PCB damage <input type="checkbox"/> Change controller PCB and check the Error after setting remote controller address

Trouble shooting 13 INDOOR UNIT Error Method: Connection unit number error (Remote controller)	E29. 2 Indicate or Display: Outdoor Unit : No Display Indoor Unit : No Display Error Code : 2 9
---	--

Detective Actuators: Wired remote controller (2-Wire)	Detective details: When the number of connecting remote controller are out of specified rule.
---	---


Forecast of Cause : 1. Wrong wiring / Wrong number of connecting RC in RCgroup 2. Remote controller PCB defective
--

Check Point 1 : Wire installation
<input type="checkbox"/> Wrong number of connecting remote controller



Check Point 2 : Check Indoor unit controller PCB
<input type="checkbox"/> Check if controller PCB damage <input type="checkbox"/> Change controller PCB and check the Error after setting remote controller address


Trouble shooting 15 E32. 1 <u>INDOOR UNIT Error Method:</u> Indoor unit PCB Model Information Error	<u>Indicate or Display:</u> Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 3 times Flash, Timer LED 2 Times Flash, Filter LED Continuous Flash. Error Code : 3 2
<u>Detective Actuators:</u> Indoor Unit Controller PCB Circuit	<u>Detective details:</u> 3 continuous failure of lead test of EEPROM at Power ON, or Apparent Model information error from EEPROM. Also, Error on Model information upon model information test of EEPROM, or Model information of EEPROM not possible to recover.
<u>Forecast of Cause :</u> 1. Outside cause 2. Connection failure of electric components 3. Controller PCB defective	

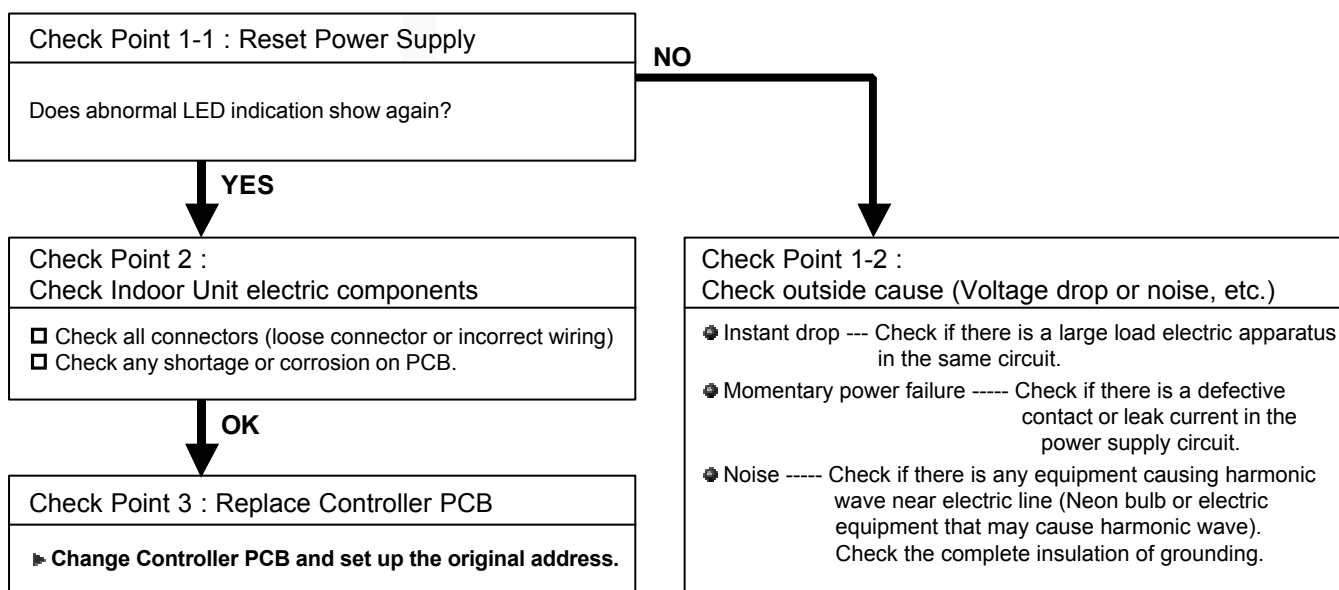


Note : EEPROM

EEPROM(Electronically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if power is turned off. It can change the contents electronically. To change the contents, it uses higher voltage than normal, and it can not change a partial contents. (Rewriting shall be done upon erasing the all contents.) There is a limit in a number of rewriting.

Trouble shooting 16 E32. 3 INDOOR UNIT Error Method: Indoor unit EEPROM Access Error	Indicate or Display: Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 3 times Flash, Timer LED 2 Times Flash, Filter LED Continuous Flash. Error Code : 3 2
Detective Actuators: Indoor Unit Controller PCB Circuit	Detective details: When 3 continuous failure occurred on lead test of EEPROM.
Forecast of Cause : 1. Outside cause 2. Defective connection of electric component 3. Controller PCB defective	

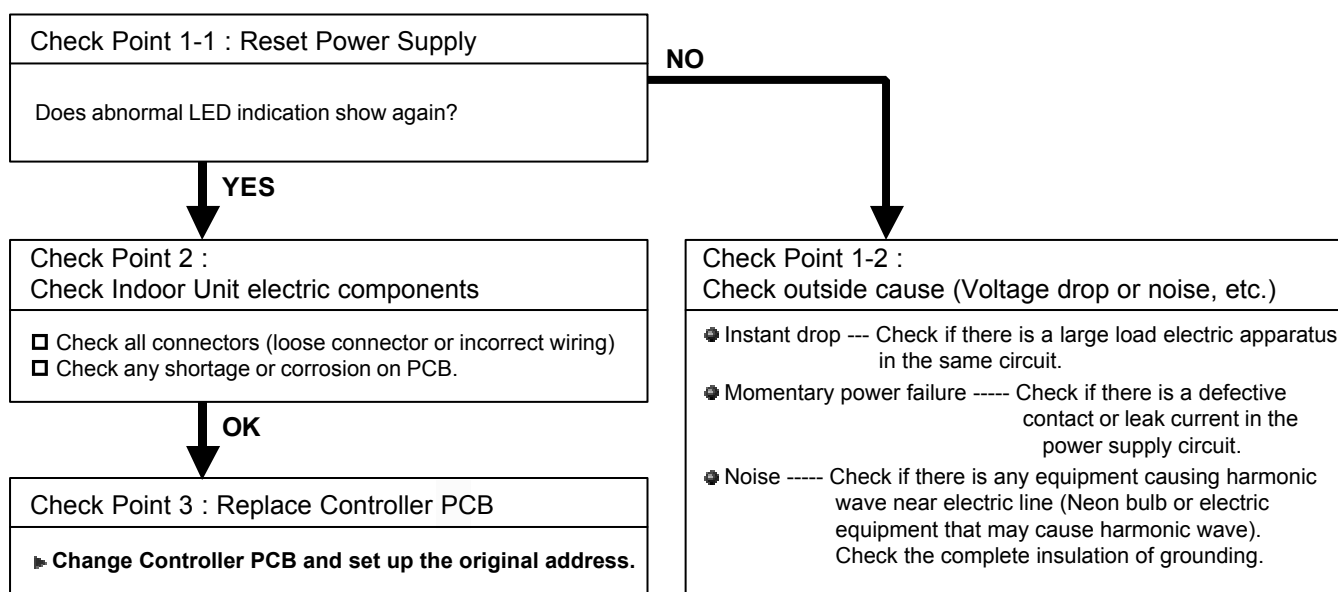

Trouble shooting 17 E32. 7 INDOOR UNIT Error Method: Indoor unit microcomputer self-check error	Indicate or Display: Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 3 times Flash, Timer LED 2 Times Flash, Filter LED Continuous Flash. Error Code : 3 2
Detective Actuators: Indoor Unit Controller PCB Circuit	Detective details: When the error is detected by the self-diagnosis of a microcomputer
Forecast of Cause : 1. Outside cause 2. Defective connection of electric component 3. Controller PCB defective	

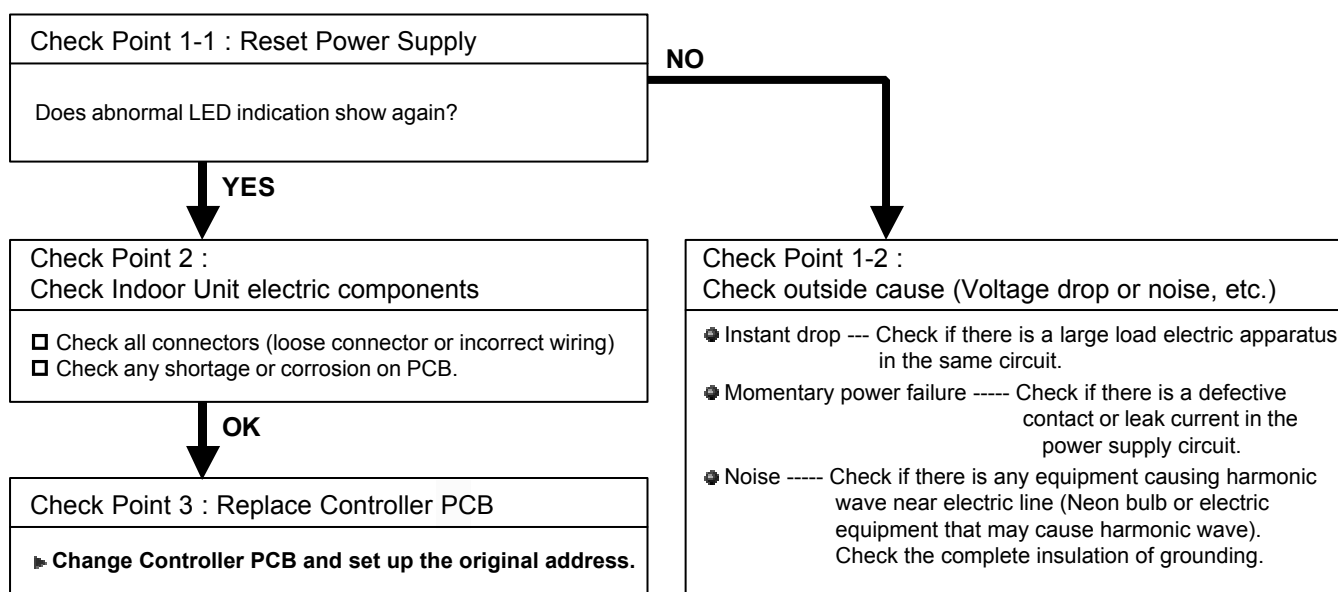

Trouble shooting 18 E.39.1 <u>INDOOR UNIT Error Method:</u> Indoor Unit power supply error for FAN motor 1 (Outdoor Air unit)	<u>Indicate or Display:</u> Outdoor Unit : E.5 U.1 Error Code : 39.1
---	---

<u>Detective Actuators:</u> Indoor Unit Controller PCB Circuit Indoor Unit filter PCB Circuit	<u>Detective details:</u> When the DC power input for Fan motor < W500 - W501 on the Filter PCB> becomes lower voltage than the specified voltage.
--	--

<u>Forecast of Cause :</u> 1. Noise momentary open, voltage drop 2. Wire connection 3. Fan motor 4. Peripheral electric devices 5. Filter PCB 6. Controller PCB

Check Point 1 : Check if any outside cause such as voltage drop or noise
<ul style="list-style-type: none"> ❏ Instant voltage drop ----- Check if there is any electric equipment with a large load within the same circuit. ❏ Momentary power failure ----- Check contact failure or leak current in power supply circuit ❏ Check if there is any equipment that causes harmonic wave near the power cable (Neon light bulb or any electronic equipment which causes harmonic wave). And check the complete insulation of grounding. <p>>>If the same symptom does not reappear after resetting the power, possibility of noise is high.</p>



Check Point 2 : Check wire connection
<ul style="list-style-type: none"> ❏ Wire lose connection / damage between the CN21on the Controller PCB and CN250 on the Filter PCB In case of Model 72, between W530 (W531) on the filter PCB and capacitor. <p><u>>>If there is abnormal on the wire, replace it</u></p>



Check Point 3 : Check rotation of Fan / wire resistance
<ul style="list-style-type: none"> ❏ Rotate the applicable fan by hand when operation is off. ❏ Disconnect the connector from the controller PCB and Check resistance value of Motor connector



Check Point 4 : Check peripheral devices, Posistor, Capacitor, Diode bridge
<ul style="list-style-type: none"> ❏ Check resistance value, short circuit, visible damage <p><u>>>If there is abnormal , replace it</u></p>



Check Point 5 : Replace Filter PCB
<ul style="list-style-type: none"> ❏ Change filter PCB



Check Point 6 : Replace Controller PCB
<ul style="list-style-type: none"> ❏ Change Controller PCB and set up the original address.

Trouble shooting 19 E.39.2 <u>INDOOR UNIT Error Method:</u> Indoor Unit power supply error for FAN motor 2 (Outdoor Air unit)	<u>Indicate or Display:</u> Outdoor Unit : E.5 U.1 Error Code : 39.2
---	---

<u>Detective Actuators:</u> Indoor Unit Controller PCB Circuit Indoor Unit filter PCB Circuit	<u>Detective details:</u> When the DC power input for Fan motor < W530 - W531 on the Filter PCB> becomes lower voltage than the specified voltage.
--	--

<u>Forecast of Cause :</u> 1. Noise momentary open, voltage drop 2. Wire connection 3. Fan motor 4. Peripheral electric devices 5. Filter PCB 6. Controller PCB

Check Point 1 : Check if any outside cause such as voltage drop or noise
<ul style="list-style-type: none"> ⚙ Instant voltage drop ----- Check if there is any electric equipment with a large load within the same circuit. ⚙ Momentary power failure ----- Check contact failure or leak current in power supply circuit ⚙ Check if there is any equipment that causes harmonic wave near the power cable (Neon light bulb or any electronic equipment which causes harmonic wave). And check the complete insulation of grounding. <p>>>If the same symptom does not reappear after resetting the power, possibility of noise is high.</p>



Check Point 2 : Check wire connection
<ul style="list-style-type: none"> ❑ Wire lose connection / damage between the CN21on the Controller PCB and CN250 on the Filter PCB In case of Model 72, between W530 (W531) on the filter PCB and capacitor. <p><u>>>If there is abnormal on the wire, replace it</u></p>



Check Point 3 : Check rotation of Fan / wire resistance
<ul style="list-style-type: none"> ❑ Rotate the applicable fan by hand when operation is off. ❑ Disconnect the connector from the controller PCB and Check resistance value of Motor connector



Check Point 4 : Check peripheral devices, Posistor, Capacitor, Diode bridge
<ul style="list-style-type: none"> ❑ Check resistance value, short circuit, visible damage <p><u>>>If there is abnormal , replace it</u></p>



Check Point 5 : Replace Filter PCB
<ul style="list-style-type: none"> ❑ Change filter PCB



Check Point 6 : Replace Controller PCB
<ul style="list-style-type: none"> ❑ Change Controller PCB and set up the original address.

Trouble shooting 20 E39. 3 <u>INDOOR UNIT Error Method:</u> Indoor Unit Power Supply Error of AC24V System	<u>Indicate or Display:</u> Outdoor Unit : E.5 U.1 Error Code : 3 9
--	--

<u>Detective Actuators:</u> Indoor Unit Power Supply PCB Circuit Indoor Unit Power Trans Indoor Unit Controller PCB	<u>Detective details:</u> When the AC voltage of the Power Trans output , Is lower than 24V.
---	--

<u>Forecast of Cause :</u> 1. Terminal Connection Abnormal 2. Power Supply Abnormal 3. Power Trans 4. Power Supply PCB 5. Controller PCB 6. Cable Connection failure
--


Check Point 1 : Check the Power Supply PCB and Controller PCB
<input type="checkbox"/> Check the connection of connection terminal between Power Supply PCB(CN24) and Controller PCB(CN114) and check if there is a disconnection or short of the cable.



Check Point 2 : Check the connection of terminal
<input type="checkbox"/> After turning off the power, check & correct of followings. >>Check the connection of terminal between Power Trans and Power Supply PCB(CN113), and Check if there is a disconnection or short of the cable.



Check Point 3 : Check the Power Trans and Power Supply PCB
<input type="checkbox"/> Check terminal voltage of Power Trans and Power Supply PCB connector CN113 (AC24V IN). If AC 0V, Power Trans is failure >> <u>Replace Power Trans</u> If AC24V, To the Check Point 4.



Check Point 4 : Replace the Power Supply PCB
► Replace Power Supply PCB.



Check Point 5 : Replace the Controller PCB
► Replace Controller PCB and set up the original address.

Trouble shooting 21 E3A. 1 INDOOR UNIT Error Method: Indoor unit communication circuit (WRC) microcomputers communication Error	Indicate or Display: Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 3 times Flash, Timer LED 10 Times Flash, Filter LED Continuous Flash. Error Code : 3 A
---	---

Detective Actuators: Wired remote controller (2-Wire) Indoor unit Controller PCB circuit	Detective details: When the indoor unit(s) detects the configuration of RCG abnormal or the indoor unit detects lack of primary -remote controller.
---	--

Forecast of Cause : 1. Terminal connection abnormal 2. Wired remote controller failure 3. Indoor unit controller PCB defective

Check Point 1 : Check the connection of terminal
After turning off the power supply, check & correct the followings <input type="checkbox"/> Indoor unit - Check the connection of terminal between remote control and indoor unit, or between Indoor units and check if there is a disconnection or short of the cable.



Check Point 2 , 3: Check Indoor unit controller PCB
<input type="checkbox"/> Check terminal voltage of controller PCB connector CNC01 (Power supply for remote) If DC12V, Remote control failure (Controller PCB is OK) >>> Replace Remote controller If DC0V, Controller PCB failure (Remote is OK) >>> Replace Controller PCB In case of re-installation is done due to removed connector or incorrect wiring, turn on the power again.

Trouble shooting 27 E51. 2 <u>INDOOR UNIT Error Method:</u> Indoor Unit Fan Motor 1 rotation speed Error	<u>Indicate or Display:</u> Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 5 times Flash, Timer LED 1 Times Flash, Filter LED Continuous Flash. Error Code : 5 1
--	---

<u>Detective Actuators:</u> Indoor Unit Controller PCB Circuit Indoor Fan Motor	<u>Detective details:</u> When the FAN motor feed back rotation value which is detecting on the controller PCB becomes 0 and lasts for more than 1 minute at motor operation condition. Or, when the feed back rotation value continues at 1/ 3 of target value for more than 1 minute.
--	--

<u>Forecast of Cause :</u>	1. Fan rotation failure 2. Fan motor winding open 3. Motor protection by ambient temp. increase 4. Capacitor failure 5. Controller PCB failure
-----------------------------------	--

Check Point 1 : Check rotation of Fan
<input type="checkbox"/> Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor) <u>>>If Fan or Bearing is abnormal, replace it.</u>




Check Point 2 : Check Motor winding / Internal PCB circuit
<input type="checkbox"/> Check Indoor Fan motor (Refer to the PARTS INFORMATION 13,14) <u>>>If Fan motor is abnormal, replace it.</u>



Check Point 3 : Check ambient temp. around motor
<input type="checkbox"/> Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat) <u>>>Upon the temperature coming down, restart operation.</u>



Check Point 4 : Check Motor Capacitor (*)
<input type="checkbox"/> Check continuity of motor capacitor <u>>>If it is shorted, replace the capacitor.</u>

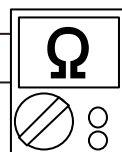


* Applicable indoor unit:
- ARXA, ARXB, ARXC type



Check Point 5 : Replace Controller PCB
<input type="checkbox"/> Change Controller PCB and set up the original address.

Trouble shooting 28 INDOOR UNIT Error Method: Coil 1 (2)* Expansion valve Error	E52. 1 (E52. 2)* Indicate or Display: Outdoor Unit : E.5U.1 Indoor Unit : Operation LED 5 times Flash, Timer LED 2 Times Flash, Filter LED Continuous Flash. Error Code : 5 2
Detective Actuators: Indoor unit controller PCB	Detective details: When the EEV1 (2)* drive circuit is open circuit
Forecast of Cause : 1. EEV1 coil lose connection 2. EEV1 (2)* wire(s) cut or pinched 3. Defective EEV1 (2)* coil 4. Controller PCB (DC 12V) output abnormal 5. Noise momentary open, voltage drop	

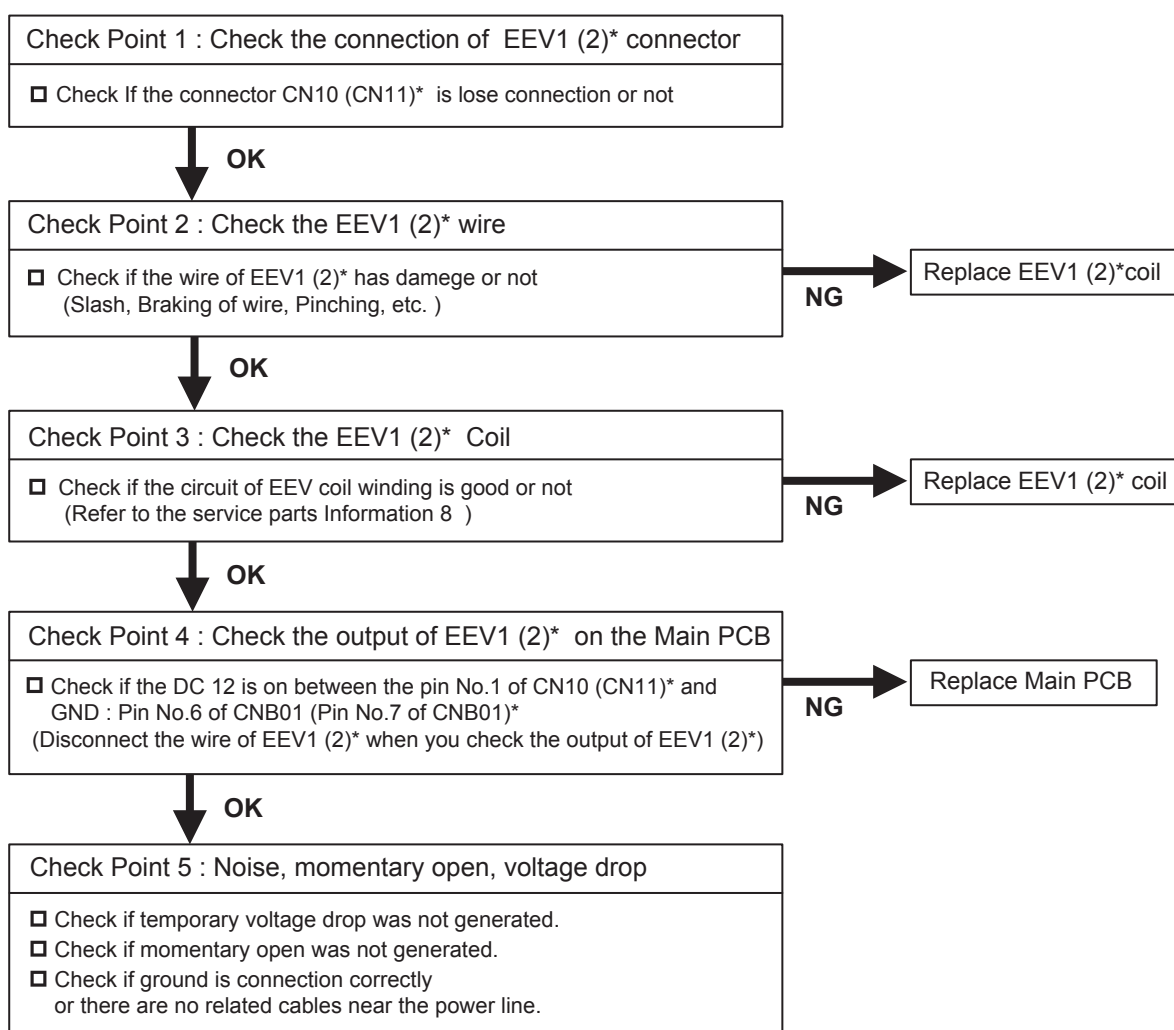

Trouble shooting 29 INDOOR UNIT Error Method: Indoor unit Drain pump Error	E53. 1 Indicate or Display: Outdoor Unit : E.5 U.1 Indoor Unit : Operation LED 5 times Flash, Timer LED 3 Times Flash, Filter LED Continuous Flash. Error Code : 5 3
---	---

Detective Actuators: Indoor Unit Controller PCB Circuit Float Switch	Detective details: When Float switch is ON for more than 3 minutes.
---	---

Forecast of Cause : <div style="display: flex; justify-content: space-between; padding: 0 10px;"> <div>1. Drain Installation</div> <div>2. Drain pipe line blockage</div> <div>3. Float switch defective</div> </div> <div style="display: flex; justify-content: space-between; padding: 0 10px;"> <div>4. Shorted connector/wire</div> <div>5. Controller PCB defective / Drain pump defective</div> </div>
--

Check Point 1 : Check Drain pipe installation

- ❑ Check Drain pipe installation (Refer to the installaion manual)
 The Height limit for Drain pump, The angle of drain pipe, The angle of indoor unit




Check Point 2 : Check Drain pipe blockage

- ❑ Check Drain pipe line blockage
 The drain pump inlet and outlet, The connecting pipe, The drain pipe outlet



Check Point 3, 4 : Check Float Switch operation, connecting wire shorted.

- ❑ Check operation of float switch.
 Remove Float switch and check ON/OFF switching operationby using a meter.
>>If Float switch is defective, replace it.

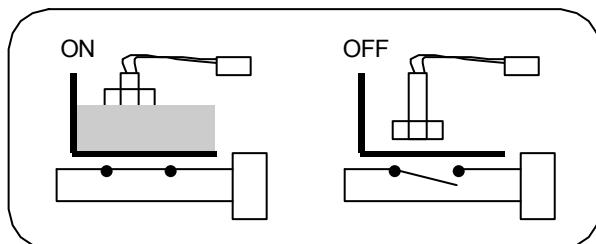

Check Point 5 : Check controller PCB defective / Drain pump defective

- ❑ Measure power supply (AC198 - 264V) for the drain pump on the Power supply PCB (CN106) at the Float SW ON states.
>>If No voltage on the connector, replace the power supply PCB
>>If AC198- 264V on the connector, replace the Drain pump

Trouble shooting 30 E.59.2 INDOOR UNIT Error Method: Indoor Unit Fan Motor 2 rotation speed Error	Indicate or Display: Outdoor Unit : E.5 U.1 Error Code : 5 9, 5 9. 2
---	---

Detective Actuators: Indoor Unit Controller PCB Circuit Indoor Fan Motor	Detective details: When the FAN motor feed back rotation value which is detecting on the controller PCB becomes 0 and lasts for more than 1 minute at motor operation condition. Or, when the feed back rotation value continues at 1/ 3 of target value for more than 1 minute.
---	---

Forecast of Cause : 1. Fan rotation failure 2. Fan motor winding open 3. Motor protection by ambient temp. increase 4. Capacitor failure 5. Controller PCB failure
--

Check Point 1 : Check rotation of Fan
<input type="checkbox"/> Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor) <u>>>If Fan or Bearing is abnormal, replace it.</u>




Check Point 2 : Check Motor winding / Internal PCB circuit
<input type="checkbox"/> Check Indoor Fan motor (Refer to the PARTS INFORMATION 14) <u>>>If Fan motor is abnormal, replace it.</u>



Check Point 3 : Check ambient temp. around motor
<input type="checkbox"/> Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat) <u>>>Upon the temperature coming down, restart operation..</u>



Check Point 4 : Check Motor Capacitor	
<input type="checkbox"/> Check continuity of motor capacitor <u>>>If it is shorted, replace the capacitor.</u>	




Check Point 5 : Replace Controller PCB
<input type="checkbox"/> Change Controller PCB and set up the original address.

Trouble shooting 32 E. 28. 1 OUTDOOR UNIT Error Method: Auto Address Setting Error	Indicate or Display: Outdoor Unit : E. 28. 1 Indoor Unit : No Display Error Code : 28
--	--

Detective Actuators: Outdoor unit Main PCB	Detective details: • When none of the connected indoor units answers during auto address And when abnormal answer signal is input.
--	---

Forecast of Cause :	1. Indoor unit power supply defective 2 Indoor unit overconnected 3.Communication line incorrect connection 4. Noise, momentary open
----------------------------	---

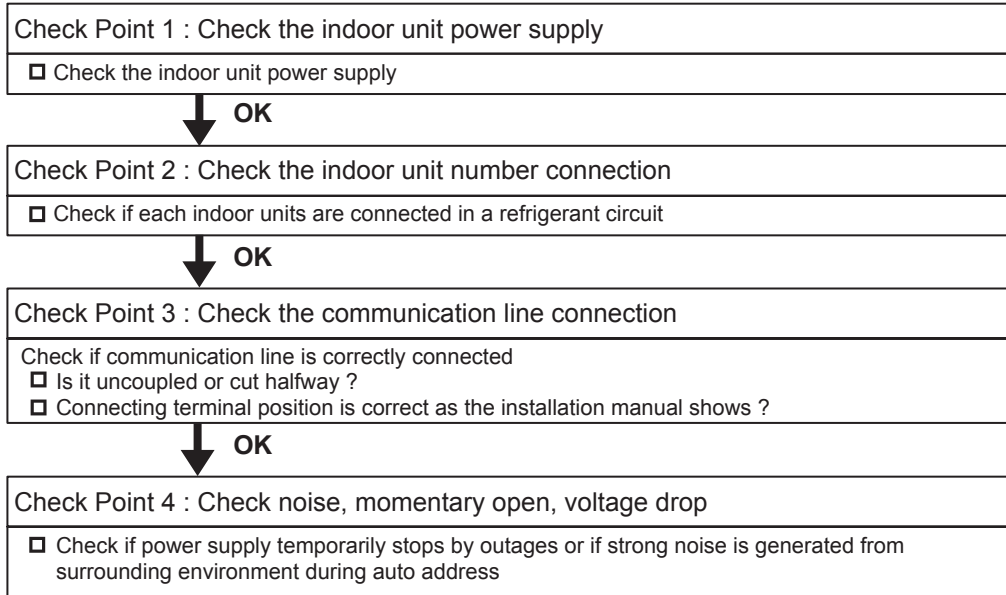

Trouble shooting 33 E. 28. 4 OUTDOOR UNIT Error Method: Signal Amplifier Auto Address Error	Indicate or Display: Outdoor Unit : E. 28. 4 Indoor Unit : No Display Error Code : 28
---	--

Detective Actuators: Outdoor unit Main PCB	Detective details: ▪ When abnormal answer signal is input during signal amplifier auto address
--	--

Forecast of Cause :	1. Signal amplifier power supply defective 2. Signal amplifier overconnected 3. Signal amplifier auto address wrong setting 4. Noise, momentary open.
----------------------------	--

Check Point 1 : Check signal amplifier unit power supply
<input type="checkbox"/> Check signal amplifier unit power supply



Check Point 2 : Check the signal amplifier number connection
<input type="checkbox"/> Check if more than 8 signal amplifiers are connected in a network



Check Point 3 : Check the operation of signal amplifier auto address setting
<input type="checkbox"/> Check if signal amplifier auto address is set at the same time from multiple outdoor units (master unit)




Check Point 4 : Check noise, momentary open, voltage drop
<input type="checkbox"/> Check if power supply temporarily stops by outages or if strong noise is generated from surrounding environment during signal amplifier auto address

Trouble shooting 34 E61. 5 <u>OUTDOOR UNIT Error Method:</u> Outdoor Unit Reverse Phase, Missing Phase Wire Error	<u>Indicate or Display:</u> Outdoor Unit : E. 6 1. 5 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 9 U / 6 1
---	--

<u>Detective Actuators:</u> Outdoor unit Main PCB	<u>Detective details:</u> <ul style="list-style-type: none"> ▪ Reverse phase prevention circuit detected reversed phase input or input was not normal at the time of power ON. ▪ Reverse phase prevention circuit detected open-phase after power ON.
---	--


<u>Forecast of Cause :</u>	1. Noise, momentary open, voltage drop 2. Power supply defective 3. Filter PCB (Main) defective 4. Main PCB defective
-----------------------------------	--

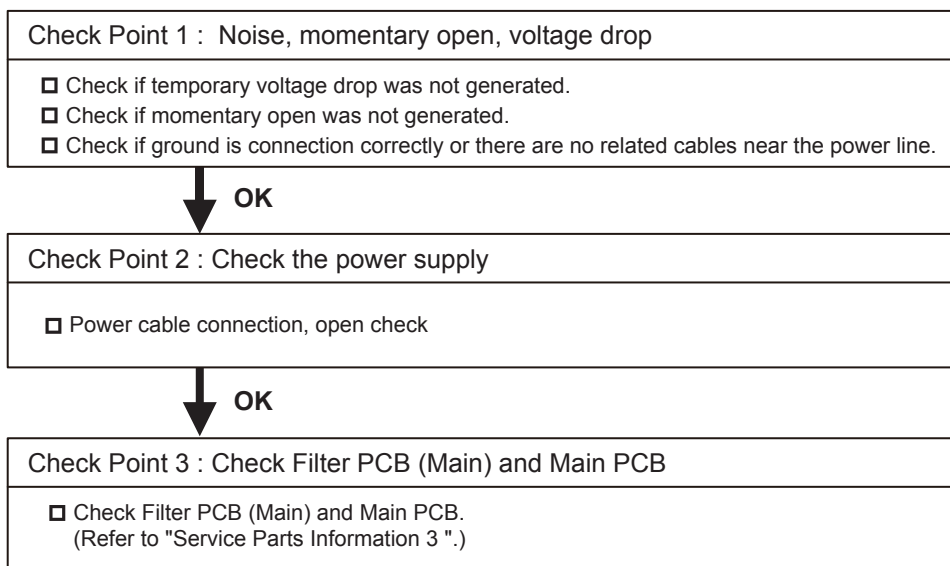

Trouble shooting 35 E. 62. 3 OUTDOOR UNIT Error Method: Outdoor Unit EEPROM Access Error	Indicate or Display: Outdoor Unit : E. 62. 3 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 62
--	---

<u>Detective Actuators:</u> Outdoor unit Main PCB	<u>Detective details:</u> •Access to EEPROM failed due to some cause after outdoor unit started.
---	--


<u>Forecast of Cause :</u> 1. Noise, momentary open, voltage drop 2. Main PCB defective

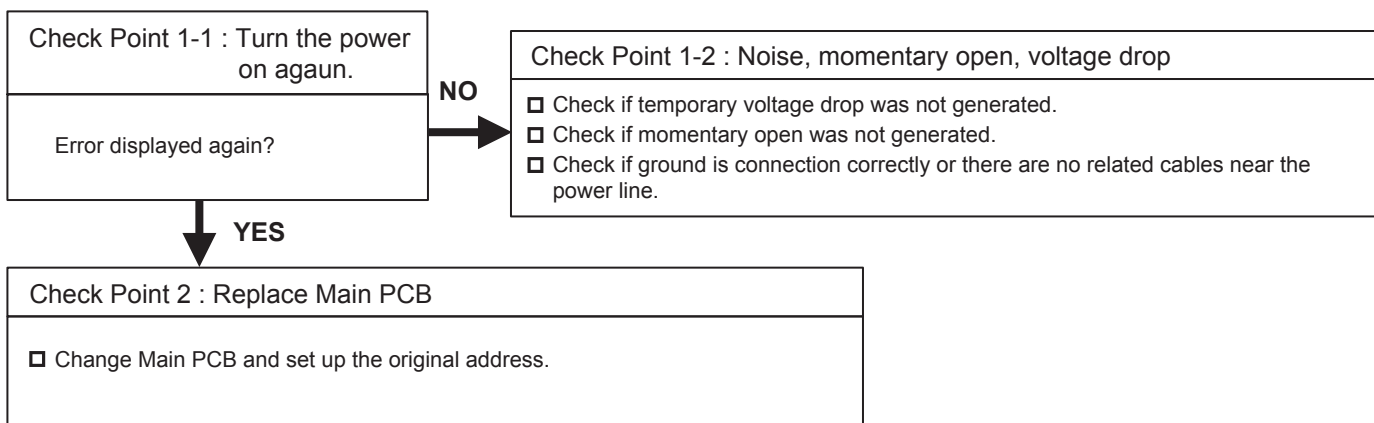

Trouble shooting 36 E. 62. 6 OUTDOOR UNIT Error Method: Inverter Communication Error	Indicate or Display: Outdoor Unit : E. 62. 6 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 62
--	---

Detective Actuators: Outdoor unit Main PCB Outdoor unit Inverter PCB	Detective details: •Communication not received from Inverter PCB for 10 seconds or more
---	---


Forecast of Cause : 1. Noise 2. Main to Inverter PCBs wiring connection defective 3. Main PCB defective 4. Inverter PCB defective

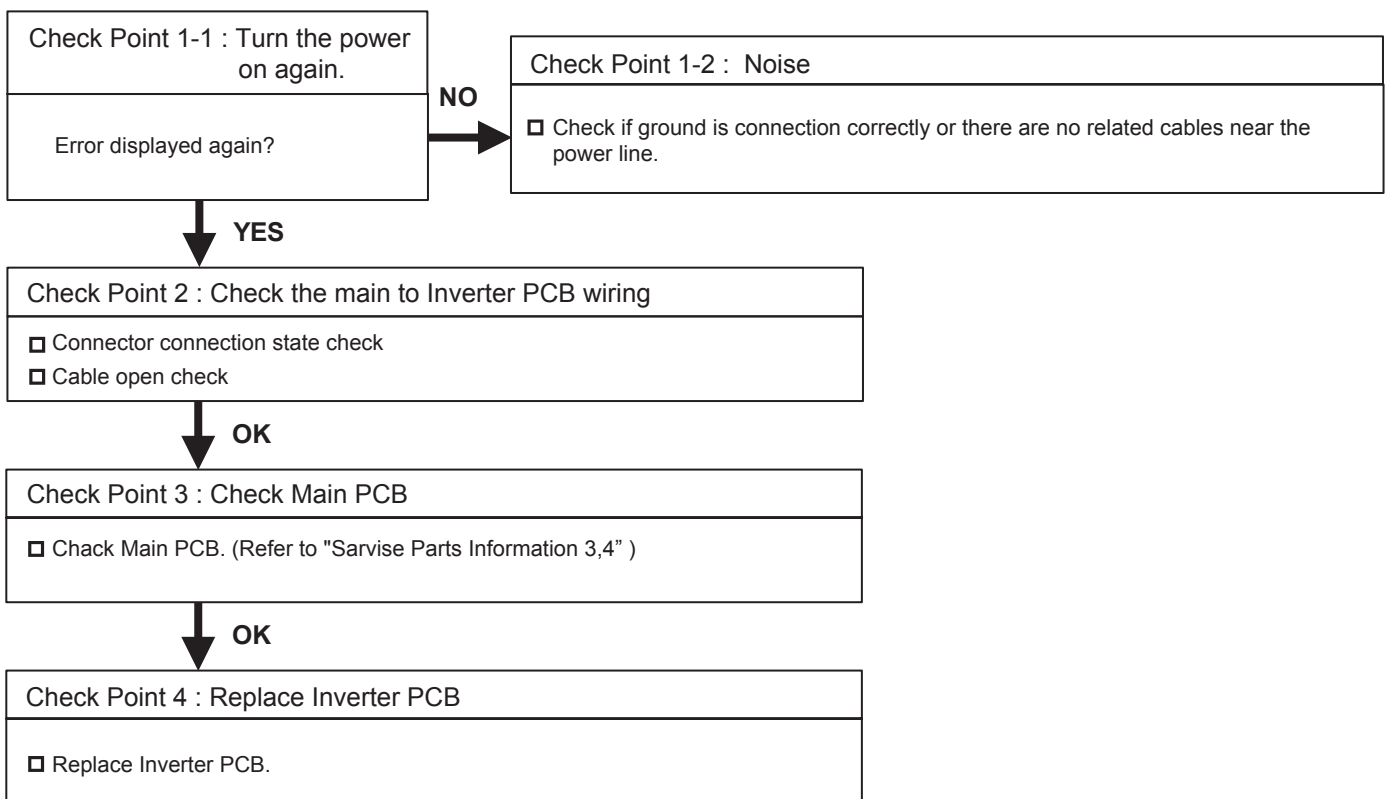

Trouble shooting 37 E. 62. 8 OUTDOOR UNIT Error Method: EEPROM Data corrupted Error	Indicate or Display: Outdoor Unit : E. 62. 8 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 62
---	---

<u>Detective Actuators:</u> Outdoor unit Main PCB	<u>Detective details:</u> <ul style="list-style-type: none"> ▪ Set contents sum value memorized in EEPROM and sum value calculated based on the set contents read from EEPROM do not match * Regarding the sum value, only the contents set in the push button SW setting mode (F2) shall be the objective.
---	---


<u>Forecast of Cause :</u> 1. Noise, momentary open, voltage drop 2. Main PCB defective
--

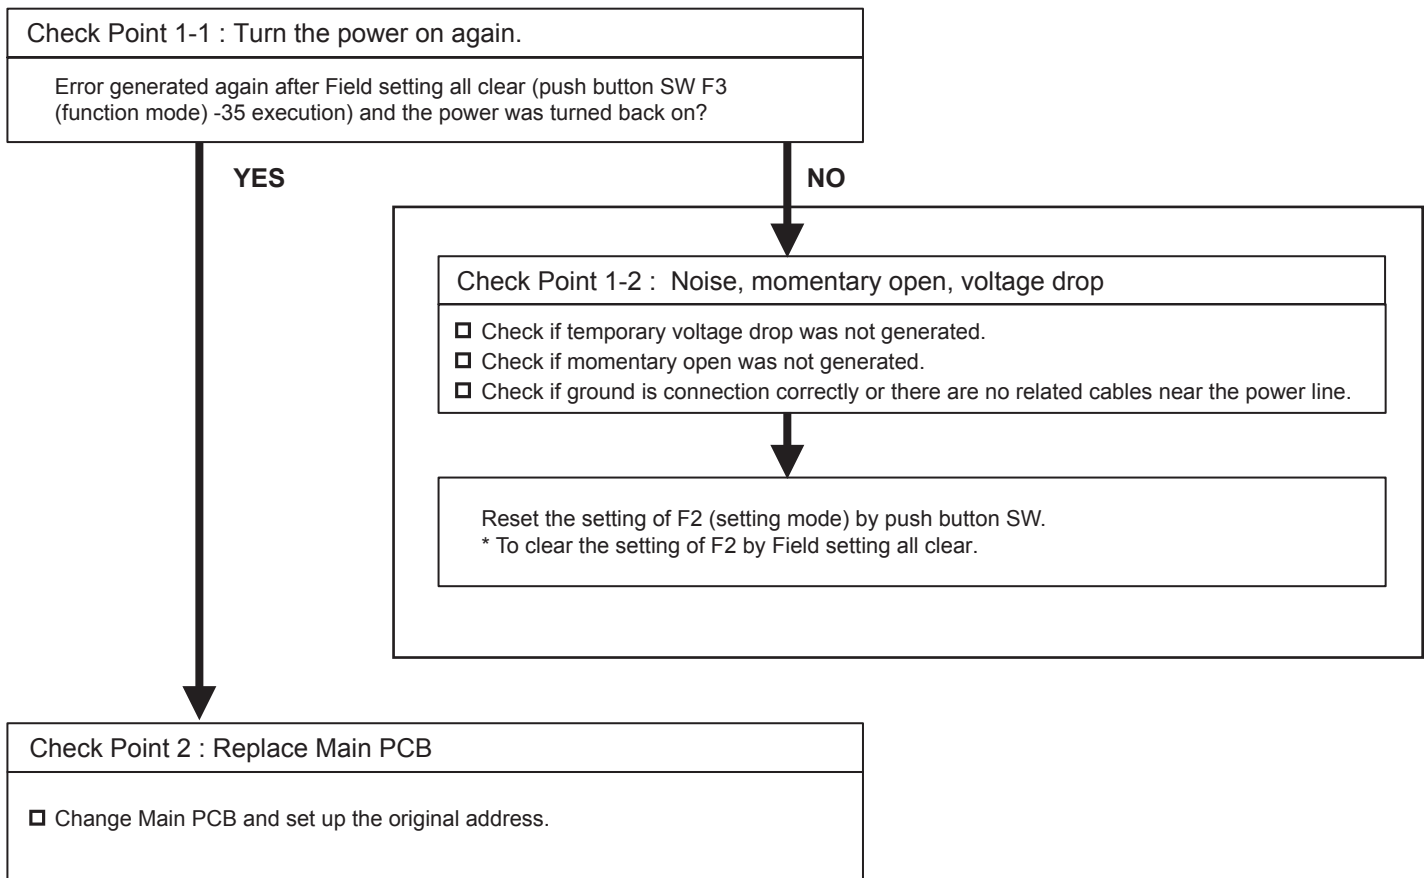

Trouble shooting 38 E. 63.1 OUTDOOR UNIT Error Method: Inverter Error	Indicate or Display: Outdoor Unit : E. 63. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 63
---	---

Detective Actuators: Inverter PCB Filter PCB	Detective details: •Error information received from Inverter PCB
---	--


Forecast of Cause :	1. Noise, momentary open, voltage drop. 2. Power supply to Filter PCB (INV) to Inverter PCB wiring disconnection, open 3. Filter PCB (INV) defective 4. Inverter PCB defective
----------------------------	---

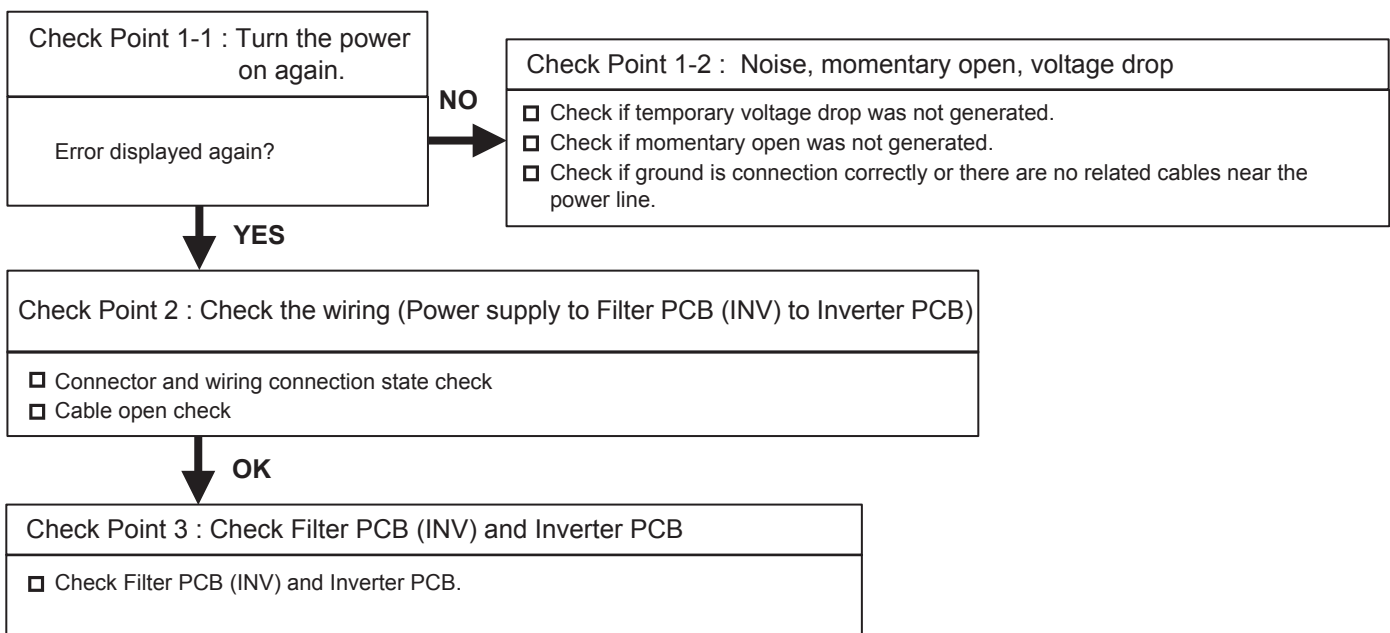

Trouble shooting 39 E. 67.2 <u>OUTDOOR UNIT Error Method:</u> Inverter PCB short interruption detection	<u>Indicate or Display:</u> Outdoor Unit : E. 67. 2 Indoor Unit : No Display Error Code : 67
---	---

<u>Detective Actuators:</u> Inverter PCB	<u>Detective details:</u> <ul style="list-style-type: none"> • "Momentary power failure" received from Inverter PCB
--	--


<u>Forecast of Cause :</u>	1. Noise, momentary power failure, voltage drop 2. Power supply to Filter PCB (INV) to Inverter PCB wiring disconnection, open 3. Main PCB defective 4. Inverter PCB defective
-----------------------------------	--

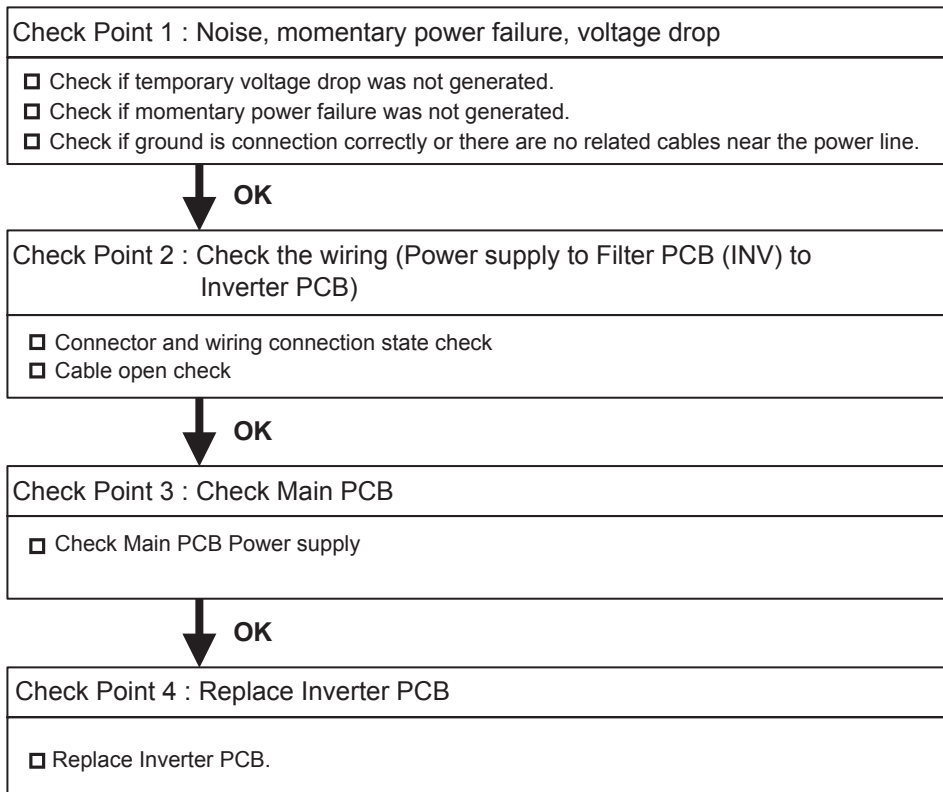

Trouble shooting 40 E68. 2 OUTDOOR UNIT Error Method: Rush Current Limiting Resistor Temp Rise Protection	Indicate or Display: Outdoor Unit : E. 6 8. 2 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 9 U / 6 8
---	---

<u>Detective Actuators:</u> Inverter PCB	<u>Detective details:</u> ▪ "Protection stop by "Rush current limiting resistor temperature rise detection" of inverter PCB" was generated 2 times.
--	---

<u>Forecast of Cause :</u>	1. Magnetic relay (for INV) coil side wiring disconnection, open 2. Power supply to Filter PCB (INV) to Inverter PCB wiring disconnection, open 3. Magnetic relay activation circuit defective 4. Main PCB to Inverter PCB wiring disconnection, open 5. Main PCB output AC198 - 242V on CN130 defective Main PCB defective (output AC198 - 242V on CN130 for Magnetic relay (INV) defective)
-----------------------------------	--

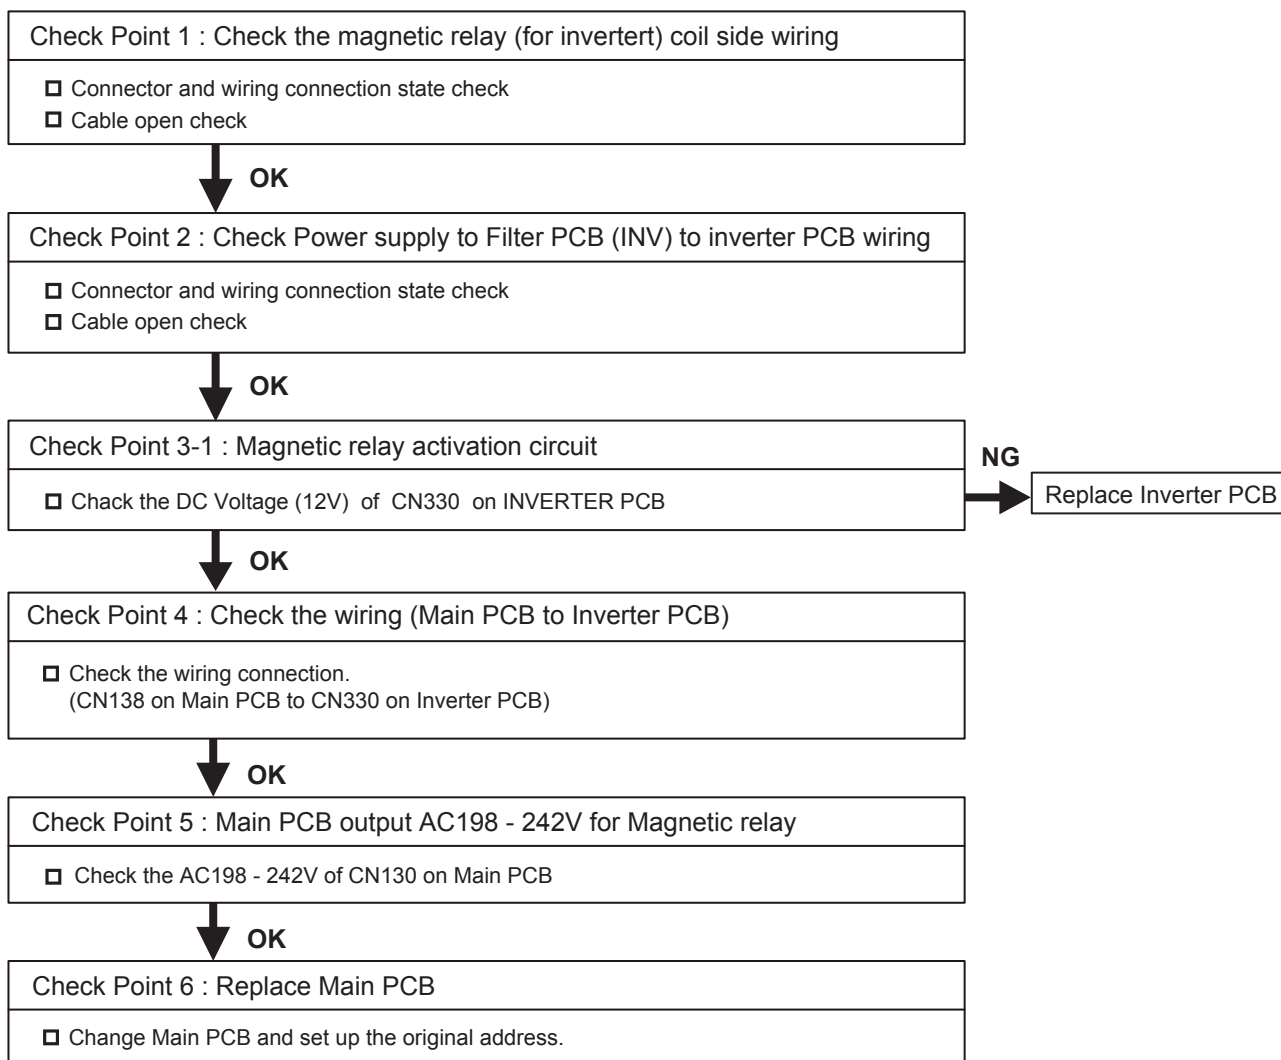


After fixing the problem and for canceling the Error, Error Reset (F3-40) will be required after power reset
Caution By changing of DIP SW 4-2 to ON, the Back-up operation can start when the active outdoor unit exists on the multi outdoor unit connection. (Stand alone outdoor unit is impossible) The following conditions will be concerned in use of back-up operation. (Please do not use the system with back-up operation for long time.) - The operating compressor life time becomes shorter. - The operating performance may drop due to the limited active compressor(s). - The compressor may stop frequently by protection controlling. *In order to keep the operating capacity, the release of the Low noise mode setting might be necessary.

Trouble shooting 41 E. 69.1 OUTDOOR UNIT Error Method: Outdoor Unit transmission PCB Parallel Communication Error	Indicate or Display: Outdoor Unit : E. 69. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 69
---	---

Detective Actuators: Outdoor unit Main PCB Communication PCB	Detective details: •Parallel communication (communication between main CPU and communication PCB) failed 5 times.
---	--

Forecast of Cause : 1. Noise 2. Communication PCB connection defective 3. Communication PCB defective 4. Main PCB defective

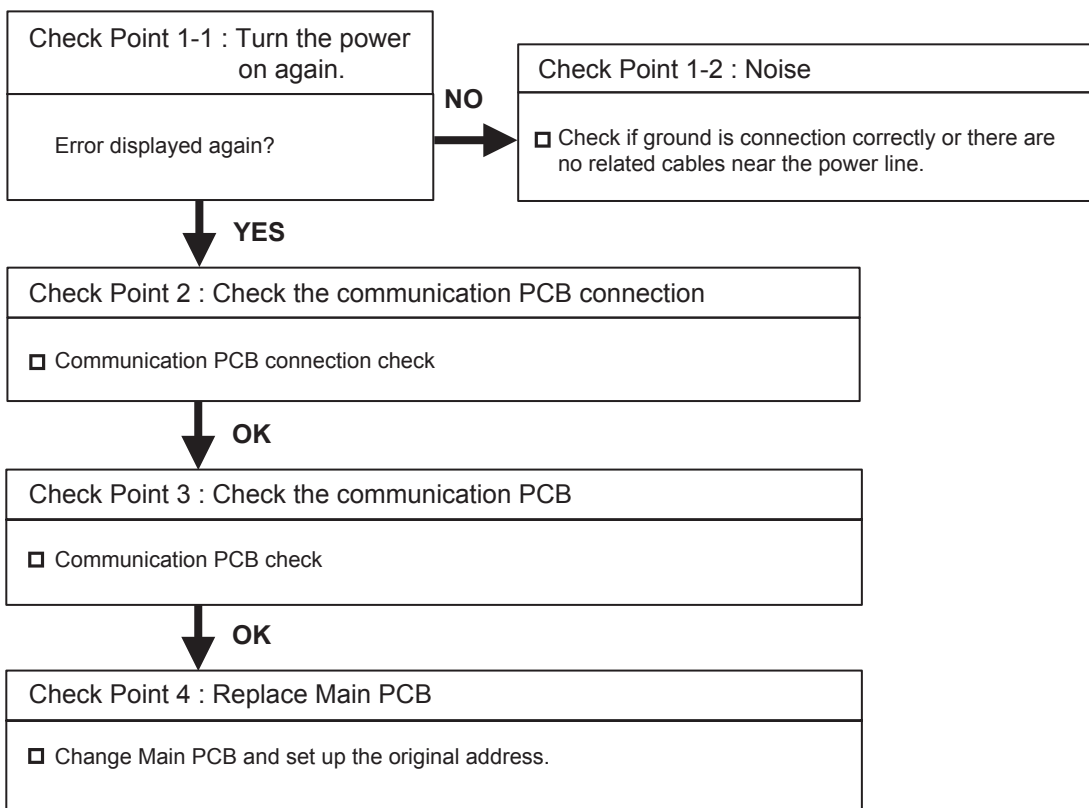

Trouble shooting 42 E. 71.1 OUTDOOR UNIT Error Method: Discharge Temp Sensor Error<TH1>	Indicate or Display: Outdoor Unit : E. 71. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 71
---	---

Detective Actuators: Discharge temperature thermistor 1	Detective details: <ul style="list-style-type: none"> • Discharge temperature thermistor 1 short detected • Discharge thermistor 1 open detected after compressor 1 operated continuously for 5 minutes or more
---	---


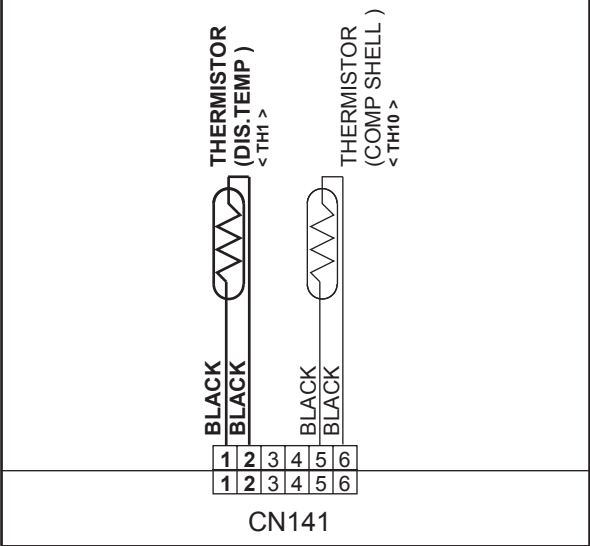
Forecast of Cause :	1. Connector connection defective, open 2. Thermistor defective 3. Main PCB defective
----------------------------	---

Check Point 1 : Check the connector connection and cable open
<input type="checkbox"/> Connector connection state check <input type="checkbox"/> Cable open check



Check Point 2 : Check the thermistor
<input type="checkbox"/> Thermistor characteristics check (Disconnect the thermistor from the PCB and check.) * For the thermistor characteristics, refer to the "Service Parts Information 17".



Check Point 3 : Check voltage of Main PCB (DC5.0V)	<div style="border: 1px solid black; padding: 5px; text-align: center;"> DC  </div>
<input type="checkbox"/> Main PCB (CN141:1-2) voltage value = 5V <u>Remove the thermistor from Main PCB, check the voltage.</u>	
<div style="border: 1px solid black; padding: 10px; text-align: center;">  </div>	
Discharge temperature sensor 1 (CN141:1-2) ► If the voltage does not appear, replace Main PCB and set up original address.	

Trouble shooting 43 E. 72.1 OUTDOOR UNIT Error Method: Compressor Temp Sensor Error <TH10>	Indicate or Display: Outdoor Unit : E. 72. 1 Filter LED Continuous Flash. Error Code : 72
--	--

Detective Actuators: Compressor temperature thermistor 1	Detective details: <ul style="list-style-type: none"> Compressor temperature thermistor 1 short detected Compressor thermistor 1 open detected after compressor 1 operated continuously for 5 minutes or more
--	---


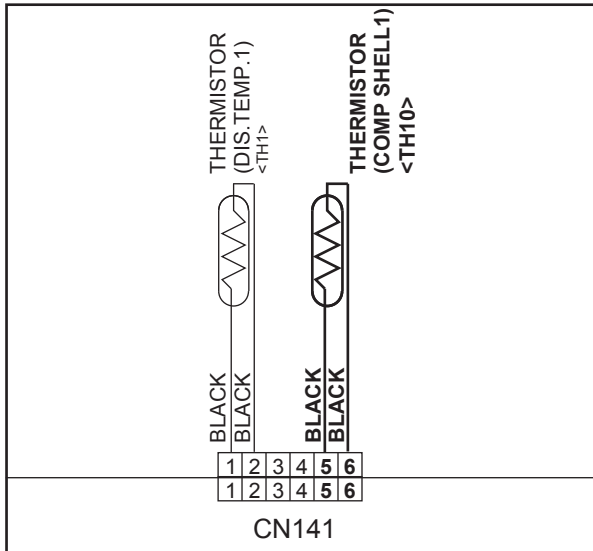
Forecast of Cause :	1. Connector connection defective, open 2. Thermistor defective 3. Main PCB defective
----------------------------	---

Check Point 1 : Check the connector connection and cable open
<input type="checkbox"/> Connector connection state check <input type="checkbox"/> Cable open check



Check Point 2 : Check the thermistor
<input type="checkbox"/> Thermistor characteristics check (Disconnect the thermistor from the PCB and check.) * For the thermistor characteristics, refer to the "Service Parts Information 17".



Check Point 3 : Check voltage of Main PCB (DC5.0V)	<div style="border: 1px solid black; padding: 5px; text-align: center;"> DC  </div>
<input type="checkbox"/> Main PCB (CN141:5-6) voltage value = 5V <u>Remove the thermistor from Main PCB, check the voltage.</u>	
<div style="border: 1px solid black; padding: 10px; text-align: center;">  <p>CN141</p> </div>	
Compressor temperature sensor 1 (CN141:5-6)	
► If the voltage does not appear, replace Main PCB and set up original address.	

Trouble shooting 44 E. 73.3 OUTDOOR UNIT Error Method: Heat Ex. Liquid pipe Temp. Sensor Error<TH5>	Indicate or Display: Outdoor Unit : E. 73. 3 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 73
---	---

Detective Actuators: Heat exchanger liquid temperature thermistor	Detective details: • Heat exchanger liquid temperature thermistor short or open detected
---	--


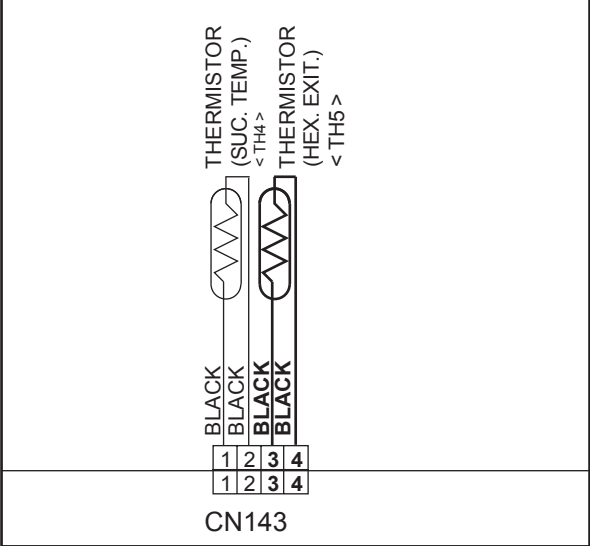
Forecast of Cause :	1. Connector connection defective, open 2. Thermistor defective 3. Main PCB defective
----------------------------	---

Check Point 1 : Check the connector connection and cable open <input type="checkbox"/> Connector connection state check <input type="checkbox"/> Cable open check



Check Point 2 : Check the thermistor <input type="checkbox"/> Thermistor characteristics check (Disconnect the thermistor from the PCB and check.) * For the thermistor characteristics, refer to the "Service Parts Information 17".



Check Point 3 : Check voltage of Main PCB (DC5.0V)	<div style="border: 1px solid black; padding: 5px; text-align: center;"> DC  </div>
<input type="checkbox"/> Main PCB (CN143:3-4) voltage value = 5V <u>Remove the thermistor from Main PCB, check the voltage.</u>	
<div style="border: 1px solid black; padding: 10px; text-align: center;">  </div>	
Heat exchanger liquid temperature sensor (CN143:3-4) ► <u>If the voltage does not appear, replace Main PCB and set up original address.</u>	

Trouble shooting 45 E. 74.1 <u>OUTDOOR UNIT Error Method:</u> Outdoor Temp Sensor Error<TH3>	<u>Indicate or Display:</u> Outdoor Unit : E. 74. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 74
--	--

<u>Detective Actuators:</u> Outdoor temperature thermistor	<u>Detective details:</u> • Outdoor temperature thermistor short or open detected
--	---


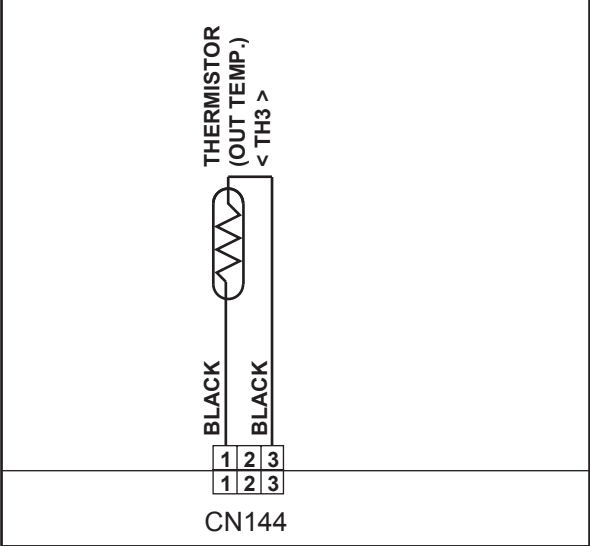
<u>Forecast of Cause :</u>	1. Connector connection defective, open 2. Thermistor defective 3. Main PCB defective
-----------------------------------	---

Check Point 1 : Check the connector connection and cable open
<input type="checkbox"/> Connector connection state check <input type="checkbox"/> Cable open check



Check Point 2: Check the thermistor
<input type="checkbox"/> Thermistor characteristics check (Disconnect the thermistor from the PCB and check.) * For the thermistor characteristics, refer to the "Service Parts Information 17".



Check Point 3 : Check voltage of Main PCB (DC5.0V)	<div style="border: 1px solid black; padding: 5px; text-align: center;"> DC  </div>
<input type="checkbox"/> Main PCB (CN144:1-3) voltage value = 5V <u>Remove the thermistor from Main PCB, check the voltage.</u>	
<div style="border: 1px solid black; padding: 10px; text-align: center;">  </div>	
Outdoor temperature sensor (CN144:1-3)	
► <u>If the voltage does not appear, replace Main PCB and set up original address.</u>	

Trouble shooting 46 E. 75.1 OUTDOOR UNIT Error Method: Suction Gas Temp Sensor Error <TH4>	Indicate or Display: Outdoor Unit : E. 75. 1 Filter LED Continuous Flash. Error Code : 75
--	--

Detective Actuators: Suction gas temperature thermistor	Detective details: • Suction gas temperature thermistor short or open detected
---	--


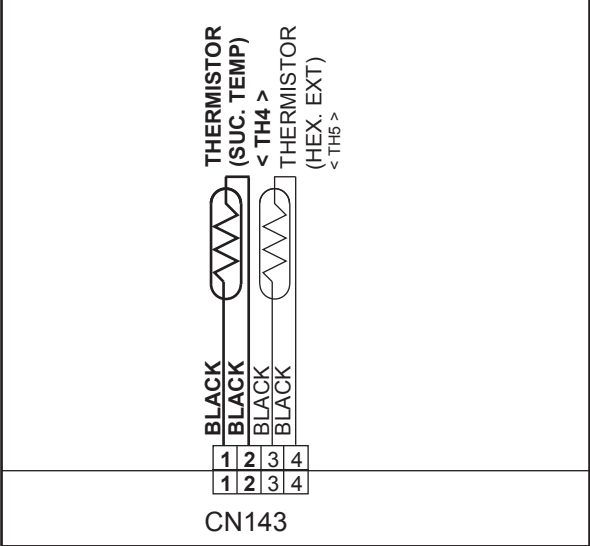
Forecast of Cause :	1. Connector connection defective, open 2. Thermistor defective 3. Main PCB defective
----------------------------	---

Check Point 1 : Check the connector connection and cable open
<input type="checkbox"/> Connector connection state check <input type="checkbox"/> Cable open check



Check Point 2 : Check the thermistor
<input type="checkbox"/> Thermistor characteristics check (Disconnect the thermistor from the PCB and check.) * For the thermistor characteristics, refer to the "Service Parts Information 17".



Check Point 3 : Check voltage of Main PCB (DC5.0V)	<div style="border: 1px solid black; padding: 5px; text-align: center;"> DC  </div>
<input type="checkbox"/> Main PCB (CN143:1-2) voltage value = 5V <u>Remove the thermistor from Main PCB, check the voltage.</u>	
<div style="border: 1px solid black; padding: 10px; text-align: center;">  <p>CN143</p> </div> <p>Suction gas temperature sensor (CN143:1-2)</p> <p>► <u>If the voltage does not appear, replace Main PCB and set up original address.</u></p>	

<p>Trouble shooting 47 E. 77.1</p> <p><u>OUTDOOR UNIT Error Method:</u></p> <p>Heat Sink Temp Sensor Error</p> <p><IPM BUILT IN></p>	<p><u>Indicate or Display:</u></p> <p>Outdoor Unit : E. 77. 1</p> <p>Filter LED Continuous Flash.</p> <p>Error Code : 77</p>
<p><u>Detective Actuators:</u></p> <p>Inverter PCB</p>	<p><u>Detective details:</u></p> <ul style="list-style-type: none"> Heat sink temperature thermistor (Inside IPM) open/short circuit detected
<p><u>Forecast of Cause :</u> 1. Inverter PCB failure</p> <p>▶ <u>If this error is displayed, replace Inverter PCB</u></p>	

<p><u>Detective Actuators:</u></p> <p>Liquid pipe temperature thermistor</p>	<p><u>Detective details:</u></p> <ul style="list-style-type: none"> SC.HE.Liquid Outlet temperature thermistor 2 short or open detected
---	---


<p><u>Forecast of Cause :</u></p> <ol style="list-style-type: none"> 1. Connector connection defective, open 2. Thermistor defective 3. Main PCB defective
--

04-58

Trouble shooting 51 E. 84.1 OUTDOOR UNIT Error Method: Current Sensor Error	Indicate or Display: Outdoor Unit : E. 84. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 84
---	--

Detective Actuators: Judgment from value sensed by current sensor 1 (current sensor for inverter) * Current sensor 1 is mounted on Filter PCB (INV)	Detective details: <ul style="list-style-type: none"> • "Protection stop by "inverter speed ≥ 20rps and sensor value 0.5A continued for 1 min"" was generated 2 times • Sensor value while inverter stopped = maximum was detected
--	---

Forecast of Cause : <ol style="list-style-type: none"> 1. Filter PCB to Inverter PCB current sensor wiring connector disconnection, open 2. Power supply to Filter PCB to Inverter PC wiring disconnection, open 3. Filter PCB defective (Power supply section, current sensor section) 4. Inverter PCB defective
--

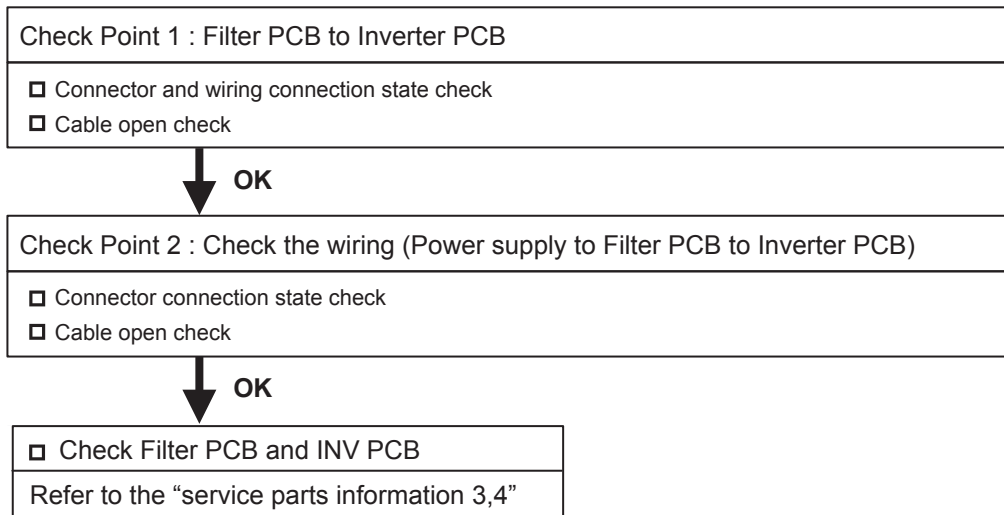

Trouble shooting 52 E. 86.1 OUTDOOR UNIT Error Method: Discharge Pressure Sensor Error	Indicate or Display: Outdoor Unit : E. 86. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 86
--	---

Detective Actuators: Discharge pressure sensor	Detective details: <ul style="list-style-type: none"> When any of the following conditions is satisfied, a discharge pressure sensor error is generated. <ol style="list-style-type: none"> 30 seconds or more have elapsed since the outdoor unit power was turned on and pressure sensor detected value < 0.3V continued for 30 seconds or more 30 seconds or more have elapsed since the outdoor unit power was turned on and pressure sensor detected value \geq 5.0V was detected.
--	--


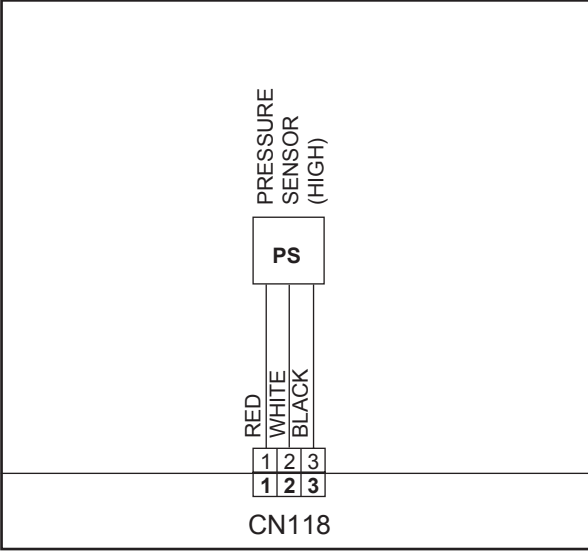
Forecast of Cause :	1. Discharge pressure sensor connector disconnection, open 2. Discharge pressure sensor defective 3. Main PCB defective
----------------------------	---

Check Point 1 : Check the discharge pressure sensor connection state
<input type="checkbox"/> Connector connection state check <input type="checkbox"/> Cable open check



Check Point 2 : Check the discharge pressure sensor
<input type="checkbox"/> Sensor characteristics check * For the characteristics of the discharge pressure sensor, refer to the "Service Parts Information 15".



Check Point 3 : Check voltage of Main PCB (DC5.0V)	<div style="border: 1px solid black; padding: 5px; text-align: center;"> DC  </div>
<input type="checkbox"/> Main PCB (CN118:1-3) voltage value = 5V <u>Remove the thermistor from Main PCB, check the voltage.</u>	
<div style="border: 1px solid black; padding: 10px; text-align: center;">  <p>Discharge pressure sensor (CN118:1-3)</p> </div>	

Trouble shooting 53 E. 86.3 OUTDOOR UNIT Error Method: Suction Pressure Sensor Error	Indicate or Display: Outdoor Unit : E. 86. 3 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 86
--	---

Detective Actuators: Suction pressure sensor	Detective details: <ul style="list-style-type: none"> When any of the following conditions is satisfied, a suction pressure sensor error is generated. <ol style="list-style-type: none"> 30 seconds or more have elapsed since the outdoor unit power was turned on and pressure sensor detected value < 0.06V continued for 30 seconds or more. 30 seconds or more have elapsed since the outdoor unit power was turned on and pressure sensor detected value ≥ 5.0V was detected.
--	--

Forecast of Cause :	1. Suction pressure sensor connector disconnection, open 2. Suction pressure sensor defective 3. Main PCB defective
----------------------------	---

Check Point 1 : Check the suction pressure sensor connection state
<input type="checkbox"/> Connector connection state check <input type="checkbox"/> Cable open check



Check Point 2 : Check the suction pressure sensor
<input type="checkbox"/> Sensor characteristics check * For the characteristics of the suction pressure sensor, refer to the "Service Parts Information 15".




Check Point 3 : Check voltage of Main PCB (DC5.0V)	<div>DC</div>
<input type="checkbox"/> Main PCB (CN119:1-3) voltage value = 5V <u>Remove the thermistor from Main PCB, check the voltage.</u>	
<div> <div> <div> PRESSURE SENSOR (LOW) </div> <div>PS</div> <div> <div>RED</div> <div>WHITE</div> <div>BLACK</div> </div> <div> <div>1</div> <div>2</div> <div>3</div> </div> <div> <div>1</div> <div>2</div> <div>3</div> </div> <div>CN119</div> </div> <div>Suction pressure sensor (CN119:1-3)</div> </div>	

Trouble shooting 54 E. 86.4 OUTDOOR UNIT Error Method: High Pressure Switch Error	Indicate or Display: Outdoor Unit : E. 86. 4 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 86
---	---

<u>Detective Actuators:</u> High pressure switch	<u>Detective details:</u> • When the power was turned on, "high pressure switch : open" was detected.
--	---


<u>Forecast of Cause :</u>	1. High pressure switch connector disconnection, open 2. High pressure switch characteristics defective 3. Main PCB defective
-----------------------------------	---

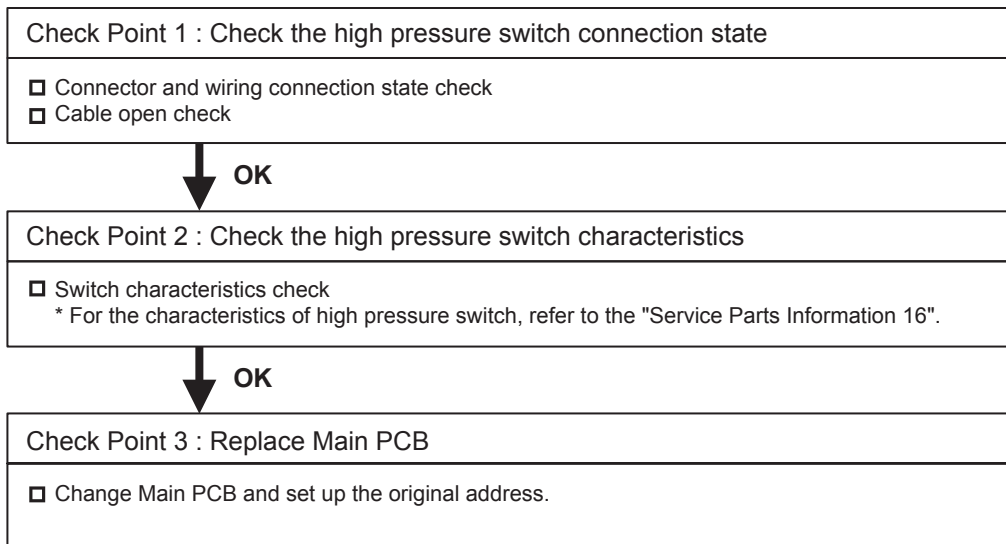

Trouble shooting 55 E. 93.1 OUTDOOR UNIT Error Method: Inverter Compressor Start UP Error	Indicate or Display: Outdoor Unit : E. 93. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 93
---	---

<u>Detective Actuators:</u> Inverter PCB Inverter Compressor	<u>Detective details:</u> <ul style="list-style-type: none"> ▪ "Protection stop by "overcurrent generation at inverter compressor starting" ⇒ restart" generated consecutively 60 times x 2 sets (total 120 times) * The shortest time up to error generation is about 100 minutes * Restart is not performed if an indoor unit in the same refrigerant system is not turned ON by thermostat. * After the end of the 1st set, the 2nd set is not started if all the compressors in the same refrigerant system are not temporarily stopped.
---	--


<u>Forecast of Cause :</u>	1. Inverter PCB to inverter compressor wiring disconnection, open 2. Inverter PCB defective 3. Inverter compressor defective (lock, winding short)
-----------------------------------	--

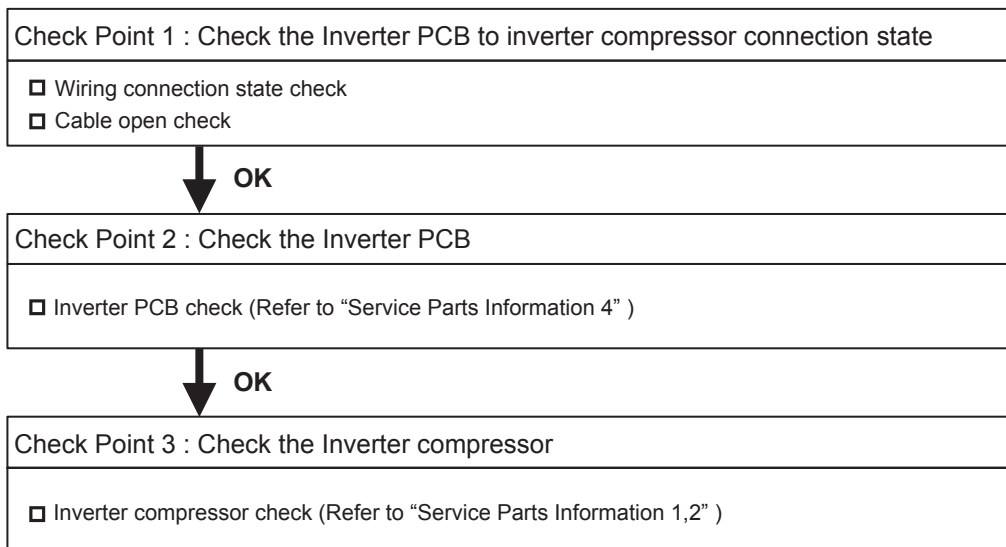

Trouble shooting 56 E. 94.1 <u>OUTDOOR UNIT Error Method:</u> Trip Detection	<u>Indicate or Display:</u> Outdoor Unit : E. 94. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 94
--	--

<u>Detective Actuators:</u> Inverter PCB Inverter Compressor SV 2 coil	<u>Detective details:</u> <ul style="list-style-type: none"> ▪ "Protection stop by "overcurrent generation after inverter compressor start processing completed"" generated consecutively 5 times. * The number of generations is reset if protection stop is not generated again within 40 seconds after restarting.
--	---

<u>Forecast of Cause :</u>	1. Outdoor unit fan operation defective, foreign matter on hear exchanger, excessive rise of ambient temperature 2. Inverter PCB defective 3. Inverter compressor defective (lock, winding short) 4. SV2 Coil Abnormal
-----------------------------------	---

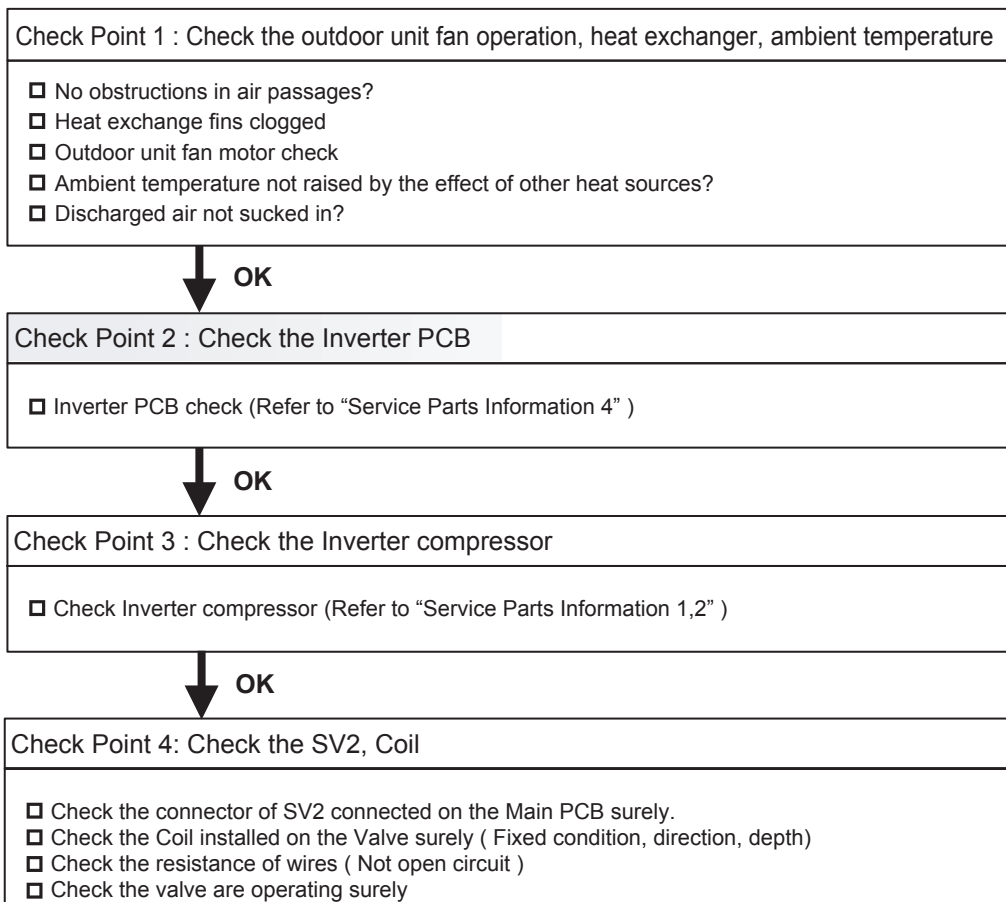

Trouble shooting 57 **E. 95.5**
OUTDOOR UNIT Error Method:
Compressor Motor Loss of Synchronization

Indicate or Display:
Outdoor Unit : E. 95. 5
Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash.
Error Code : 95

Detective Actuators:

Inverter PCB
Inverter Compressor

Detective details:

- "Protection stop by "loss of synchronization detection"" generated consecutively 5 times
- * The number of generations is reset if protection stop is not generated again within 40 seconds after restarting.

Forecast of Cause : 1. Inverter PCB defective
 2. Inverter compressor defective (lock)

Check Point 1 : Check the Inverter PCB

☐ Inverter PCB check (Refer to "Service Parts Information 4")




Check Point 2 : Check the Inverter compressor

☐ Inverter compressor check (Refer to "Service Parts Information 1,2")

Trouble shooting 58 E. 97.1 (E 98.1) OUTDOOR UNIT Error Method: Outdoor Unit Fan Motor 1(2) Lock Error - Start up Error -	Indicate or Display: Outdoor Unit : E. 97. 1 (FAN 1) , E. 98. 1 (FAN 2) Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 97 (FAN 1) , 98 (FAN 2)
--	--

Detective Actuators: Outdoor unit fan	Detective details: <ul style="list-style-type: none"> ▪ "Protection stop by "fan speed \leq 100rpm" 20 seconds after fan operation command issued" was generated consecutively 15 times * The compressor is protection stopped every time fan protection stop has been generated 3 times.
---	--


Forecast of Cause :	1. Rotation obstruction by foreign matter 2. Motor wiring, connector disconnection, open 3. Fan motor defective (winding open, lock) 4. Main PCB defective (drive circuit, speed detection circuit)
----------------------------	--

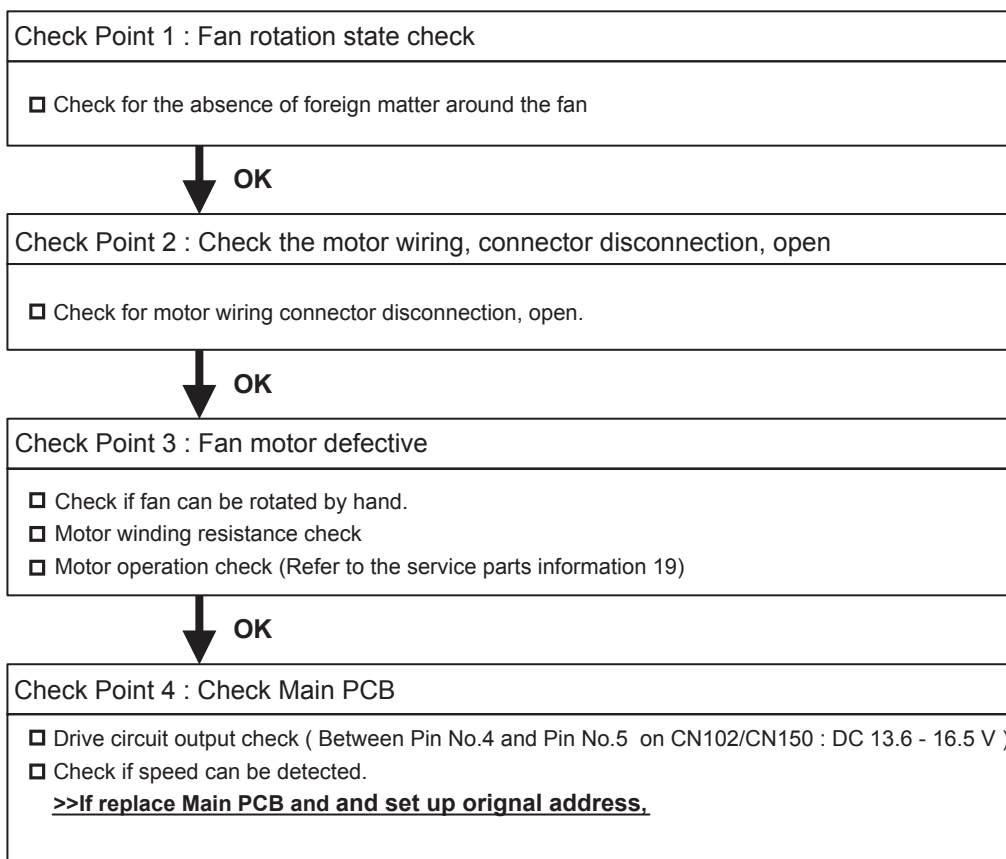

Trouble shooting 59 E. 97.4 (E. 98.4) <u>OUTDOOR UNIT Error Method:</u> Outdoor unit Fan motor 1(2) undervoltage - Lack of DC Voltage -	<u>Indicate or Display:</u> Outdoor Unit : E. 97. 4 E.98.4 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 97
---	---

<u>Detective Actuators:</u> Outdoor unit main PCB	<u>Detective details:</u> ▪ Low DC power supply (DC voltage 180V or less) detected
---	--


<u>Forecast of Cause :</u> <ol style="list-style-type: none"> 1. Power OFF, voltage drop, momentary open 2. Power supply wiring connection defective, open 3. Main PCB defective (electrolytic capacitor, DC voltage detection circuit)

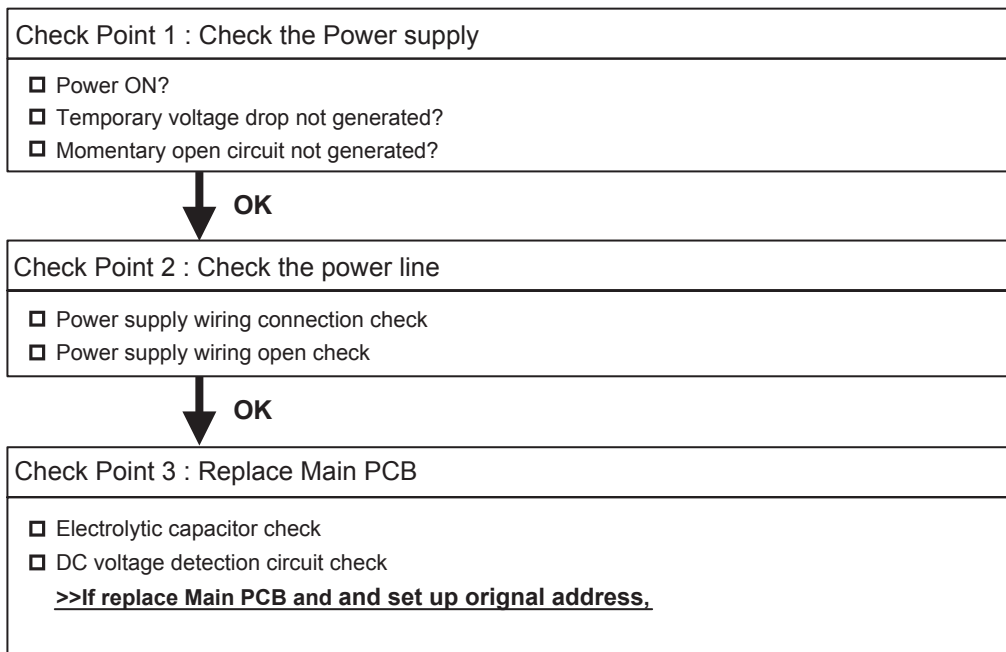

Trouble shooting 60 E. 97.5 (E.98.5) OUTDOOR UNIT Error Method: Outdoor Unit Fan Motor 1 Temp. Abnormal Outdoor Unit Fan Motor 2 Temp. Abnormal	Indicate or Display: Outdoor Unit : E. 97. 5 (FAN1), E. 98. 5 (FAN2) Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 97 (FAN1), 98 (FAN2)
---	---

<u>Detective Actuators:</u> Outdoor unit fan	<u>Detective details:</u> ▪ Protection stop by speed $\leq 220\text{rpm}$ after 60 seconds have elapsed after fan operation command issued generated 3 times within 3 hours.
--	--


<u>Forecast of Cause :</u>	1. Rotation obstructed by foreign matter 2. Ventilation obstructed by heat exchange foreign matter 3. Excessive ambient temperature rise 4. Static pressure setting incorrect, specified static pressure value exceeded 5. Fan motor defective (internal PCB defective)
-----------------------------------	---

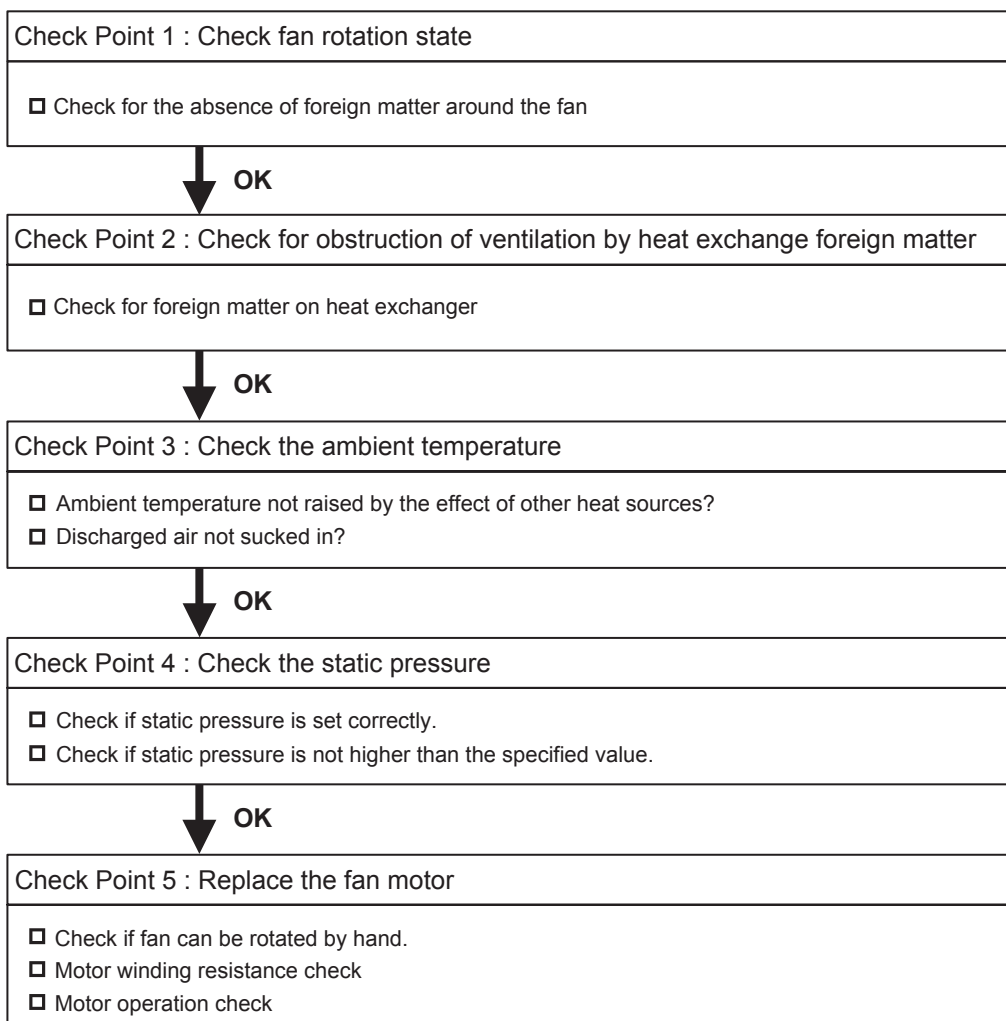

Trouble shooting 61 E.9A.1(E.9A.2) OUTDOOR UNIT Error Method: Coil (Expansion Valve 1) Error Coil (Expansion Valve 2) Error	Indicate or Display: Outdoor Unit : E. 9A. 1 (EEV1), E. 9A. 2 (EEV2) Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : 9A
---	---

Detective Actuators: Main PCB	Detective details: ▪ When the EEV input on the Main PCB (CN116, CN117) was open circuit or short circuit.
---	---

Forecast of Cause : <ol style="list-style-type: none"> 1. EEV coil lose connection 2. EEV wire(s) cut or pinched 3. Main PCB (DC 12V) output abnormal 4. Defective EEV coil
--

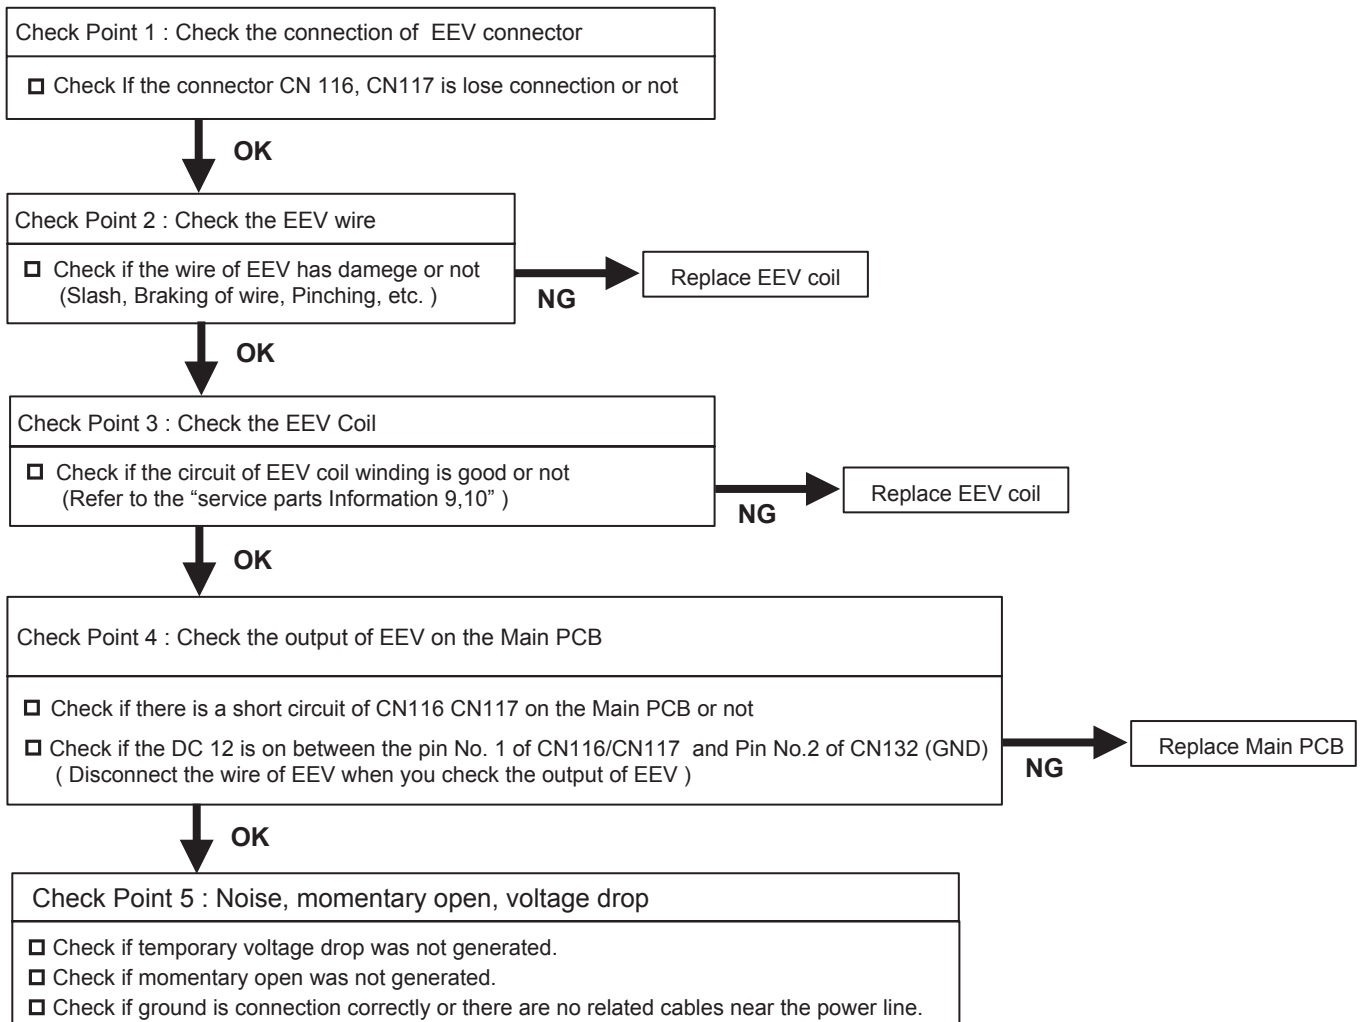

Trouble shooting 62 E.A1.1 OUTDOOR UNIT Error Method: Discharge Tempreature Abnormal	Indicate or Display: Outdoor Unit : E. A1. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : A1
---	---

Detective Actuators: Discharge temperature thermistor	Detective details: <ul style="list-style-type: none"> ▪ "Protection stop by "discharge temperature1 \geq 239°F(115°C) during compressor 1 operation" generated 2 times within 40 minutes
---	--

Forecast of Cause :	1. 3-way valve not opened 2. EEV defective, strainer clogged 3. Outdoor unit operation defective, foreign matter on heat exchanger 4. Discharge temperature thermistor 1 defective 5. Insufficient refrigerant
----------------------------	--

<Cooling operation>

Check Point 1 : Check if 3-way valve(gas side) is open.
<input type="checkbox"/> If the 3-way valve(gas side) was closed, open the 3-way valve(gas side) and check operation.



Check Point 2 : Check the EEV, strainer
<input type="checkbox"/> EEV (EEV1,EEV2, indoor unit EEV) open? <input type="checkbox"/> Strainer clogging check (before EEV, 3Way Valve, oil return) Refer to "Service Parts Information 8,9,10".



Check Point 3 : Check the outdoor unit fan,heat exchanger
<input type="checkbox"/> Check for foreign matter at heat exchanger <input type="checkbox"/> Check if fan can be rotated by hand. <input type="checkbox"/> Motor check



Check Point 4 : Check the discharge thermistor 1
<input type="checkbox"/> Discharger thermistor 1 characteristics check (Check by disconnecting thermistor from PCB.) * For the characteristics of the thermistor, refer to the "Service Parts Information 17".




Check Point 5 : Check the refrigerant amount
<input type="checkbox"/> Leak check

<Heating operation>

Check Point 1 : Check if 3-way valve(liquid side) is open.
<input type="checkbox"/> If the 3-way valve(liquid side) was closed, open the 3-way valve(liquid side) and check operation.



Check Point 2 : Check the EEV, strainer
<input type="checkbox"/> EEV (EEV1, EEV2) open? <input type="checkbox"/> Strainer clogging check (before EEV, 3Way Valve, oil return) Refer to "Service Parts Information 9,10".

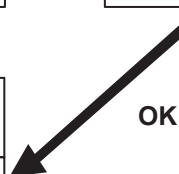

Trouble shooting 63 E. A3. 1 OUTDOOR UNIT Error Method: Compressor Tempreture Abnormal	Indicate or Display: Outdoor Unit : E. A3. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : A3
--	---

<u>Detective Actuators:</u> Compressor temperature thermistor	<u>Detective details:</u> •"Protection stop by "compressor tempreture" $\geq 230^{\circ}\text{F}(110^{\circ}\text{C})$ during compressor operation""generated 2 times within 40 minutes
---	---

<u>Forecast of Cause :</u>	1. 3-way valve not opened 2. EEV defective, strainer clogged 3. Outdoor unit operation defective, foreign matter on heat exchanger 4. Compressor 1 temperature thermistor defective 5. Insufficient refrigerant
-----------------------------------	---

<Cooling operation>

Check Point 1 : Check if 3-way valve(gas side) is open.
<input type="checkbox"/> If the 3-way valve(gas side) was closed, open the 3-way valve(gas side) and check operation.



Check Point 2 : Check the EEV, strainer
<input type="checkbox"/> EEV (EEV1, EEV2, indoor unit EEV) open? <input type="checkbox"/> Strainer clogging check (before and after EEV, 3Way Valve oil return) Refer to "Service Parts Information 8,9,10".



Check Point 3 : Outdoor unit fan, heat exchanger chek
<input type="checkbox"/> Check for foreign matter at heat exchanger <input type="checkbox"/> Check if fan can be rotated by hand. <input type="checkbox"/> Motor check



Check Point 4 : Check the compressor 1 temperature thermistor
<input type="checkbox"/> Compressor 1 temperature thermistor characteristics check (Check by disconnecting thermistor from PCB) * For the characteristics of the thermistor, refer to the "Service Parts Information 17".



Check Point 5 : Check the refrigerant amount
<input type="checkbox"/> Leak check

<Heating operation>

Check Point 1 : Check if 3-way valve(liquid side) is open.
<input type="checkbox"/> If the 3-way valve(liquid side) was closed, open the 3-way valve(liquid side) and check operation.



Check Point 2 : Check the EEV, strainer
<input type="checkbox"/> EEV (EEV1, EEV2) open? <input type="checkbox"/> Strainer clogging check (before and after EEV, 3 Way Valve oil return) Refer to "Service Parts Information 9,10".



Trouble shooting 64 E. A4. 1 OUTDOOR UNIT Error Method: High Pressure Abnormal	Indicate or Display: Outdoor Unit : E. A4. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : A4
--	---

<u>Detective Actuators:</u> Judgment from value sensed by discharge pressure sensor	<u>Detective details:</u> ▪ "Protection stop by "discharge pressure \geq 580PSI (4.00MPa) during operation of any compressor"" generated 3 times within 60 minutes
---	--

<u>Forecast of Cause :</u>	1. 3-way valve not opened 2. Outdoor unit fan operation defective, foreign matter at heat exchanger, excessive ambient temperature rise 3. Check valve clogged 4. EEV defective, strainer clogged 5. Solenoid valve defective 6. Discharge pressure sensor defective 7. Refrigerant overcharged
-----------------------------------	---

<Cooling operation>

Check Point 1 : Check if 3-way valve(liquid side) is open.
<input type="checkbox"/> If the 3-way valve(liquid side) was closed, open the 3-way valve(liquid side) and check operation.



Check Point 2 : Check the outdoor unit fan operation, heat exchanger, ambient temperature
<input type="checkbox"/> No foreign matter in air passage? <input type="checkbox"/> Heat exchange fins clogged <input type="checkbox"/> Outdoor unit fan motor check <input type="checkbox"/> Ambient temperature not raised by effect of other heat sources? <input type="checkbox"/> Discharged air not sucked in?



Check Point 3 : Check the EEV, strainer
<input type="checkbox"/> EEV(EEV 1) open? <input type="checkbox"/> Strainer clogging check. (before EEV) Refer to "Service Parts Information 9".



Check Point 5 : Check the solenoid valve (SV2)
<input type="checkbox"/> Solenoid valve operation check Refer to "Service Parts Information 11".



Check Point 6 :Check the discharge pressure sensor
<input type="checkbox"/> Discharge pressure sensor characteristics check * For the characteristics of the discharge pressure sensor, refer to "Service Parts Information 15".




Check Point 7 : Check the refrigerant amount
<input type="checkbox"/> Refrigerant charged amount check

<Heating operation>

Check Point 1 : Check if 3-way valve(gas side) is open.
<input type="checkbox"/> If the 3-way valve(gas side) was closed, open the 3-way valve(gas side) and check operation.



Check Point 4 : Check the EEV, strainer (indoor unit)
<input type="checkbox"/> EEV operation check <input type="checkbox"/> Check of strainers before and after EEV Refer to "Service Parts Information 8".

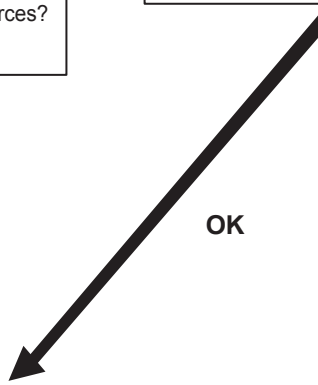

Trouble shooting 65 E. A4. 2 OUTDOOR UNIT Error Method: High Pressure Protection 1	Indicate or Display: Outdoor Unit : E. A4. 2 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : A4
--	---

Detective Actuators: High pressure switch 1	Detective details: ▪ "Protection stop by "high pressure switch 1 operated during compressor 1 operation"" generated 3 times within 60 minutes
---	---

Forecast of Cause : 1. 3-way valve not opened 2. Outdoor unit fan operation defective, foreign matter at heat exchanger, excessive ambient temperature rise 3. Check valve clogged 4. EEV defective, strainer clogged 5. Solenoid valve defective 6. High pressure switch 1 defective 7. Refrigerant overcharged

<Cooling operation>

Check Point 1 : Check if 3-way valve(liquid side) is open.
<input type="checkbox"/> If the 3-way valve(liquid side) was closed, open the 3-way valve(liquid side) and check operation.

↓ **OK**

Check Point 2 : Check the outdoor unit fan operation, heat exchanger, ambient temperature
<input type="checkbox"/> No foreign matter in air passage? <input type="checkbox"/> Heat exchange fins clogged <input type="checkbox"/> Outdoor unit fan motor check <input type="checkbox"/> Ambient temperature not raised by effect of other heat sources? <input type="checkbox"/> Discharged air not sucked in?

↓ **OK**

Check Point 3-1 : Check the EEV, strainer
<input type="checkbox"/> EEV(EEV 1) open? <input type="checkbox"/> Strainer clogging check. (before EEV) Refer to "Service Parts Information 9".

↓ **OK**

Check Point 3-2 : Check the check valve
<input type="checkbox"/> Check if check valve (oilseparator (out) of compressor 1) is not clogged.

↓ **OK**

Check Point 5 : Check the solenoid valve (SV2)
<input type="checkbox"/> Solenoid valve operation check Refer to "Service Parts Information 11".

↓ **OK**

Check Point 6 : Check high pressure switch 1
<input type="checkbox"/> High pressure switch 1 characteristics check * For the characteristics of the high pressure switch 1, refer to "Service Parts Information 16".

↓ **OK**

Check Point 7 : Check the refrigerant amount
<input type="checkbox"/> Refrigerant charged amount check

<Heating operation>

Check Point 1 : Check if 3-way valve(gas side) is open.
<input type="checkbox"/> If the 3-way valve(gas side) was closed, open the 3-way valve(gas side) and check operation.

↓ **OK**

Check Point 4 : Check the EEV, strainer (indoor unit)
<input type="checkbox"/> EEV operation check <input type="checkbox"/> Check of strainers before and after EEV Refer to "Service Parts Information 8".

↙ **OK**

Trouble shooting 66 E. A5. 1 OUTDOOR UNIT Error Method: Low Pressure Abnormal	Indicate or Display: Outdoor Unit : E. A5. 1 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : A5
---	---

Detective Actuators: Suction pressure sensor	Detective details: ▪ "Protection stop by "suction pressure ≤ 14.5 PSI (0.10MPa) continued for 10 minutes" or "suction pressure ≤ 7.2 PSI (0.05MPa)" during operation of any compressor"" was generated 5 times within 3 hours
--	---

Forecast of Cause :	1. 3-way valve not opened 2. Outdoor unit ambient temperature too low 3. Outdoor unit fan operation defective, foreign matter at heat exchanger 4. EEV defective, strainer clogged 5. Solenoid valve defective 6. Low pressure sensor characteristics defective 7. Insufficient refrigerant
----------------------------	--

<Cooling operation>

Check Point 1 : Check if 3-way valve(gas side) is open.
<input type="checkbox"/> If the 3-way valve(gas side) was closed, open the 3-way valve(gas side) and check operation.



Check Point 4 : Check the indoor unit EEV, strainer clogging
<input type="checkbox"/> Indoor unit EEV operation check
<input type="checkbox"/> Strainer not clogged?



Check Point 5 : Check the solenoid valve (SV2)
<input type="checkbox"/> Solenoid valve operation check
Refer to "Service Parts Information 11".



Check Point 6 : Check the suction pressure sensor
<input type="checkbox"/> Suction pressure sensor characteristics check
* For the characteristics of the suction pressure sensor, refer to "Service Parts Information 15".



Check Point 7 : Check the refrigerant amount
<input type="checkbox"/> Leak check

<Heating operation>

Check Point 1 : Check if 3-way valve(liquid side) is open.
<input type="checkbox"/> If the 3-way valve(liquid side) was closed, open the 3-way valve(liquid side) and check operation.



Check Point 2 : Check the outdoor unit ambient temperature
<input type="checkbox"/> Outdoor ambient temperature lower than operating range?



Check Point 3 : Check the outdoor unit fan operation, heat exchanger
<input type="checkbox"/> No foreign matter in air passage?
<input type="checkbox"/> Heat exchange fins clogged
<input type="checkbox"/> Fan rotates?
<input type="checkbox"/> Outdoor unit fan motor check




Check Point 4 : Check the outdoor unit EEV, strainer clogging
<input type="checkbox"/> Outdoor unit EEV1 operation check
<input type="checkbox"/> Strainer not clogged?
Refer to "Service Parts Information 9".



Trouble shooting 67 E. AC. 4 OUTDOOR UNIT Error Method: Outdoor unit Heat Sink Temperature Abnormal	Indicate or Display: Outdoor Unit : E. AC. 4 Indoor Unit : Operation LED 9 times Flash, Timer LED 15 Times Flash, Filter LED Continuous Flash. Error Code : AC
---	---

<u>Detective Actuators:</u> Inverter PCB	<u>Detective details:</u> <ul style="list-style-type: none"> ▪ "Protection stop by "heat sink temp. $\geq 105^{\circ}\text{C}$ generated 3 times within 60 minutes.
--	---

<u>Forecast of Cause :</u>	1. Foreign matter on heat sink, heat sink dirty 2. Foreign matter on heat exchanger, excessive ambient temperature rise 3. Heat sink temp. sensor (Inside IPM) defective
-----------------------------------	--

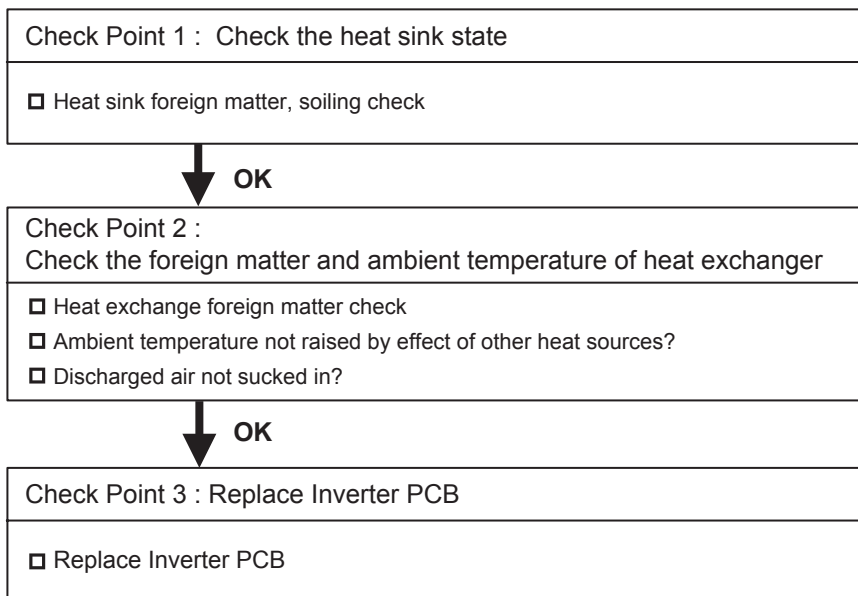


4-3-3 TROUBLE SHOOTING WITH NO ERROR CODE

Trouble shooting 68

Indoor Unit - No Power

Forecast of Cause :

1. Power Supply failure 2. Outside cause 3. Electrical Component defective

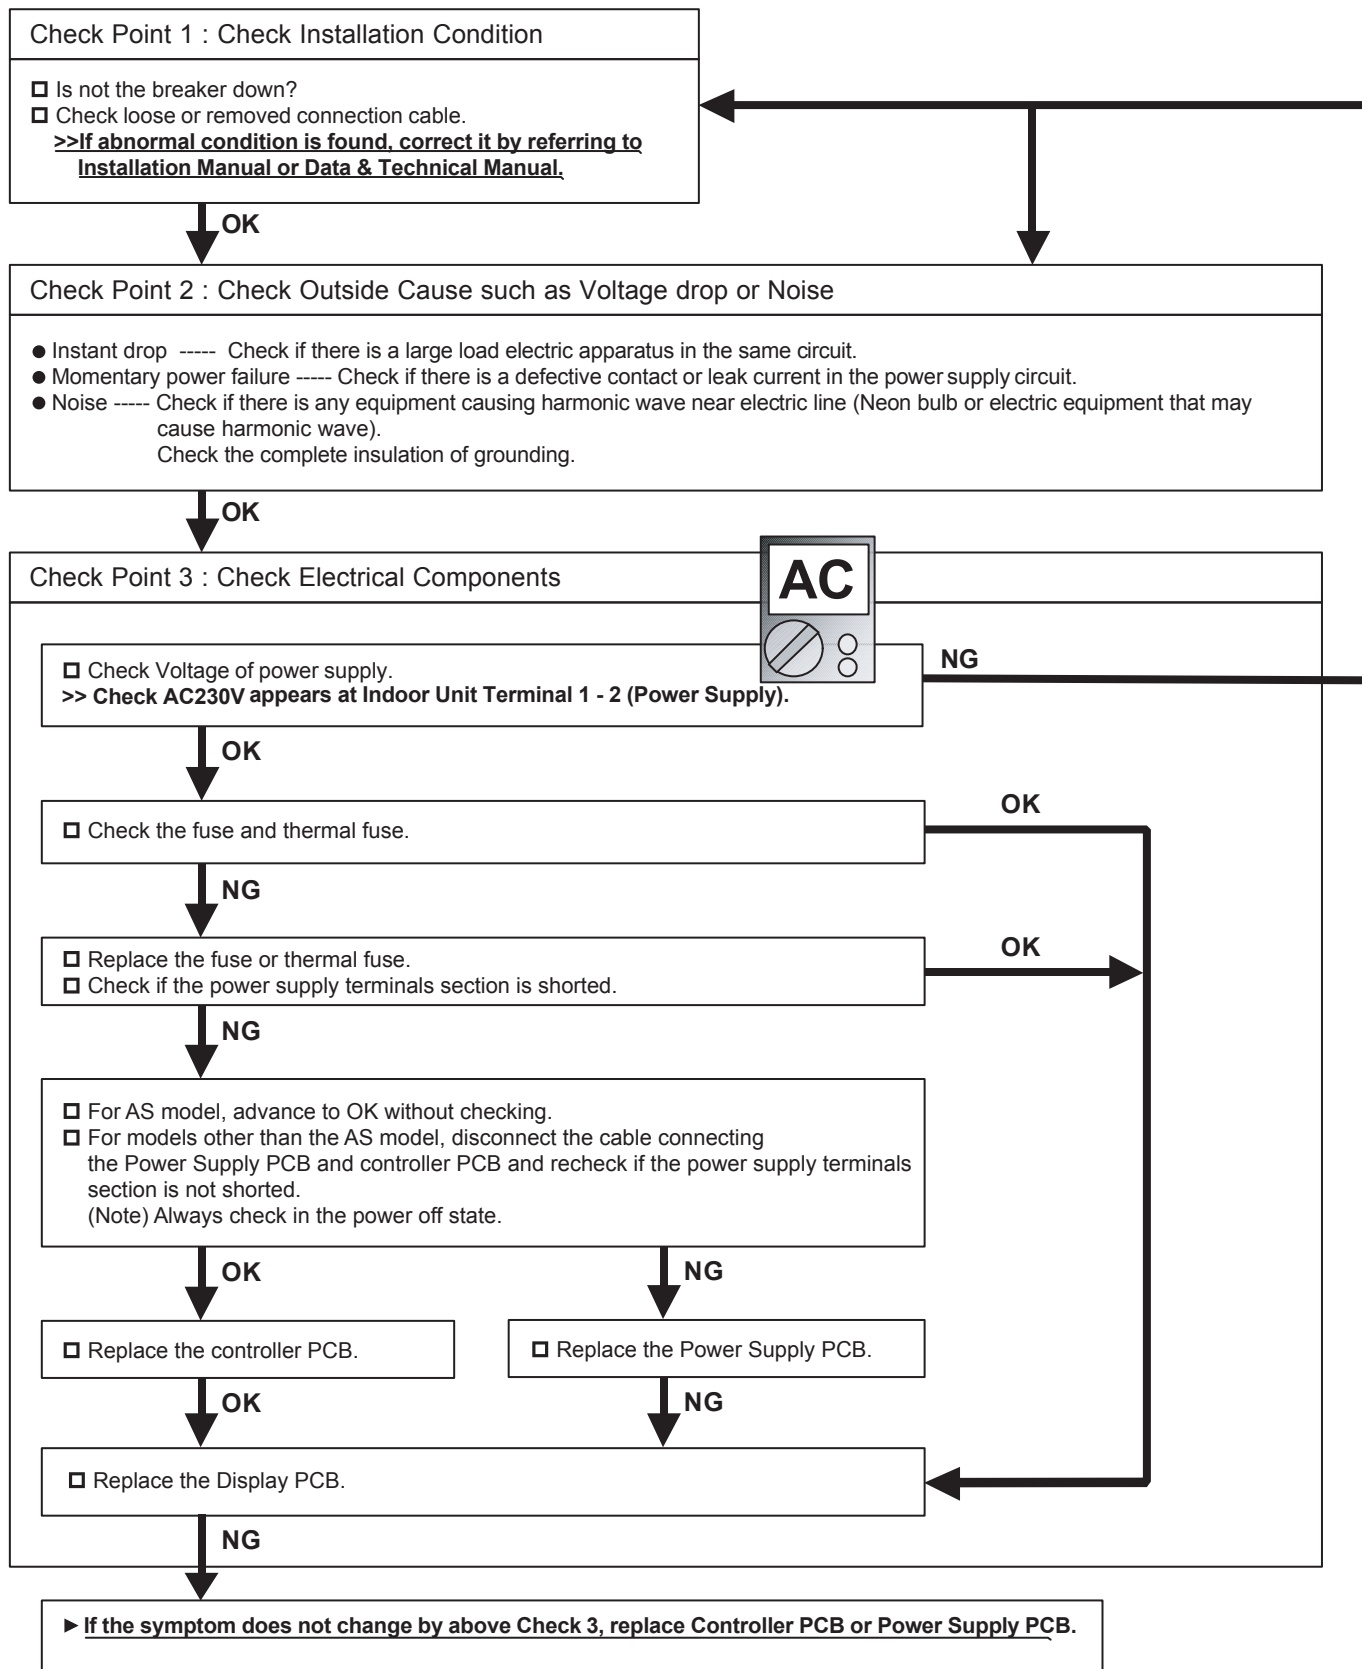

Trouble shooting 69

Outdoor Unit - No Power

Forecast of Cause :

1. Power Supply failure 2. Outside cause 3. Electrical Components defective

Check Point 1 : Check Installation Condition

- ☐ Isn't the breaker down?
- ☐ Check loose or removed connection cable.
- >>If abnormal condition is found, correct it by referring to Installation Manual or Data & Technical Manual.**

↓ OK

Check Point 2 : Check Outside Cause such as Voltage drop or Noise

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line (Neon bulb or electric equipment that may cause harmonic wave).
Check the complete insulation of grounding.

↓ OK

Check Point 3 : Check Electrical Components



- ☐ Check the voltage of power supply.
- >> Check if the reted voltage appears at Outdoor Unit Terminal** L - N (Single phase mode)
L1, L3 - N (3 Phase model)

NO

↓ OK

- ☐ Check the fuse on the Filter PCB.

↓ NG

- ☐ Replace the fuse.
- ☐ Recheck if the power supply terminals section is shorted.
(Note) Always check in the power off state.

↓ NG

- ☐ Disconnect connecting cable of the Filter PCB and Main PCB and recheck.
if the power supply terminals section is not shorted.
(Note) Always check in the power off state.

↓ OK

- ☐ Check If the FAN motor PCB has a damage or not. (Check short circuit)

OK

↓ NG

- ☐ Replace the FAN Motor

- ☐ Check if the circuit between pin No. 1 and pin No.2 of CN102 / CN150 on the Main PCB has short circuit or not (Short circuit : NG)
* Disconnect FAN motor when check the circuit

↓ NG

- ☐ Replace the Inverter PCB

↓ NG

↓ NG

- ☐ Replace the Filter PCB.

↓ NG

- ☐ If the symptom does not change by above Check 3, replace Main PCB or Filter PCB

Trouble shooting 70

No Operation (Power is ON)

Forecast of Cause :

1. Setting/Connection failure
2. Outside cause
3. Electrical Component defective

Check Point 1 : Check indoor and outdoor installation condition

- ❑ Indoor Unit - Check incorrect wiring between Indoor Unit- Remote Control, or terminals between Indoor Units.
Or, check if there is an open cable connection.
 - ❑ Check address setting (Are all the address of Indoor and Outdoor correct?)
 - ❑ Are these Indoor Unit, Outdoor Unit, and Remote Control suitable model numbers to connect?
- >> If there is some abnormal condition, correct it by referring to Installation manual and Data & Technical Manual.**



Turn off Power and check/correct followings.

- ❑ Isn't Communication PCB of Indoor Unit removed?
- ❑ Is there loose or removed communication line of Indoor Unit and Outdoor Unit?
- ❑ Check Terminator (DIP-SW SET 5) is installed on Outdoor Main PCB.
- ❑ Check loose or removed communication line between each Outdoor Unit.
- ❑ Check loose Communication PCB of each Outdoor Unit.



Check Point 2 : Check outside cause at Indoor and Outdoor (Voltage drop or Noise)

- ⚙ Instant drop -----Check if there is a large load electric apparatus in the same circuit.
- ⚙ Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- ⚙ Noise ----- Check if there is any equipment causing harmonic wave near electric line (Neon bulb or electric equipment that may cause harmonic wave).
Check the complete insulation of grounding.



Check Point 3 : Check Electrical Components at Indoor and Outdoor



- ❑ Indoor Unit - Check the voltage between pins 1-3 of the connector (on the control PCB) for connection with the remote controller.
>> If it is DC12V, Remote Control is defective (Controller PCB is normal) >> Replace Remote Control
>> If it is DC 0V, Controller PCB is defective (Check Remote Control once again) >> Replace Controller PCB
- ❑ If some of Indoor unit does not operate, replace the Communication PCB of the non-operative Indoor Unit.
>> If the symptom does not change, replace Controller PCB of Indoor Unit.
- ❑ If all of Indoor Units do not operate, check the connection between Main PCB and Communication PCB of Outdoor Unit (Main Unit).
>> If the symptom does not change, replace Communication PCB of Outdoor Unit (Main Unit).
(If it did not work, replace Main PCB.)

Trouble shooting 71

No Cooling

Forecast of Cause :

1. Indoor Unit error
2. Outdoor Unit error
3. Effect by Surrounding environment
4. Connection Pipe / Connection Wire failure
5. Refrigeration cycle failure

Check Point 1 : Check Indoor Unit

- ☐ Does Indoor Unit FAN run on HIGH FAN?
- ☐ Is Air Filter dirty?
- ☐ Is Heat Exchanger clogged?



Check Point 2 : Check Outdoor Unit Operation

- ☐ Check if Outdoor Unit is operating
- ☐ Check any objects that obstruct the air flow route.
- ☐ Check clogged Heat Exchanger.
- ☐ Is the pipe length setting (Push Switch "MODE/EXIT", "SELECT", "ENTER") suitable?
- ☐ Is the Valve open?



Check Point 3 : Check Site Condition

- ☐ Is capacity of Indoor Unit fitted to Room size?
- ☐ Any windows open? Or direct sunlight ?




Check Point 4 : Check Indoor/Outdoor Installation Condition

- ☐ Check connection pipe (specified pipe length & Pipe diameter?)
 - ☐ Check any loose or removed communication line.
- >> If there is an abnormal condition, correct it by referring to Installation Manual or Data & Technical Manual.**





Check Point 5 : Check Refrigeration Cycle

- ☐ Check if Strainer is clogged (Refer to the figure at right).
 - ☐ Measure Gas Pressure and if there is a leakage, correct it.
- >> When recharging the refrigerant, make sure to perform vacuuming, and recharge the specified amount.**
- ▶ Check EEV (Refer to Service Parts Information)
 - ▶ Check Solenoid Valve (Refer to Service Parts Information)
 - ▶ Check Compressor (Refer to Service Parts Information)



Attention!!

Strainer normally does not have temperature difference between inlet and outlet as shown in (1), but if there is a difference like shown in (2), there is a possibility of inside clogged. In this case, replace Strainer.

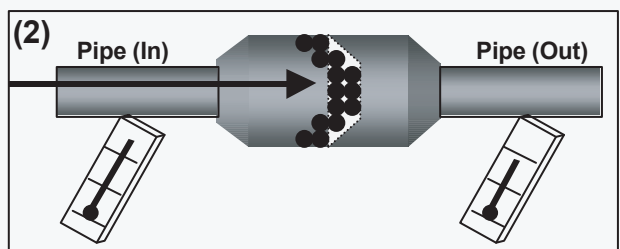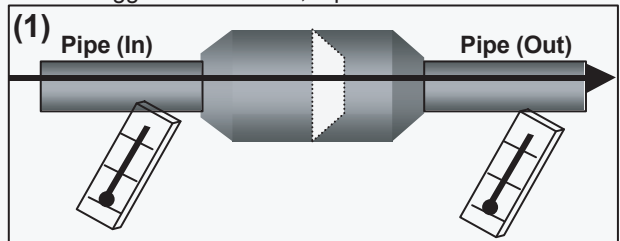

Trouble shooting 72

Abnormal Noise

Forecast of Cause :

1. Abnormal installation (Indoor/Outdoor)
2. Fan failure(Indoor/Outdoor)
3. EEV failure (Indoor)
4. Compressor failure (Outdoor)

Diagnosis method when Abnormal Noise is occurred

Abnormal noise is coming from Indoor Unit
(Check and correct followings)

- ☐ Is Main Unit installed in stable condition?
- ☐ Is the installation of Air suction grille and front panel normal?
- ☐ In case of Duct type : Is Static Pressure range normal?
(Refer to Data & Technical Manual)

↓ **OK**

- ☐ Is Fan broken or deformed?
- ☐ Is the screw of Fan loose?
- ☐ Is there any object which obstruct the Fan rotation?

Attention!!

- If Refrigerant Noise is occurring, Check if the Indoor and Outdoor Thermistor is wrongly installed. Check and correct the thermistor.
- Check the refrigerant additional charging amount. When the refrigerant is not enough, add the refrigerant. However, the total refrigerant amount is prevented from more than 15.7kg.

Abnormal noise is coming from Outdoor Unit
(Check and correct followings)

- ☐ Is Main Unit installed in stable condition?
- ☐ Is Bell Mouth installed normally?

↓ **OK**

- ☐ Is Fan broken or deformed?
- ☐ Is the screw of Fan loose?
- ☐ Is there any object which obstruct the Fan rotation?

↓ **OK**

- ☐ Check if vibration noise by loose bolt or contact noise of piping is happening.

↓ **OK**

- ☐ Is Compressor locked?
>> Check Compressor (Refer to Service Parts Information)

Trouble shooting 73

Outdoor air unit - No Power

Forecast of Cause :

1. Power Supply failure 2. Outside cause 3. Electrical Component defective

Check Point 1 : Power supply

- Is not the breaker down?
 - Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
 - Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
 - Noise ----- Check if there is any equipment causing harmonic wave near electric line (Neon bulb or electric equipment that may cause harmonic wave).
Check the complete insulation of grounding.

OK

Check Point 2 : Check Protector (20A)

- Check protector open / short
If the protector is open circuit, replace it.

OK (No short circuit)

Check Point 3 : Check AC line

- Check AC line (L-N) open / short

NG (Short circuit)

Check Point 4 : Check short circuit Filter PCB

- Disconnect the wire between Filter PCB and reactor, check short circuit of AC line.
If there is short circuit, replace the Filter PCB.

OK (No short circuit)

Check Point 5 : Check short circuit Diode bridge

- Connect the disconnected wire(s) on the check point 4, disconnect the wire between Diode bridge and Capacitor, check short circuit of AC line.
If there is short circuit, replace the Diode bridge.

OK (No short circuit)

Check Point 6 : Check short circuit Capacitor

- Connect the disconnected wire(s) on the check point 5, disconnect the wire between Capacitor and Filter PCB, check short circuit of AC line.
If there is short circuit, replace the Capacitor.

OK (No short circuit)

Check Point 7 : Check short circuit Power supply PCB

- Connect the disconnected wire(s) on the check point 6, disconnect the wire of Fan motor, check short circuit of AC line.
If there is short circuit, replace the Power supply PCB.

OK (No short circuit)

Check Point 8 : Check Fan Motor

- Check open / short of FAN motor
Refer to the Service Parts Information 13, 14
If there is short circuit, replace FAN motor.

OK (No short circuit)

Check Point 9 : Short circuit check on DC circuit

- Disconnect the connector (CN200) on the Power supply PCB and check the short circuit
1. DC12V line (CN200 Pin 1 - 5)
 2. DC 5V Line (CN200 Pin 1 - 3)
 3. DC 15V-1 Line (CN500 Pin 3 - 4)
 4. DC 15V-2 Line (CN530 Pin 3 - 4)
- If one of them is short circuit, replace the Power supply PCB

OK (No short circuit)

Check Point 10 : Check short circuit of actuators (for DC12V)

- Disconnect the CN10 (EEV1) on the Main PCB, and check short circuit on Main PCB CN 4 Pin 1 - 5.
If the short circuit disappears, replace the EEV coil.
- Disconnect the CNC01 (WRC) on the Main PCB, and check short circuit on Main PCB CN 4 Pin 1 - 5.
If the short circuit disappears, check the WRC wire, WRC.
- Disconnect the CNB01 (Ext.Out) on the Main PCB, and check short circuit on Main PCB CN 4 Pin 1 - 5.
If the short circuit disappears, check the Ext. device or wiring.
- Disconnect the CN2 (TransmissionPCB) on the Main PCB, and check short circuit on Main PCB CN 4 Pin 1 - 5.
If the short circuit disappears, replace the Transmission PCB.
- Disconnect the CN22 (Interconnecting wire) on the Main PCB, and check short circuit on Main PCB CN 4 Pin 1 - 5.
If the short circuit disappears, replace the Filter PCB.
- If the short circuit appears after disconnecting actuators, replace the Main PCB.

OK (No short circuit)

Check Point 11 : Check short circuit of actuators (for DC5V)

- Disconnect the CN14 (SW PCB) on the Main PCB, and check short circuit on Main PCB CN 4 Pin 1 - 3.
If the short circuit disappears, replace the SW PCB.
- Disconnect the CN18 (Receiver unit *Option) on the Main PCB, and check short circuit on Main PCB CN 4 Pin 1 - 3.
If the short circuit disappears, check the wire, Receiver unit.
- Disconnect the CN2 (Transmission PCB) on the Main PCB, and check short circuit on Main PCB CN 4 Pin 1 - 3.
If the short circuit disappears, replace the Transmission PCB.
- Disconnect the CN21 (Interconnecting wire) on the Main PCB, and check short circuit on Main PCB CN 4 Pin 1 - 3.
If the short circuit disappears, replace the Power supply PCB.
- If the short circuit appears after disconnecting actuators, replace the Main PCB.

4-3-4 Trouble Shooting for Optional Parts

1. External Switch Controller (UTY-TEKX)

Trouble shooting 74

Error Contents :
Power Supply Error

Symptom :
No operation & LED does not light up.

Condition :

1. No power supply.
Voltage error between red and black terminals of External Switch Controller. (Normal voltage: 12V plus minus 10%)
2. Electric circuit error.
Voltage is normal between red and black terminals of External Switch Controller (Normal voltage: 12V plus minus 10%)

Cause 1 : Indoor unit defective

- ❑ Refer to Indoor unit trouble shooting.



Cause 2 : Connection cable is defective or open.

- ❑ Check installation of connection cable.
- ❑ Check if connection cable is open.

OK

Cause 3 : Defective insertion or open connection of the cable between External Switch Controller terminal and PCB.

- ❑ Check connector insertion.
- ❑ Check if connection cable is open.



Cause 4 : Ext. Switch Controller is defective.

► **Replace External Switch Controller.**

Trouble shooting 75

Error Contents :


The abnormality in connection of remote controller cable

Symptom :

LED repeats flashing 0.5sec ON & 0.5sec OFF.

Condition :

Communication with Indoor unit has been cut off for longer than 1 minute.

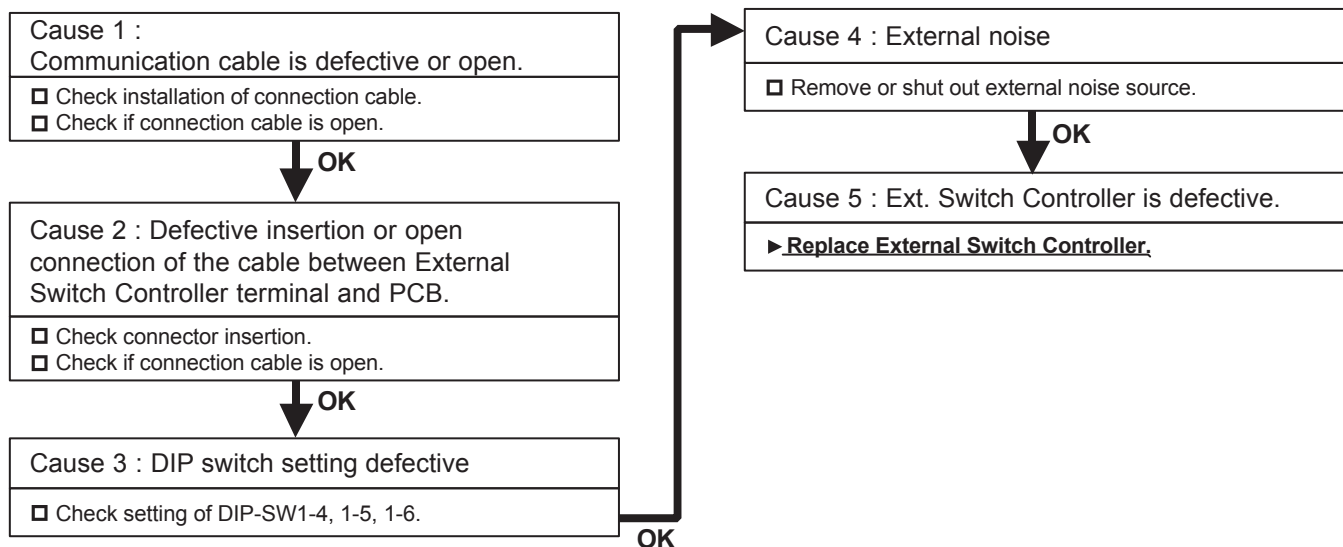

Trouble shooting 76

Error Contents :
Transmission Error

Symptom :
LED repeats flashing 0.5sec ON & 1.0sec OFF.

Condition :

Normal communication with Indoor unit has been suspended for longer than 1 minute.

Cause 1 : DIP switch setting defective

❑ Check setting of DIP-SW1-4, 1-5, 1-6.



Cause 2 : External noise


❑ Remove or shut out external noise source.

OK


Cause 3 : Ext. Switch Controller is defective.

► **Replace External Switch Controller.**

Trouble shooting 77	
Error Contents : Switch Operation Error	Symptom : LED is lighting but Switch (SW1 or SW2) does not operate.
Condition : Switch input can not be detected.	

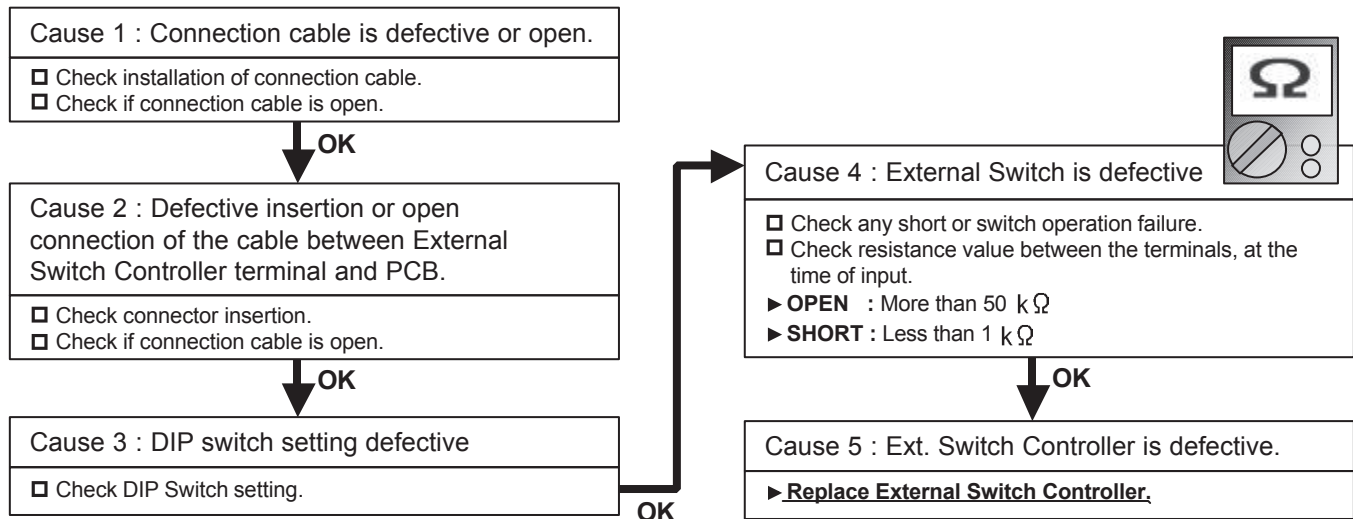

Signal Amplifier (UTY-VSGXZ1)

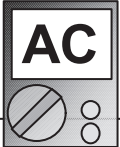Trouble shooting 78	
<u>Error Contents :</u> Power Supply Error	<u>Symptom :</u> No display
<u>Details :</u> Condition of occurrence : Normal power is not supplied. 7 segment indicator is defective. Release condition : Normal power is supplied. 7 segment indicator is normal.	
Cause 1 : Power supply cable installation is defective or open.	
<input type="checkbox"/> Check following installation and reset the power supply. (1) Installation of power cable on power supply terminal. (2) Connection between Power PCB and Terminal. (3) Connector condition between power PCB and Main PCB.	<div>OK</div> <div>  </div>
	Cause 2 : Signal Amplifier is defective.
	If normal voltage (Rated Voltage) is applied to power supply terminal of Signal Amplifier, there is a possibility of defective PCB. Proceed as follows. ► Replace Signal Amplifier.

Signal Amplifier (UTY-VSGXZ1)

Trouble shooting 79

Error Contents :

Communication Error

Symptom :

Error code does not appear [_ _]

Communication error occurs at connected equipment side.

Details :

Condition of occurrence : Network cable defective. External noise is applied.

Overlapping of Signal Amplifier address setting. System design mistake.

Release condition : Network cable is connected. External noise is removed.

Overlapping of Signal Amplifier has been corrected. System design is normal.

Cause 1 :

Network cable installation is defective or open.

- ❑ Check Network cable installation.



Cause 2 : External noise

- ❑ Remove external noise around Signal Amplifier or Network cable. (Keep enough distance)



Cause 3 :

Overlapped address of Signal Amplifier.

- ❑ Set up address again which does not overlap on system. After set up again, reset the power supply.

OK


Cause 4 : System Design mistake

- ❑ Check following items.(Refer to Installation Manual)

- (1) Installation location of Terminal Resistor.
(Only 1 location on NS*)
- (2) Cable length. (Within 500m maximum on NS*)
- (3) Number of units connected
(Up to 64 units maximum on NS*)
- (4) Communication cable specification.
(Use specified type.)
- (5) Number of Signal Amplifier installed.
(Up to 8 units max. on system)
- (6) Network cable shall not be connected in loop.

*NS : Network Segment

Signal Amplifier (UTY-VSGXZ1)

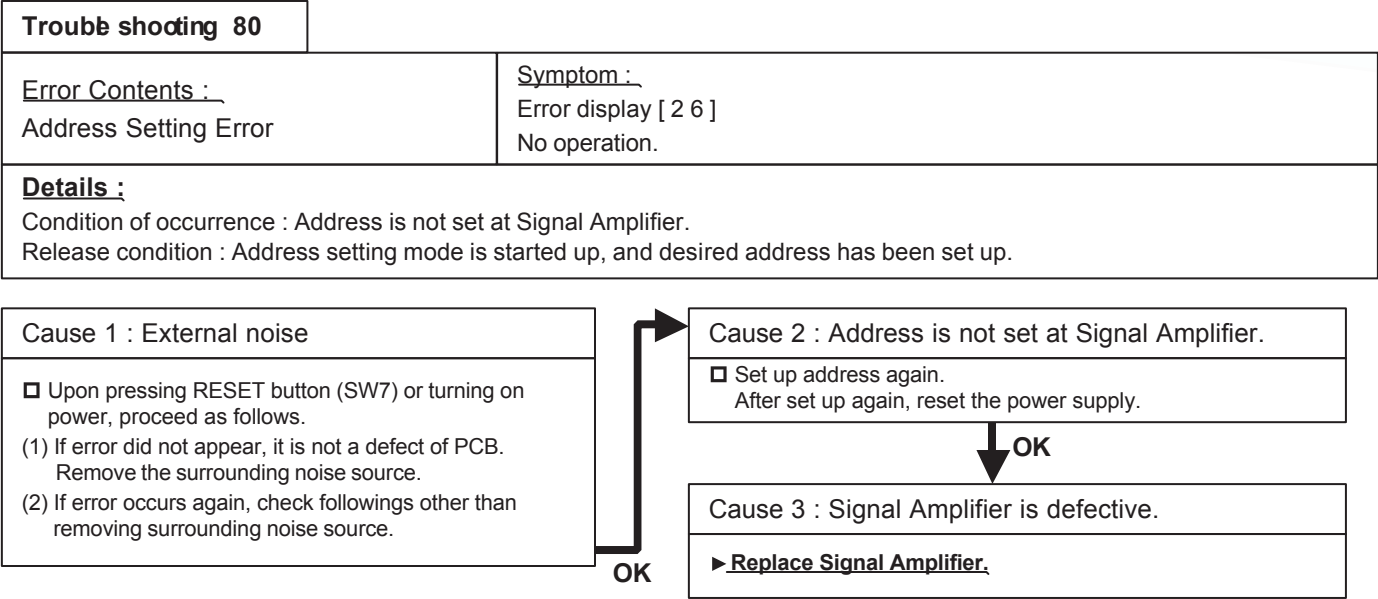

Signal Amplifier (UTY-VSGXZ1)

Trouble shooting 81

Error Contents :

Main PCB Error

Symptom :

Error display [C 1]

No operation.

Details :

Condition of occurrence : Communication error between CPU and Network Driver IC

Release condition : Communication is normal between CPU and Network Driver IC

Cause 1 : External noise

❑ Upon pressing RESET button (SW7) or turning on power, proceed as follows.

(1) If error did not appear, it is not a defect of PCB. Remove the surrounding noise source.

(2) If error occurs again, check followings other than removing surrounding noise source.

OK

Cause 2 : Signal Amplifier is defective.

► Replace Signal Amplifier.

Signal Amplifier (UTY-VSGXZ1)

Trouble shooting 82

Error Contents : Communication Error B

Symptom :
Error display [D9 (Flashing or Lighting)]
No operation.

Details :

Condition of occurrence : Communication error between CPU and Network Driver IC (CH_B side).

Network Driver IC is defective.

Release condition : Communication is normal between CPU and Network Driver IC (CH_B side).

Network Driver IC operation is normal.

Cause 1 : External noise

- ☐ Upon pressing RESET button (SW7) or turning on power, proceed as follows.
- (1) If error did not appear, it is not a defect of PCB. Remove the surrounding noise source.
- (2) If error occurs again, check followings other than removing surrounding noise source.

OK

Cause 2 :Signal Amplifier is defective.

► **Replace Signal Amplifier.**

Signal Amplifier (UTY-VSGXZ1)

Trouble shooting 83

Error Contents : **Communication Error A**

Symptom :
Error display [D14 (Flashing or Lighting)]
No operation.

Details :

Condition of occurrence : Communication error between CPU and Network Driver IC (CH_A side).

Network Driver IC is defective.

Release condition : Communication is normal between CPU and Network Driver IC (CH_A side).

Network Driver IC operation is normal.

Cause 1 : External noise

- ☐ Upon pressing RESET button (SW7) or turning on power, proceed as follows.
- (1) If error did not appear, it is not a defect of PCB. Remove the surrounding noise source.
- (2) If error occurs again, check followings other than removing surrounding noise source.


OK

Cause 2 : Signal Amplifier is defective.


► **Replace Signal Amplifier.**

Network Converter (UTY-VGGXZ1)

Trouble shooting 84	
<u>Error Contents :</u> Power Supply Error	<u>Symptom :</u> No display
<u>Details :</u> Condition of occurrence : Normal power is not supplied. 7 segment indicator is defective. Release condition : Normal power is supplied. 7 segment indicator is normal.	

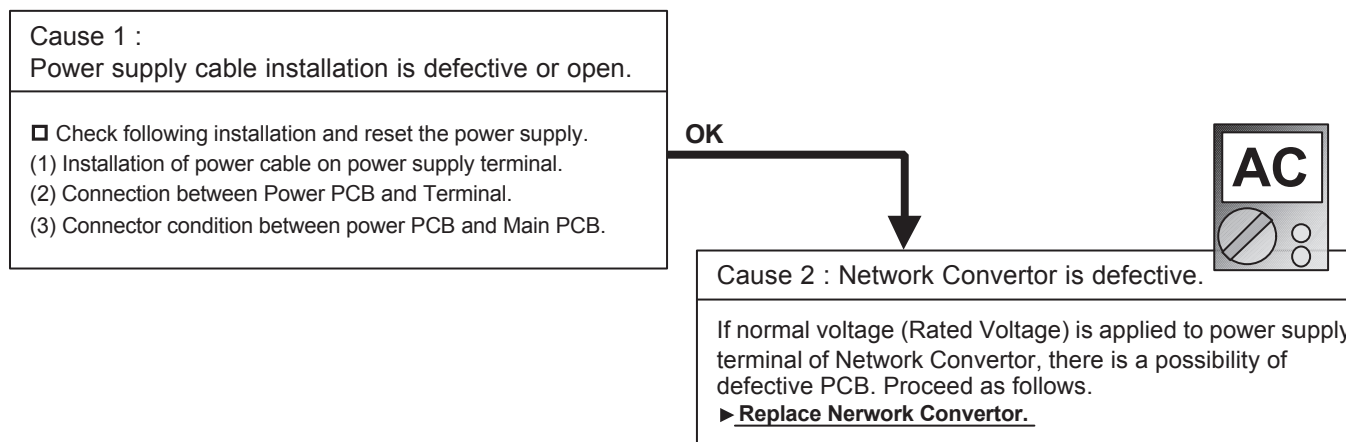

Network Convertor (UTY-VGGXZ1)

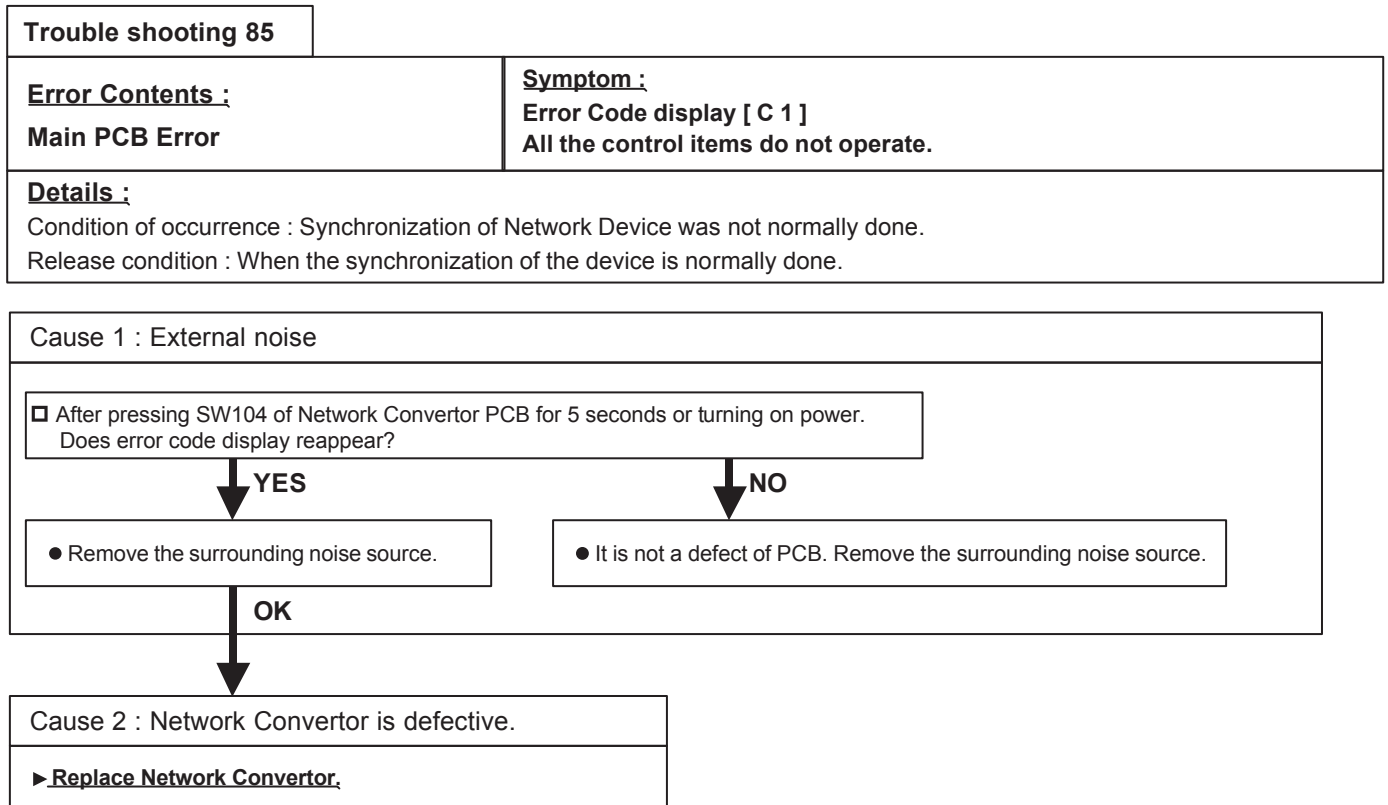

Network Convertor (UTY-VGGXZ1) Group Remote controller Setting

Trouble shooting 86

Error Contents :

**Communication Error
with Group Remote Controller**

Symptom :

**Error Code display [1 2] Control/Display from Group Remote is
not available.**

Details :

Condition of occurrence : The communication between Group Remote and Network Convertor was not normally performed.
Release condition : When the communication between Group Remote and Network Convertor resumes normal operation.

Cause 1 : External noise

☐ After pressing SW104 of Network Convertor PCB for 5 seconds or turning on power.
Does error code display reappear?

YES

- Remove the surrounding noise source.

OK

NO

- It is not a defect of PCB. Remove the surrounding noise source.

Cause 2 :

Defective or open connection of cable wire between Network Convertor and Connected Remote Controller.

After the following are checked, the power supply is reset.

- ☐ Check connection cable wire between Network Convertor and Connected Remote Controller.
- ☐ Check connection between Control PCB and Terminal.

OK

Cause 3 : Incorrect setting of Network Convertor's DIP-SW103[1 to 4]

- ☐ Check Network Convertor PCB DIP-SW103[1 to 4] ON.

OK

Cause 4 : Defective Remote Controller or Network Convertor.

► **Replace Remote Controller or Network Convertor.**

Network Converter (UTY-VGGXZ1) Single Split system setting

Trouble shooting 87

Error Contents :

**Communication Error
with Standard Remote Controller**

Symptom :

**Error Code display [1 2] Control/Display from Standard Remote s
not available. Other controls are left as they are.**

Details :

Condition of occurrence : The communication between Standard Remote Controller and Network Converter was not normally performed.

Release condition : When the communication between Standard Remote Controller and Network Converter resumes normal operation.

Cause 1 : External noise

- ☐ After pressing SW104 of Network Converter PCB for 5 seconds or turning on power.
Does error code display reappear?

YES

- Remove the surrounding noise source.

OK

NO

- It is not a defect of PCB. Remove the surrounding noise source.

Cause 2 :

Defective or open connection of cable wire between Network Converter and Connected Remote Controller.

After the following are checked, the power supply is reset.

- ☐ Check connection cable wire between Network Converter and Connected Remote Controller.
- ☐ Check connection between Control PCB and Terminal.

OK

Cause 3 : Incorrect setting of Network Converter's DIP-SW107[2] (Wired RC Validity setting)

- ☐ Check Network Converter PCB DIP-SW107[2].

OK

Cause 4 : Incorrect selection of Remote Controller

- ☐ Check connection Remote Controller. (Is it specified with the Installation Manual of Network Converter?)

OK

Cause 5 :

Incorrect setting of Remote Controller's DIP-SW (Number of connected remote controllers)

- ☐ Check DIP-SW of Remote Controller.

OK

Cause 6 : Defective Remote Controller or Network Converter.

- **Replace Remote Controller or Network Converter.**

Network Converter (UTY-VGGXZ1)

Trouble shooting 88

Error Contents :

Peripheral device Communication abnormal

Symptom :

Error Code display [1 6]

All the control items do not operate.

Details :

Condition of occurrence : The communication between Indoor unit and Network Converter was not performed normally.

Release condition : When the communication with Indoor unit is resumed normally.

Cause 1 : External noise

- ☐ After pressing SW104 of Network Converter PCB for 5 seconds or turning on power.
Does error code display reappear?

YES

- Remove the surrounding noise source.

OK

NO

- It is not a defect of PCB. Remove the surrounding noise source.

Cause 2 :

Defective or open connection of Remote Control cable between Network Converter and Indoor Unit.

After the following are checked, the power supply is reset.

- ☐ Check connection cable wire between Network Converter and Indoor unit.
- ☐ Check connection between Control PCB and Terminal.

OK

Cause 3 : Power to Indoor unit is shut down.

- ☐ Check the power to Indoor unit.

OK

Cause 4 : Incorrect setting of main unit address of Indoor unit.

- ☐ Check main unit address setting of Indoor unit.

OK

Cause 5 : Incorrect setting of DIP-SW of Network Converter. Mis-read of Indoor unit type and RC type.

- ☐ Check DIP-SW103[1 to 8] of Network Converter (Indoor unit type, RC type, number of Indoor units connected.)
- ☐ Check Indoor unit type and RC type of all Indoor units connected to Network Converter.

OK

Cause 6 : Defective PCB of Indoor unit or Network Converter.

- **Replace PCB of Controller PCB or Network Converter.**

Network Converter (UTY-VGGXZ1)

Trouble shooting 89

Error Contents : **Software Error**

Symptom :
Error Code display [C A]
All the control items do not operate.
Other Controls are left they are.

Details :

Condition of occurrence : Micon program performed an abnormal control.
Error of inside information of EEPROM.
initial setting of Network Converter PCB was not normally performed.

Release condition : Micon has been reset, and the control of Network Converter became normal.
When error disappeared and Network Converter becomes available to control.

Cause 1 : External noise

- ☐ Check continuation of error.
(1) If error is released automatically, it is not a defect of PCB. Remove the surrounding noise source around Network Converter.
(2) If error is not released automatically, check followings.

OK

- ☐ After pressing SW104 of Network Converter PCB for 5 seconds or turning on power.
Does error code display reappear?

YES

- Remove the surrounding noise source.

OK

NO

- It is not a defect of PCB. Remove the surrounding noise source.

Cause 2 : Network Converter is defective.

► **Replace Network Converter.**

Network Convertor (UTY-VGGXZ1)

Trouble shooting 90

Error Contents :
Refrigerant circuit address setting error

Symptom :
Error Code display [2 6]

Details :

Condition of occurrence : Indoor unit registration is 3 refrigerant circuits or more.
Release condition : Indoor unit registration is 2 refrigerant circuits or less.

Cause 1 : Check of number of indoor unit registration refrigerant circuits

☐ Check indoor unit registration.
(1) Number of refrigerant circuits of indoor unit registered at Replace Group Remote Controller is 3 refrigerant circuits or more even though connected to one converter.

YES

☐ Make 2 refrigerant circuits or less and wait 2 minutes

NO

☐ Replace Network Convertor
Replace Group Remote Controller

Trouble shooting 91	Group Remote Controller (UTY-CGGY / CGGG)
Error Contents : Group remote controller hardware Error	Symptom : Error Code display [C 4] OPERATION LED is flashing.
Details : Condition of occurrence : When EEPROM can not be written, or the control port does not operate. Release condition : Power is reset.	

Cause 1 : Remote Controller is defective.
► <u>Replace Group Remote Controller.</u>

Trouble shooting 92

Group Remote Controller (UTY-CGGY / CGGG)

Error Contents :**Remote controller Communication Error****Symptom :****Error Code display [1 2]****OPERATION LED is flashing.****Details :**

Condition of occurrence :

The valid signal has not been received from the convertor more than 90 seconds after the communication line became valid.

Release condition : Valid signal is received from Convertor.

Cause 1 : Connection failure

- ☐ Check power to the convertor.
- ☐ Check connection of remote control line between controller and convertor.

**OK****Cause 2 : Check outside cause (Voltage drop or noise, etc.)**

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line (Neon bulb or electric equipment that may cause harmonic wave).

**OK****Cause 3 : Remote Controller is defective.**

- **Replace Group Remote Controller.**

Trouble shooting 93	Group Remote Controller (UTY-CGGY / CGGG)
Error Contents : Address Setting Error	Symptom : Error Code display [2 6] OPERATION LED is flashing.
Details : Condition of occurrence : 1. No Indoor unit is registered. Release condition : 1. The key to enter the function selection process is pressed. TIME< key and TIME> key are simultaneously kept pressed. 2. It automatically initializes by itself. After that, it is released by pressing the key to enter the function selection process.	

Cause 1 : Setting failure
<input type="checkbox"/> Register Indoor units again by entering to the function selection mode. (Keep pressing TIME< key and TIME> key. (Refer to the installation manual for the remote controller.)

Trouble shooting 94

Group Remote Controller (UTY-CGGY / CGGG)

**Error Contents :
Scan Error****Symptom :****Error Code display [1 5]
OPERATION LED is flashing.****Details :**

Condition of occurrence :

1. Registration started within 4 minutes after power ON
2. Indoor unit refrigerant system registered at controller connected to converter reached 3 or more ([26] error generated at converter)
3. Only the slave unit is registered. (Main unit is not registered.)
4. Indoor unit which is not existing was registered.
5. Outdoor unit is not set in the same refrigerant circuit as the indoor unit.

Release condition : Registered contents have been changed by SELECT key, DAY key, Timer Mode key (DELETE key).

Cause 1 : Conditions check

- ☐ Check if 4 minutes or more after starting
- ☐ Clear when [26] error generated at converter.
- ☐ Check if refrigerant systems do not become 3 or more by this indoor unit registration.

**Cause 2 : Setting failure**

- ☐ Recheck the registered contents.(Register the main unit.)
- ☐ Check Indoor unit DIP-SW, R-SW
- ☐ Check outdoor unit R-SW.

**Cause 3 : Connection failure**

- ☐ Check transmission cable
- ☐ Check if Indoor or Outdoor unit power line is disconnected.
- ☐ Check if the convertor power line is disconnected.
- ☐ Check connection between controller and the convertor.

**Cause 4 : Check outside cause (Voltage drop or noise, etc.)**

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line (Neon bulb or electric equipment that may cause harmonic wave).

**Cause 5 : Remote Controller is defective.**

- **Replace Group Remote Controller.**

Trouble shooting 95

Group Remote Controller (UTY-CGGY / CGGG)

Error Contents :**Network communication Error****Symptom :****Error Code display [1 4]****OPERATION LED is flashing.****Details :**

Condition of occurrence :

When the signal is cut off for more than 10 minutes from the registered Indoor unit (not including Slave unit).

Release condition : 1. The signal has been received from the Indoor units that was creating the error.

2. MPU has been booted up. (Release from the reset operation, the power failure stand-by operation.)

Cause 1 : Connection failure

- ☐ Check transmission cable
- ☐ Check disconnected power line for Indoor unit.
- ☐ Check if convertor power line is disconnected.

**Cause 2 : Check outside cause (Voltage drop or noise, etc.)**

- Instant drop ----- Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure ----- Check if there is a defective contact or leak current in the power supply circuit.
- Noise ----- Check if there is any equipment causing harmonic wave near electric line (Neon bulb or electric equipment that may cause harmonic wave).

**Cause 3 : Remote Controller is defective.**

- Replace Group Remote Controller.

Trouble shooting 96

Error Contents :
Incompatible Indoor Unit is Connected

Symptom :
Error Code display [1 5]

Details :

Condition of occurrence : When information was not obtained from indoor unit
Release condition : When information was obtained from indoor unit

Cause 1 : Check remote controller master/slave setting.

- ☐ For the check and modification methods, refer to the remote controller (including external SW) installation manual.
- ☐ When there is 1 remote controller, check whether or not it is set as the master remote controller.
- ☐ When there are 2 remote controllers, check if one side is the master remote controller and the other side is the slave remote controller.
- ☐ When there are 1 remote controller and 1 external switch controller, check if the remote controller is master controller and the external switch controller is slave controller.



Cause 2 : Check connection

- ☐ Check cable
- ☐ Check indoor unit power supply



Cause 3 : Noise

- ☐ Source around cable



Cause 4 : Remote controller trouble

- ☐ Replace remote controller.



Cause 5 : Indoor unit PCB trouble

- ☐ Change Controller PCB and set up the original address.


Trouble shooting 97	
<u>Error Contents :</u> Thermo Sensor Error	<u>Symptom :</u> Thermostat Sensor display is flashing.
<u>Details :</u> Condition of occurrence : Thermistor in remote controller is open or shorted. Release condition : Thermistor in remote controller is not open or shorted.	
Cause 1 : Remote controller internal thermistor trouble	
<input type="checkbox"/> Replace remote controller.	

4-4 SERVICE PARTS INFORMATION

SERVICE PARTS INFORMATION 1

Compressor

Diagnosis method of Compressor (If Outdoor Unit 7 segment LED displays Error, refer to Trouble shooting)

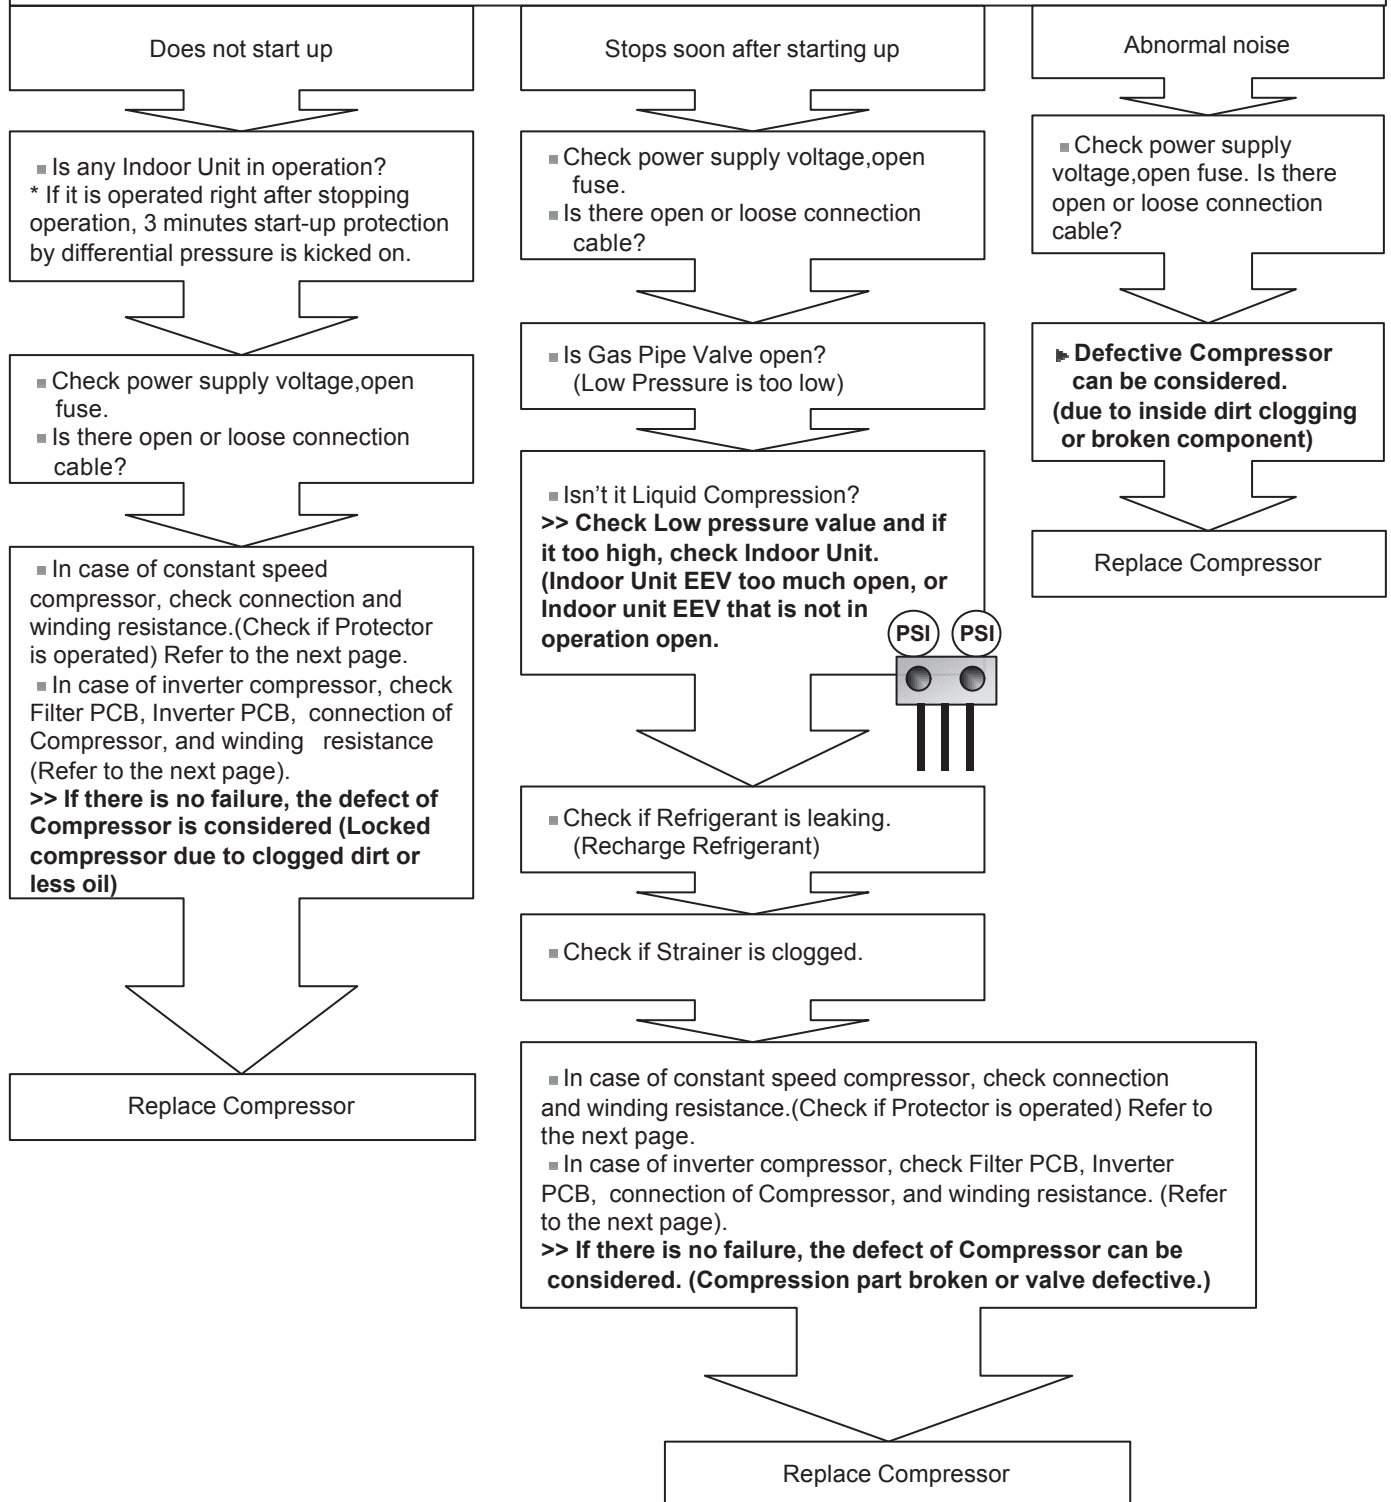


SERVICE PARTS INFORMATION 2


Inverter Compressor

Check Point 1 : Check Connection

□ Check terminal connection of Compressor (loose or incorrect wiring)

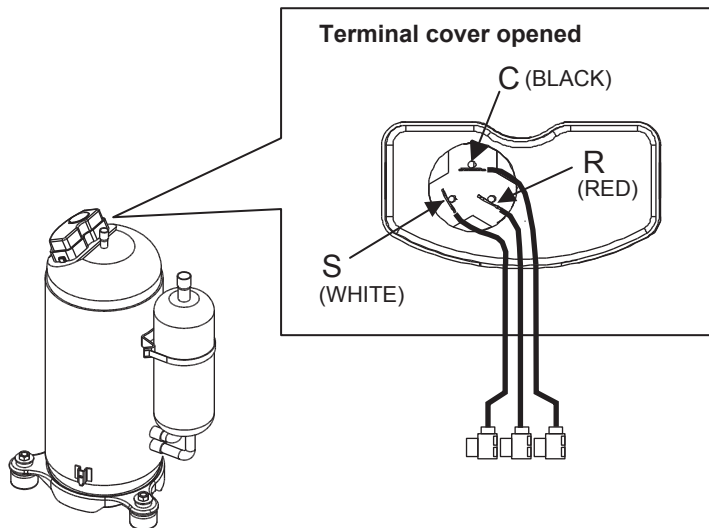


□ Check connection of Inverter PCB (Loose or incorrect wiring)

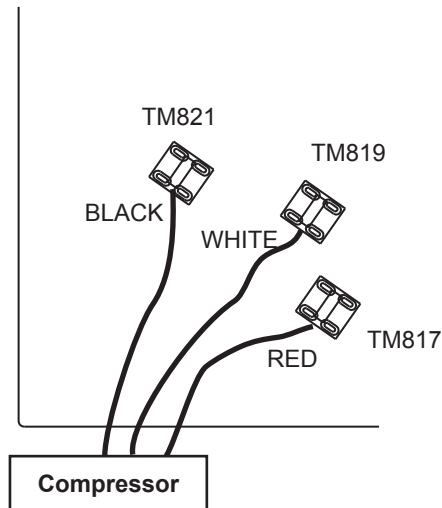

Check Point 2 : Check Winding Resistance

□ Check winding resistance of each terminal

► If the resistance value is 0Ω or infinite, replace Compressor.

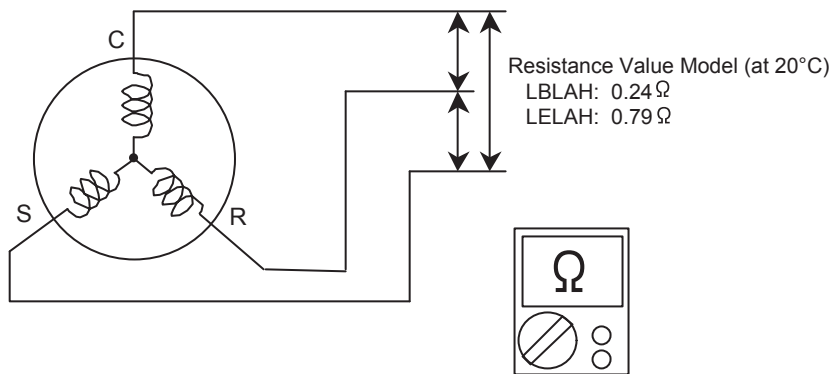

Attention!!

If Check 1, 2 are normal, make sure the following points.

(1) Check AC voltage among each terminals from filter PCB to inverter PCB.
(Rated voltage among L1, L2 (Single Phase model), L1, L2, L3 (3Phase model))

► If it does not appear, check the power supply terminal.

(2) Check Voltage from Main PCB to Inverter PCB.
(DC13.5 - 16.5V between terminals of CN126 (1-2) connector
and DC (-12.0) - (-8.0)V between terminals of CN126 (3-2) connector of Main PCB).

Except 3Phase model

► If it does not appear, replace Main PCB.


◆ If both of above voltages appear, it is considered to be Inverter PCB circuit failure.
Replace Inverter PCB and check operation.



SERVICE PARTS INFORMATION 3

Main PCB
Filter PCB


For Single Phase Model

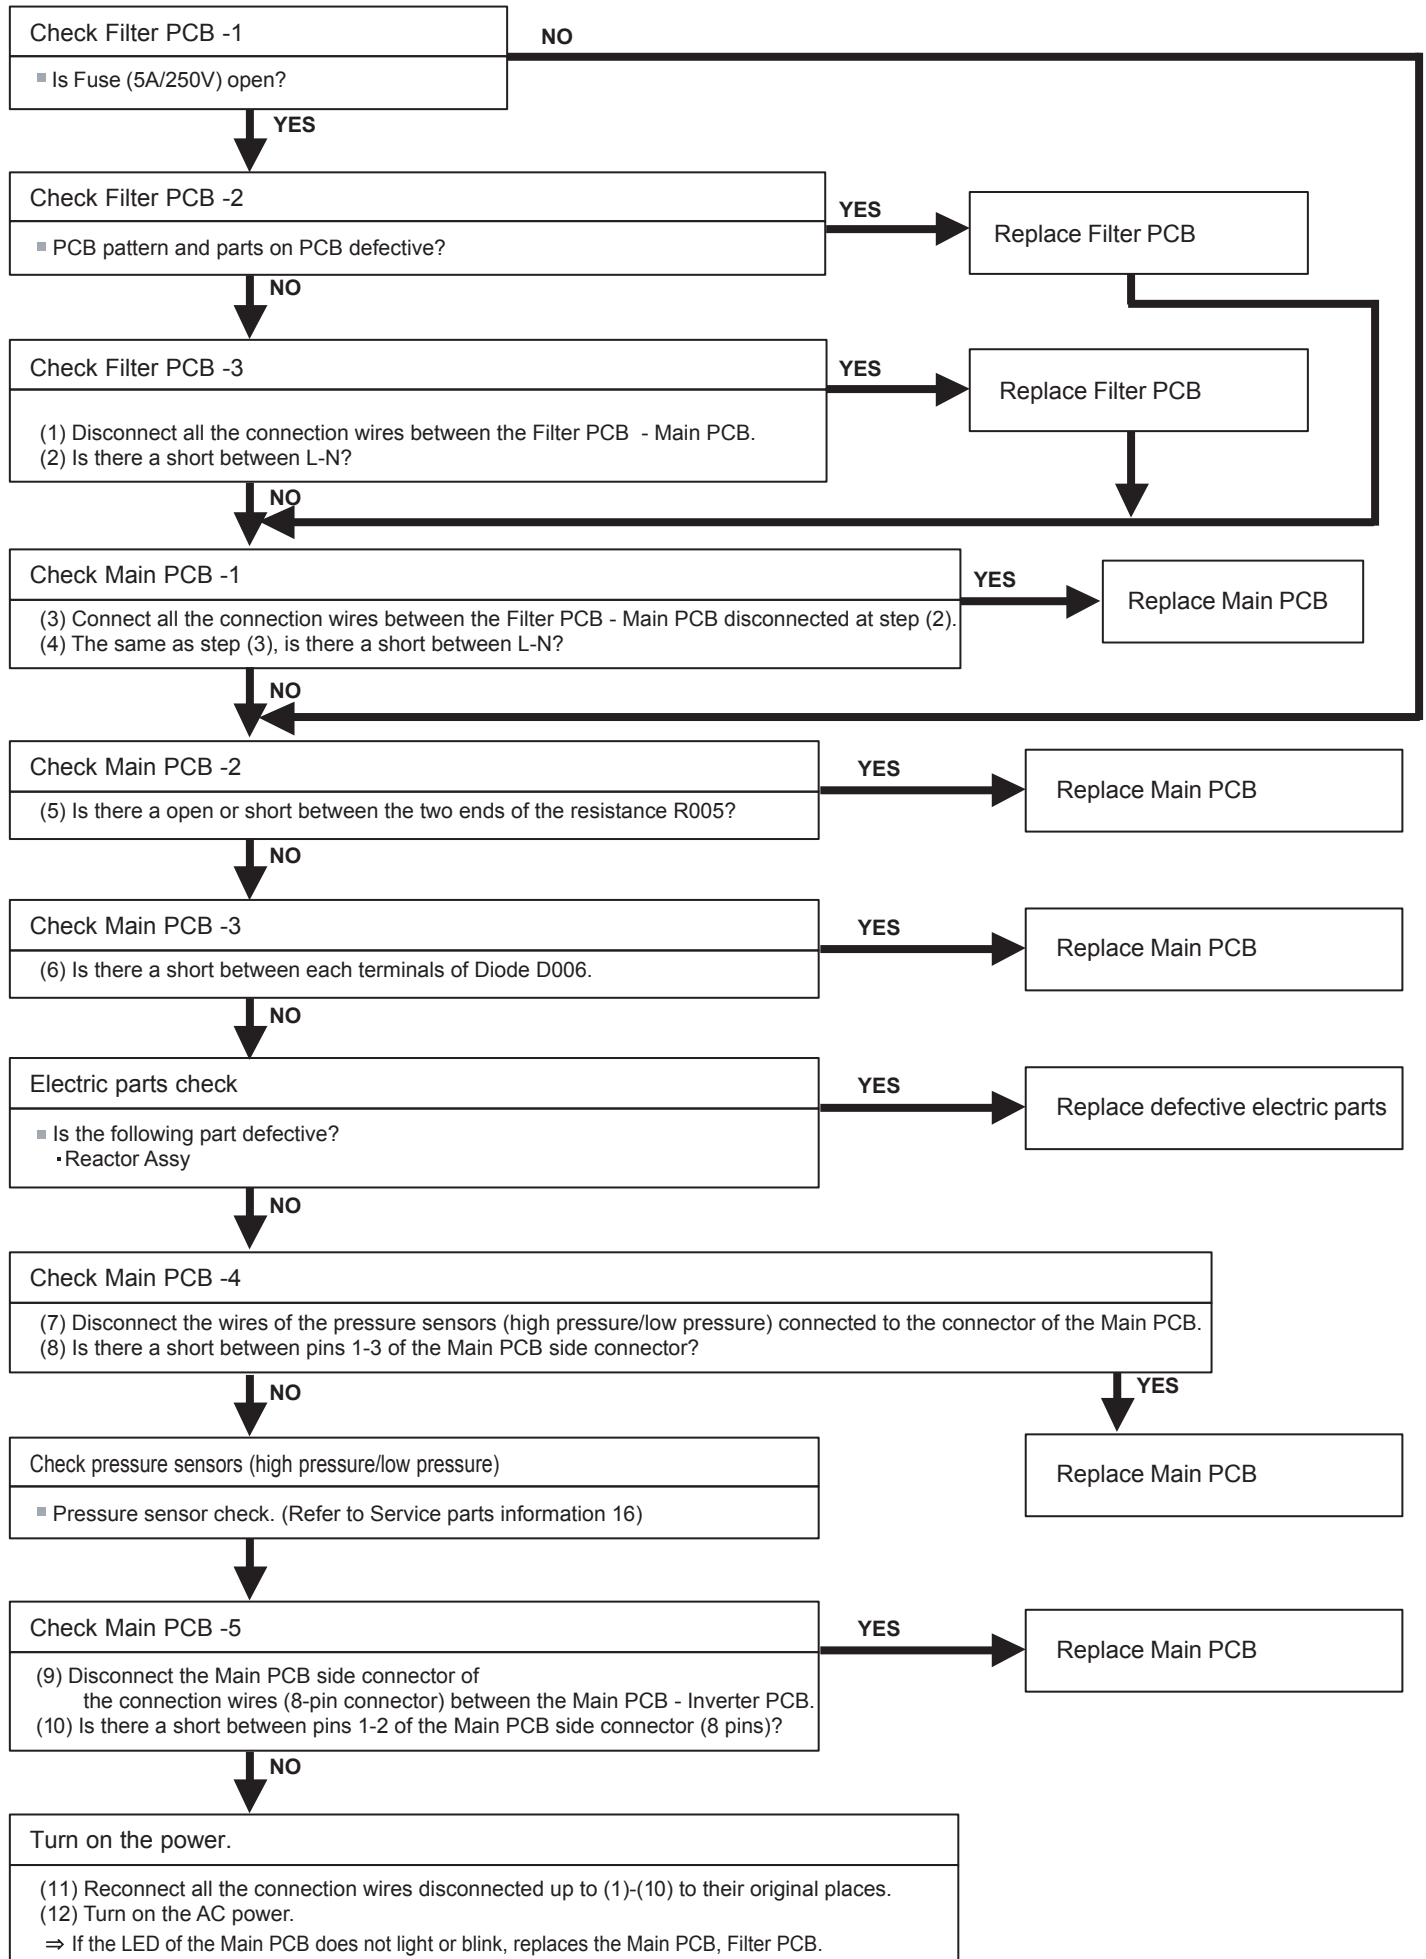

SERVICE PARTS INFORMATION 3-1

**Main PCB
Filter PCB**

For 3 Phase Model

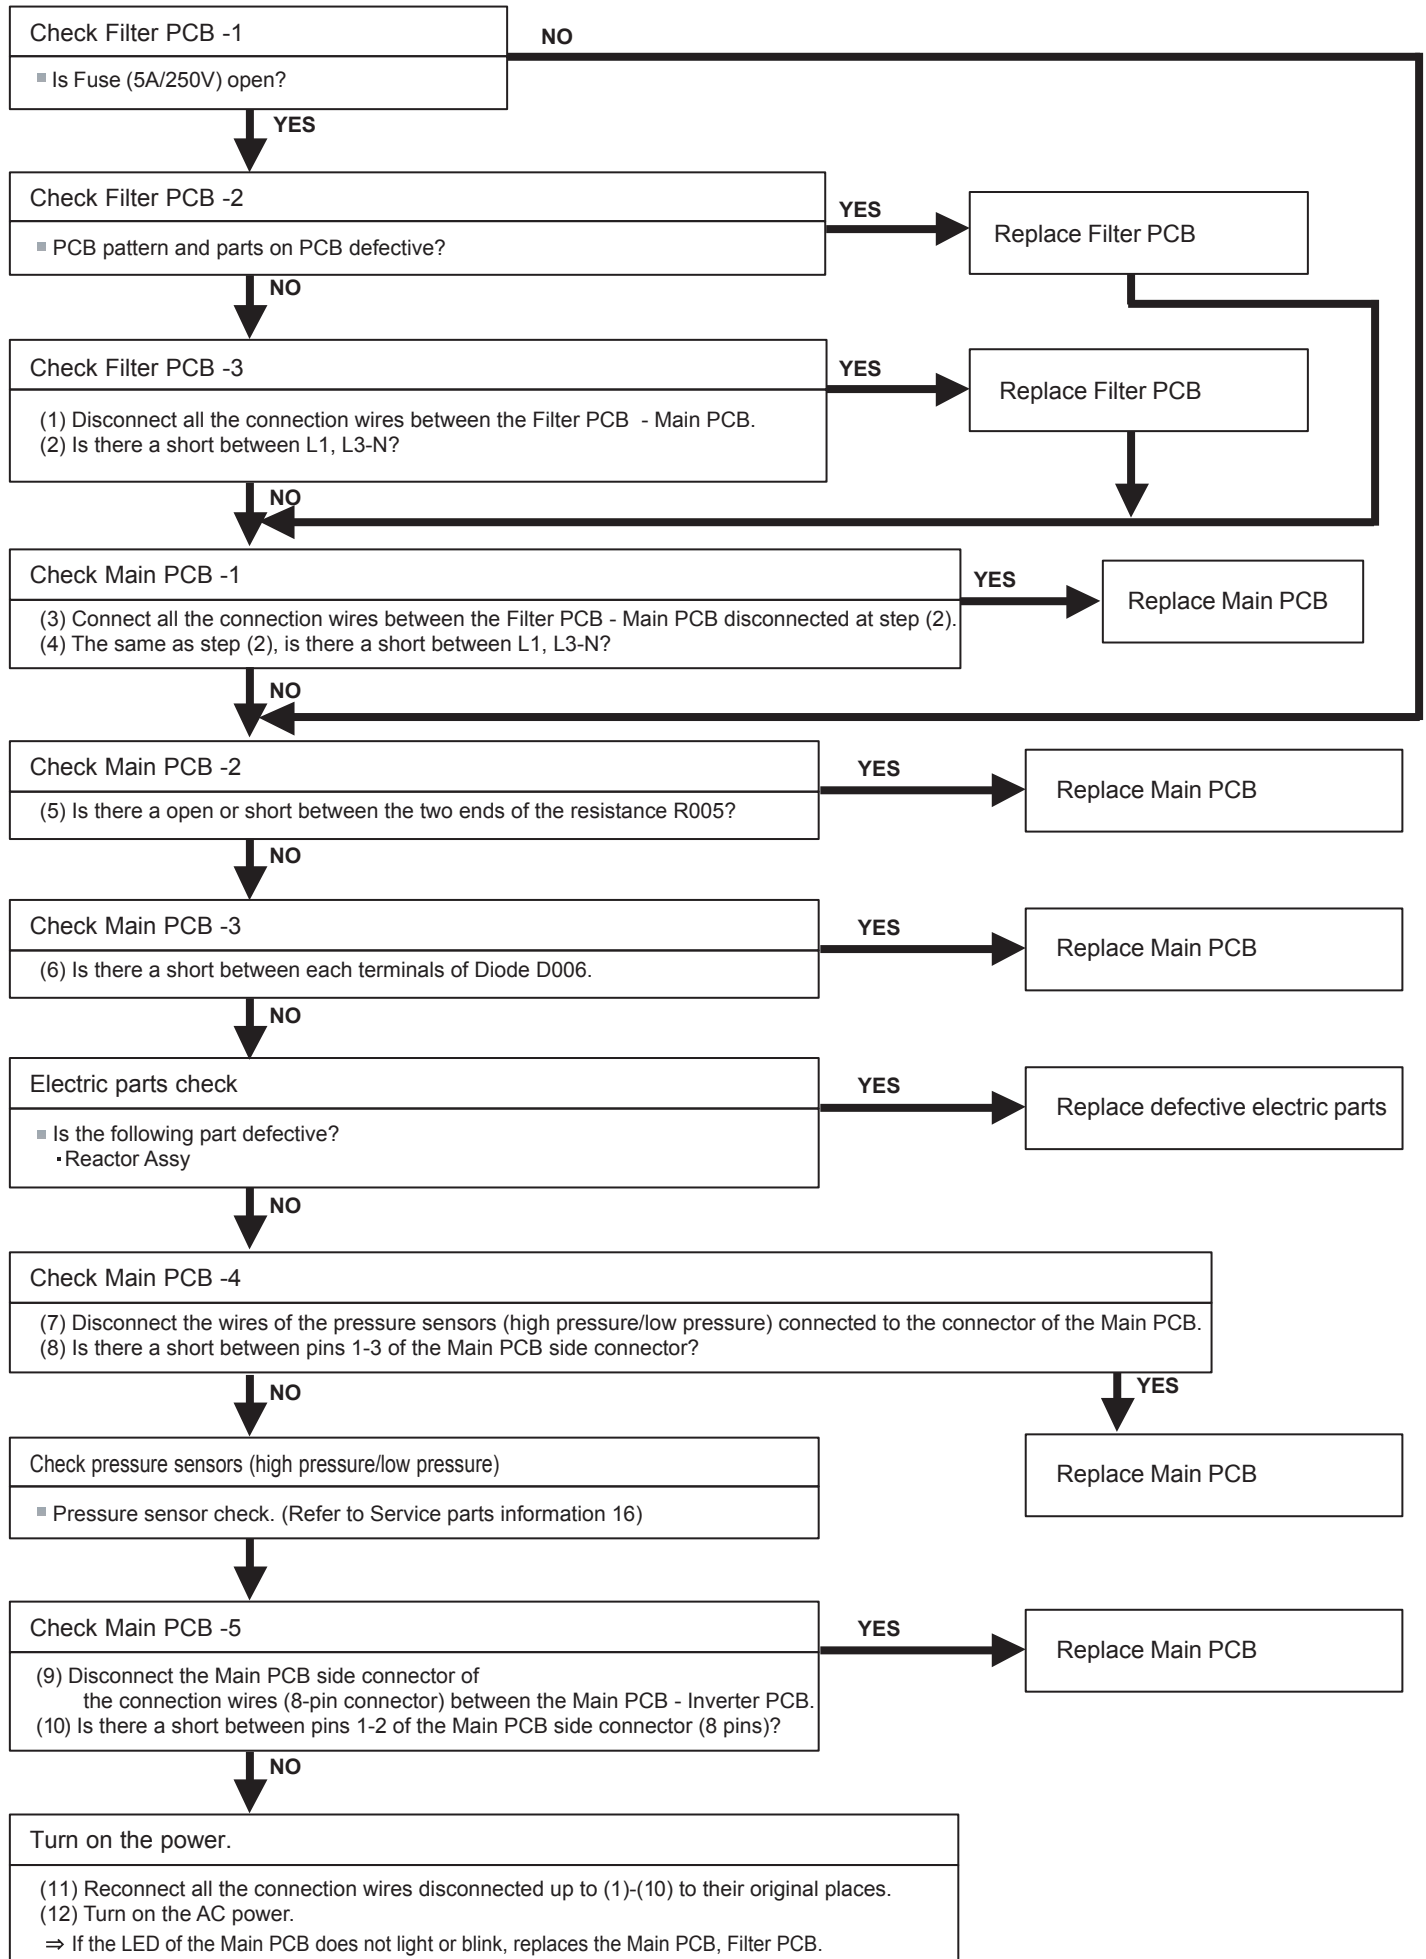


SERVICE PARTS INFORMATION 4

Inverter PCB

Filter PCB

For Single Phase Model

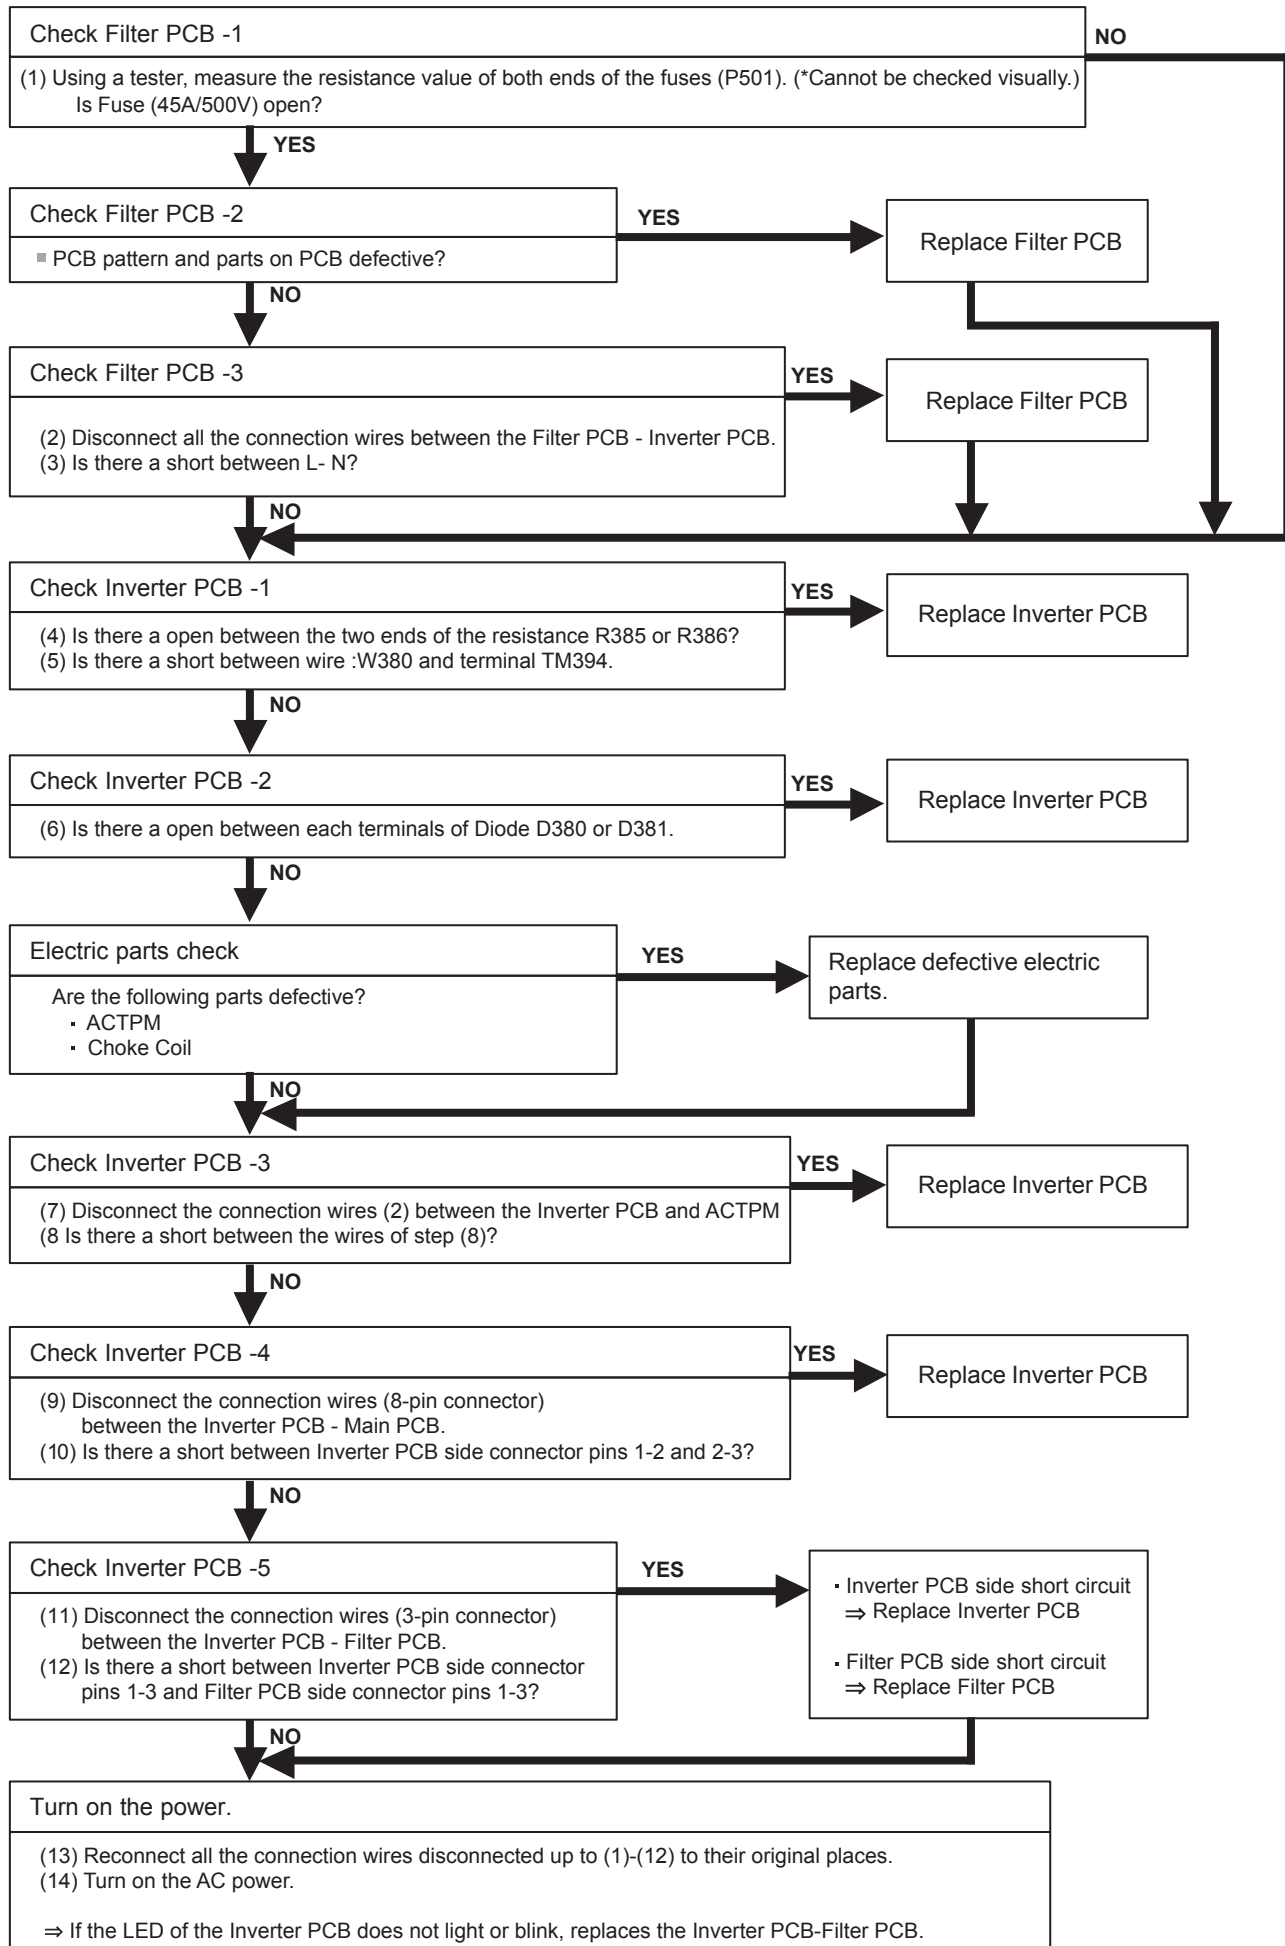


SERVICE PARTS INFORMATION 4-1

Inverter PCB

Filter PCB

For 3 Phase Model

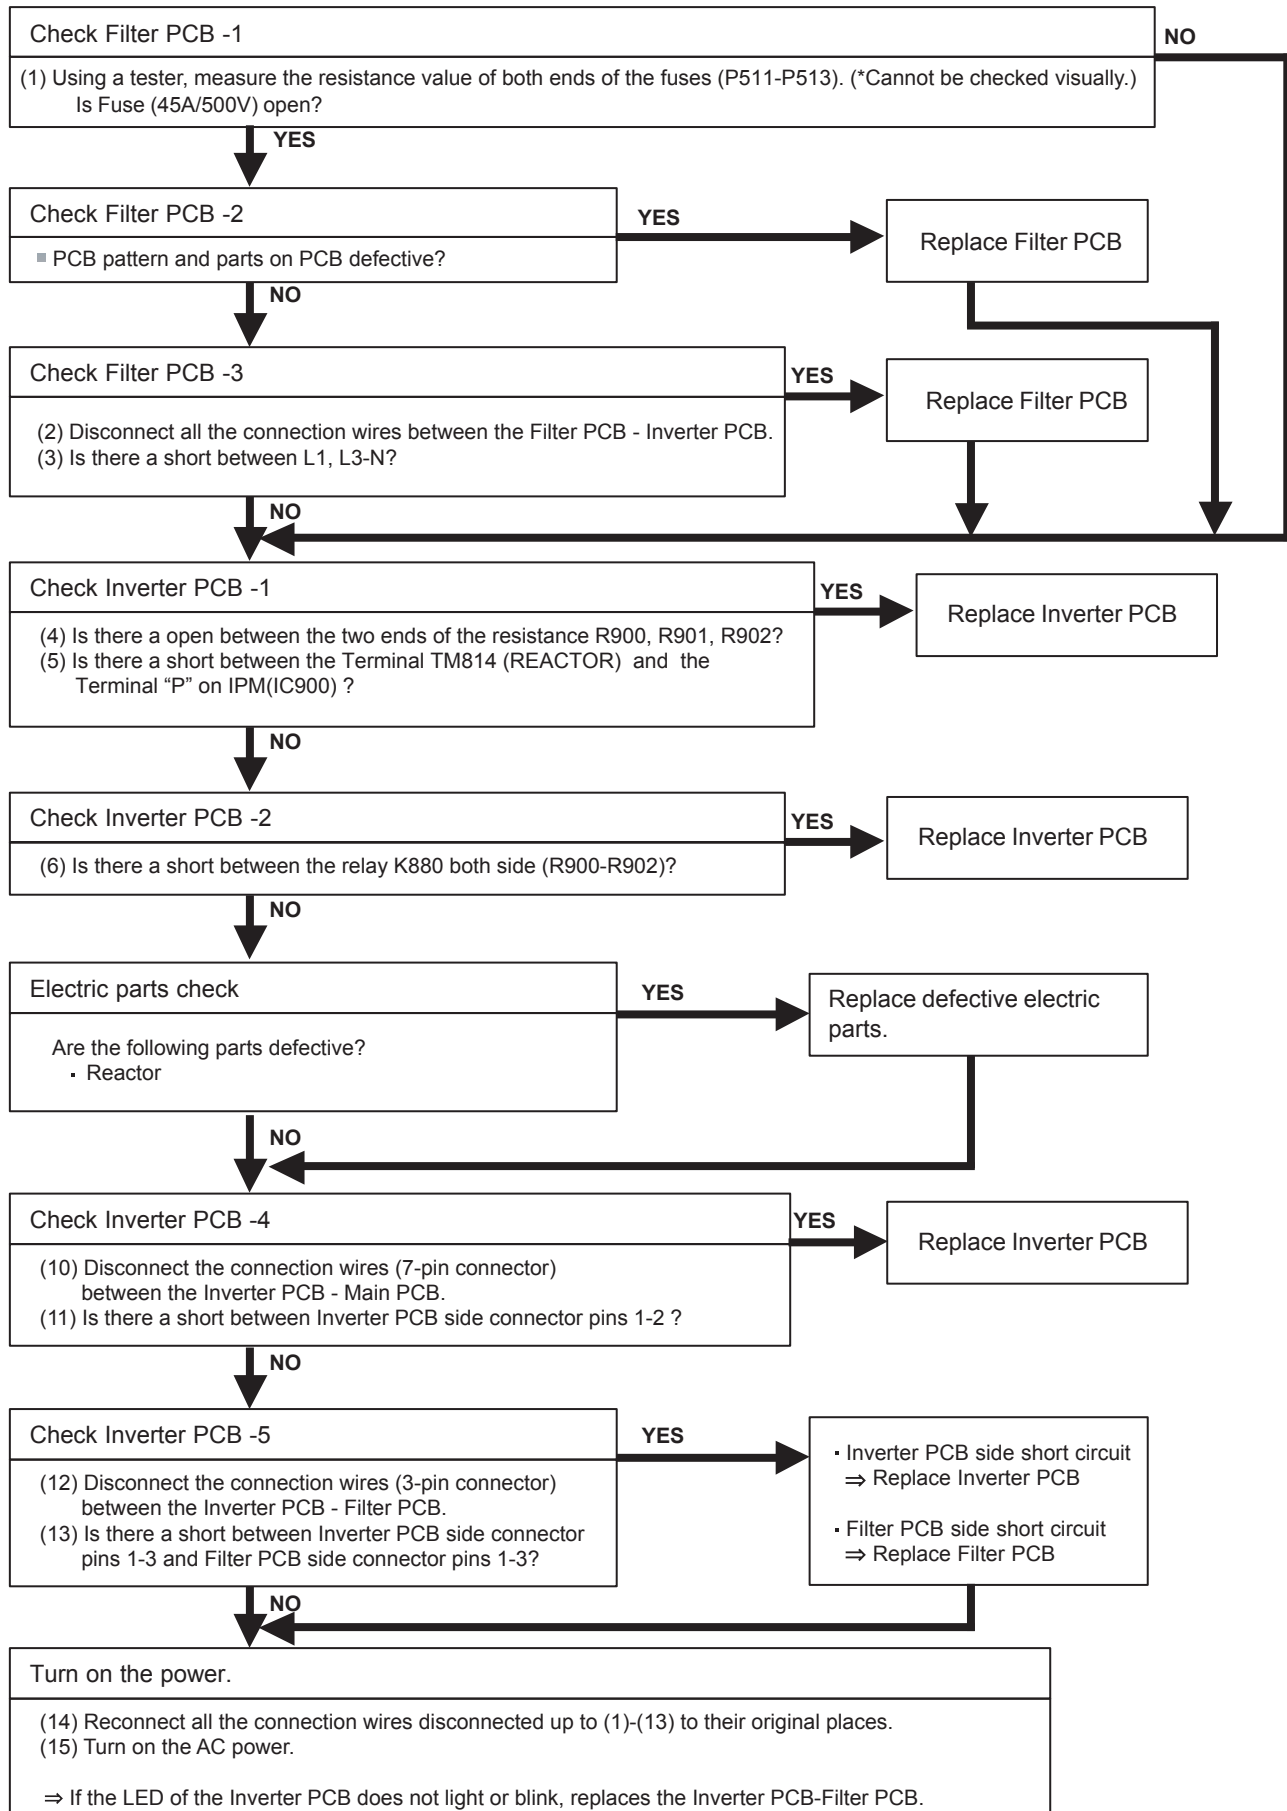

SERVICE PARTS INFORMATION 5

IPM

(Mounted on Inverter PCB)

Check Point 1

- ① Disconnect the connection wires between the Inverter PCB - ACTPM and Inverter PCB - Inverter Compressor.
- ② Set the tester to the "Resistance" mode, and measure the resistance between the following terminals.

P - Terminals U / V / W


N - Terminals U / V / W

Terminal	U	V	W	P	N
Model LBLAH	TM403	TM404	TM405	TM392	TM393
Model LELAH	TM817	TM819	TM821	Solder*	Solder*


- ③ Judge the result of ② as follows:

All 6 points several MΩ or greater	: Normal
1 or more points several kΩ to short	: Defective

Inverter PCB: LBLAH

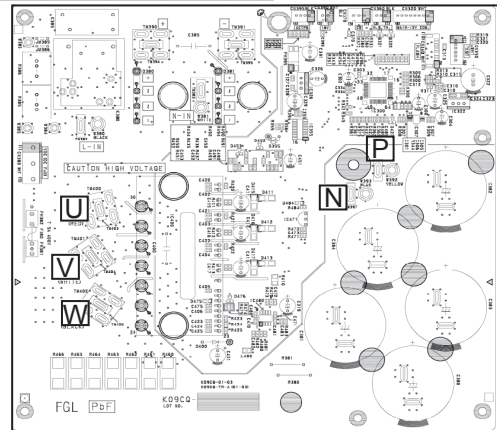

Inverter PCB: LELAH

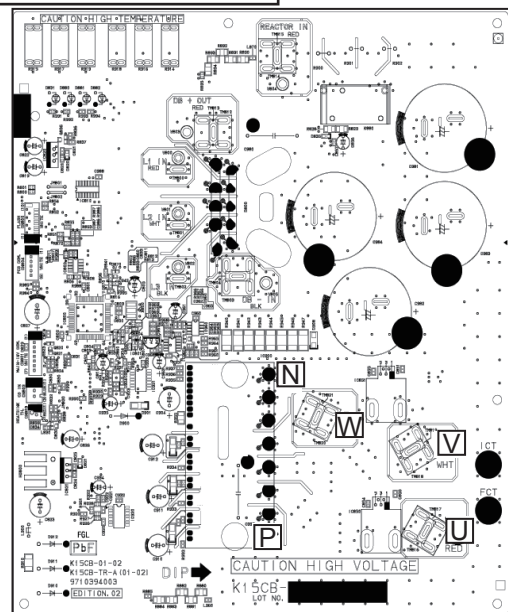

Check Point 2

- ④ Set the tester to the "Diode" mode, and measure the voltage value between the following terminals.

Tester +side (red)	Tester - side (black)	Tester display [V]
Terminal U	(P)	
Terminal V		
Terminal W		
(N)	Terminal U	
	Terminal V	
	Terminal W	

- ⑤ Judge the result of ④ as follows:

All 6 points several 0.3V to 0.7V	: Normal
1 or more points under 0.1V or over load	: Defective

SERVICE PARTS INFORMATION 6

Choke Coil / Reactor assy (INV)

Reactor assy (DC Fan)


Check Point 1 : Appearance check

- No fissures, breaks, damage, etc. at the body and winding section, terminals section?

Check Point 2 : Electric check




For AJ*040, 045LBLAH

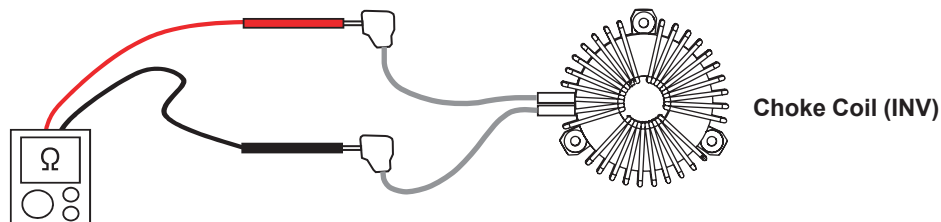


Choke Coil (INV)

For AJ*054LBLAH

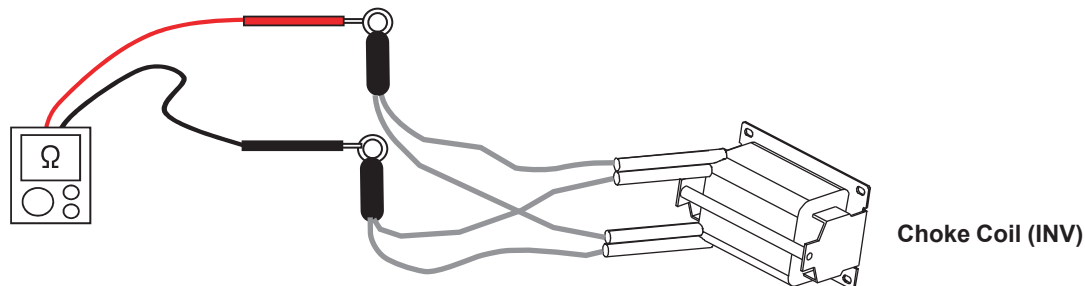


Choke Coil (INV)

For AJ*040, 045, 054LELAH

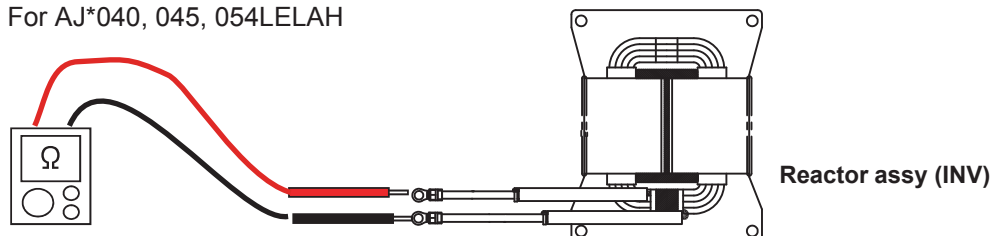

Reactor assy (INV)

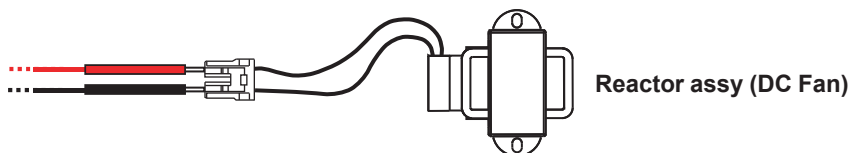

Reactor assy (DC Fan)

- ① Set the tester to the "Resistance" mode, and check for open/short between both ends of the reactor wire (or connector).
- ② Judge the result of ① as follows:

Short	: Normal
Open	: Abnormal (open)

SERVICE PARTS INFORMATION 7


Terminal

Check Point 1 : Appearance check

- ☐ No fissures, breaks, damage, etc. at the body and terminals section?
- ☐ Not clogged with foreign matter?
- ☐ Are there no abnormalities at threaded parts (Stripped threads, deformation, damage, etc.) ?

Check Point 2 : Electric check

- ☐ No short between adjacent terminals?
- ☐ Conducts before and after same terminal?

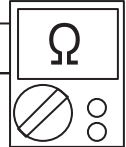


SERVICE PARTS INFORMATION 8-1

Indoor Unit Electronic Expansion Valve (EEV)

Check Point 1 : Check Connections

- Check Connectors (Loose connector or open cable.)

**Slim duct, High static pressure duct,
Outdoor air unit, Cassette, Wall mount,
Vertical air handler(it not have "BROWN wire").**

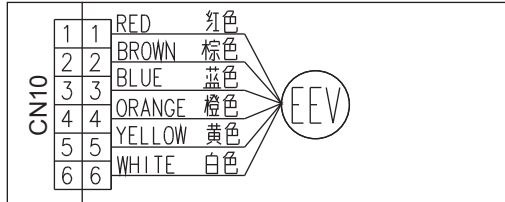

* DX-Kit : CN11

Floor/ Ceiling, Ceiling, Compact Wall mount



Check Point 2 : Check Coil of EEV

- Remove connector, check each winding resistance of Coil.

Read wire	Resistance value 68°F(20°C)
White - Red	200 ± 10% Ω
Yellow - Brown	
Orange - Red	
Blue - Brown	

► **If Resistance value is abnormal, replace EEV.**

Check Point 3 : Check Noise at start up

Turn on Power and check operation noise.

>> **If an abnormal noise does not show, replace Controller PCB.**

Check Point 4 : Check Voltage from Controller PCB


- Remove Connector and check Voltage (DC12V).

>> **If it does not appear, replace Controller PCB.**

Check Point 5 : Check Opening and Closing Operation of Valve


When Valve is closed,
it has a temp. difference between Inlet and Outlet.

CLOSE
Example : Hot Gas

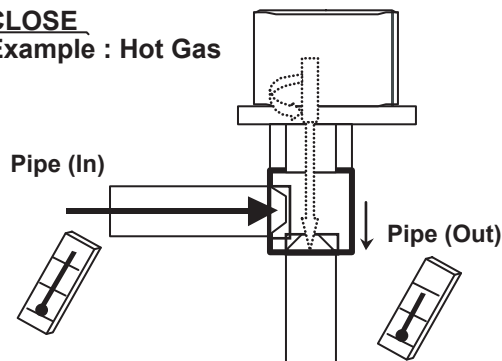



If it is open,
it has no temp. difference between Inlet and Outlet.

OPEN
Example : Hot Gas

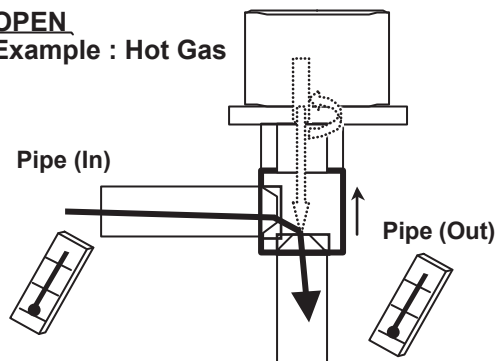

Check Point 6 : Check Strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in (1), but if there is a difference as shown in (2), there is a possibility of inside clogged. In this case, replace Strainer.

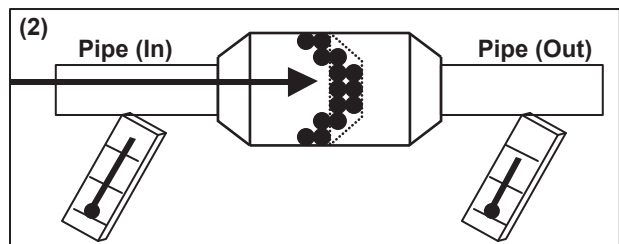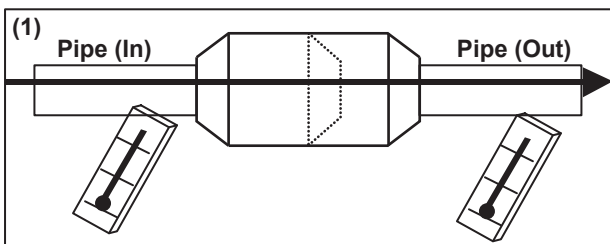


SERVICE PARTS INFORMATION 8-2

Indoor Unit Electronic Expansion Valve (EEV)

Check Point 1 : Check Connections

❑ Check Connectors (Loose connector or open cable.)

Cassette (AUXK018 - 030GLAH,
AUXM018 - 030GLAH)
Compact Floor (AG*A004 - 014GCAH)
Compact Wall mount (AS*A004 - 009GTAH)
Wall mount (AS*A030GTAH)

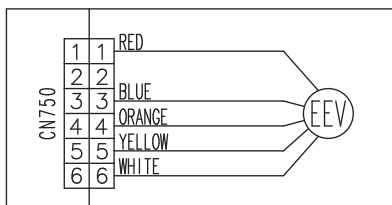

Compact Slim Duct (ARXK04 - 24GCLH)



Check Point 2 : Check Coil of EEV

❑ Remove connector, check each winding resistance of Coil.

Read wire	Resistance value (20°C)
White - Red	$46 \pm 10\% \Omega$
Yellow - Red	
Orange - Red	
Blue - Red	



► If Resistance value is abnormal, replace EEV.

Check Point 3 : Check Noise at start up

Turn on Power and check operation noise.

>> If an abnormal noise does not show, replace Controller PCB.

Check Point 4 : Check Voltage from Controller PCB

❑ Remove Connector and check Voltage (DC12V).


>> If it does not appear, replace Controller PCB.



Check Point 5 : Check Opening and Closing Operation of Valve


When Valve is closed,
it has a temp. difference between Inlet and Outlet.

CLOSE
Example : Hot Gas

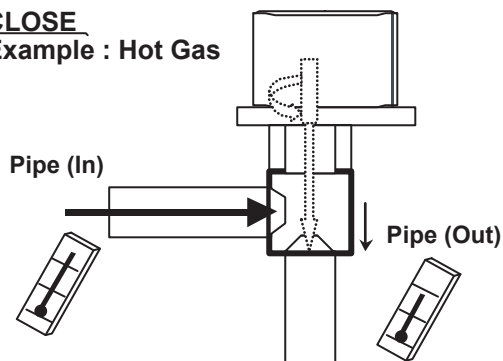



If it is open,
it has no temp. difference between Inlet and Outlet.

OPEN
Example : Hot Gas

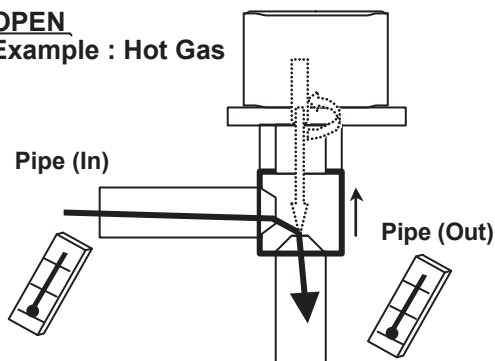

Check Point 6 : Check Strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in (1), but if there is a difference as shown in (2), there is a possibility of inside clogged. In this case, replace Strainer.

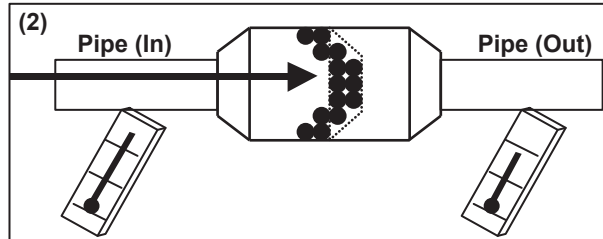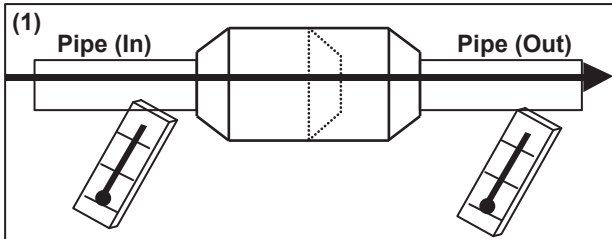


SERVICE PARTS INFORMATION 8-3

Indoor Unit Electronic Expansion Valve (EEV)

Check Point 1 : Check Connections

- ❑ Check Connectors (Loose connector or open cable.)


Cassette (AUXK034 - 054GLAH)
Wall mount (AS*A034GTAH)

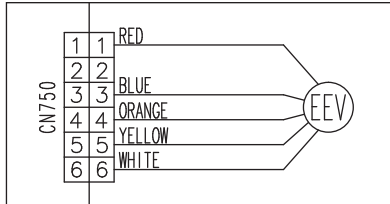

Check Point 2 : Check Coil of EEV

- ❑ Remove connector, check each winding resistance of Coil.

Read wire	Resistance value (20°C)
White - Red	150 ± 10% Ω
Yellow - Red	
Orange - Red	
Blue - Red	

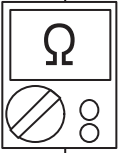

► **If Resistance value is abnormal, replace EEV.**

Check Point 3 : Check Noise at start up

Turn on Power and check operation noise.

>> **If an abnormal noise does not show, replace Controller PCB.**

Check Point 4 : Check Voltage from Controller PCB

- ❑ Remove Connector and check Voltage (DC12V).


>> **If it does not appear, replace Controller PCB.**



Check Point 5 : Check Opening and Closing Operation of Valve


When Valve is closed,
it has a temp. difference between Inlet and Outlet.

CLOSE
Example : Hot Gas

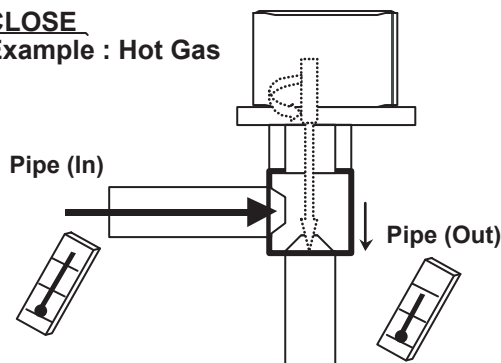



If it is open,
it has no temp. difference between Inlet and Outlet.

OPEN
Example : Hot Gas

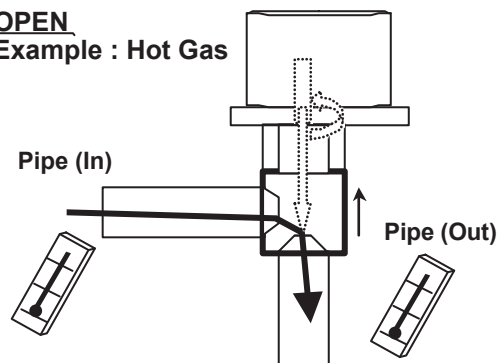

Check Point 6 : Check Strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in (1), but if there is a difference as shown in (2), there is a possibility of inside clogged. In this case, replace Strainer.

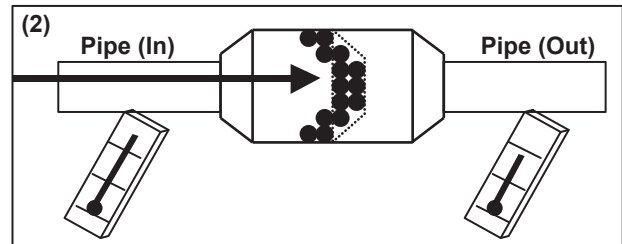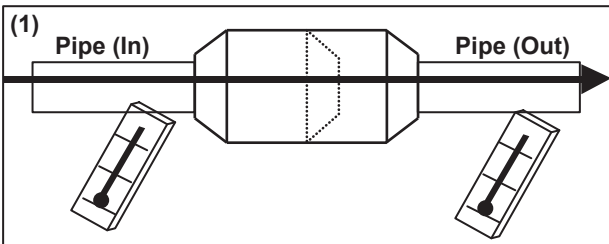


SERVICE PARTS INFORMATION 9

Outdoor Unit Electronic Expansion Valve (EEV1)

Check Point 1 : Check Connections

- Check connection of connector (CN116)
(Loose connector or open cable)

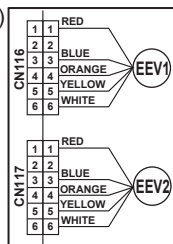

Check Point 2 : Check Coil of EEV1

- Remove connector, check each winding resistance of Coil.

Read wire	Resistance value (20°C)
White - Red	$46 \pm 4 \Omega$
Yellow - Red	
Orange - Red	
Blue - Red	

► If Resistance value is abnormal, replace EEV.

Check Point 3 : Check Voltage from Controller PCB

- Remove Connector and check Voltage (DC12V).
 >> If it does not appear, replace Controller PCB.



Check Point 4 : Check Noise at start up


- Turn on Power and check operation noise.
 >> If an abnormal noise does not show, replace Controller PCB.

Check Point 5 : Check Opening and Closing Operation of Valve

When Valve is closed,
it has a temp. difference between Inlet and Outlet.

CLOSE


Example : Liquid Refrigerant
Pipe (In)

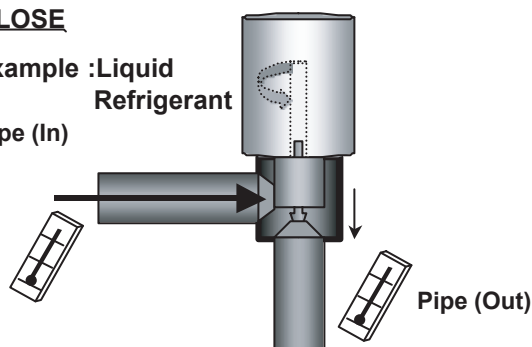

If it is open, it has no temp. difference between Inlet and Outlet.



OPEN

Example : Liquid Refrigerant
Pipe (In)

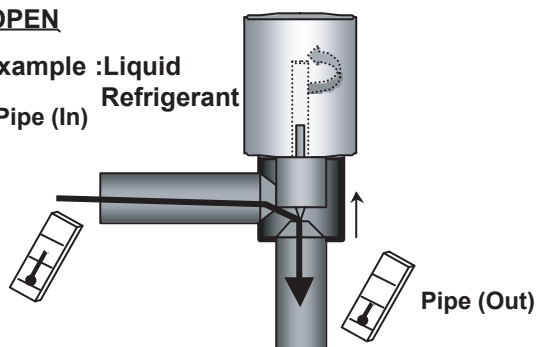

Check Point 6 : Check Strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in (1), but if there is a difference as shown in (2), there is a possibility of inside clogged. In this case, replace Strainer.

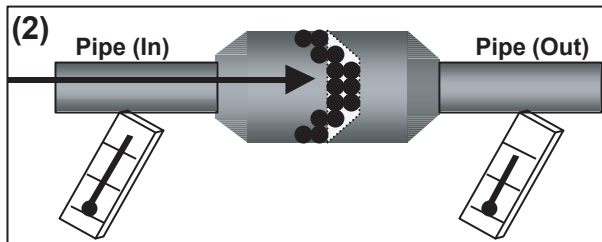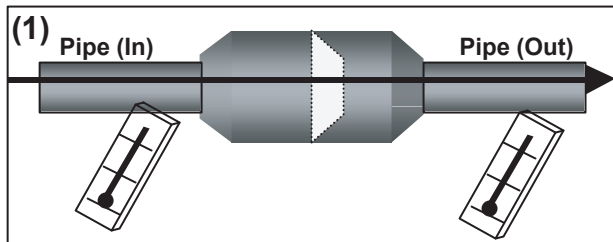


SERVICE PARTS INFORMATION 10

Outdoor Unit Electronic Expansion Valve (EEV2)

Check Point 1 : Check Connections

- Check connection of connector (CN117)
(Loose connector or open cable)

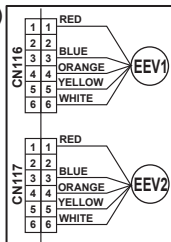

Check Point 2 : Check Coil of EEV2

- Remove connector, check each winding resistance of Coil.

Read wire	Resistance value (20°C)
White - Red	$46 \pm 4 \Omega$
Yellow - Red	
Orange - Red	
Blue - Red	

► If Resistance value is abnormal, replace EEV.

Check Point 3 : Check Voltage from Controller PCB

- Remove Connector and check Voltage (DC12V).
-> If it does not appear, replace Controller PCB.



Check Point 4 : Check Noise at start up


- Turn on Power and check operation noise.
-> If an abnormal noise does not show, replace Controller PCB.

Check Point 5 : Check Opening and Closing Operation of Valve

When Valve is closed,
it has a temp. difference between Inlet and Outlet.

CLOSE


Example : Liquid
Refrigerant
Pipe (In)

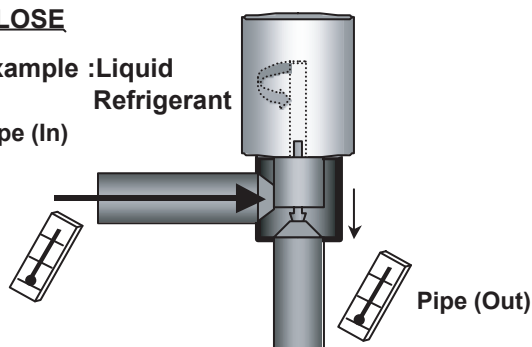

If it is open, it has no temp. difference between Inlet and Outlet.



OPEN

Example : Liquid
Refrigerant
Pipe (In)

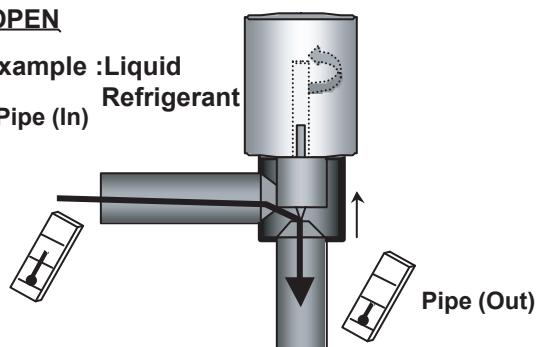

Check Point 6 : Check Strainer

Strainer normally does not have temperature difference between inlet and outlet as shown in (1), but if there is a difference as shown in (2), there is a possibility of inside clogged. In this case, replace Strainer.

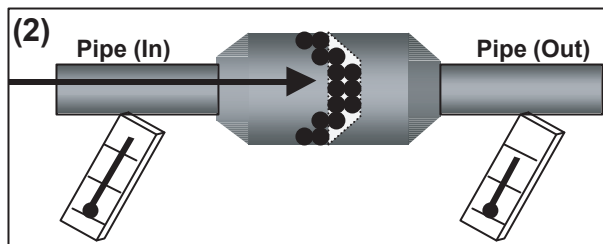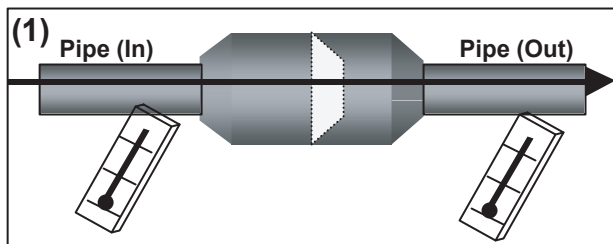


SERVICE PARTS INFORMATION 11

Outdoor Unit Solenoid Valve (SV2)

Check Point 1 : Check connections

- ❑ Check connection of connector.
(Loose connector or open cable)
AJ*040,045,054LBLAH
>> CN107



Check Point 2 : Check Solenoid Coil

- ❑ Remove connector and check if coil is open.
(Normal resistance value of each coil: $1495 \pm 7\% \Omega$)

>> **If Resistance value is abnormal, replace Solenoid Coil.**



Check Point 3 : Check Voltage from Controller PCB

- ❑ Remove connector and check the voltage (Rated AC voltage).



>> **If the voltage does not appear, replace Controller PCB.**




Check Point 4 : Check opening & closing operation of Valve

- ❑ Depending on either during operation or protection control, check if Valve is operating normally.
(When Valve opens, there is no temperature difference between Inlet and Outlet.)

Normal Operation
Pipe (In) TEMP. Hi.
Pipe (Out) TEMP. Normal

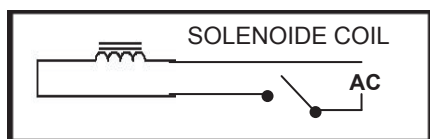
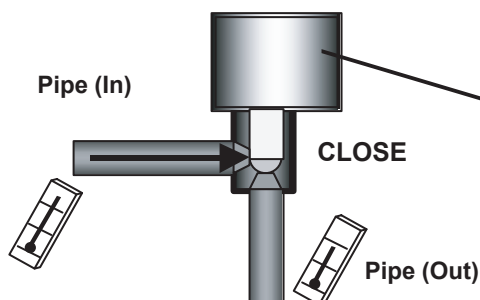


Protection Function
Pipe (In) TEMP. = Pipe (Out) TEMP.

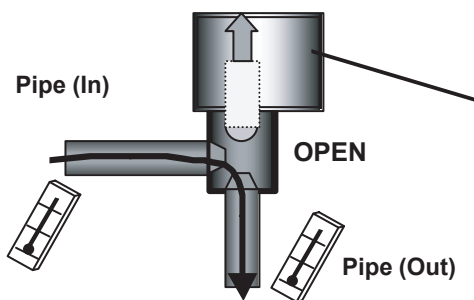

- ❑ If the valve closes by removing the connector of the valve which does not close, it is considered to be Controller PCB failure. Replace Controller PCB.

- ❑ If it does not close by removing connector, there is a possibility of (1) clogging by dirt, or (2) deformation by the heat at the time of Solenoid Valve installation.
In this case, replace Solenoid Valve.

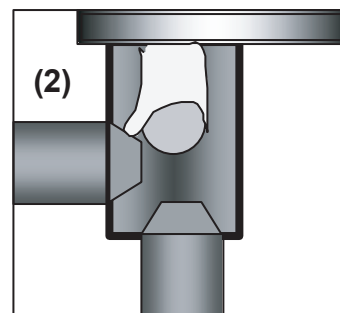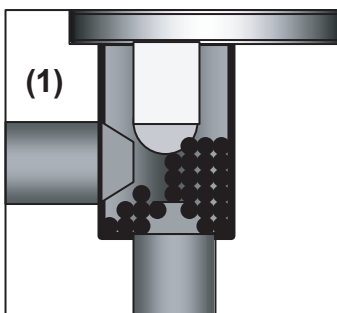


SERVICE PARTS INFORMATION 12

4-WAY VALVE


Check Point 1 : Check Circuit connection

- Check the connection of connector CN 105

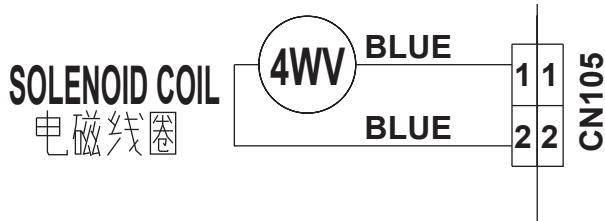


Check Point 2 : Check Solenoid Coil

- Remove CN6 from PCB and check the resistance value of coil




- ☆ If it is Open or abnormal resistance value, replace Solenoid Coil

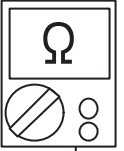

Check Point 3: Check Operation of 4 Way Valve

- Check each piping temperature, and confirm the location of the valve by the temperature difference.

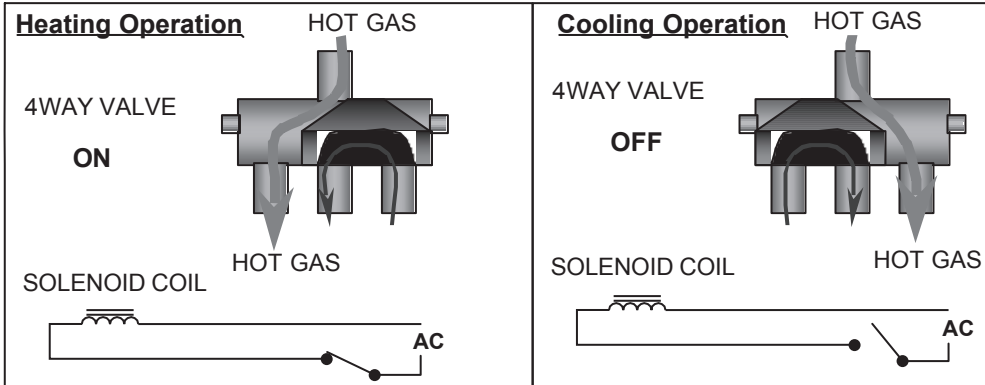

- ☆ If the valve location is not proper, replace 4 way valve.

Check Point 4: Check Voltage from Controller PCB

- Remove connector and check the voltage (Rated AC voltage).
>> If the voltage does not appear, replace Controller PCB.


SERVICE PARTS INFORMATION 13

Indoor Unit AC Fan Motor



Check Point : ARXC45GATH (High Static Pressure Duct Type)

- Check each winding resistance of the motor
- ▶ If Resistance value is abnormal, replace motor.

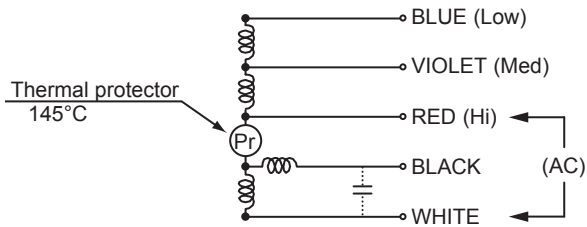

Lead wire	Resistance value
White – Red	6.84 Ω \pm 7%
Red – Black	9.78 Ω \pm 7%
Red – Violet	6.10 Ω \pm 7%
Violet – Blue	6.10 Ω \pm 7%

(20°C)

SERVICE PARTS INFORMATION 14-1

Indoor Unit Fan Motor <DC motor>

⚠ When you approach this part, please cut off the power supply and wait for a while until DC voltage has been discharged.

Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)
- >>If Fan or Bearing is abnormal, replace it.**

Check Point 2 : Check resistance of Indoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Earth terminal)

>>If they are short-circuited (below 300 k Ω), replace Indoor fan motor and Controller PCB.

Pin number (wire color)	Terminal function (symbol)
1 (Brown or Blue)	Feed back (FG)
2 (Yellow)	Speed command (Vsp)
3 (White)	Control voltage (Vcc)
4 (Black)	Earth terminal (GND)
5	No function
6 (Red)	DC voltage (Vm)



SERVICE PARTS INFORMATION 14-2

Indoor Unit Fan Motor <DC motor>
(Lower fan motor of Compact Floor model)

⚠ When you approach this part, please cut off the power supply and wait for a while until DC voltage has been discharged.

Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)
- >>If Fan or Bearing is abnormal, replace it.**

Check Point 2 : Check resistance of Indoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Earth terminal)
- >>If they are short-circuited (below 300 k Ω), replace Indoor fan motor and Controller PCB.**

Pin number (wire color)	Terminal function (symbol)
1 (Blue)	Feed back (FG)
2 (Yellow)	Speed command (Vsp)
3 (White)	Control voltage (Vcc)
4 (Black)	Earth terminal (GND)
5	No function
6	No function
7 (Red)	DC voltage (Vm)



SERVICE PARTS INFORMATION 14-3

Indoor Unit Fan Motor <DC motor>
(For AS*A030/ 034GTAH, AUXK018 - 054GLAH)

⚠ When you approach this part, please cut off the power supply and wait for a while until DC voltage has been discharged.


Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)
- >>If Fan or Bearing is abnormal, replace it.**

Check Point 2 : Check resistance of Indoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Earth terminal)
- >>If they are short-circuited (below 300 k Ω), replace Indoor fan motor and Controller PCB.**

Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3	No function
4 (Black)	Earth terminal (GND)
5 (White)	Control voltage (Vcc)
6 (Yellow)	Speed command (Vsp)
7 (Brown or Blue)	Feed back (FG)

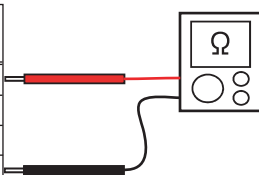

SERVICE PARTS INFORMATION 15



Discharge Pressure Sensor Suction Pressure Sensor

1. Discharge Pressure Sensor

Check Point : Check Voltage from Main PCB

- With the connector connected to the PCB, measure the voltage between CN118:2-3 of the Main PCB.

- Characteristics of pressure sensor

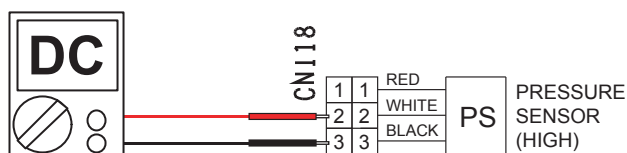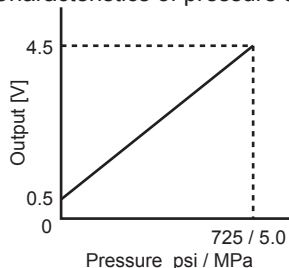

psi	0.0	14.5	29.0	43.5	58.0	72.5	101.5	116.0	130.5	145.0	174.0	203.0	232.0	261.0	290.0
MPa	0.00	0.10	0.20	0.30	0.40	0.50	0.70	0.80	0.90	1.00	1.20	1.40	1.60	1.80	2.00
Output (V)	0.50	0.58	0.66	0.74	0.82	0.90	1.06	1.14	1.22	1.30	1.46	1.62	1.78	1.94	2.10



psi	319.0	348.0	377.0	406.0	435.0	464.0	493.0	522.0	551.0	580.0	609.0	638.0	667.0	696.0	725.0
MPa	2.20	2.40	2.60	2.80	3.00	3.20	3.40	3.60	3.80	4.00	4.20	4.40	4.60	4.80	5.00
Output (V)	2.26	2.42	2.58	2.74	2.90	3.06	3.22	3.38	3.54	3.70	3.86	4.02	4.18	4.34	4.50

2. Suction Pressure Sensor

Check Point : Check Voltage from Main PCB

- With the connector connected to the PCB, measure the voltage between CN119:2-3 of the Main PCB.

- Characteristics of pressure sensor

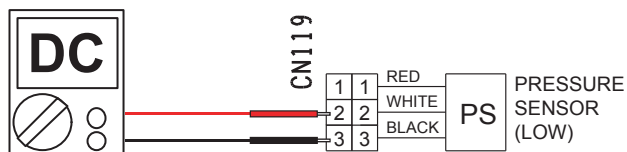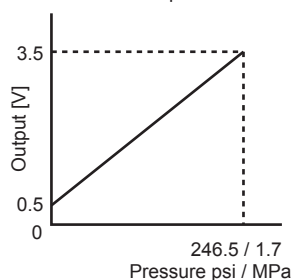


psi	0.0	14.5	29.0	43.5	58.0	72.5	101.5	116.0	130.5	145.0	159.5	174.0	188.5	203.0	217.5
MPa	0.00	0.10	0.20	0.30	0.40	0.50	0.70	0.80	0.90	1.00	1.10	1.20	1.30	1.40	1.50
Output (V)	0.50	0.68	0.85	1.03	1.21	1.38	1.74	1.91	2.09	2.27	2.44	2.62	2.79	2.97	3.15

psi	232.0	246.5
Mpa	1.60	1.70
Output (V)	3.32	3.50

SERVICE PARTS INFORMATION 16

Pressure Switch

▪ Type of contact

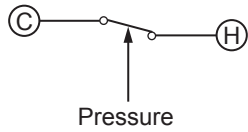

▪ Characteristics of pressure switch

Contact : Short ⇒ Open	4.2 ~ 4.05MPa
Contact : Open ⇒ Short	3.2±0.15MPa


SERVICE PARTS INFORMATION 17

Thermistor

Check Point : Check Thermistor resistance value

■ Remove connector and check Thermistor resistance value.

Temperature [°F]	Temperature [°C]	Resistance Value [kΩ] / Voltage Value [V]		
		Thermistor A	Thermistor B	Thermistor C
- 4	- 20	--- / ---	--- / ---	105.4 / 1.33
14	- 10	--- / ---	27.8 / 1.67	58.2 / 1.98
23	- 5	--- / ---	21.0 / 2.00	44.0 / 2.33
32	0	168.6 / 0.19	16.1 / 2.33	33.6 / 2.66
41	5	129.8 / 0.24	12.4 / 2.65	25.9 / 2.98
50	10	100.9 / 0.31	9.6 / 2.96	20.2 / 3.27
59	15	79.1 / 0.39	7.6 / 3.25	15.8 / 3.54
68	20	62.5 / 0.48	6.0 / 3.50	12.5 / 3.77
77	25	49.8 / 0.59	4.8 / 3.73	10.0 / 3.96
86	30	40.0 / 0.71	3.8 / 3.92	8.0 / 4.13
104	40	26.3 / 1.01	2.5 / 4.23	5.3 / 4.39
122	50	17.8 / 1.36	1.7 / 4.45	3.6 / 4.57
140	60	12.3 / 1.75	1.2 / 4.61	--- / ---
158	70	8.7 / 2.17	--- / ---	--- / ---
176	80	6.3 / 2.57	--- / ---	--- / ---
194	90	4.6 / 2.96	--- / ---	--- / ---
212	100	3.4 / 3.30	--- / ---	--- / ---
230	110	2.6 / 3.60	--- / ---	--- / ---
248	120	2.0 / 3.85	--- / ---	--- / ---
Applicable Thermistors		Discharge temp. TH : [TH1] Comp temp. TH : [TH10]	Heat exchanger. TH : [TH5] Suction temp. TH : [TH4] Sub-cool heat exchanger (inlet) TH : [TH8] Sub-cool heat exchanger (outlet) TH : [TH9] Liquid temp. TH : [TH7]	Outdoor temp. TH : [TH3]

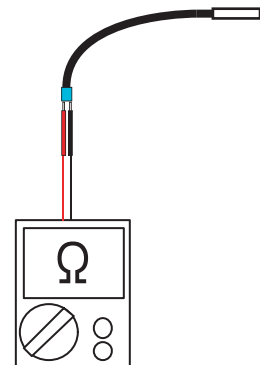

SERVICE PARTS INFORMATION 18

ACTPM (Active Filter Module)

Check Point 1 : Appearance check


- No fissures, breaks, damage, etc. at the body and terminals section?

Check Point 2 : Electric check




- ① Disconnect the connection wires.
- ② Set the tester to the "Resistance" mode, and measure the resistance between the following terminals.
 (+IN) - (-IN)
 L1 - L2
 P - N
- ③ Judge the result of ② as follows:

All 3 points several MΩ or greater	: Normal
1 or more points several kΩ to short	: Defective

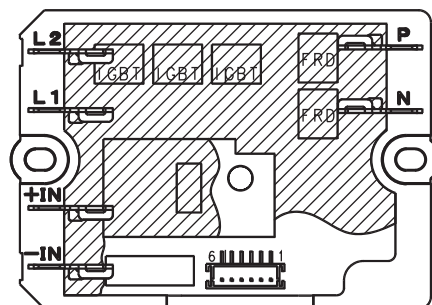


ACTPM (For AJ*040,045LBLAH)

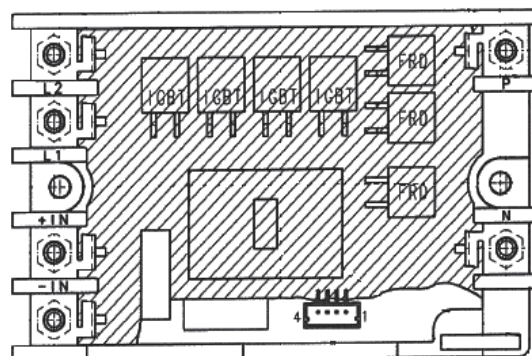

ACTPM (For AJ*054LBLAH)

Check Point 3

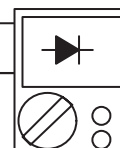

- ④ Set the tester to the "Diode" mode, and measure the voltage value between the following terminals.

Tester +side (red)	Tester - side (black)	Tester display [V]
L2	P	

- ⑤ Judge the result of ④ as follows:

Several 0.3V to 0.7V	: Normal
Under 0.1V or over load	: Defective

SERVICE PARTS INFORMATION 19

Outdoor Unit Fan Motor

⚠ When you approach this part, please cut off the power supply and wait for a while until DC voltage has been discharged.


Check Point 1 : Check rotation of Fan

- Rotate the fan by hand when operation is off.
(Check if fan is caught, dropped off or locked motor)
>>If Fan or Bearing is abnormal, replace it.

Check Point 2 : Check resistance of Outdoor Fan Motor

- Refer to below. Circuit-test "Vm" and "GND" terminal.
(Vm: DC voltage, GND: Earth terminal)
>>If they are short-circuited (below 300 k Ω), replace Outdoor fan motor.

Pin number (wire color)	Terminal function (symbol)
1 (Red)	DC voltage (Vm)
2	No function
3	No function
4 (Black)	Earth terminal (GND)
5 (White)	Control voltage (Vcc)
6 (Yellow)	Speed command (Vsp)
7 (Brown)	Feed back (FG)

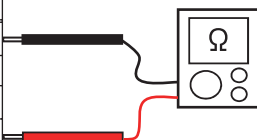

SERVICE INFORMATION


Network communication Abnormal

- Basic trouble shooting procedure -

1. Check Error code in one network segment separately, and check the Error code of (Outdoor unit, Indoor unit, Remotecontroller Service tool)
< If the system has more than 2 Network segments, disconnect the other Network segment.>
2. Connect Service tool to the Outdoor unit, and try out **"Address checker"** Function by the Service tool.
< Check missing indoor unit or outdoor unit by using Address checker function of Service tool>
3. Check terminal resistance value $53 \text{ Ohm} \pm 5\%$ + Line Resistance on the terminal board one by one.
< Terminal Resistance is located on the Outdoor unit PCB(activated SET 5-4 ON) >
*Refer to the wiring diagram of Network cable

Example

Terminal Resistance ① is located on the controller PCB of Outdoor unit as the Network for Indoor unit.

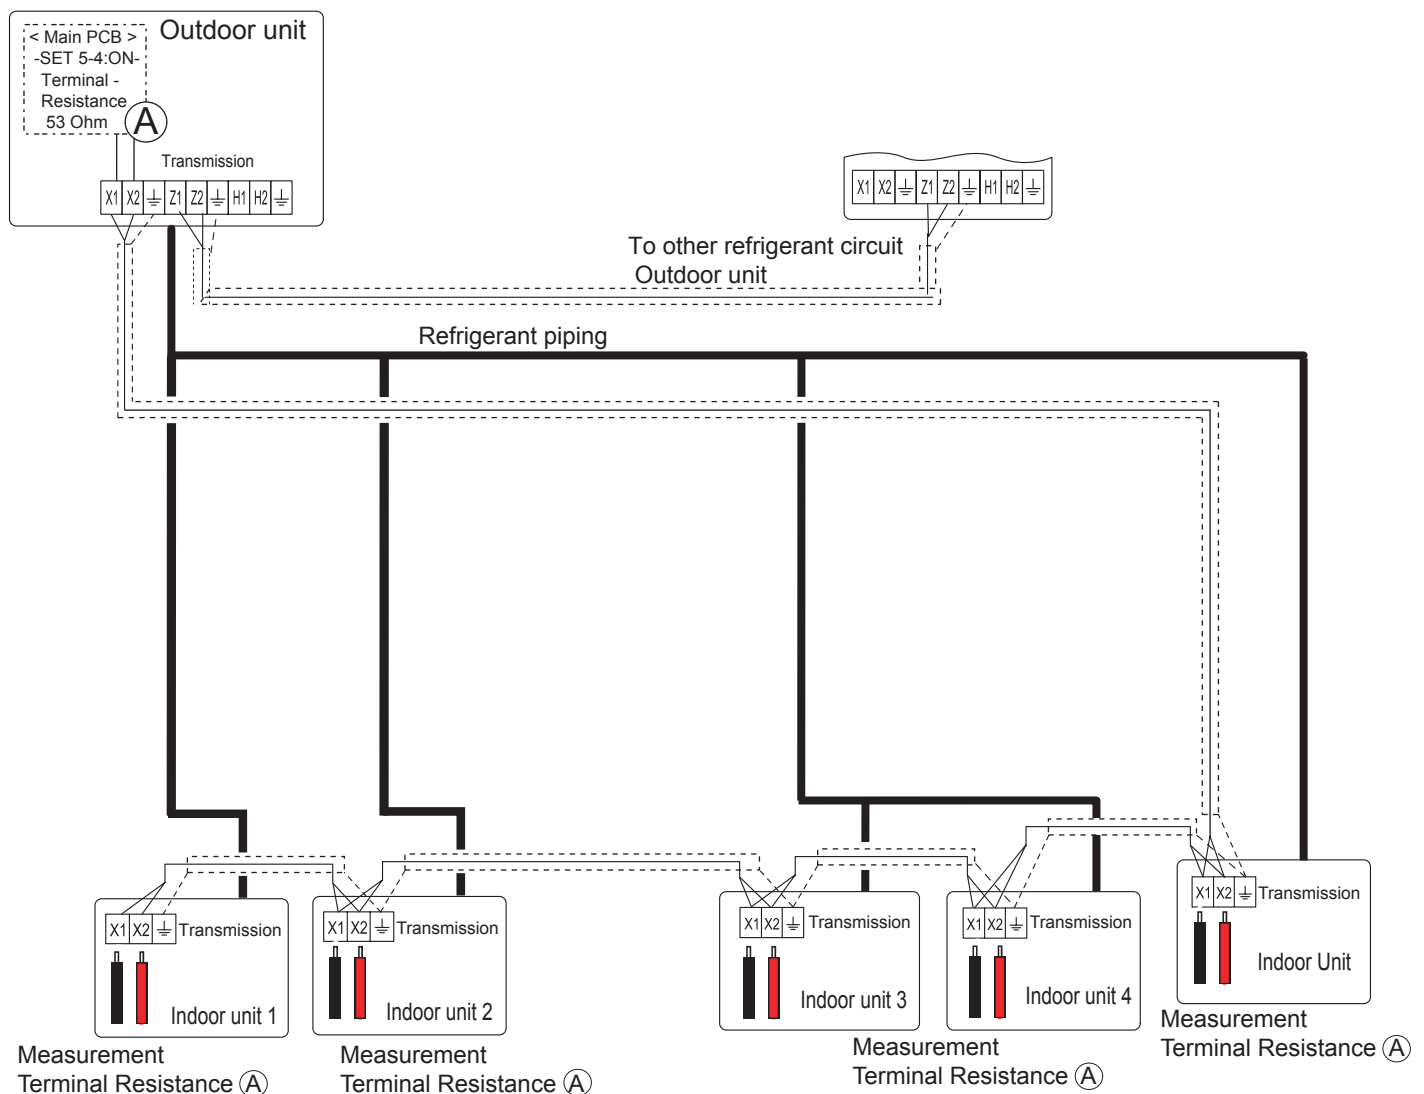




5. APPENDING DATA (UNIT)

5-1 REFRIGERANT CIRCUIT

MODELS : AJ * 040LBLAH, AJ * 045LBLAH, AJ * 054LBLAH,
AJ * 040LELAH, AJ * 045LELAH, AJ * 054LELAH

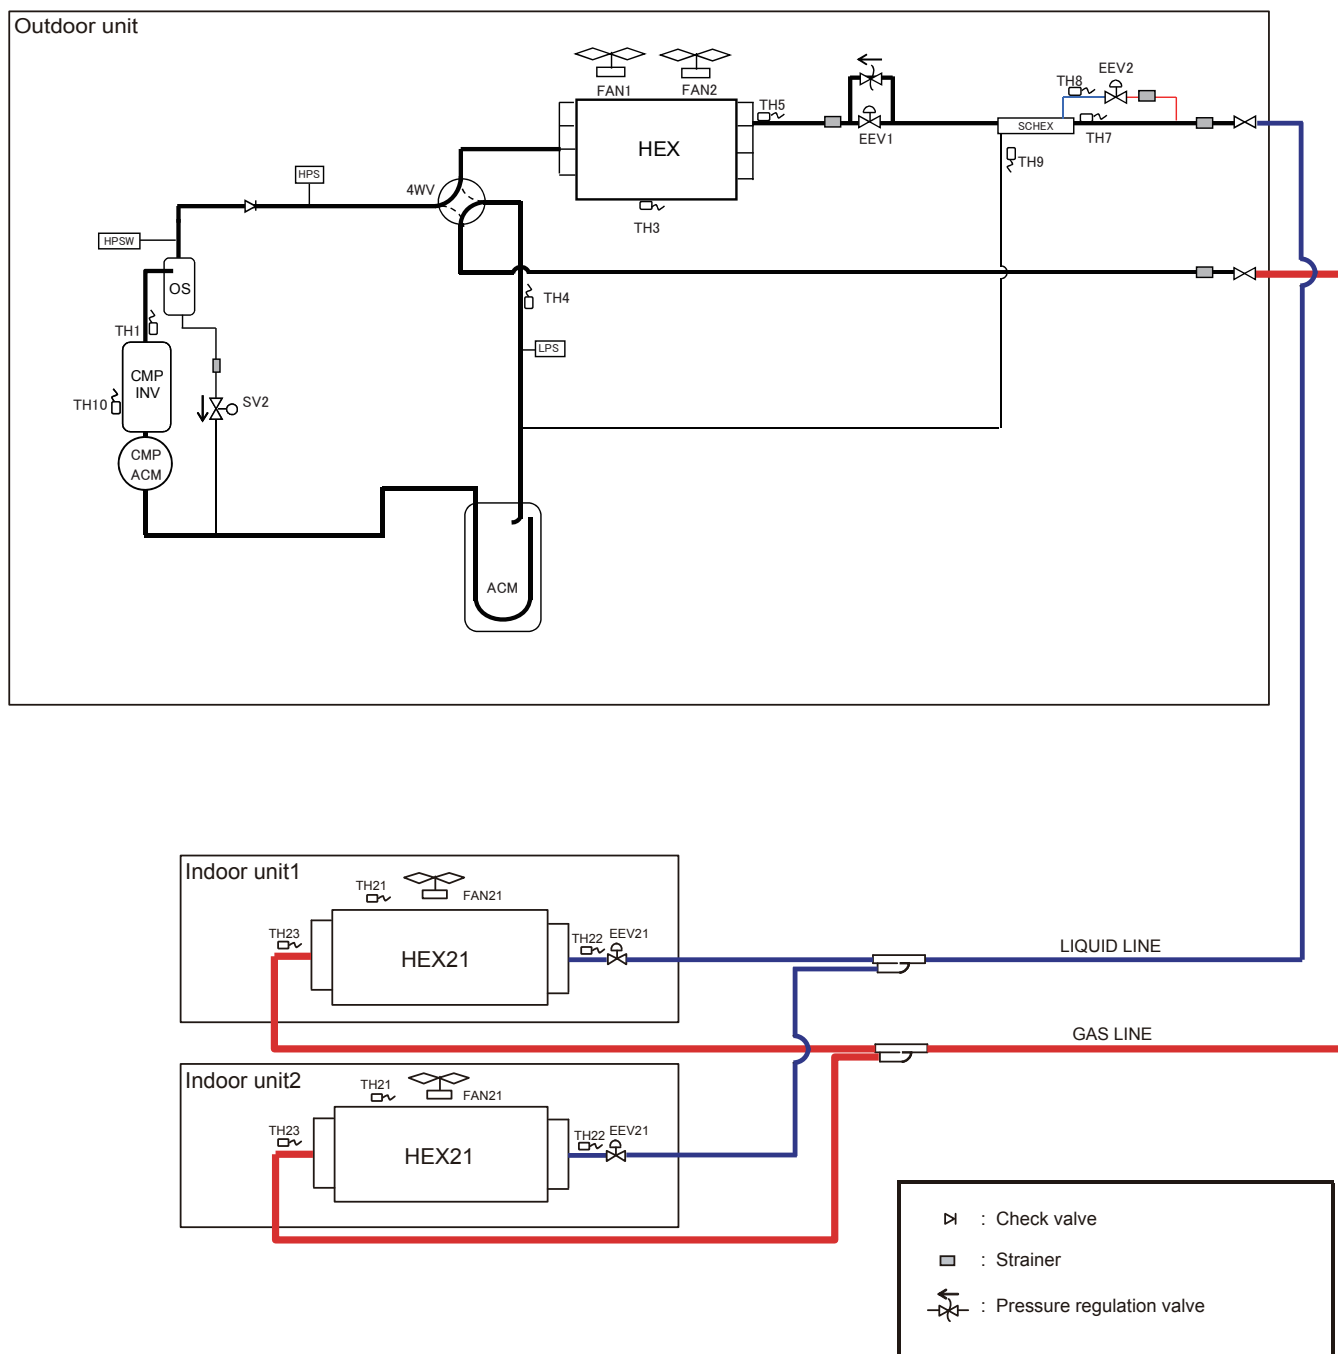

SYMBOL DESCRIPTION

● Outdoor unit


MARK	DESCRIPTION	
CMP	Compressor (Inverter type)	
HEX	Heat exchanger	
FAN 1	Fan 1	
FAN 2	Fan 2	
ACM	Accumulator	
OS	Oil separator	
SCHEX	Sub-cool heat exchanger	
HPS	High pressure sensor	
LPS	Low pressure sensor	
HPSW	High pressure sensor switch	
4WV	4-way valve	
EEV 1	Electric expansion valve 1	
EEV 2	Electric expansion valve 2	
SV 2	Solenoid valve	Marking (Tube)
TH 1	Discharge temperature thermistor	Blue
TH 3	Outdoor temperature thermistor	–
TH 4	Suction temperature thermistor	Red
TH 5	Heat exchanger (outlet) thermistor	Pink
TH 7	Liquid temperature thermistor	Green
TH 8	Sub-cool heat exchanger (inlet) thermistor	White
TH 9	Sub-cool heat exchanger (outlet) thermistor	Brown
TH 10	Compressor temperature thermistor	–

● Indoor unit

MARK	DESCRIPTION
HEX21	Heat exchanger
FAN21	Fan
EEV21	Electric expansion valve
TH21	Room temperature thermistor
TH22	Heat exchanger (inlet) thermistor
TH24	Heat exchanger (outlet) thermistor


CASSETTE TYPE

MODELS : AUXD18GA* H, AUXD24GA* H, AUXA18GALH, AUXA24GALH, AUXA30GA* H, AUXA36GA* H, AUXA45GA* H, AUXA54GA* H

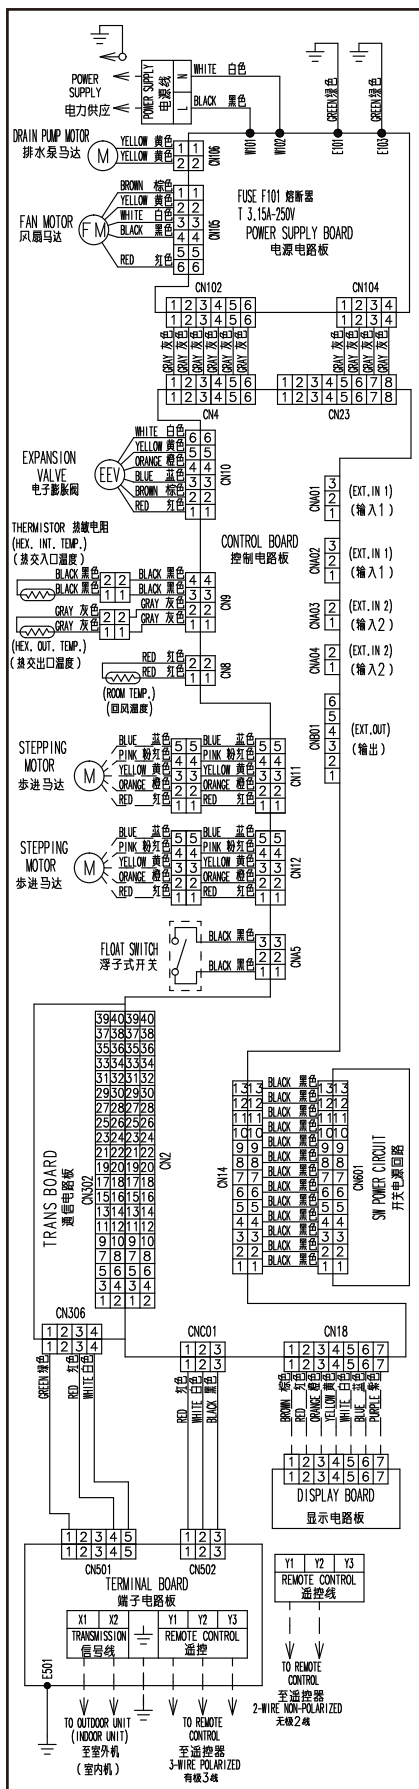

CASSETTE TYPE

MODELS : AUXK018/ 024/ 030/ 034/ 036/ 045/ 054GLAH
AUXM018/ 024/ 030GLAH

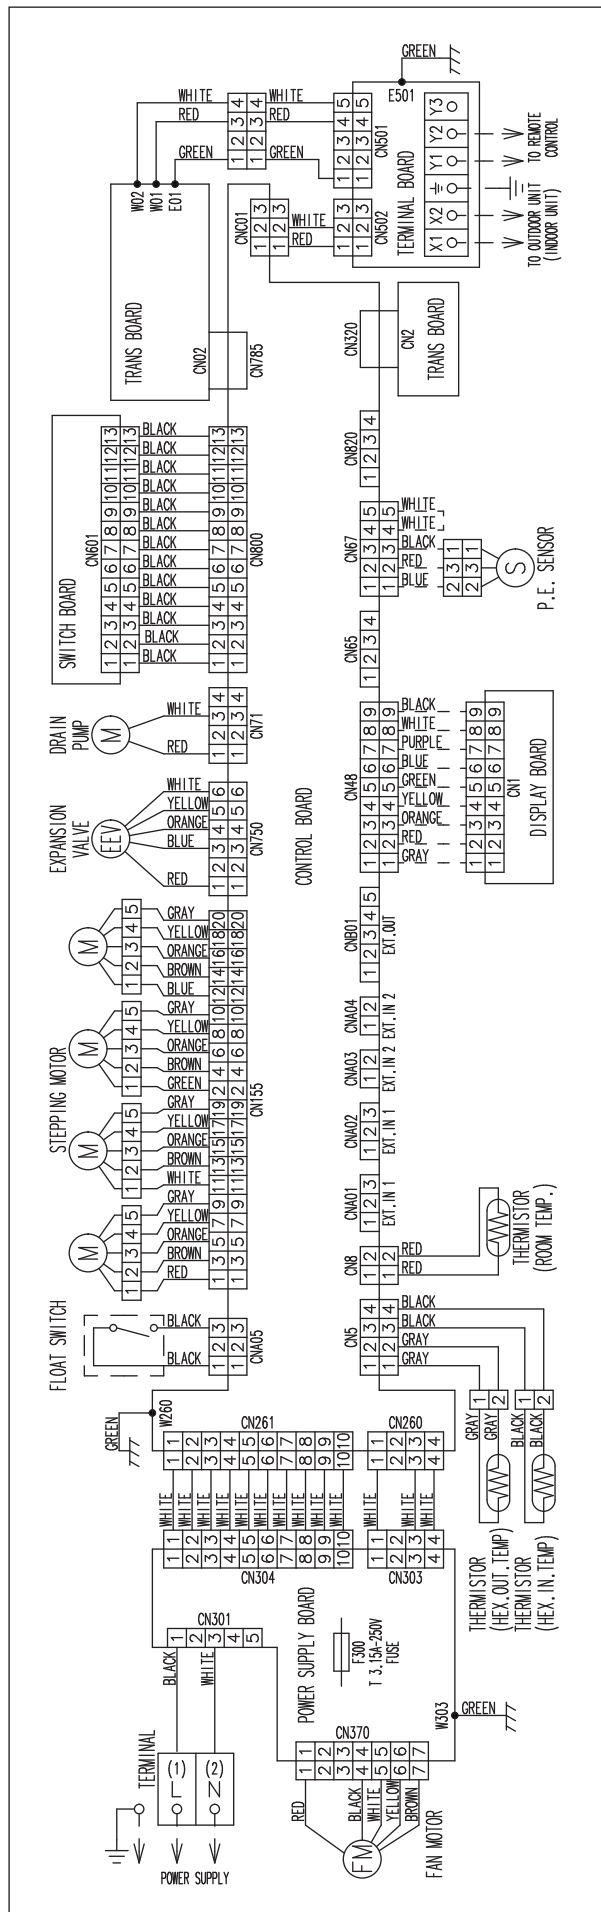

**MODELS : AUXB04GBLH,
AUXB04/ 07/ 09/ 12/ 14/ 18/ 24GALH
AUXB07/ 09/ 12/ 14/ 18/ 24GATH**




**MODEL : ARXB07GALH, ARXB09GALH, ARXB12GALH
ARXB14GALH, ARXB18GALH**




SLIM DUCT / SLIM CONCEALED FLOOR TYPE

MODELS : ARXD04GALH, ARXD07GA* H, ARXD09GA* H, ARXD12GA* H, ARXD14GA* H, ARXD18GA* H, ARXD24GA* H

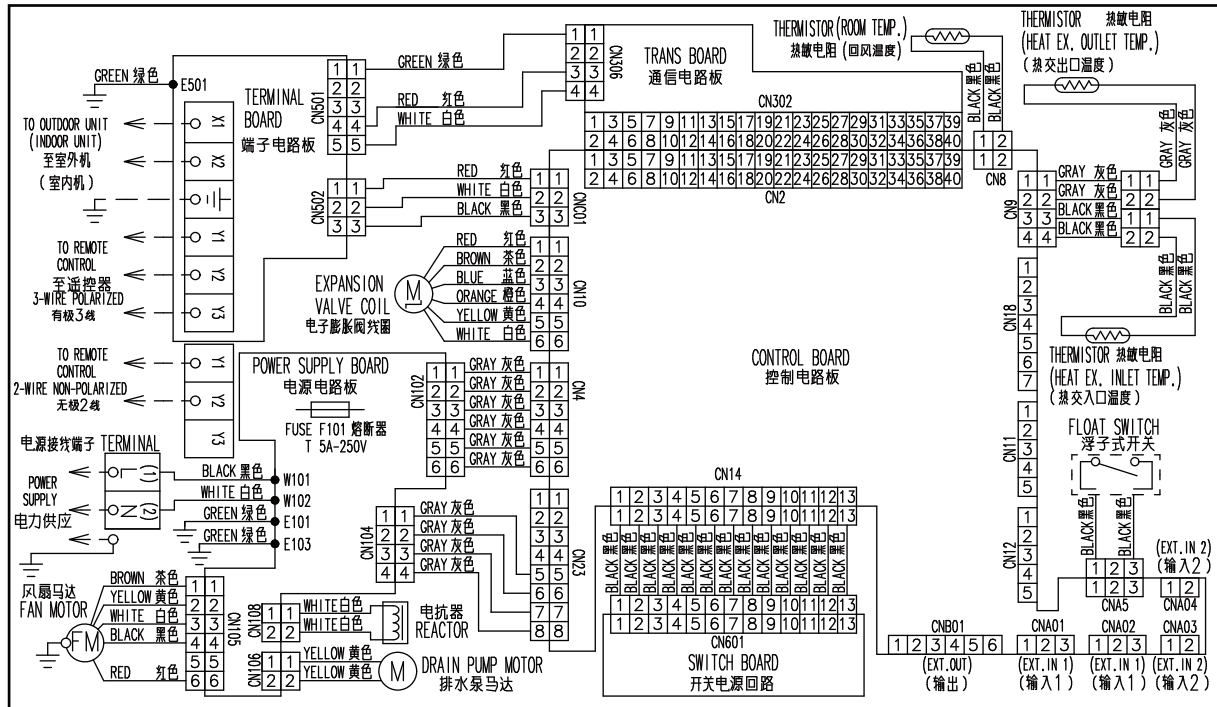


LOW STATIC PRESSURE DUCT TYPE

MODEL : ARXB24GALH, ARXB30GALH, ARXB36GALH

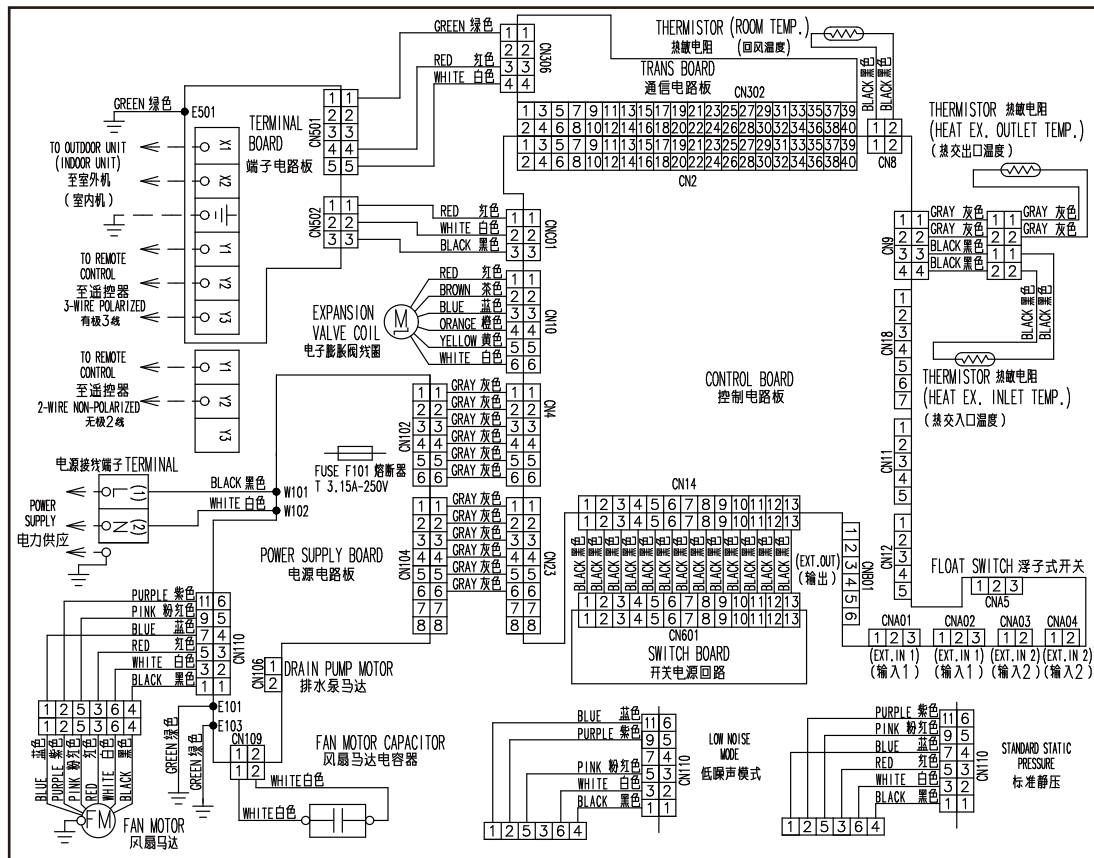


MODEL : ARXB45GALH

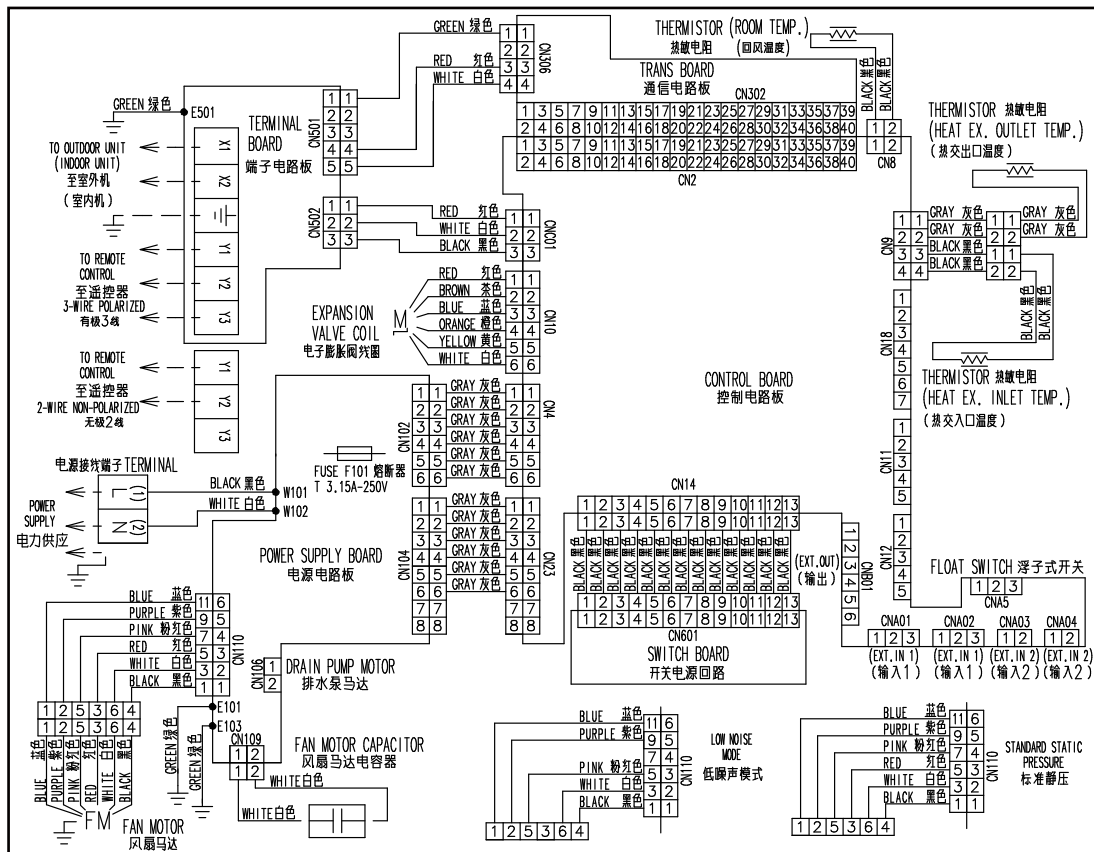


MEDIUM STATIC PRESSURE DUCT TYPE

MODELS : ARXA24GALH, ARXA30GALH, ARXA36GALH, ARXA45GALH

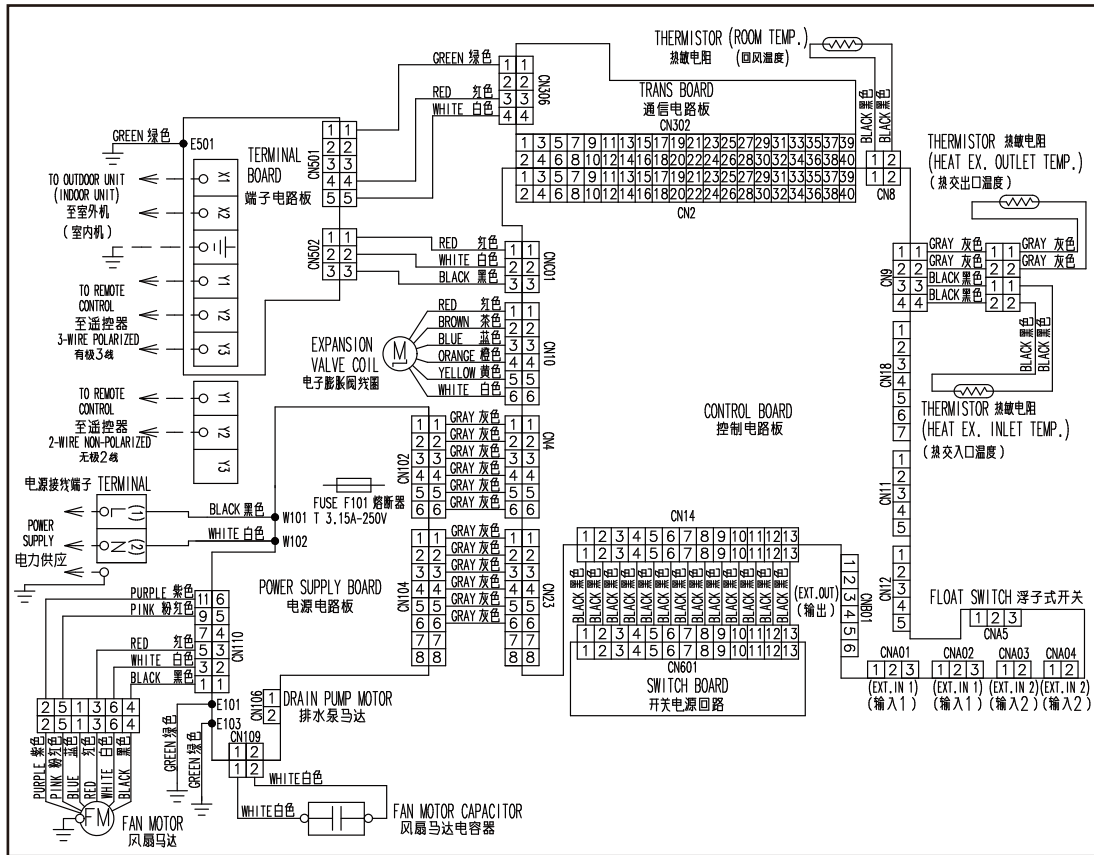


MODELS : ARXA24GB* H, ARXA30GB* H, ARXA36GB* H, ARXA45GB* H

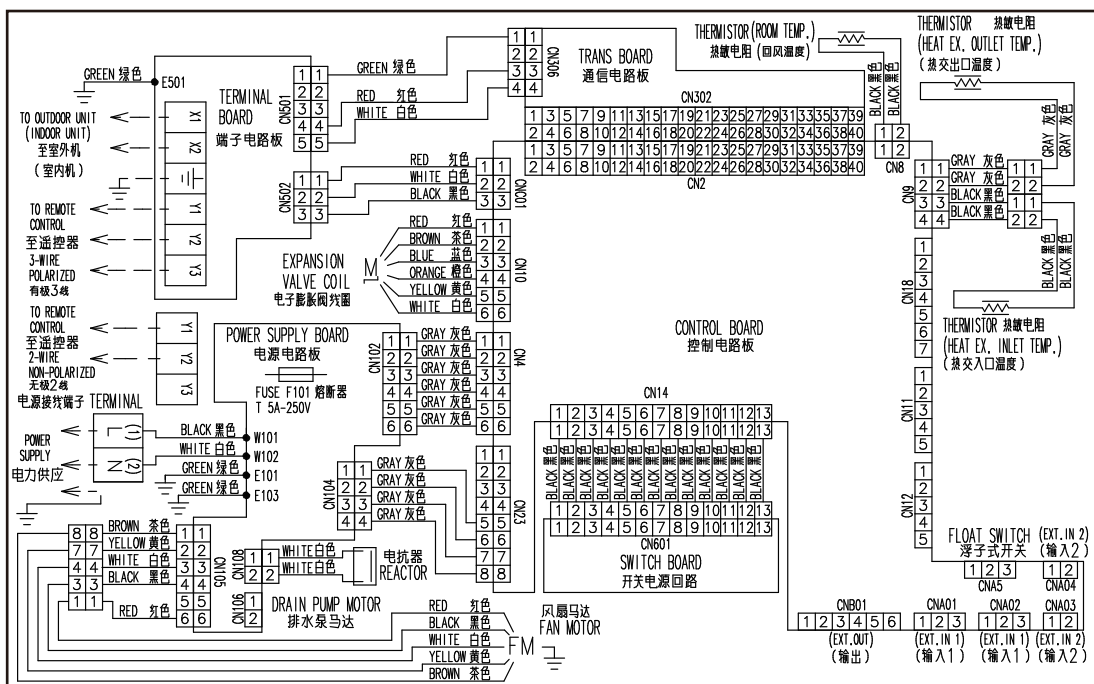


HIGH STATIC PRESSURE DUCT TYPE


MODELS : ARXC36GATH, ARXC45GATH, ARXC60GATH,

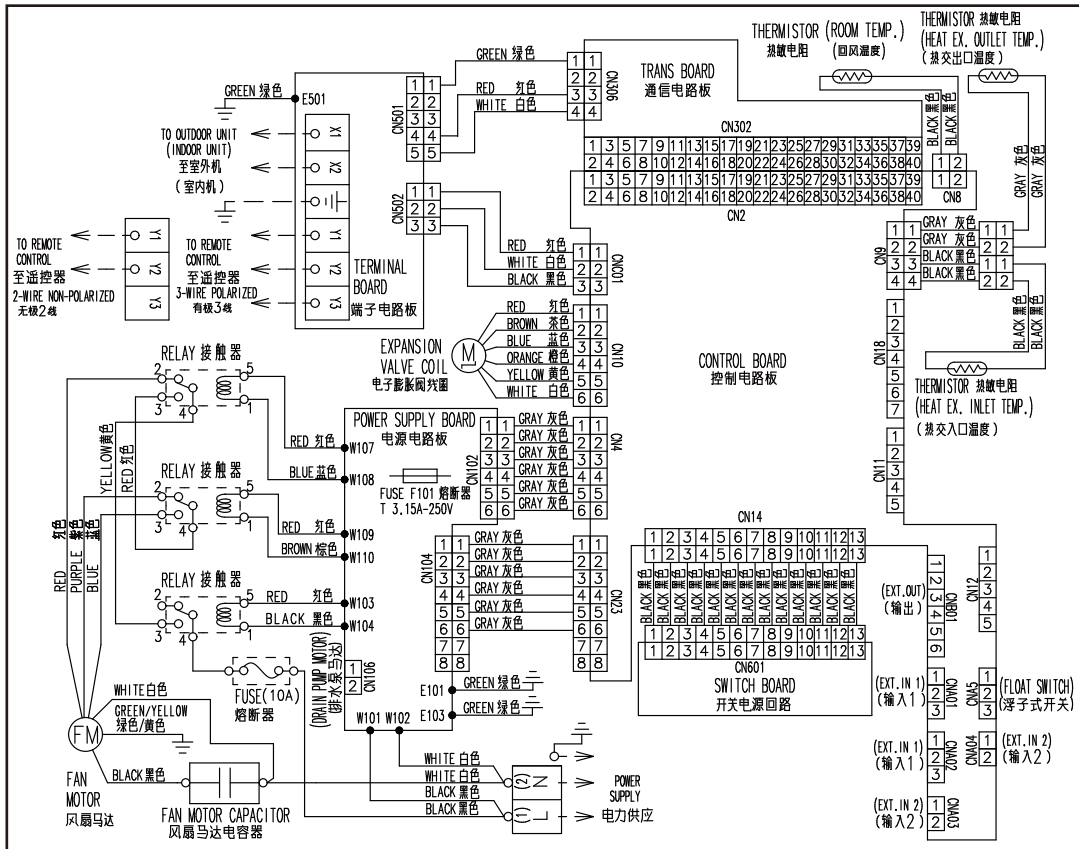


MODELS : ARXC72GATH, ARXC90GATH

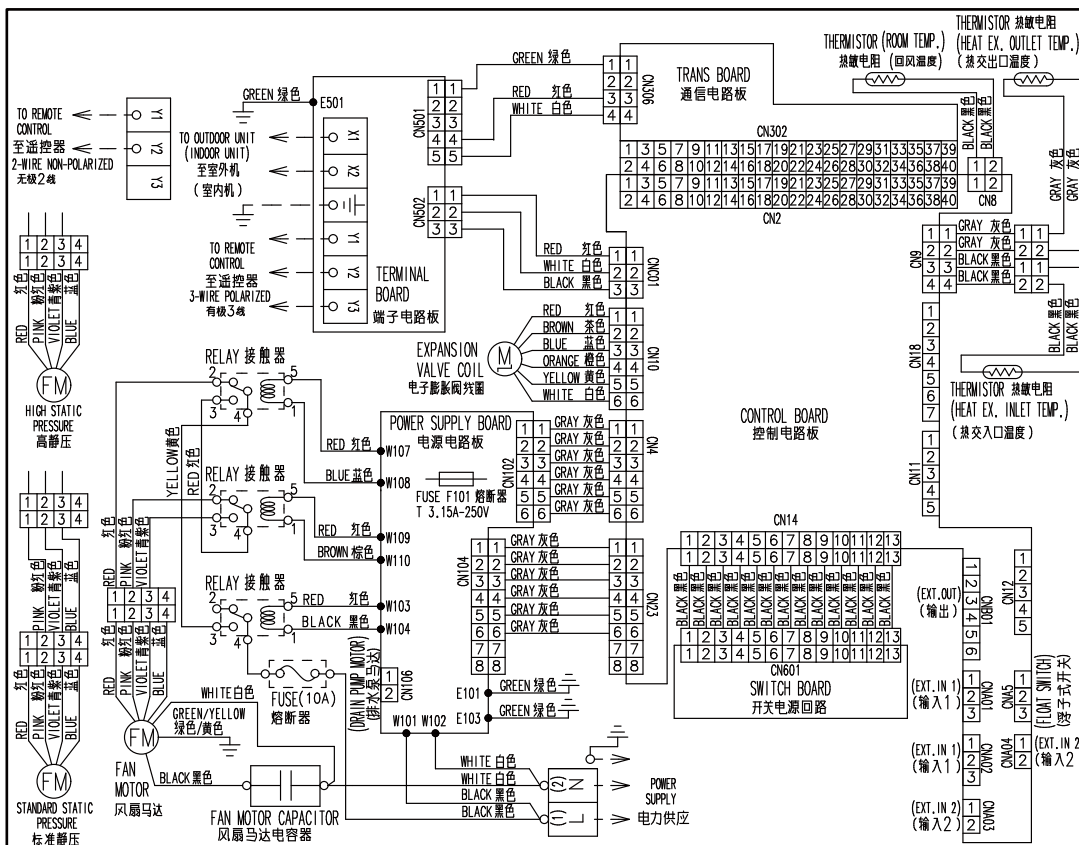

MODEL : ARXC36GBTH

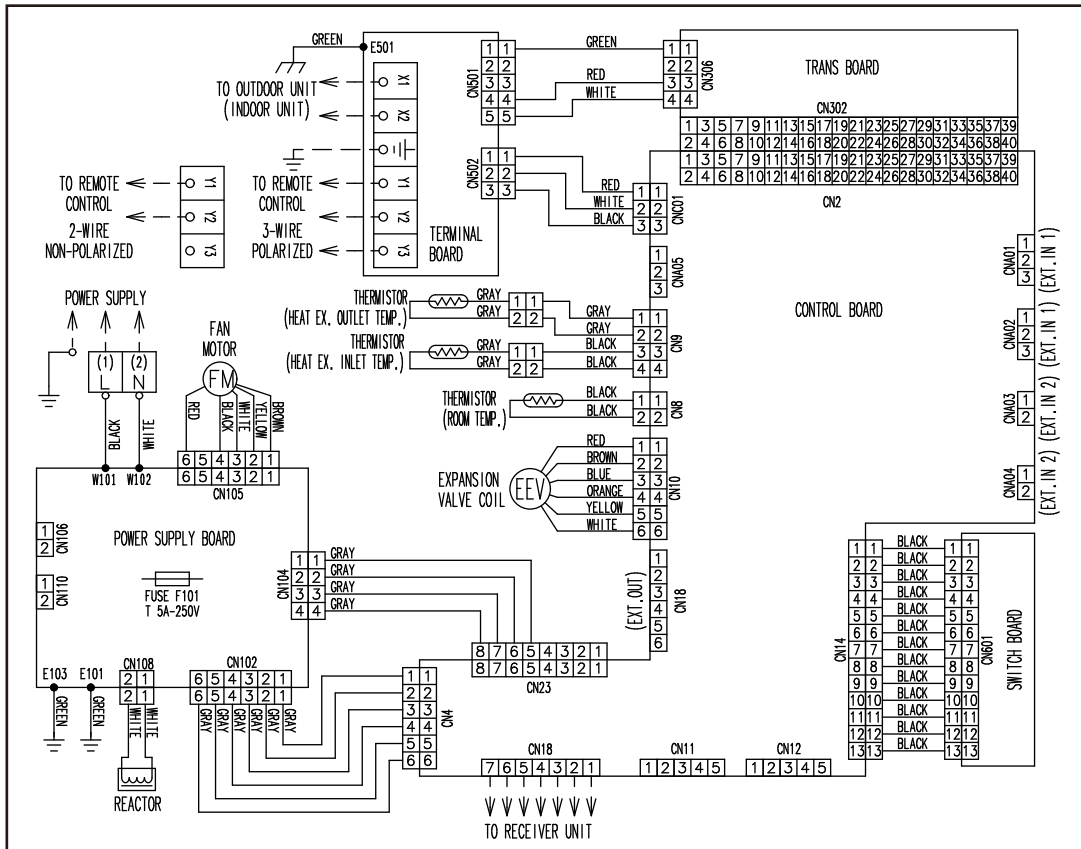


MODELS : ARXC72GBTH, ARXC90GBTH

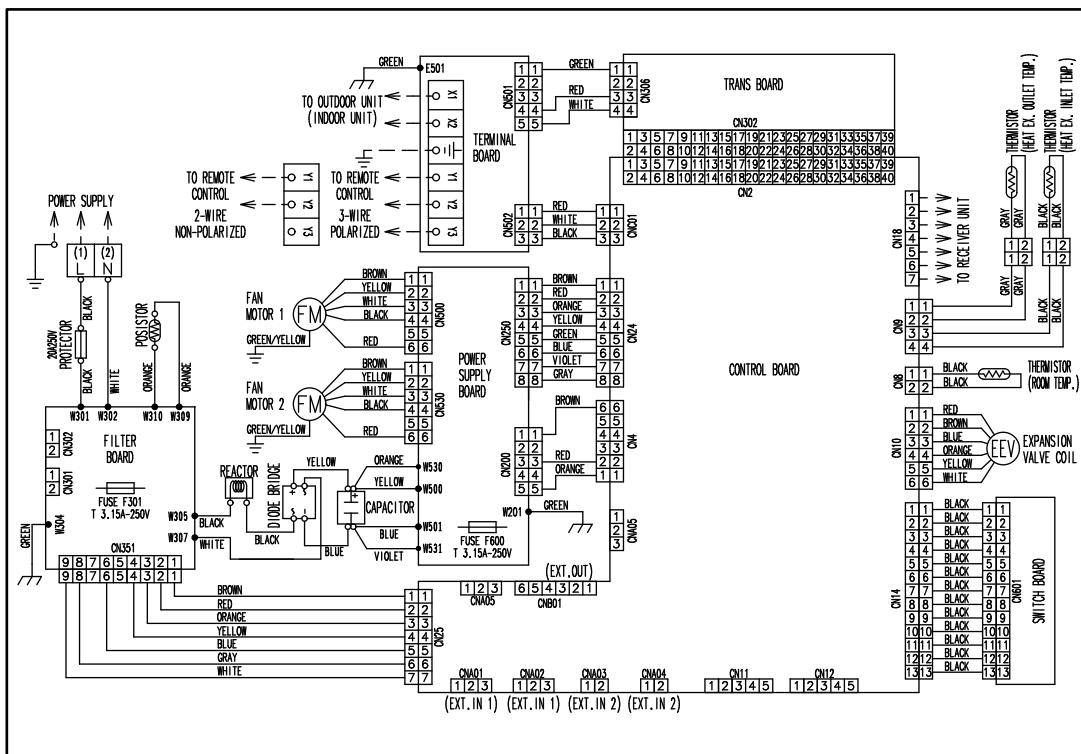


COMPACT SLIM DUCT TYPE

MODELS : ARXK04/ 07/ 09/ 12/ 14/ 18/ 24GCLH

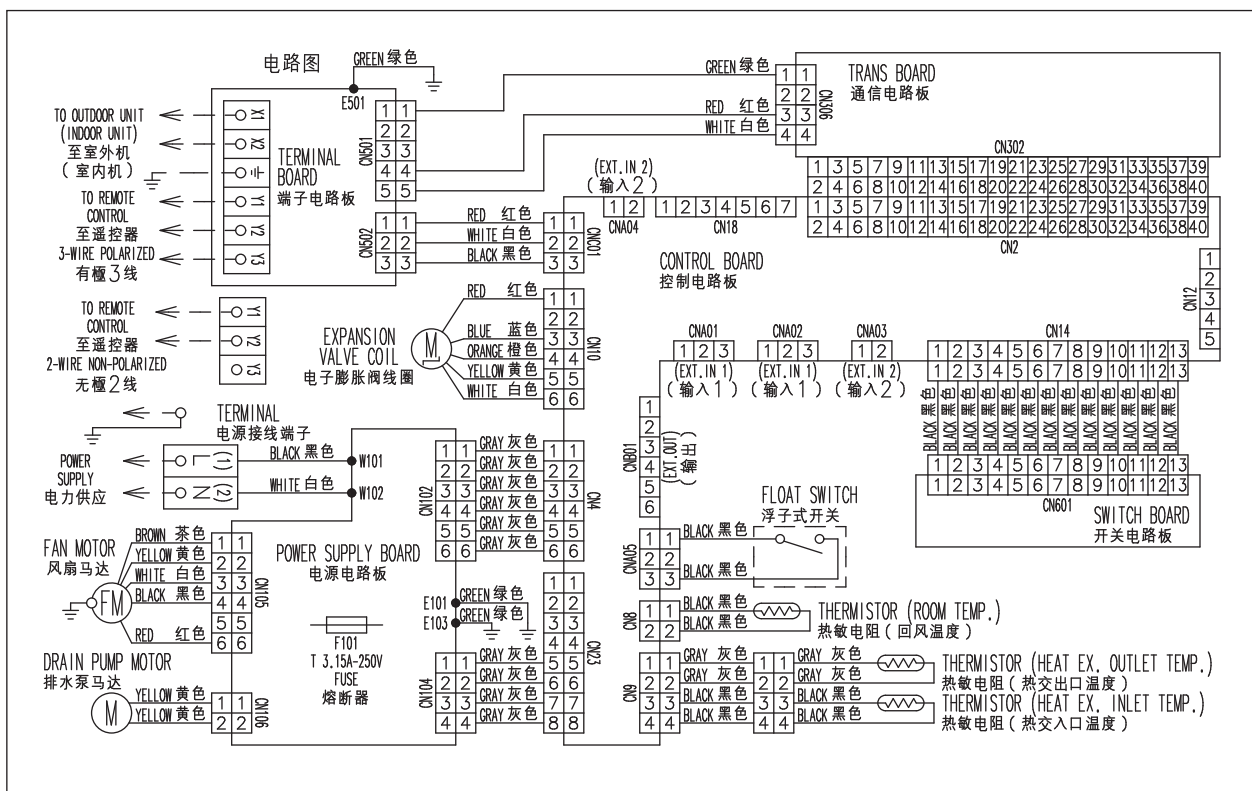


FLOOR / CEILING TYPE

**MODELS : AB* A12GATH, AB* A14GATH, AB* A18GATH,
AB* A24GATH**

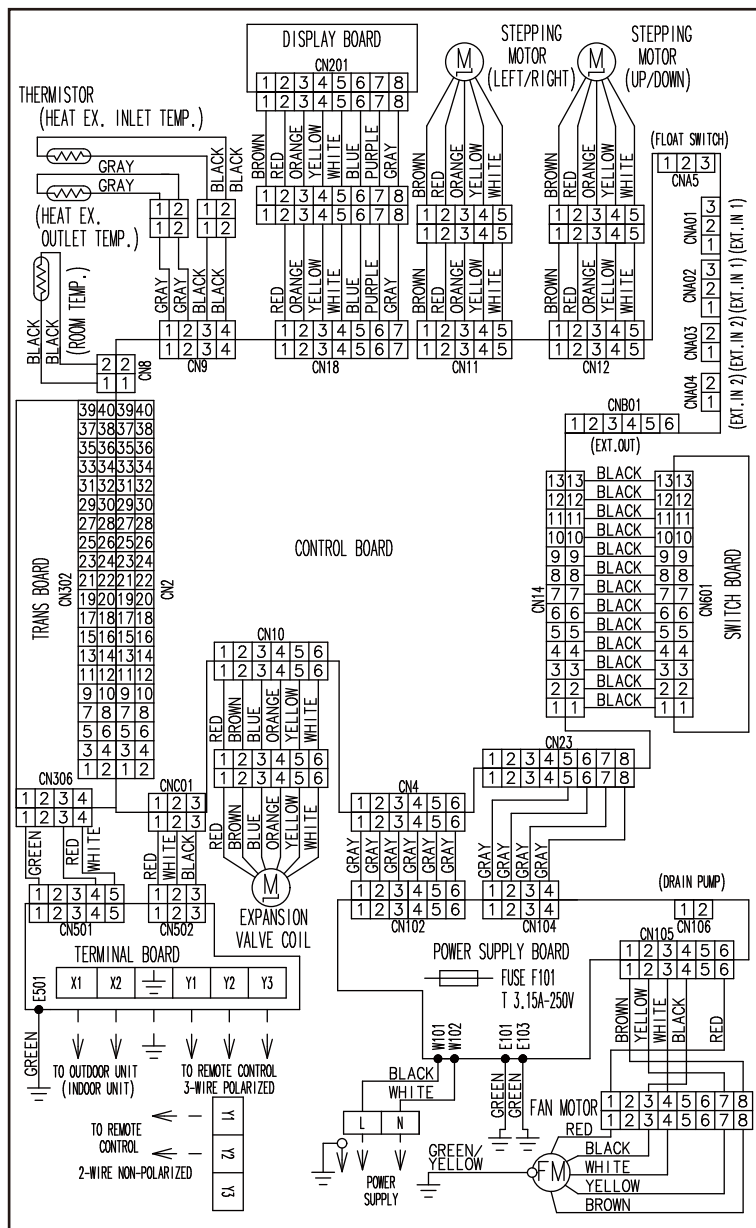


CEILING TYPE

MODELS : AB* A30GATH, AB* A36GATH, AB* A45GATH,
AB* A54GATH

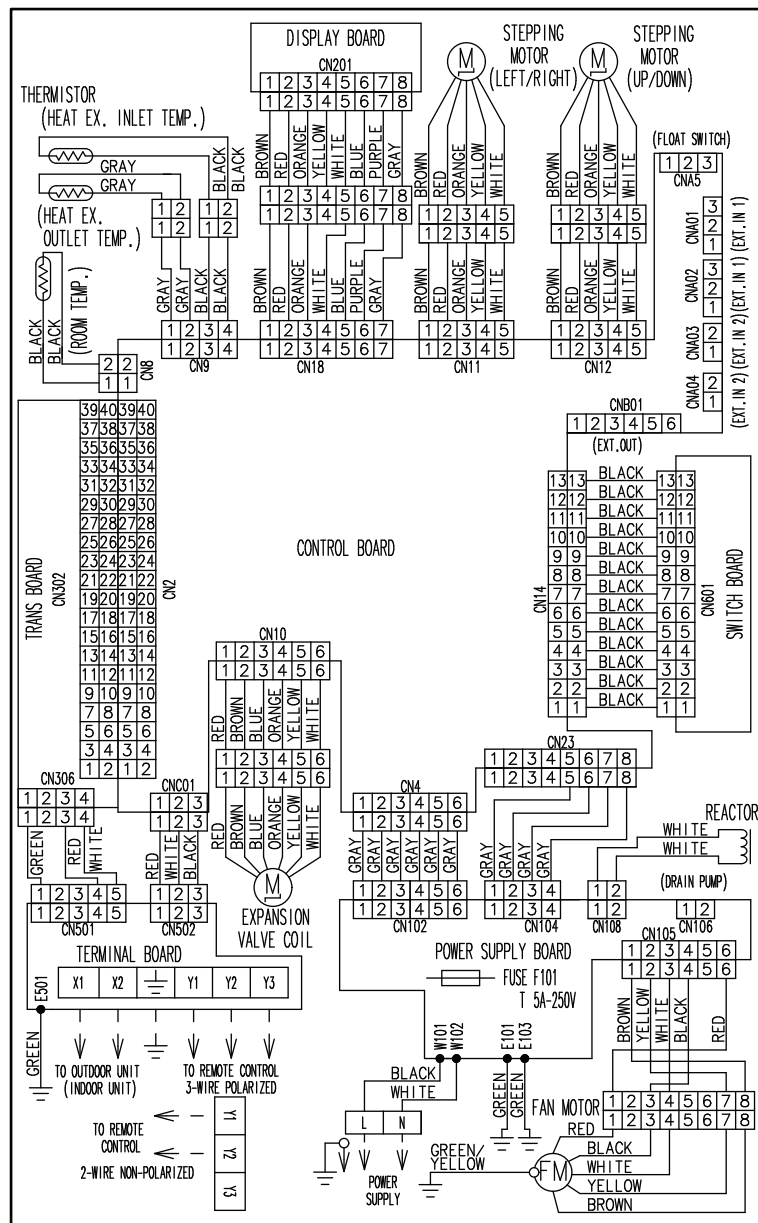


WALL MOUNTED TYPE (EEV external model)

MODELS : AS* E04GACH, AS* E07GACH, AS* E09GACH,
AS* E12GACH, AS* E14GACH

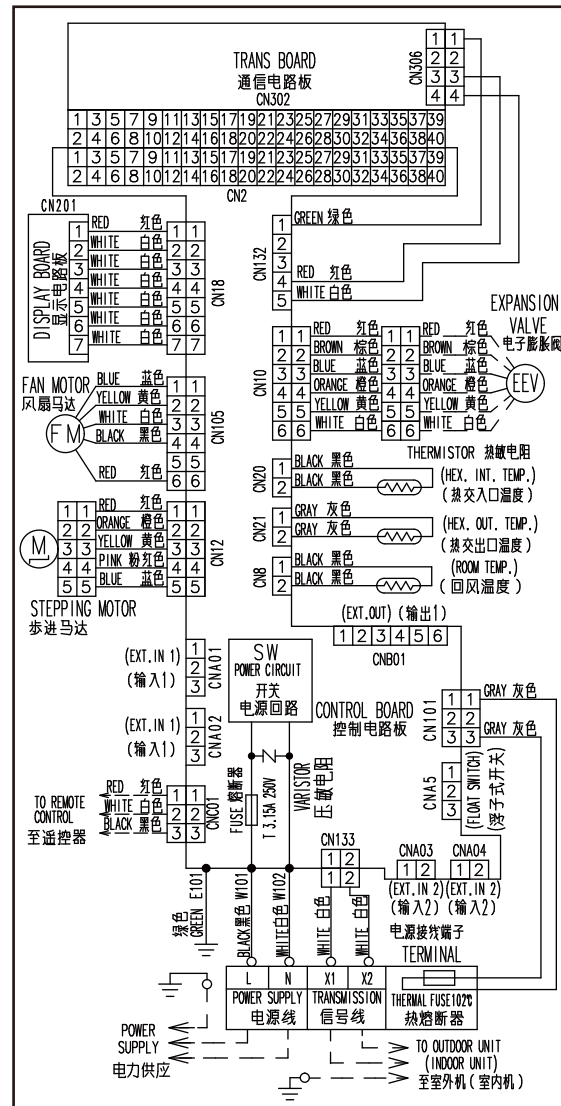


WALL MOUNTED TYPE

MODELS : AS* A04GACH, AS* A07GA* H, AS* A09GA* H,
AS* A12GA* H, AS* A14GA* H

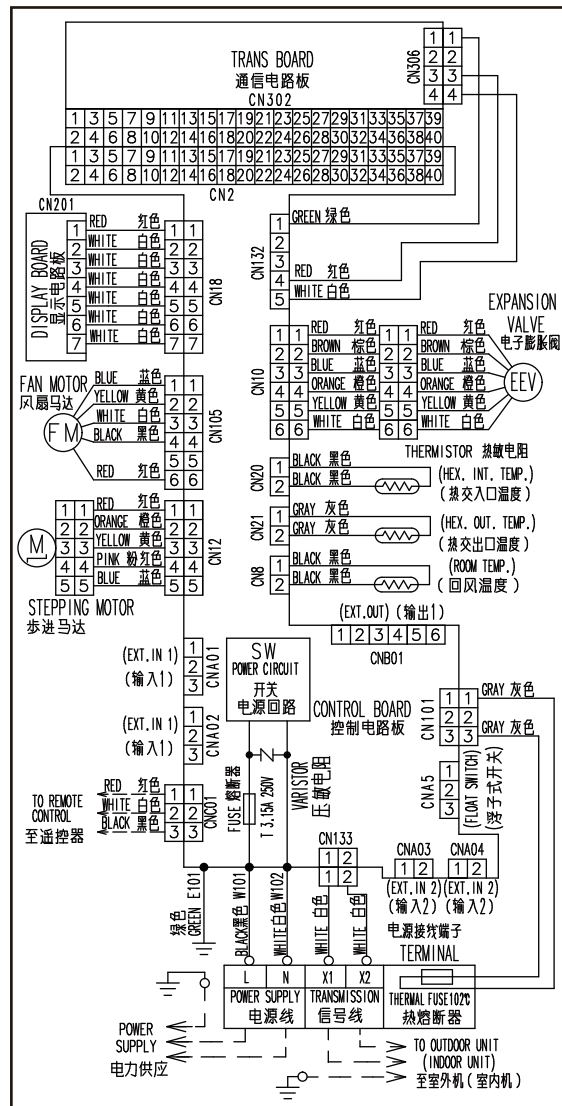


MODELS : AS* A18GA* H, AS* A24GA* H, AS* A30GA* H

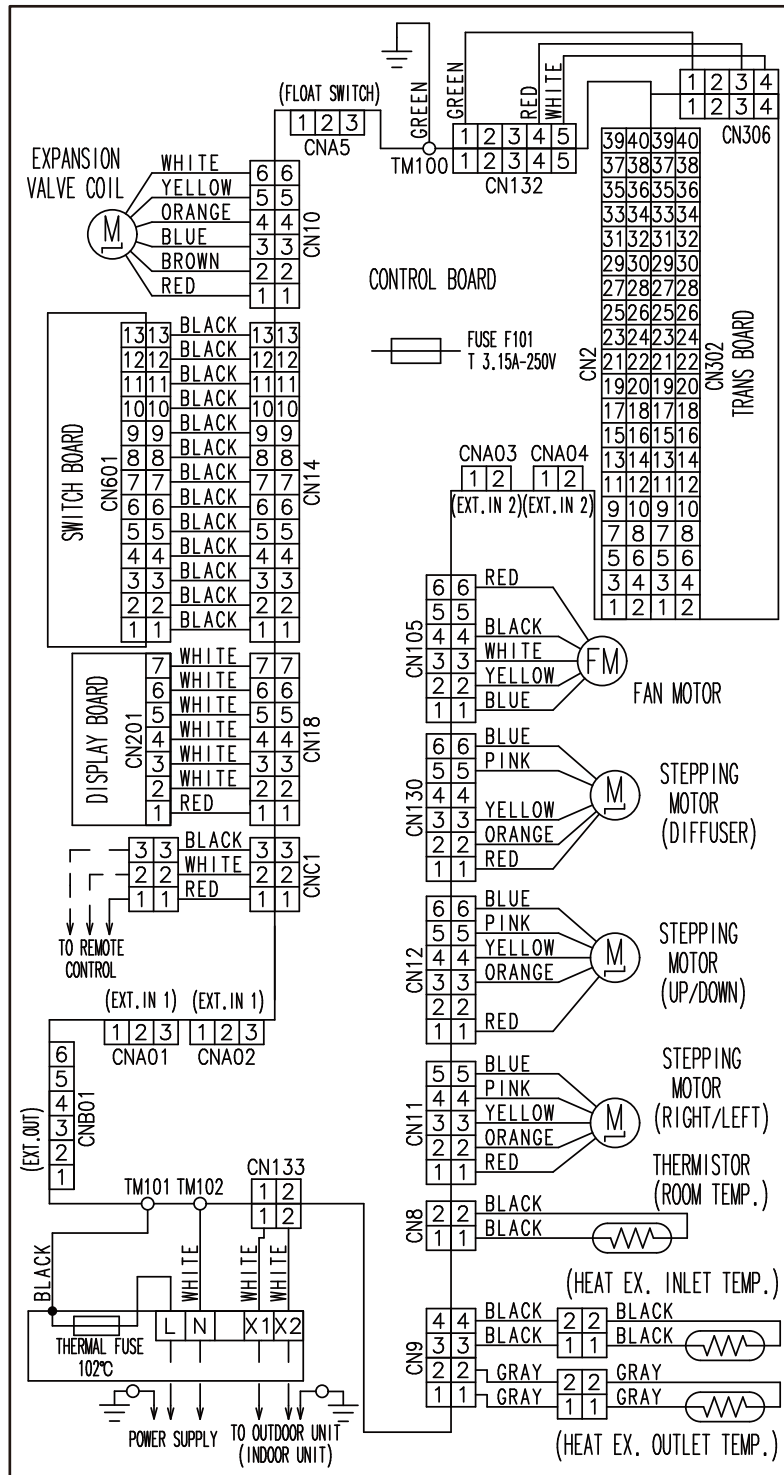


COMPACT WALL MOUNTED TYPE (EEV internal)

MODELS : ASYA004/ 007/ 009GTAH
ASHA004/ 007/ 009GTAH

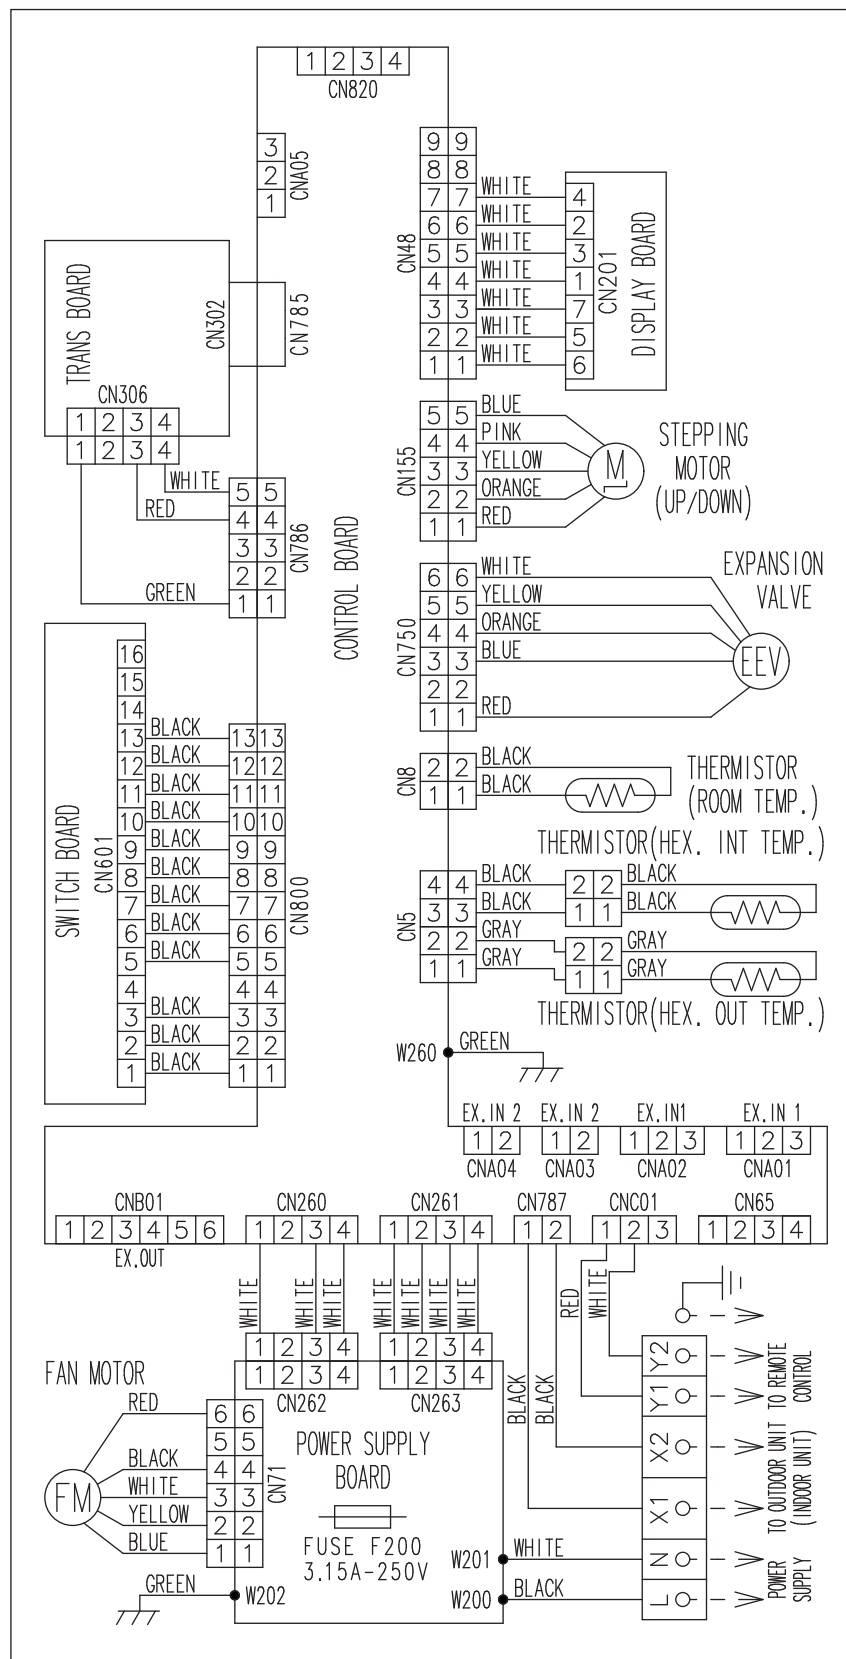

COMPACT WALL MOUNTED TYPE (EEV external)


MODELS : ASYE004/ 007/ 009GTAH
ASHE004/ 007/ 009GTAH

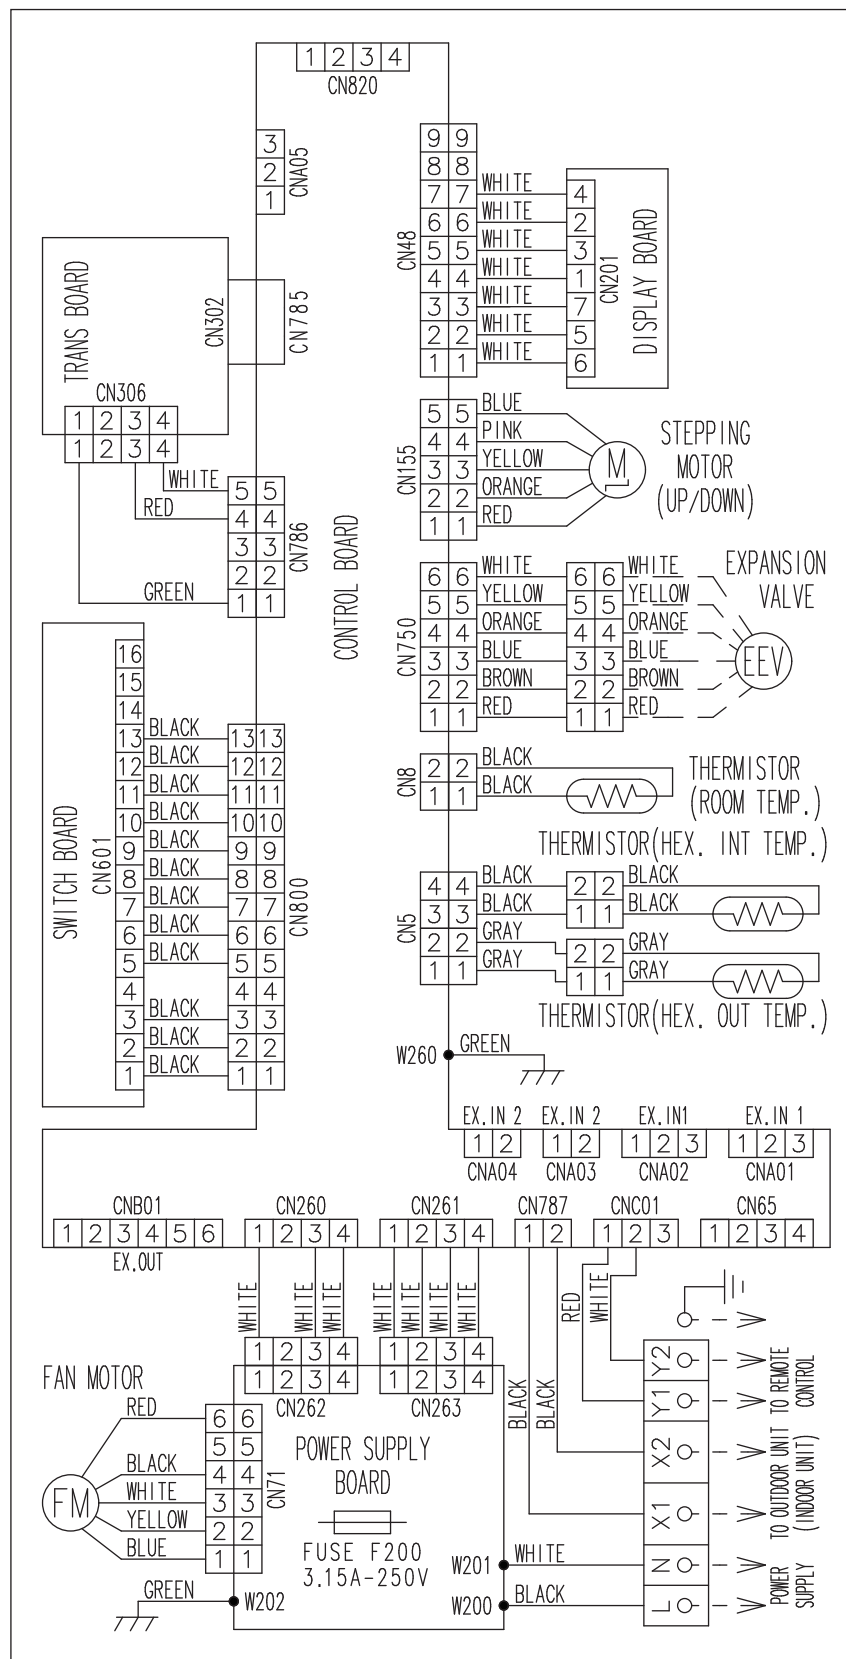

**MODELS : ASYA18/ 24/ 30GACH, ASHA18/ 24/ 30GACH
ASYA18/ 24/ 30GBCH, ASHA18/ 24/ 30GBCH**




**MODELS : ASYA030/ 034GTAH
ASHA030/ 034GTAH**

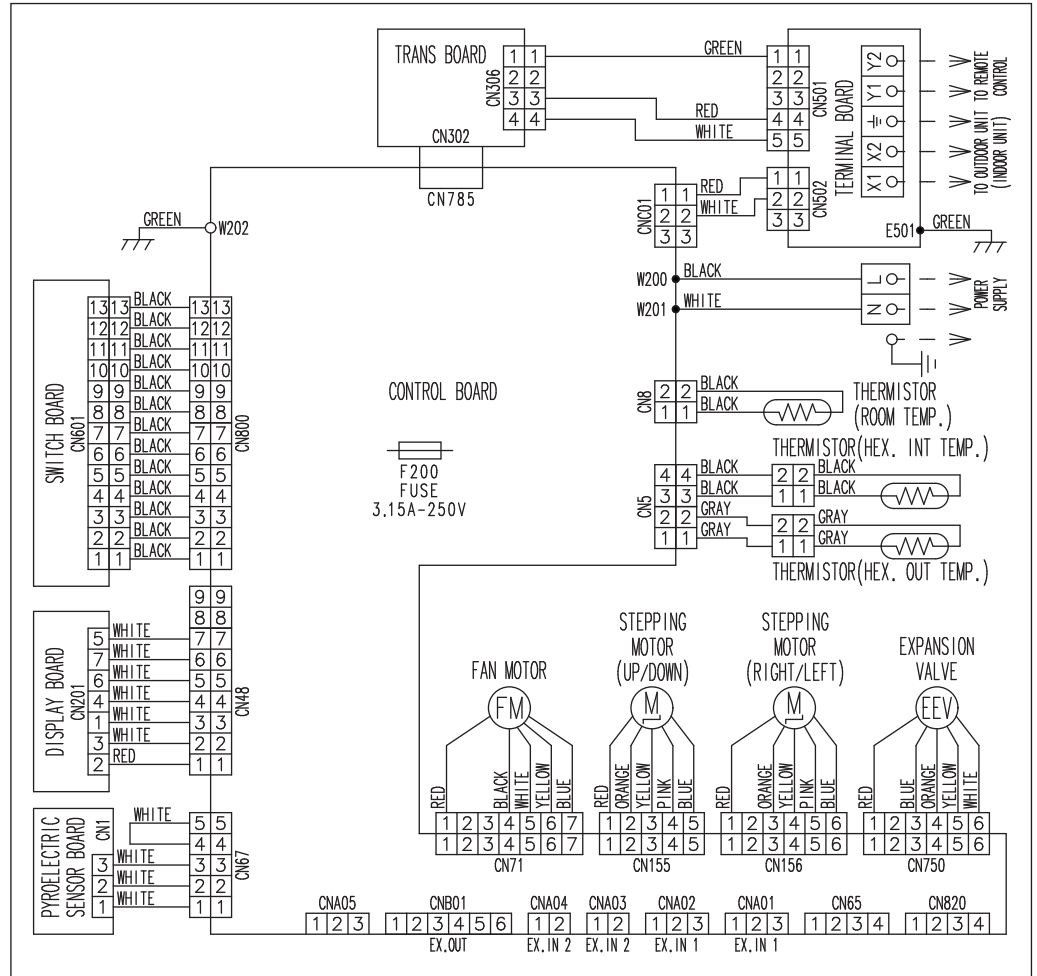


COMPACT FLOOR TYPE (EEV internal)

MODELS : AGYA004/ 007/ 009/ 012/ 014GCAH
AGHA004/ 007/ 009/ 012/ 014GCAH

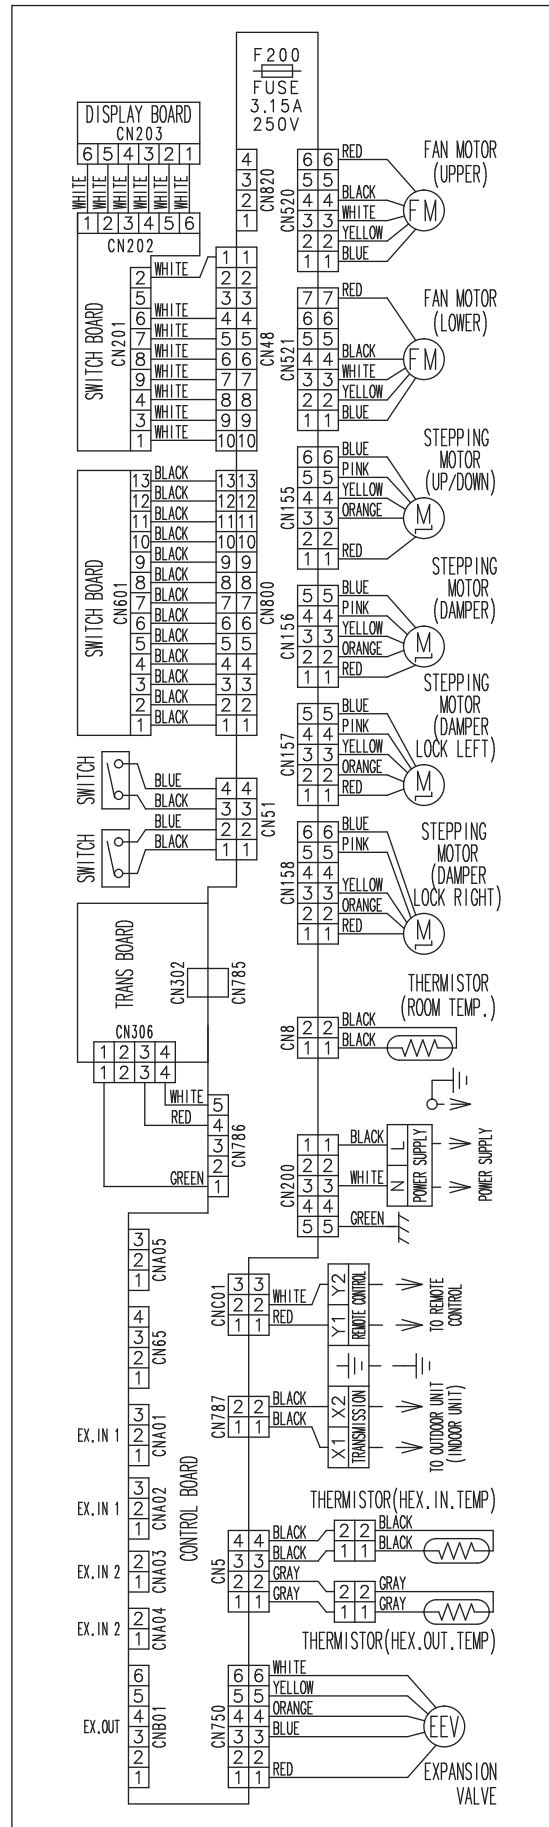


**MODELS : AGYE004/ 007/ 009/ 012/ 014GCAH
AGHE004/ 007/ 009/ 012/ 014GCAH**

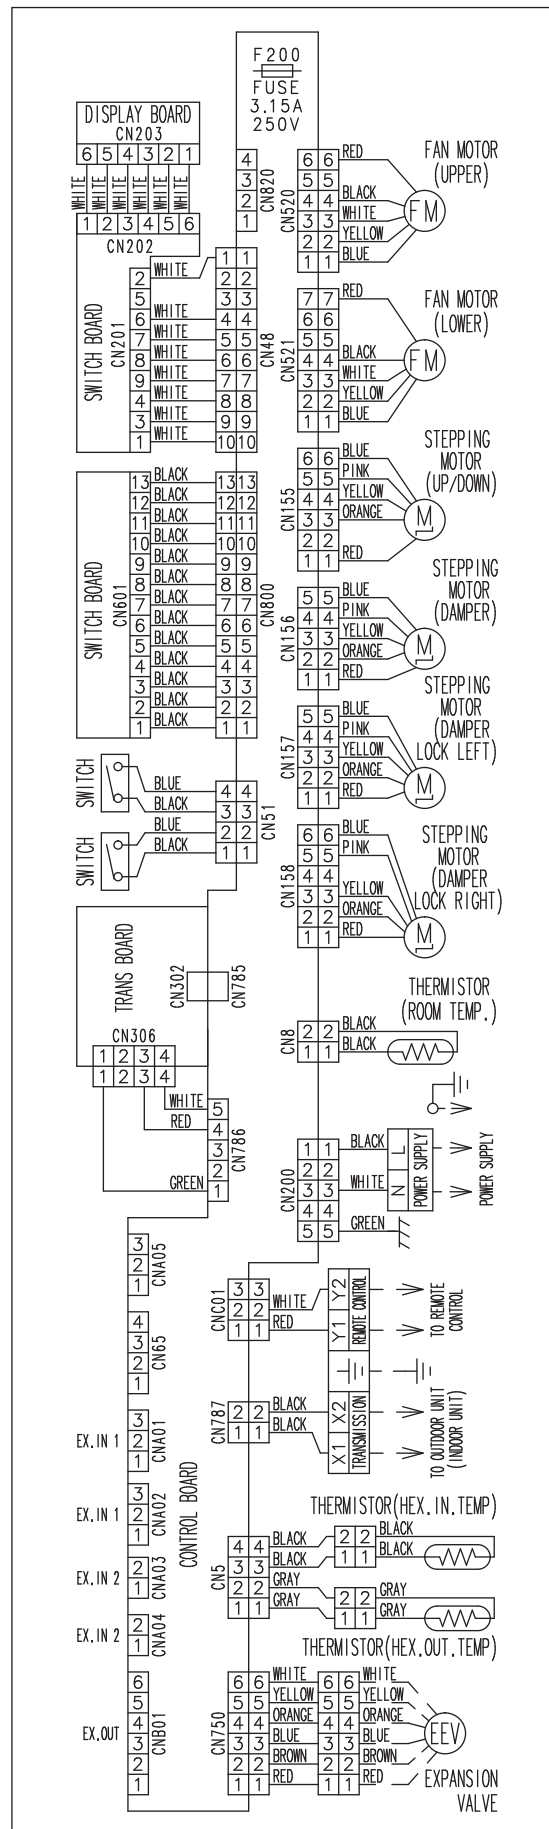


OUTDOOR AIR UNIT


MODEL : ARXH054GTAH

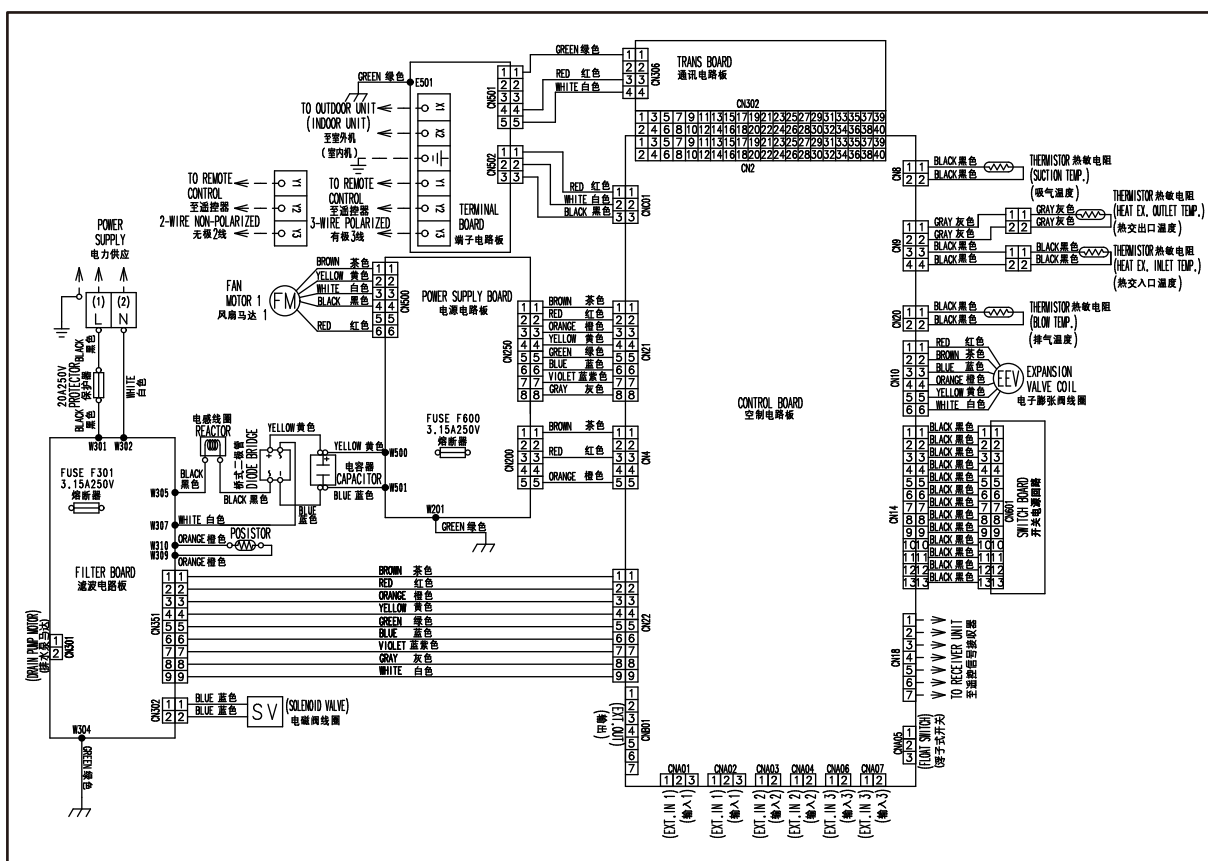

MODEL : ARXH072GTAH

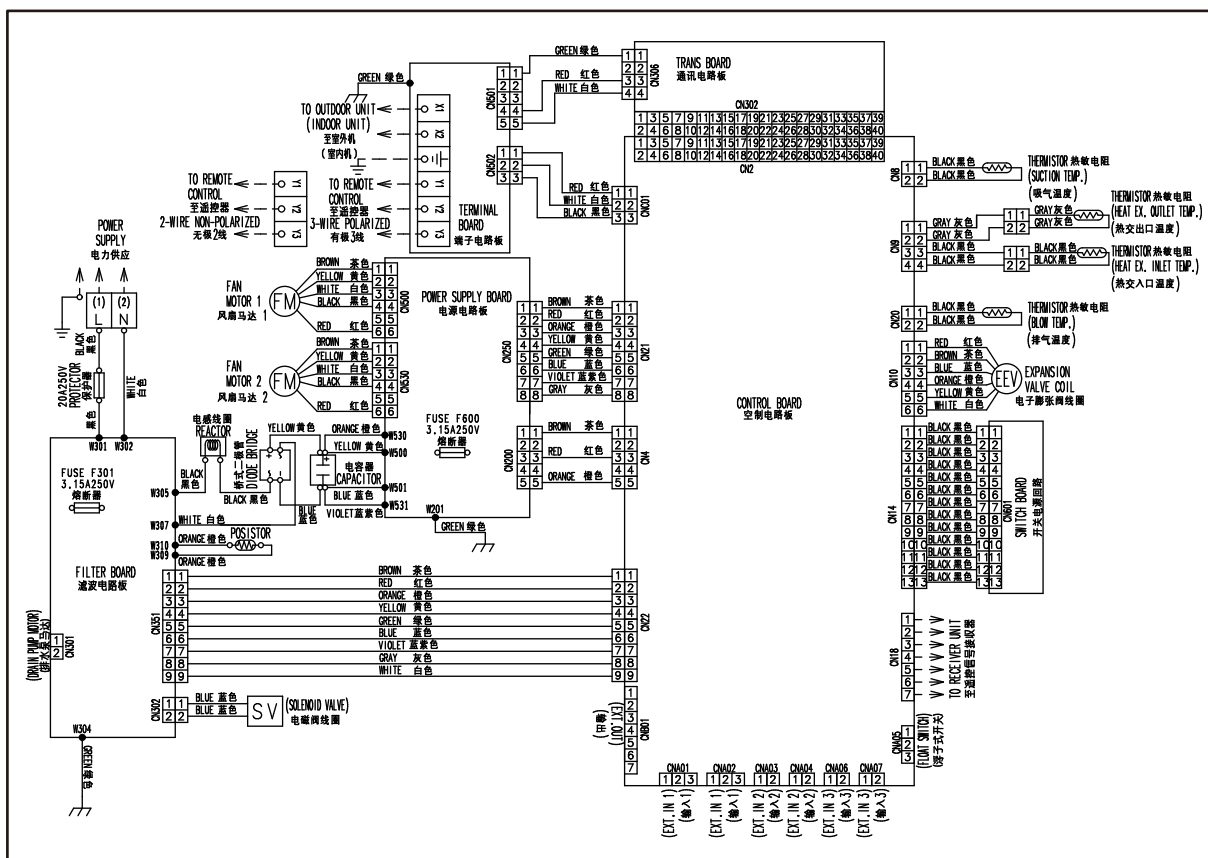


MODEL : ARXH096GTAH

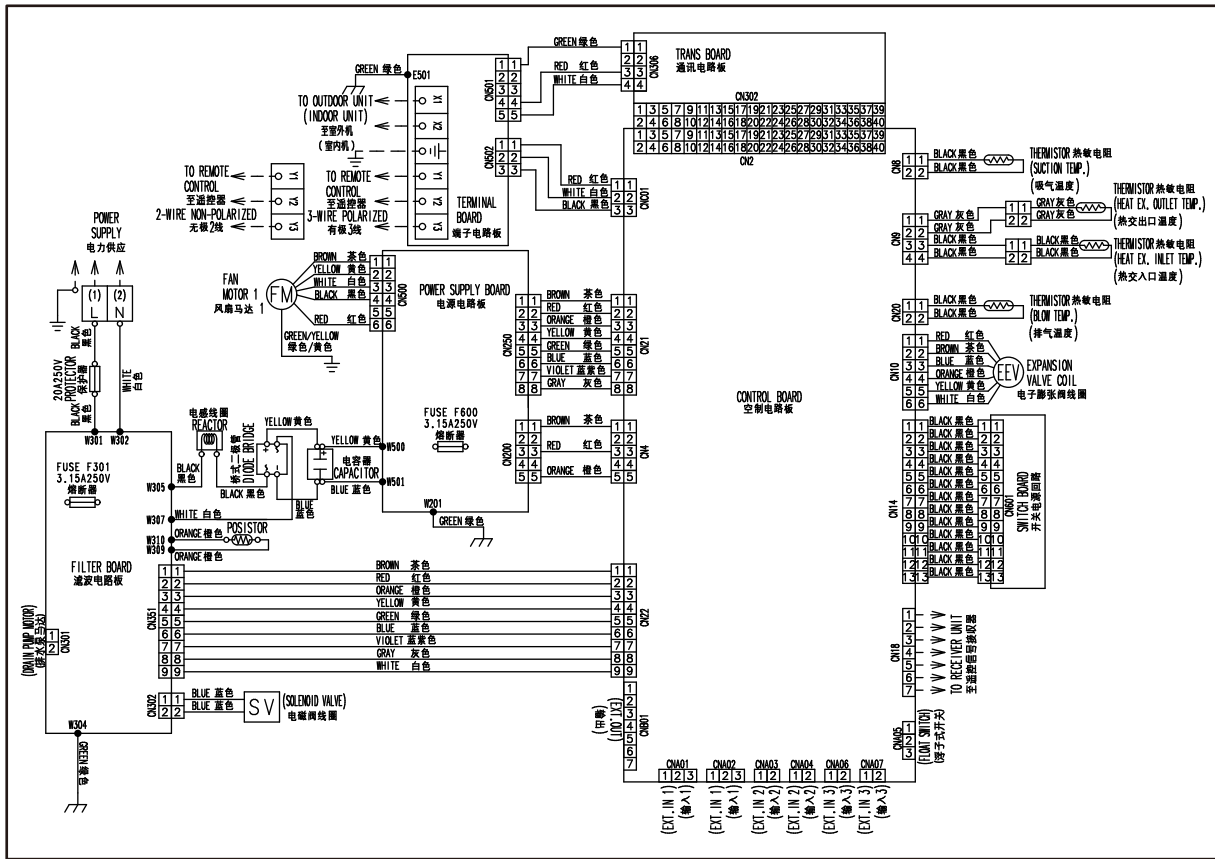


5-2-2 Outdoor Unit


MODELS: AJ*040LBLAH, AJ*045LBLAH

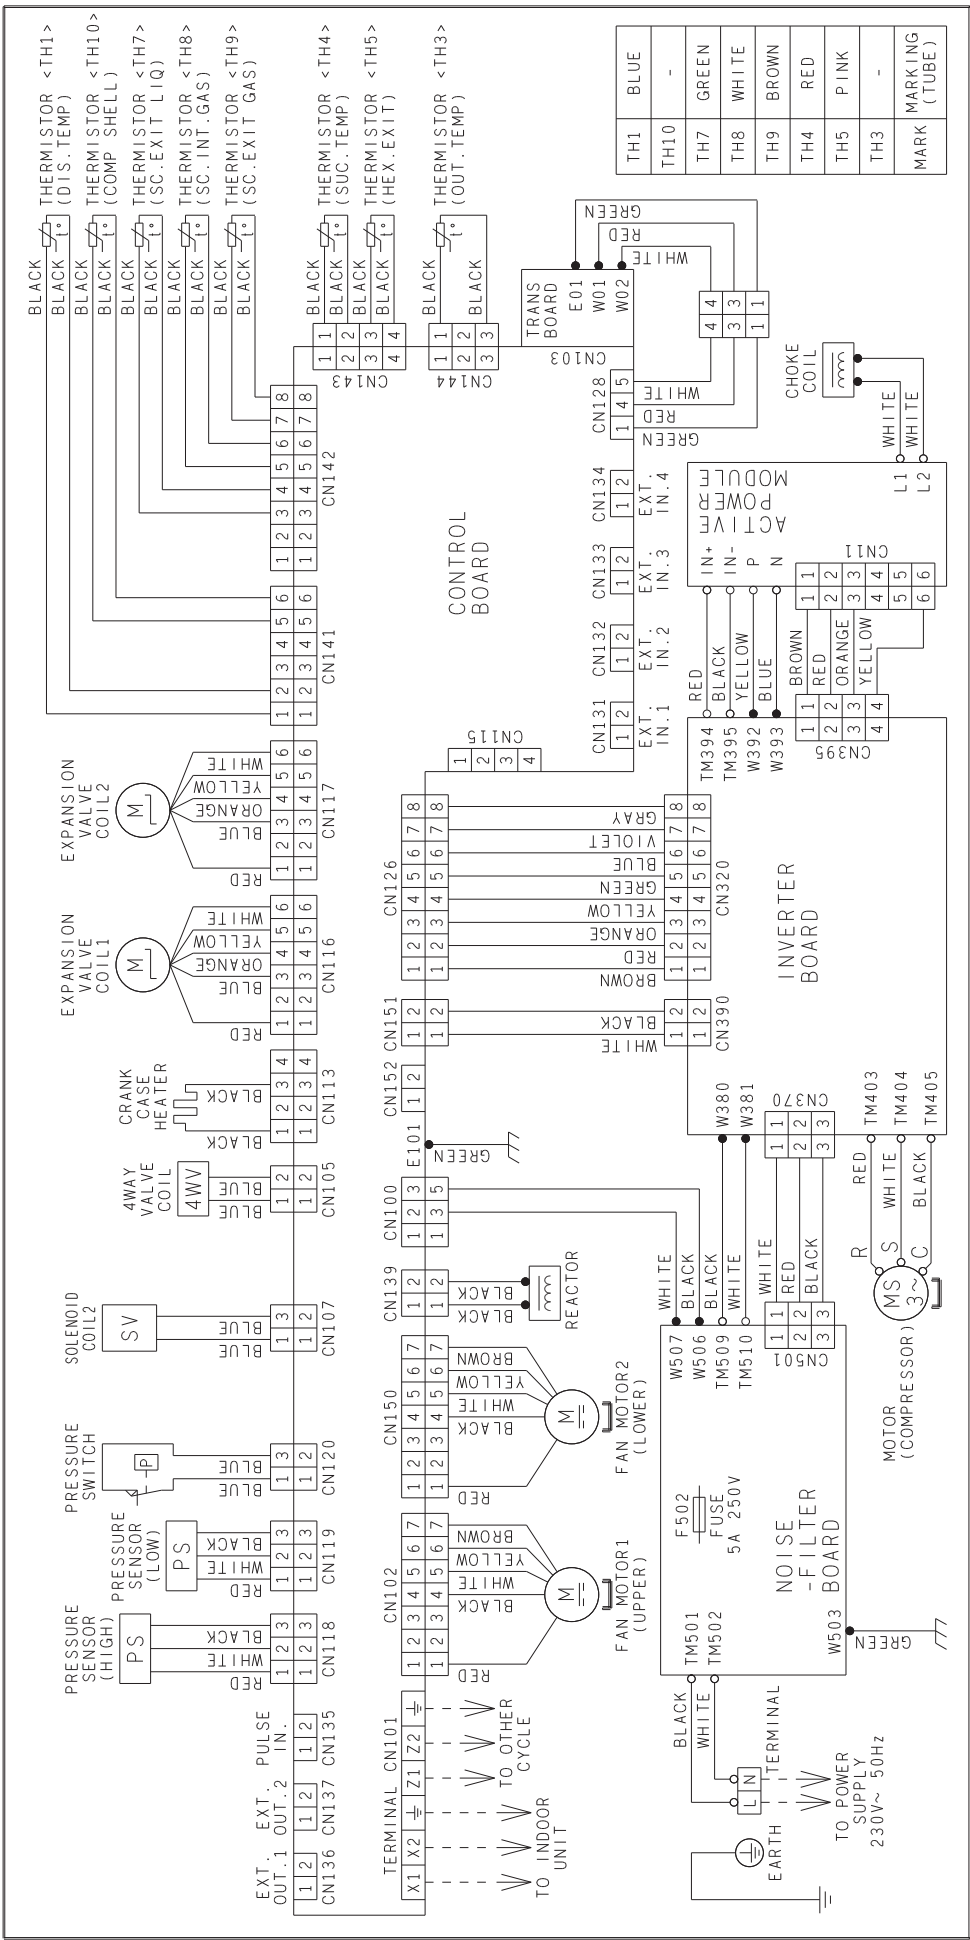

MODEL: AJ*054LBLAH

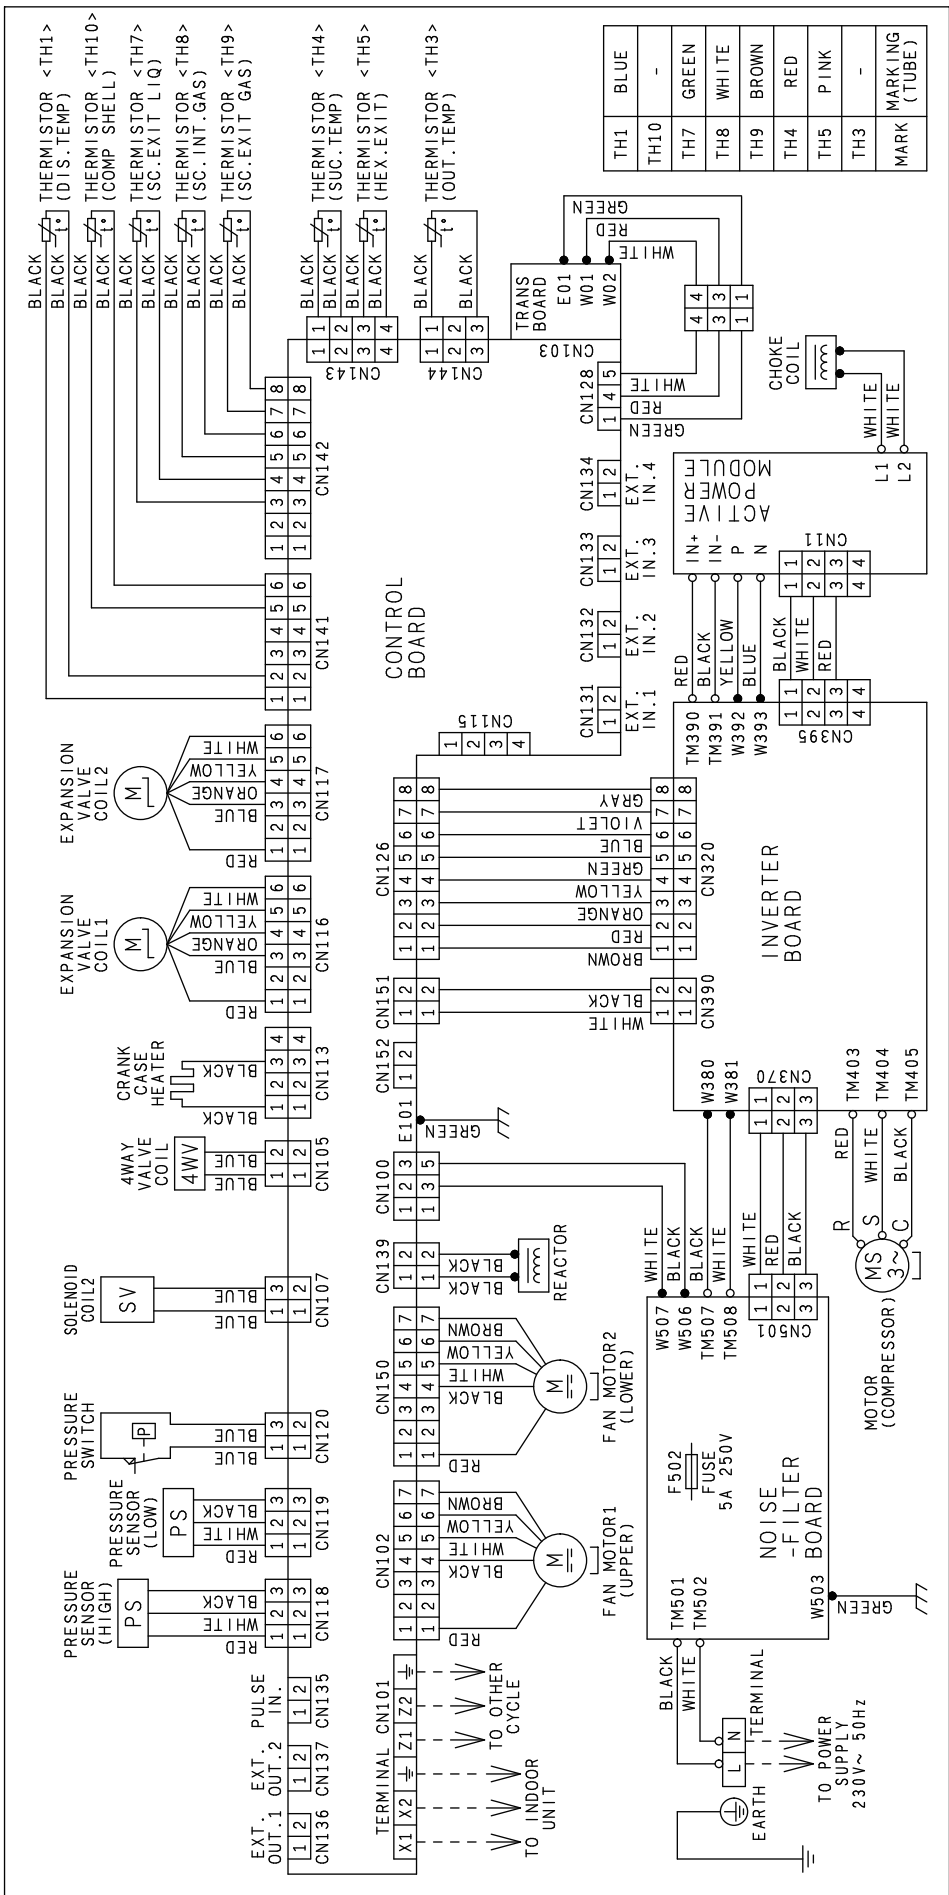


MODELS: AJ*040LELAH, AJ*045LELAH, AJ*054LELAH

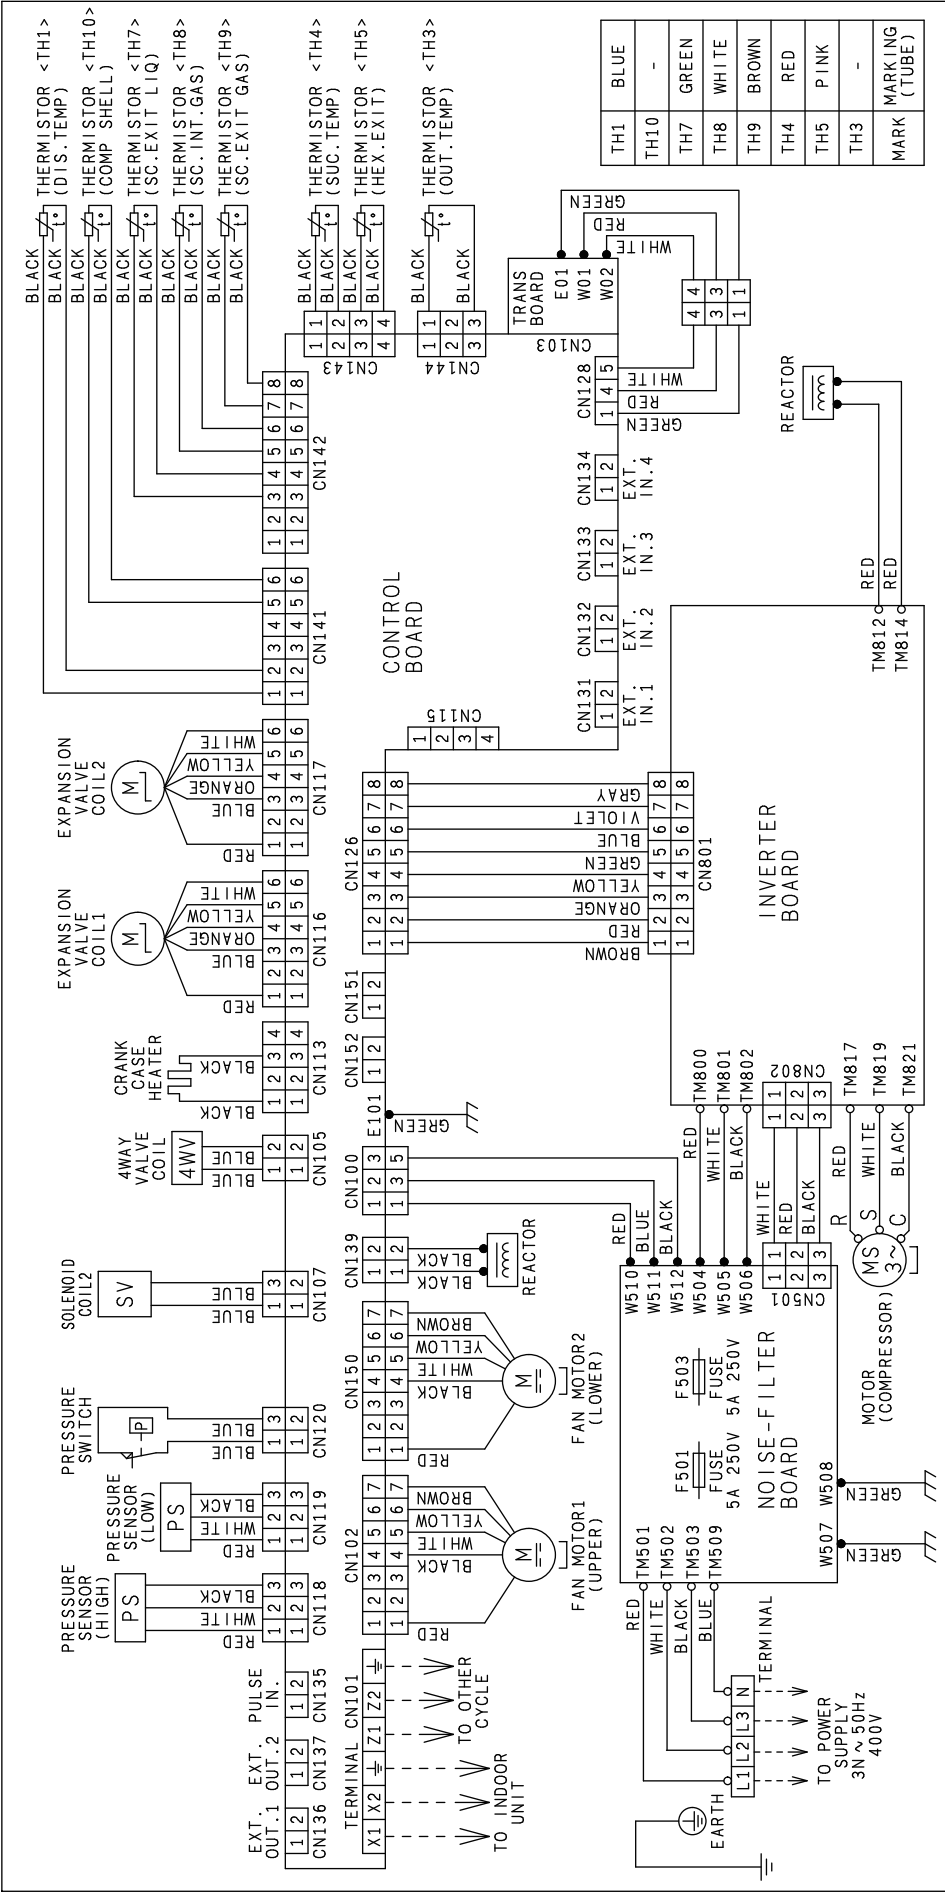

5-2-3 DX-KIT

1. REFRIGERANT CIRCUIT

MODELS: UTP-VX30A, UTP-VX60A, UTP-VX90A

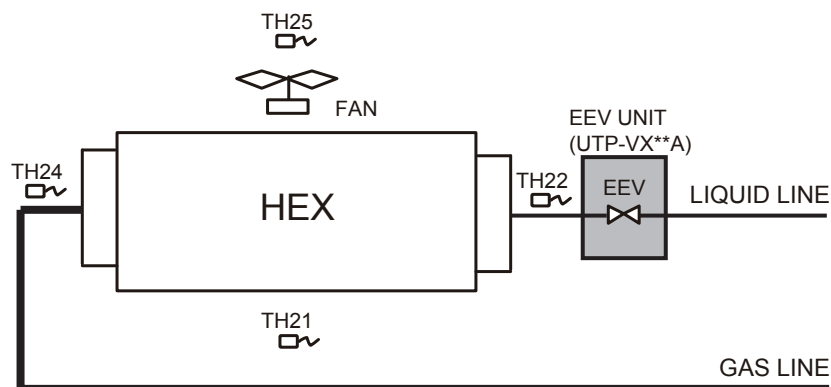


SYMBOL DESCRIPTION

MARK	DESCRIPTION
HEX	Heat exchanger (Locally purchased)
FAN	Fan (Locally purchased)
EEV	Electric expansion valve
TH21	Suction airflow temperature thermistor
TH22	Heat exchanger (inlet) thermistor
TH24	Heat exchanger (outlet) thermistor
TH25	Discharge airflow temperature thermistor

2. WIRING DIAGRAMS

MODEL: UTY-VDGX

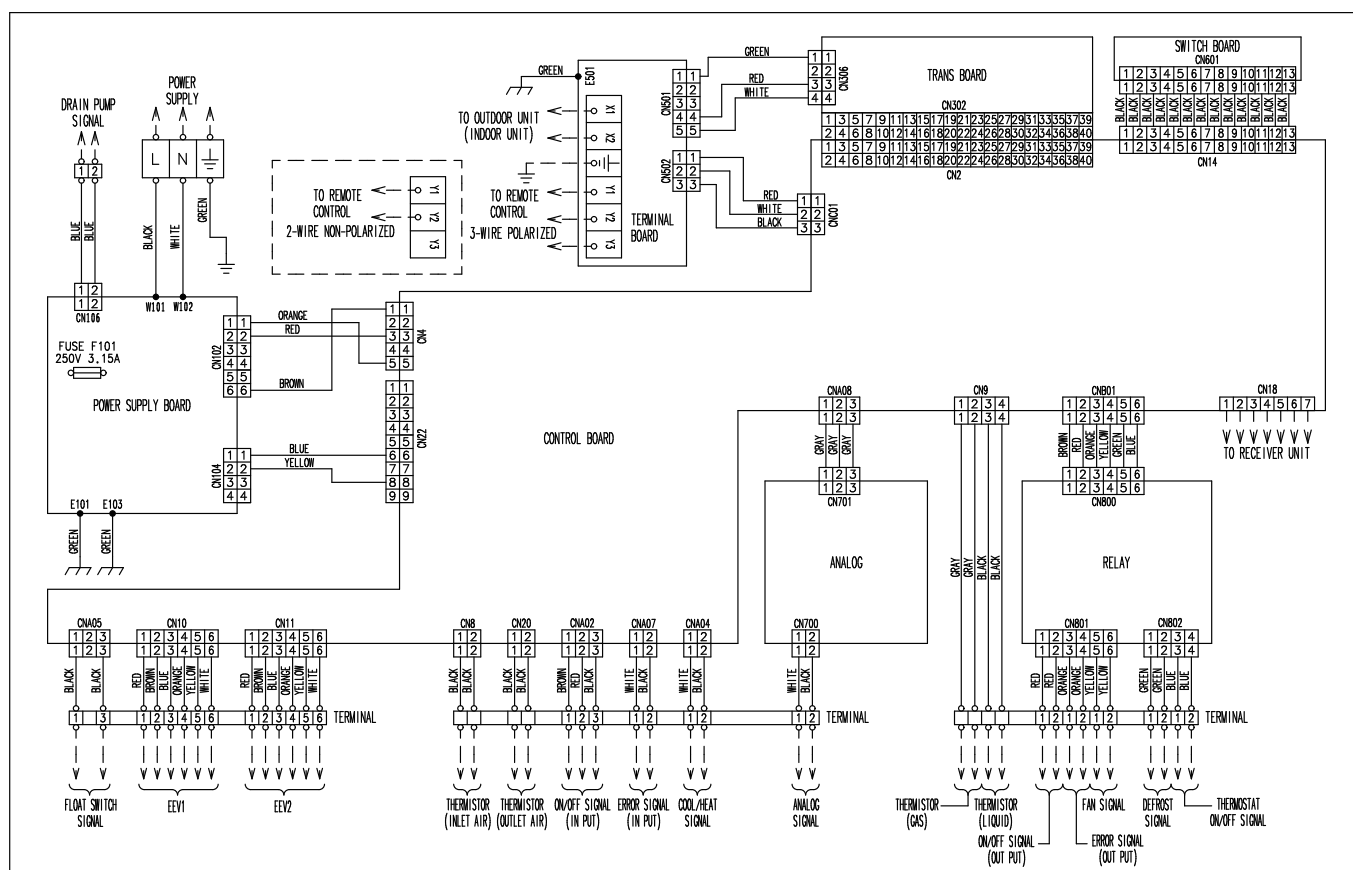

3. TERMINAL BLOCK LAYOUT

3rd row

				1	2	1	2	1	2	1	2	1	2
Thermistor (GAS)		Thermistor (LIQUID)		ON/OFF Signal (OUT PUT)		Error SIGNAL (OUT PUT)		FAN SIGNAL		DEFROST SIGNAL		THERMOSTAT ON/OFF SIGNAL	

2nd row

				1	2	3	1	2	1	2	1	2	
Thermistor (INLET AIR)		Thermistor (OUTLET AIR)		ON/OFF Signal (IN PUT)			ERROR SIGNAL (IN PUT)		COOL/HEAT SIGNAL		ANALOG SIGNAL		

1st row

1	2	1	2	3	4	5	6	1	2	3	4	5	6
FLOAT SW SIGNAL		EEV1						EEV2					


1	2	L	N	E
DRAIN PUMP OUTPUT		POWER SUPPLY		

X1	X2	E	Y1	Y2	Y3
TRANSMISSION TO OUTDOOR UNIT			TO REMOTE-CONTROL		


5-3 CHARACTERISTICS OF SENSORS

5-3-1 Pressure sensor

1. Discharge Pressure Sensor - Pressure Sensor (HIGH): CN118 -

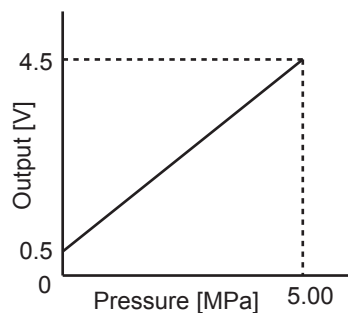


With the connector connected to the PCB, measure the voltage between CN118 : 2-3 of the Main PCB.




Pressure (MPa)	0.00	0.10	0.20	0.30	0.40	0.50	0.70	0.80	0.90	1.00	1.20	1.40	1.60	1.80	2.00
Output (V)	0.50	0.58	0.66	0.74	0.82	0.90	1.06	1.14	1.22	1.30	1.46	1.62	1.78	1.94	2.10

Pressure (MPa)	2.20	2.40	2.60	2.80	3.00	3.20	3.40	3.60	3.80	4.00	4.20	4.40	4.60	4.80	5.00
Output (V)	2.26	2.42	2.58	2.74	2.90	3.06	3.22	3.38	3.54	3.70	3.86	4.02	4.18	4.34	4.50

2. Suction Pressure Sensor - Pressure Sensor (Low): CN119 -

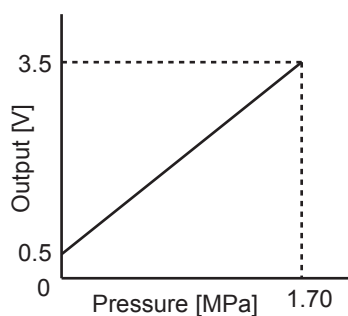

With the connector connected to the PCB, measure the voltage between CN119 : 2-3 of the Main PCB.



Pressure (MPa)	0.00	0.10	0.20	0.30	0.40	0.50	0.70	0.80	0.90	1.00	1.10	1.20	1.30	1.40	1.50	1.60	1.70
Output (V)	0.50	0.68	0.85	1.03	1.21	1.38	1.74	1.91	2.09	2.27	2.44	2.62	2.79	2.97	3.15	3.32	3.50

5-3-2 Thermistor resistance

Thermistor resistance value <Outdoor unit side>

Temperature [°C]	Resistance Value [kΩ]		
	Thermistor A	Thermistor B	Thermistor C
- 20	---	---	105.4
- 10	---	27.8	58.2
- 5	---	21.0	44.0
0	168.6	16.1	33.6
5	129.8	12.4	25.9
10	100.9	9.6	20.2
15	79.1	7.6	15.8
20	62.6	6.0	12.5
25	49.8	4.8	10.0
30	40.0	3.8	8.0
40	26.3	2.5	5.3
50	17.8	1.7	3.6
60	12.3	1.2	---
70	8.7	---	---
80	6.3	---	---
90	4.6	---	---
100	3.4	---	---
110	2.6	---	---
120	2.0	---	---
Applicable Thermistors	Discharge temp. TH1 Comp.1 temp. TH10	Heat exchanger. TH5 Suction temp. TH4 Sub-cool heat exchanger Gas (inlet) TH8 Sub-cool heat exchanger Gas (outlet) TH9 Sub-cool heat exchanger Liquid temp TH7	Outdoor temp. TH3

Thermistor resistance value <Indoor unit side>

Indoor Temperature Thermistor (TH21)

Temperature (°C)	0	5	10	15	20	25	30	35
Resistance Value (kΩ)	33.6	25.2	20.1	15.8	12.5	10.0	8.0	6.5

Temperature (°C)	40	45	50
Resistance Value (kΩ)	5.3	4.3	3.5

Heat Exchanger Thermistor (Inlet TH22 / Outlet TH23)

Temperature (°C)	0	5	10	15	20	25	30	35
Resistance Value (kΩ)	168.6	129.8	100.9	79.1	62.5	49.8	40.0	32.4

Temperature (°C)	40	45	50
Resistance Value (kΩ)	26.3	21.2	17.8

5-3-3 Saturation temperature and saturation pressure tables (°C / Mpa)


(Pressure: Gauge pressure)

Temp. (°C)	Saturation pressure (Mpa)	
	Saturated liquid	Saturated gas
-30	0.1722	0.1717
-29	0.1836	0.1830
-28	0.1953	0.1947
-27	0.2074	0.2067
-26	0.2199	0.2192
-25	0.2328	0.2320
-24	0.2460	0.2452
-23	0.2597	0.2588
-22	0.2737	0.2728
-21	0.2882	0.2872
-20	0.3031	0.3021
-19	0.3185	0.3174
-18	0.3343	0.3331
-17	0.3505	0.3493
-16	0.3672	0.3659
-15	0.3844	0.3830
-14	0.4021	0.4006
-13	0.4202	0.4187
-12	0.4389	0.4373
-11	0.4580	0.4563
-10	0.4776	0.4759
- 9	0.4978	0.4960
- 8	0.5185	0.5166
- 7	0.5398	0.5377
- 6	0.5616	0.5594
- 5	0.5839	0.5817
- 4	0.6069	0.6045
- 3	0.6304	0.6279
- 2	0.6545	0.6519
- 1	0.6791	0.6765
0	0.7044	0.7017
1	0.7303	0.7274
2	0.7569	0.7539
3	0.7840	0.7809
4	0.8119	0.8086
5	0.8403	0.8369
6	0.8695	0.8659
7	0.9000	0.8956
8	0.930	0.926
9	0.961	0.957
10	0.993	0.989
11	1.026	1.022
12	1.059	1.055
13	1.093	1.089
14	1.128	1.123
15	1.164	1.159
16	1.200	1.195
17	1.237	1.232

Temp. (°C)	Saturation pressure (Mpa)	
	Saturated liquid	Saturated gas
18	1.275	1.270
19	1.314	1.308
20	1.353	1.348
21	1.394	1.388
22	1.435	1.429
23	1.477	1.471
24	1.520	1.513
25	1.563	1.557
26	1.608	1.601
27	1.654	1.647
28	1.700	1.693
29	1.747	1.740
30	1.796	1.788
31	1.845	1.837
32	1.895	1.887
33	1.946	1.938
34	1.998	1.990
35	2.051	2.043
36	2.105	2.097
37	2.160	2.152
38	2.216	2.208
39	2.273	2.265
40	2.332	2.323
41	2.391	2.382
42	2.451	2.442
43	2.513	2.503
44	2.575	2.565
45	2.639	2.629
46	2.703	2.693
47	2.769	2.759
48	2.836	2.826
49	2.904	2.894
50	2.974	2.963
51	3.044	3.034
52	3.116	3.106
53	3.189	3.178
54	3.263	3.253
55	3.338	3.328
56	3.415	3.405
57	3.493	3.483
58	3.572	3.562
59	3.653	3.643
60	3.735	3.725
61	3.818	3.808
62	3.902	3.893
63	3.988	3.979
64	4.075	4.066
65	4.164	4.155

Saturation pressure (Mpa)	Saturation temperature (°C)	
	Saturated liquid	Saturated gas
0.0	-51.85	-51.83
0.1	-37.25	-37.21
0.2	-27.61	-27.55
0.3	-20.21	-20.14
0.4	-14.12	-14.04
0.5	- 8.89	- 8.80
0.6	- 4.30	- 4.20
0.7	- 0.17	- 0.06
0.8	3.58	3.69
0.9	7.02	7.15
1.0	10.22	10.35
1.1	13.21	13.34
1.2	16.01	16.15
1.3	18.66	18.80
1.4	21.17	21.31
1.5	23.55	23.70
1.6	25.83	25.98
1.7	28.01	28.16
1.8	30.10	30.25
1.9	32.11	32.26
2.0	34.04	34.20
2.1	35.91	36.06
2.2	37.72	37.87
2.3	39.46	39.62
2.4	41.16	41.31
2.5	42.80	42.95
2.6	44.40	44.55
2.7	45.95	46.10
2.8	47.47	47.62
2.9	48.94	49.09
3.0	50.38	50.53
3.1	51.78	51.93
3.2	53.16	53.30
3.3	54.50	54.63
3.4	55.81	55.94
3.5	57.09	57.22
3.6	58.35	58.48
3.7	59.58	59.70
3.8	60.79	60.91
3.9	61.98	62.09
4.0	63.14	63.25
4.1	63.99	64.38

5-3-4 Temperature and pressure of refrigerant (Graph)

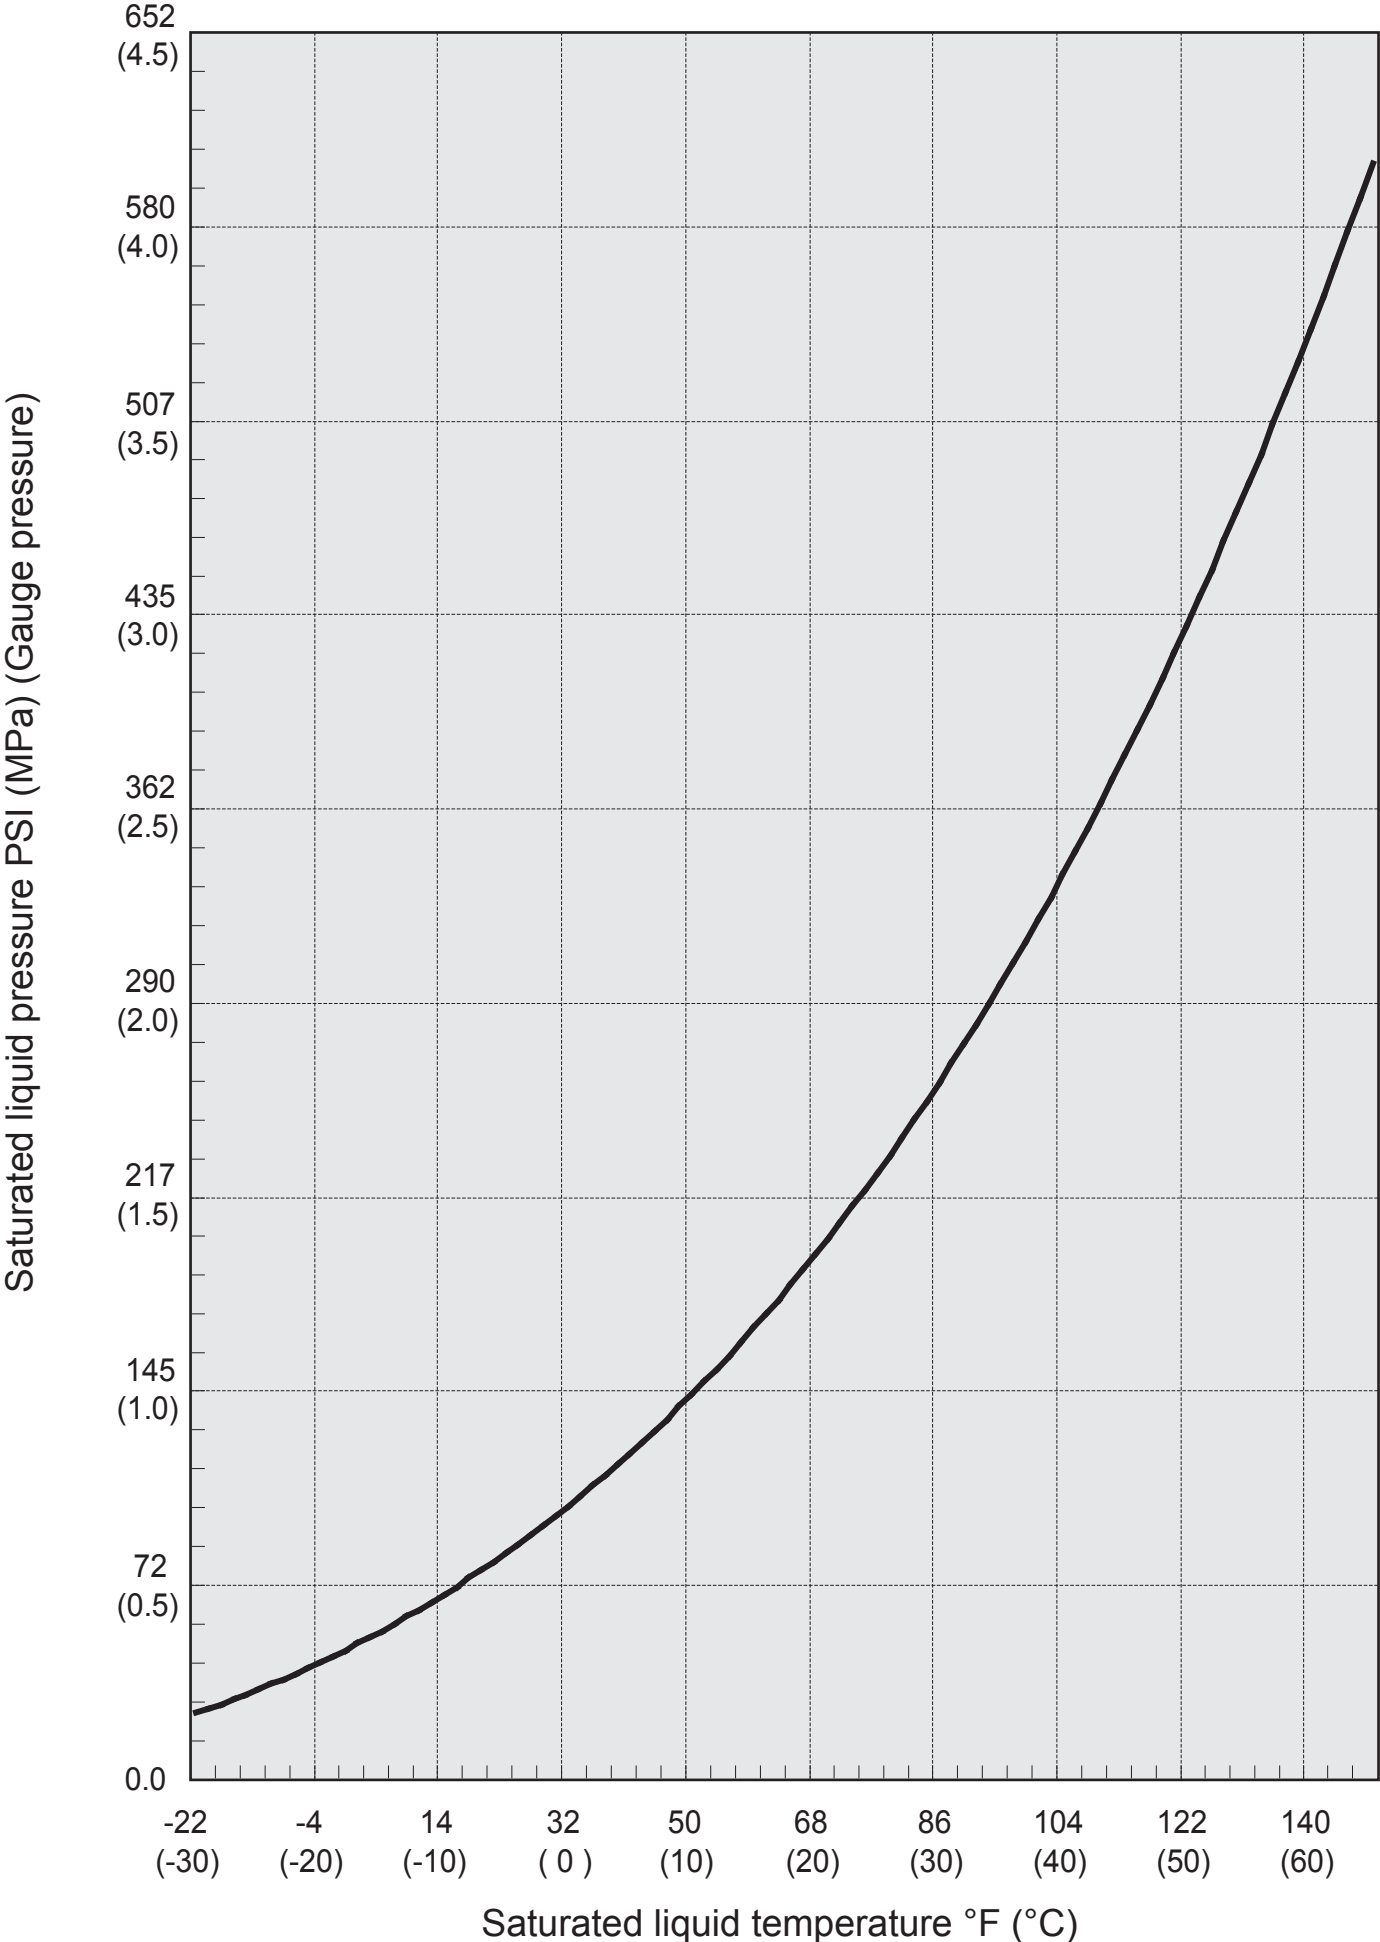



6. DISASSEMBLY PROCESS

6. DISASSEMBLY PROCESS


⚠ WARNING

Before servicing the unit, turn the power supply switch OFF,
Then, do not touch electric parts for 10 minutes due to the risk of electric shock.


1. Appearance



2. SERVICE PANEL removal

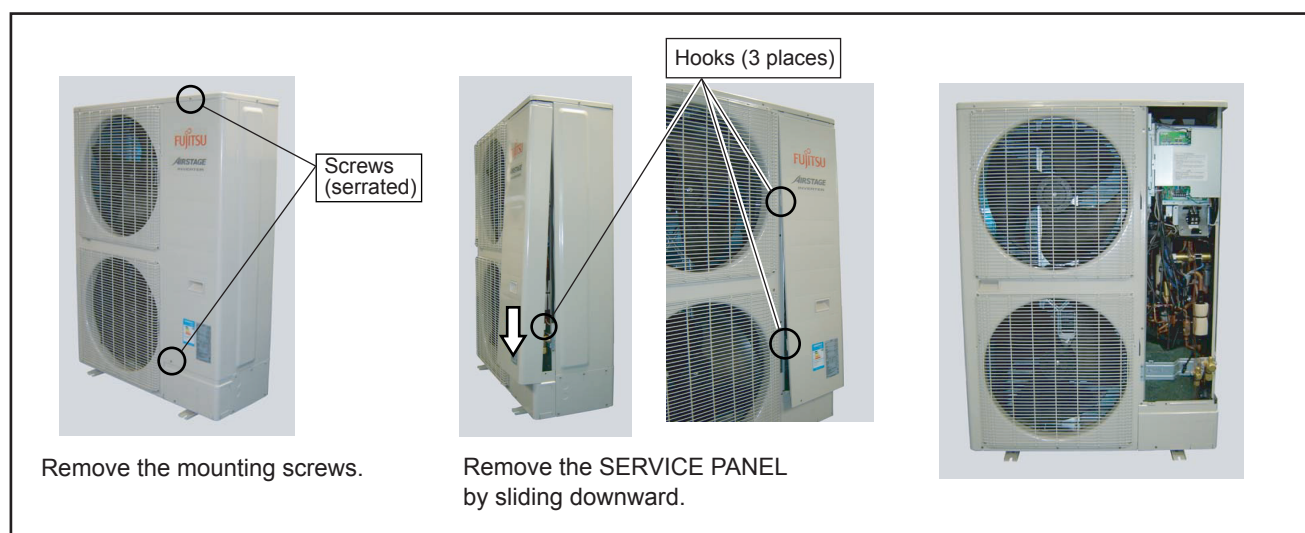

3. CONTROL COVER removal

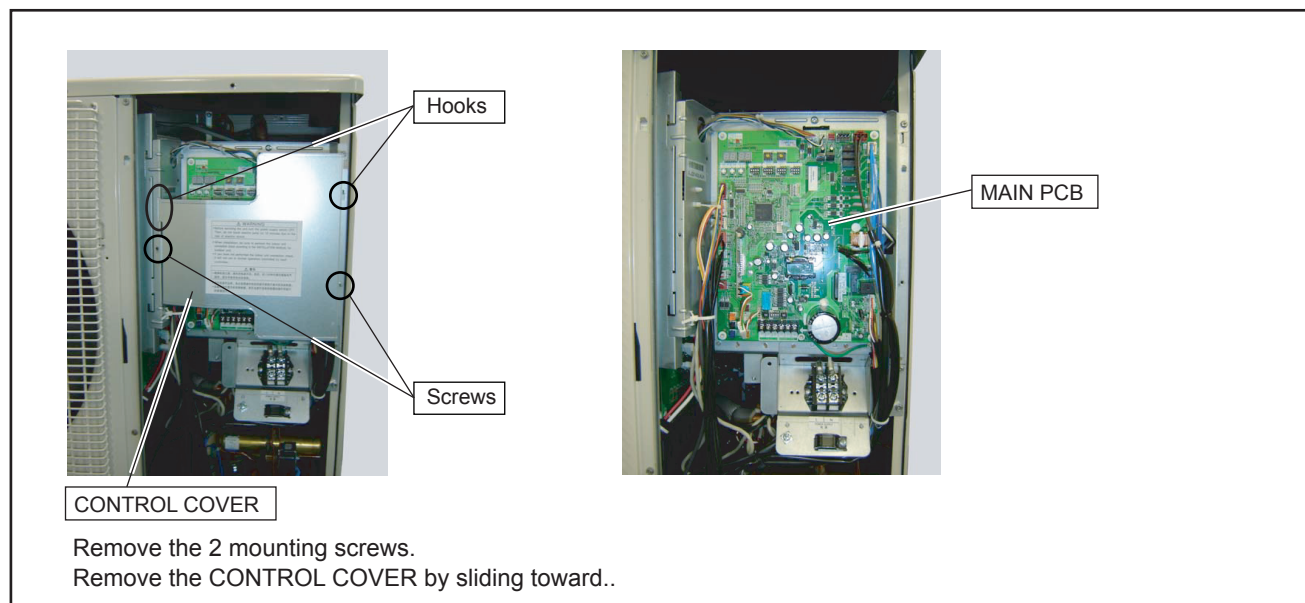

4. MAIN PCB removal

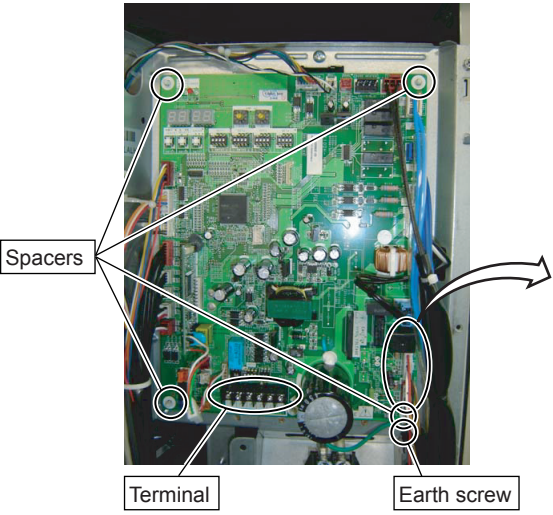


Diagram showing the Main PCB removal process. The image highlights the location of the communication cable terminal, the earth screw, and the spacers. An arrow points to a detailed view of the fan motor connectors.

Spacers

Terminal

Earth screw

Caution

- Be careful about position of Fan motor connector when you exchange Main PCB or Fan motor by the repair.

For Upper Fan motor (CN102)

For Lower Fan motor (CN150)

Remove the communication cable connected to the terminal.
Remove the earth screw.
Remove the connectors and spacers.

5. COMMUNICATION PCB removal

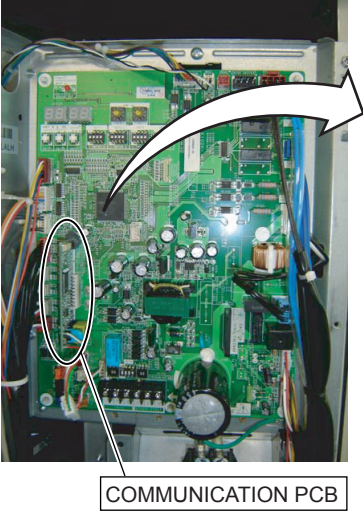


Diagram showing the Communication PCB removal process. The image highlights the location of the communication PCB and the connector. An arrow points to a detailed view of the connector.


COMMUNICATION PCB

Connector

Remove the connector.


Remove the COMMUNICATION PCB.

6. INVERTER PCB, FILTER PCB and ACTPM removal

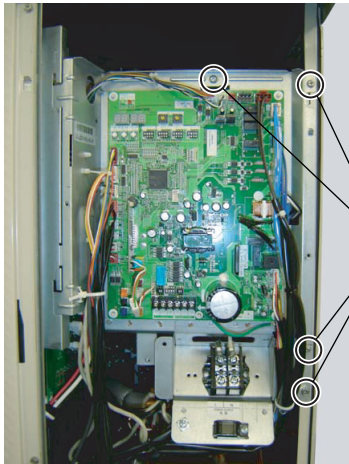


Screws

Remove the 4 mounting screws

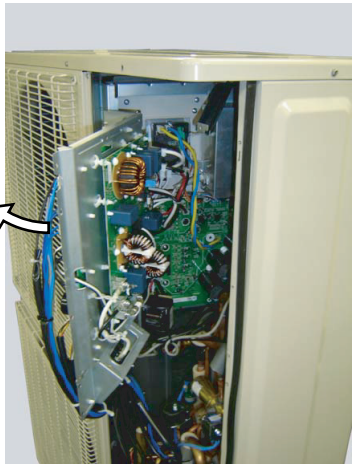

Open the CONTROL BOX (MAIN).

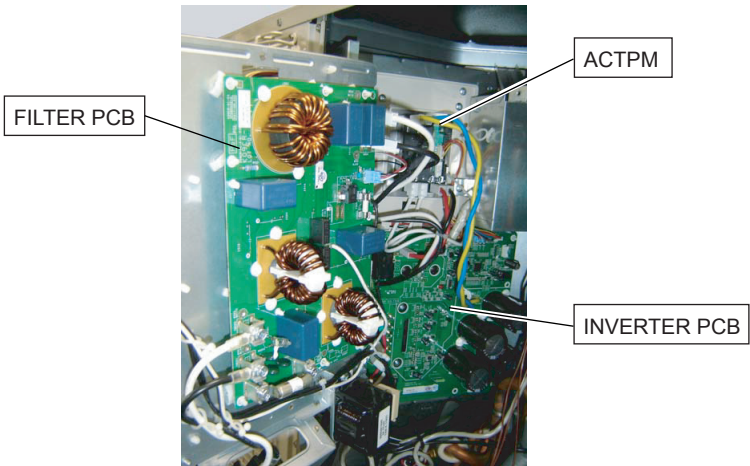


FILTER PCB

ACTPM

INVERTER PCB


6-1. FILTER PCB removal

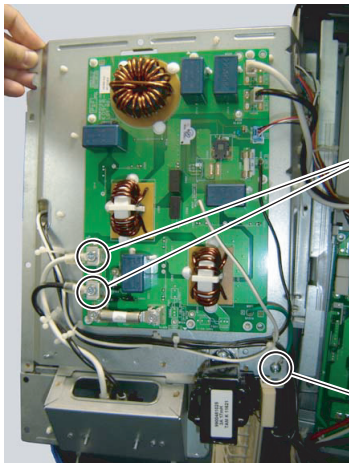

Screws
(AC IN)

Earth screw


Remove the connectors and screws.
Note the tightening torque
at the installation.
Tightening torque is $2.5 \pm 0.2\text{N}\cdot\text{m}$.
(except for the earth screw)

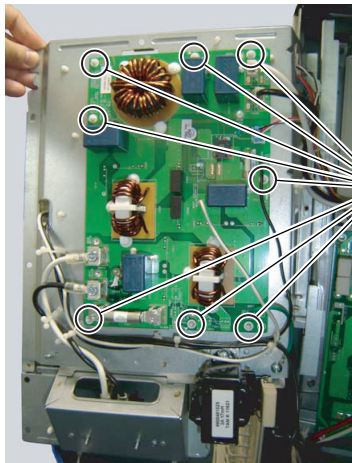

Spacers

Remove the spacers.
(8 places)

6-2. INVERTER PCB removal

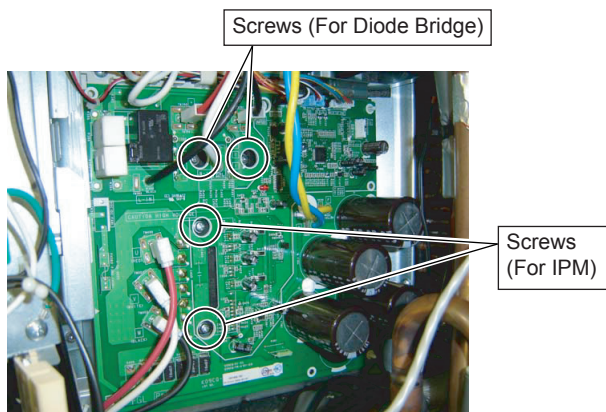

Remove the 4 mounting screws.

For screws of IPM.


Note the tightening torque at the installation.

1. Temporary tightening : 0.2 to 0.4N·m
2. Final tightening : 0.98 to 1.47N·m


For screws of Diode Bridge.

Note the tightening torque at the installation.

1. Temporary tightening : 0.2 to 0.4N·m
2. Final tightening : 0.5 to 0.8N·m

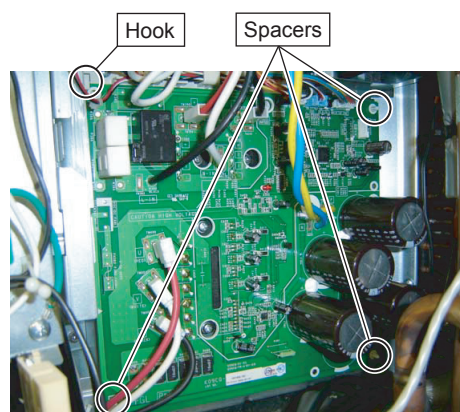

Remove the connectors and spacers.

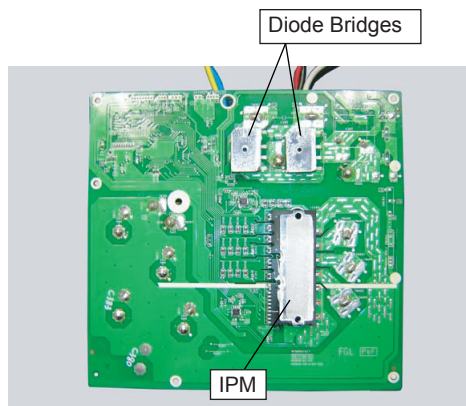

Spread the heat transfer compound on IPM and Diode Bridges when you exchange INVERTER PCB by the repair.


Note at the installation.

1. Remove the old heat transfer compound as possible from IPM and Diode Bridges when you exchange INVERTER PCB by the repair.
2. Spread the heat transfer compound evenly on IPM and Diode Bridges.
3. Prevent foreign matter from attaching to the surface of IPM and Diode Bridges.


Specifications for the heat transfer compound

- Manufacturer : Shin-Etsu Chemical Co.,Ltd
- Grade : G746

6-3. ACTPM removal

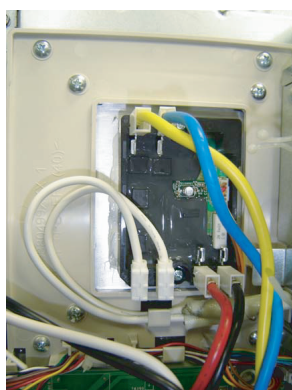

Remove the connectors.

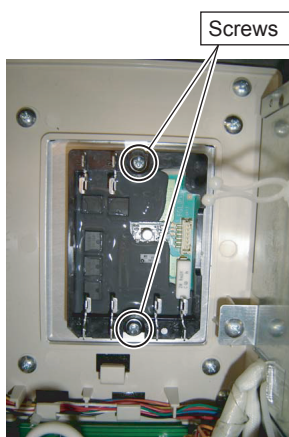

Remove the screws.

For screws of ACTPM.

Note the tightening torque at the installation.

1. Temporary tightening : 0.2 to 0.4N·m
2. Final tightening : 0.6 to 0.9N·m



Spread the heat transfer compound on ACTPM when you exchange ACTPM by the repair.


Note at the installation.

1. Remove the old heat transfer compound as possible from ACTPM when you exchange ACTPM by the repair.
2. Spread the heat transfer compound evenly on ACTPM.
3. Prevent foreign matter from attaching to the surface of ACTPM.

Specifications for the heat transfer compound

- Manufacturer : Shin-Etsu Chemical Co.,Ltd
- Grade : G746

7. PRESSURE SENSOR, SOLENOID COIL removal

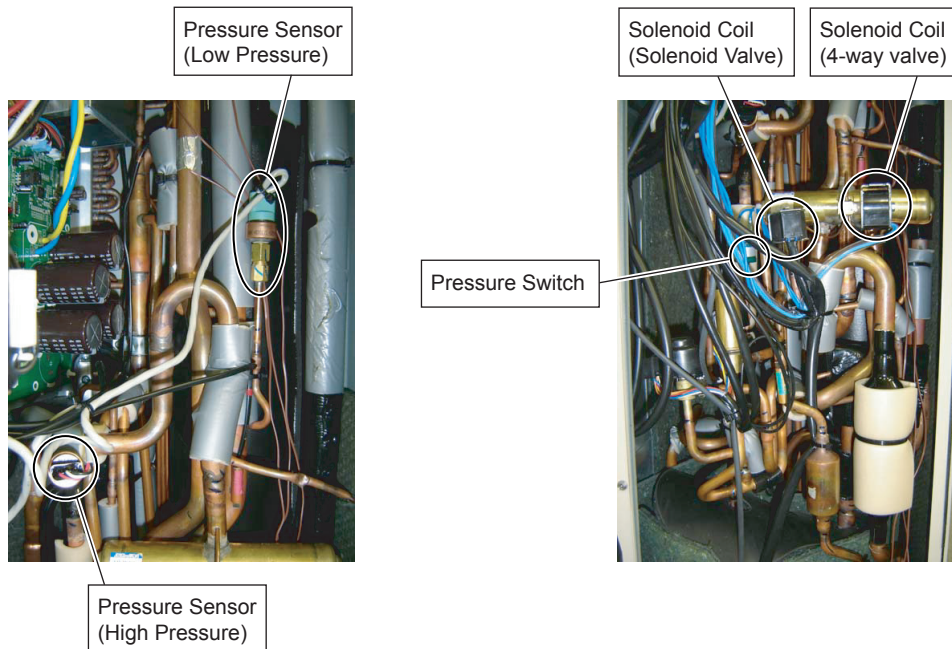

7-1. PRESSURE SENSOR removal



⚠ CAUTION

Wear gloves to prevent the frostbite,
because a small amount of refrigerant leaks during work.

Remove the PRESSURE SENSOR with wrench.

Note the tightening torque at the installation.
Tightening torque is $15 \pm 1.5 \text{ N}\cdot\text{m}$.

7-2. SOLENOID COIL (Solenoid valve) removal



Remove the mounting screw.



Remove the SOLENOID COIL.

7-3. SOLENOID COIL (4way valve) removal




Remove the mounting screw
with wrench or short screwdriver.



Remove the SOLENOID COIL.


8. EEV COIL removal

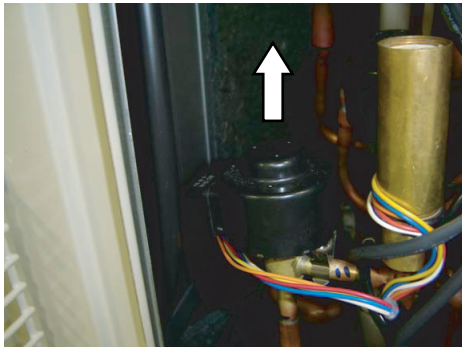

Remove the EEV coil by hand.
Be careful so as not to bend the pipe.



9. THERMISTOR removal

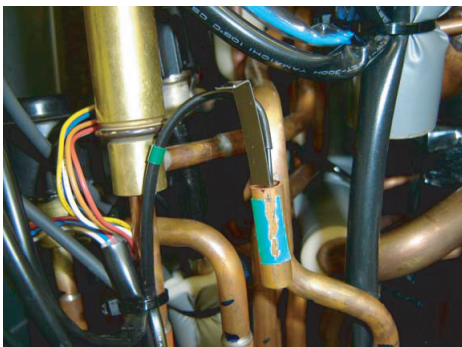


Remove the THERMISTOR SPRING.




Remove the THERMISTOR.
Careful not to disconnect the thermistor wire with a strong pull.

10. FAN MOTOR removal

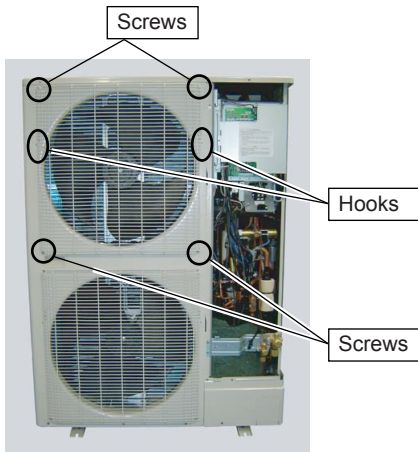


Remove the 4 mounting screws.

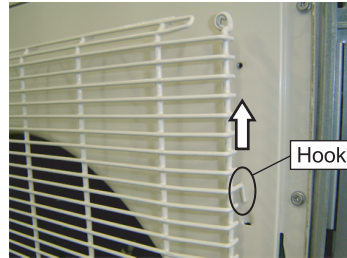

Remove the FAN GUARD by sliding upward.




Remove the nut.
And remove the PROPELLER FAN.
Note at the installation.
Insert propeller Fan and Moter shaft reference D cutting position.
And the tightening torque at the installation.
Tightening torque is from 10 to 12N·m.

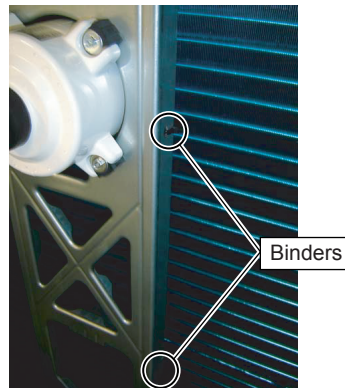


Cut the binder.(2 places)



Loose the wire clamp, and remove the lead wires.

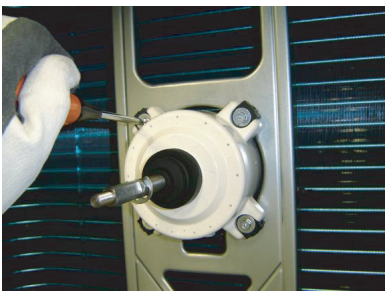


Remove the 4 mounting screws.

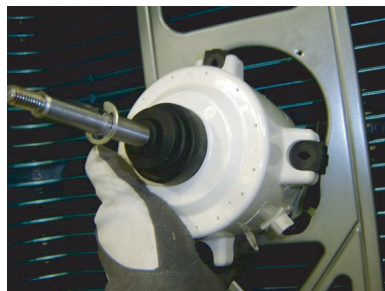


Remove the FAN MOTOR.
Note at the installation.
Motor wire is underside of Fan motor.


11. TOP PANEL removal

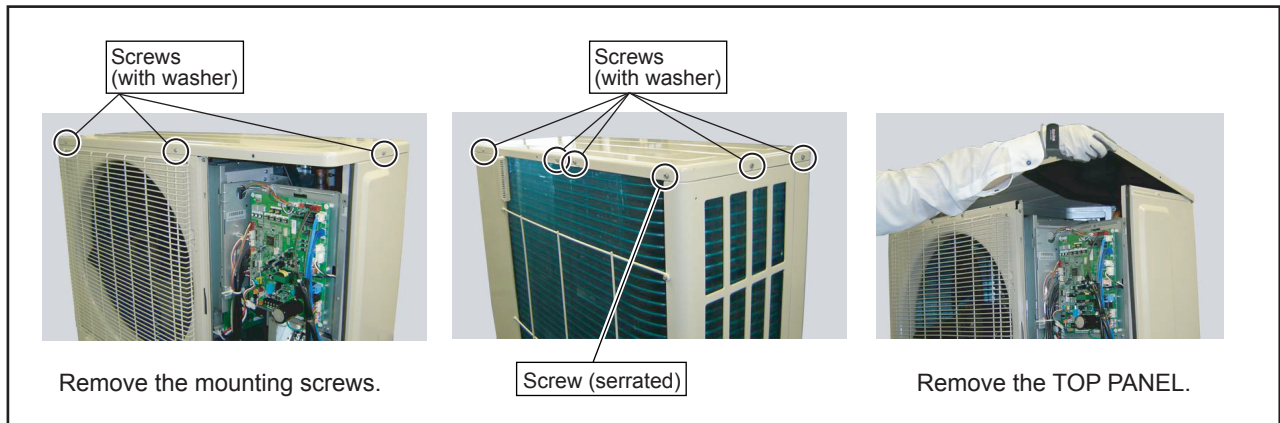


12. CHOKE COIL removal

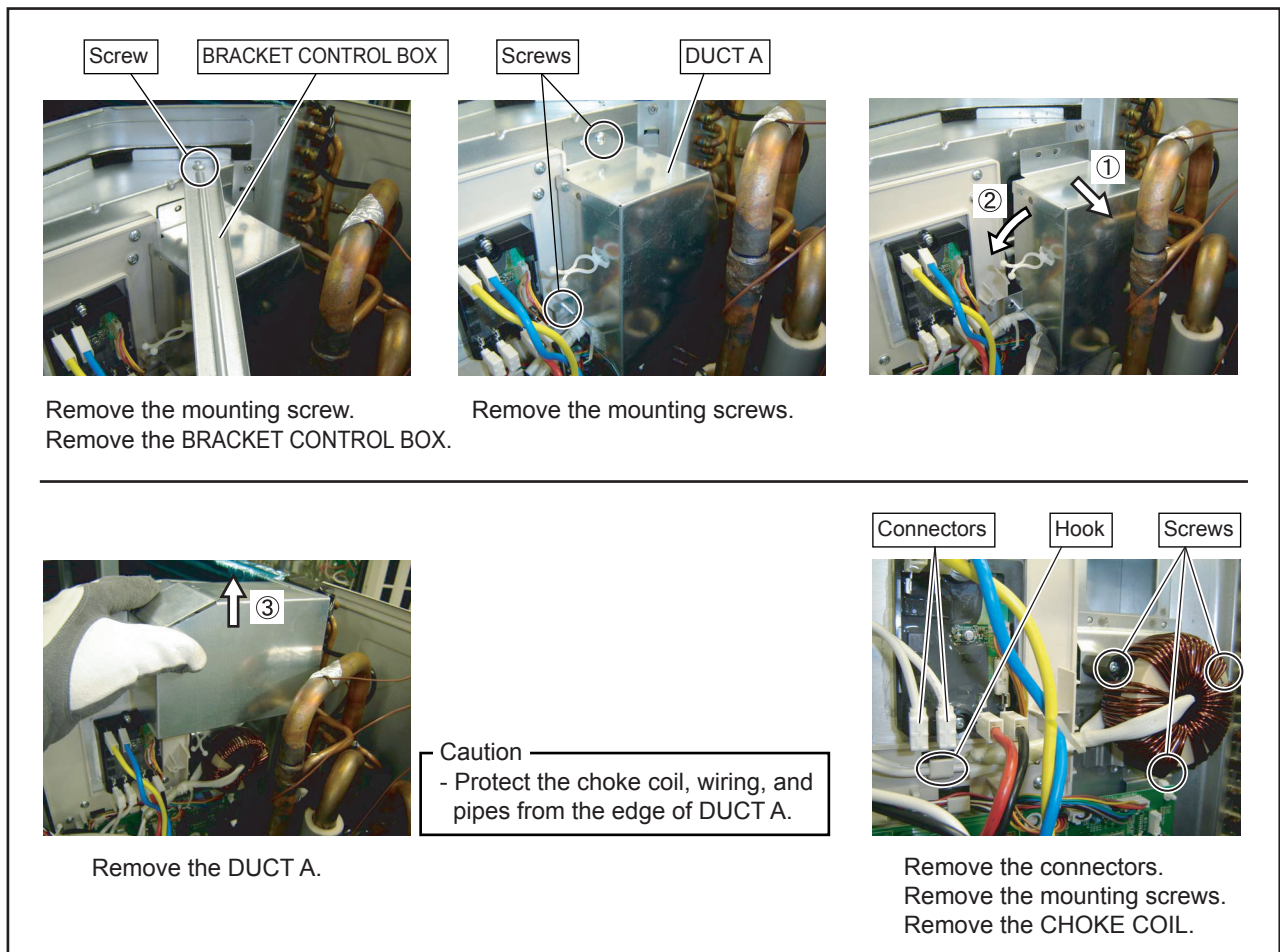


13. PIPE COVER FRONT removal

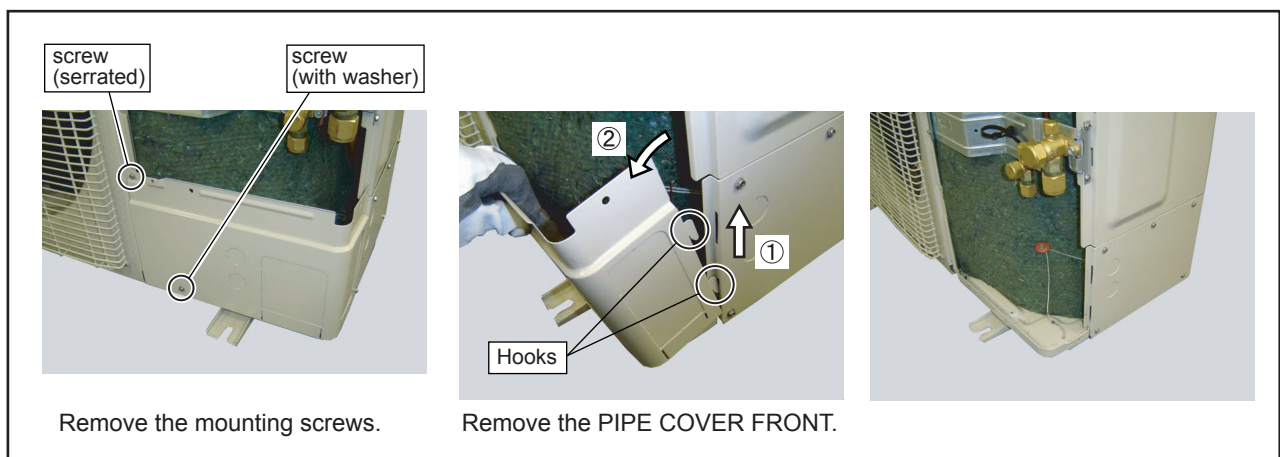

14. PIPE COVER REAR removal

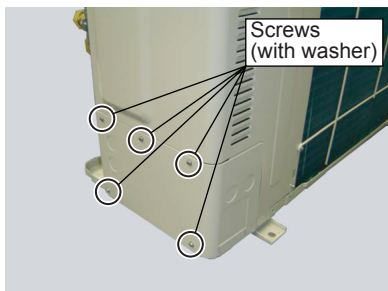


Remove the mounting screws.

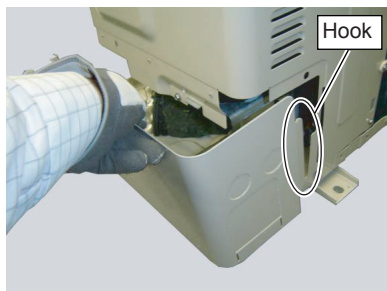


Remove the PIPE COVER REAR.



15. RIGHT PANEL removal

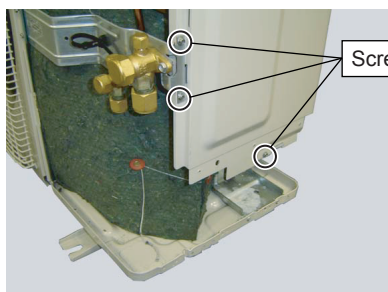

Remove the mounting screws.
Remove the RIGHT PANEL by sliding upward.

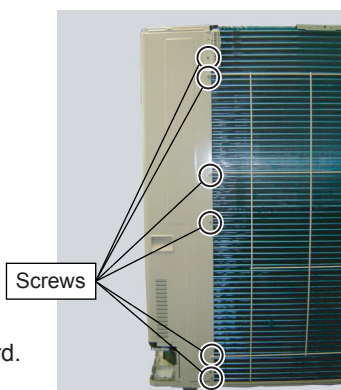

16. COMPRESSOR removal

Precautions for exchange of Compressor.


Do not allow moisture or debris to get inside refrigerant pipes during work.

Procedure for compressor removal.


- (1) Turn off power.
- (2) Remove the SERVICE PANEL and PIPE COVER FRONT.
- (3) Fully open the 3WAY VALVE(Gas) and 3WAY VALVE(Liquid).
- (4) Open the EEVs of Outdoor units and Indoor units by vaccuming mode.
- (5) Collect the refrigerant from the 3WAY VALVE.

Start the following work after completely collecting the refrigerant.

Do not reuse the refrigerant that has been collected.

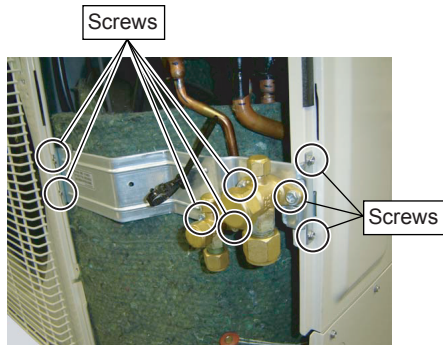

Remove the 8 mounting screws.

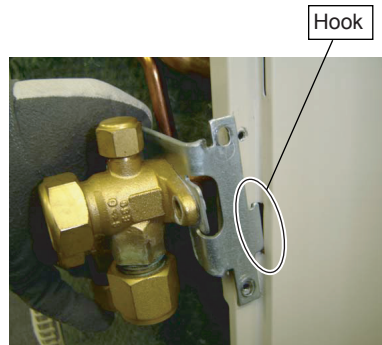

Remove the VALVE PLATE.





COMPRESSOR COVER TOP



COMPRESSOR COVER A

Remove the COMPRESSOR COVER A and TOP.



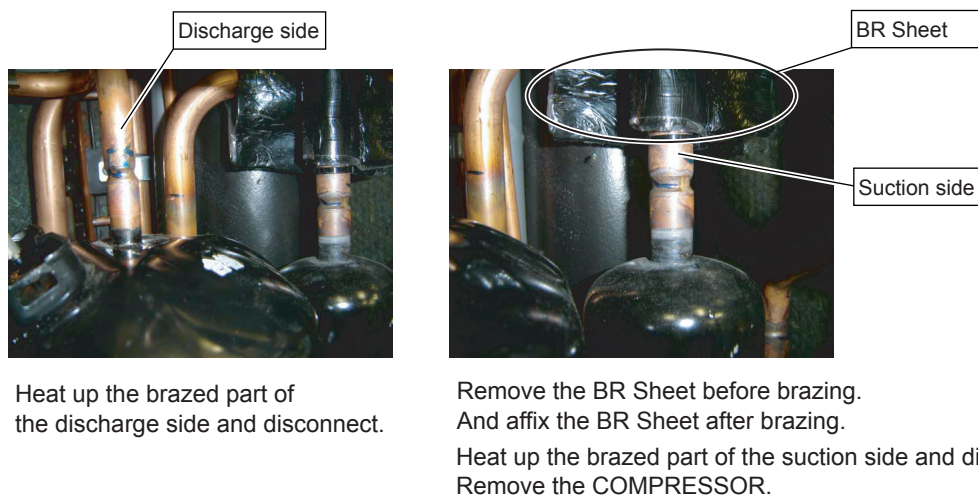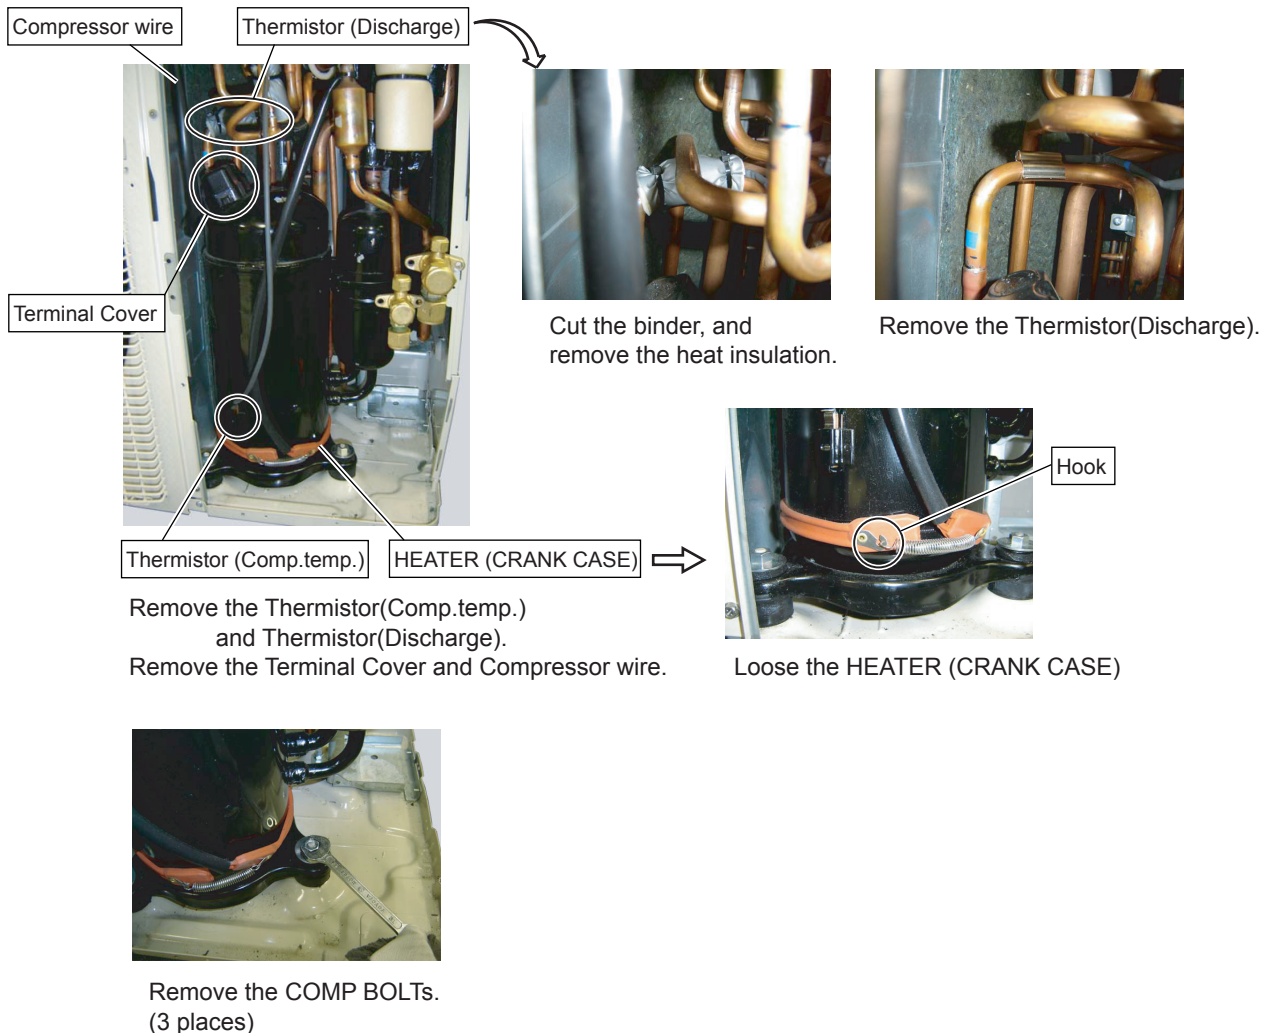

Caution

- There is a possibility of catching fire to oil when removing by the welding.

Procedure for compressor installation.

Reverse procedure to removing the compressor.

Precautions for installation of Compressor.

- (1) When brazing, do not apply the flame to the terminal.
- (2) When brazing, be sure to replace the air in the pipe with nitrogen gas to prevent forming oxidization scale.

17. Precautions for exchange of refrigerant-cycle-parts

- (1) During exchange the following parts shall be protected by wet rag and not make the allowable temperature or more.
- (2) Remove the heat insulation when there is the heat insulation near the welding place.
Move and cool it when its detaching is difficult.
- (3) Cool the parts when there are parts where heat might be transmitted besides the replacement part.
- (4) Interrupt the flame with the fire-retardant board when the flame seems to hit the following parts directly.
- (5) Do not allow moisture or debris to get inside refrigerant pipes during work.
- (6) When brazing, be sure to replace the air in the pipe with nitrogen gas to prevent forming oxidization scale.
- (7) Open the 3WAY VALVE because there is a possibility of squirting the refrigerant from the heated pipes at brazing.

Part name	Allowable temperature	Precautions in work
SOLENOID VALVE	120°C	Remove the coil before brazing. And install the coil after brazing.
EXPANSION VALVE	120°C	Remove the coil before brazing. And install the coil after brazing.
4WAY VALVE	120°C	Remove the coil before brazing. And install the coil after brazing.
3WAY VALVE (GAS)	100°C	
3WAY VALVE (LIQUID)		
UNION JOINT	100°C	Remove the pressure sensor before brazing. And install the pressure sensor after brazing.
PRESSURE SENSOR	100°C	Tighten the flare part gripping it. (Tightening torque :15±1.5N m) Do the static electricity measures.
PRESSURE SWITCH	100°C	Remove the wiring before brazing. And connect the wire after brazing.



FUJITSU GENERAL LIMITED

3-3-17, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan

Product specifications are subject to change without notice.

"**AIRSTAGE**" is a worldwide trademark of FUJITSU GENERAL LIMITED.

Copyright© 2004 Fujitsu General Limited. All rights reserved.